

next

MEASURING GUIDE FOR PERFECT FIT

MADE TO MEASURE PERFECT FIT BUYING GUIDE







INTRODUCTION

Perfect Fit blinds are specifically designed for UPVC windows and doors and PVC and aluminum bifolding doors with a rubber bead. Measuring your windows could not be easier. All you need is a pen, pad, metal measuring tape and a bank card.

Measurements are to be taken from the glass pane itself, as Perfect Fit blinds clip directly onto your window, rather than wall or ceiling. Correct frame depth is necessary to supply a correct bracket to fit your window.

This guide supplies you with detailed instructions on how to correctly measure your window. To ensure it is well matched to the Perfect Fit System.

TOOLS REQUIRED

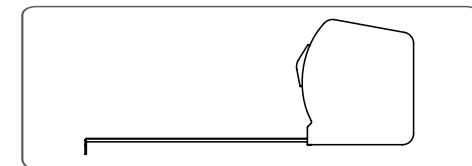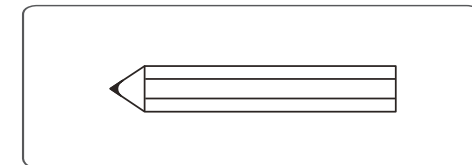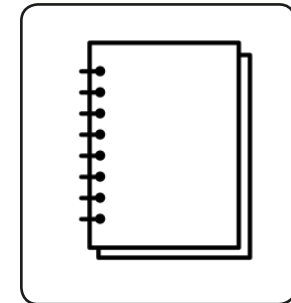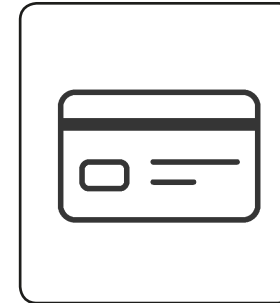

REMEMBER!

Do not assume all windows are the same size. Always measure each window separately to avoid disappointment.

MEASURE YOUR WINDOW IN THREE EASY STEPS

Our Perfect Fit blinds are made to measure to fit your window. Make sure your window type is compatible before selecting your Perfect Fit blind.

Step 1

Measure the size of the window glass.

Step 2

Measure the seals and clearance around the window frame.

Step 3

Measure the depth of beading.

ORDER THE RIGHT PERFECT FIT BLIND FOR YOU

Our Perfect Fit blinds are available in pleated or aluminium and have a comprehensive range of fabrics and slats to choose from.

Perfect Fit frames come in two modern colours: white and anthracite, to compliment your PVC windows.



Perfect Fit System is **not** advised for windows which do not have a rubber seal and/or have a bead depth that is greater than 38mm or less than 18mm.

Examples of window types that are not suitable for Perfect Fit frames:

- The frame is square onto the glass and no angle or bead is present.
- Distinct lack of mitre joints.
- Wooden window frames.


Please ensure your window frame is suitable for fixing the Perfect Fit System.
If you are unsure, feel free to contact our team for further assistance.



STEP 1

Measuring Glass Size



Measure the top, bottom and centre of the glass window vertically and horizontally, then pick the smallest measurement. You should not include any of the beading or rubber seals in your measurements. Repeat this step for both width and drop.

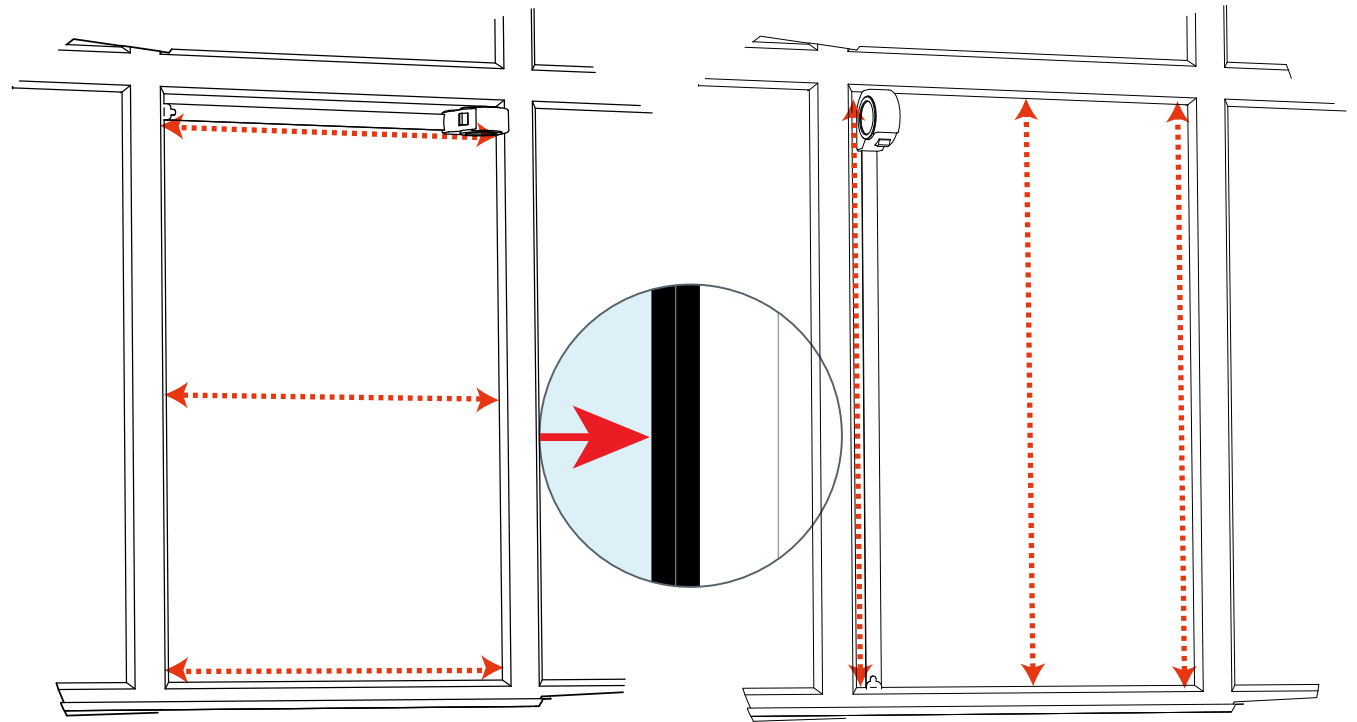

STEP 2

Clearance and Seals

The Perfect Fit frame needs a minimum of 6mm clearance around the window frame. Seals must not protrude over the glass by more than 6mm. If the seal is compressible, you can take a 'bead to bead' measurement. If not, then take a 'seal to seal' measurement.

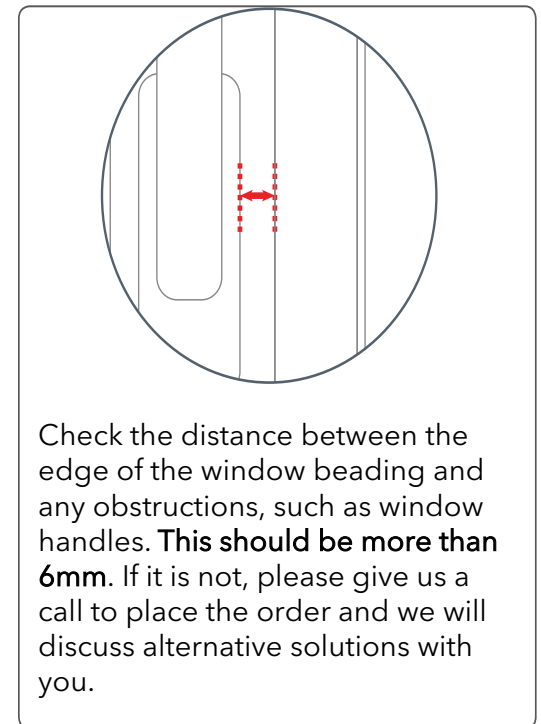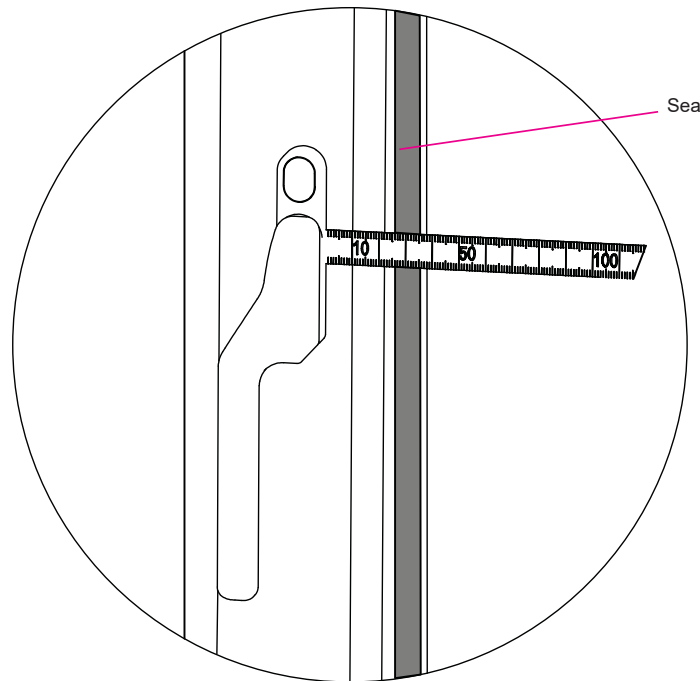


Check the distance between the edge of the window beading and any obstructions, such as window handles. **This should be more than 6mm.** If it is not, please give us a call to place the order and we will discuss alternative solutions with you.

STEP 3

Measuring the depth of beading

Measure the depth of the window from glass to beading, by simply placing a bank card over the corner of the frame. Use a measuring tape to take a measurement, this should be between 18mm and 38mm.

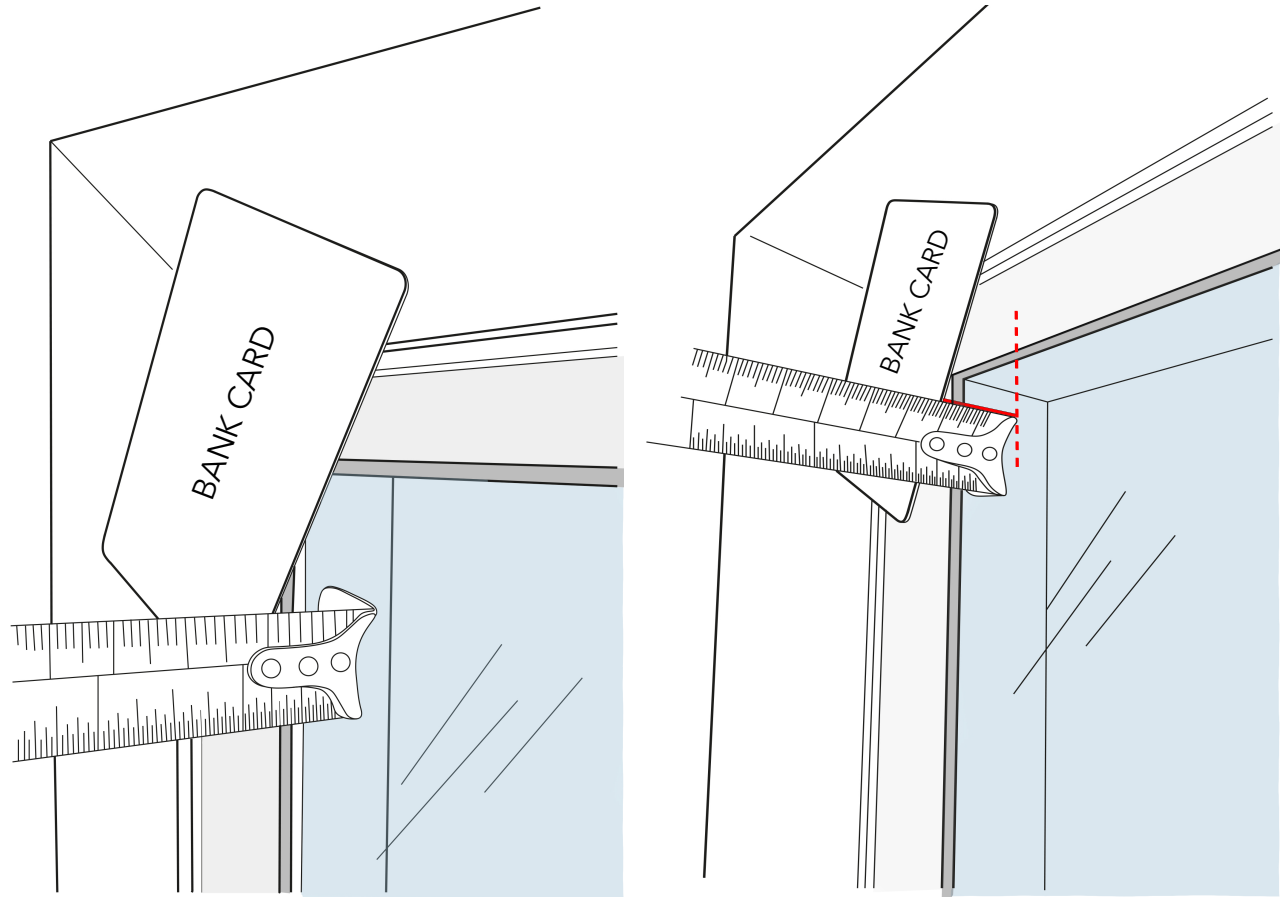






Please read the instructions carefully. Assembling process can be completed by non-professionals. For indoor use only.

Keep these instructions for future reference.

Installation guide is applicable for Perfect Fit Pleated and Perfect Fit Aluminium.

If you need help please contact our team for assistance.

If you are unsure about the installation process please seek professional guidance.

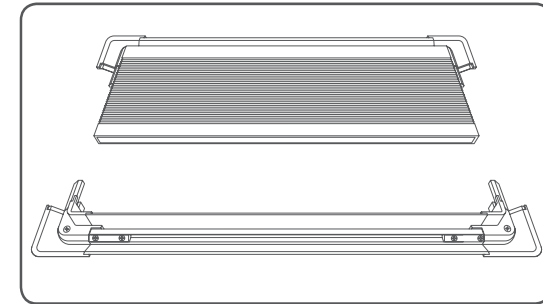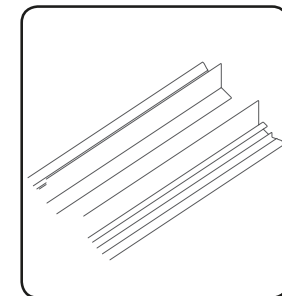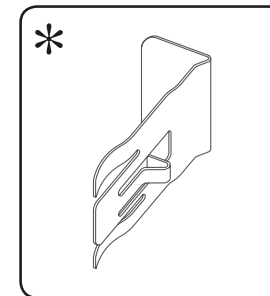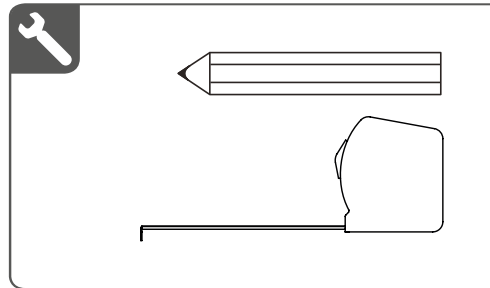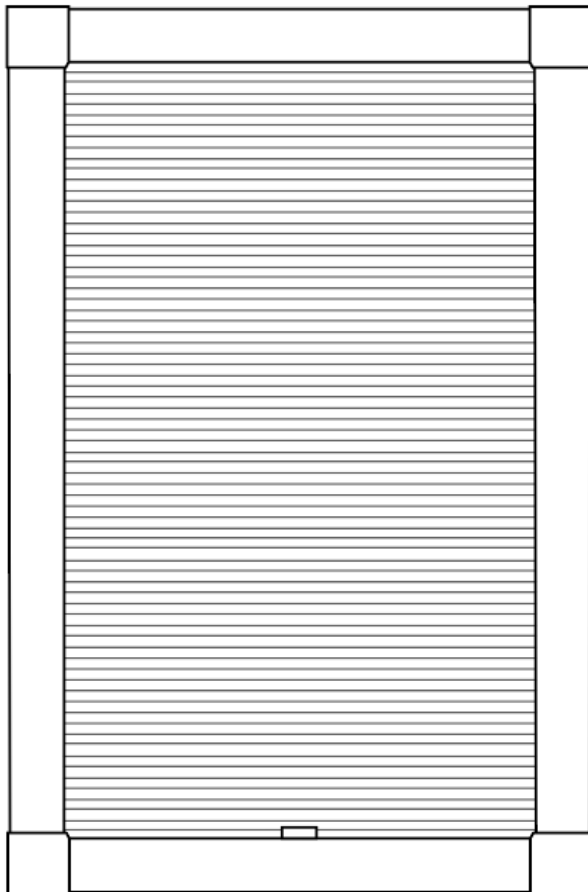

* Up to 6 depending on the drop


STEP 1

Assembling the frame

Once you have double checked that all of the pieces and components are present.

1. Align the frame components.
2. Insert the longer parts of the frame into the corner caps and push in.

Repeat on the opposite side.

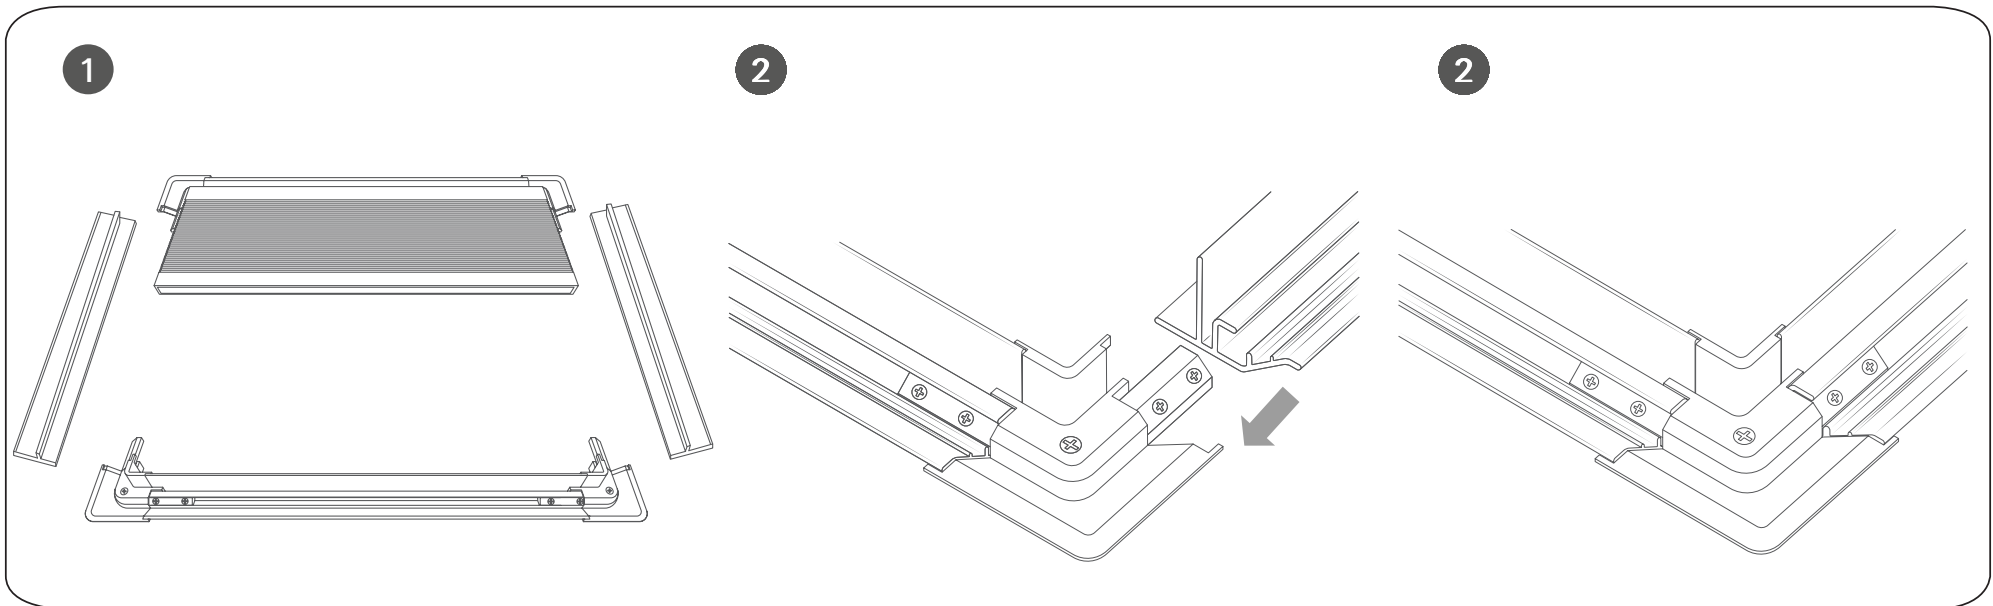


STEP 2



Adjusting Tension

1. Push the blind all the way to the top to help adjust the desired tension. The two ends of the tensioning cords are secured to the spring. On one side, the cord is secured through a small eyelet with a screw.
2. Loosen the screw, then pull through the cord to adjust the tension. Pull the excess cord through by 5-10mm further to increase the tension or the opposite direction to loosen. Tension can be adjusted by hand, with no screwdriver required.

Note:

If the tension needs to be increased the adjustment can be located at the back of the bottom section of the frame. Hold the shorter length of cord and loosen the screw to allow it to be pulled through. Pull 5-10mm of cord through and tighten the screw again. Retest the blind and make further small adjustments if required.

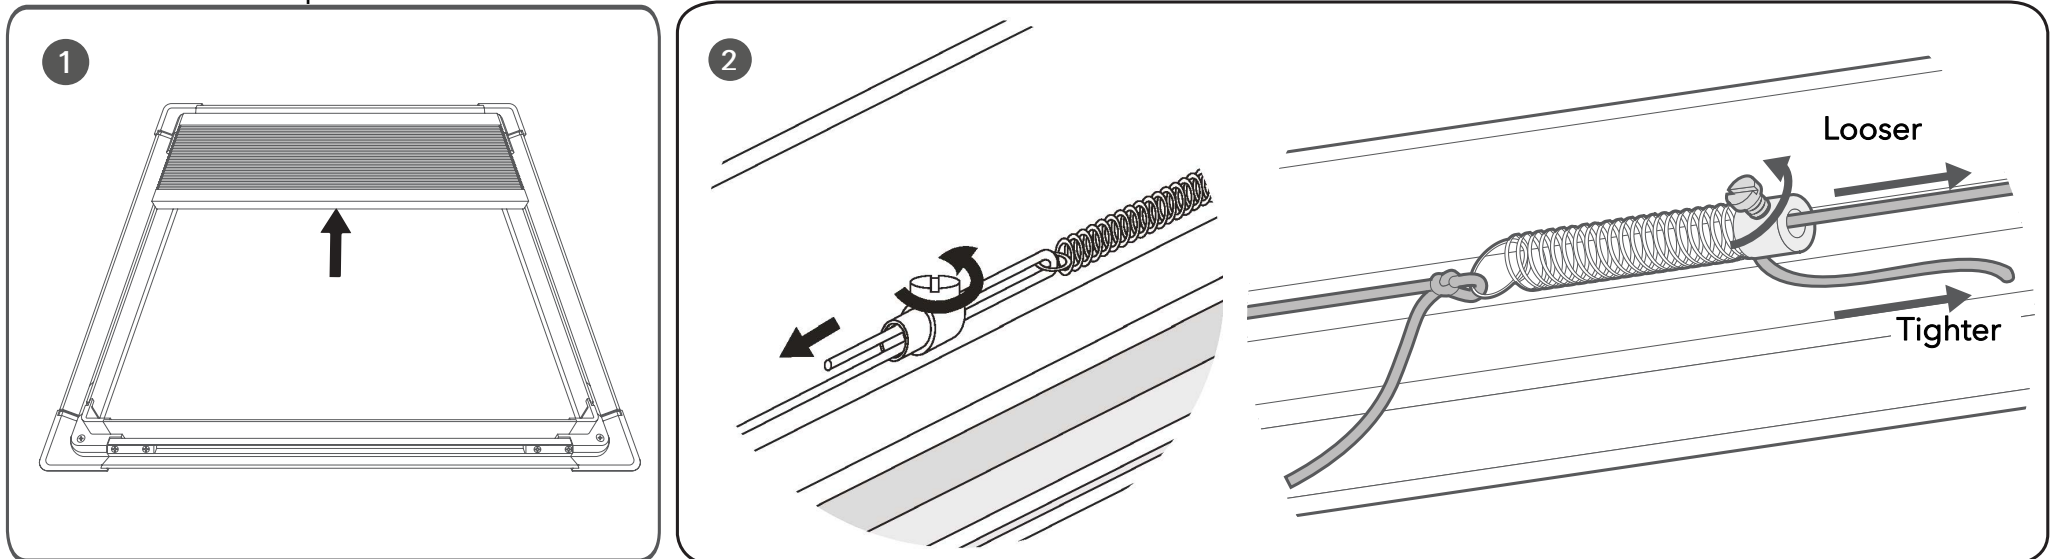

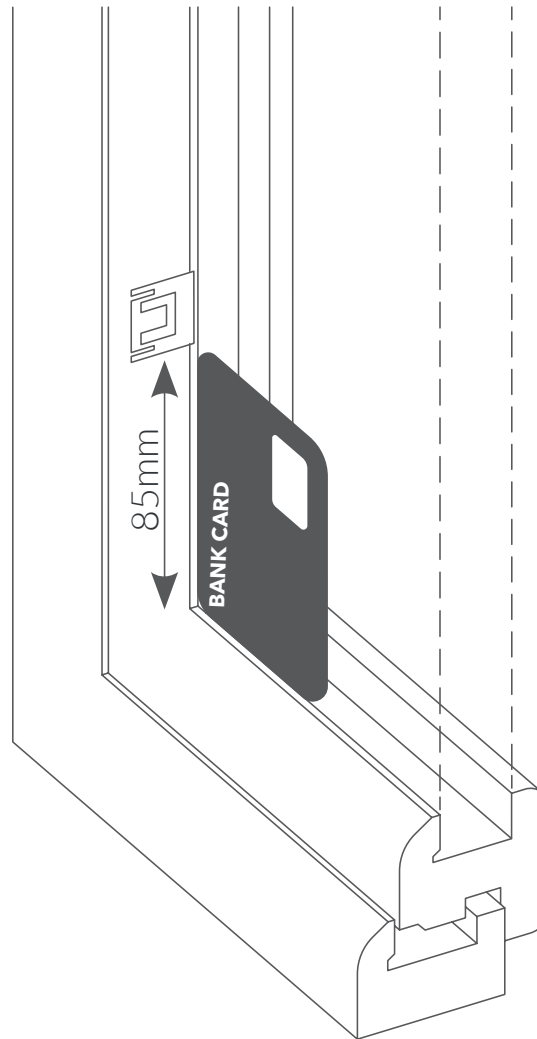
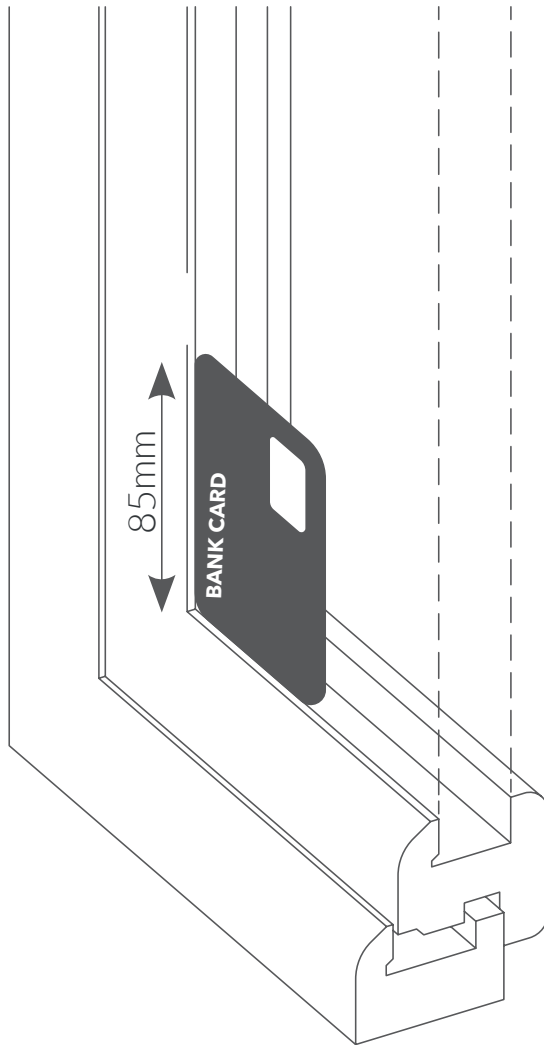


STEP 3

Installing Brackets

To install the Perfect Fit brackets, lay a bank card vertically in the bottom corners of each window. The distance between the window beading and the measurement should be 85mm. Once correctly measured, push the brackets behind the window seal.

Top Tip: If you find that the brackets are difficult to place behind the window seal, you can use a spot of washing up liquid as lubricant on the flat part of the bracket. Once all the brackets are fitted, clean any excess washing up liquid from the window surface.

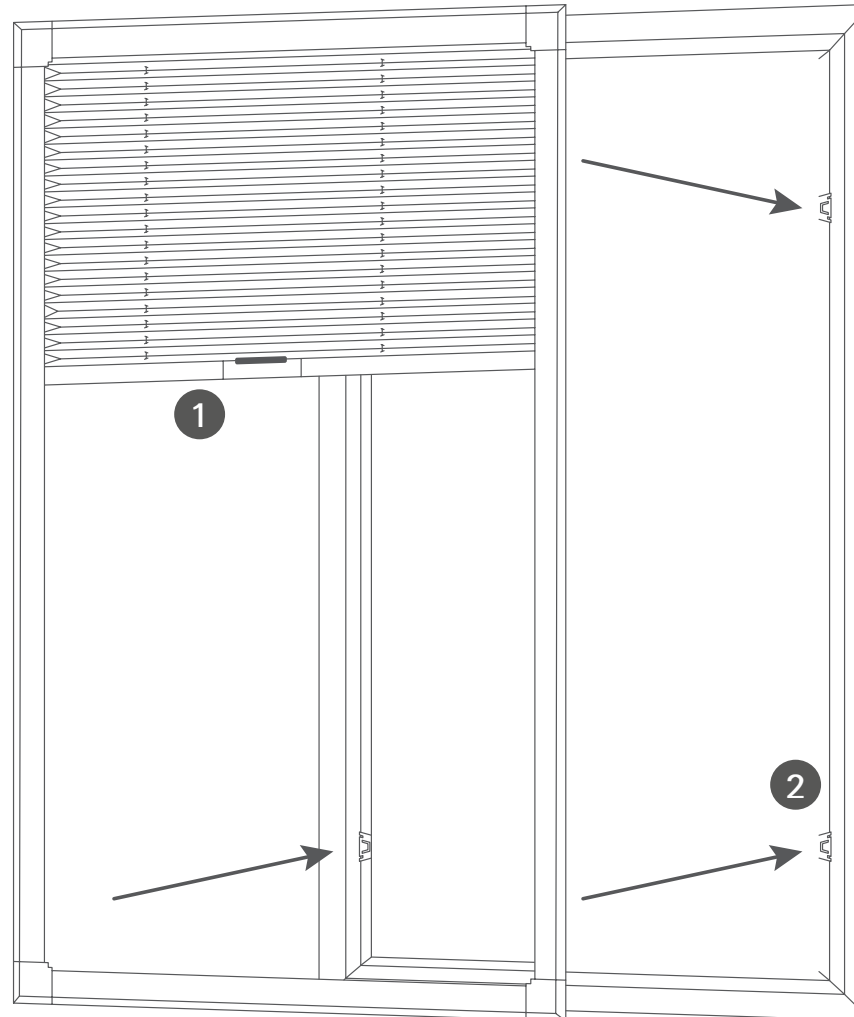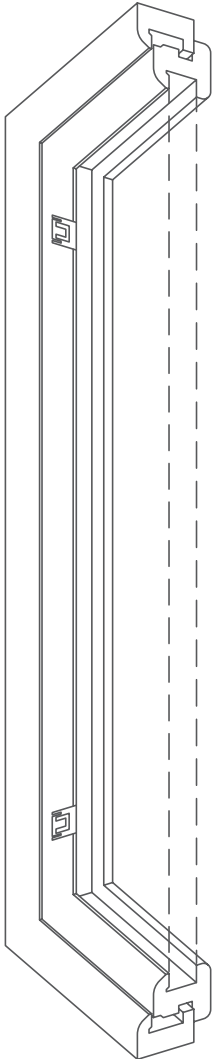

STEP 4

Mounting the frame

Once all brackets are installed all you need to do now is align the pre-built frame with the brackets and clip it onto the window.

- Simply raise and lower the blind to the desired position by firmly holding the thumb tab (1).
- We recommend opening and closing your blind regularly to maintain defined pleats in the fabric.

REMOVAL:


To remove the brackets, look for the little lip (2) on the inside of the slots. To free the frame from the bracket, use a screwdriver to press that small lip in towards the frame.

PRACTICAL ADIVCE

Perfect Fit Aluminium


Installation process applies to all of our Perfect Fit Blinds.

If you are installing a Perfect Fit Aluminium please follow instructions accordingly. To operate the slats simply twist the wand to your desired position.

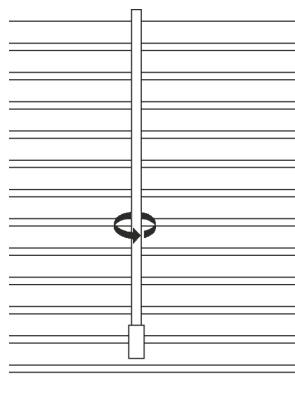

Perfect Fit Pleated

 Pleated blinds rely on fabric memory and tension to keep the pleats crisp. That is why opening and closing your blinds regularly is important.



IF YOU NEED HELP:

If you have any questions please do not hesitate to contact our customer service team who will be more than happy to help. If you are unsure about the installation process please seek professional assistance.

Home Customer Services
Next Retail Ltd Desford
Road, Leicester, LE19 4AT

Customer Service Number:
0333 777 8000