BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

1. COLOUR

Make sure you're happy with the colour No need to unpack everything, just check the first component.

2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

TIPS FOR RETURNS

Not completely happy with the product? No problem. We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.





- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T




- Leave anything assembled all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly as it may get damaged.



COMPTON DESK

425013, 461148 Assembly instructions

Actual product size H73 x W100 x D45 H47,8 x W100 x D15

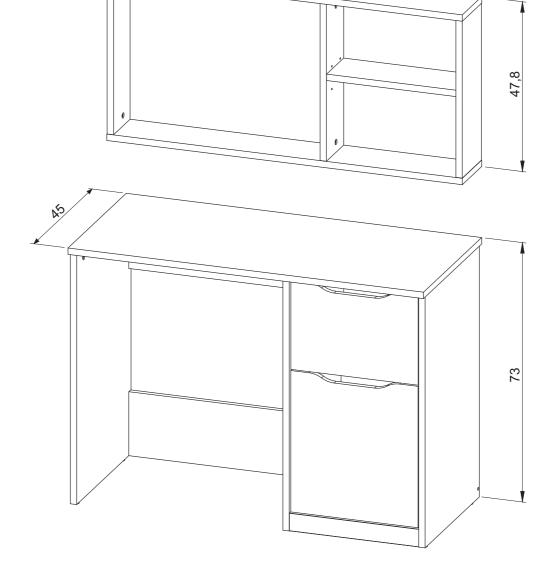

100

Need Help?

With: Assembly instruction

Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

NEXT COMPTON DESK 425013, 461148

Assembly instructions

BEFORE YOU START

Number of people required to assemble

Two persons are required to assemble this item.

Warnings

Do not use desk if any part is broken, torn or missing

We suggest you retain these instructions for future reference.

Gloss finishes are prone to light surface scratches and it is therefore very important that you care for this item correctly.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

For general cleaning, periodically dust with a soft clean lint-free cloth or a soft micro fibre cloth (ie, e-cloth brand or similar). Please note some cloths (including yellow dusters) contain abrasive fibres which can lightly scratch the surface, if in doubt please try your cloth in an inconspicuous area of the furniture first to assess its suitability. A sample of a suitable cloth for cleaning is included within the hardware pack.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.q. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

Time to assemble





Tools required





not supplied not supplied

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

You can write to us at


Home Customer Services Next Retail Ltd. Desford Road. Leicester. **LE19 4AT**

To view our full furniture range please visit www.next.co.uk



COMPTON DESK

425013, 461148 Assembly instructions

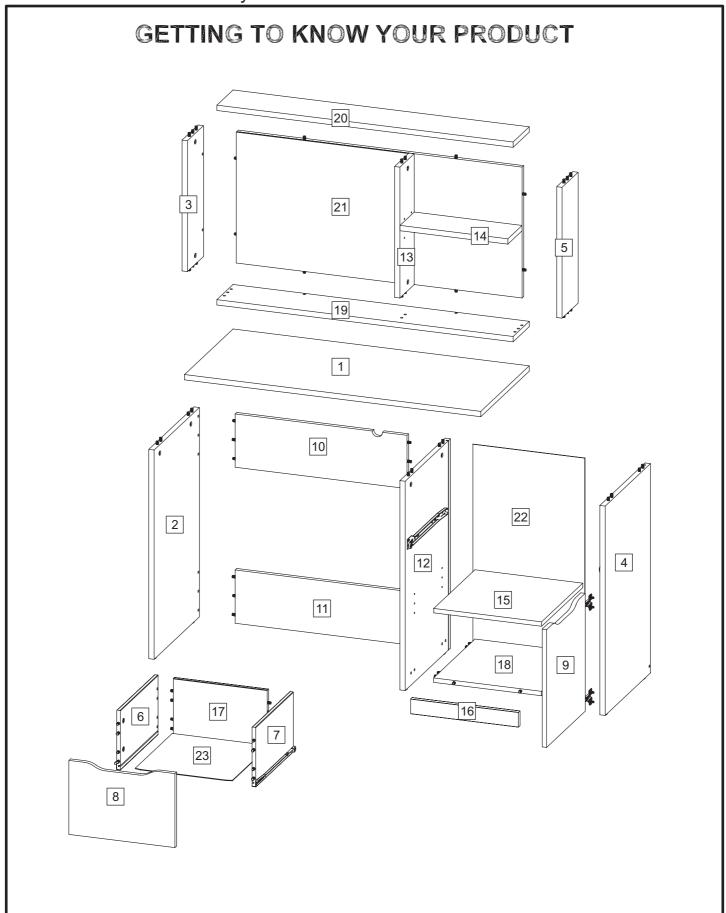



COMPTON DESK 425013, 461148

Assembly instructions

Components supplied. Please use this guide if you require replacement parts.

Ο,	Ref	nts supplied. Please use Dimensions	Visual	Qty	Ctn
	1	100 x 45cm		1	
	2	70,7 x 42cm		1	
			y.		
	3	44,2 x 14,9cm		1	
	4	44,2 x 14,9cm		1	
	5	70,7 x 42cm		1	
	6	35 x 20cm		1	
	7	35 x 20cm		1	
	8	35,8 x 25cm		1	
	9	39,8 x 35,8cm		1	
	10	58 x 18cm		1	
	11	58 x 18cm		1	
	12	70,7 x 42cm		1	

> .				
Ref	Dimensions	Visual	Qty	Ctn
13	44,2 x 13,3cm		1	
14	36,4 x 13,2cm		1	
15	36,4 x 38,2cm		1	
16	36,4 x 5cm		1	
17	31,7 x 20cm		1	
18	36,4 x 40,4cm		1	
19	100 x 15cm		1	
20	100 x 15cm		1	
21	96,3 x 44,2cm		1	
22	66,5 x 37,8cm		1	
23	32,8 x 34,9cm		1	



Assembly instructions


	es and fittings ied (actual size)	0 	10 	20 	30 	40 	50	60 	70 	80 	90 	100 	110 	120
Ref	Dimensions	Qty	:	:		:				:	:	: :			:
W1	φ5	4													
J23		2	3												
L6	ф8	2		>											; ; ; ;
W11		4	ov												
P13	3,5x13mm	1	all	an()											
G22	øl 8-5	2													

Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Qty	Visual
J44		1	


COMPTON DESK

425013, 461148 Assembly instructions

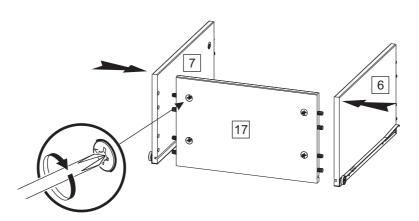



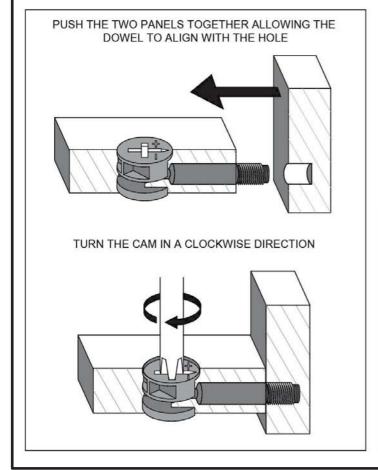


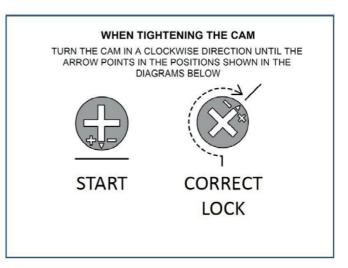

COMPTON DESK

425013, 461148 Assembly instructions


2

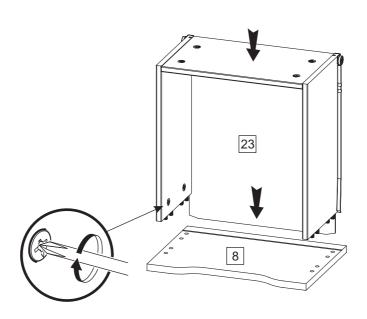



3


J23

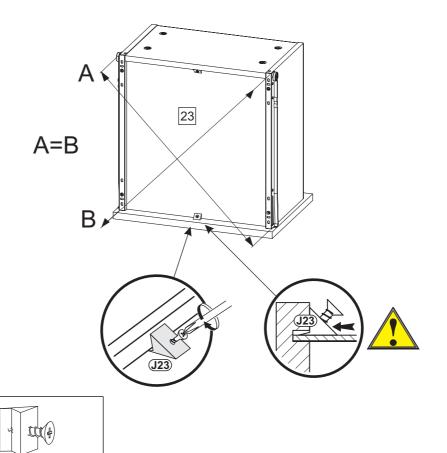


COMPTON DESK

425013, 461148 Assembly instructions

4

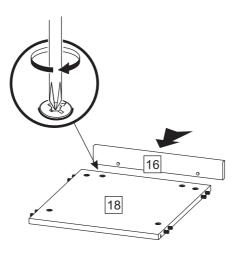




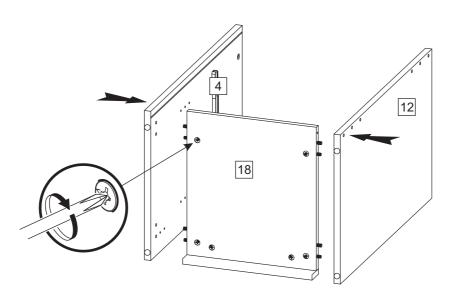



NEXT COMPTON DESK 425013, 461148

Assembly instructions

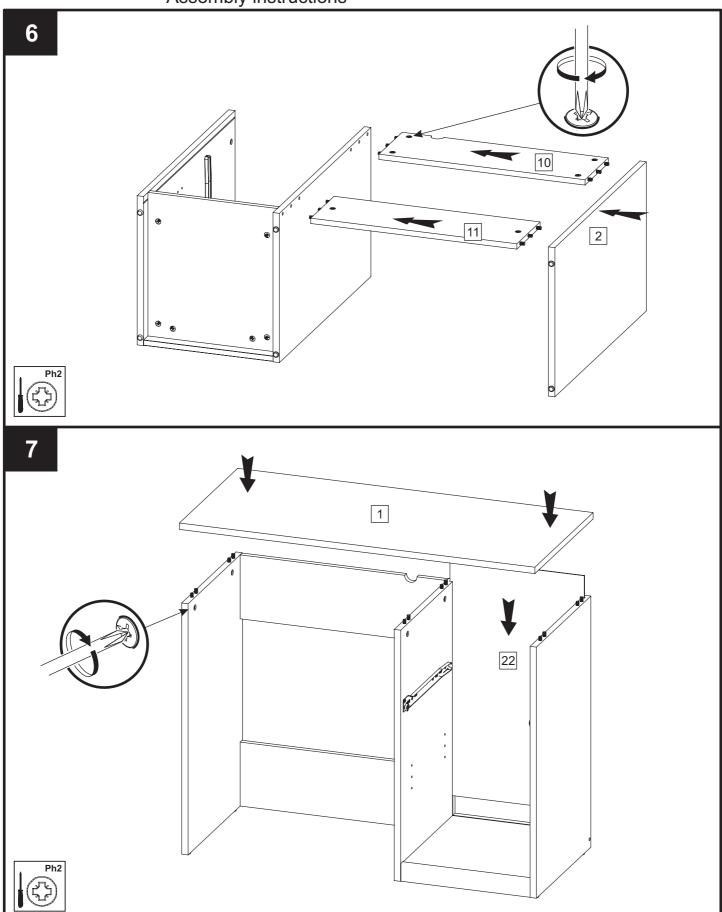


COMPTON DESK

425013, 461148

Assembly instructions

8


We recommend the use of the wall strap provided for safety reasons. Wall fixings are not included, please source suitable fixings for your wall type. If in doubt, please consult a qualified trades person. **WARNING:** Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

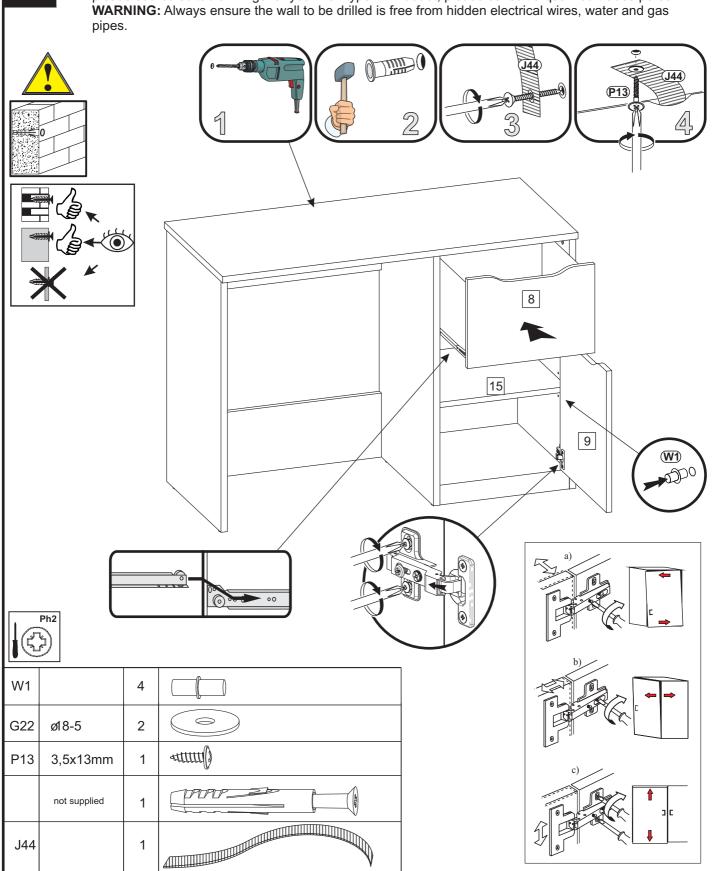


Next COMPTON DESK 425013, 461148

Assembly instructions


9

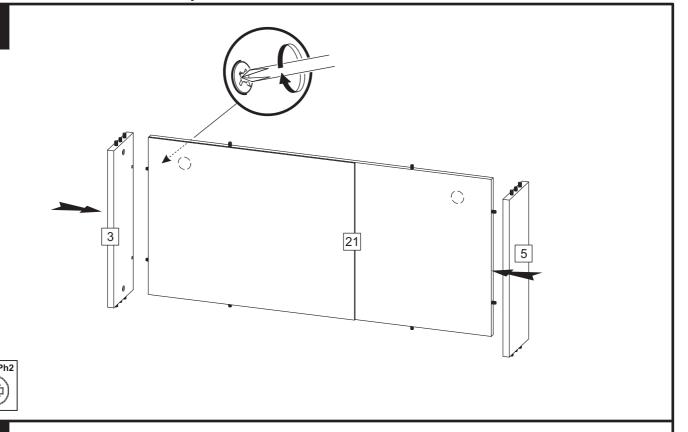

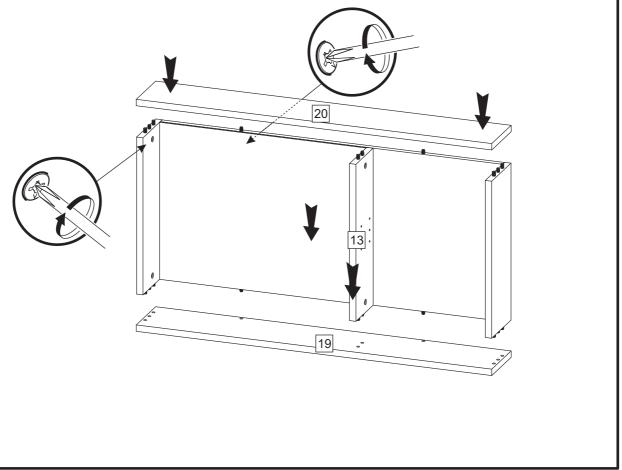

COMPTON DESK 425013, 461148

Assembly instructions

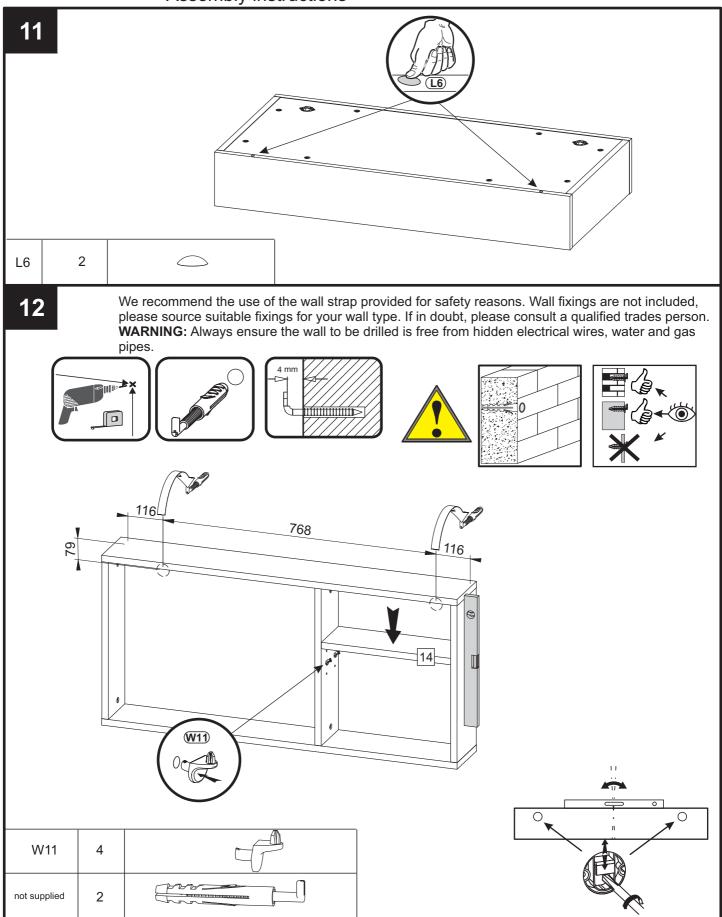

COMPTON DESK

425013, 461148 Assembly instructions

