


186812 Assembly instructions

Actual product size

H190.4 x W78.2cm x D50.2

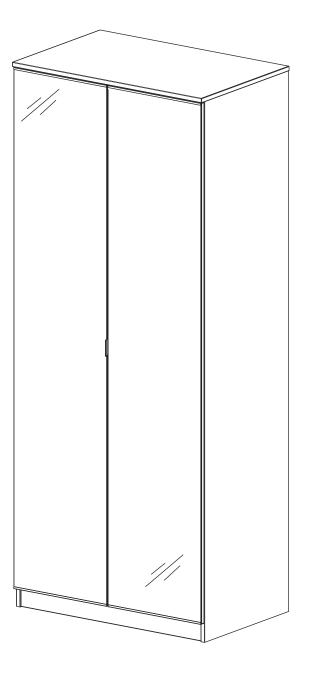

Need Help?

With: Assembly instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT—RETAIN FOR FUTURE REFERENCE

Produced in Italy for Next Retail Ltd. 186812 - 2018 - V2



186812

Assembly instructions

BEFORE YOU START

IMPORTANT: Assembly to be carried out by a competent adult only - Do not use this item if any components are missing or damaged

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from the construction area.

This product should only be used on firm, level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly

Due to the size of the product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.

Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placement or coaster.

Number of people required to assemble

Two persons are required to assemble this item.

Time to assemble



Tools required





not supplied

not supplied

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services Next Retail Ltd, Desford Road, Leicester, LE19 4AT


To View our full furniture range please visit www.next.co.uk

PRODUCT SUPPLIED WITH WALL FIXING BRACKETS



186812 Assembly instructions

GETTING TO KNOW YOUR PRODUCT

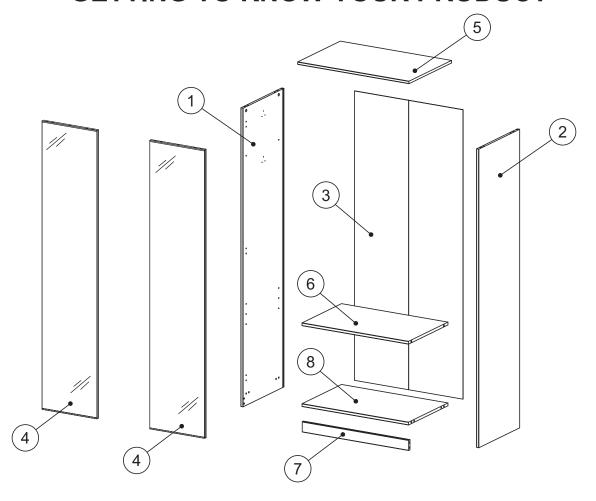

Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	188 x 48cm	· · · · · · · · · · · · · · · · · · ·	1	2
2	188 x 48cm		1	3
3	182 x 76cm		1	2
4	182 x 39cm		2	2-3


Ref	Dimensions	Visual	Qty	Ctn
5	78 x 50cm		1	1
6	75 x 48cm		1	1
7	75 x 6.5cm		1	1
8	75 x 46cm		1	1



186812 Assembly instructions

Fixtures and fittings supplied (actual size)

supplied (actual size)				
Ref	Dimensions	Quantity		
Α	8 x 36mm	10		
В	15 x 12.5mm	10		
С	8 x 30mm	10		
D	3.5 x 15mm	10		
Е	3.5 x 25mm	3		
F	20 x 12.5mm	4		
G	9 x 17mm	4		
Н	1,5 x 25mm	6		
i	Ø5 x 15mm	4		
L	Ø10 x 15mm	2		
М	4 x 30mm	4		

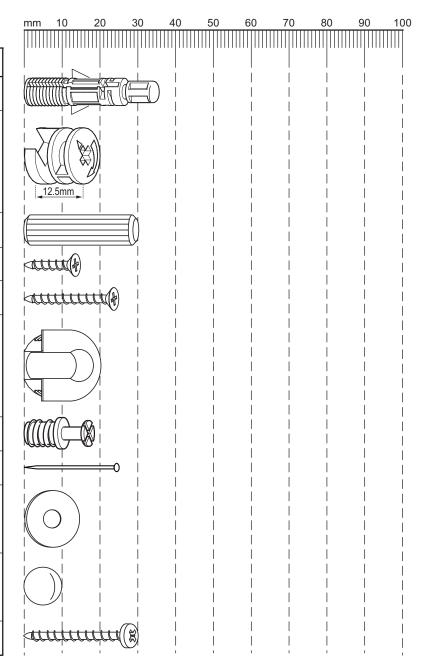



186812 Assembly instructions

Fixtures and fittings supplied (not to scale)


	Dimensions	gs supplied (not to Visual	Qty
N	N/A		4
0	N/A		1
Р	13x13x35mm		1
Q	N/A		12
R	N/A		1
S	N/A	e e	2
Т	Ø25 x 746mm		1
U	76x32x15mm		2
V	N/A		1

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Visual	Qty
Х	N/A		6
W	N/A		6
J	N/A	0 0	1


Fixtures and fittings supplied (actual size)

Ref	Dimensions	Quantity
D	3.5 x 15mm	12

 


Fixtures and fittings supplied (actual size)

Ref	Dimensions	Quantity
Z	3.5 x 15mm	2

 


186812 Assembly instructions


₽D 3.5 x 15mm D x 2 2 OC (8)8 x 30mm C x 4

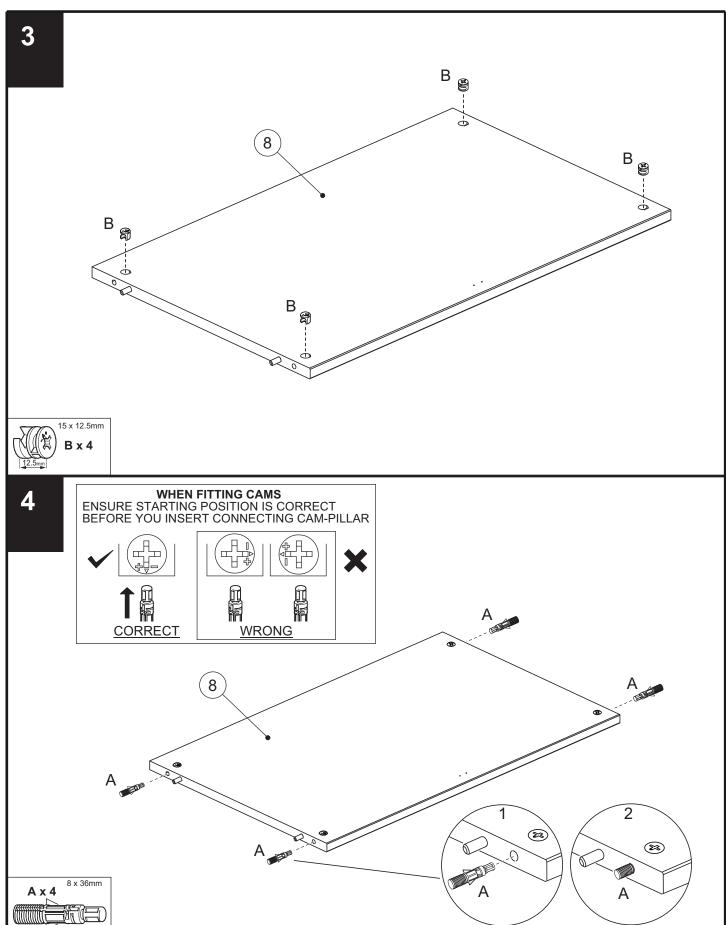


FLYNN MIRROR WARDROBE

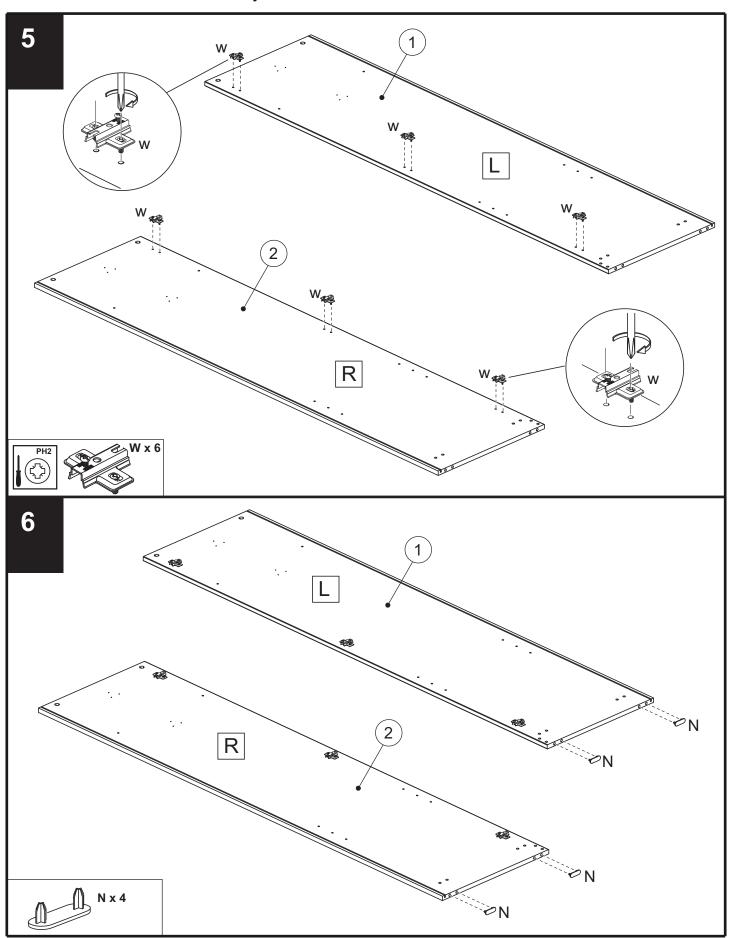


FLYNN MIRROR WARDROBE

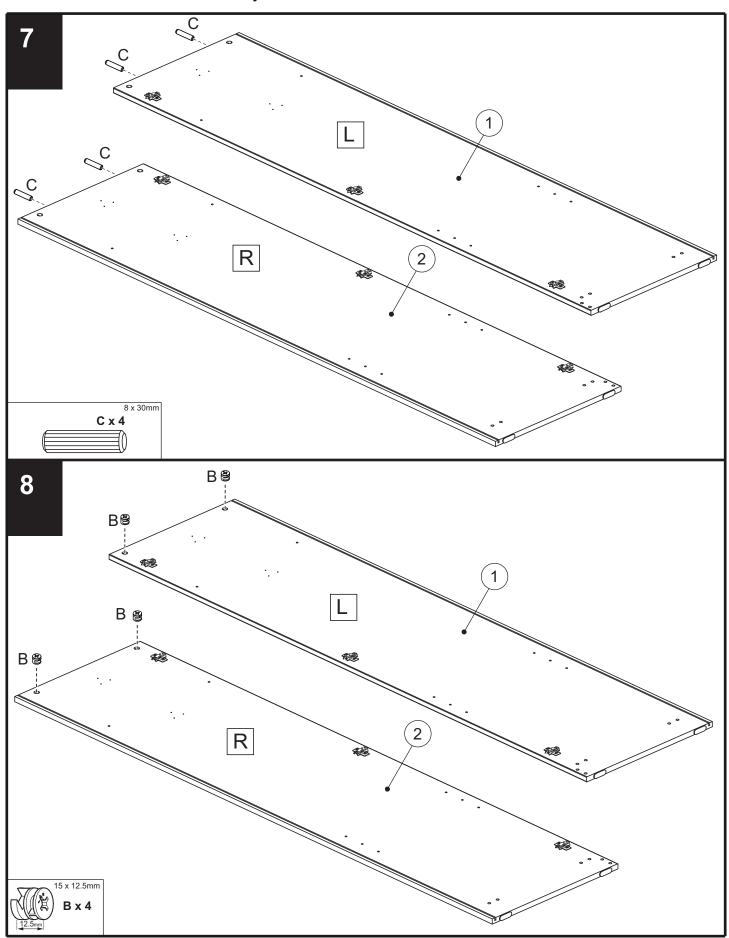


FLYNN MIRROR WARDROBE

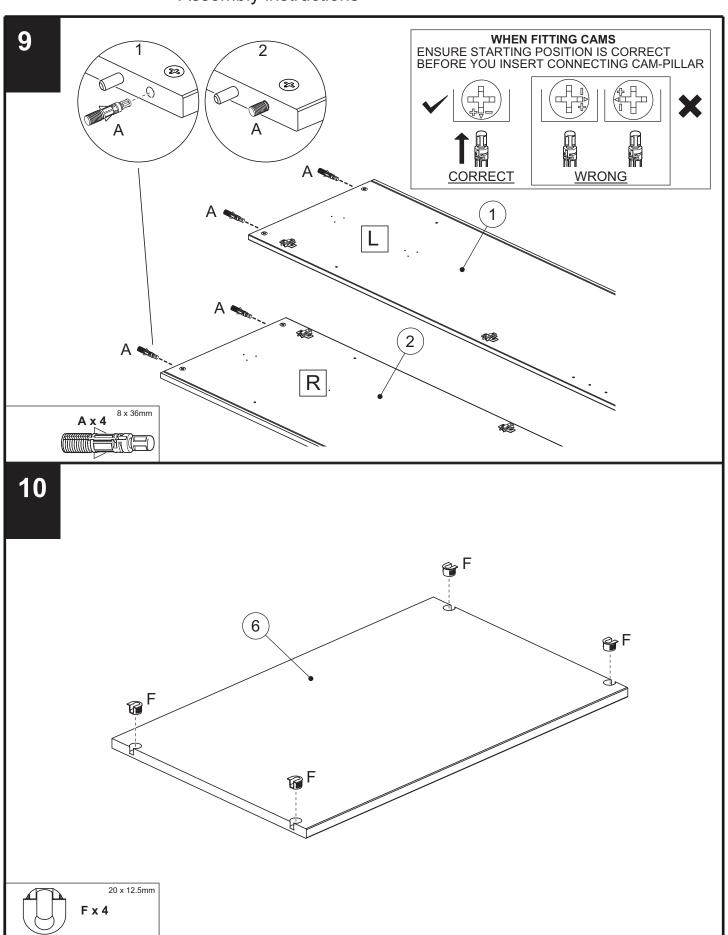




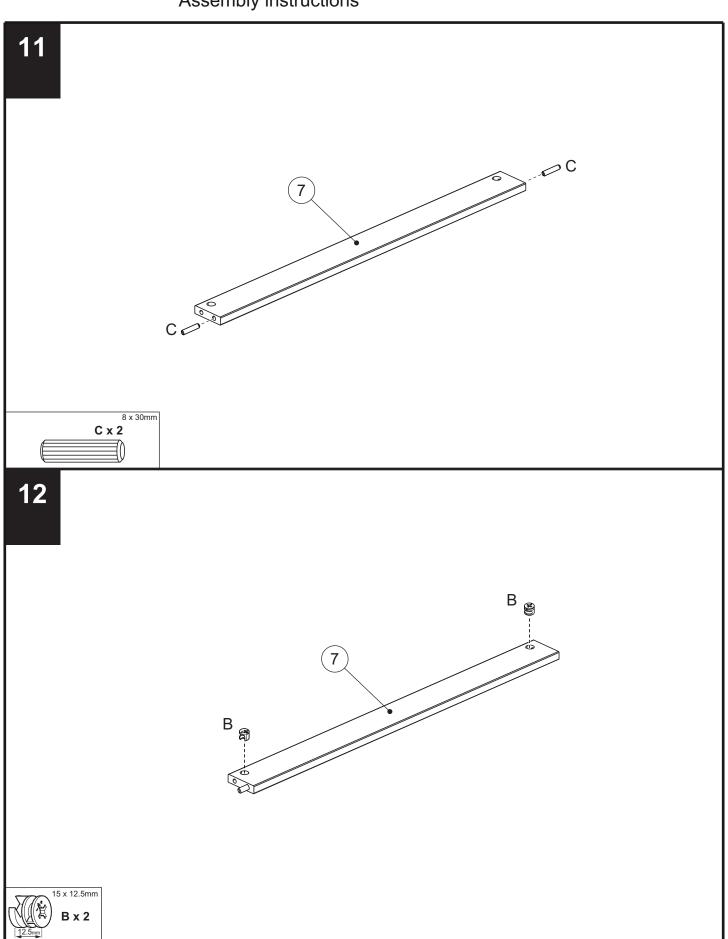


FLYNN MIRROR WARDROBE

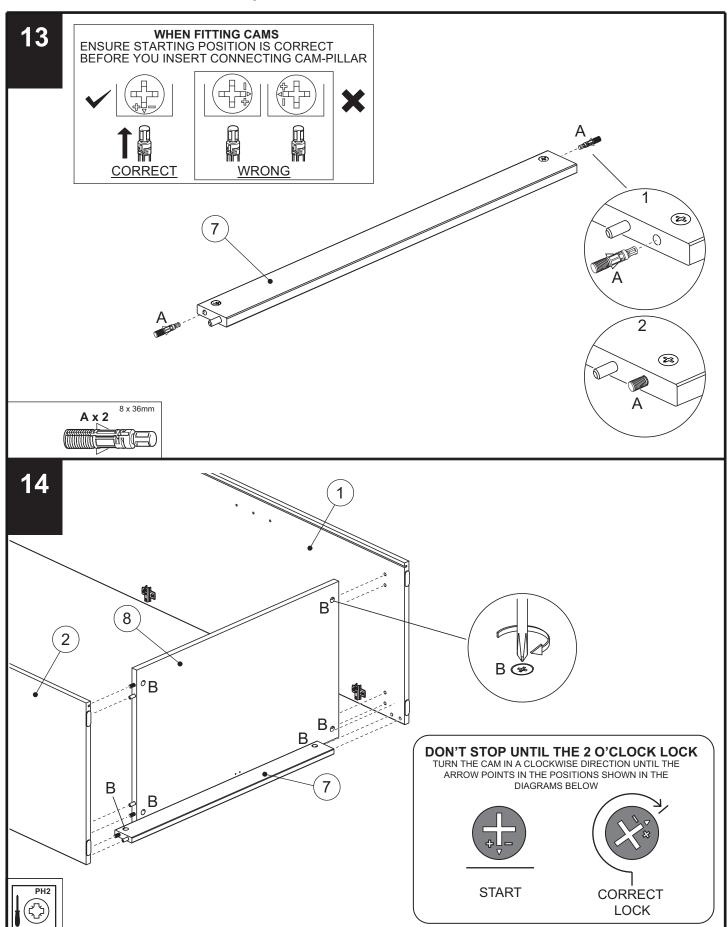

FLYNN MIRROR WARDROBE

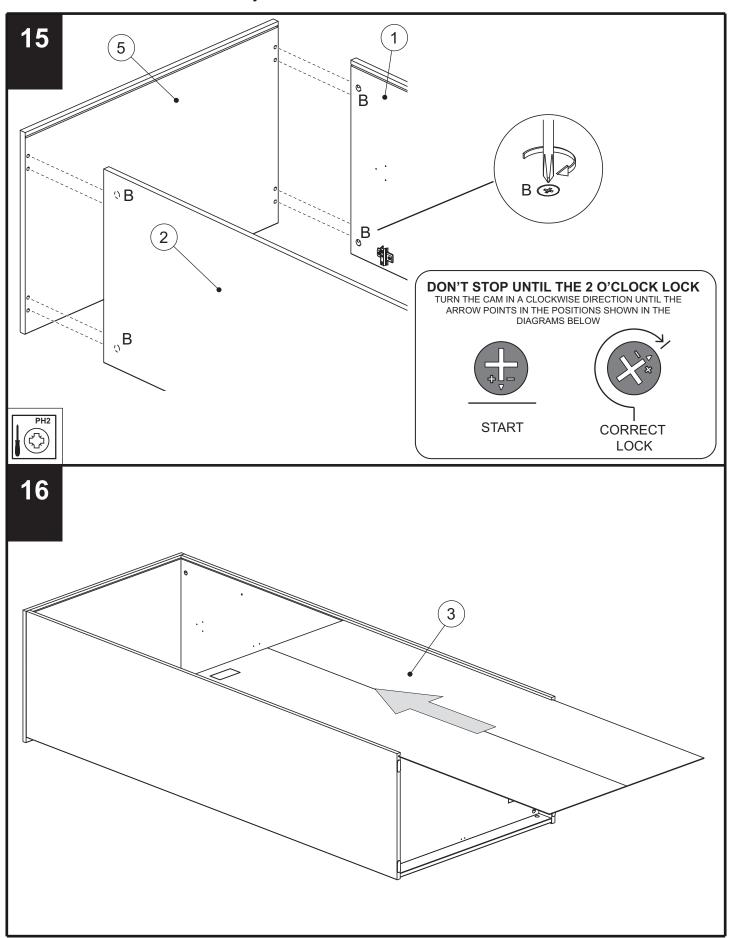

FLYNN MIRROR WARDROBE

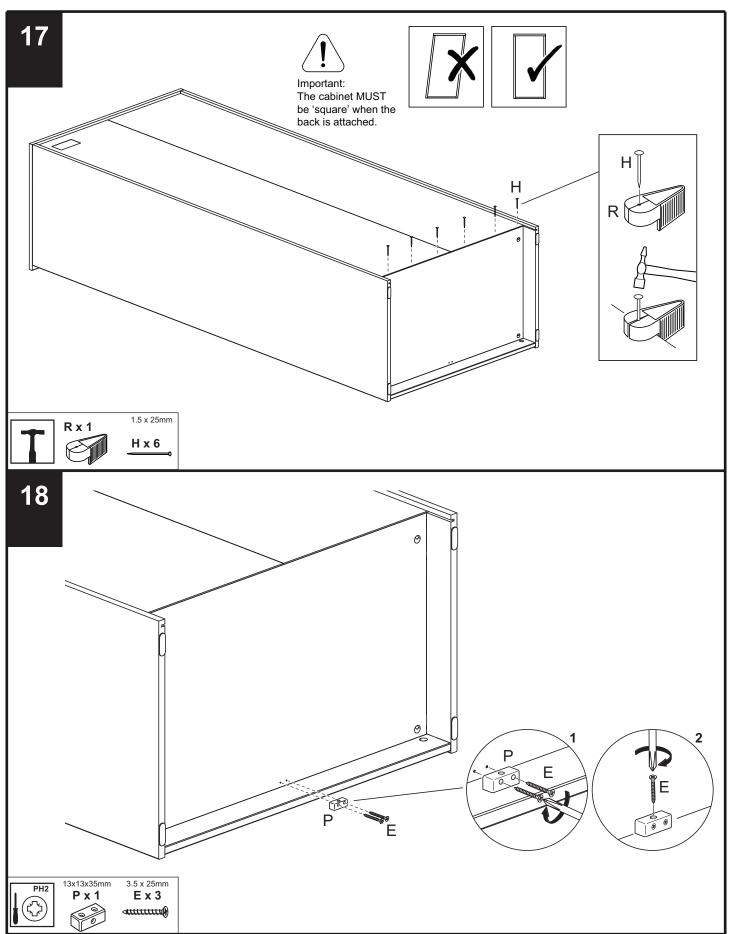





186812 Assembly instructions

19 **20** Q -r⊢Q Q® -⊪Q Q® _#Q Q \mathbb{Q} Q , Q **№** Q x 12



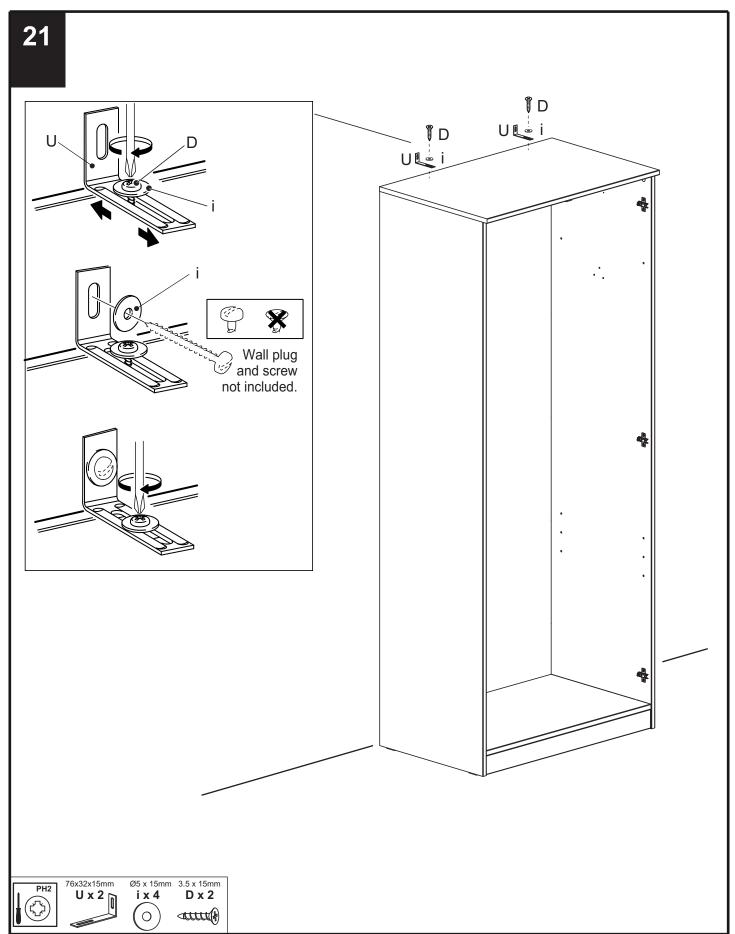

FLYNN MIRROR WARDROBE

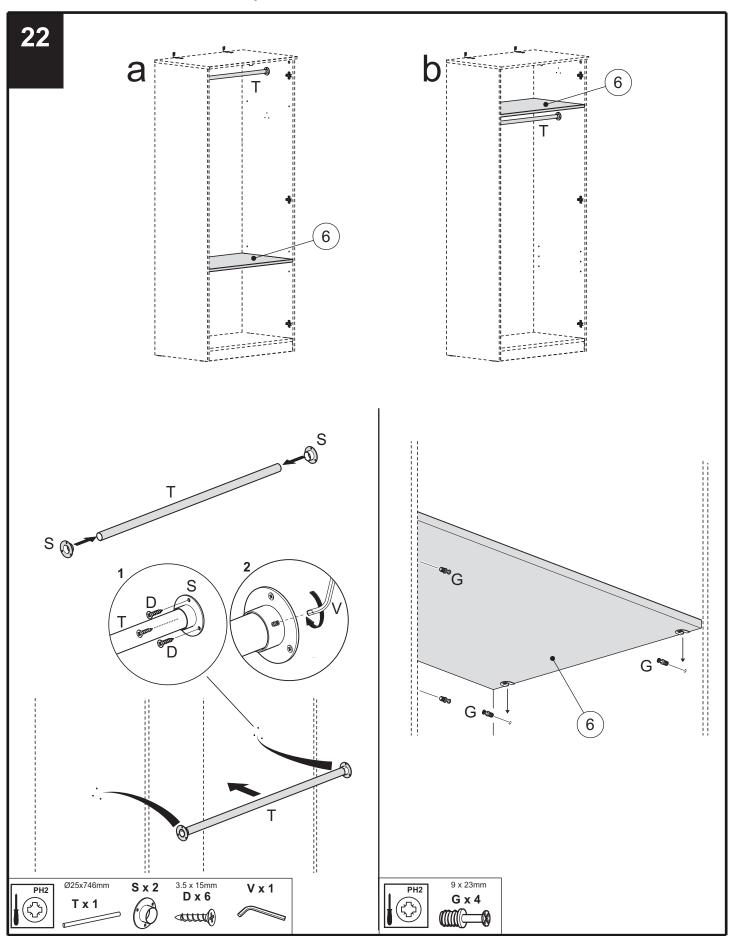



186812 Assembly instructions

23 3.5 x 15mm **D x 12** ALLUMA)

186812


Assembly instructions 24 (4 4 **25** Ζ Ζ 3.5 x 15mm **Z x 2** J x 1

dum(4)



186812 Assembly instructions


26

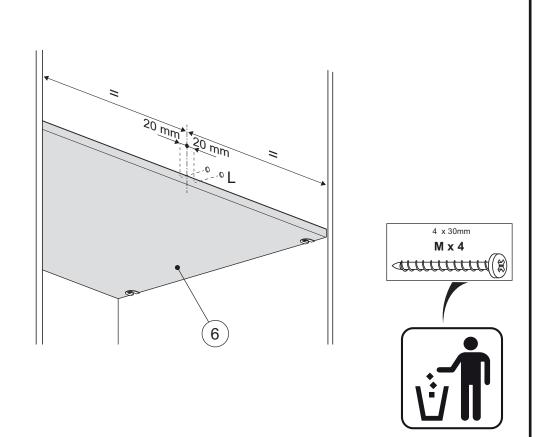

L x 2


Ø10 x 15mm

 Wall fixing - if in doubt seek professional advice




Wood

 If fixing to wood
make su re that it
isn't chipboard as
screws can easily
pull away from the
core structure



 Brick or Masonry Use an appropriate wall plug provided you are sure your wall is sound.




Cavity wall Special toggle wall plugs are needed. Seek expert advice.




186812 Assembly instructions

HINGE ADJUSTMENT INSTRUCTIONS

a: Height adjustment Loosen screws 'A' on fixing plates and move door up or down as required. Retighten screws 'A'.

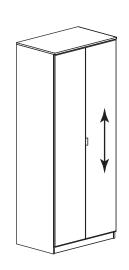


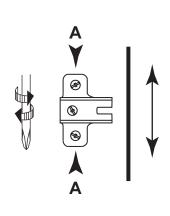

b: Forward or backwards adjustment

Loosen screw 'B' on fixing plate and move Door in or out as required.
Retighten screw 'B'.

b:

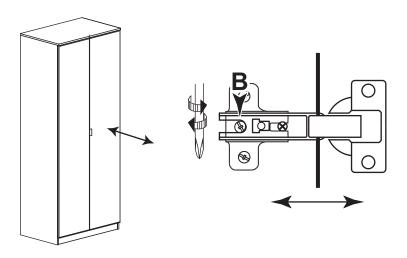

c: Sideways adjustment

To move Door 'OUT' at hinge position, slacken screw 'C' .

To move Door 'IN' at hinge position, tighten screw 'C'.

C:

