

next

OAK GLASS LADDER SHELF


217471

Assembly instructions

Actual product size
H180 x W38 x D60 cm

Instruction for use:

- This product is manufactured from toughened safety glass. In the unlikely event that the glass fails it will break into a large number of small fragments that may be spread over a wide area. This is a feature of toughened glass, designed to remove the risk of injury from glass breaking into large shards.
- If the glass is chipped or broken, stop using the product.
- Do not place very hot or very cold items on the glass.
- Do not use the glass as chopping surface. Do not strike the glass with hard or pointed items.

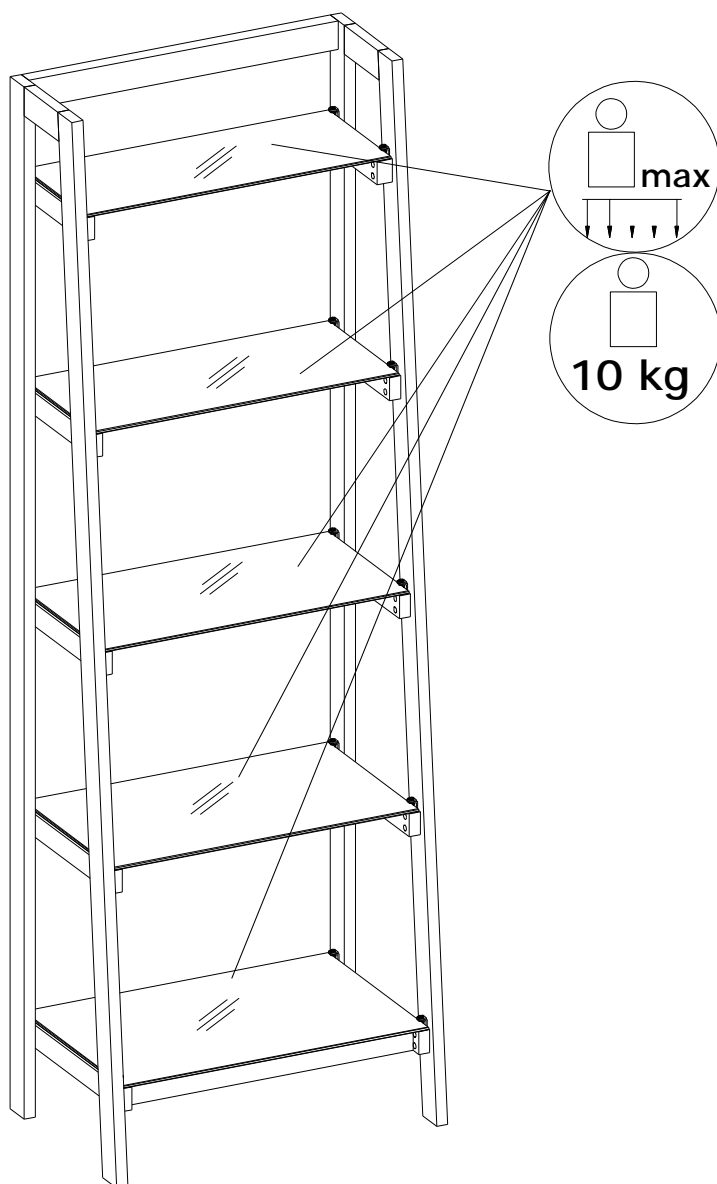

Need Help?

With: Assembly instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT – RETAIN FOR FUTURE REFERENCE

BEFORE YOU START

Warnings

We suggest you retain these instructions for future reference. Keep fittings out of children's reach and keep children well away from the construction area.

This product should only be used on firm, level ground. Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your table.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly

Due to the size of the product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use. Check fixings regularly to ensure they remain tight.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

Don'ts

When moving furniture never drag the pieces across the floor, as this will cause damage to the joints

Apply Adhesive substrates for example, sticky tape to the product.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Ensure that the product is protected with mats & coasters when items are placed on its surface. Never put hot dishes directly onto wooden or glass surfaces as this may mark the furniture.

Never allow any kind of liquid to remain on your furniture. Absorption can cause finishes to de-laminate and or stain.

 
Number of people required to assemble

Two people are required to assemble this item.


Time to assemble



Tools required

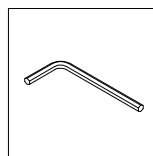

supplied

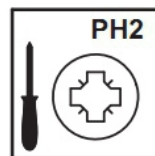 

not supplied

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

 
If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT

To View our full furniture range please visit www.next.co.uk

GETTING TO KNOW YOUR PRODUCT

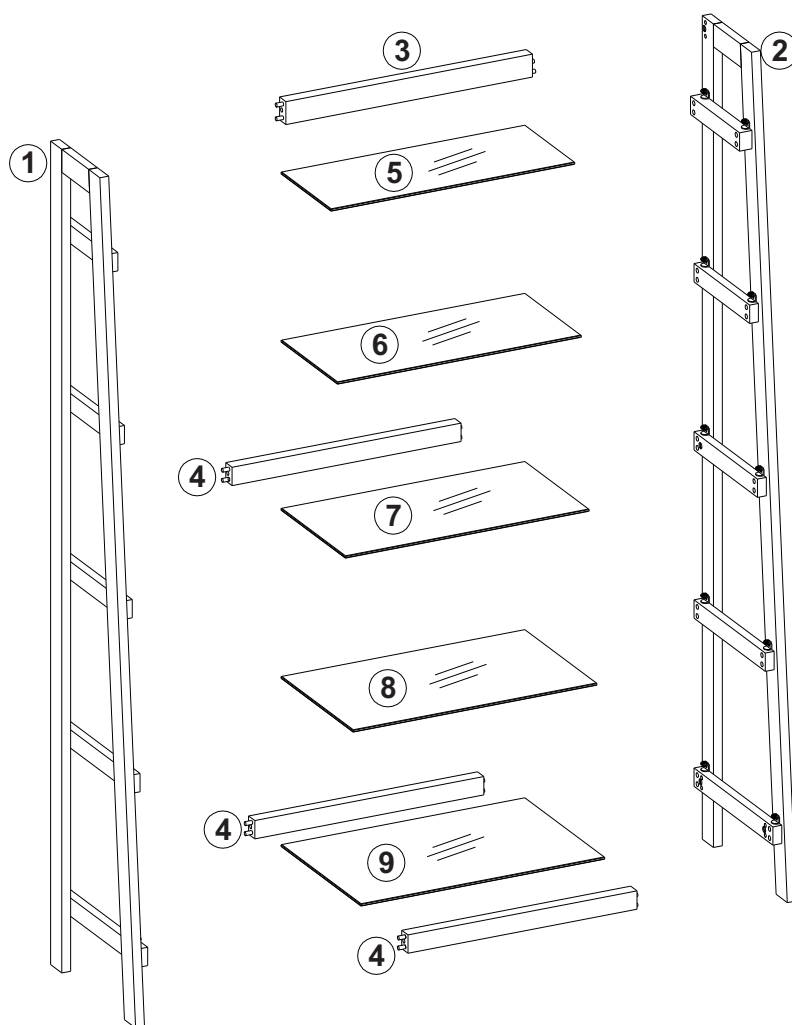


Components supplied. Please use this guide if you require replacement parts. .

Ref	Dimensions	Visual	Qty	Ctn
1	180 x 38cm		1	1
2	180 x 38cm		1	1
3	58.8 x 5cm		1	1
4	54.8 x 4cm		3	1
5	55.4 x 22.3cm		1	1



Ref	Dimensions	Visual	Qty	Ctn
6	55.4 x 25.2cm		1	1
7	55.4 x 28.7cm		1	1
8	55.4 x 32.2cm		1	1
9	55.4 x 35.7cm		1	1

Fixtures and fittings supplied (actual size)


Ref	Dimensions	Qty	* Extra Fittings
A	5x13x13 mm	6	1
B	7x15x30 mm	2	1
C	M6 x 40 mm	8	1
	4x100	2	

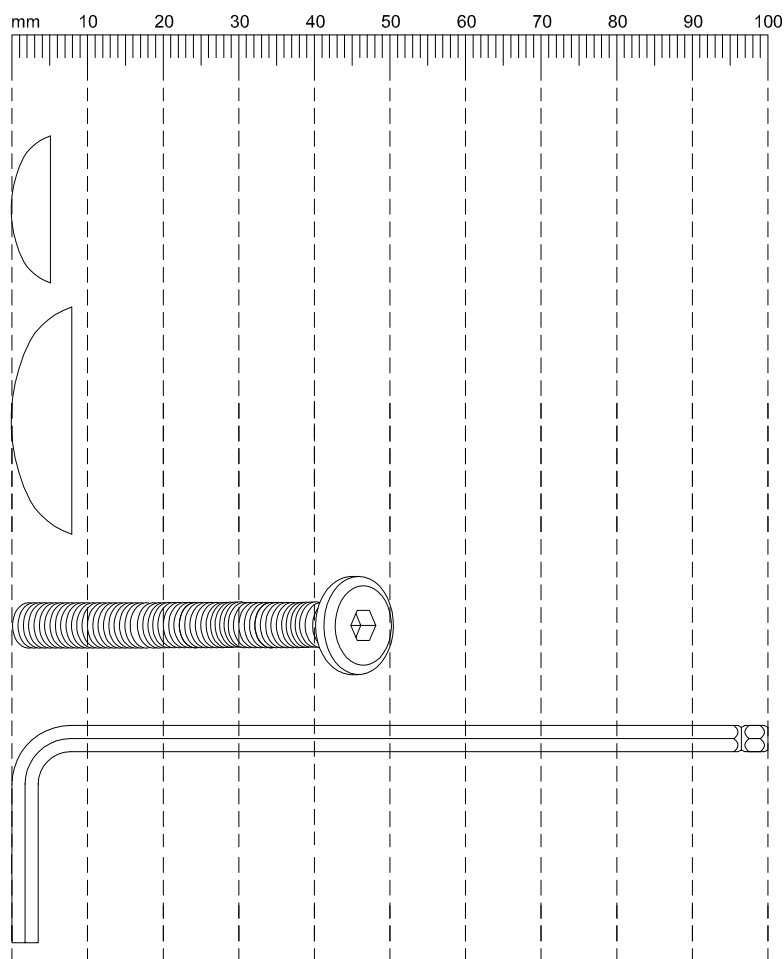 

  
Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Visual	Qty
D	2x39x39		2
E	M4 x 20		2

 1

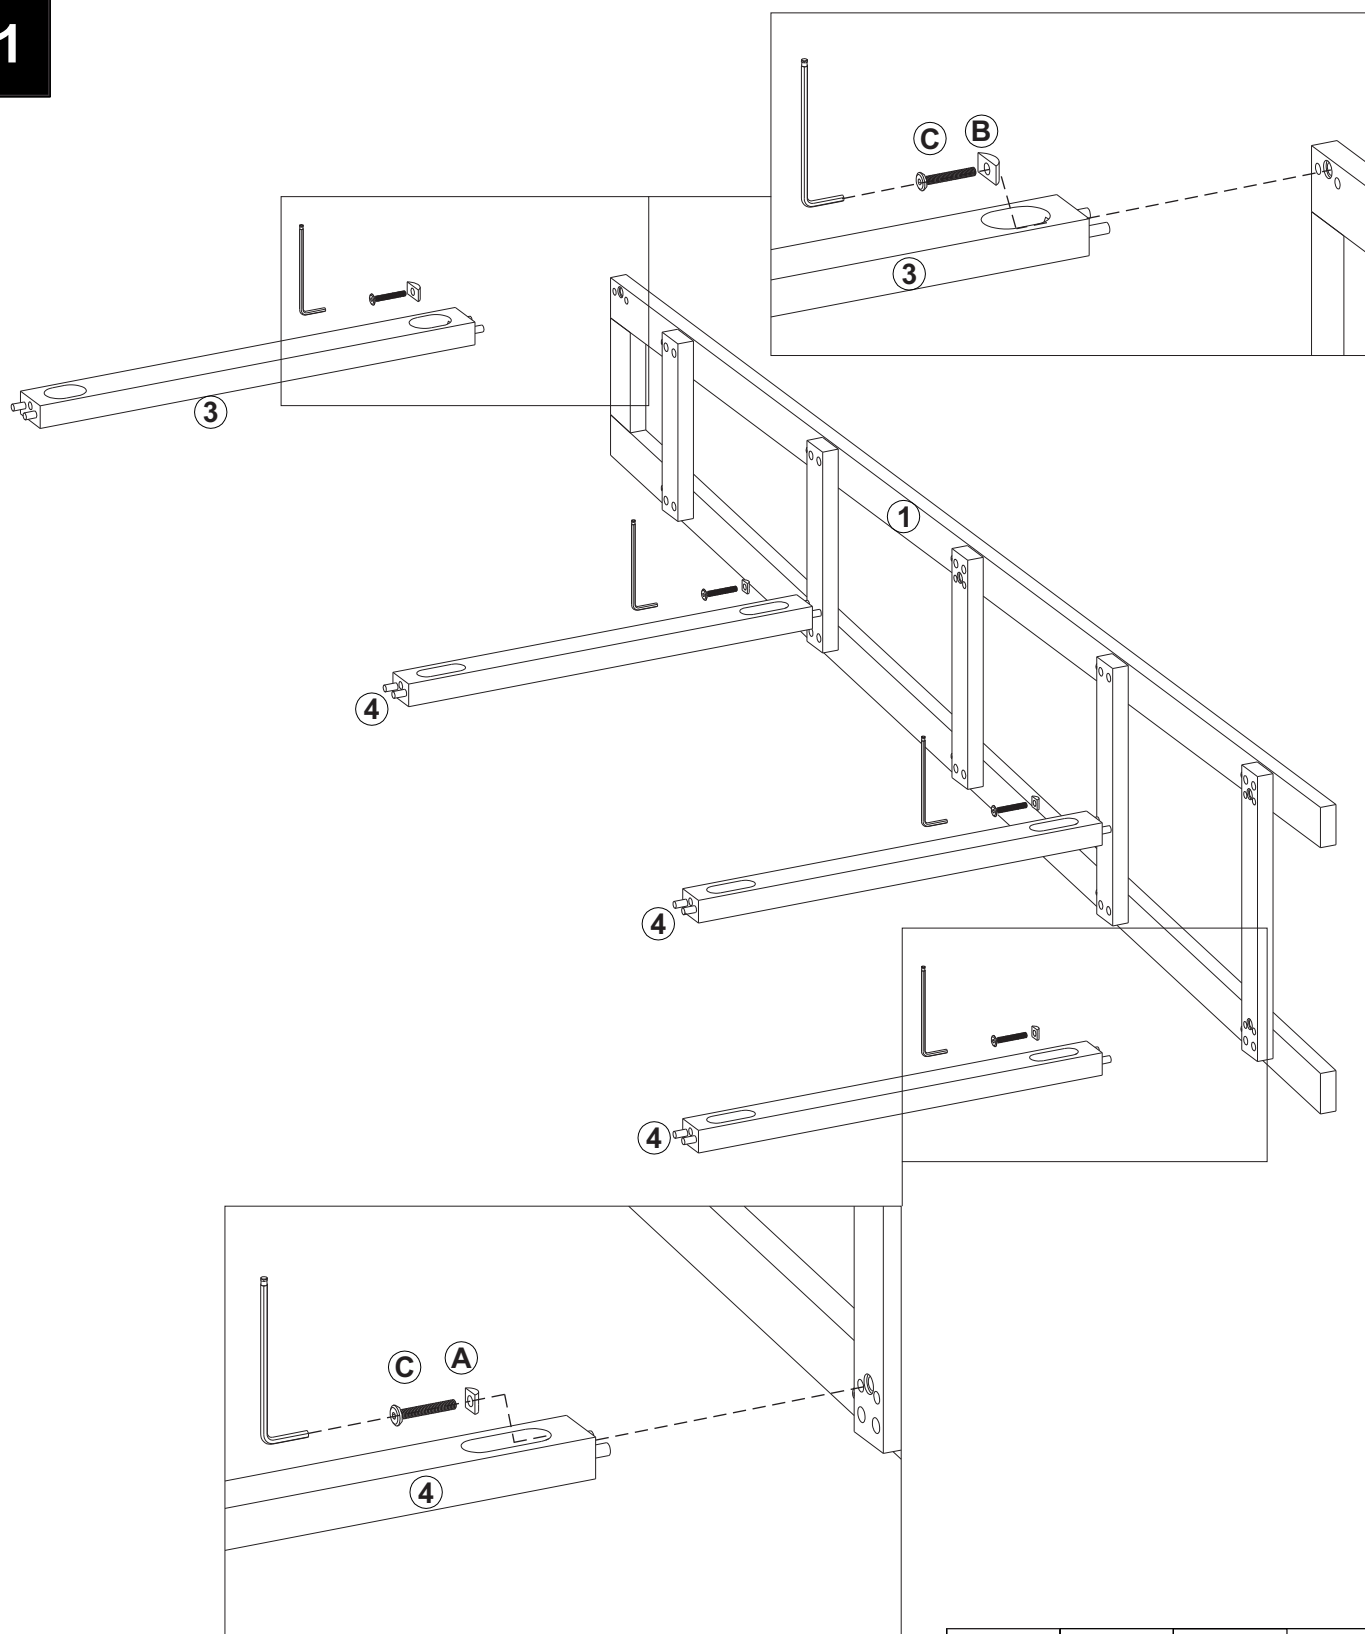


	5x13x13 A x 3	7x15x15 B x 1	M6 x 40 D x 4
---	------------------	------------------	------------------


 
2

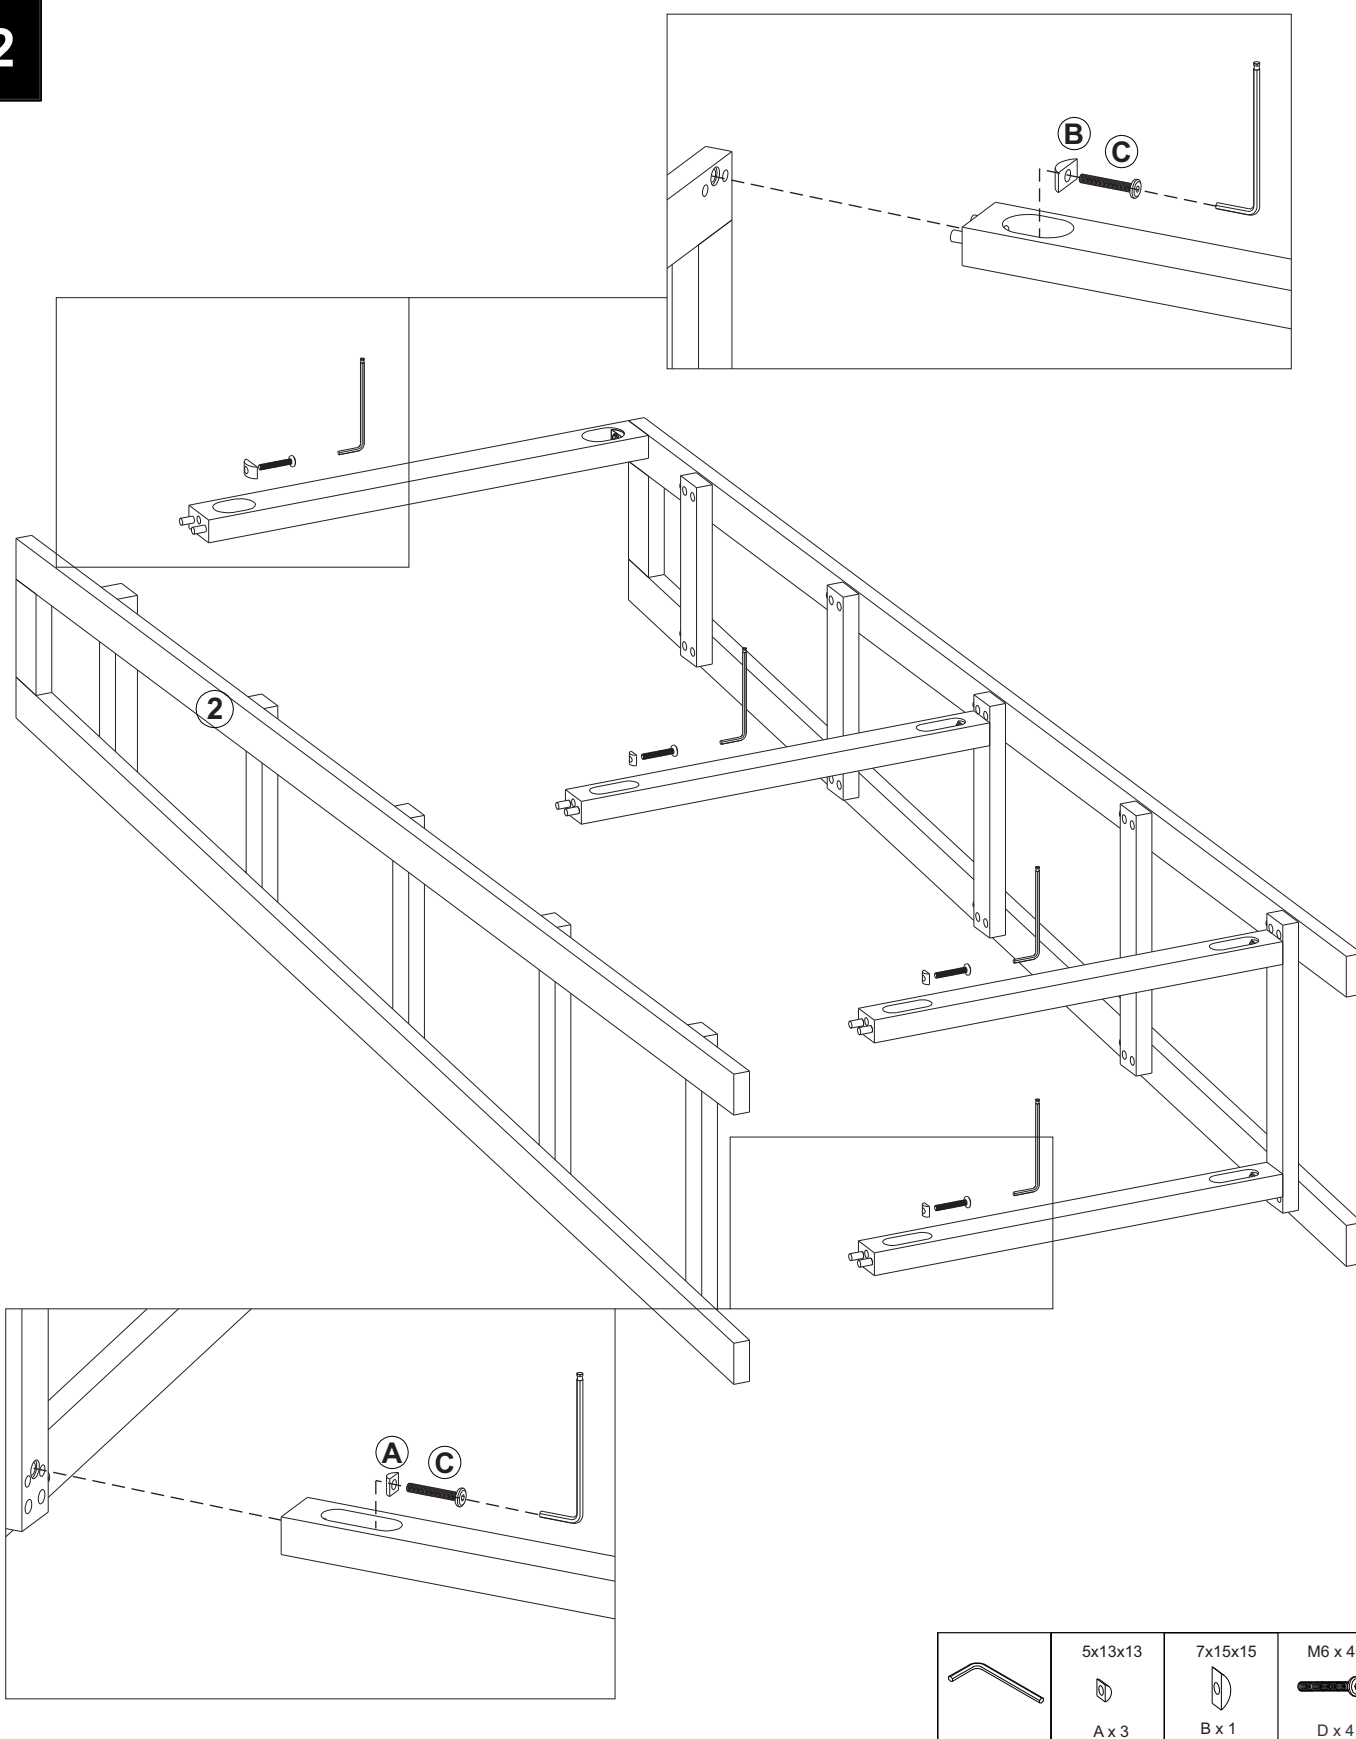

3

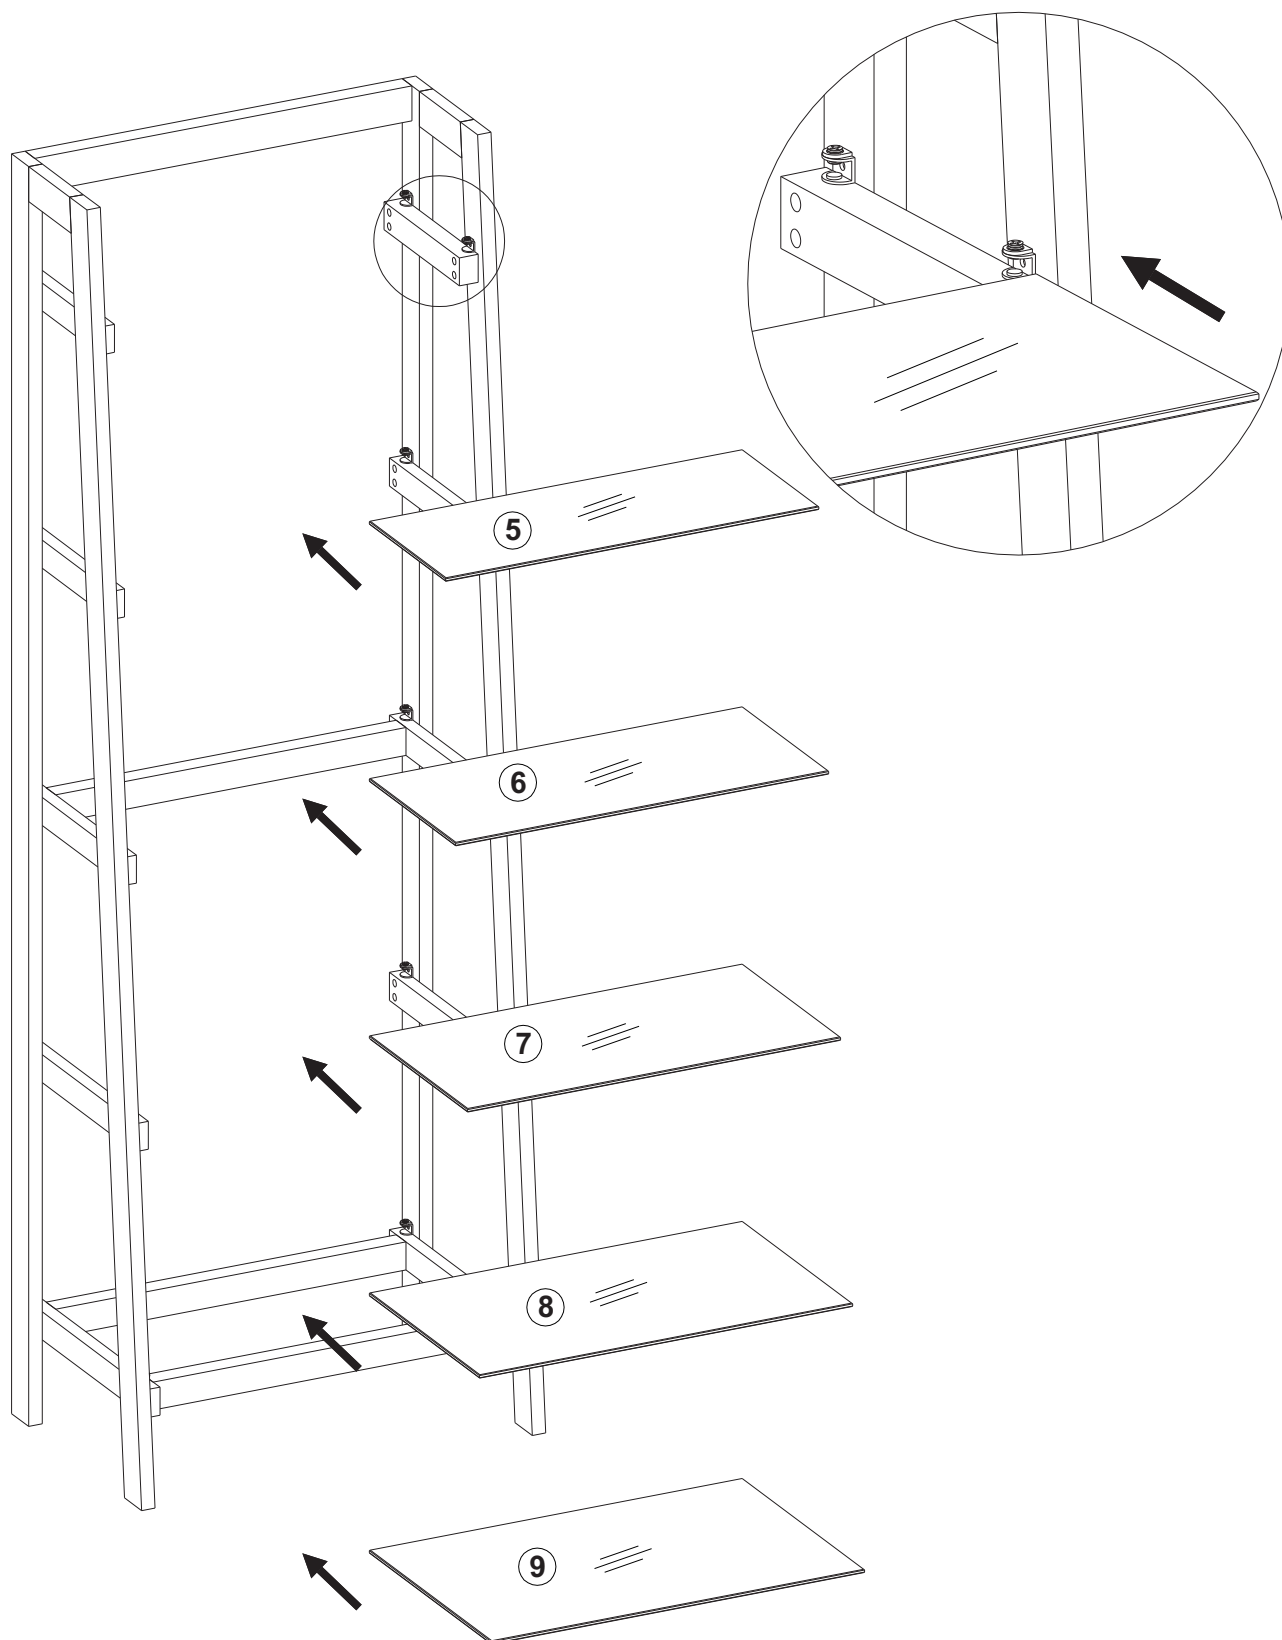 

4

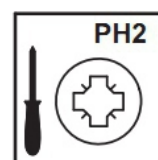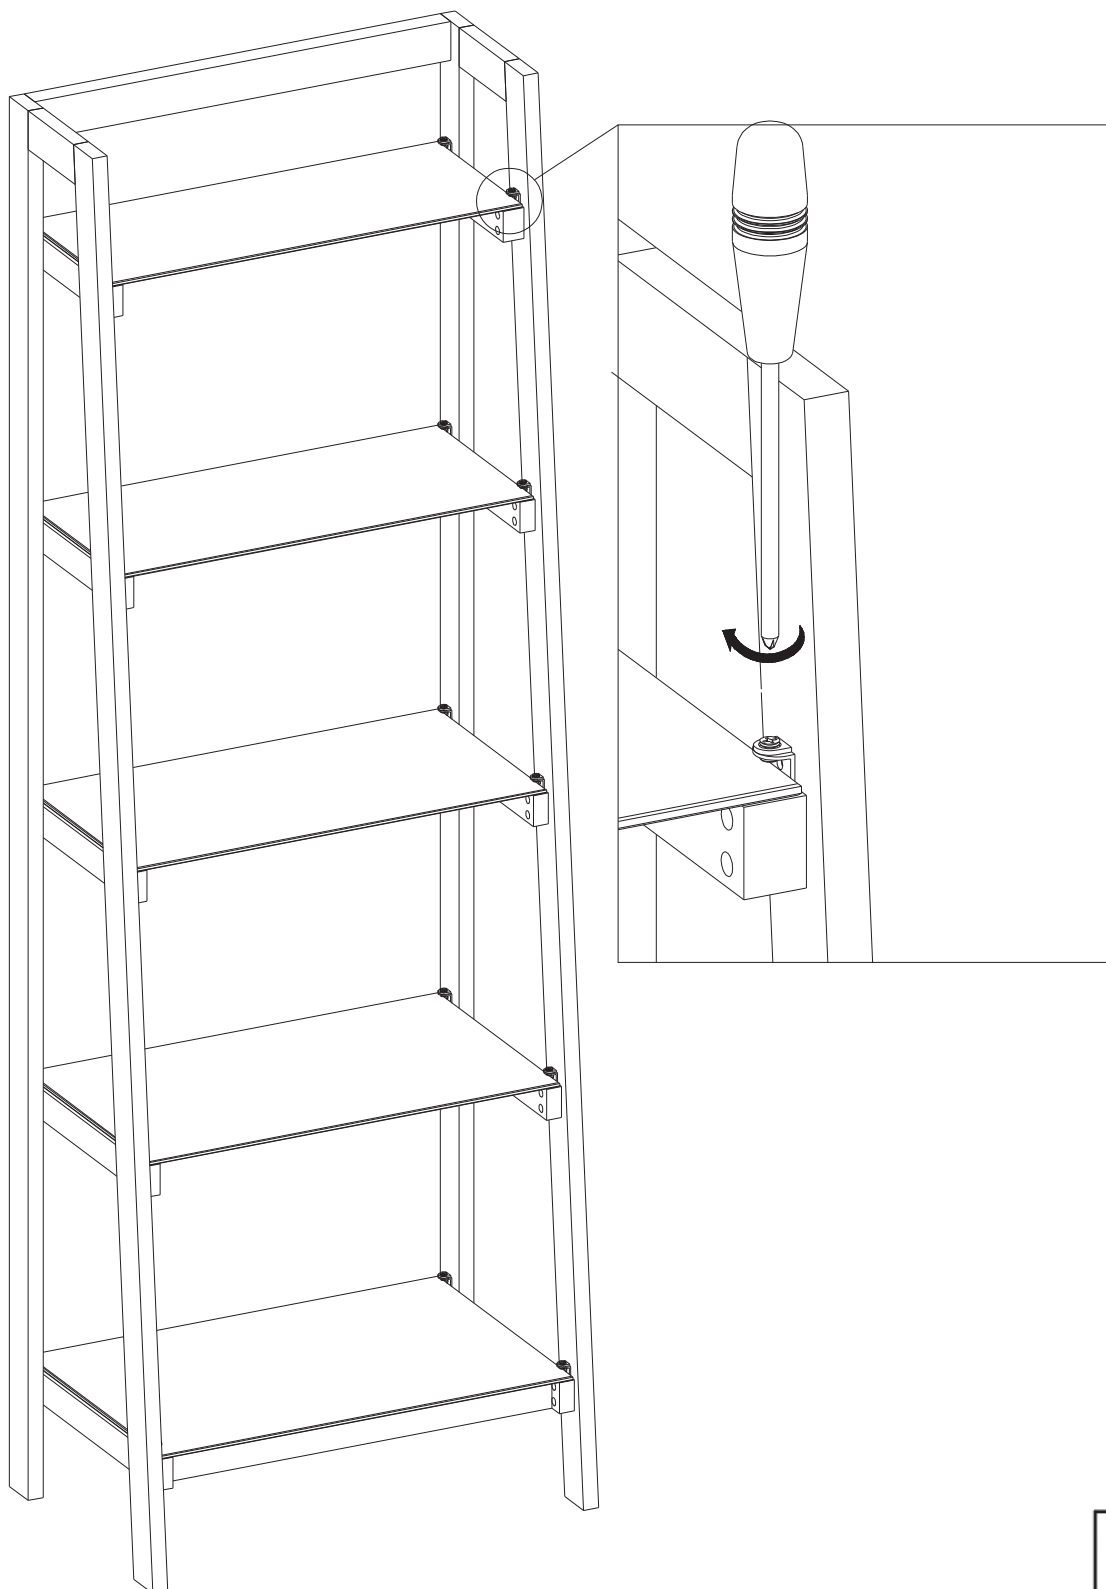  

not supplied

 
 
 
5

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X "L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

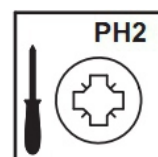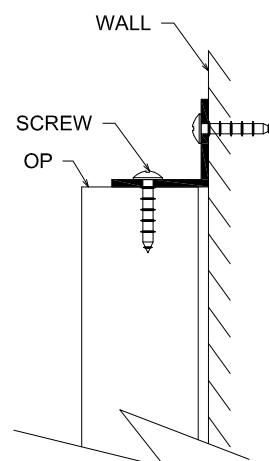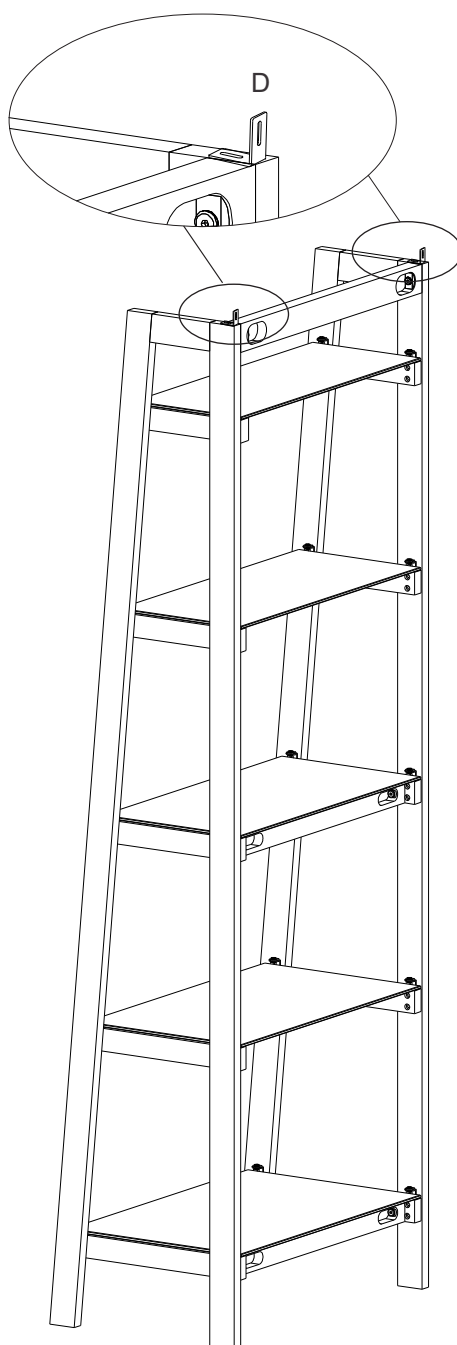

not supplied


2x39x39	M4 x 20
D x 2	E x 2

next

OAK GLASS LADDER SHELF

217471

 Actual product size
H180 x W38 x D60 cm

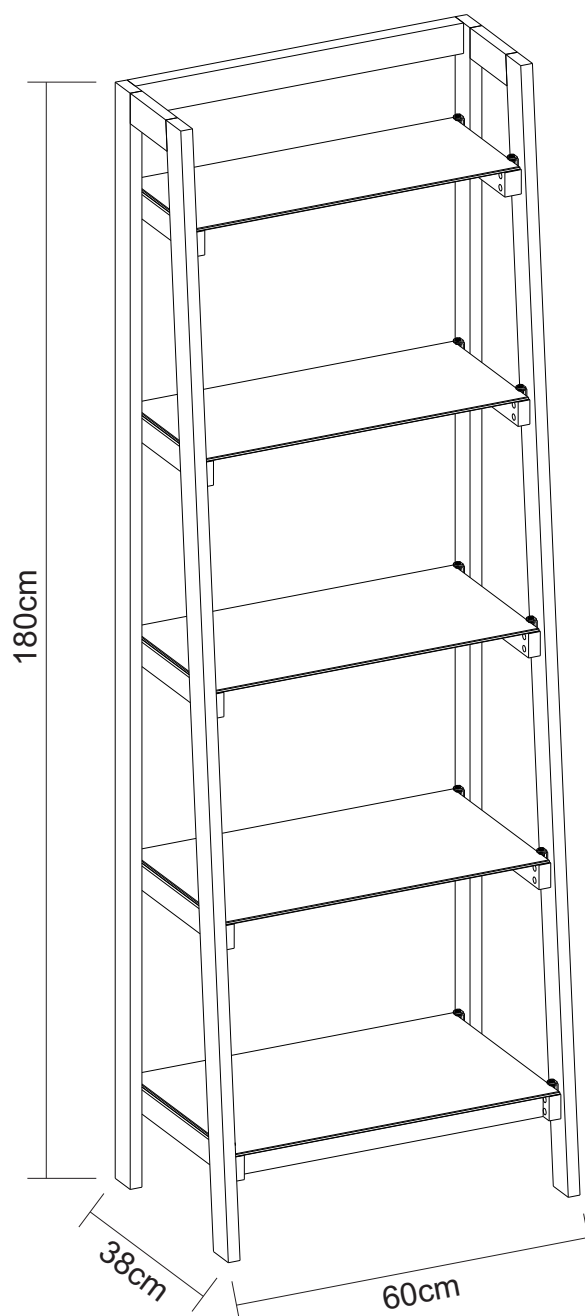

Need Help?

With: Assembly instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT – RETAIN FOR FUTURE REFERENCE