

next

 
MODE WHITE SWIVEL DESK

301881

Assembly instructions

Actual product size

H75 x W111x D39cm

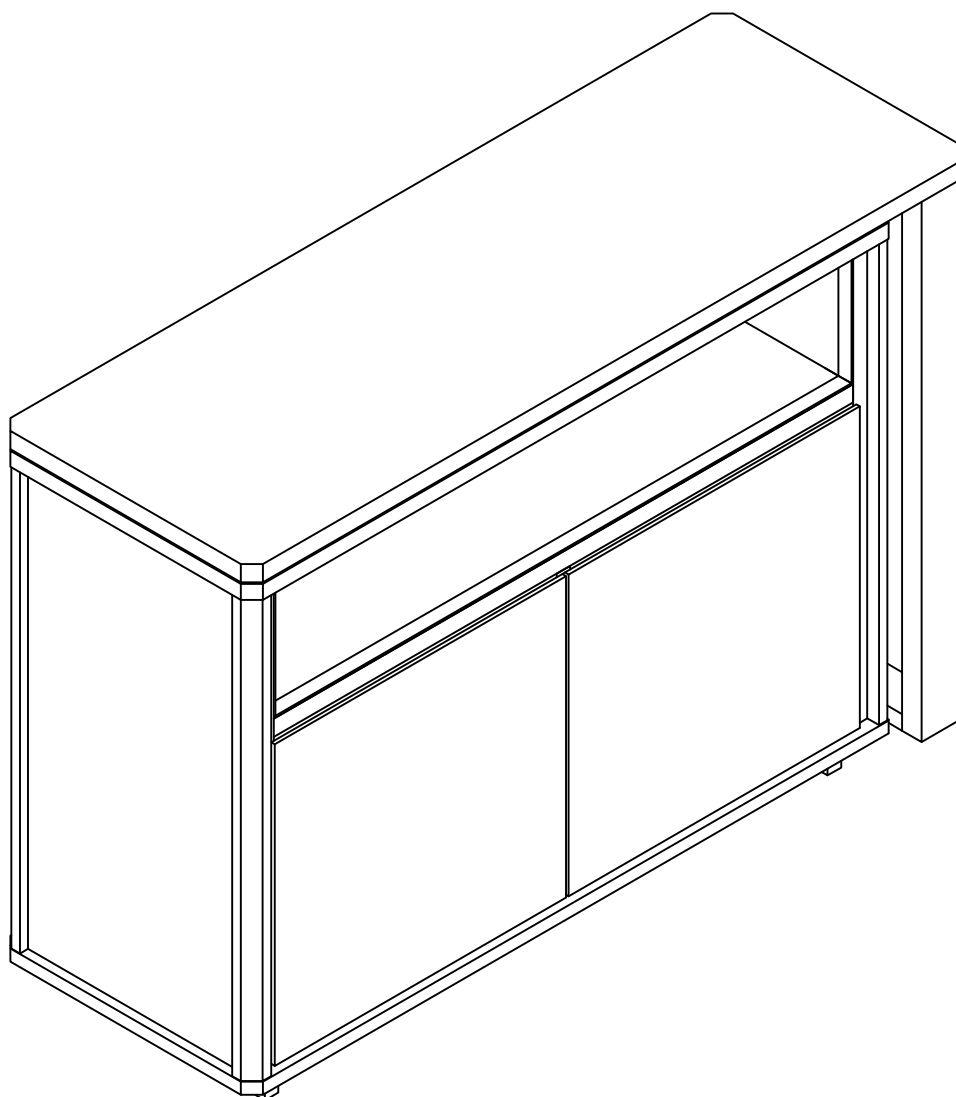

Need Help ?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

Number of people required to assemble

Two people are required to assemble this item

 


Time to assemble



30min

Tools required

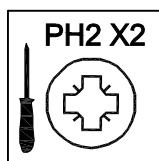

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

 
Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

 


 
 
 
 
 
 

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

 
 
 

 
 
 
 
 
 
Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

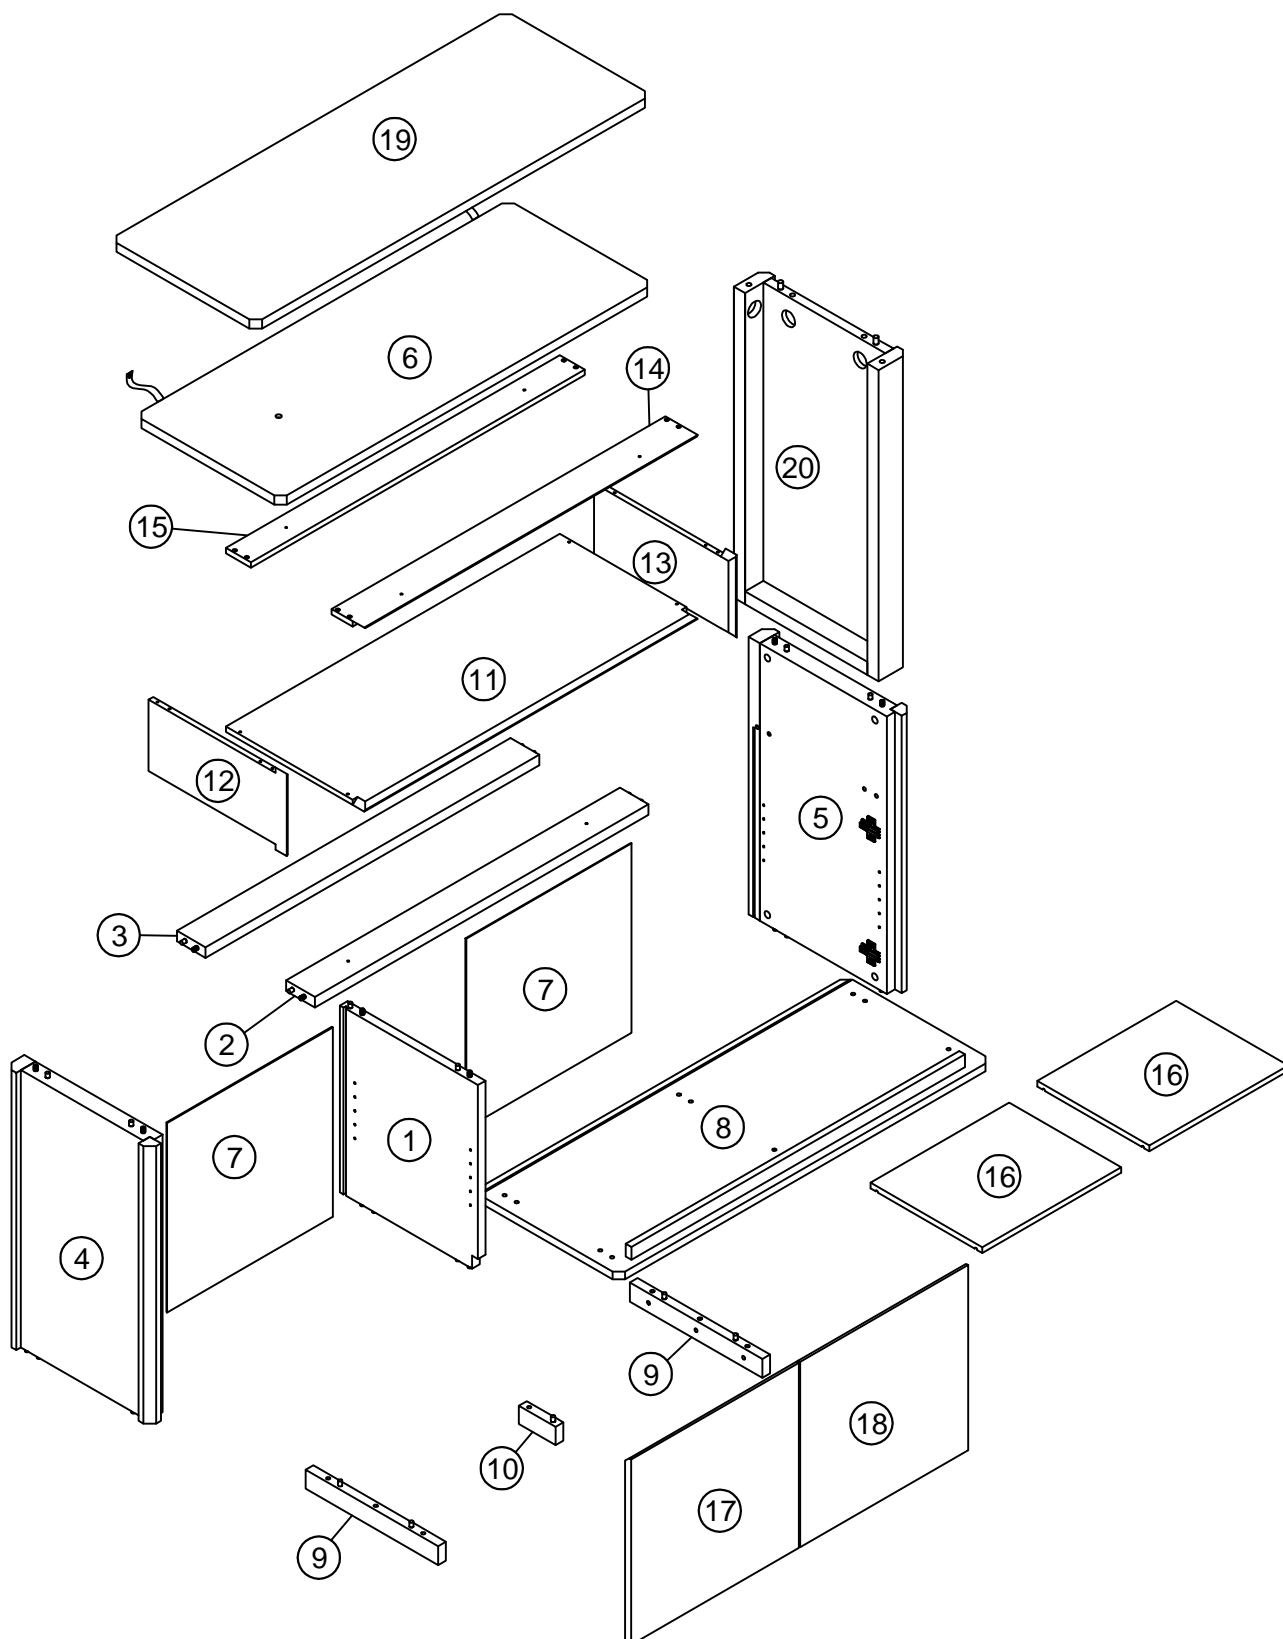GETTING TO KNOW YOUR PRODUCT

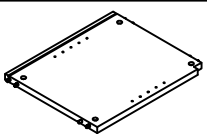


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	37 x 43cm		1	1
2	7 x 89cm		1	2
3	8 x 89cm		1	2
4	39 x 64cm		1	1
5	39 x 64cm		1	1
6	39 x 100cm		1	2
7	44 x 44cm		2	1
8	39 x 100cm		1	2
9	4 x 36cm		2	1
10	4 x 10cm		1	1

Ref	Dimensions	Visual	Qty	Ctn
11	37 x 89cm		1	2
12	19 x 37cm		1	1
13	19 x 37cm		1	1
14	9 x 89cm		1	2
15	7 x 89cm		1	2
16	35 x 44cm		2	2
17	45 x 43cm		1	1
18	45 x 43cm		1	1
19	39 x 111cm		1	2
20	39 x 72cm		1	1

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	7	2
B25	Ø35 x 17mm	4	N/A
B8	Ø8 x 38mm	N/A	2
B24	Ø8.5 x 63mm	4	N/A
P3	Ø5 x 16mm	8	1
D10	Ø10 x 50mm	N/A	1
D6	Ø8 x 30mm	N/A	2
U139	Ø4.5 x 15mm	8	1
B12	Ø6x33 mm	7	1
U151	Ø4 x 25mm	12	2
S45	Ø4 x 20mm	6	1
Q7	Ø9 x 18mm	1	1
V50	Ø6 x 28mm	1	1

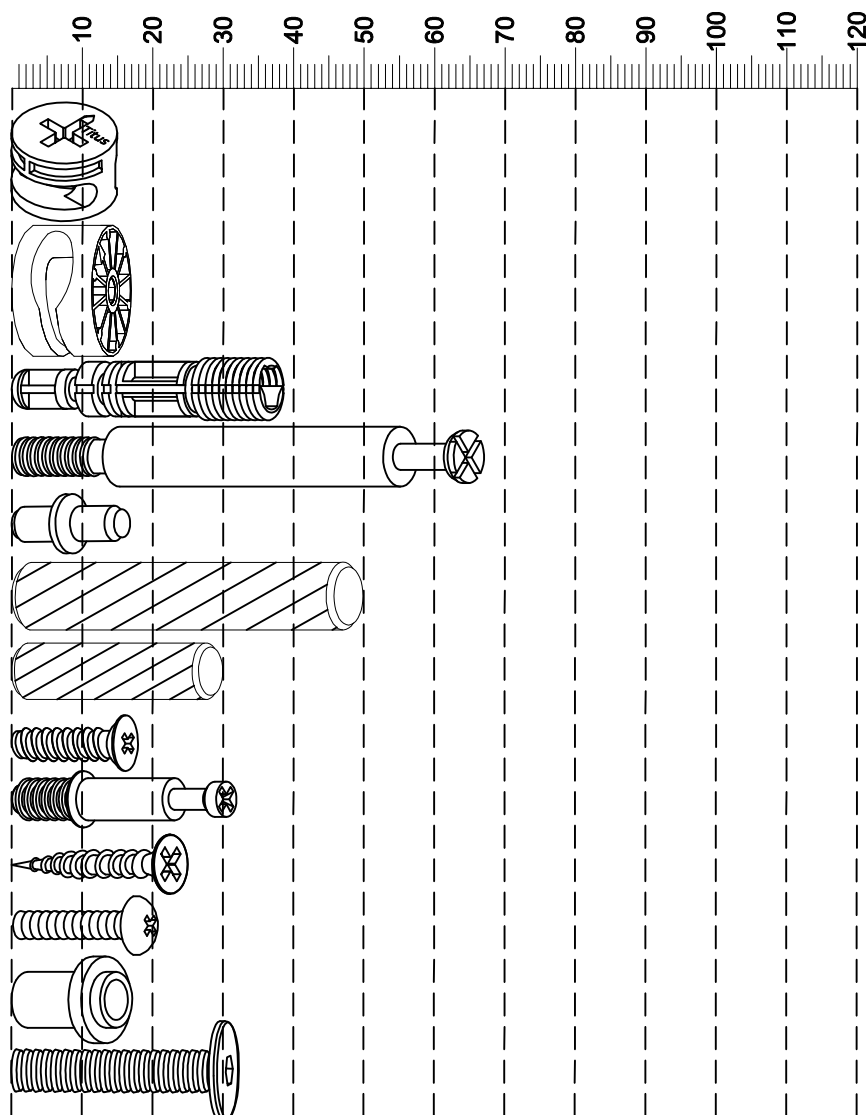 

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
F2	N/A	2	N/A	
Q19	N/A	1	N/A	
T10	N/A	1	N/A	
Q15	N/A	1	1	
T7	N/A	1	N/A	


Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T38	N/A	6	1	
C12	N/A	4	N/A	
O1	25mm	8	1	
O3	45mm	4	1	
T1	N/A	1	N/A	


1

DON'T STOP UNTIL THE 2 O'CLOCK LOCK

 
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE
ARROW POINTS IN THE POSITIONS SHOWN IN THE
DIAGRAMS BELOW

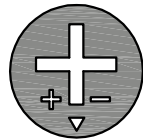


START

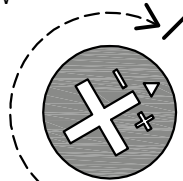 


CORRECT
LOCK

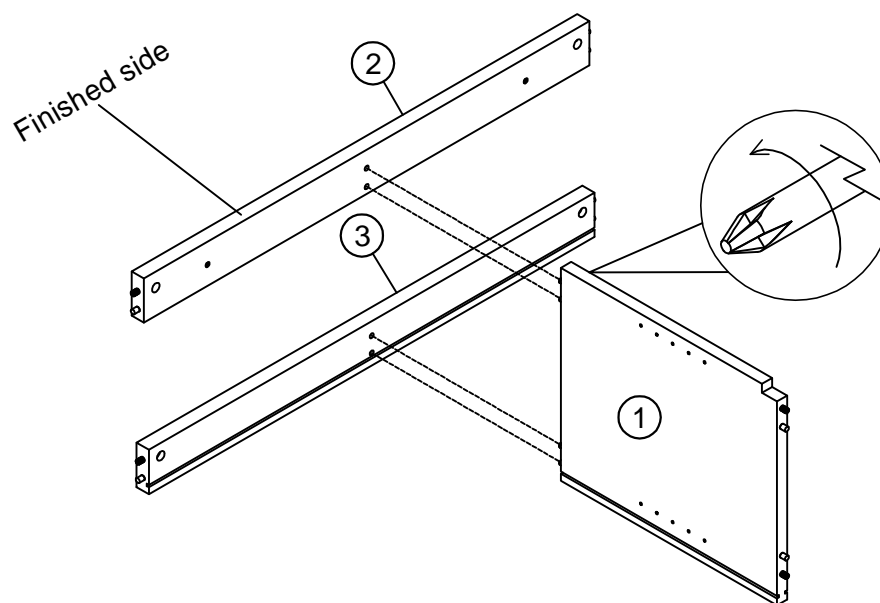 

 
PUSH THE TWO PANELS TOGETHER ALLOWING THE
DOWEL TO ALIGN WITH THE HOLE

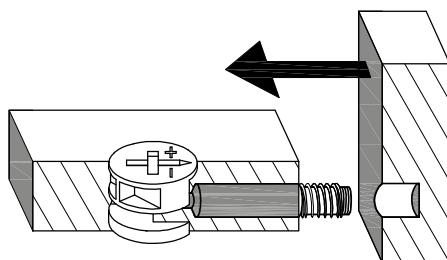


TURN THE CAM IN A CLOCKWISE DIRECTION

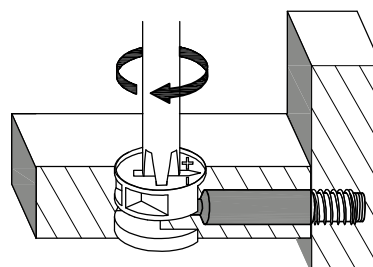 


2

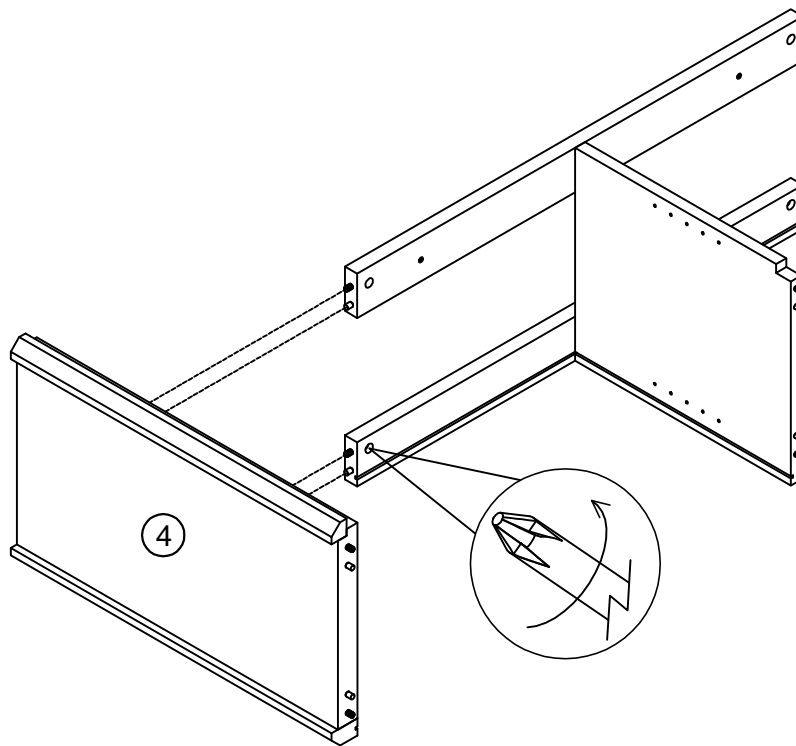 


3

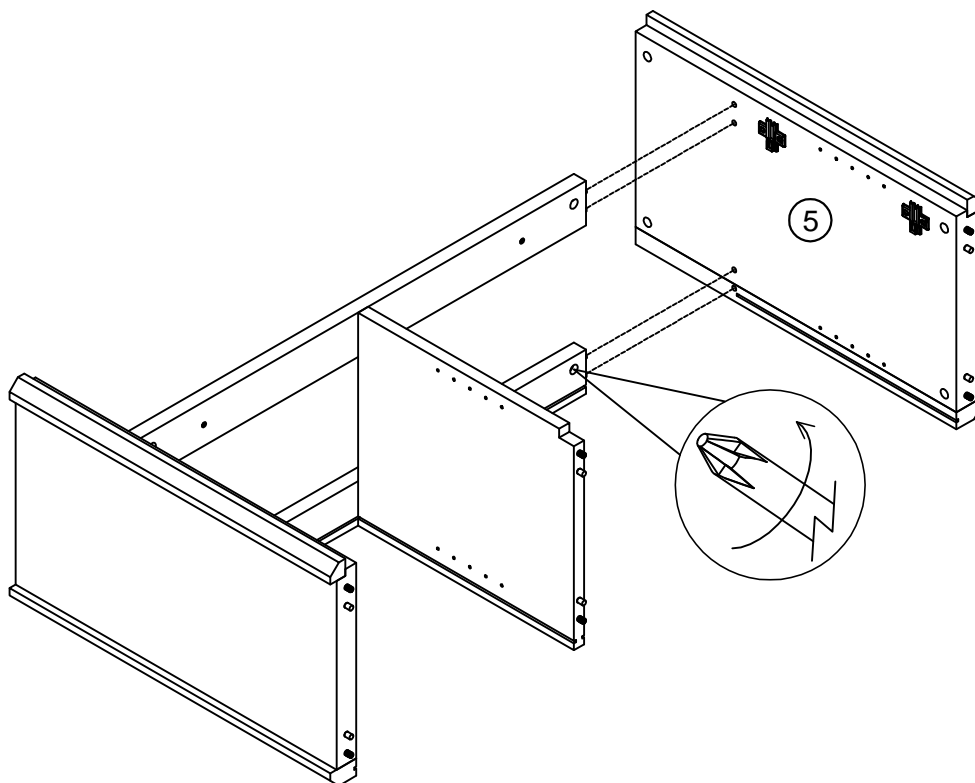 


4

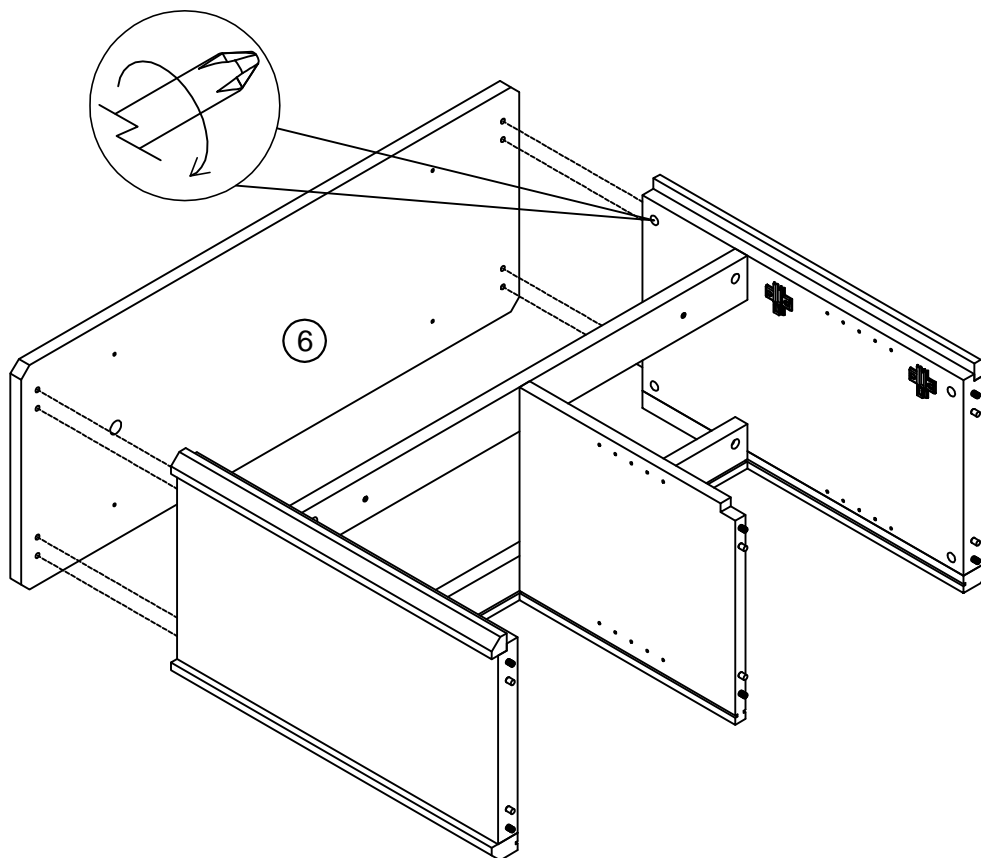 


5

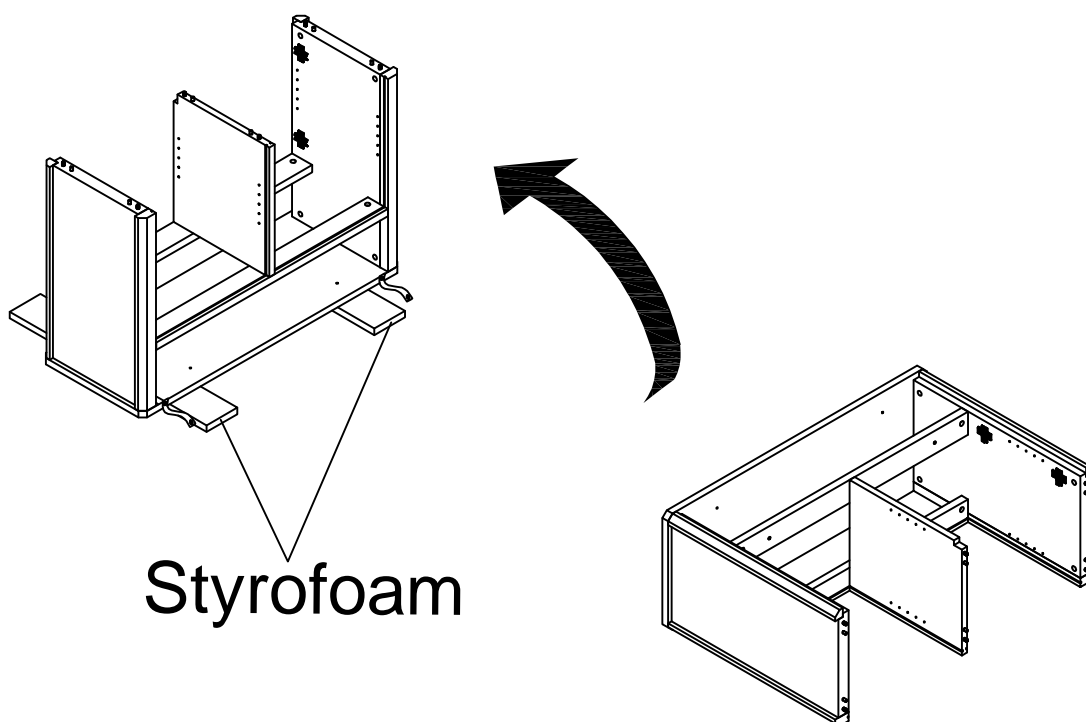 

6

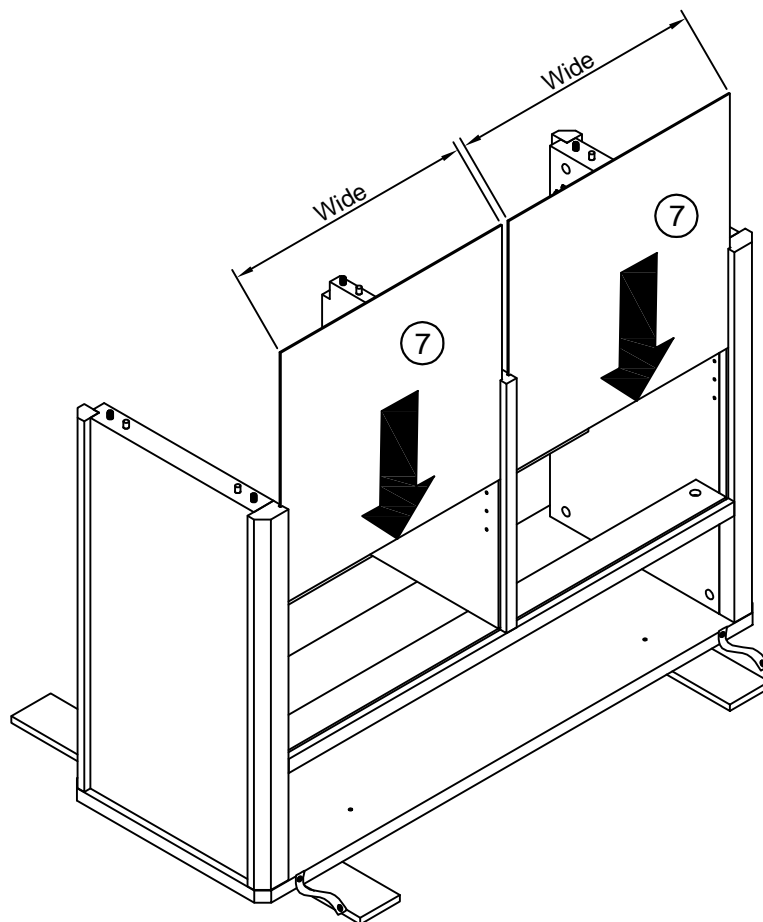 


7

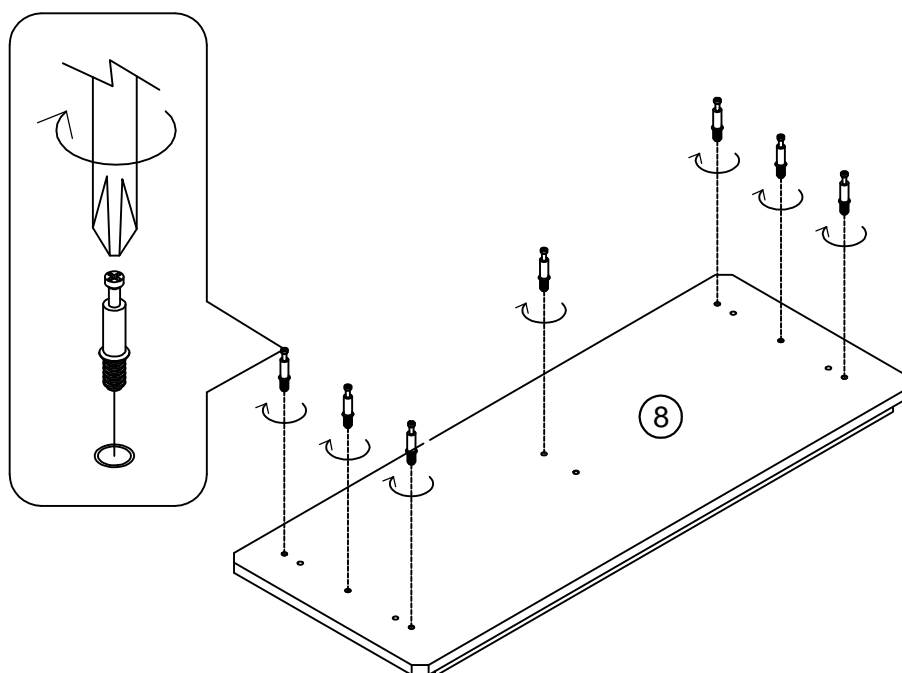 

B12


Ø6 x 33mm

 7



not supplied

 8

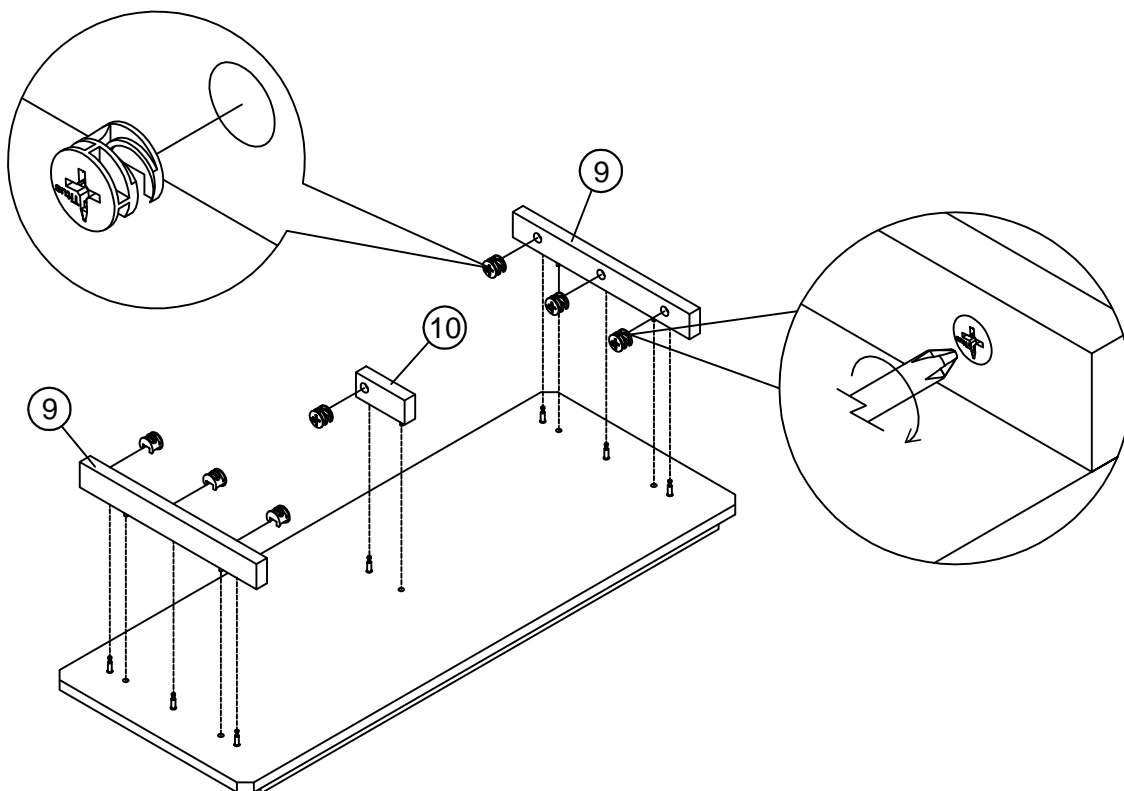


B3

Ø15 x 12mm


7



 9

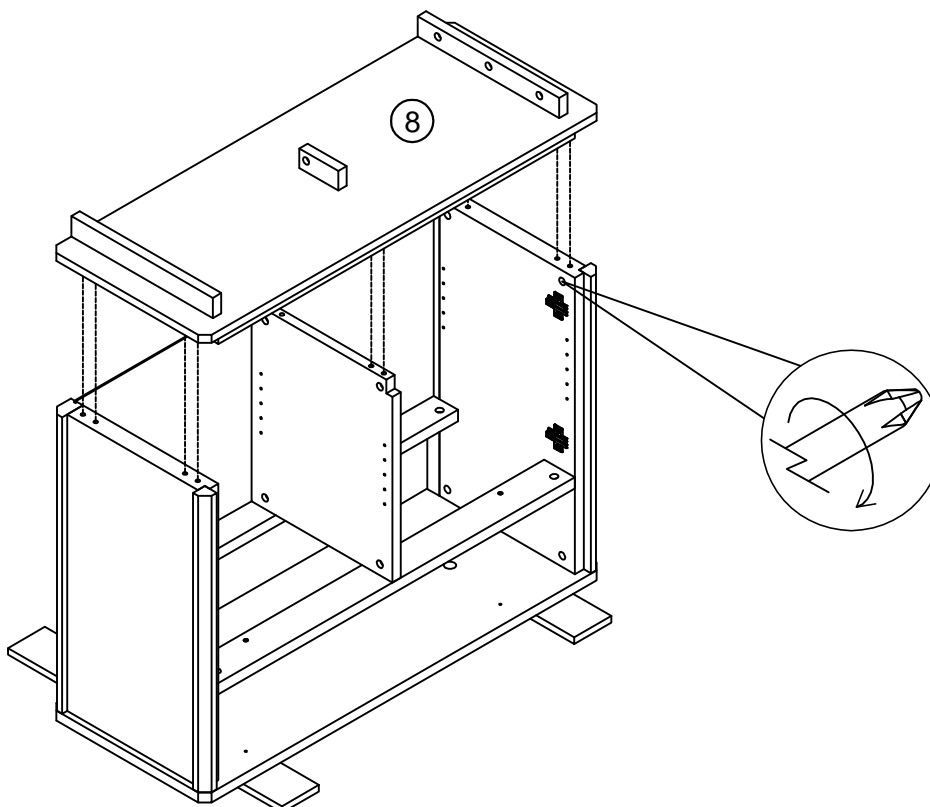

10

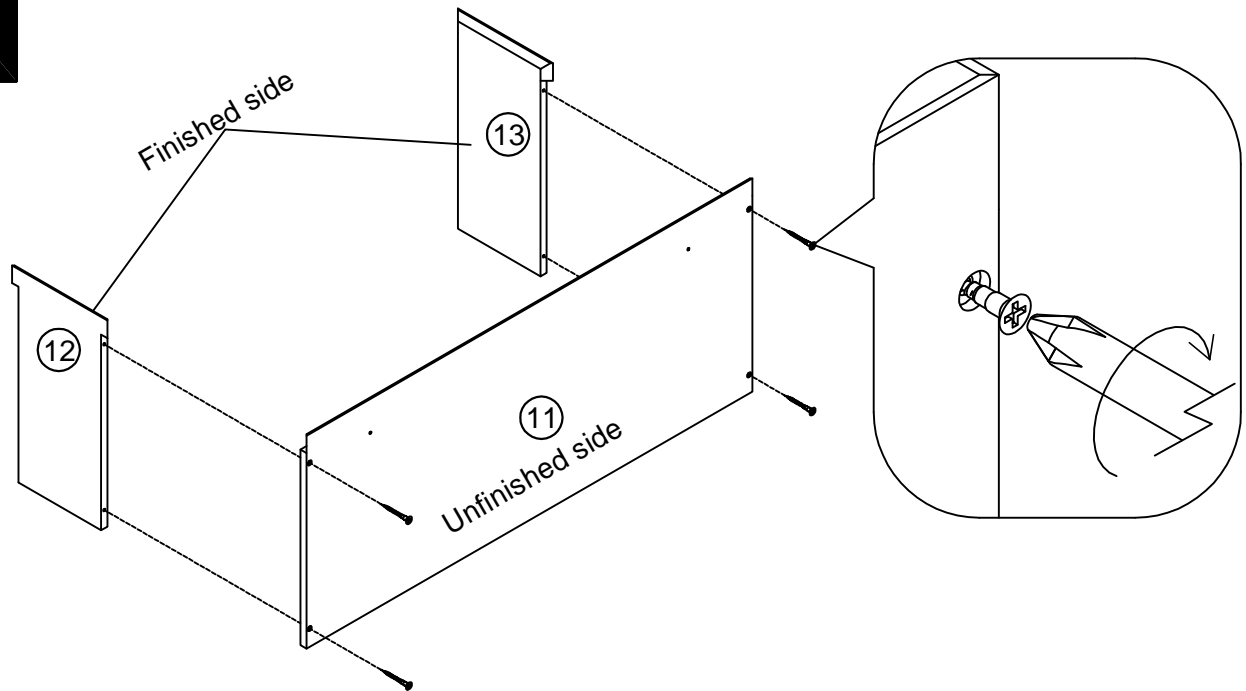 

U151

 
Ø4 x 25mm

4



not supplied

11

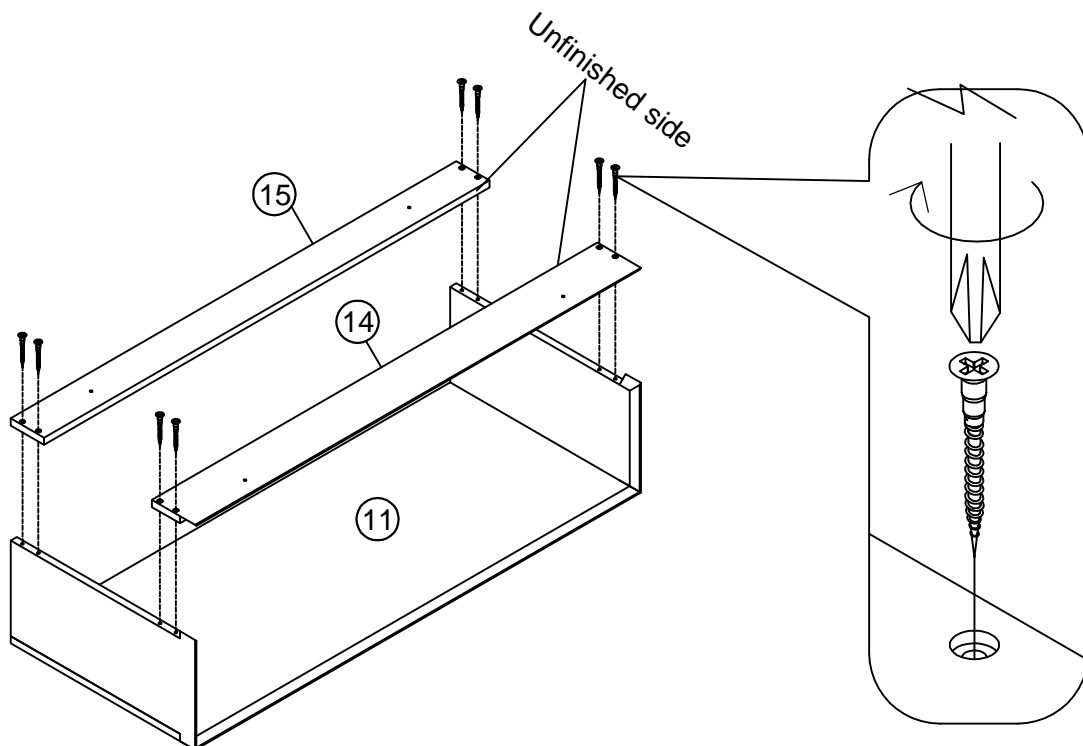

U151

 
Ø4 x 25mm

8






not supplied

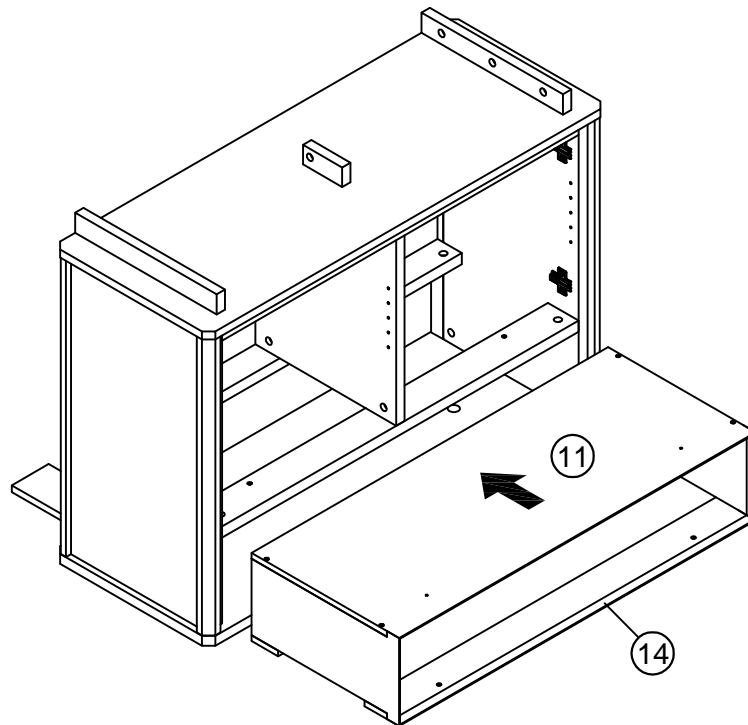12

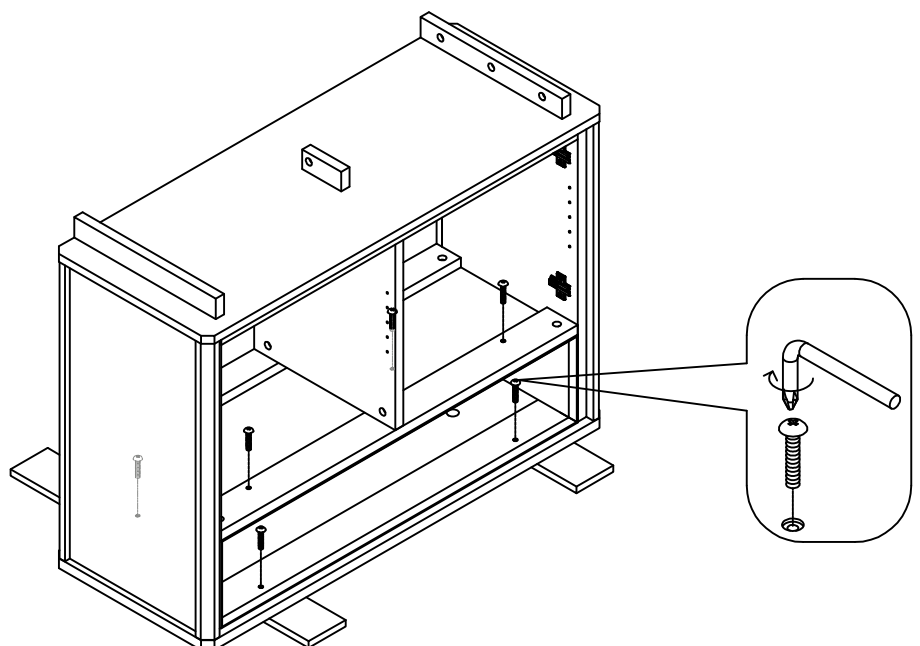 


13




T10	N/A	1	
S45	Ø4 x 20mm	6	

 14

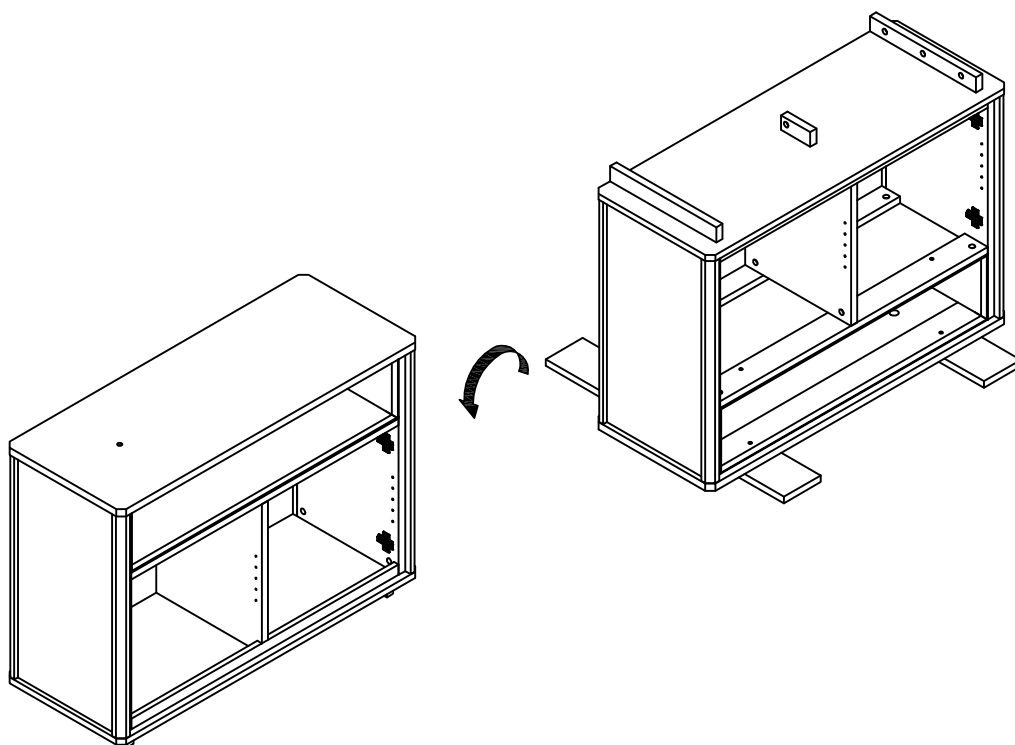


15

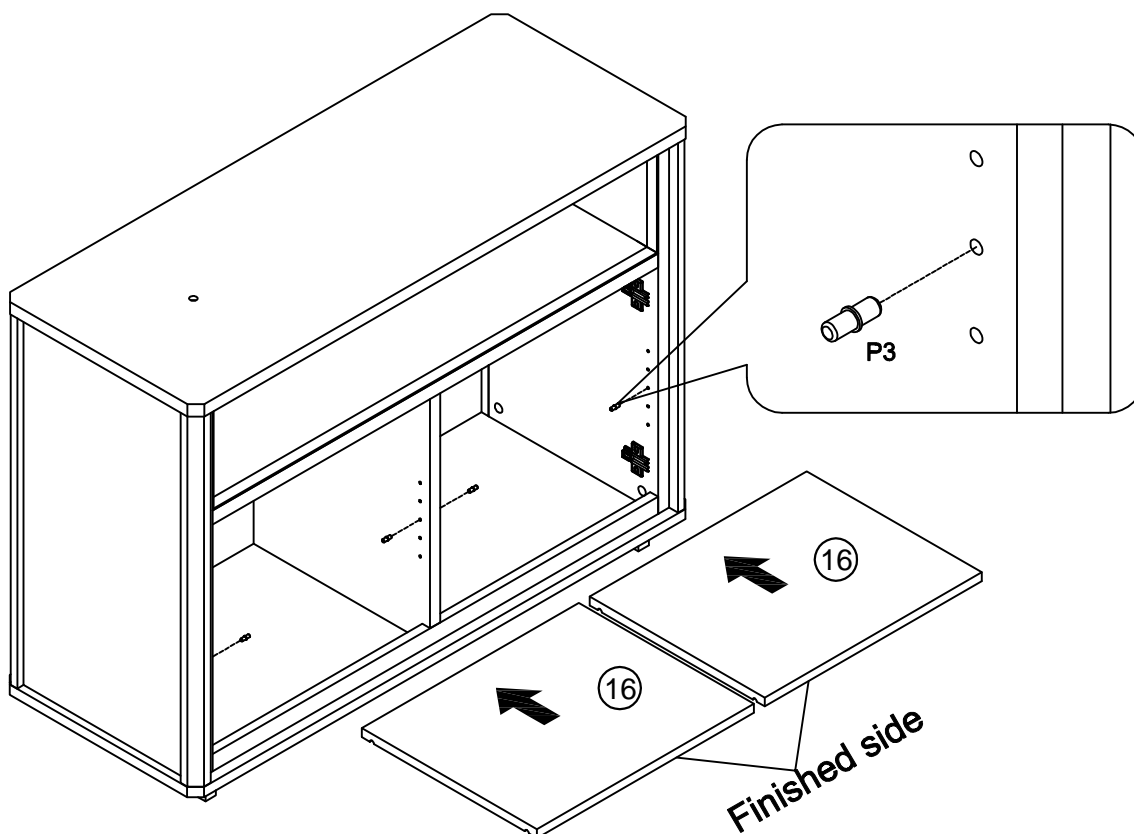 


P3


Ø5 x 16mm

  8




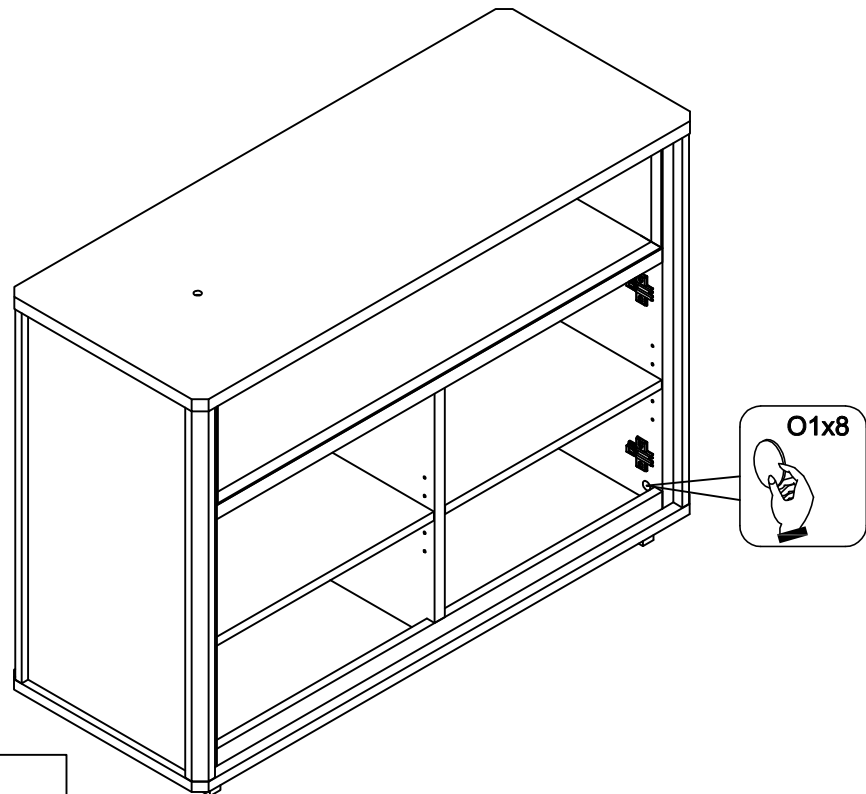


16



O1	N/A	8	
----	-----	---	---


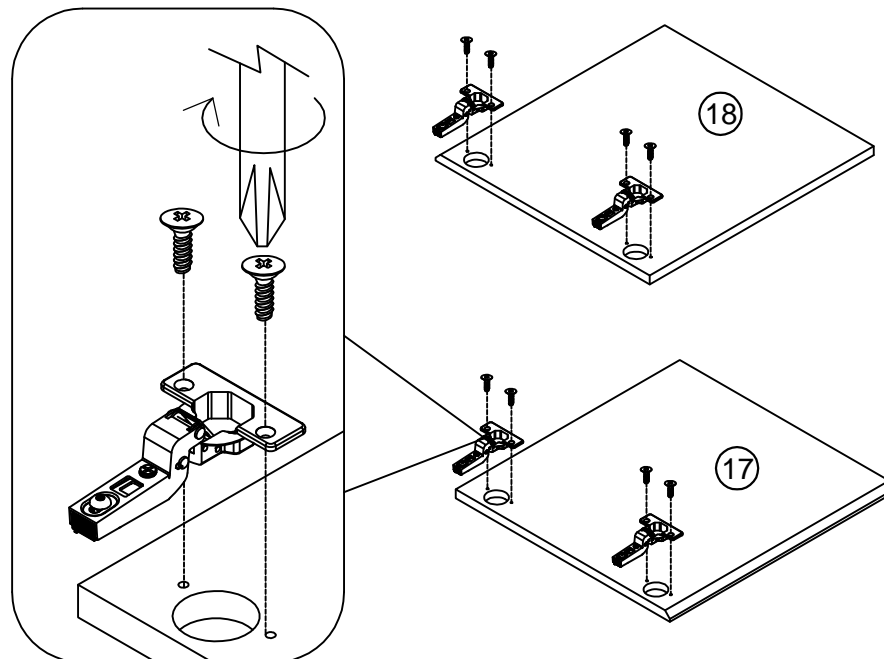 
17




C12	N/A	4	
U139	Ø4.5 x 15mm	8	 

18

 
 
Install hinge

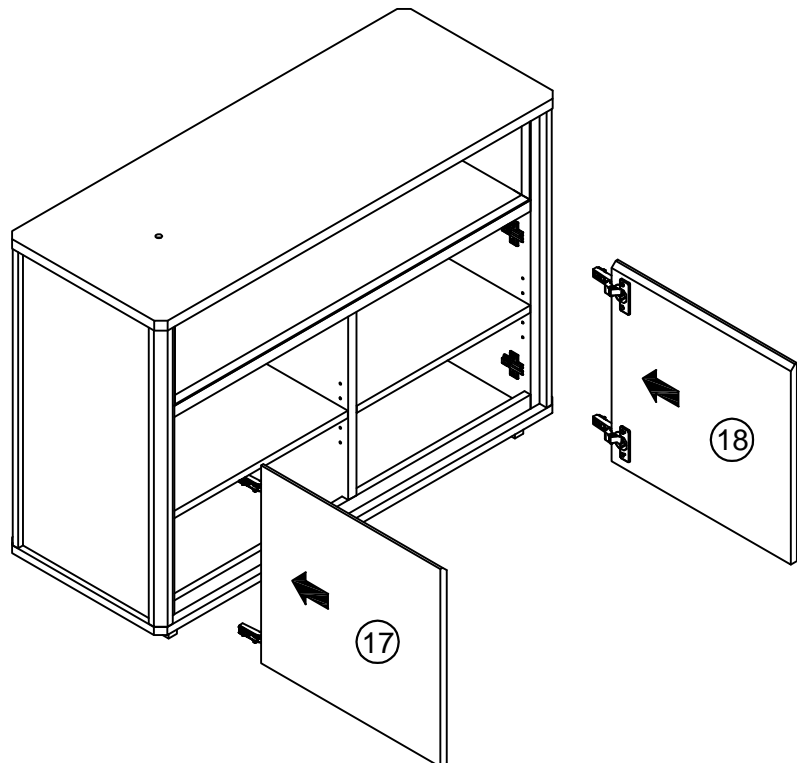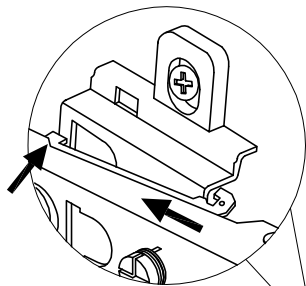


Adjust Hinge Position

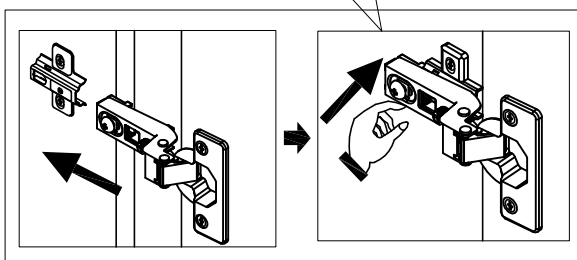 




Remove hinge

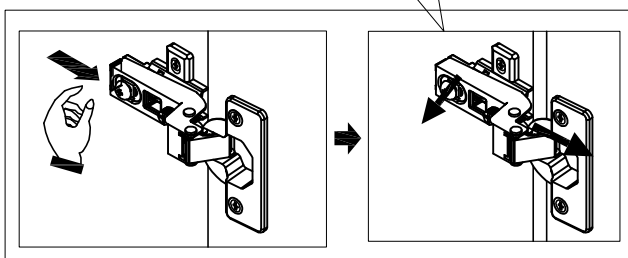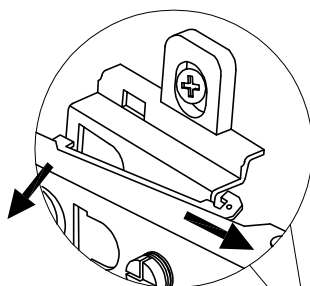  




LATERAL

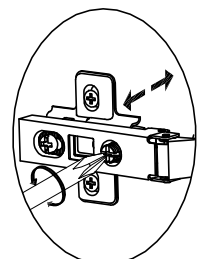 


VERTICAL

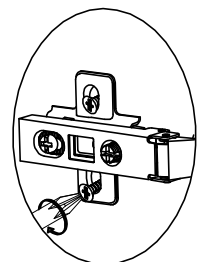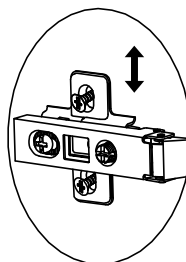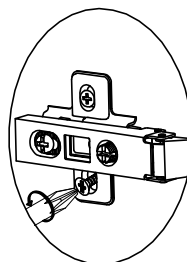   

FRONT- TO-BACK

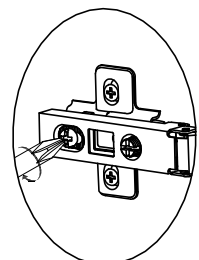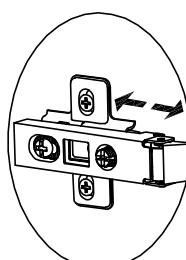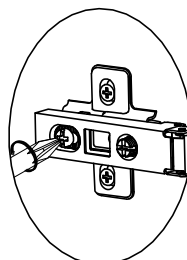   


19

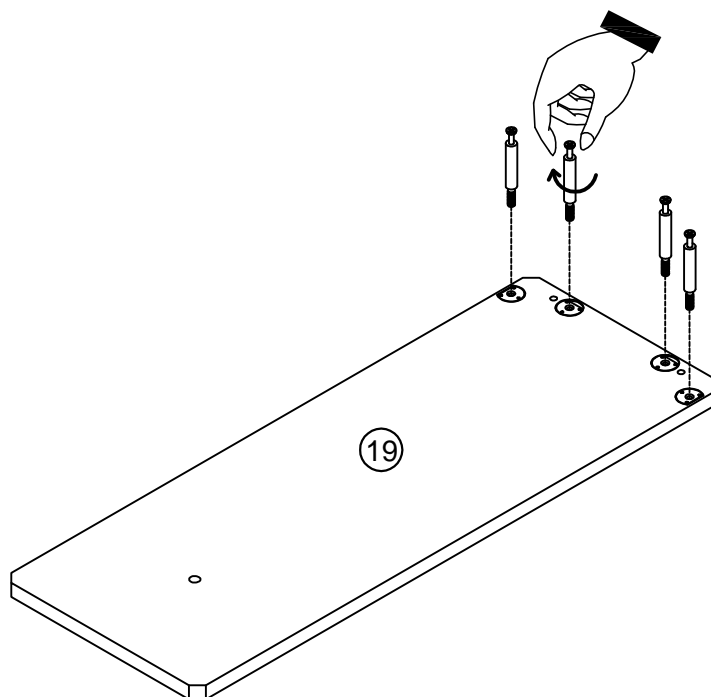 


B24	Ø8.5 x 63mm	4	
-----	-------------	---	--

 20

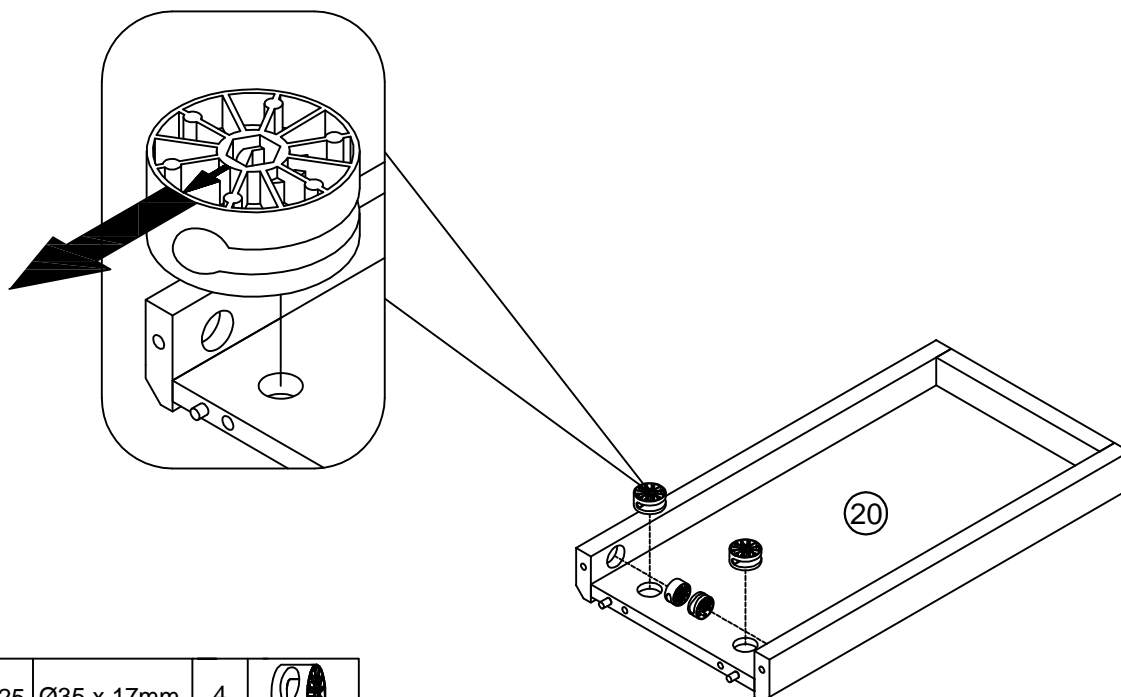

B25	Ø35 x 17mm	4	
-----	------------	---	--

 21

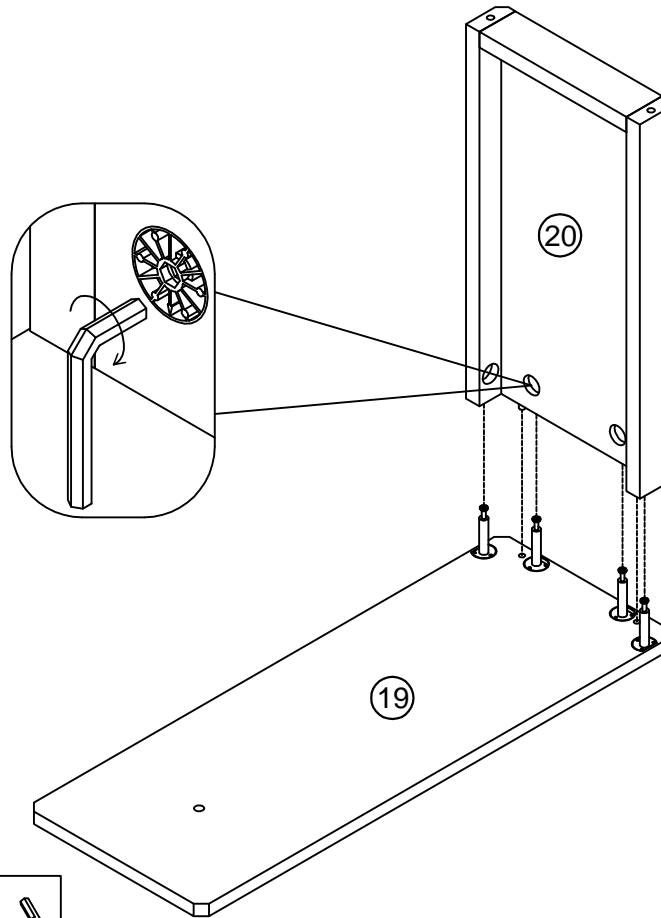


T7

N/A

1



 22

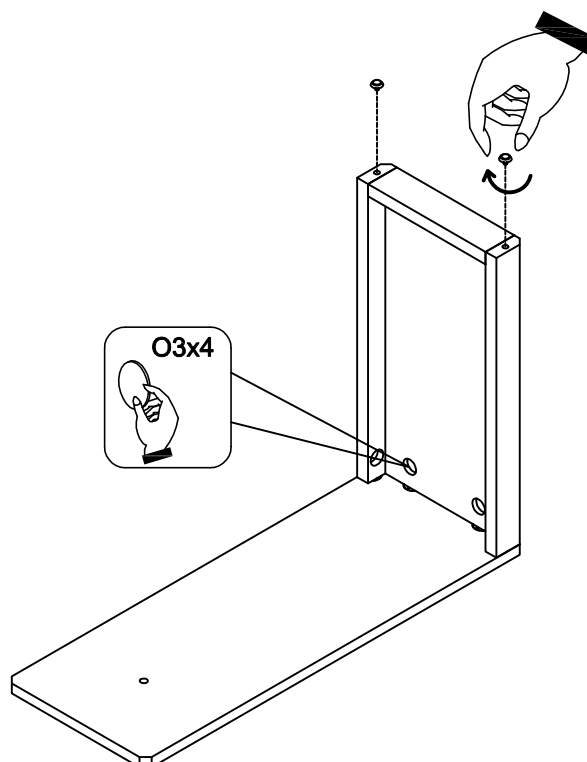

O3

45mm

4



 
F2



N/A

2

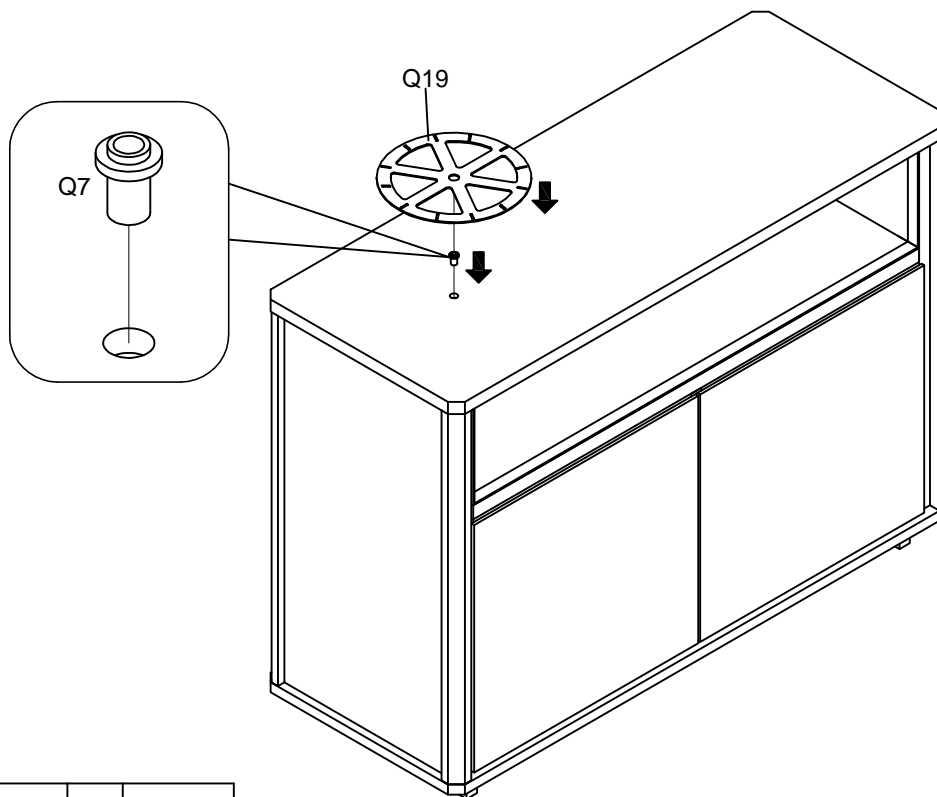


23




Q7	N/A	1	
Q19	N/A	1	

 24

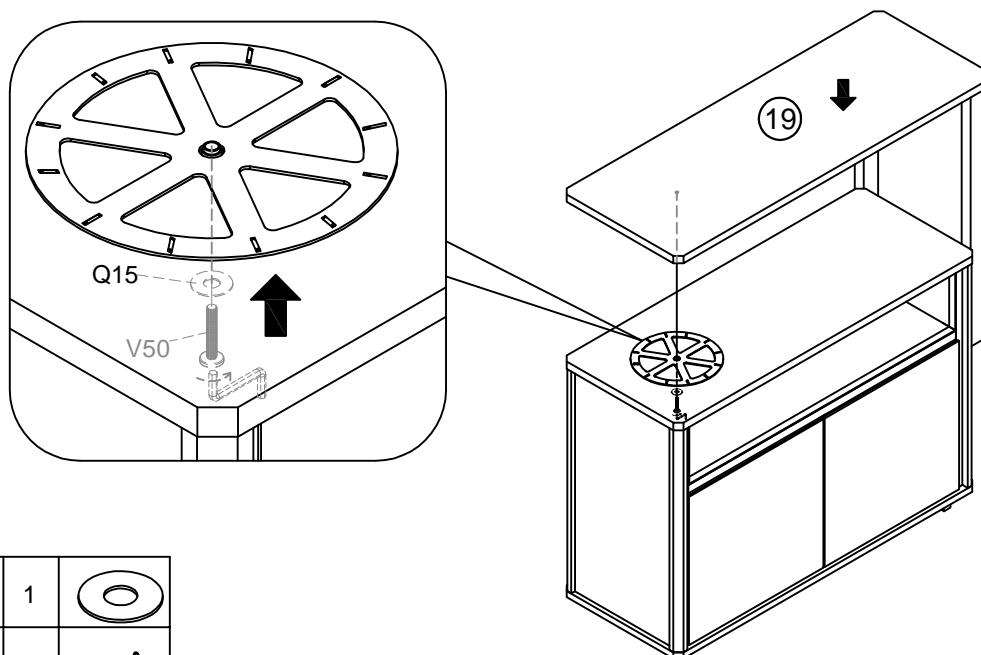


Q15	N/A	1	
V50	Ø6 x 28mm	1	
T1	N/A	1	

 25

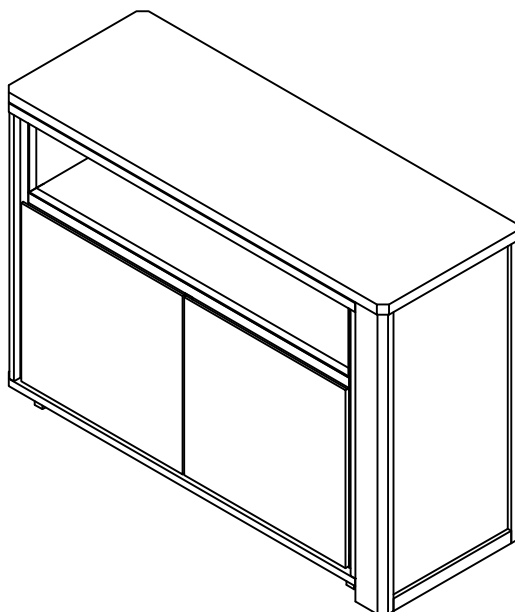


First option

 26

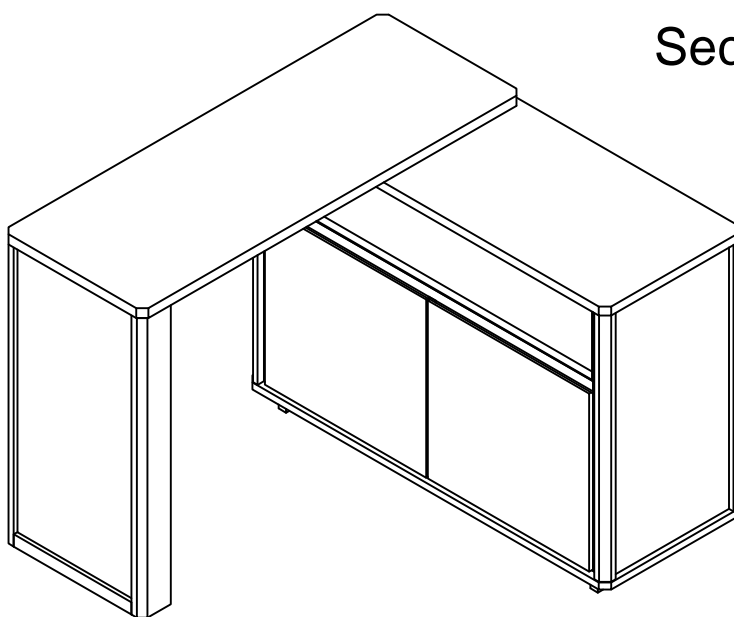


Second option

 27

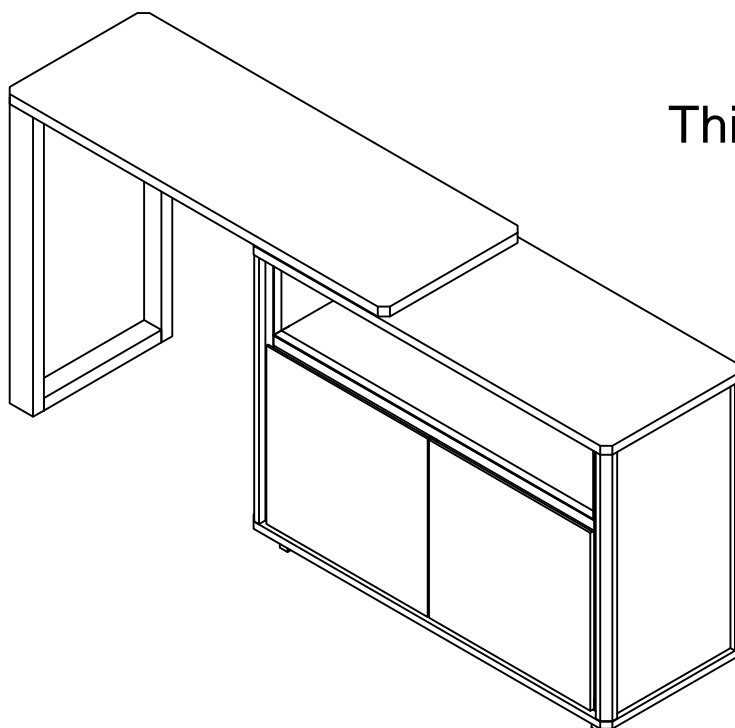

Third option

 28

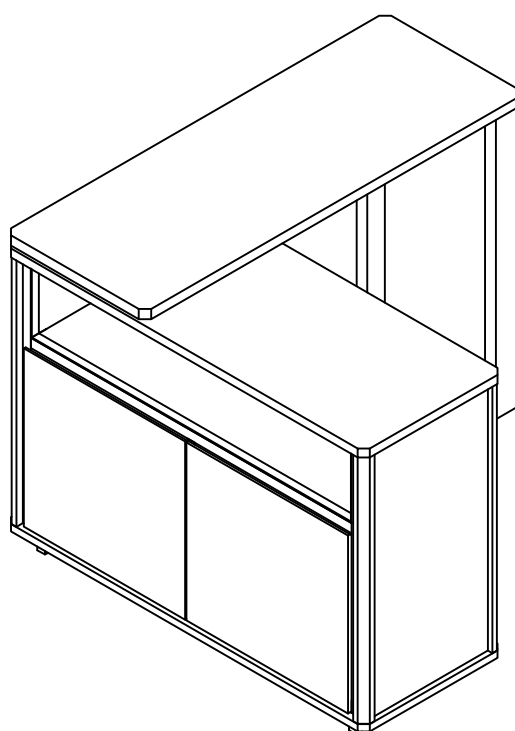

Fourth option

29

We recommend the use of the wall attachment bracket/strap provided for safety reasons.

Secure the other end of the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).

 
To hide the strap behind the unit, drill the hole lower than the top of unit.

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

Please ensure you secure your product to the wall for your and your family's safety before you use it.

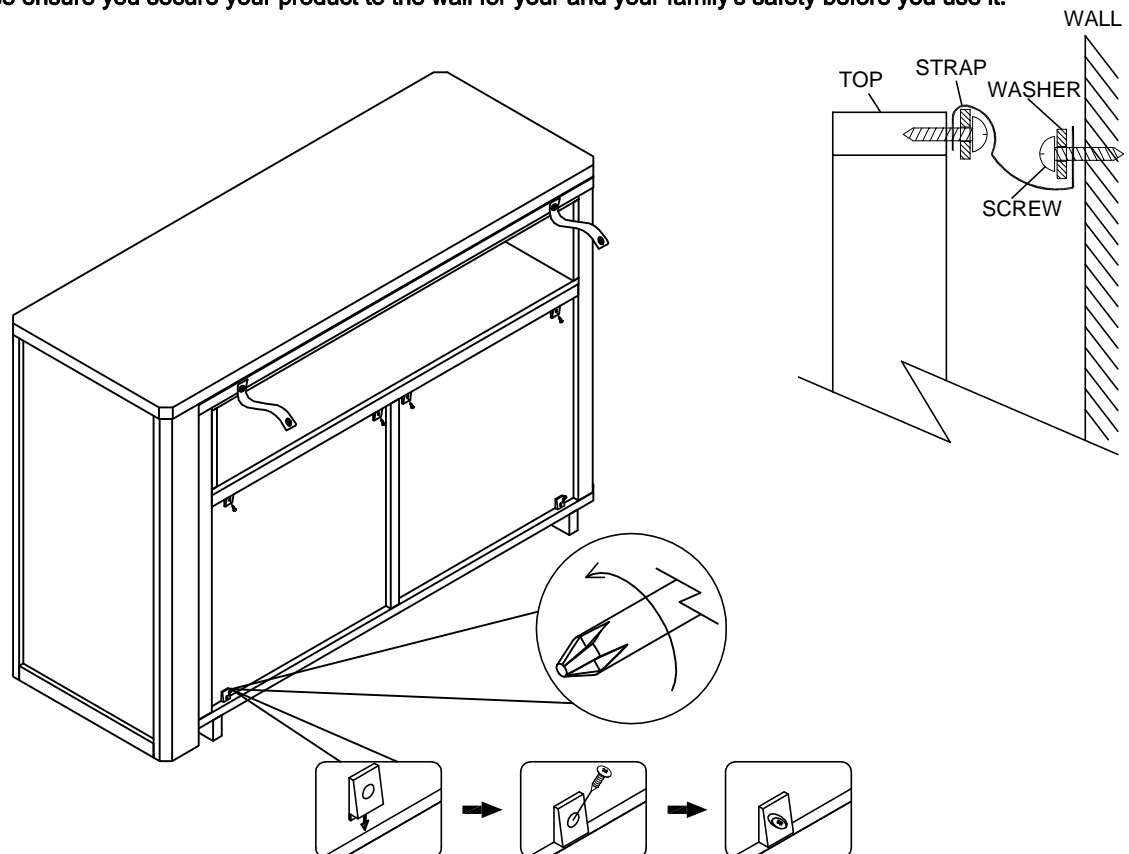


WHEN LOOSENING THE CAM


TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



 MAXIMUM
LOCK

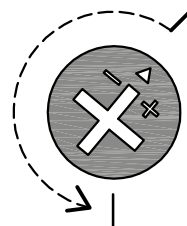

TURN
TO UNLOCK

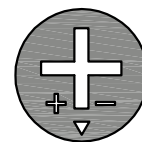 

UNLOCKED

T38

N/A

6

 


next

MODE WHITE SWIVEL DESK

301881

Actual product size
H75x W111x D39cm

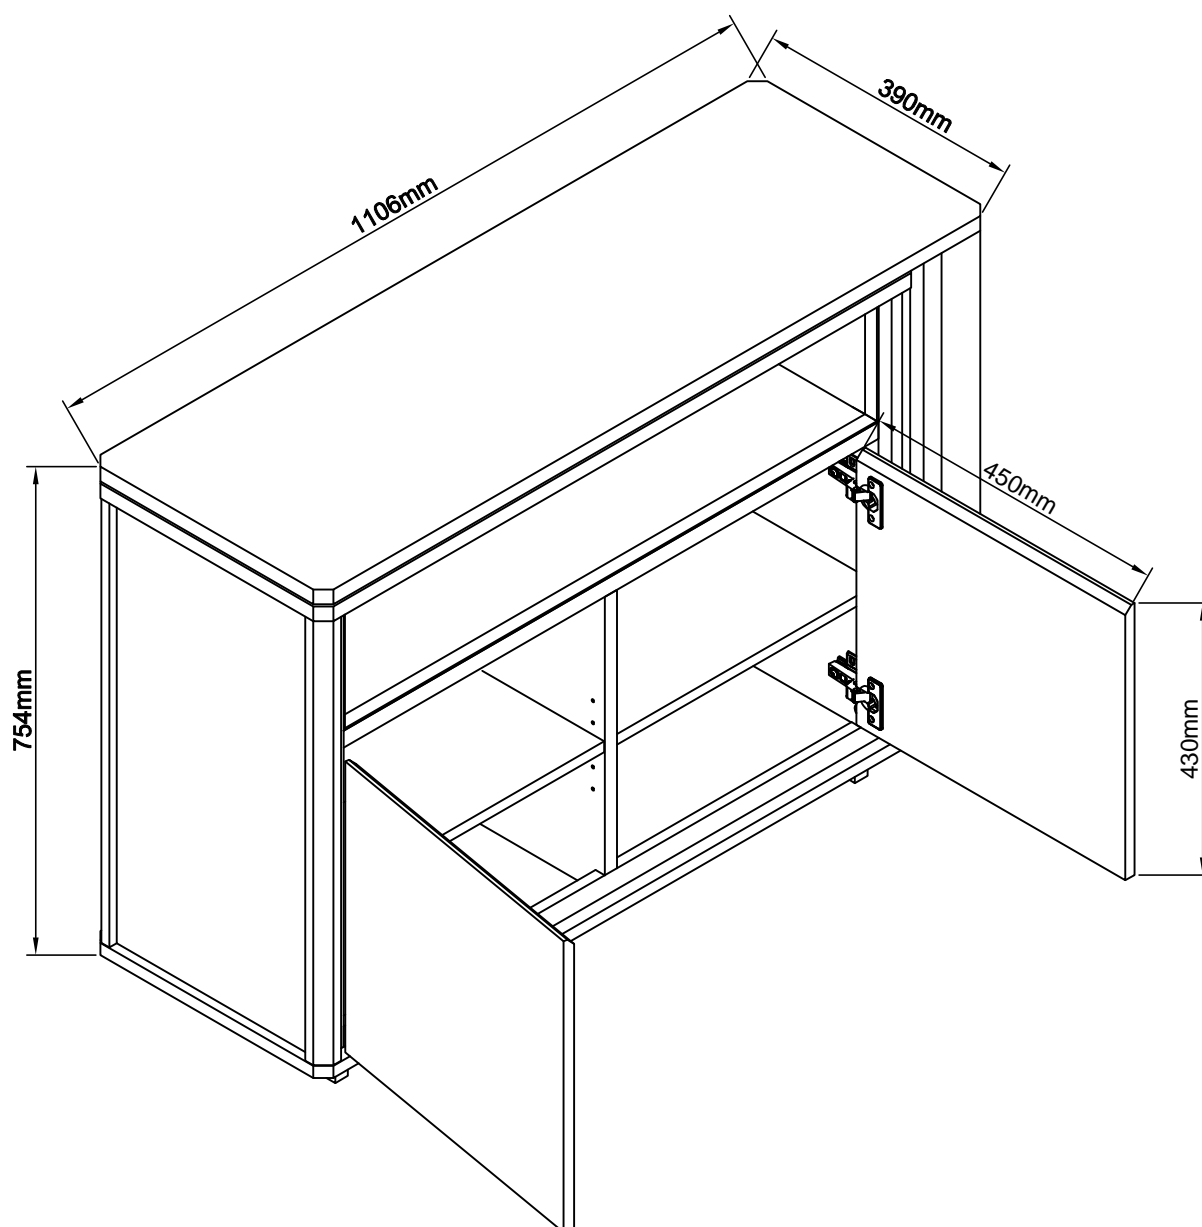

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk