

next

 
HANLEY LADDER SHELF

327080

Assembly instructions

Actual product size

H189x W77.3x D40.5cm

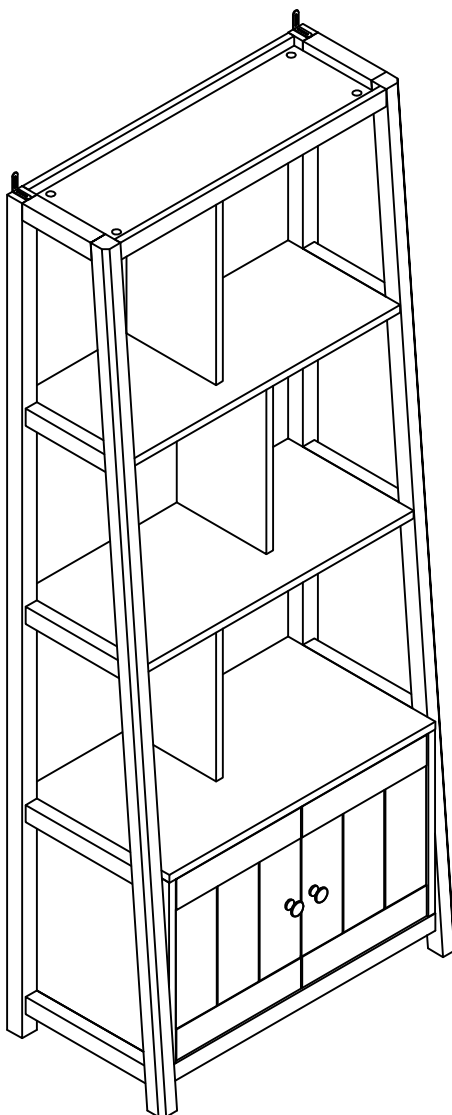

Need Help ?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

Number of people required to assemble

Two people are required to assemble this item

 


Time to assemble



30min

Tools required

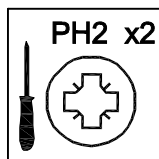

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

 
Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.









Absorption can cause wood to warp or finishes to de-laminate.







Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

GETTING TO KNOW YOUR PRODUCT

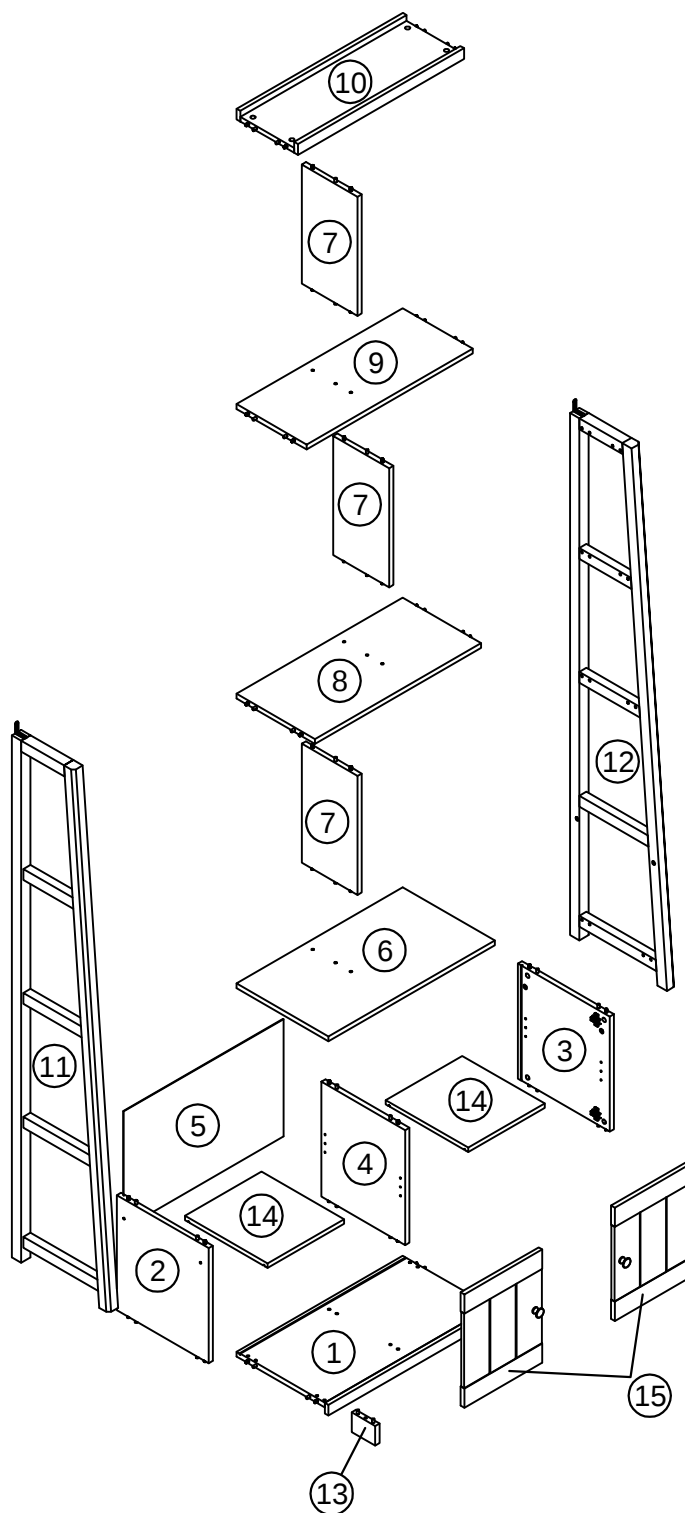

        
Components supplied. Please use this guide if you require replacement parts.

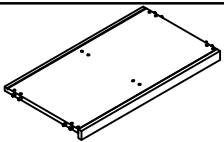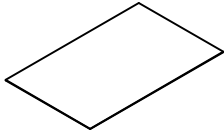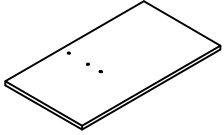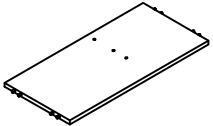Ref	Dimensions	Visual	Qty	Ctn
1	39x70cm		1	1
2	38x42cm		1	1
3	38x42cm		1	1
4	35 x 42cm		1	1
5	42x67cm		1	1
6	39 x 70cm		1	1
7	23 x 43cm		3	1
8	33 x 70cm		1	1

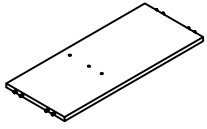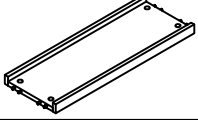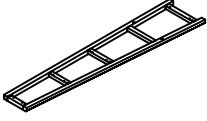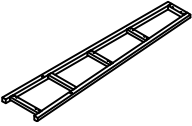      Ref	Dimensions	Visual	Qty	Ctn
9	29x70cm		1	1
10	26 x 70cm		1	1
11	41x189cm		1	2
12	41x189cm		1	2
13	7x10cm		1	1
14	32x35cm		2	1
15	33x41cm		2	1

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	1	2
B8	Ø8 x 38mm	N/A	2
D6	Ø8 x 30mm	N/A	2
S41	Ø4 x 16mm	2	1
U139	Ø4.5 x 15mm	8	1
P3	Ø5 x 16mm	8	1
V47	Ø6 x 25mm	4	1
B12	Ø7.5 x 33mm	1	N/A

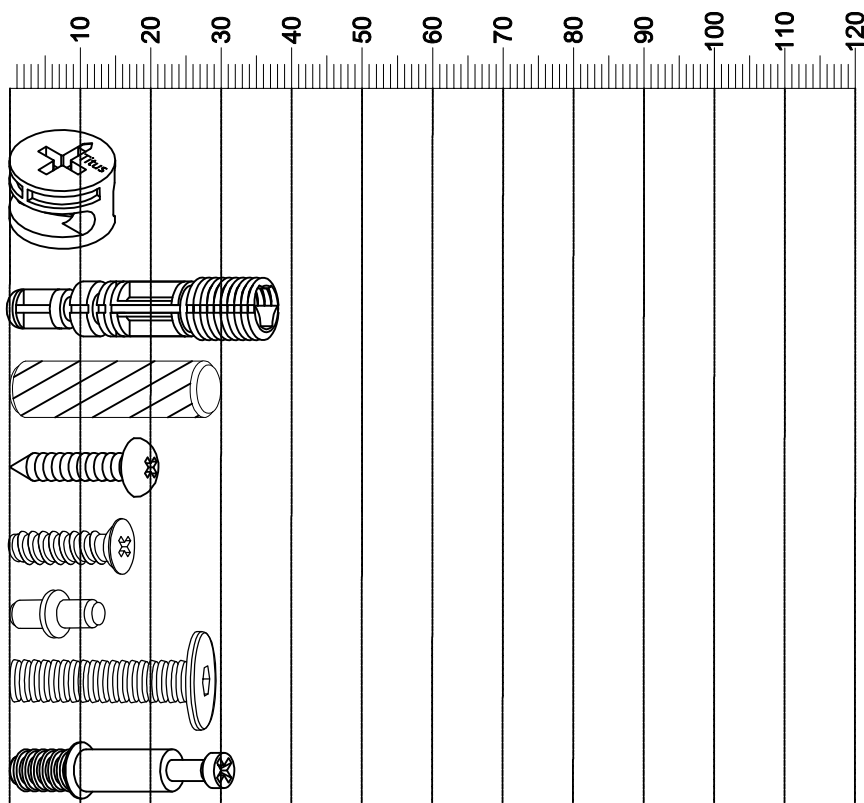 

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
N1	N/A	2	N/A	
O1	N/A	12	2	
O2	N/A	16	2	
T1	N/A	2	N/A	

Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Qty	Spare Qty	Visual
E41	N/A	2	N/A	
C11	N/A	4	N/A	
T38	N/A	4	1	

1


DON'T STOP UNTIL THE 2 O'CLOCK LOCK
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE
ARROW POINTS IN THE POSITIONS SHOWN IN THE
DIAGRAMS BELOW



 
START

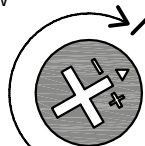


CORRECT
LOCK

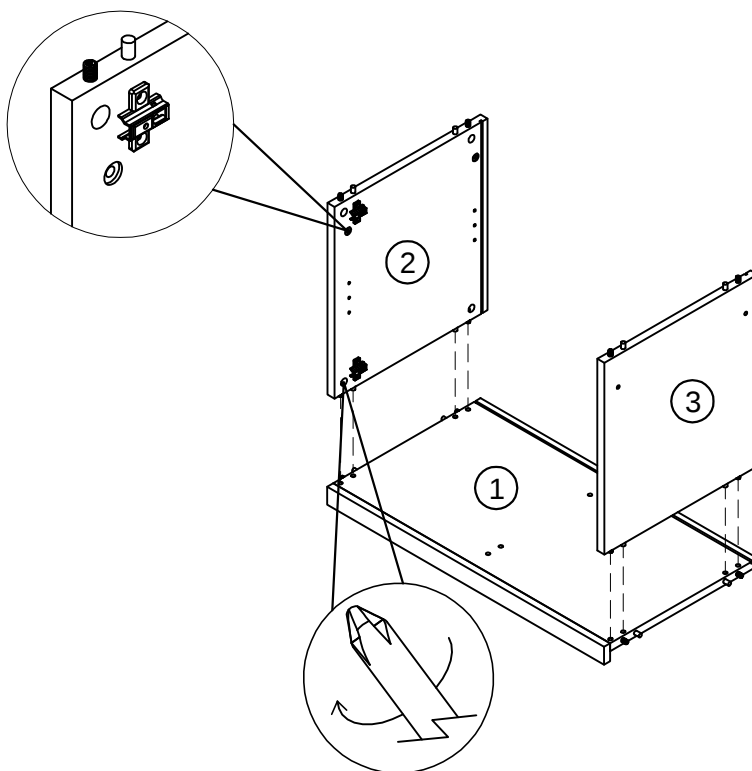 

 
PUSH THE TWO PANELS TOGETHER ALLOWING THE
DOWEL TO ALIGN WITH THE HOLE

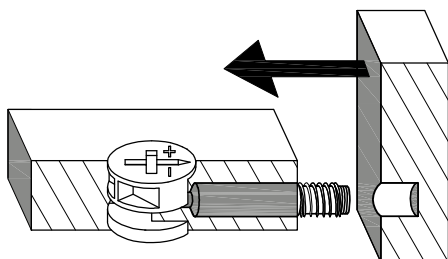


TURN THE CAM IN A CLOCKWISE DIRECTION

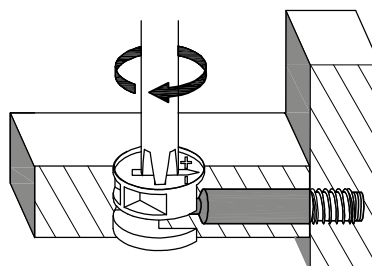 


2

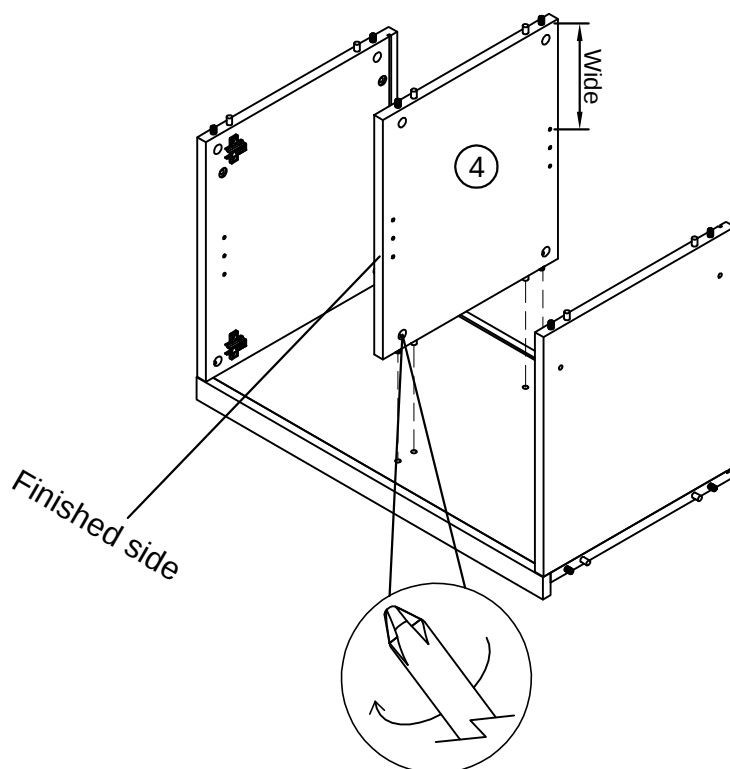 


3

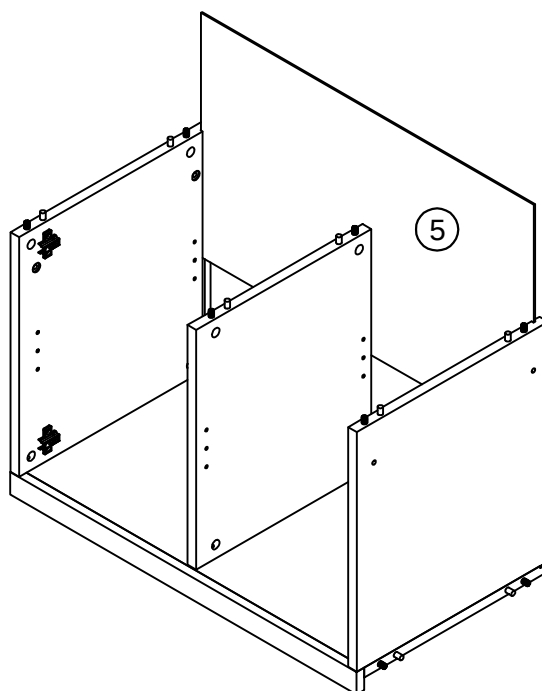 


4

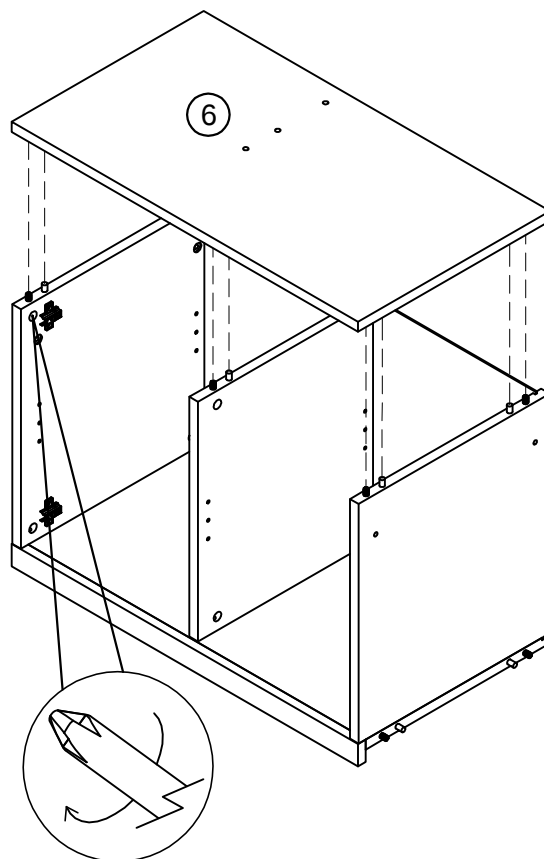 


5

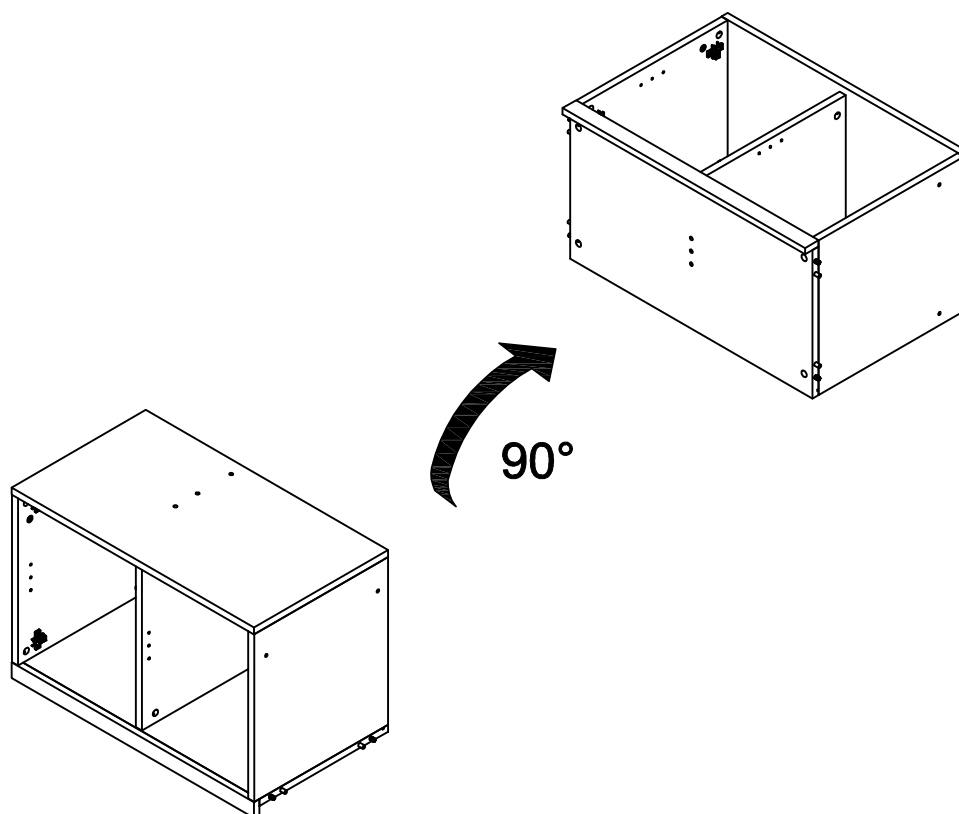 


6

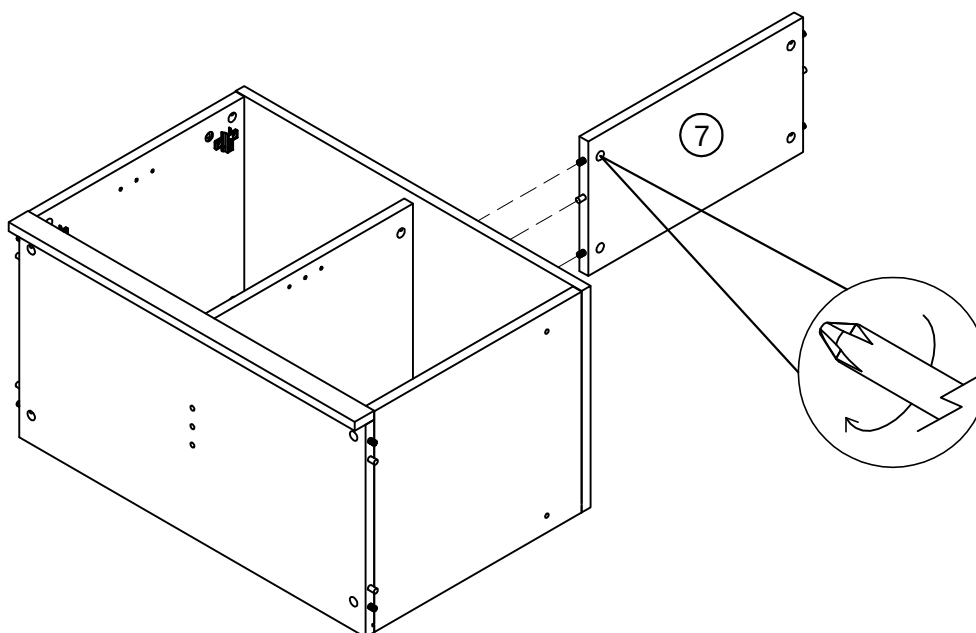 


7

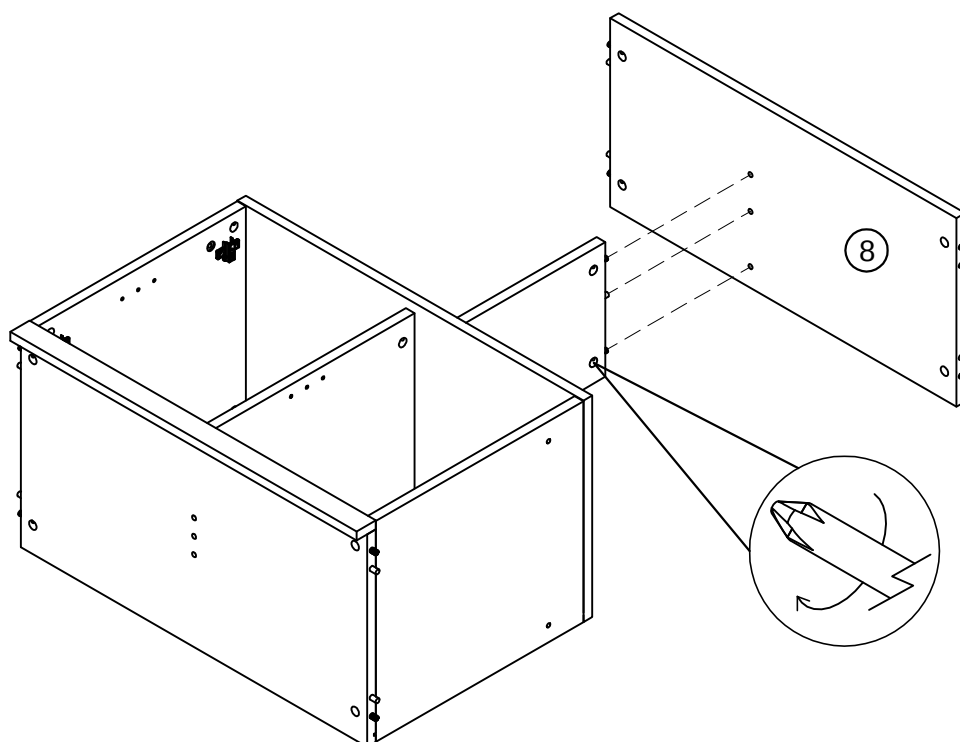 


8

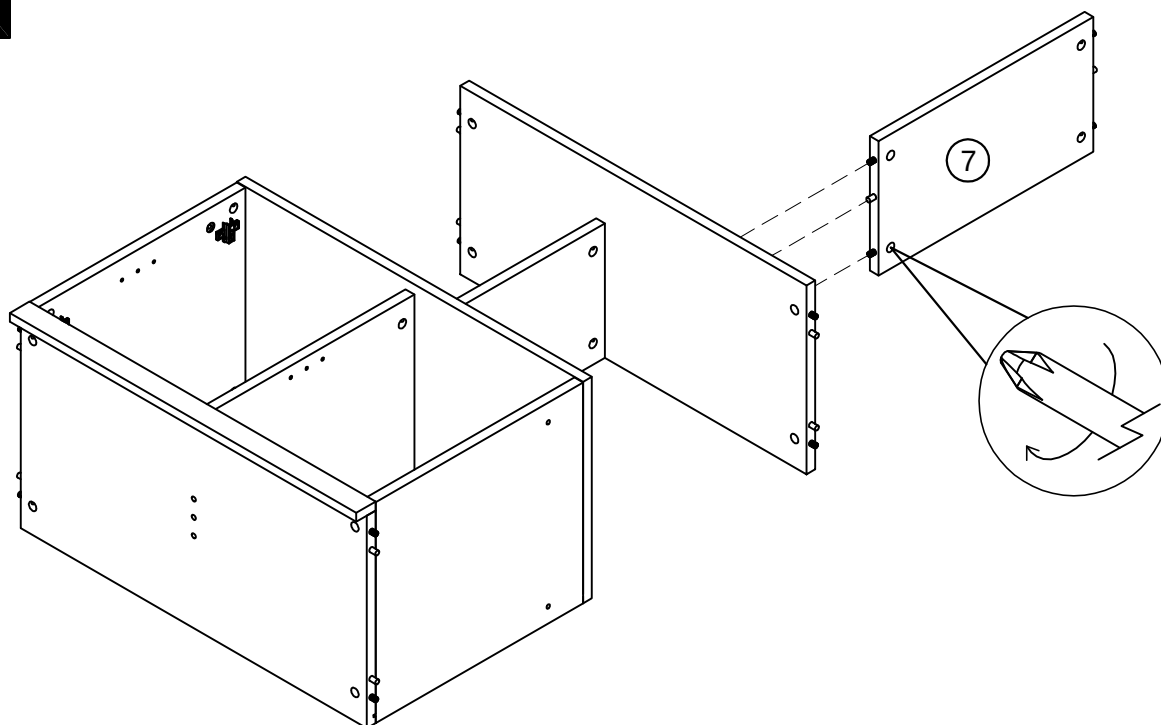 


9

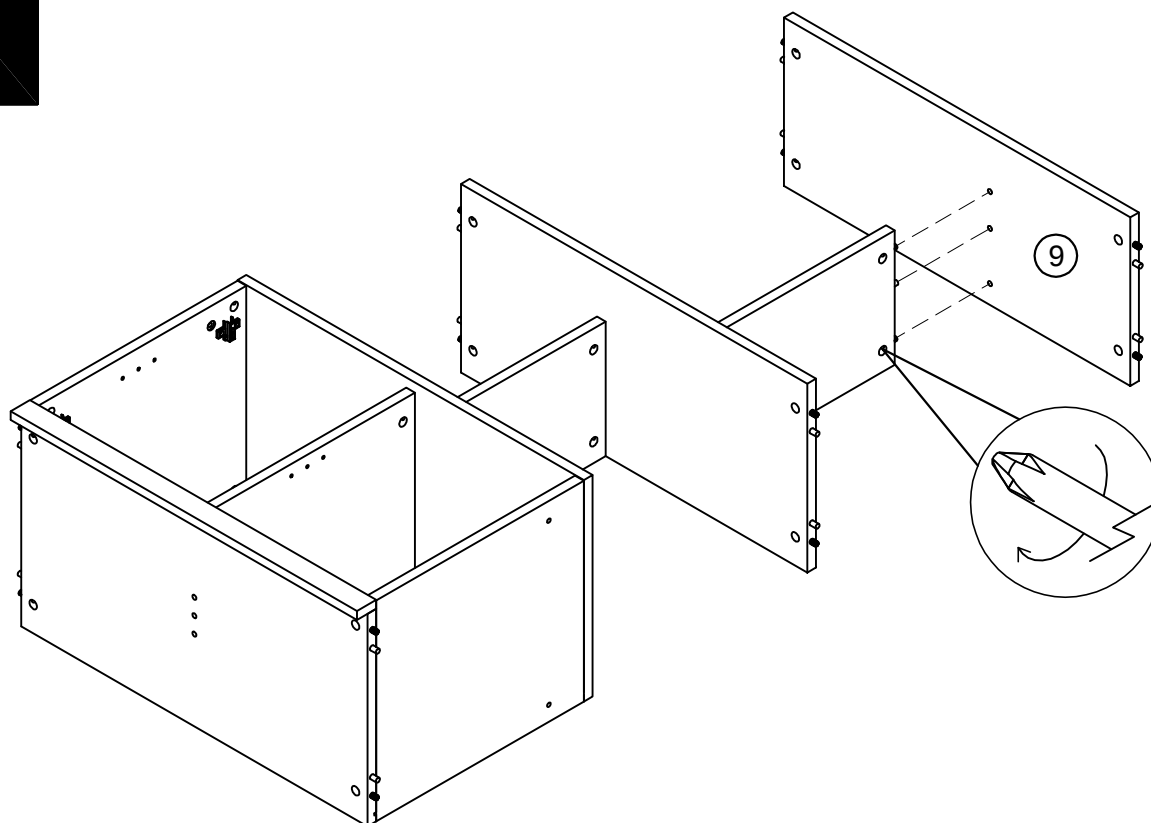 


10

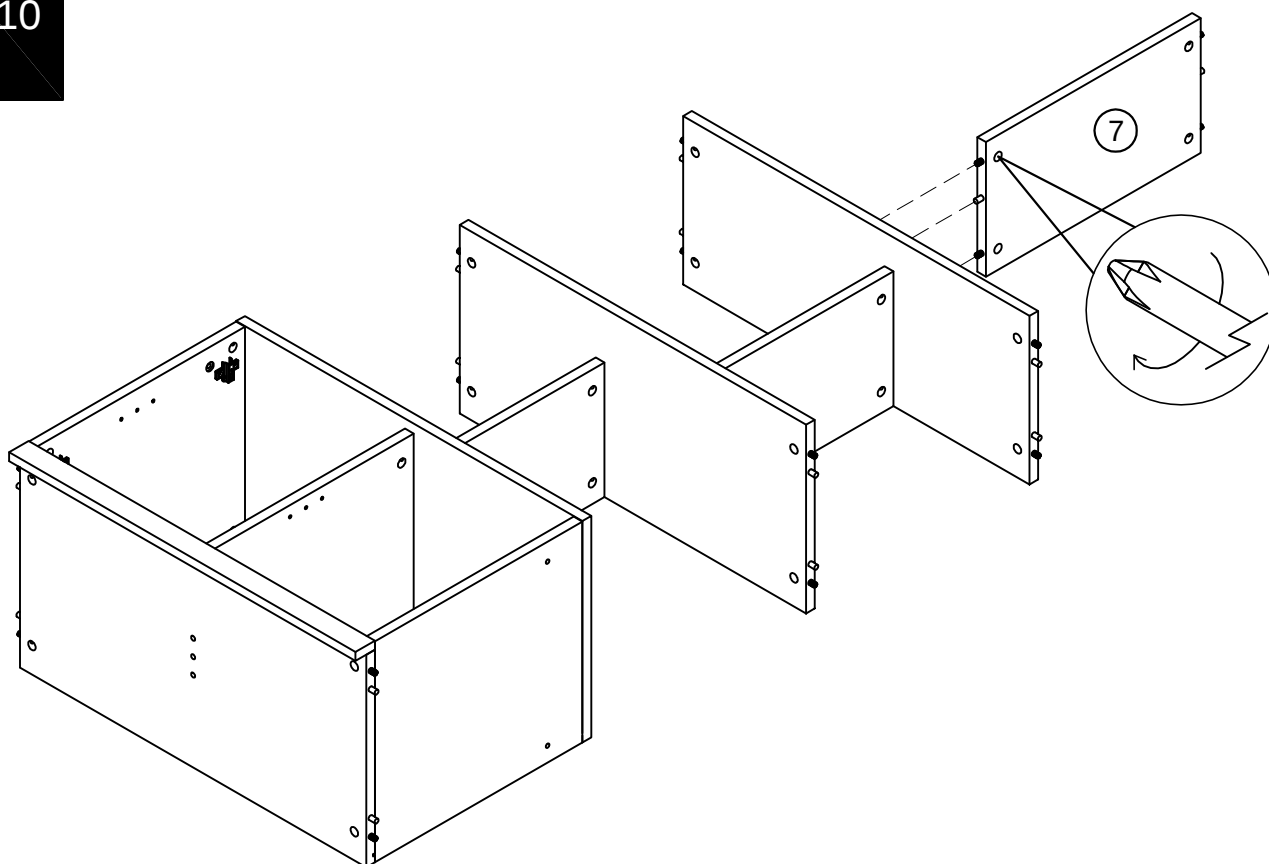 


11

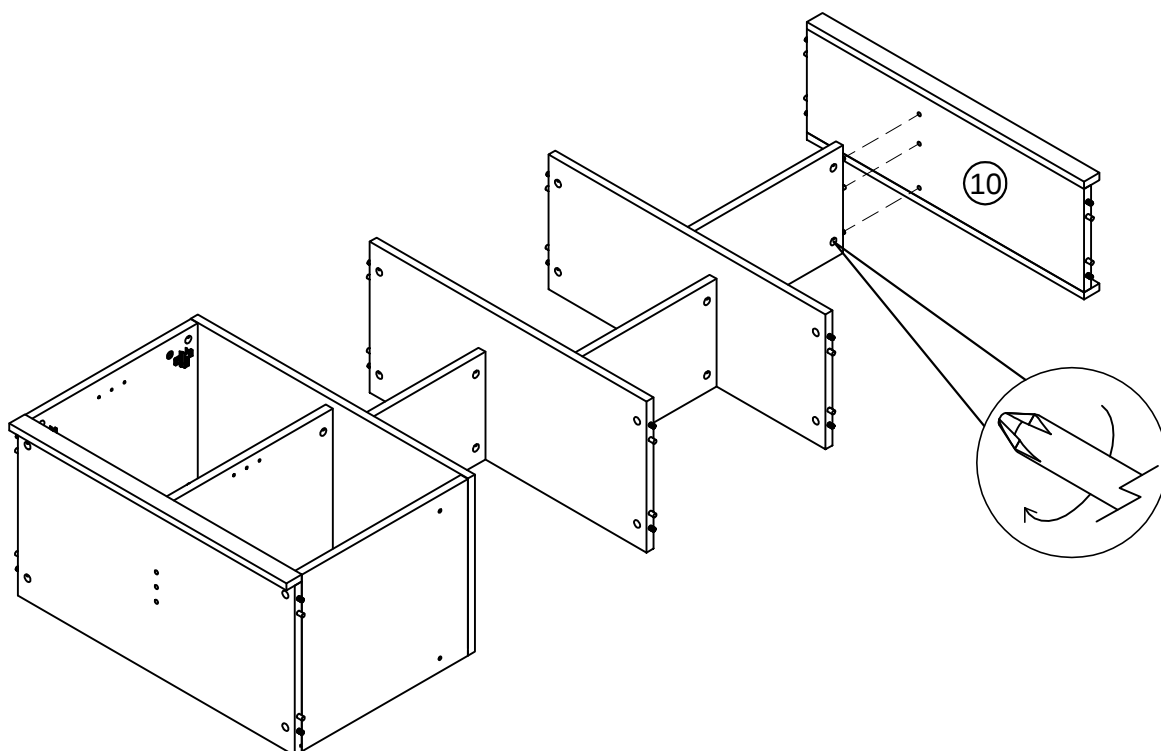 


12


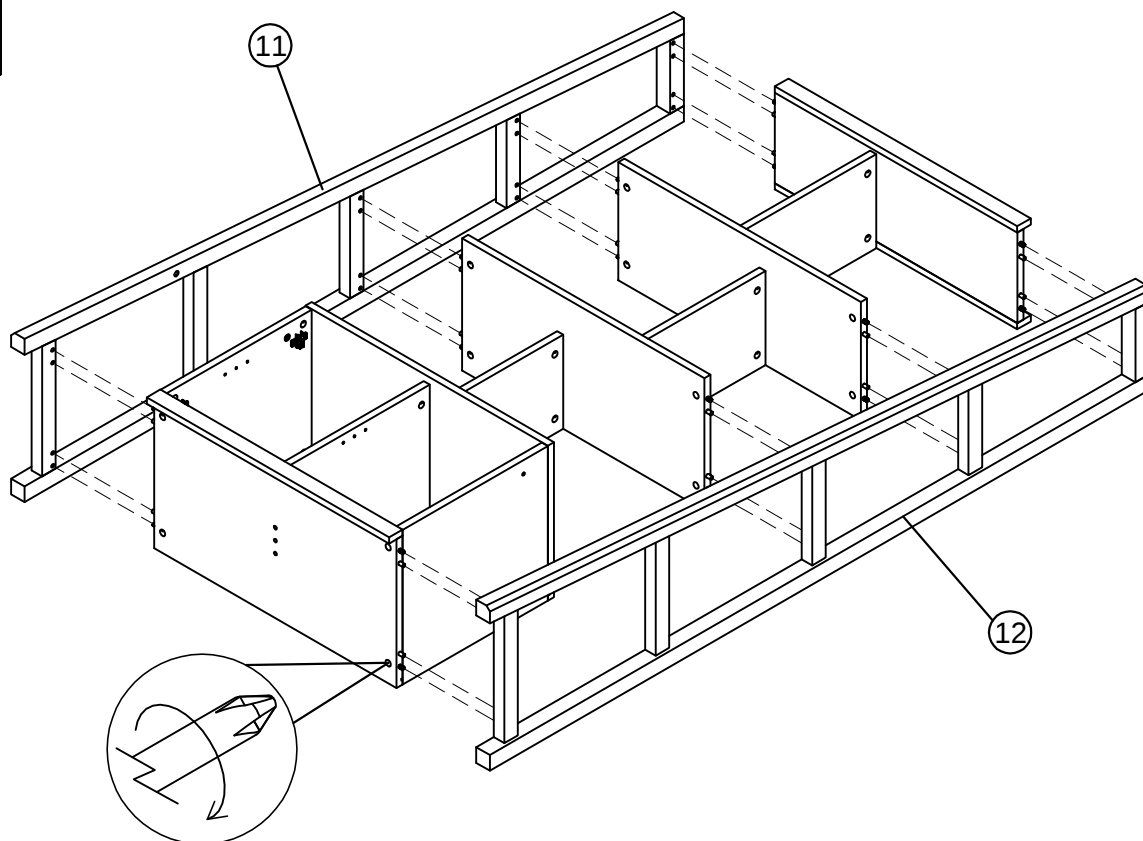 



13

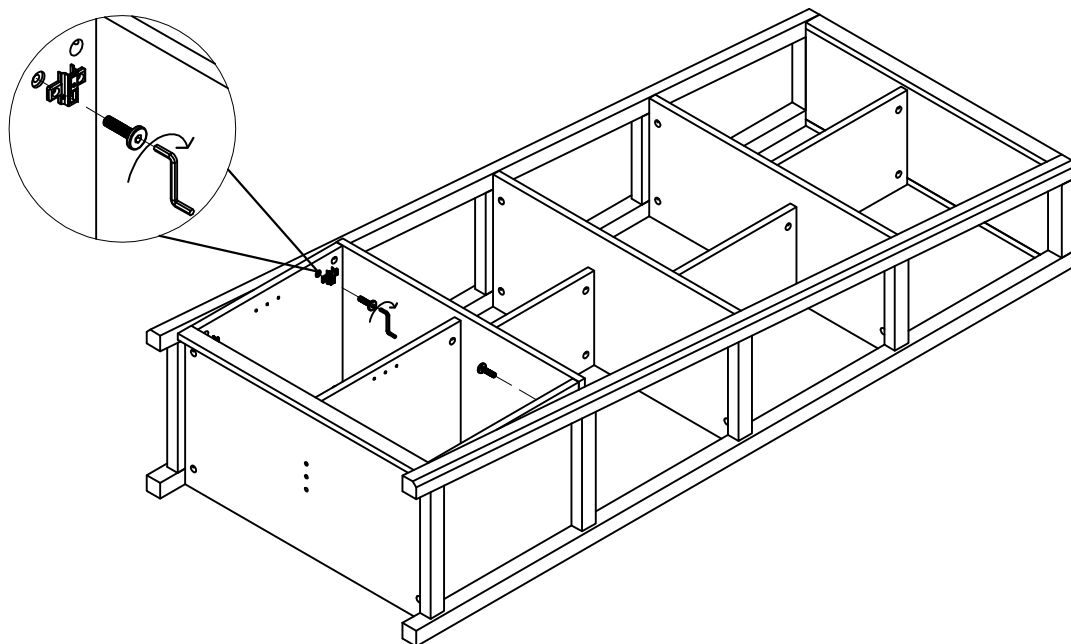 

 
V47	Ø6 x 25mm	4	
T1	N/A	2	

   14

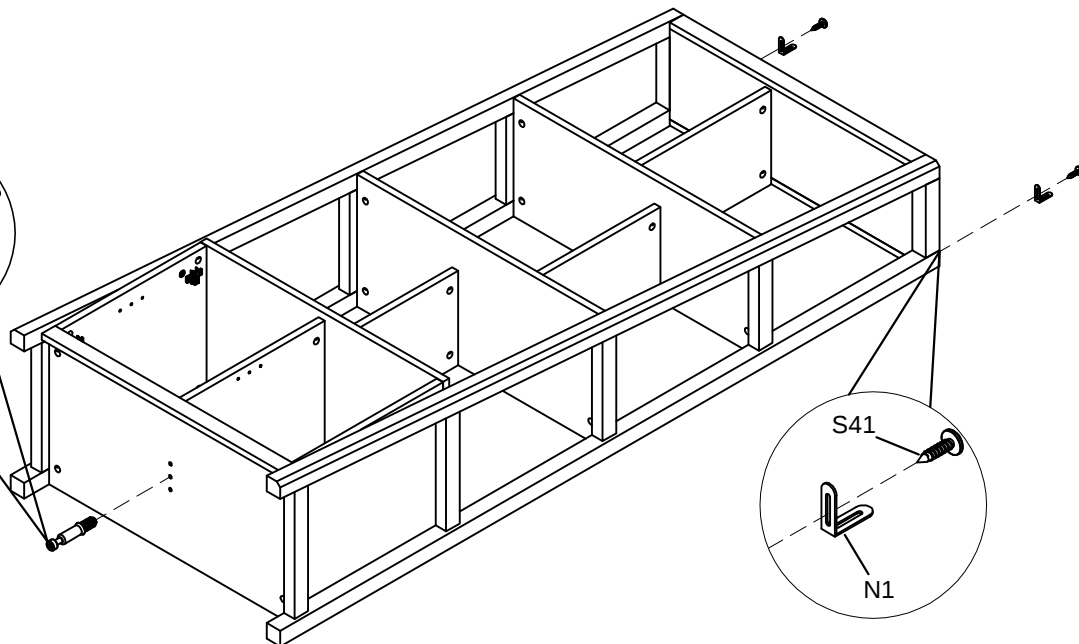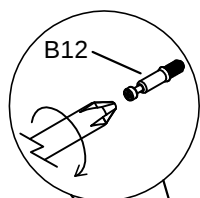


B12	Ø7.5 x 33mm	1	  not supplied
N1	N/A	2	
S41	Ø4 x 16mm	2	  not supplied

 15

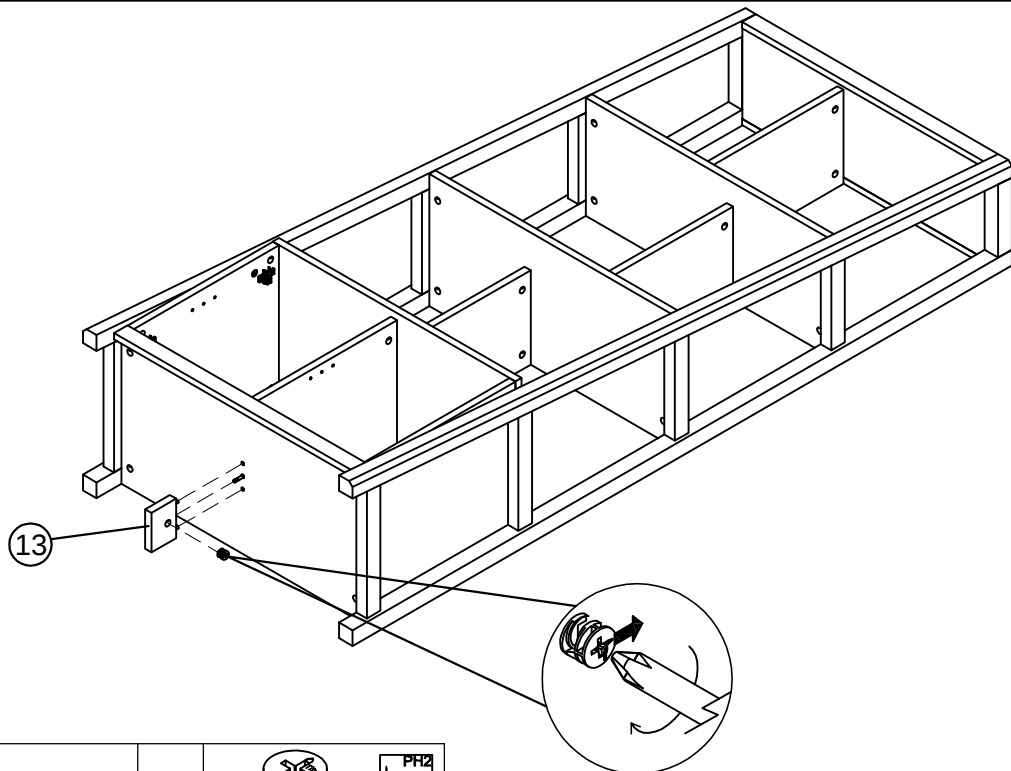


B3	Ø15 x 12mm	1	  not supplied
----	------------	---	--

 16

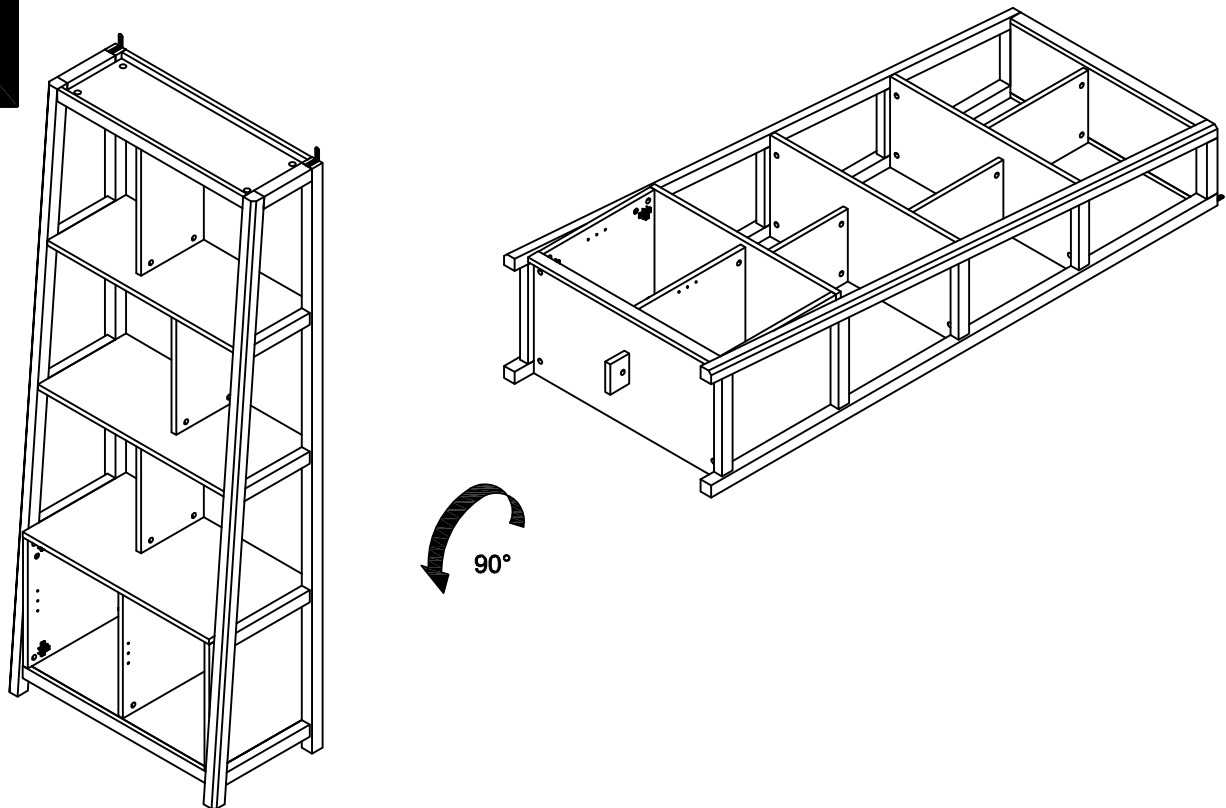


17

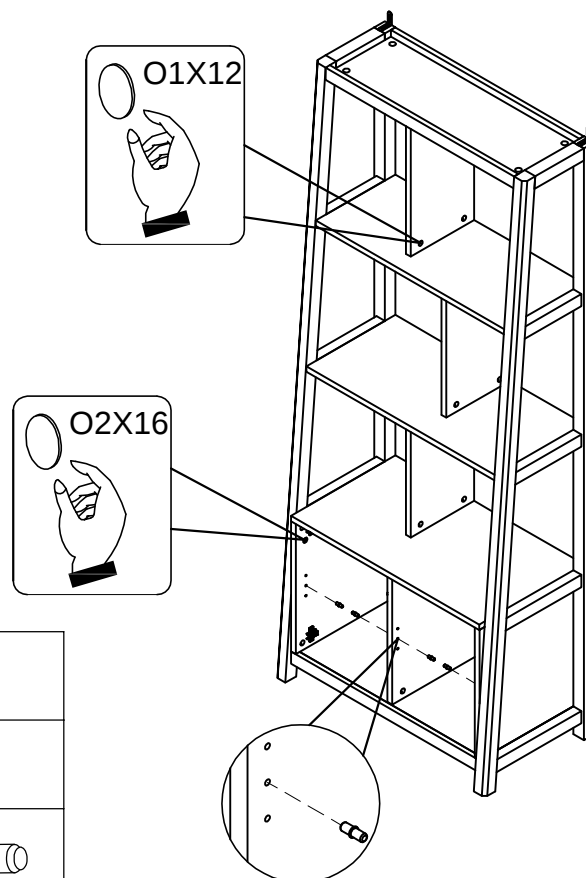 


O1	N/A	12	
O2	N/A	16	
P3	Ø5 x 16mm	8	

 18

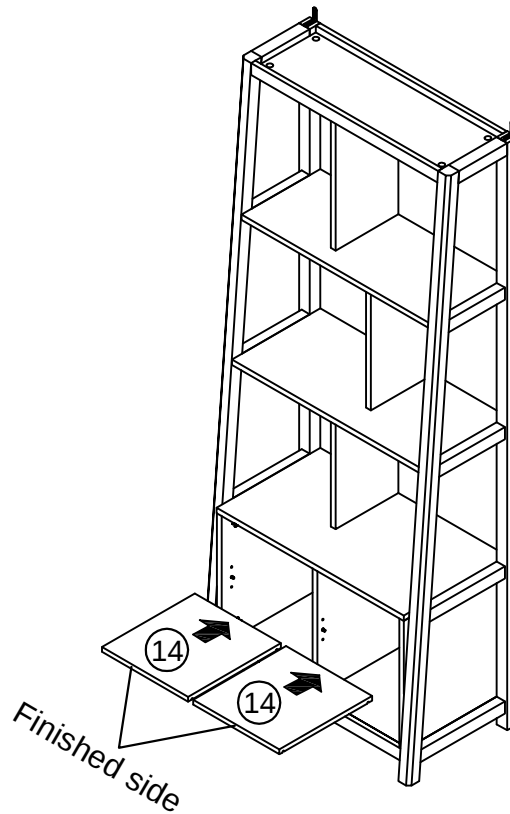



19

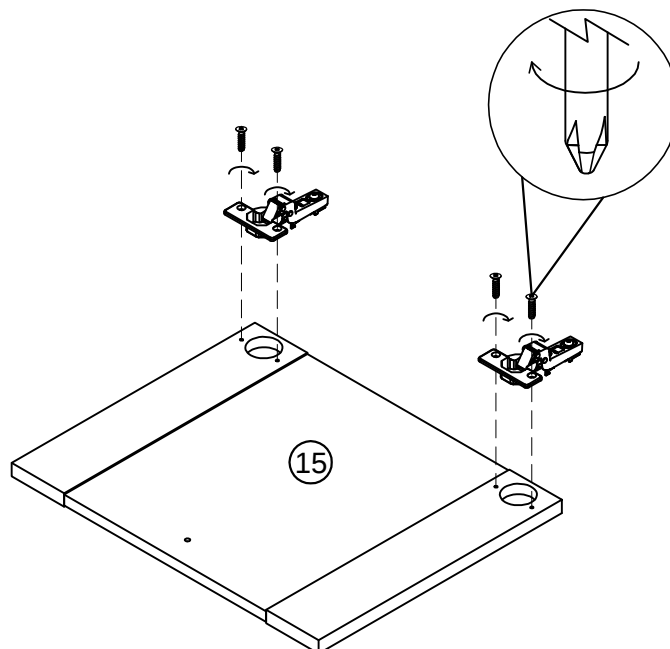 


x2

C11	N/A	4	
U139	Ø4.5 x 15mm	8	  not supplied


 
 
Install hinge

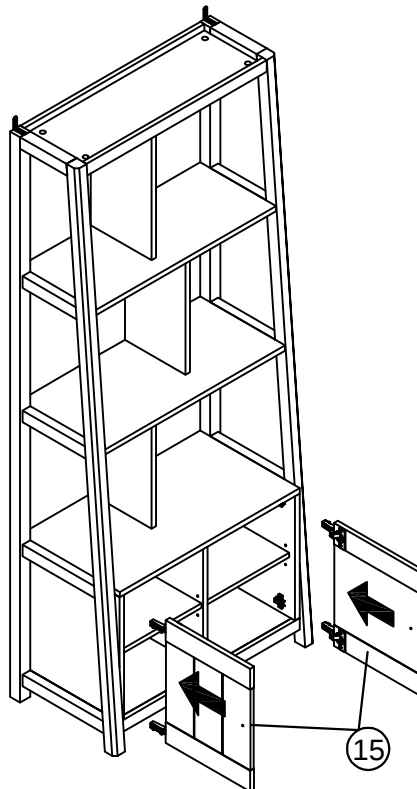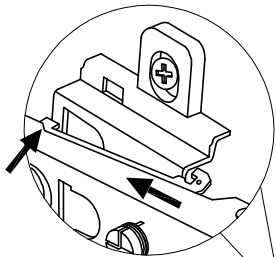


Adjust Hinge Position

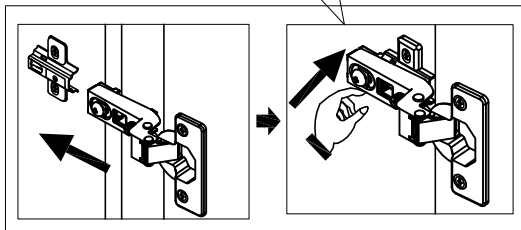 

Remove hinge

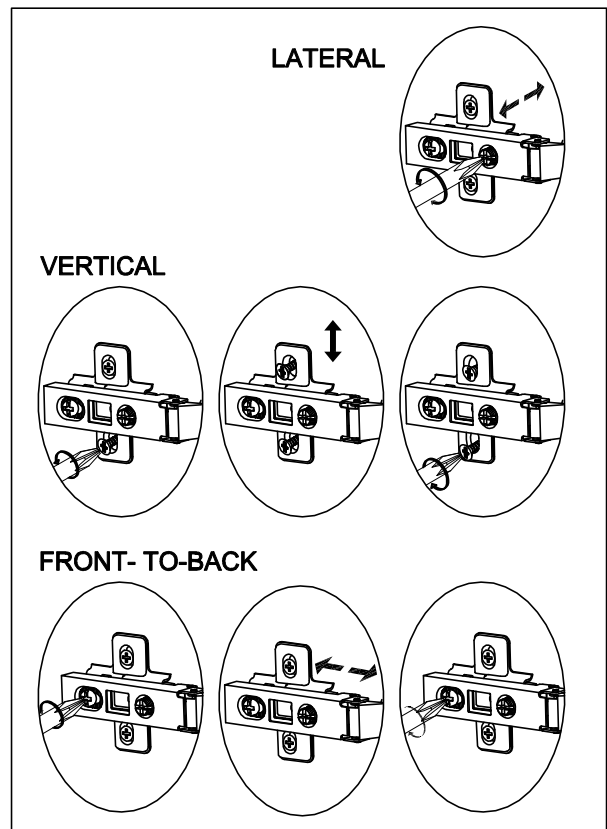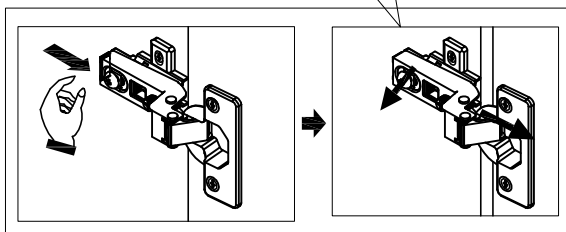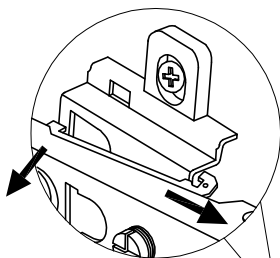   

21

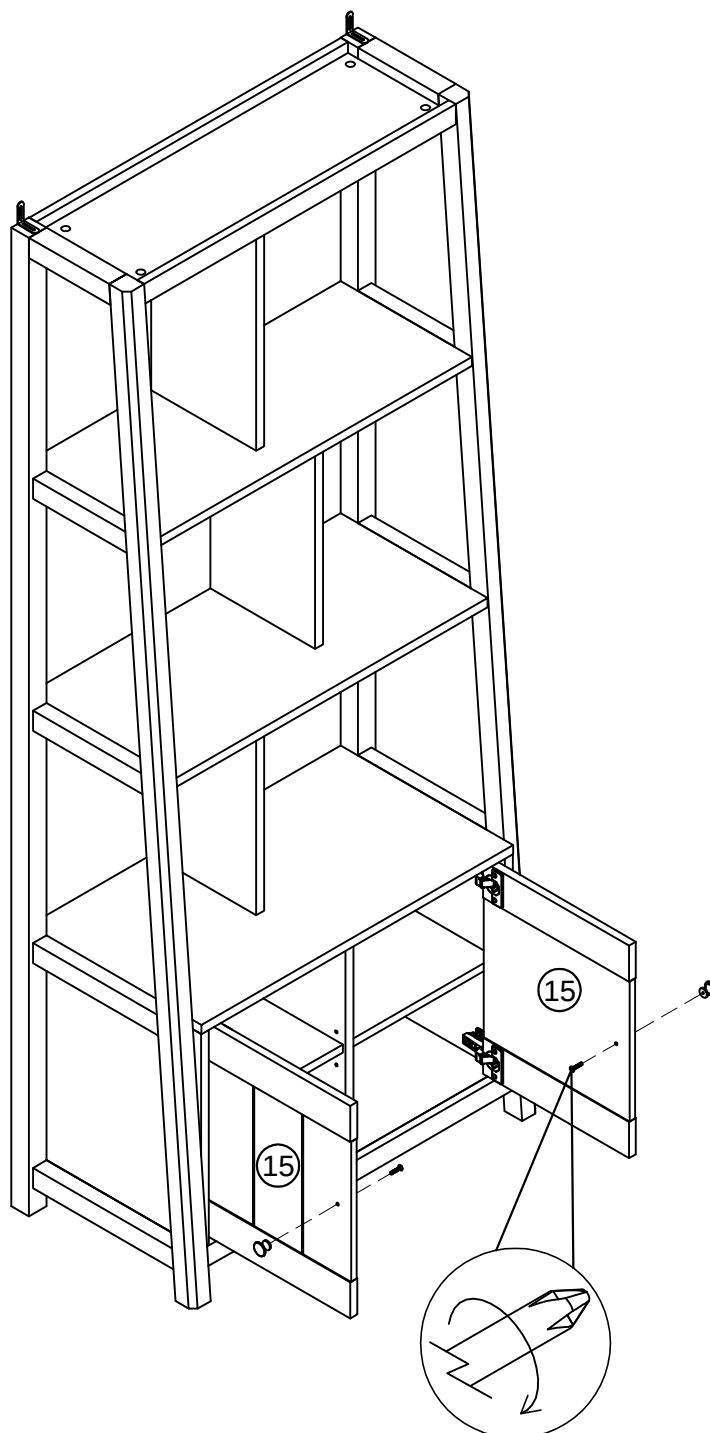 

E41	N/A	2			
-----	-----	---	---	---	---

 
 
 
22

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X"L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

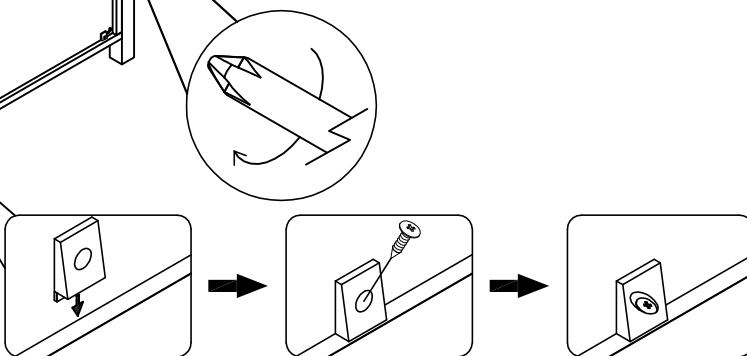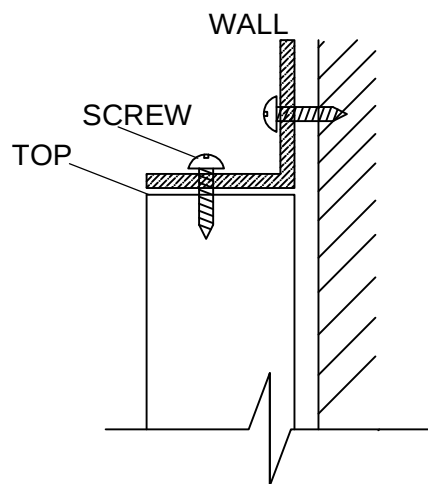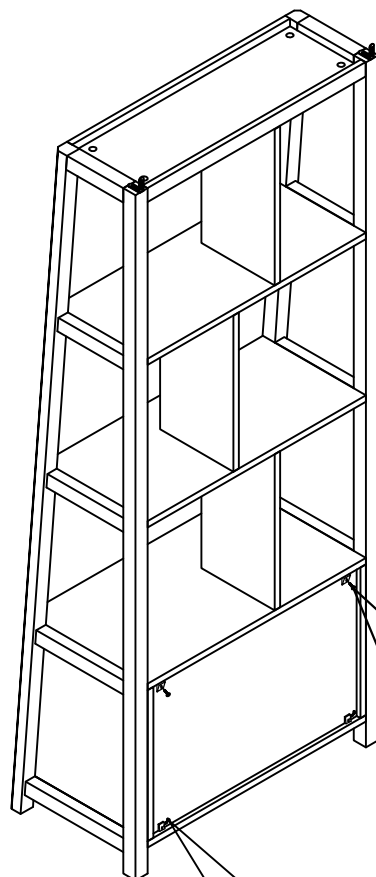

WHEN LOOSENING THE CAM

 
TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



MAXIMUM
LOCK



TURN
TO UNLOCK



UNLOCKED

T38

N/A

4



HANLEY LADDER SHELF

327080

Technical drawing of a wooden shelving unit (Fig. 1) showing dimensions in millimeters (mm). The unit is a tall, narrow structure with a total height of 1890mm and a top width of 773mm. It features four shelves, each 405mm wide and 273mm deep. The shelves are supported by a frame with a depth of 257mm. The unit has a base with a depth of 405mm and a front panel with a height of 410mm. The unit is shown with a door open, revealing internal compartments.

Produced in China for Next Retail Ltd.
327080-2018-V1.

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk