

 
NEXT

MALVERN DOVE GREY / CLASSIC CREAM DESK

360630 / 620171

Assembly instructions

GETTING TO KNOW YOUR PRODUCT

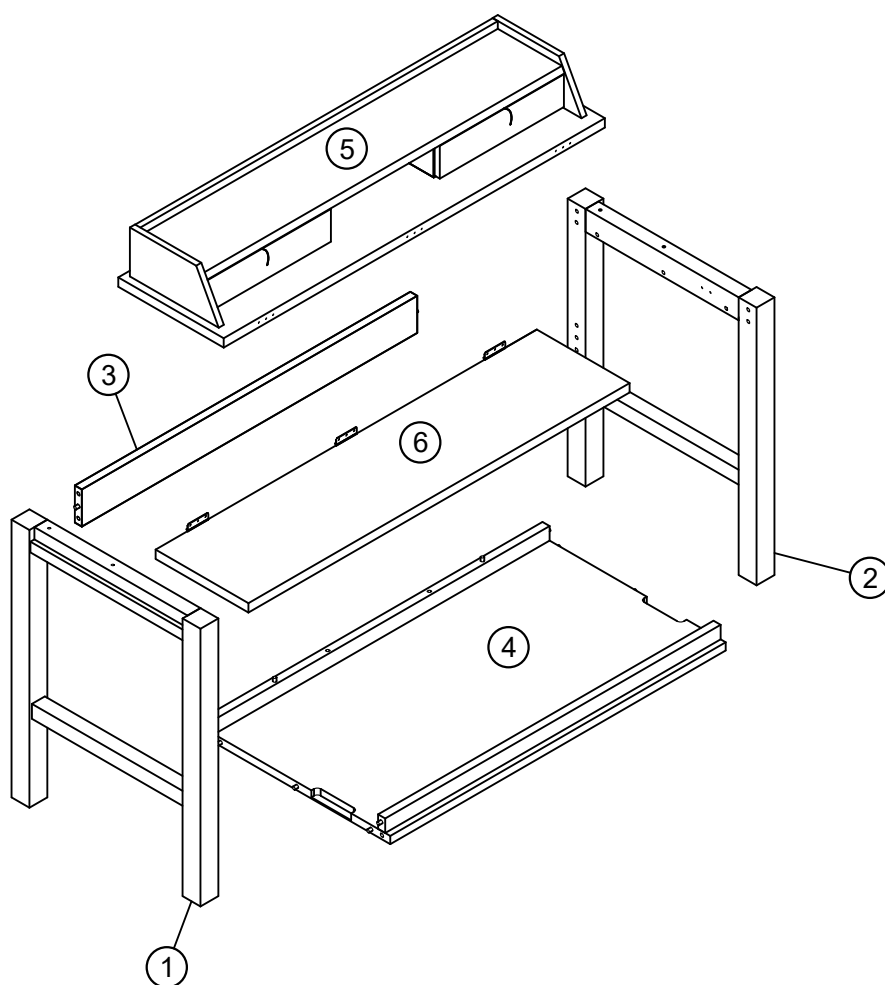


 

 
 

NEXT

MALVERN DOVE GREY / CLASSIC CREAM DESK

360630 / 620171

Assembly instructions

Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	57 x 73cm		1	1
2	57 x 73cm		1	1
3	10 x 86cm		1	1
4	57 x 86cm		1	1
5	32 x 100cm		1	1
6	28 x 100cm		1	1

NEXT


MALVERN DOVE GREY / CLASSIC CREAM DESK

360630 / 620171

Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B25	Ø35 x 17mm	4	N/A
B3	Ø15 x 12mm	6	1
B24	Ø8.5 x 63mm	4	N/A
B12	Ø7.5 x 33mm	6	1
V86	Ø6 x 70mm	4	1
U127	Ø4 x 20mm	17	1
D6	Ø8 x 30mm	N/A	2

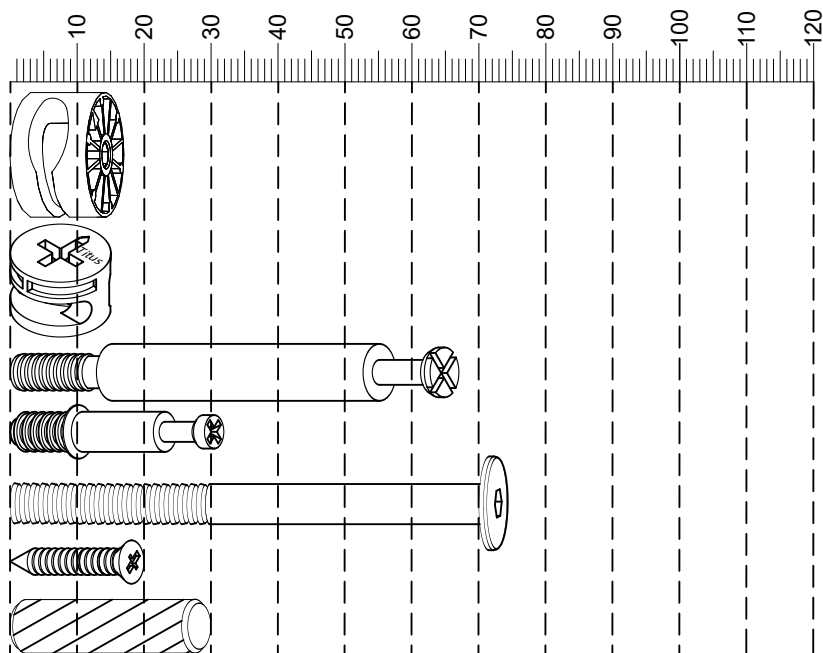 

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T7	N/A	1	N/A	
E28	N/A	2	N/A	
T4	N/A	2	N/A	
H35	N/A	1	N/A	
H36	N/A	1	N/A	
J2	N/A	2	N/A	

NEXT

MALVERN DOVE GREY / CLASSIC CREAM DESK

 
360630 / 620171

Assembly instructions


1

DON'T STOP UNTIL THE 2 O'CLOCK LOCK


TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE
ARROW POINTS IN THE POSITIONS SHOWN IN THE
DIAGRAMS BELOW

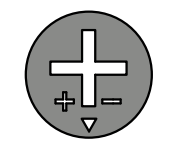


START

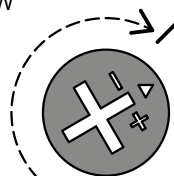 


CORRECT
LOCK

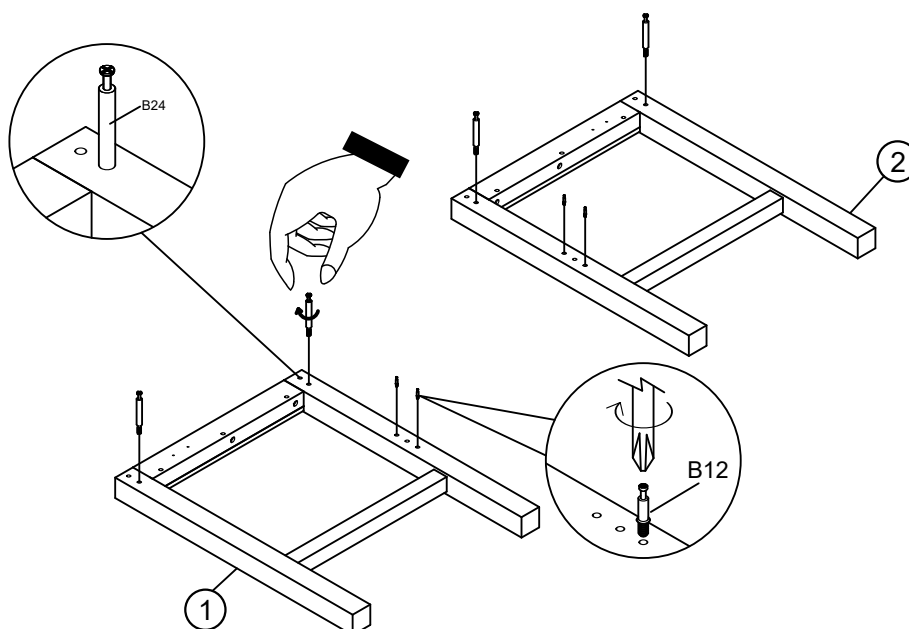 


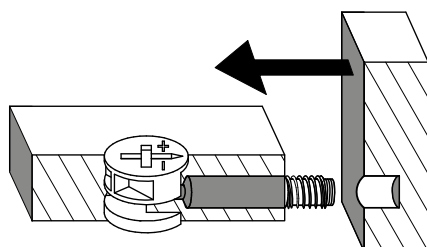 

 PUSH THE TWO PANELS TOGETHER ALLOWING THE
DOWEL TO ALIGN WITH THE HOLE

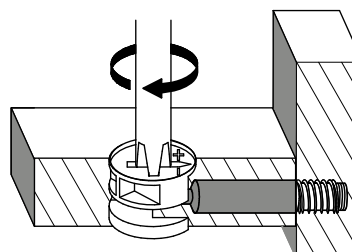

TURN THE CAM IN A CLOCKWISE DIRECTION

 

B24	Ø8.5 x 63mm	4	
B12	Ø7.5 x 33mm	4	  not supplied

 
NEXT



MALVERN DOVE GREY / CLASSIC CREAM DESK

360630 / 620171


Assembly instructions

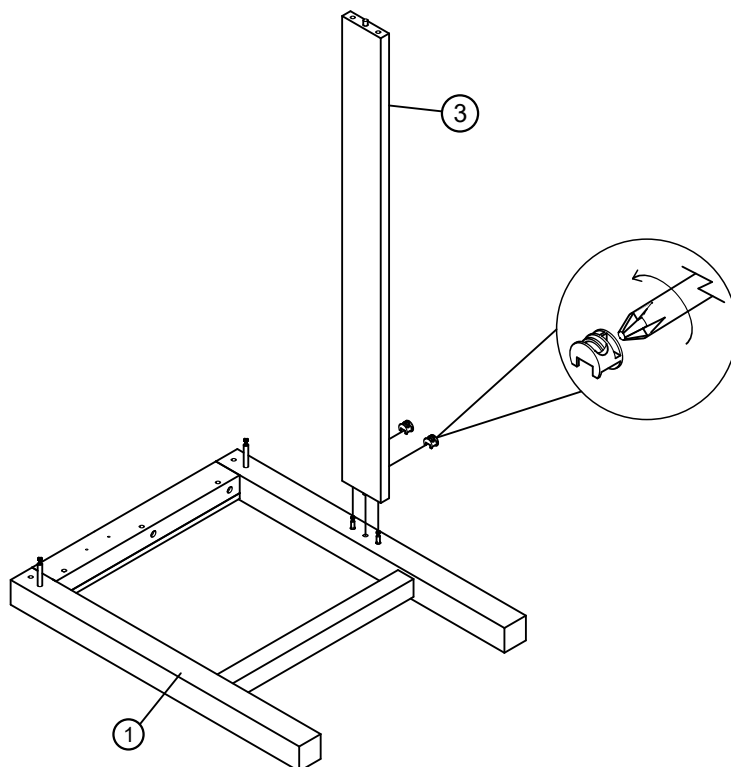
2



B3	Ø15 x 12mm	2		 not supplied
----	------------	---	---	---

 3

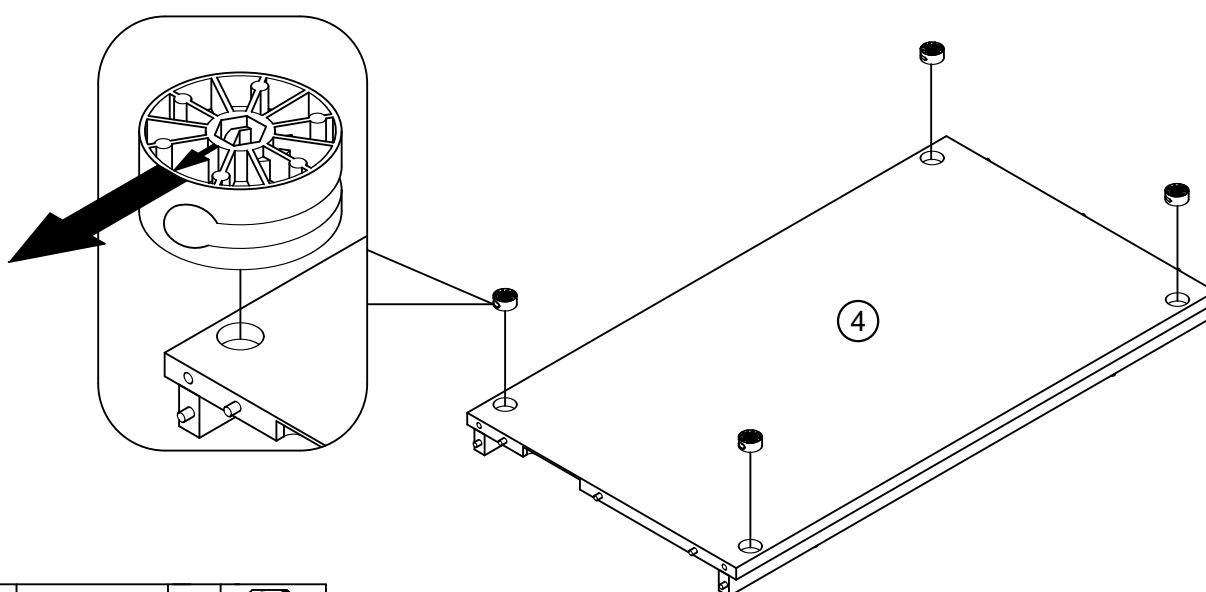

B25	Ø35 x 17mm	4	
-----	------------	---	---

 
NEXT

MALVERN DOVE GREY / CLASSIC CREAM DESK

360630 / 620171


Assembly instructions

4

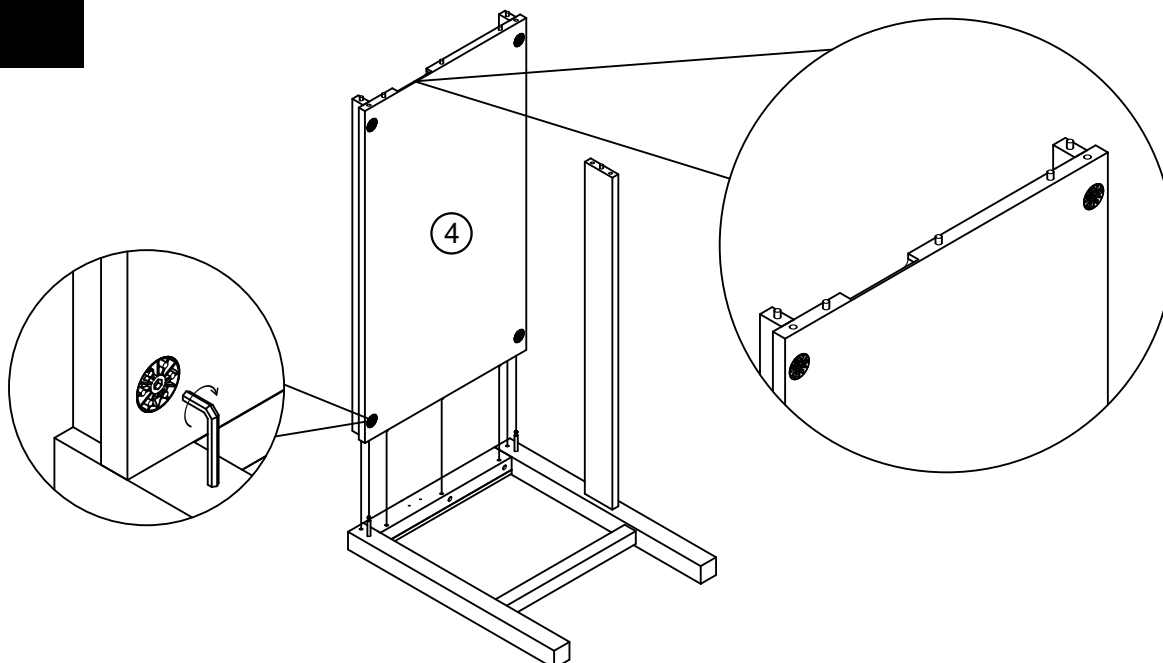

T7	N/A	1	
----	-----	---	--

 5

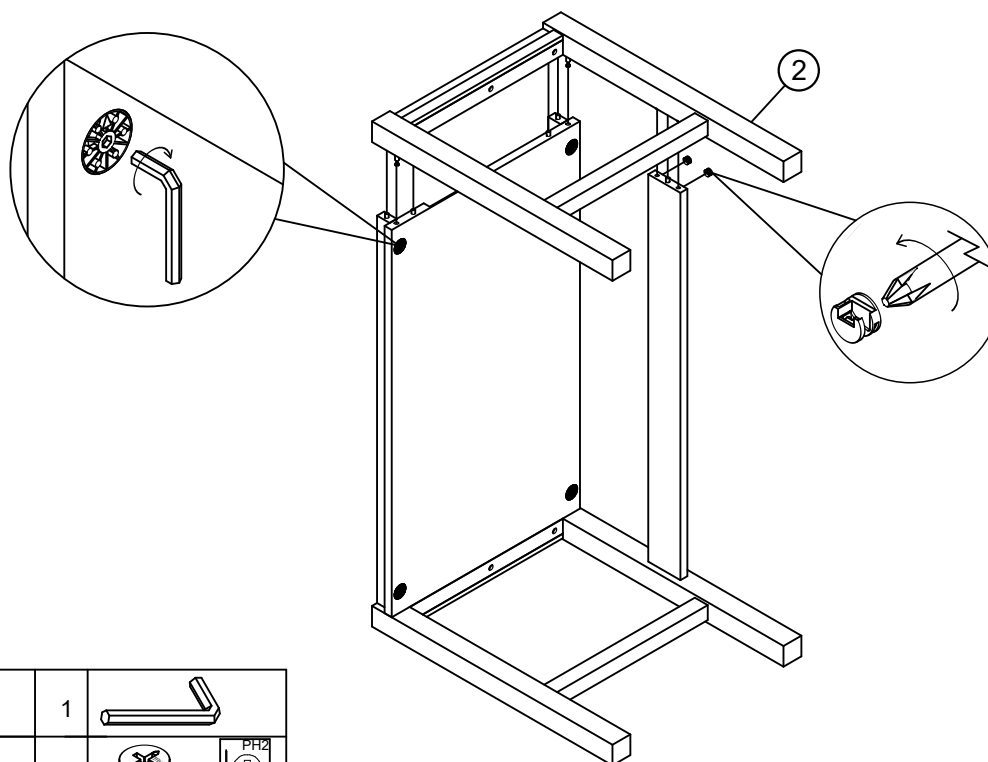

T7	N/A	1	
B3	Ø15 x 12mm	2	 not supplied

 
NEXT

MALVERN DOVE GREY / CLASSIC CREAM DESK


360630 / 620171

Assembly instructions

6

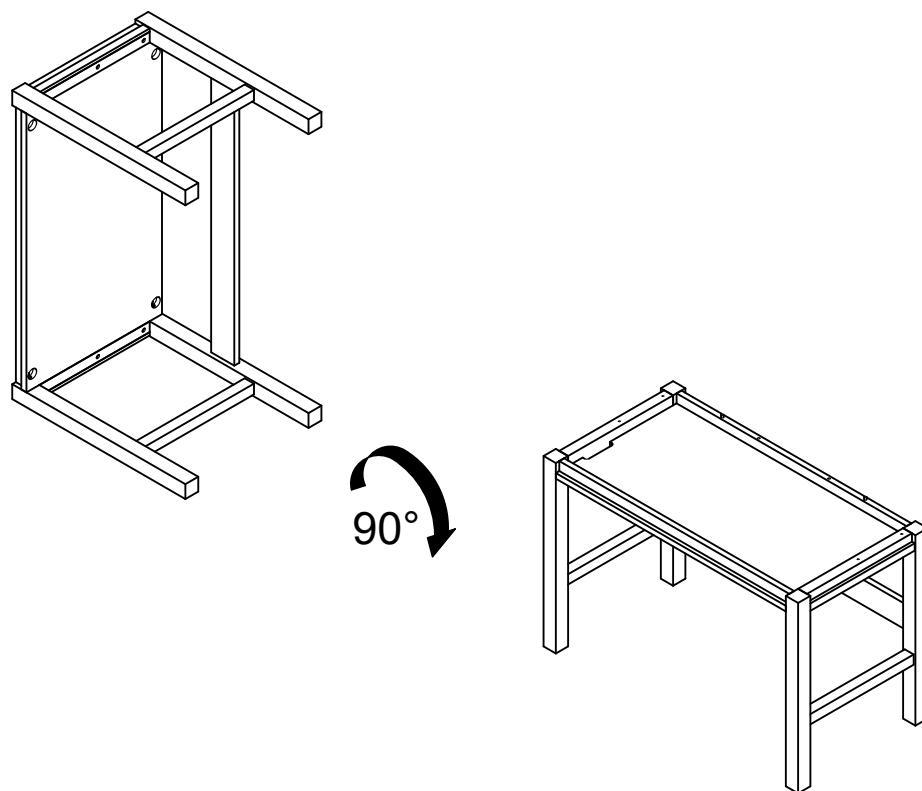

7

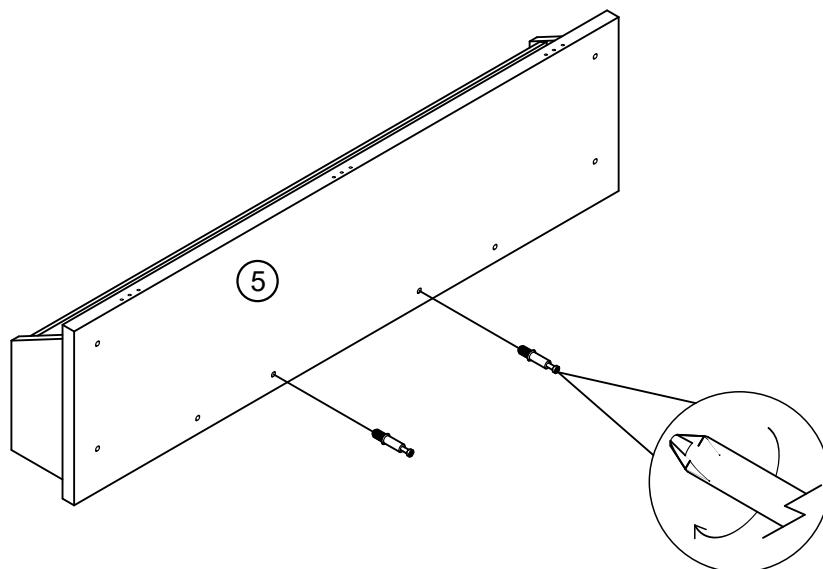 

B12

 
Ø7.5 x 33mm

2




not supplied

8

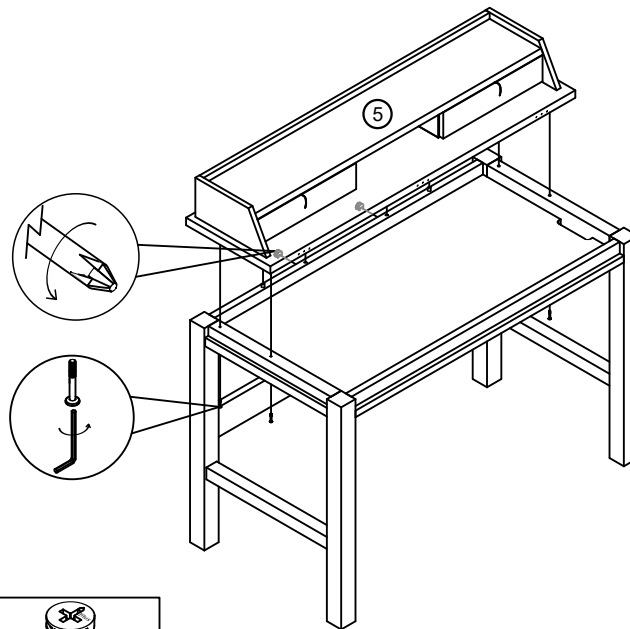

B3	Ø15 x 12mm	2	
V86	Ø6 x 70mm	4	
T4	N/A	2	

 9

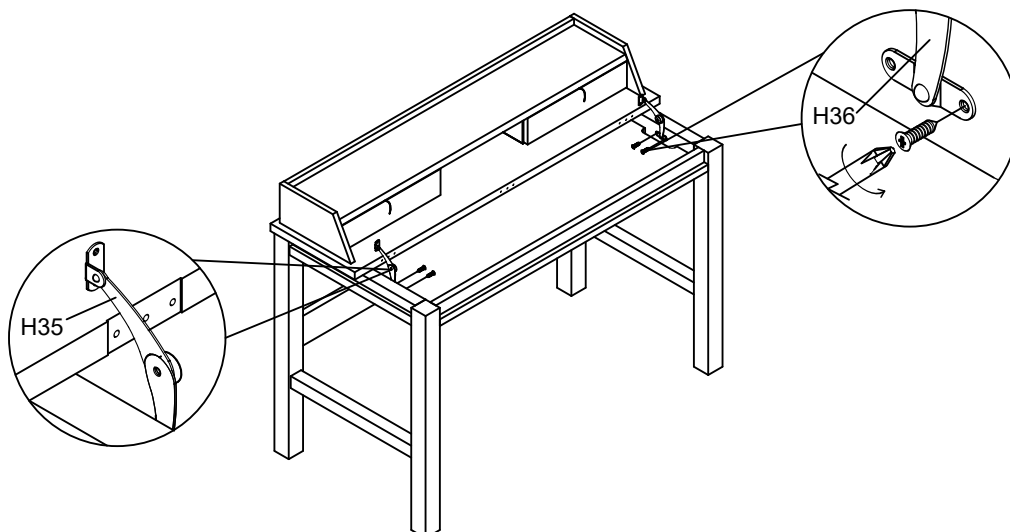

H35	N/A	1	
H36	N/A	1	
U127	Ø4 x 20mm	4	 not supplied

 
NEXT




MALVERN DOVE GREY / CLASSIC CREAM DESK

360630 / 620171


Assembly instructions

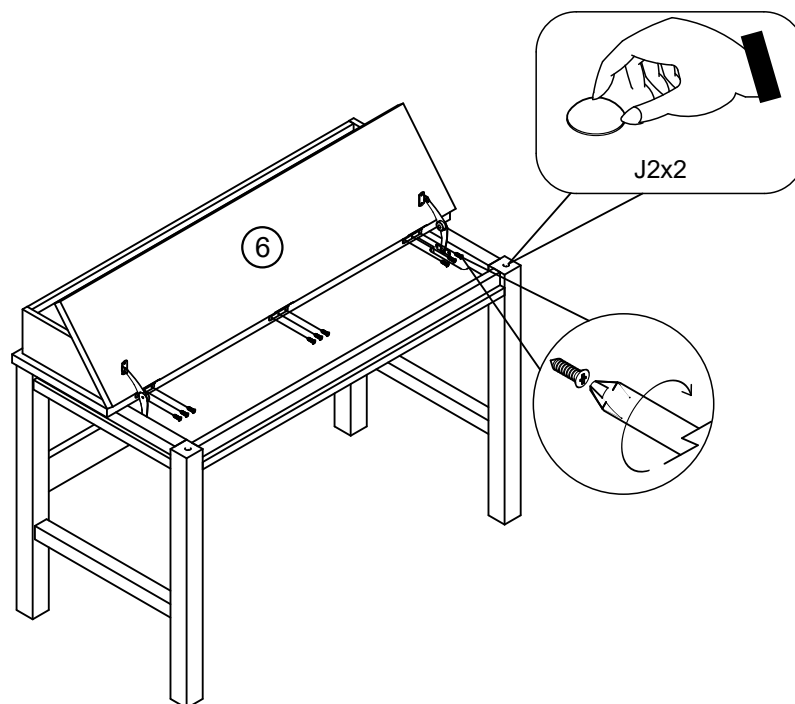

10



J2	N/A	2	
U127	Ø4 x 20mm	9	  not supplied

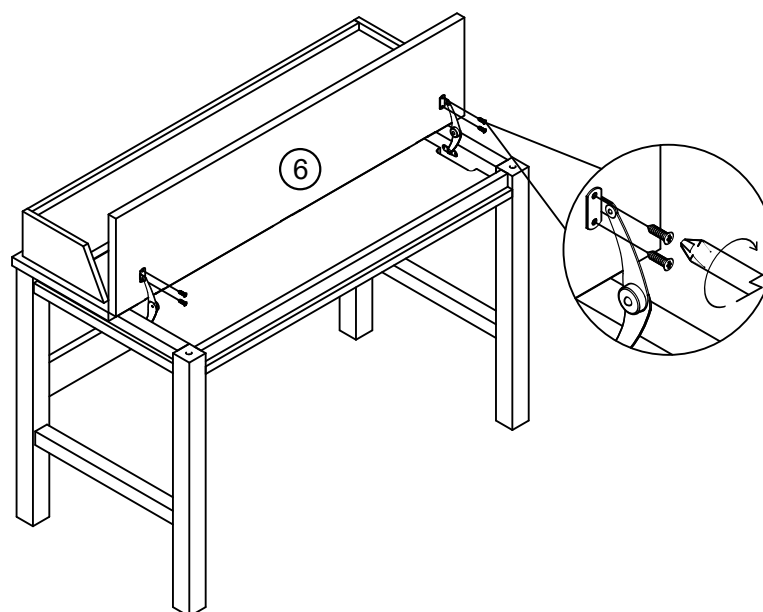 11



U127	Ø4 x 20mm	4	  not supplied
------	-----------	---	---

 
NEXT

MALVERN DOVE GREY / CLASSIC CREAM DESK


360630 / 620171




Assembly instructions

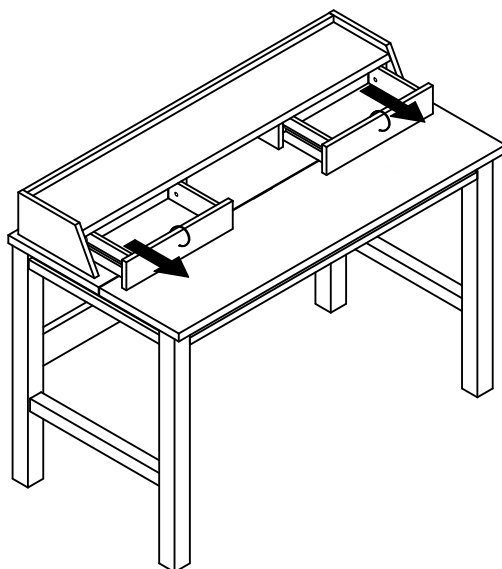12

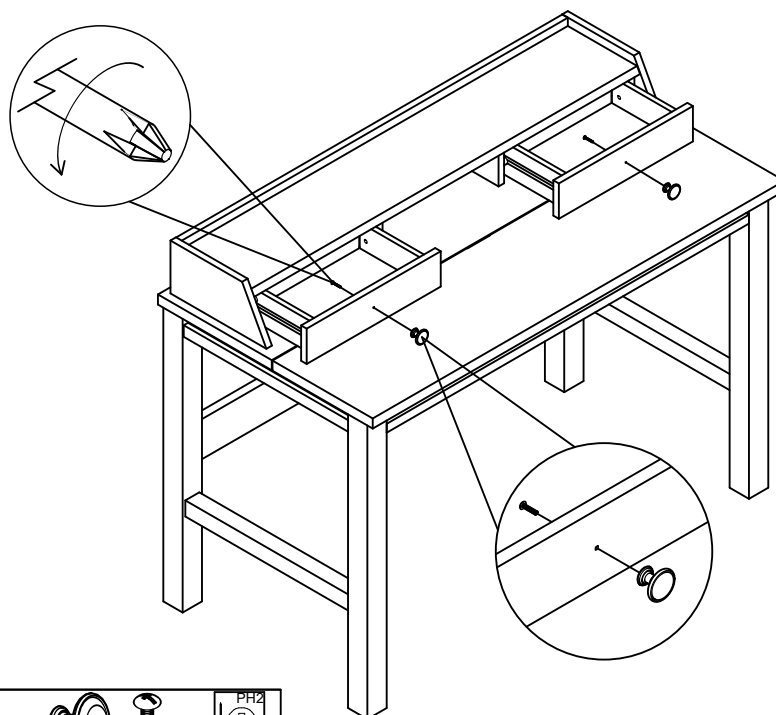 

13



E28	N/A	2			 not supplied
-----	-----	---	---	---	---

NEXT

MALVERN DOVE GREY / CLASSIC CREAM DESK

360630 / 620171

Assembly instructions

14

We recommend the use of the wall attachment bracket/strap provided for safety reasons.

Secure the other end of the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).

 
 
To hide the strap behind the unit, drill the hole lower than the top of unit.

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

Please ensure you secure your product to the wall for your and your family's safety before you use it.

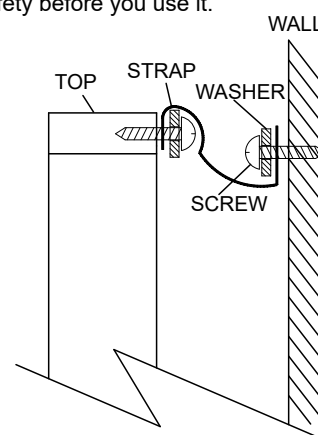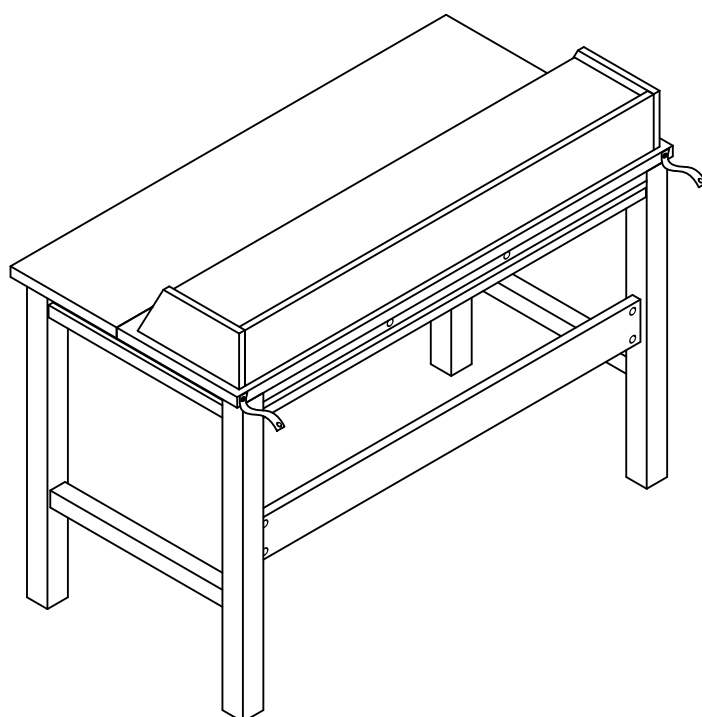


WHEN LOOSENING THE CAM


TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



 MAXIMUM
LOCK

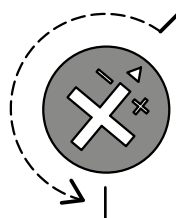

TURN
TO UNLOCK

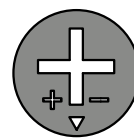 


UNLOCKED

NEXT

MALVERN DOVE GREY / CLASSIC CREAM DESK 360630 / 620171

Actual product size

 H88 x W100 x D60cm

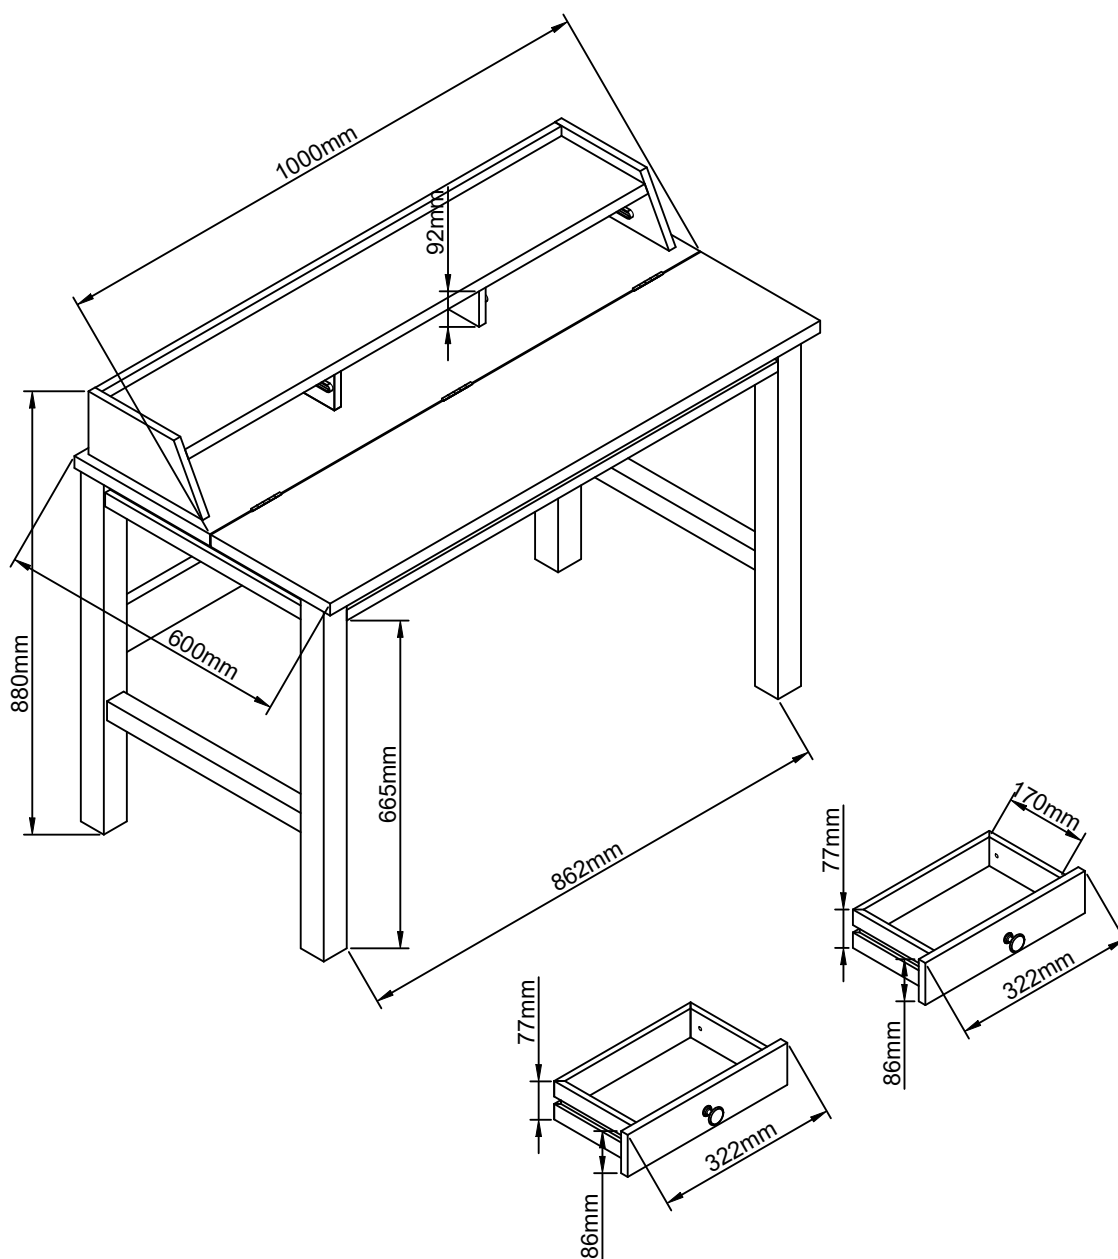

NEXT

MALVERN DOVE GREY / CLASSIC CREAM DESK
360630 / 620171

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk