

next

 
AMELIA CHANGING UNIT

404759

Assembly instructions

Actual product size

H92.5 x W83 x D49cm

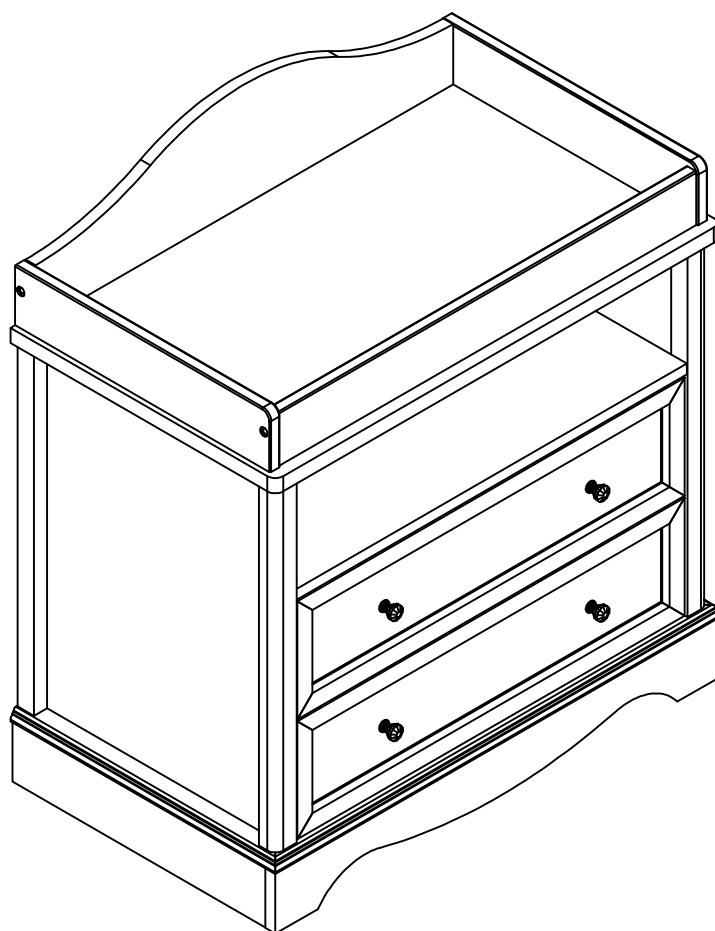

**IMPORTANT - RETAIN FOR FUTURE
REFERENCE : READ CAREFULLY**

Need Help ?

With: Assembly instruction

Missing or damaged parts

CALL: 0333 777 8999

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

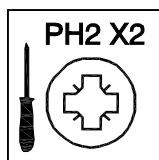

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

 
 
Warnings

- a) DO NOT LEAVE THE CHILD UNATTENDED. The safety of your child is your responsibility.
- b) Always use the wall strap to prevent children tipping furniture over
- c) This product is intended for children from birth up to 11kg (12 months approximately).
- d) Check regularly that all the fittings and screws are correctly tightened and are not damaged. Loose screws can pinch parts of the body and clothing resulting in the risk of strangulation.
- e) Do not use replacement parts that are not recommended or supplied by Next.
- f) Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the changing unit.
- g) Always leave your product clean and dry. Wipe away any spillage straight away. Your product can be cleaned with a damp cloth. Never use harsh abrasives, bleach or strong detergents
- h) Before use, ensure the dresser is on a stable, level surface.
- i) Do not allow children to climb on the dresser.
- j) Never use the dresser if any parts are broken or missing.
- k) Never pivot or drag the dresser on its feet, the dresser must always be lifted by at least two people when moved.
- l) A changing mattress is not supplied with this product, if you will buy changing mattress (The maximum size of pad is 770 * 440mm), please lay the changing mattress on the changing surface within the retaining rails.
- m) The dresser changer must be fixed to the wall for safe use and the fastenings used should be appropriate to the wall.
- n) Maximum weight of the child: 11kg
- o) In order to prevent falling down this product must be used with the wall attachment device provided.

 
 

 
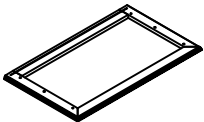 
 

 
 
 

Testing

 

 
 
 
 
 
 
 
 
 
This product conforms to BS EN 12221-1&2:2018+A1:2013.

GETTING TO KNOW YOUR PRODUCT

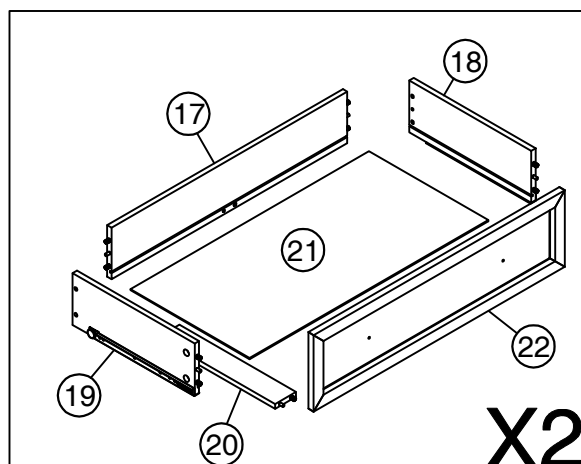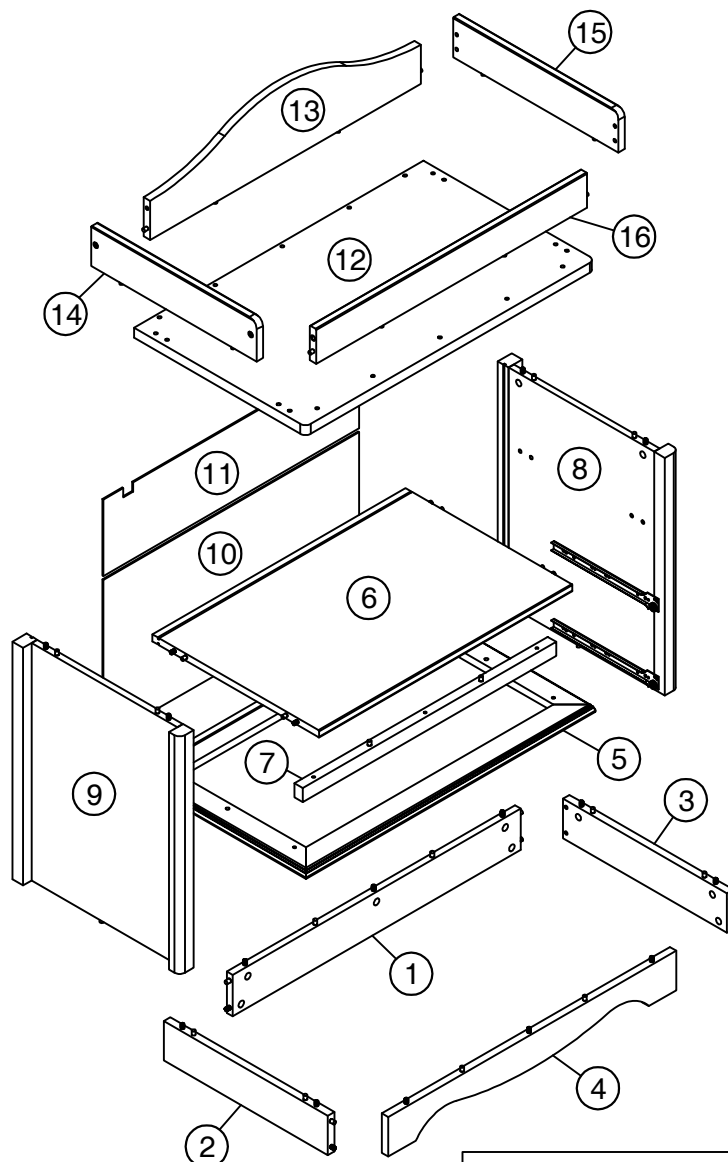


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	10 x 79cm		1	1
2	10 x 47cm		1	1
3	10 x 47cm		1	1
4	10 x 82.5cm		1	1
5	49 x 83cm		1	1
6	48 x 72.5cm		1	1
7	3.5 x 72.5cm		1	1
8	48 x 59cm		1	1
9	48 x 59cm		1	1
10	40 x 73.5cm		1	1
11	19 x 73.5cm		1	1

Ref	Dimensions	Visual	Qty	Ctn
12	49 x 83cm		1	1
13	19.5x77.5cm		1	1
14	10 x 47.5cm		1	1
15	10 x 47.5cm		1	1
16	8.5 x 77.5cm		1	1
17	13 x 67.5cm		2	1
18	13 x 35cm		2	1
19	13 x 35cm		2	1
20	6 x 33.5cm		2	1
21	34 x 68.5cm		2	1
22	19 x 72cm		2	1

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B2	Ø15 x 10mm	N/A	2
B3	Ø15 x 12mm	N/A	2
B8	Ø8 x 38mm	N/A	2
D3	Ø6 x 30mm	N/A	2
D6	Ø8 x 30mm	N/A	2
V56	Ø6 x 32mm	14	2
V68	Ø6 x 40mm	3	1
Y10	Ø6 x 35mm	4	1
Z8	Ø4 x 18mm	4	N/A
S41	Ø4 x 16mm	2	1

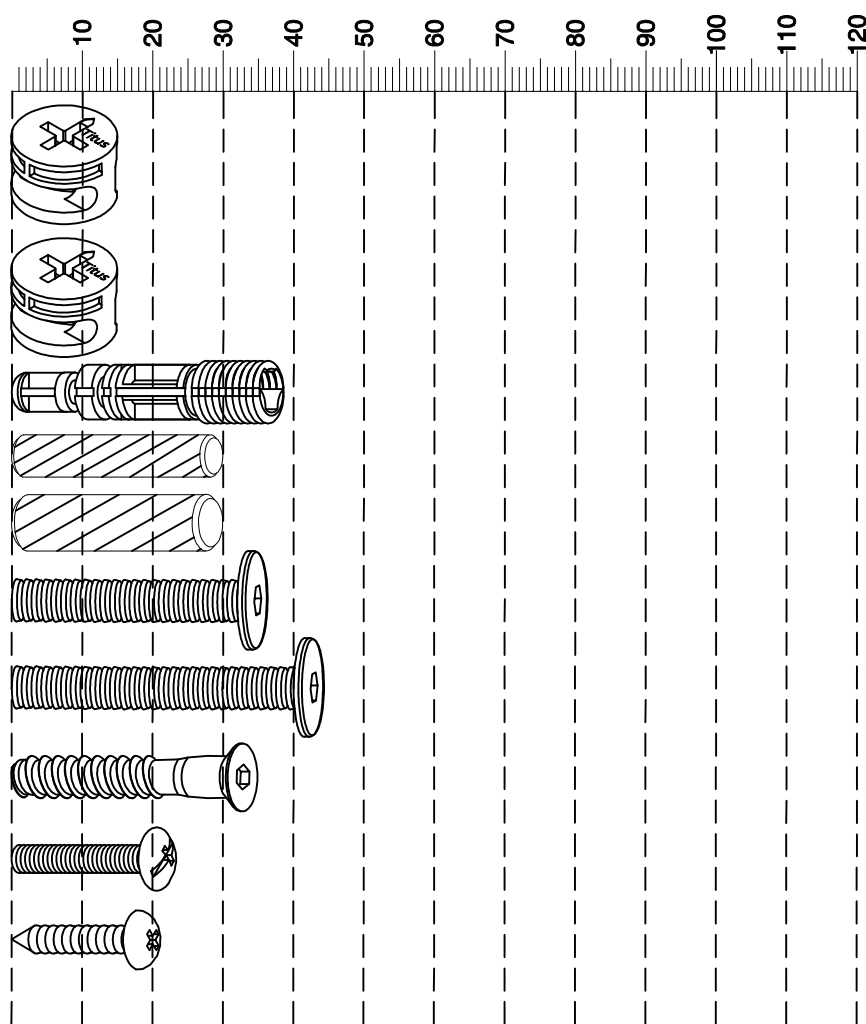 


Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T38	N/A	6	1	
E1	N/A	4	N/A	
T4	N/A	2	N/A	
T39	N/A	2	N/A	


1

DON'T STOP UNTIL THE 2 O'CLOCK LOCK

 
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITIONS SHOWN IN THE DIAGRAMS BELOW

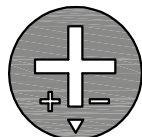


START

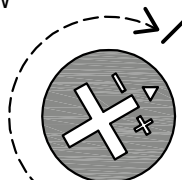 


CORRECT
LOCK

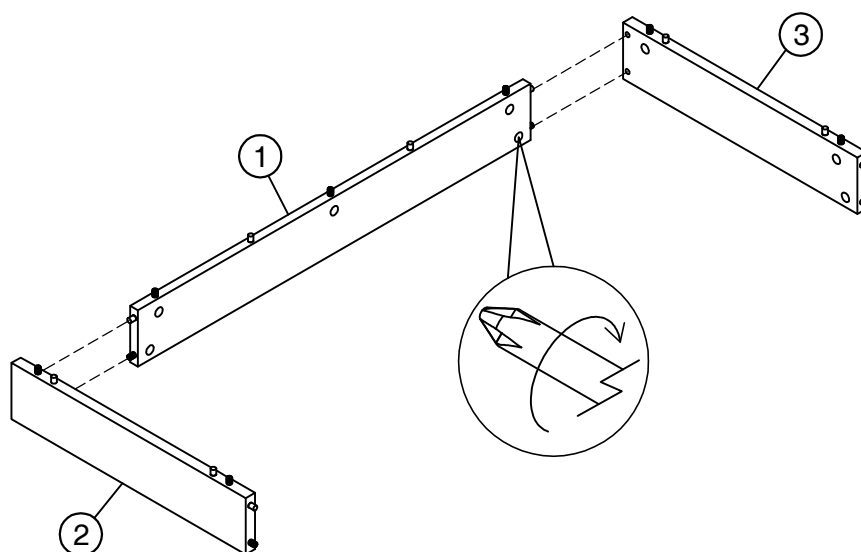 

 
PUSH THE TWO PANELS TOGETHER ALLOWING THE DOWEL TO ALIGN WITH THE HOLE

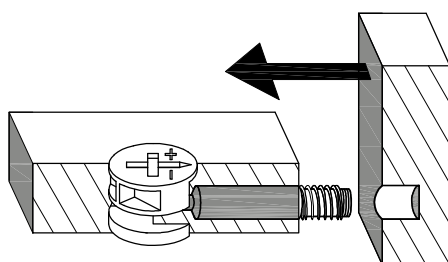


TURN THE CAM IN A CLOCKWISE DIRECTION

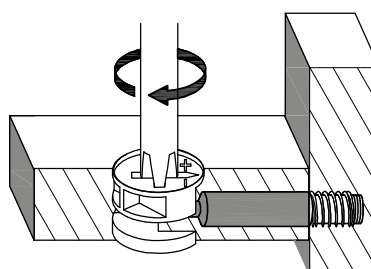 


2

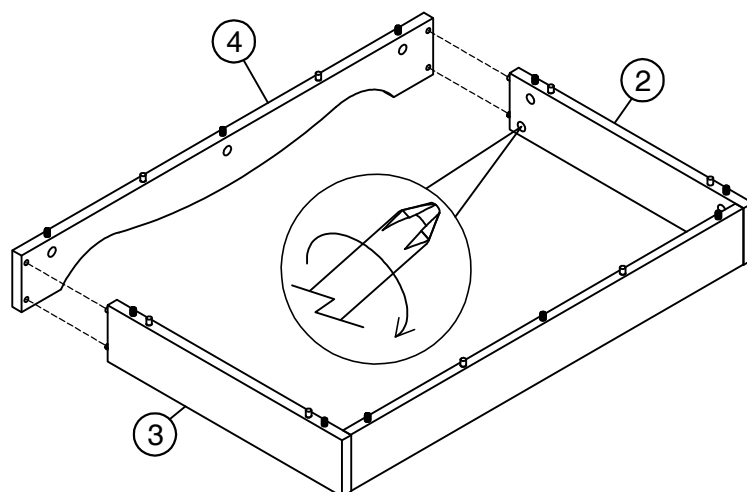 



3

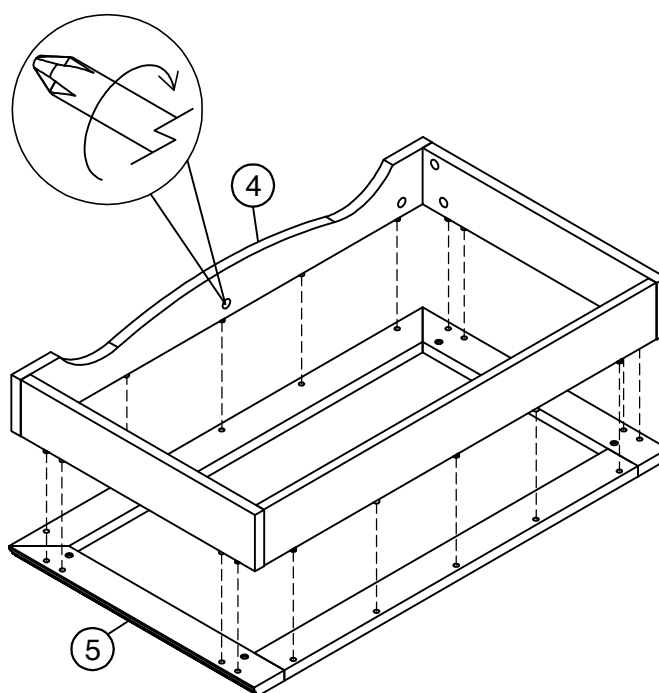 


4

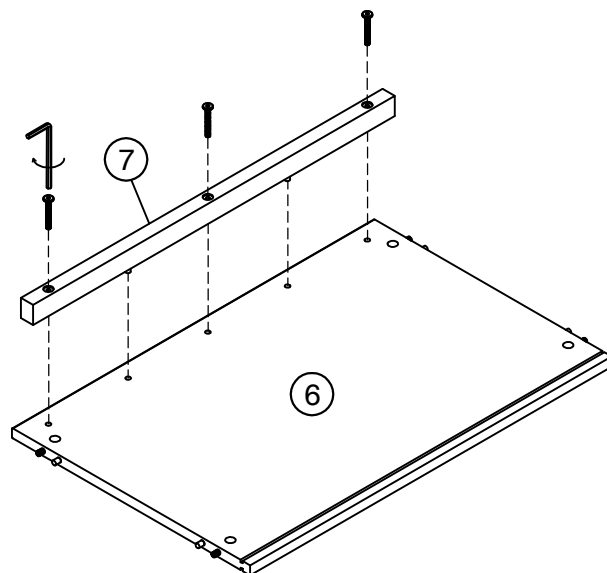 


 V68	Ø6 x 40mm	3	
T4	N/A	2	

  
5

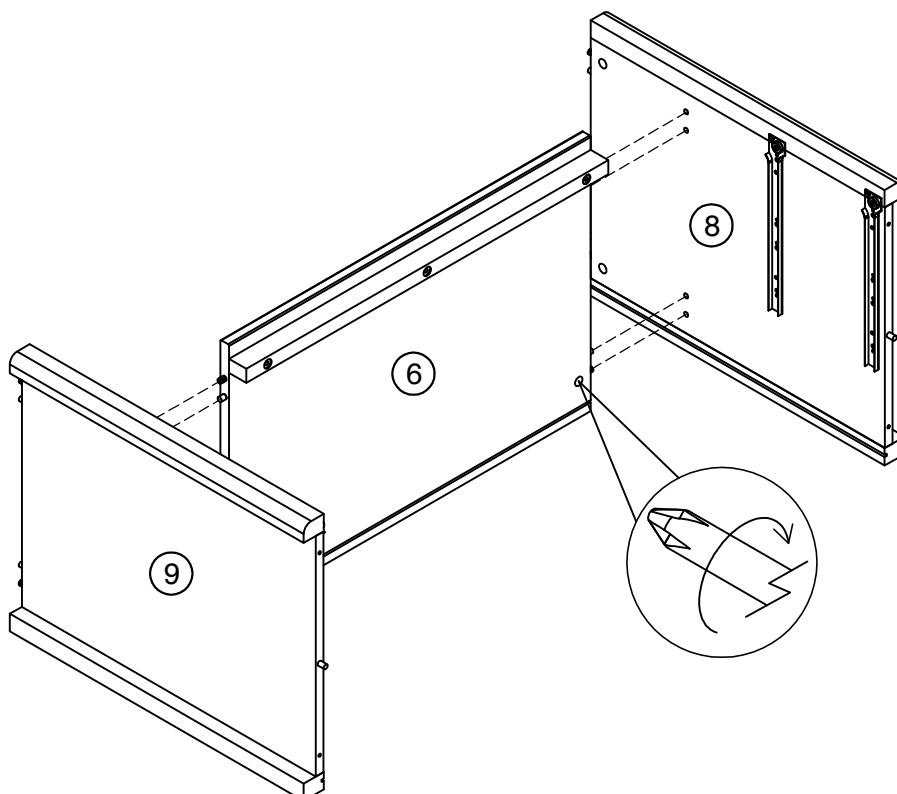

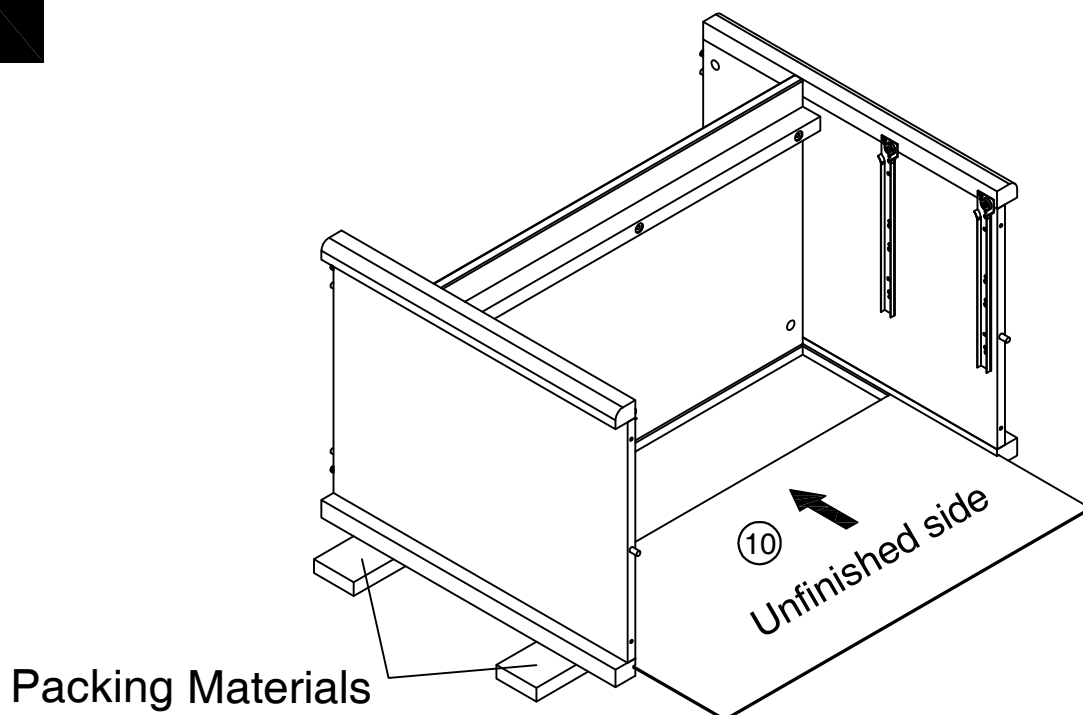

6

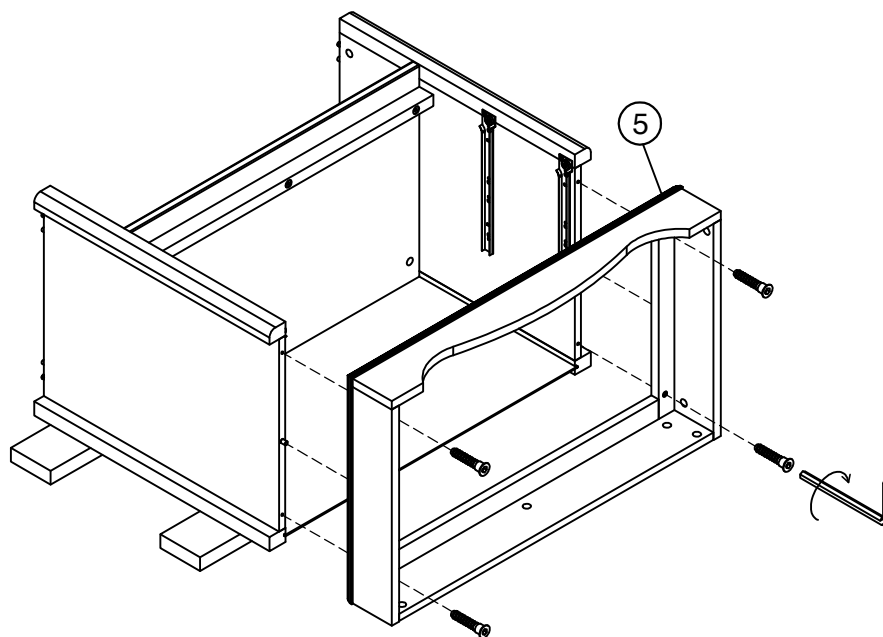 


7




Y10	Ø6 x 35mm	4	
T4	N/A	2	

  
8

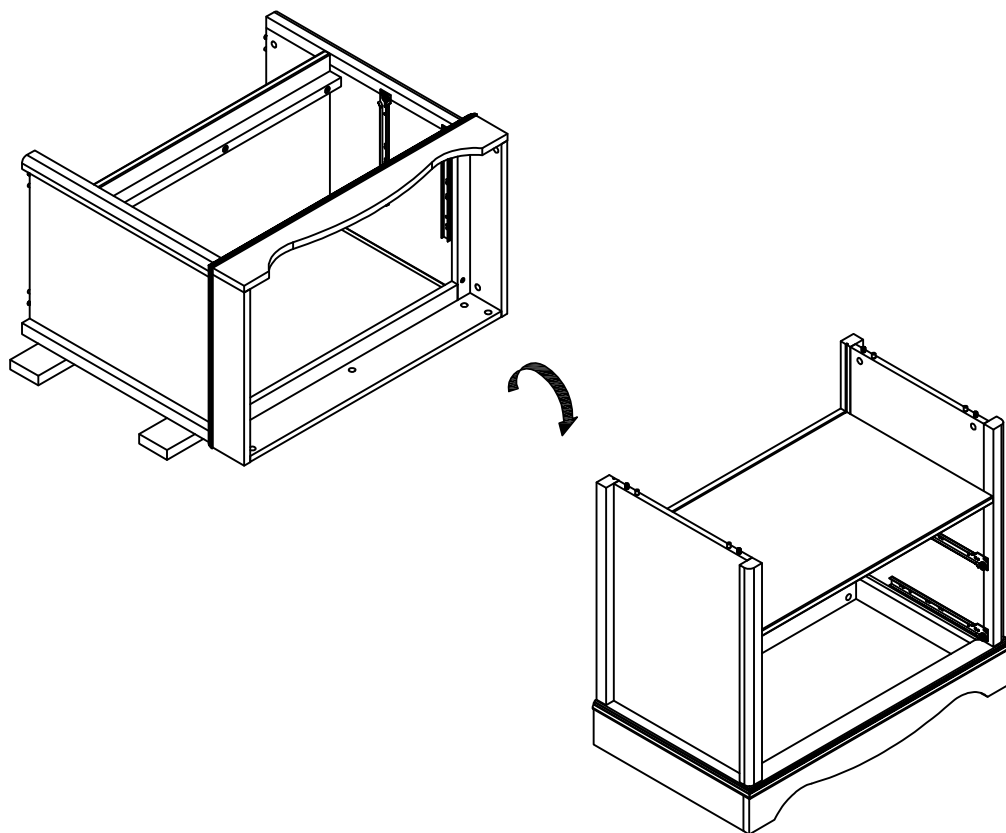

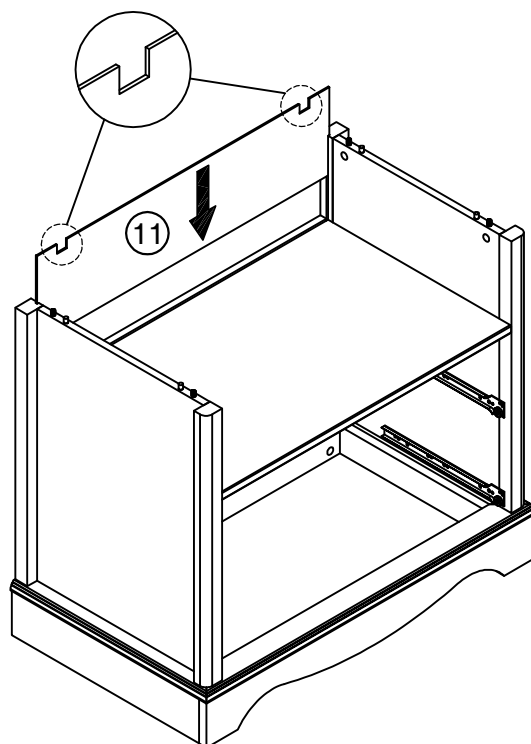

9

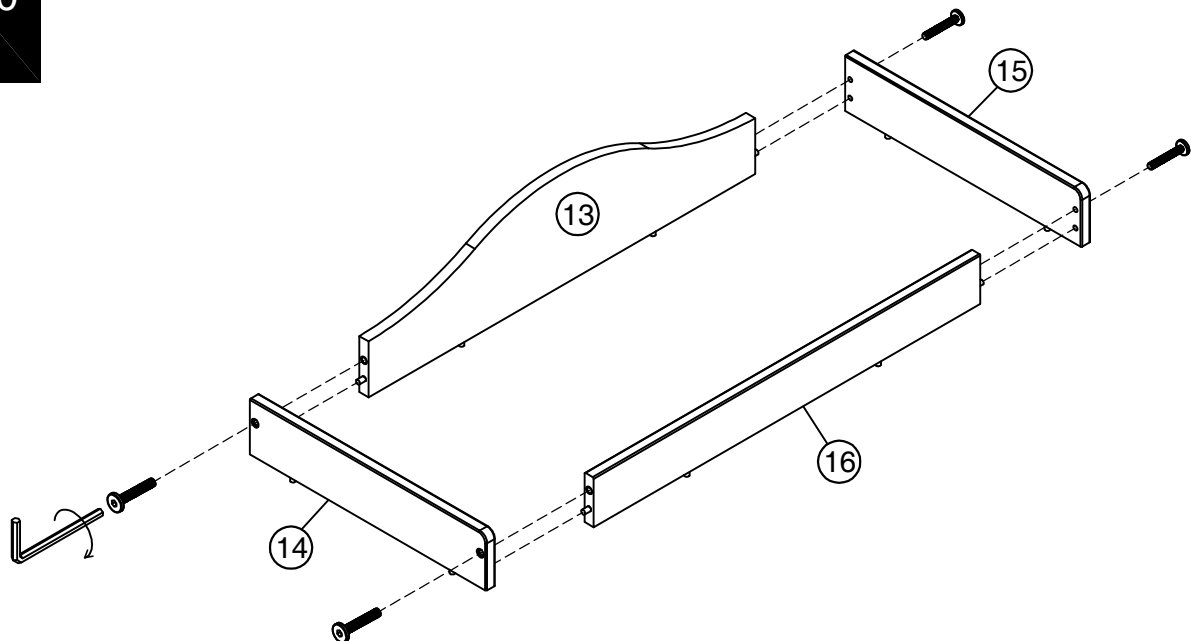  



 
10




V56	Ø6 x 32mm	4	
T4	N/A	2	

11

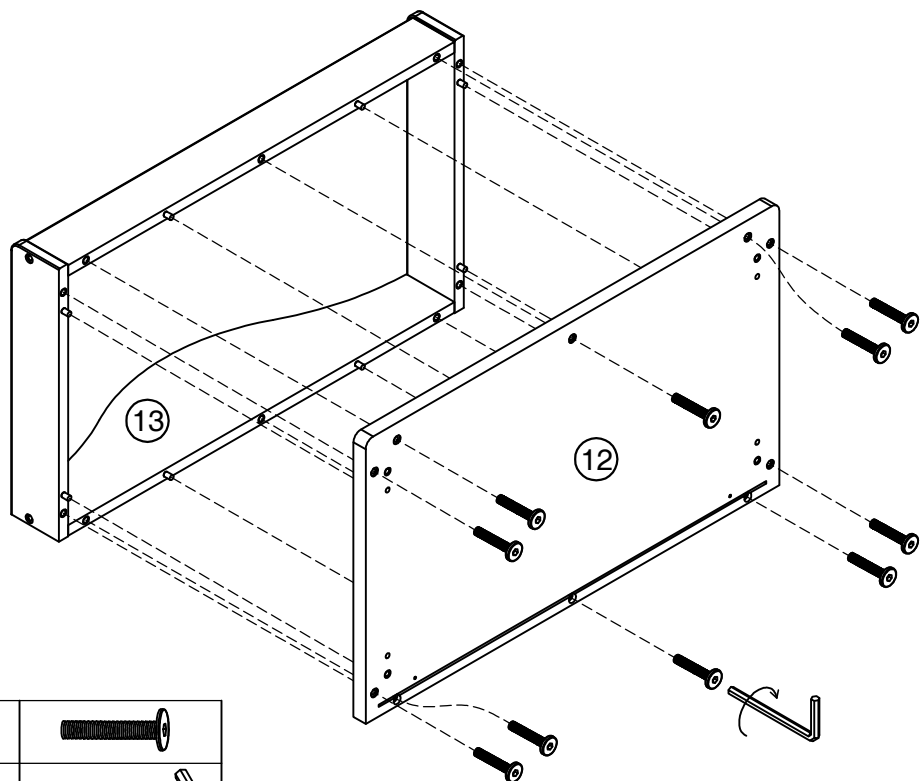


V56	Ø6 x 32mm	10	
T4	N/A	2	

 12

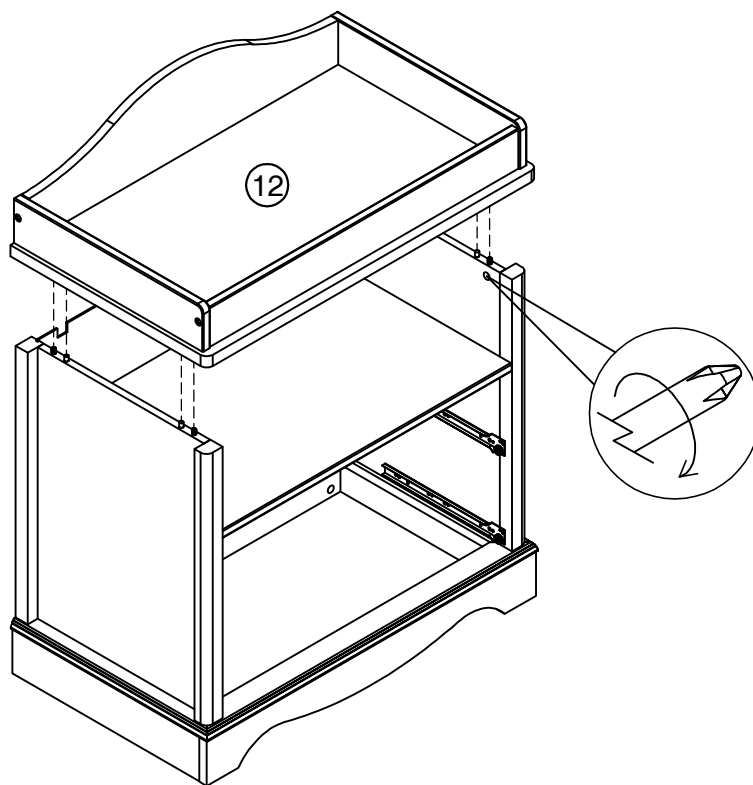


13

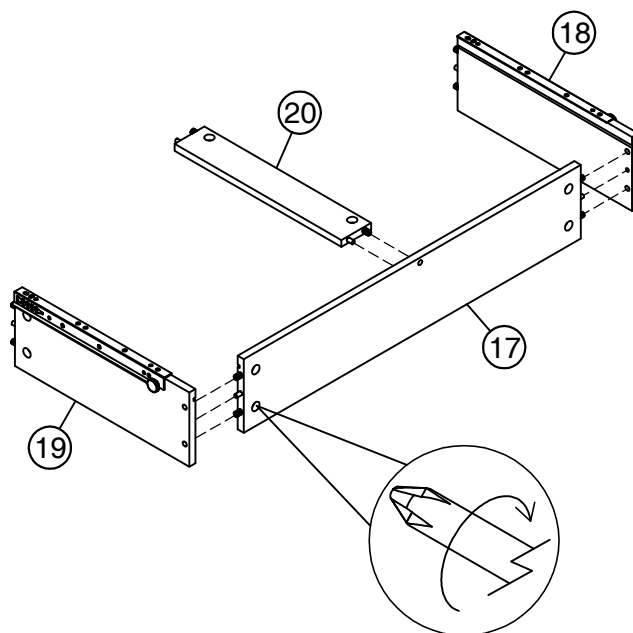 


X2

 14

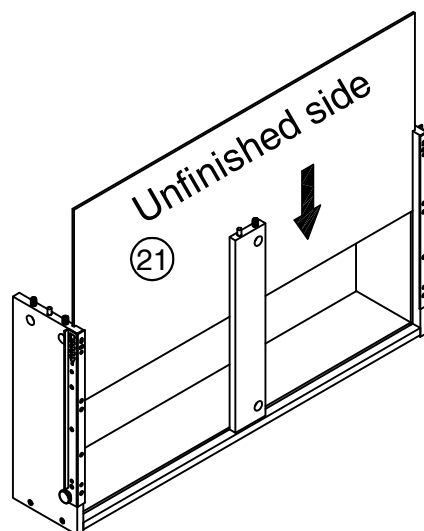


X2

 15

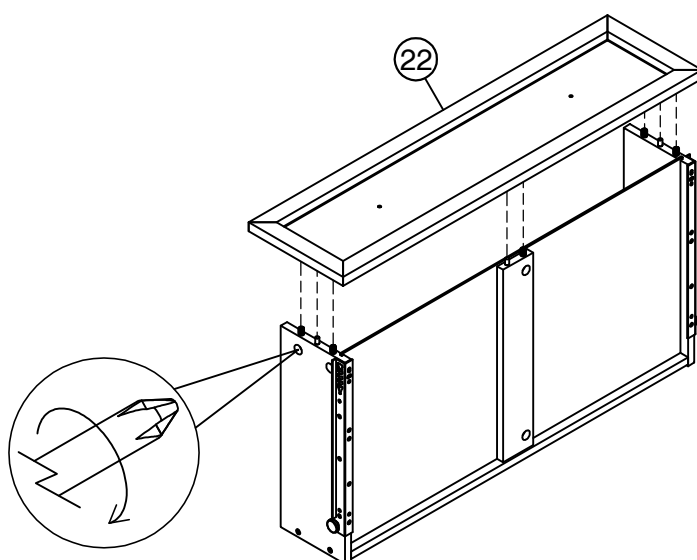




X2

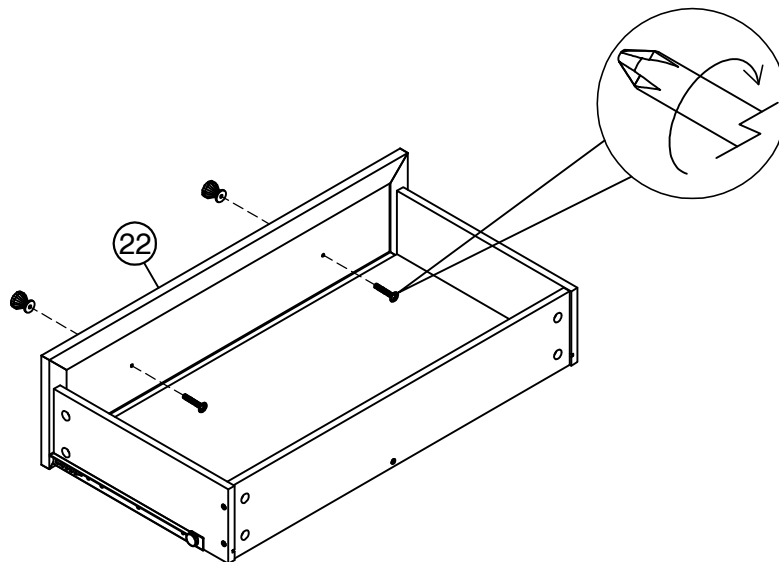 
16





X2



E1	N/A	4	
Z8	Ø4 x 18mm	4	  not supplied

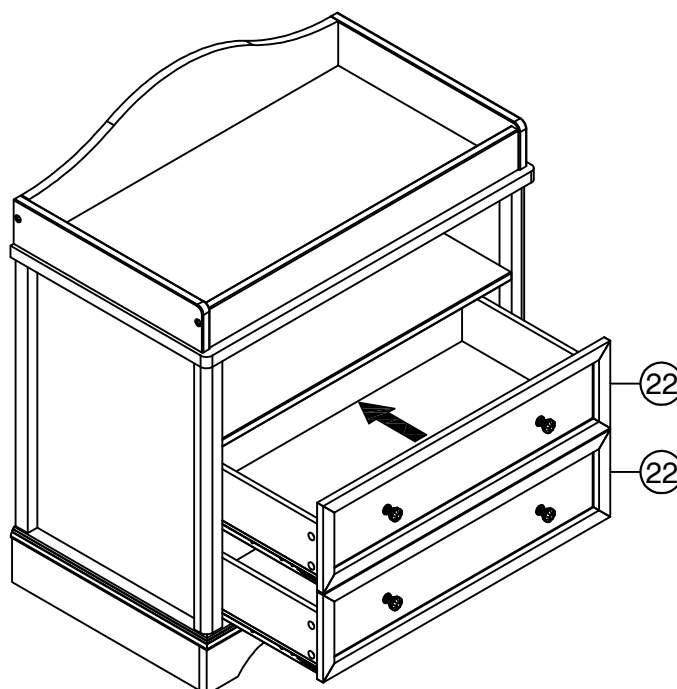 17

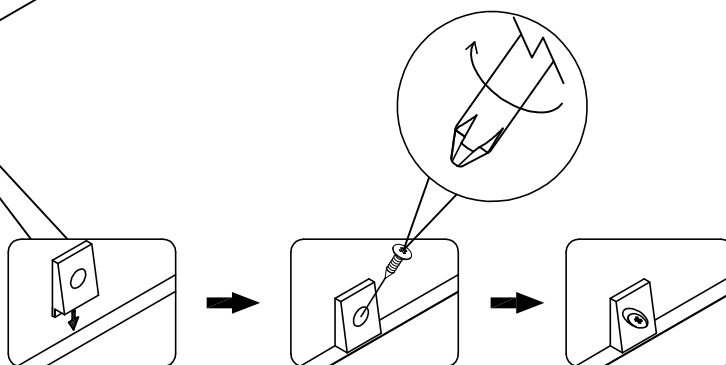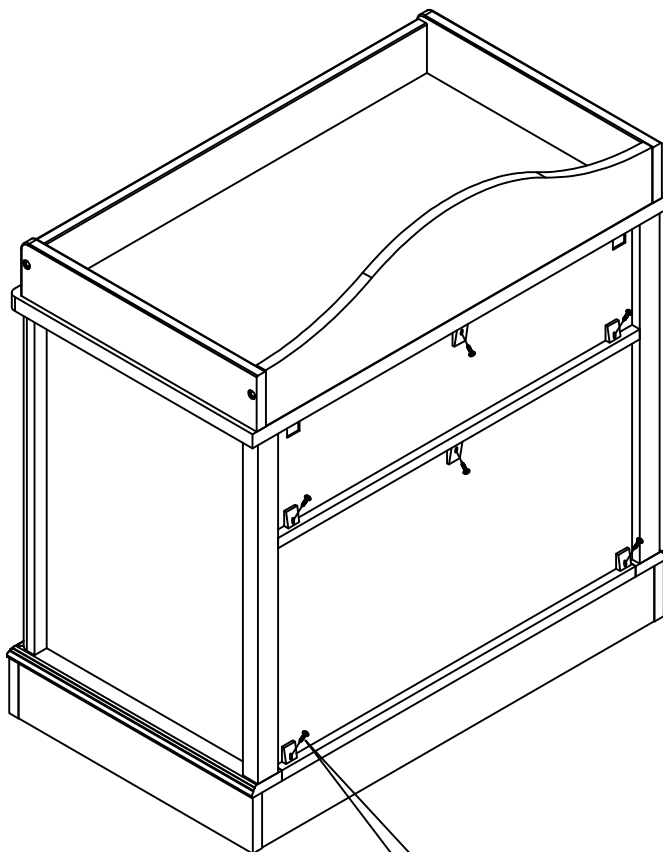  

18



T38	N/A	6		 not supplied
-----	-----	---	---	---

19

We recommend the use of the wall attachment bracket/strap provided for safety reasons.
Secure the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).
To hide the strap behind the unit, drill the hole lower than the top of unit.

 
Attach the other end of the strap to the underside of the top panel with screw.

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

Please ensure you secure your product to the wall for your and your family's safety before you use it.

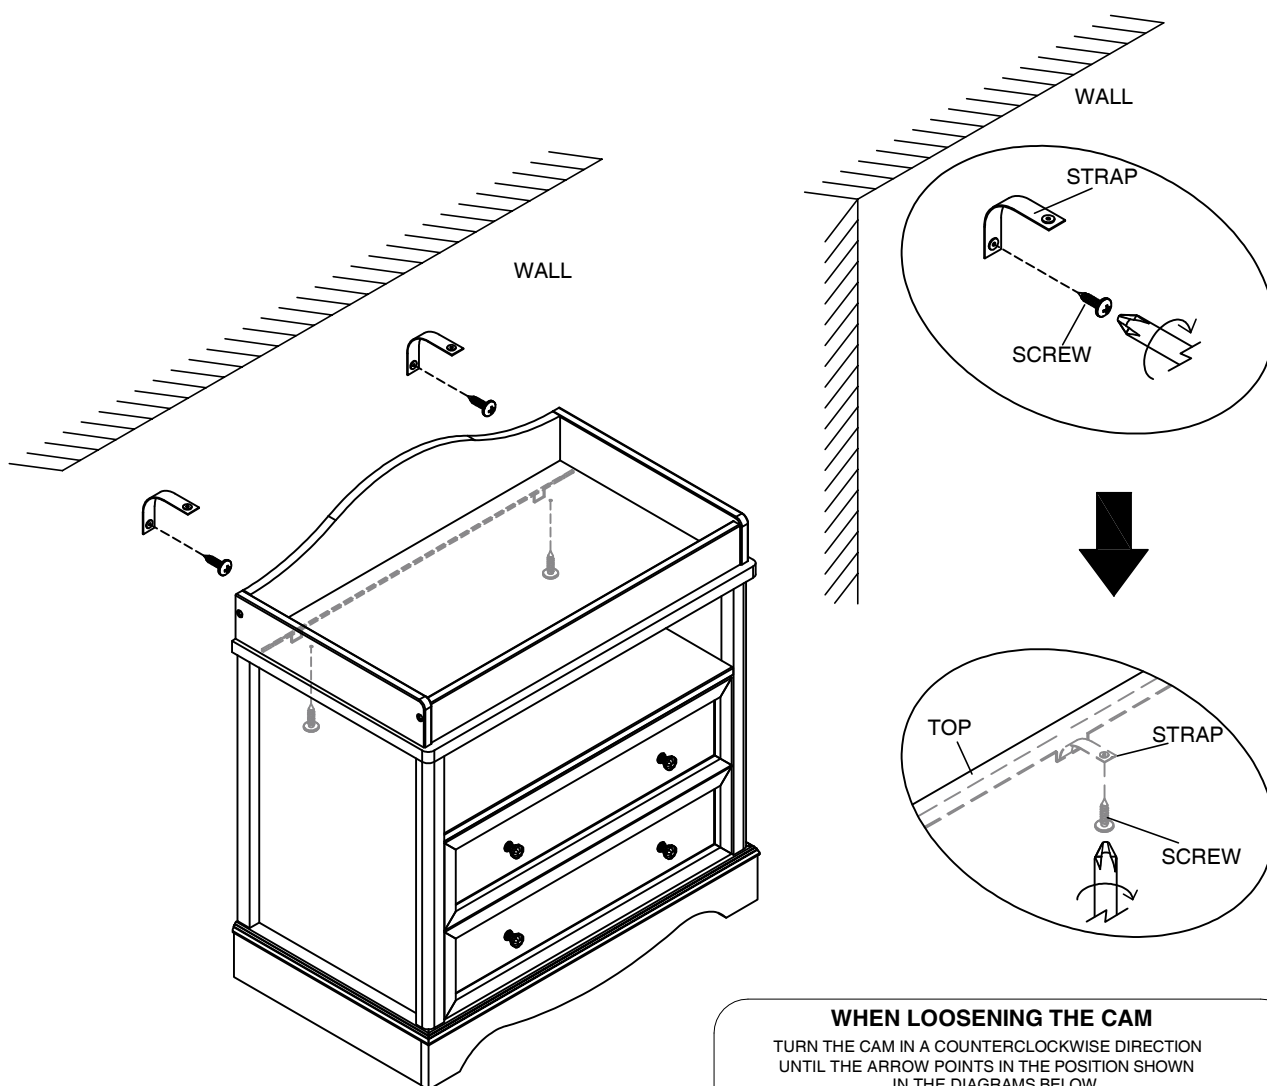

WHEN LOOSENING THE CAM

TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



MAXIMUM
LOCK



TURN
TO UNLOCK



UNLOCKED


T39	N/A	2	
S41	Ø4 x 16mm	2	 not supplied

next

AMELIA CHANGING UNIT

404759

 Actual product size
H92.5 x W83 x D49cm

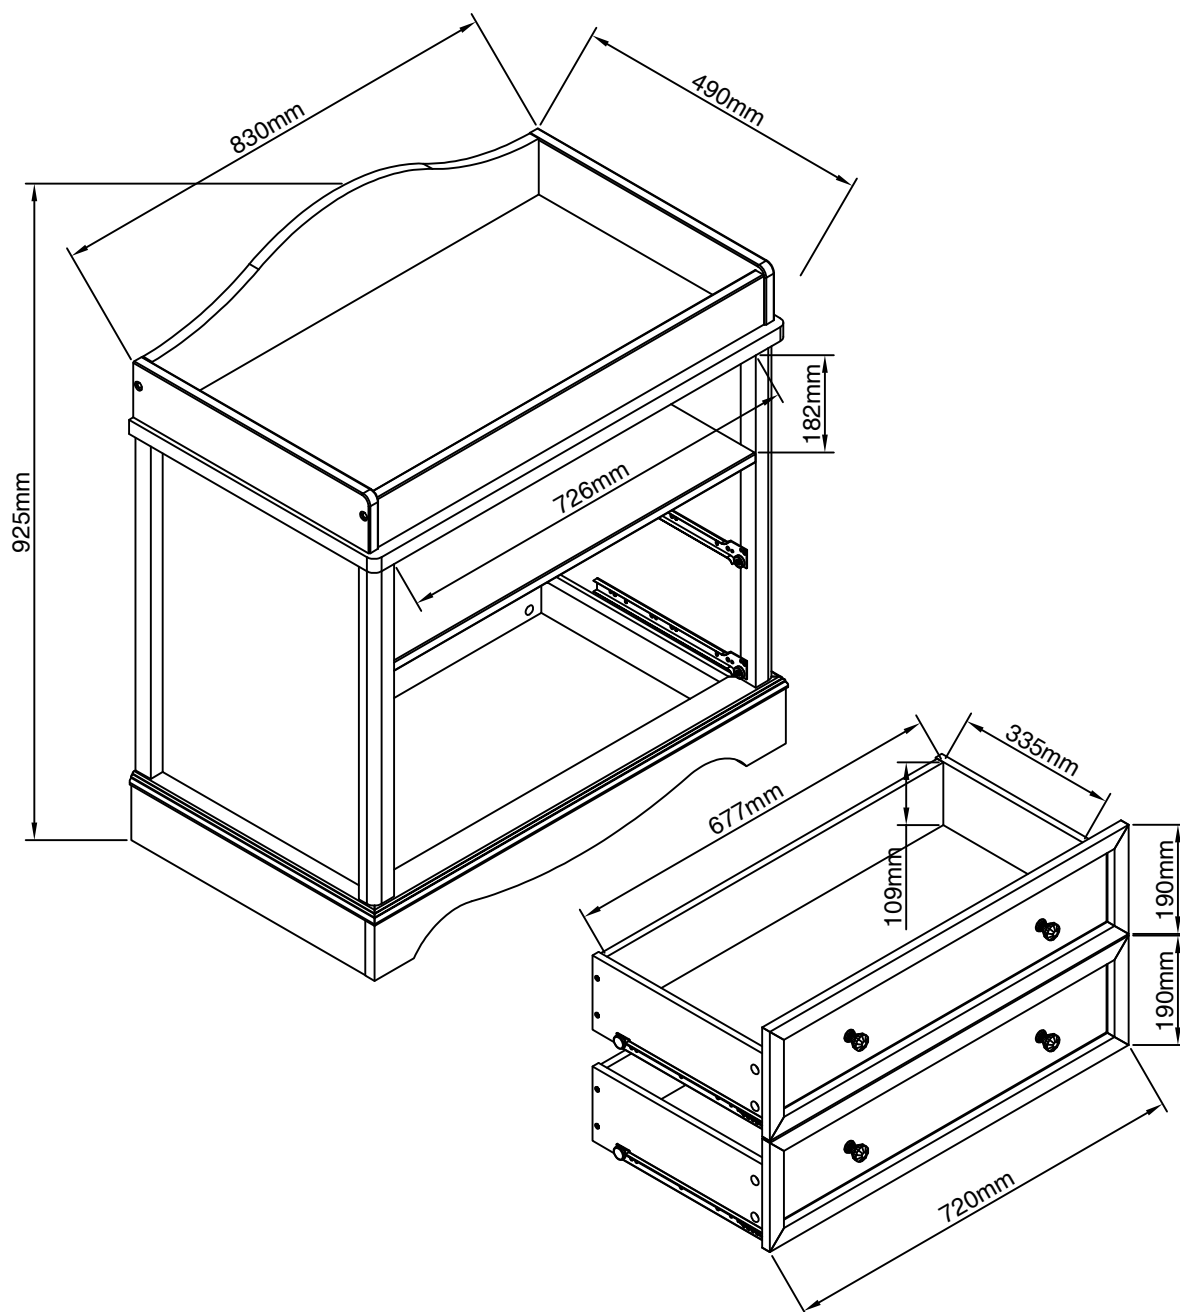

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk