


NEXT

MANGO TRUMPET SIDE DARK -425157

Assembly instructions

Actual product size
H41 x W35 x D35 cm

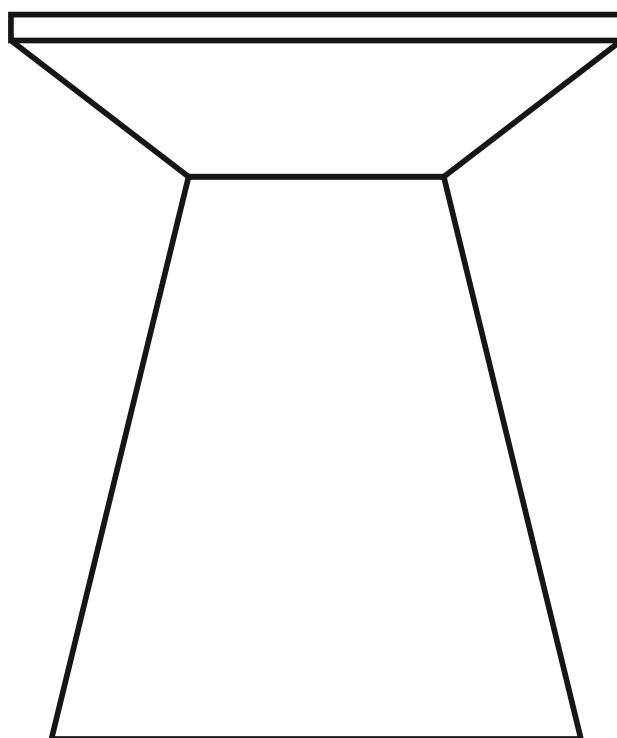

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

MANGO TRUMPET SIDE DARK 425157

Assembly instructions

BEFORE YOU START

Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space. Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly. Carefully check that you have all the parts before beginning assembly. Due to the size of the product we recommend that it is assembled in the room intended for use. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight. Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Dont's

When moving furniture never drag the pieces across the floor, as this will cause damage to the joints. Apply Adhesive substrates for example, sticky tape to the product. Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Warnings

We suggest you retain these instructions for future reference. Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm, level ground. Please periodically check all fittings and re-tighten as necessary. Please do not sit or stand on your table. Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the color. Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at
Home Customer Services
Next Retail Ltd.
Desford Road, Leicester,
LE19 4AT

To view our full furniture range
please visit www.next.co.uk

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

NEXT

MANGO TRUMPET SIDE DARK 425157 Assembly instructions

Actual product size
H41 x W35 x D35 cm

