
ARCH TRIPLE WARDROBE

458968 Assembly instructions

Actual product size

H182x W120x D54cm

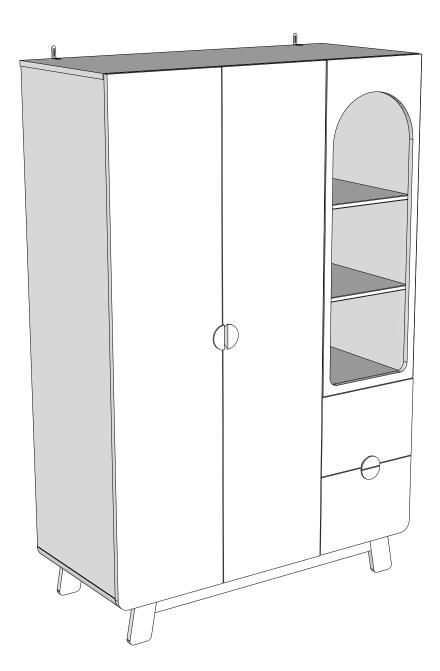

Need Help?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999



BEFORE YOU START

Number of people required to assemble

Two people are required to assemble this item



Time to assemble: 30 minutes



Tools required



not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage,

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.


Never allow any kind of liquid to remain on your furniture.

Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

ARCH TRIPLE WARDROBE

458968 Assembly instructions

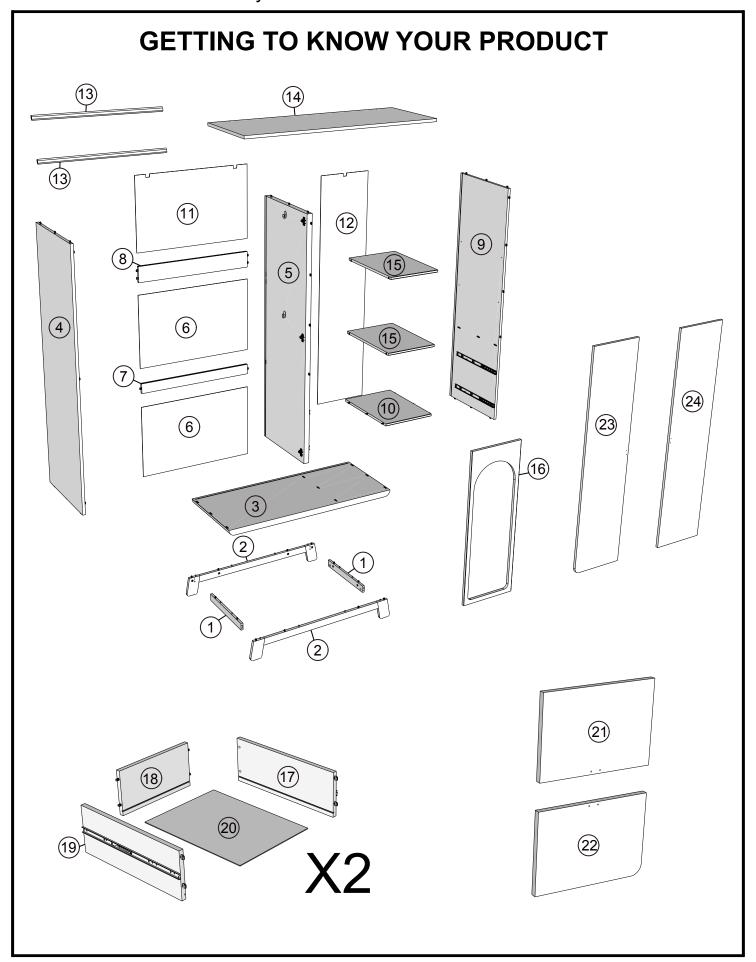


NEXT ARCH TRIPLE WARDROBE 458968 Assembly instructions


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	5x45cm	0.00	2	1
2	14x107cm		2	1
3	52x120cm		1	1
4	52x162cm		1	2
5	52x162cm		1	2
6	49x77.5cm		2	1
7	6.5x76.5cm		1	1
8	10.5x76.5cm		1	1
9	52x162cm		1	2
10	36x50cm		1	1
11	49x77.5cm		1	1
12	37x163cm		1	2
13	3x76cm		2	1


parts.					
Ref	Dimensions	Visual	Qty	Ctn	
14	52x120cm		1	1	
15	36x50cm		2	1	
16	39.5x111cm		1	1	
17	17x45cm		2	1	
18	17x31cm		2	1	
19	17x45cm		2	1	
20	32x44cm		2	1	
21	28x39.5cm		1	1	
22	28x39.5cm		1	1	
23	39.5x168cm		1	2	
24	39.5x168cm		1	2	

NEXT FITTNGS ASSEMBLE INSTRUCTIONS

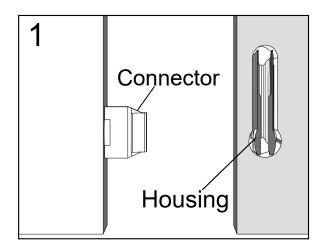

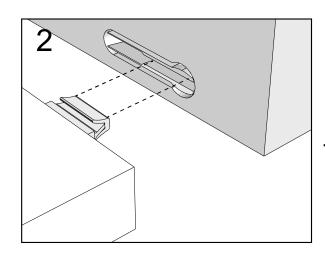

Push connector into housing to join.

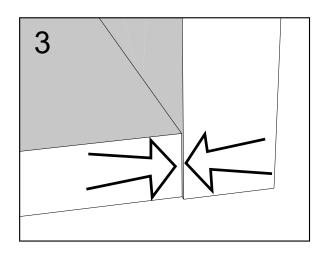

Make sure there is no gap between the panels.


ARCH TRIPLE WARDROBE

458968

Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty	
D6	Ø8 x 30mm	2	2	
B12	B12 Ø7.5 x 33mm		1	
U139	Ø4.5 x 15mm	12	2	
S41	Ø4 x 16mm	2	1	
В3	Ø15 x 12mm	4	2	
Z23	Ø4 x 25mm	8	1	
P5	Ø5 x 19mm	8	1	
B8	Ø8 x 38mm	N/A	2	

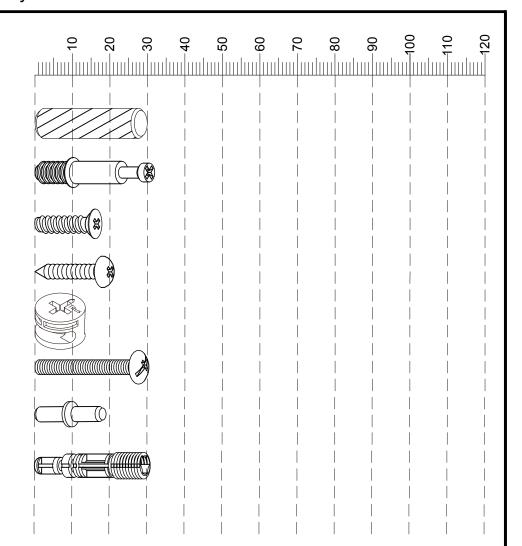

Fixtures and fittings supplied (not to scale)

Tixtures and fittings supplied (not to soule)					
Ref	Dimensions	Qty	Spare Qty	Visual	
N7	N/A	2	N/A		
C14	N/A	6	N/A		
T38	N/A	18	2		
E63	N/A	4	N/A		

ARCH TRIPLE WARDROBE

458968

Assembly instructions 1 (2) B12 Ø7.5 x 33mm 2

Ø15 x 12mm


ВЗ


PH2

ARCH TRIPLE WARDROBE

458968 Assembly instructions

3

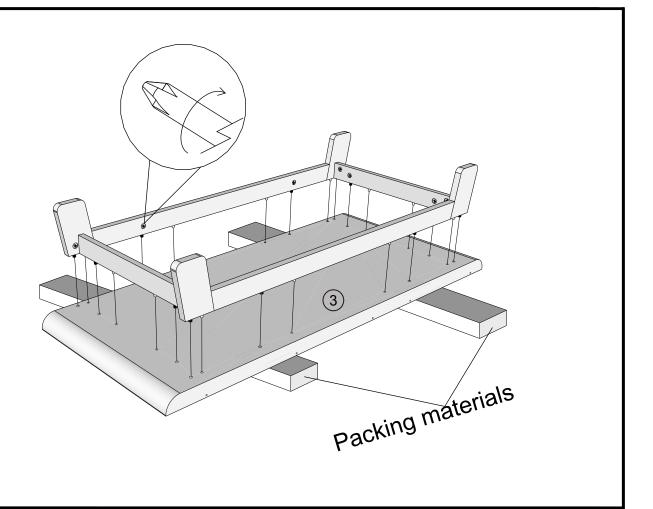


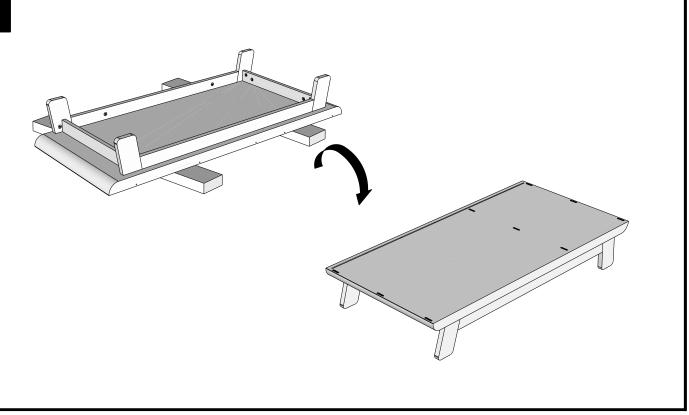


ARCH TRIPLE WARDROBE

458968 Assembly instructions

5

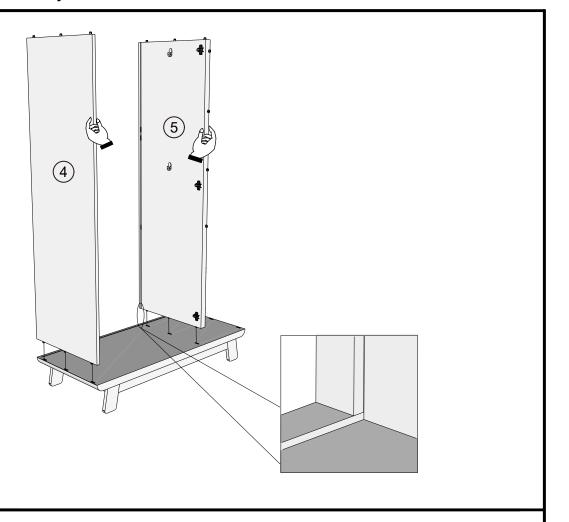


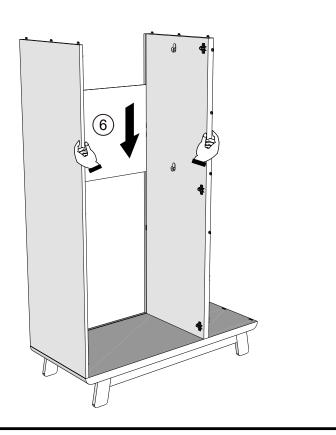


ARCH TRIPLE WARDROBE


458968 Assembly instructions

7

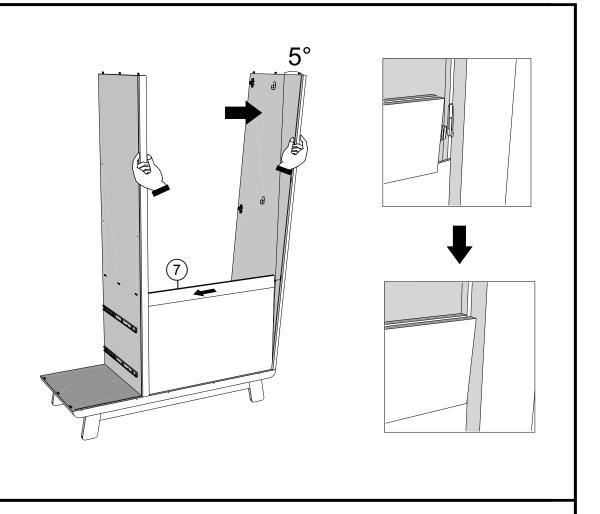

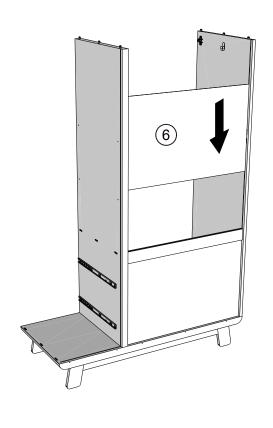


NEXT ARCH TRIPLE WARDROBE 458968 Assembly instructions

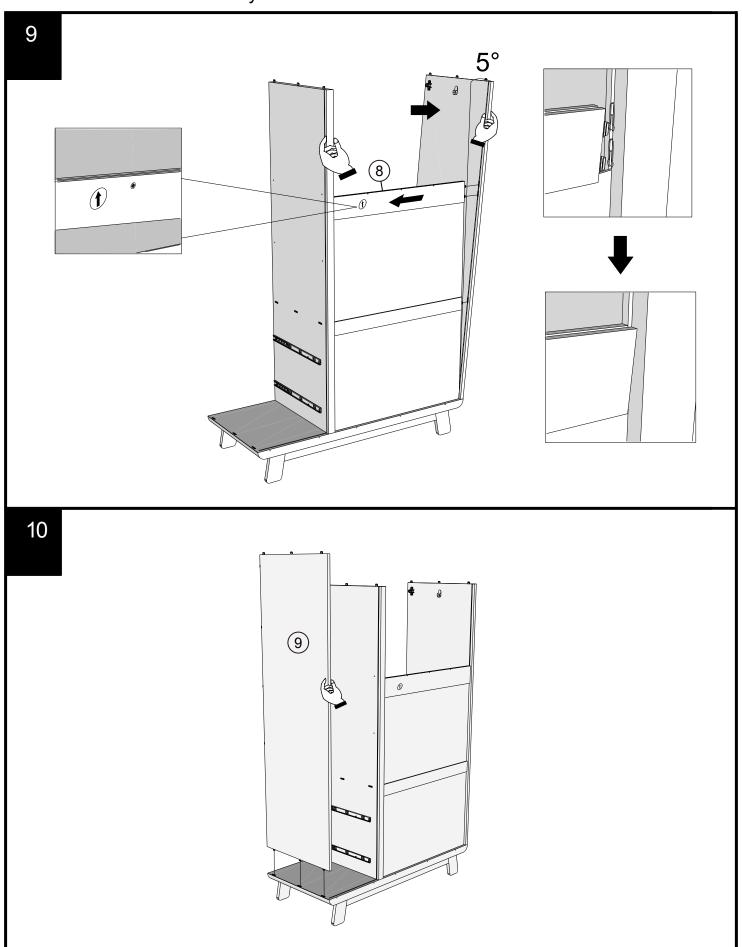


ARCH TRIPLE WARDROBE

458968 Assembly instructions


11

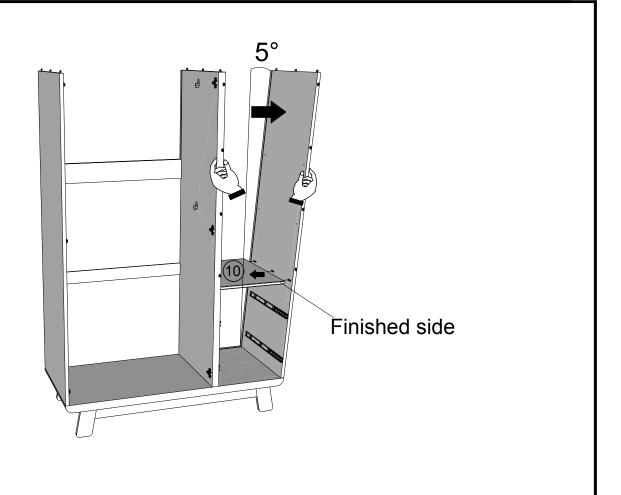

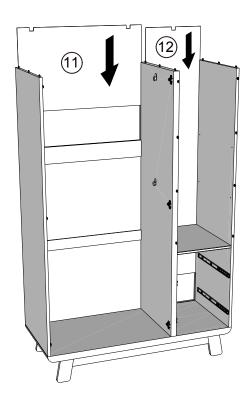

ARCH TRIPLE WARDROBE

458968 Assembly instructions

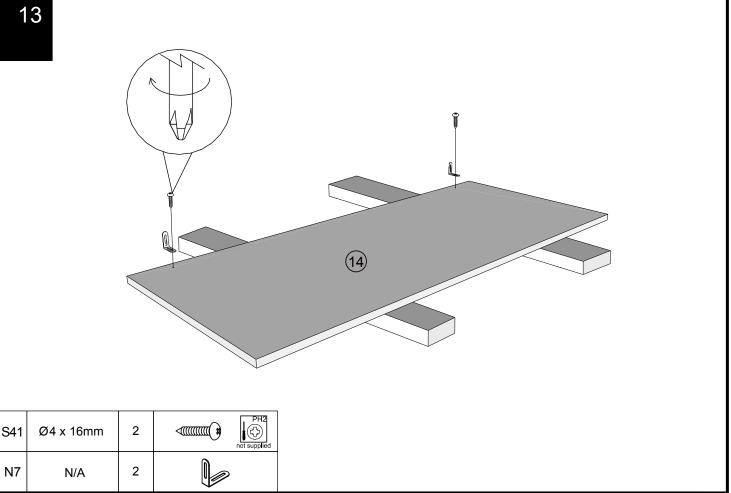





NEXT ARCH TRIPLE WARDROBE 458968 Assembly instructions

15



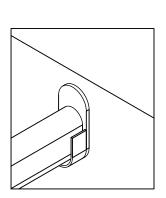

16

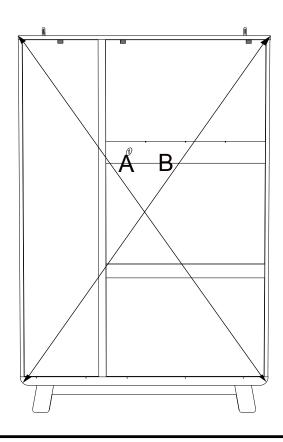

A=B

ARCH TRIPLE WARDROBE

458968


Assembly instructions

17

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X"L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).


Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB:Wall fixings are not included-Please source suitable fixing for your wall type. If in doubt please consult a qualified trades person.

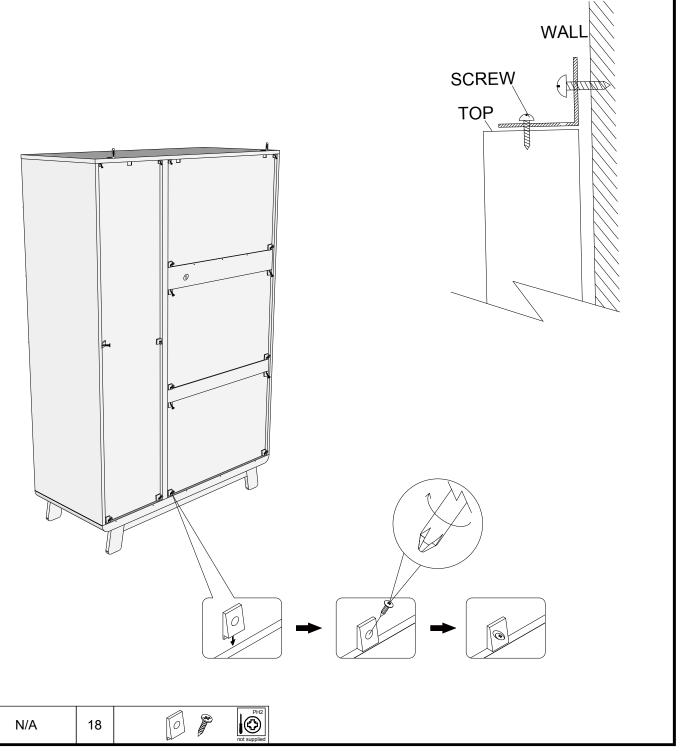


T38

NEXT ARCH TRIPLE WARDROBE 458968 Assembly instructions

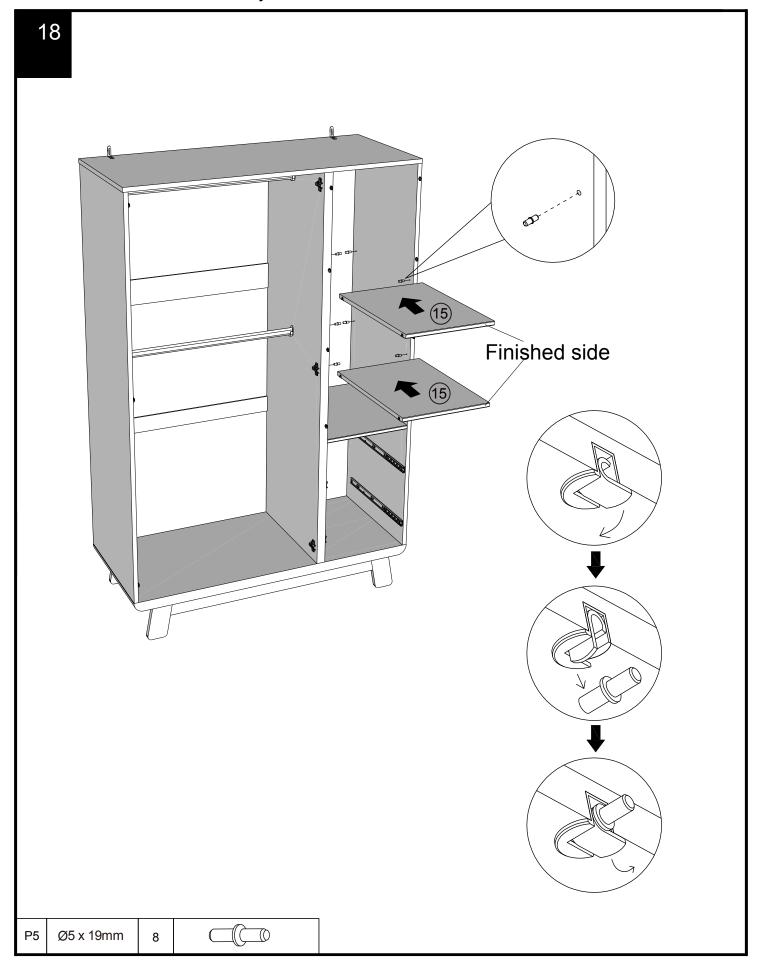

ARCH TRIPLE WARDROBE

458968 Assembly instructions

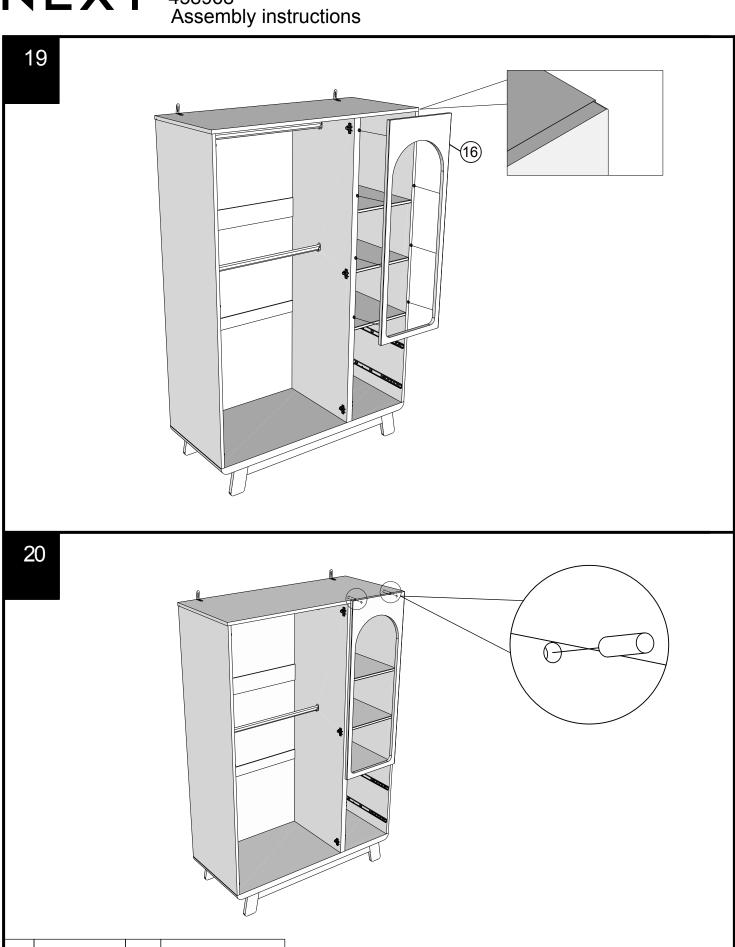

Ø8 x 30mm

D6

ARCH TRIPLE WARDROBE

458968 Assembly instructions


21 (18) **SLOTS ALIGNED** 22 20


NEXT ARCH TRIPLE WARDROBE

Assembly instructions

23


Note: Drawer will be permanently assembled once panel 21 and panel 22 are fitted.

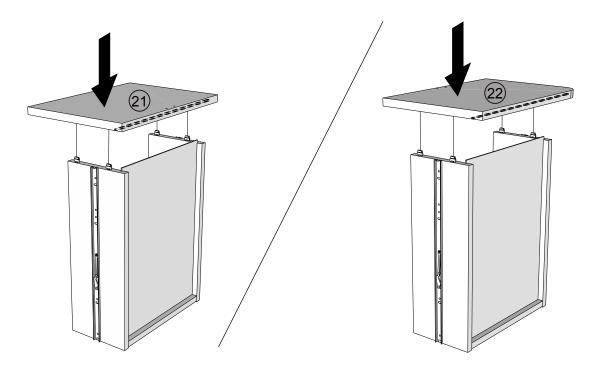

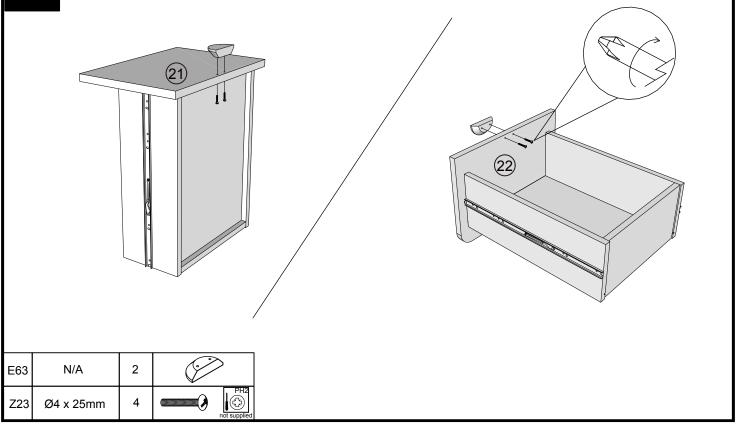


ARCH TRIPLE WARDROBE

458968 Assembly instructions

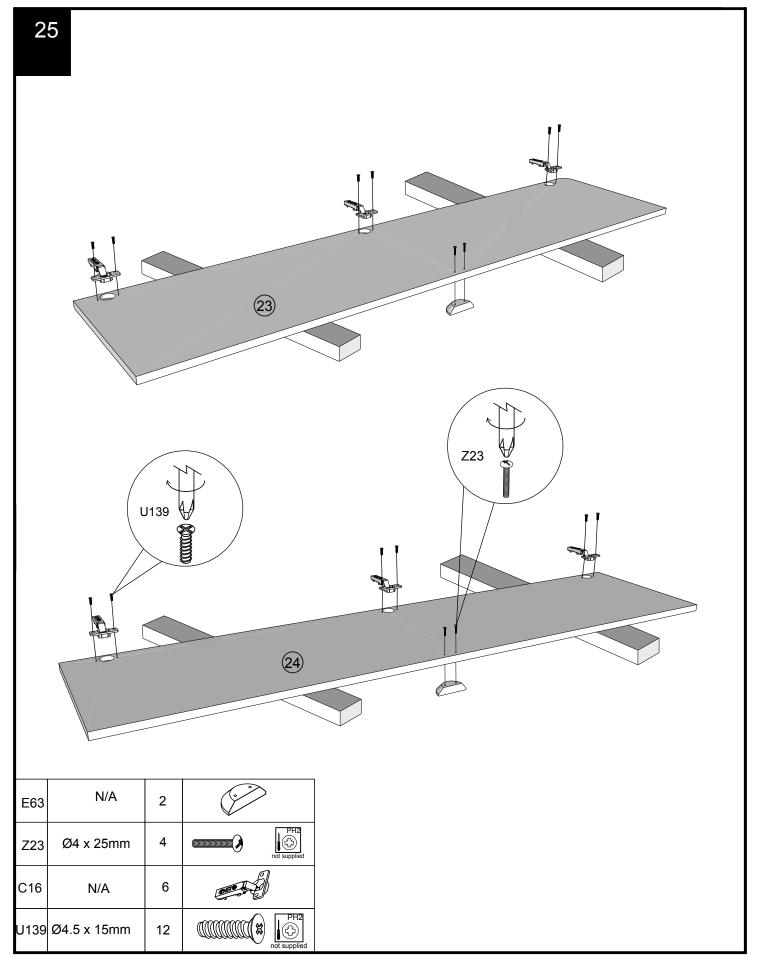

ARCH TRIPLE WARDROBE


458968 Assembly instructions

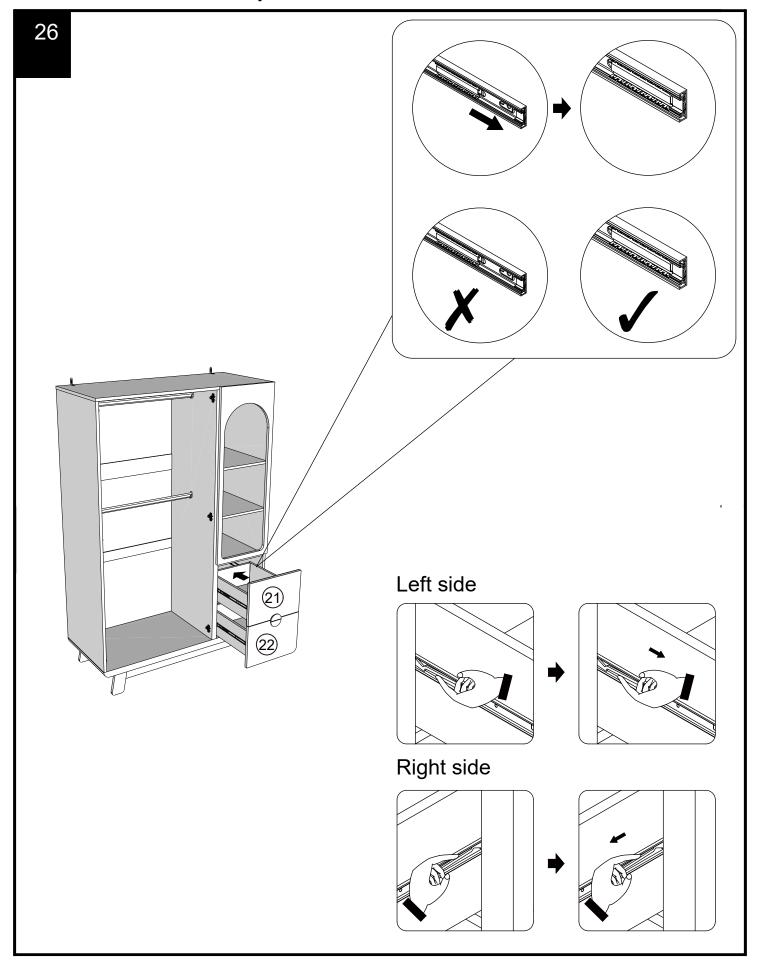

ARCH TRIPLE WARDROBE


458968 Assembly instructions

27

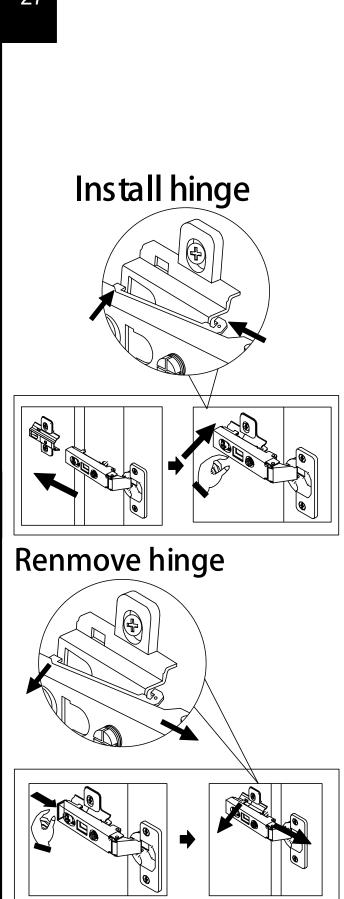



Adjust Hinge Position

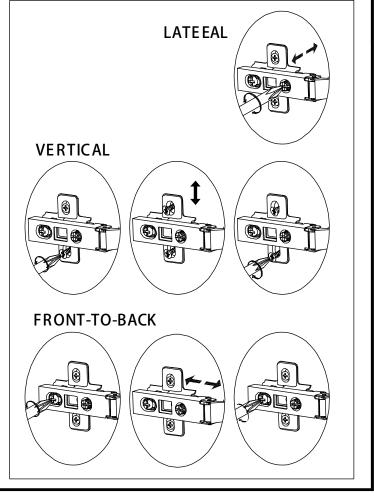

ARCH TRIPLE WARDROBE

458968 Assembly instructions

To disassemble:
Step1: Remove the plastic wedge (T38) from the back panel, and remove the screws from the back of panel (3) and the rear of the cross bar (8);


29

Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels;


Step2: Press down the back panel so it

is clear of the top panel slot;



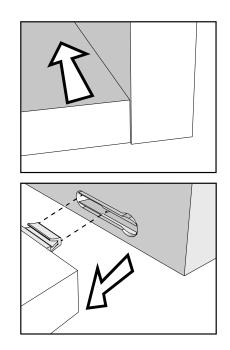

NEXT ARCH TRIPLE WARDROBE 458968

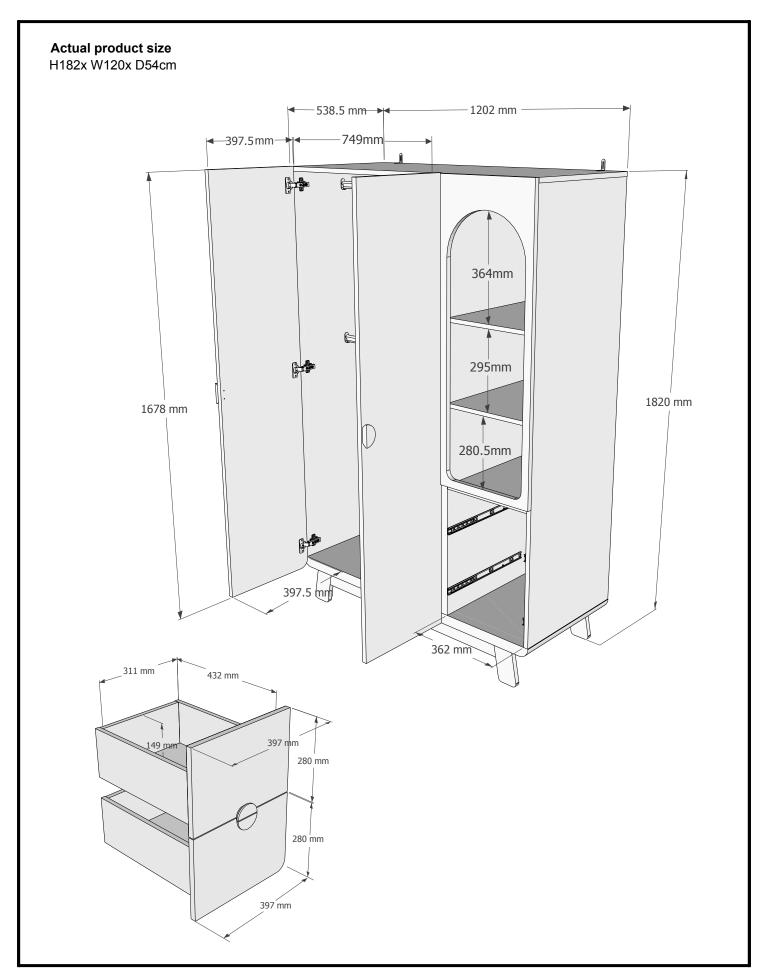

NEXT ARCH TRIPLE WARDROBE 458968

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services Next Retail Ltd. Desford Road, Leicester, LE19 4AT

To view our full furniture range please visit www.next.co.uk