

NEXT

 
BRONX WALL MOUNTED TV UNIT

459600

Assembly instructions

Actual product size

H32x W150x D35cm

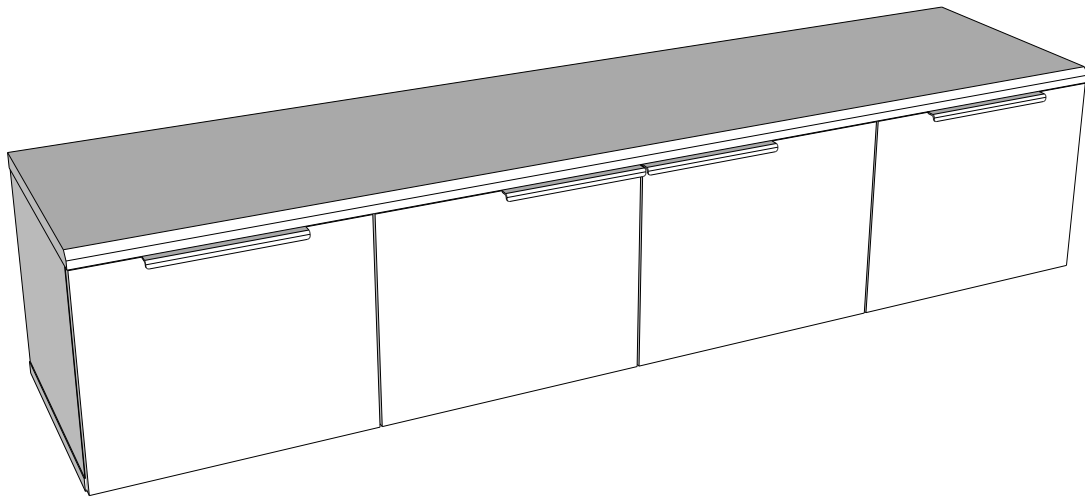

Need Help ?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

NEXT

BRONX WALL MOUNTED TV UNIT

459600

Assembly instructions

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

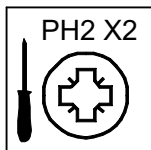

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

 
NEXT

BRONX WALL MOUNTED TV UNIT

459600

Assembly instructions

 
 
 
 
 
 

 
 
 

 
GETTING TO KNOW YOUR PRODUCT

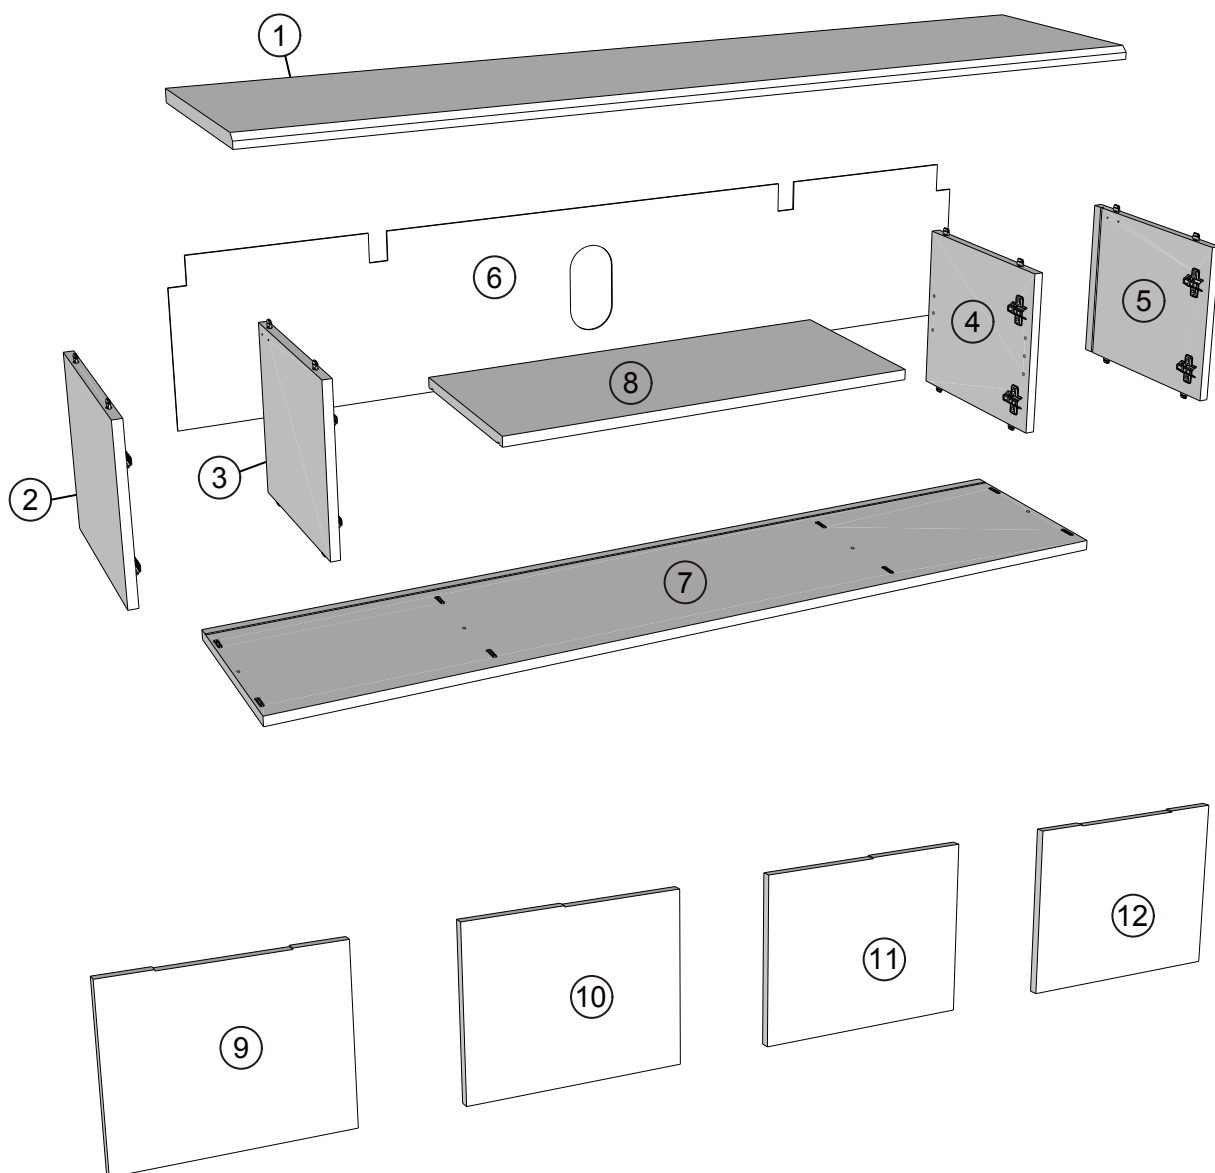


NEXT

BRONX WALL MOUNTED TV UNIT 459600 Assembly instructions


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	35x150cm		1	1
2	28.5x33cm		1	1
3	28.5x31cm		1	1
4	28.5x31cm		1	1
5	28.5x33cm		1	1
6	29x147.5cm		1	1
7	33.5x150cm		1	1
8	31x71.5cm		1	1
9	29.5x37cm		1	1
10	29.5x37cm		1	1
11	29.5x37cm		1	1
12	29.5x37cm		1	1

NEXT FITTINGS ASSEMBLE INSTRUCTIONS

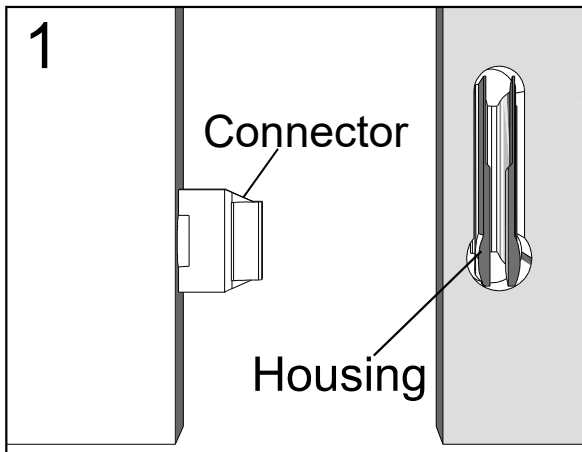

Push connector into housing to join.

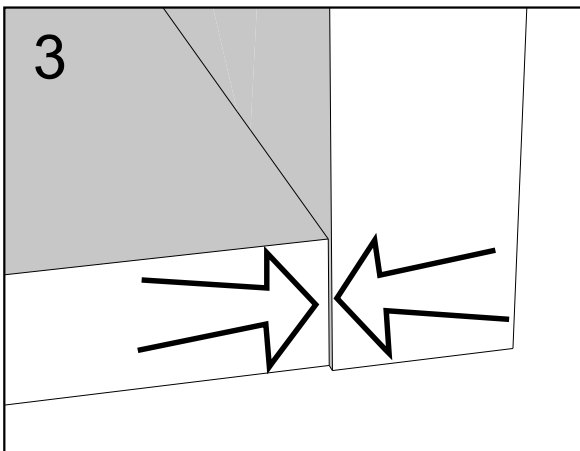

Make sure there is no gap between the panels.

NEXT


BRONX WALL MOUNTED TV UNIT

459600

Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
U139	Ø4.5 x 15mm	16	2
P3	Ø5 x 16mm	4	1
S42	Ø4 x 16mm	6	1
U165	Ø4 x 28mm	8	N/A
Y8	Ø6 x 50mm	4	1

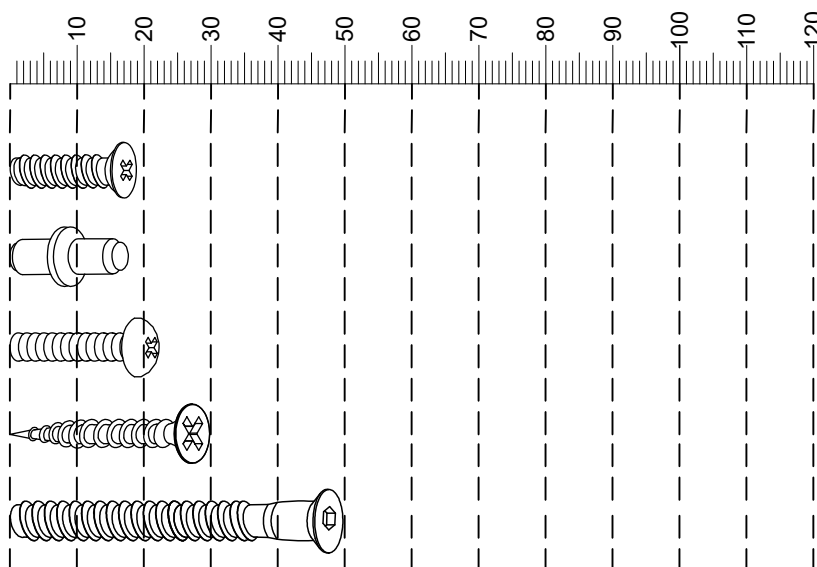 

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T38	N/A	8	1	
C11	N/A	8	N/A	
N16	N/A	2	N/A	
N17	N/A	2	N/A	
E39	N/A	4	N/A	

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
M1	N/A	2	N/A	
M3	N/A	1	N/A	
T1	N/A	1	N/A	

 
NEXT

BRONX WALL MOUNTED TV UNIT


459600

Assembly instructions


1

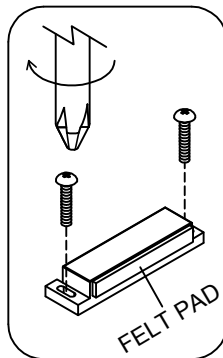

Packing Materials


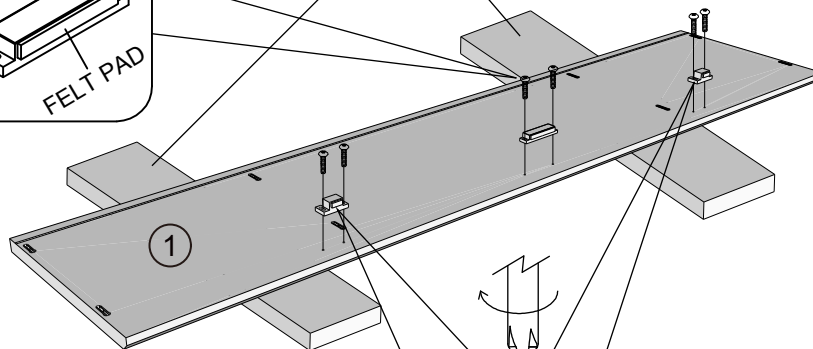 


FELT PAD

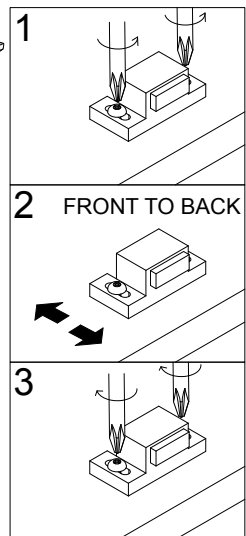 

S42	Ø4 x 16mm	6		 not supplied
M1	N/A	2		
M3	N/A	1		

  2

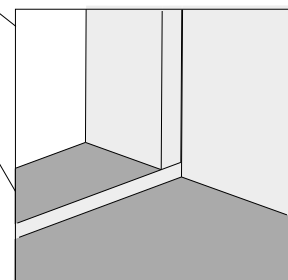
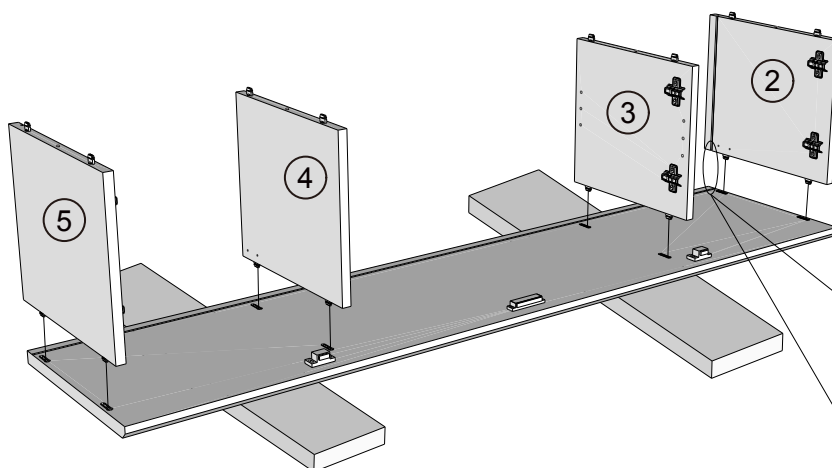






NEXT

  BRONX WALL MOUNTED TV UNIT

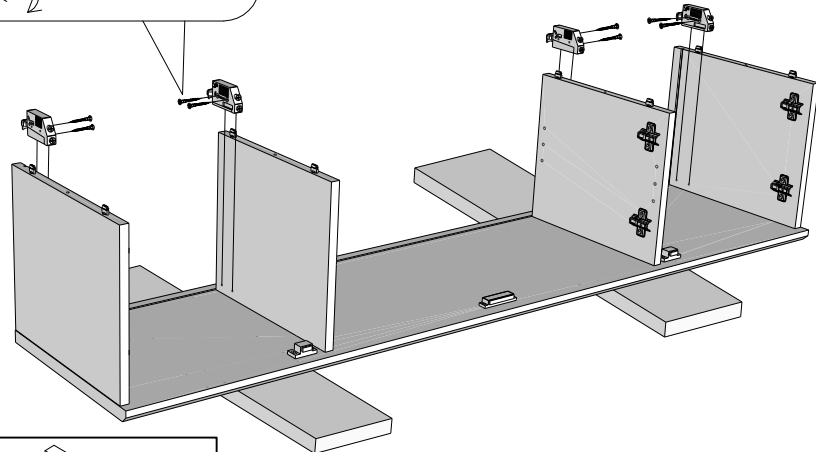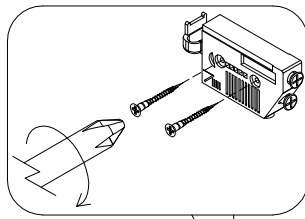
459600
Assembly instructions

3



N16	N/A	2	
N17	N/A	2	
U165	Ø4 x 28mm	8	  not supplied

 4

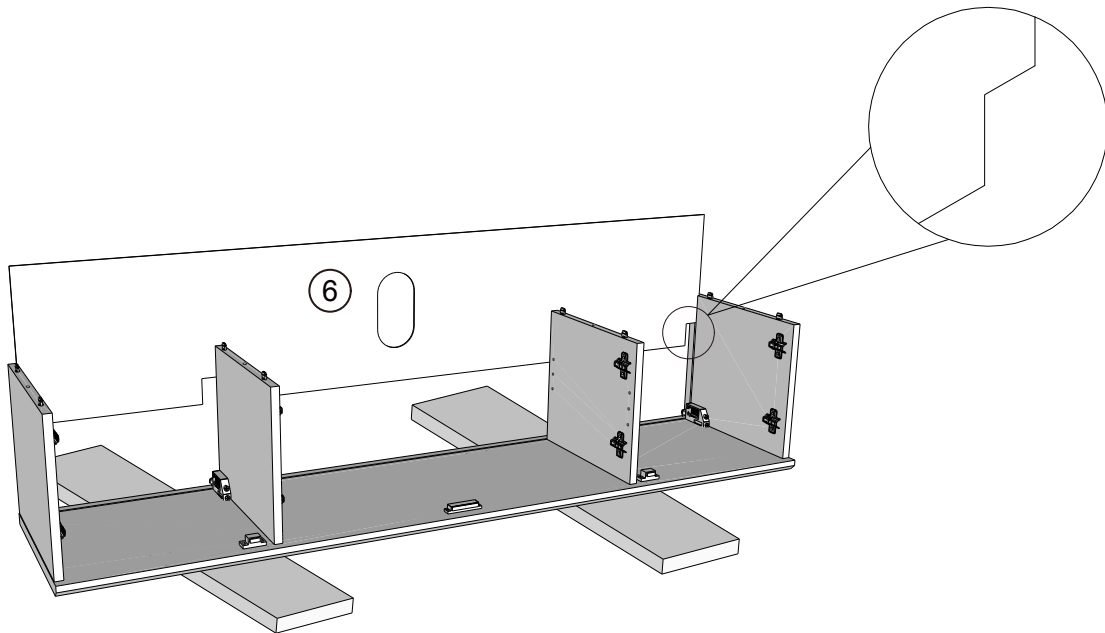




NEXT

BRONX WALL MOUNTED TV UNIT

 
459600
Assembly instructions

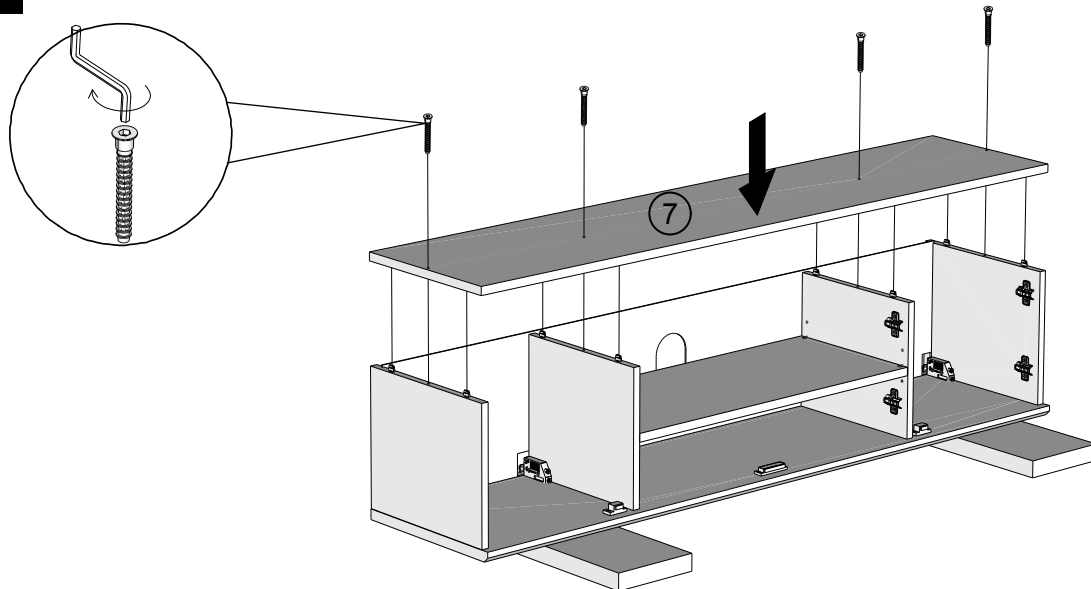5



T1	N/A	1	
Y8	Ø6 x 50mm	4	

 
6

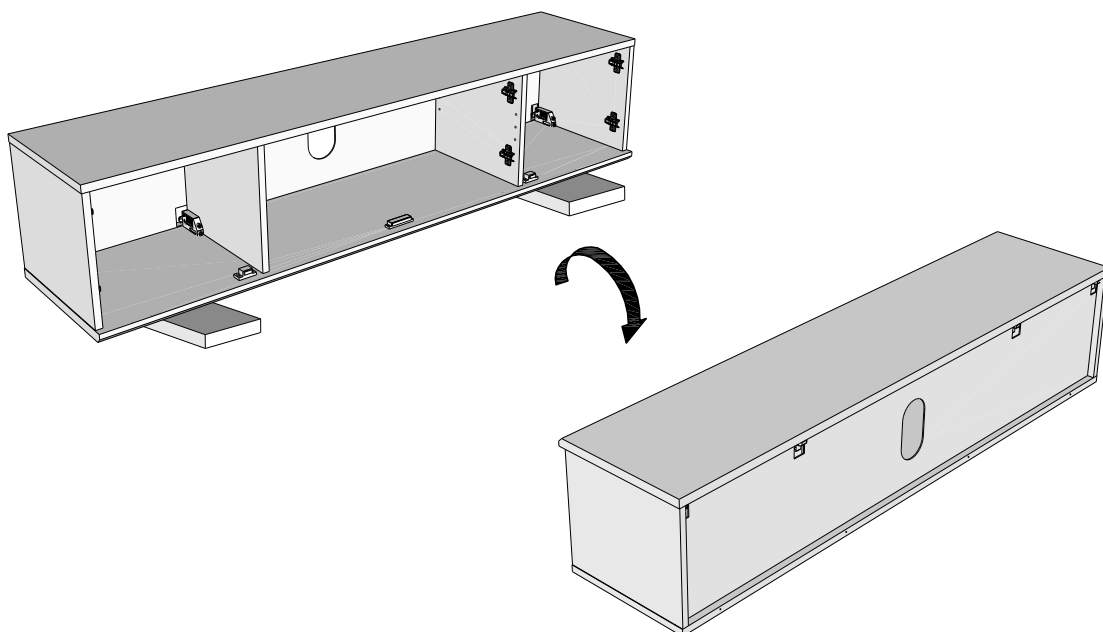

NEXT


BRONX WALL MOUNTED TV UNIT 459600 Assembly instructions

 7

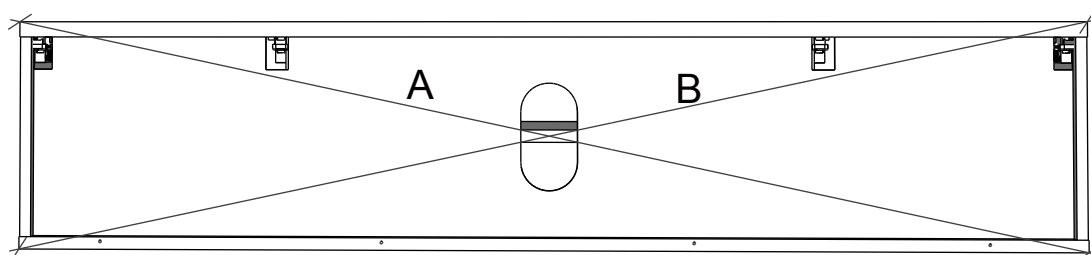

$$A=B$$

 8

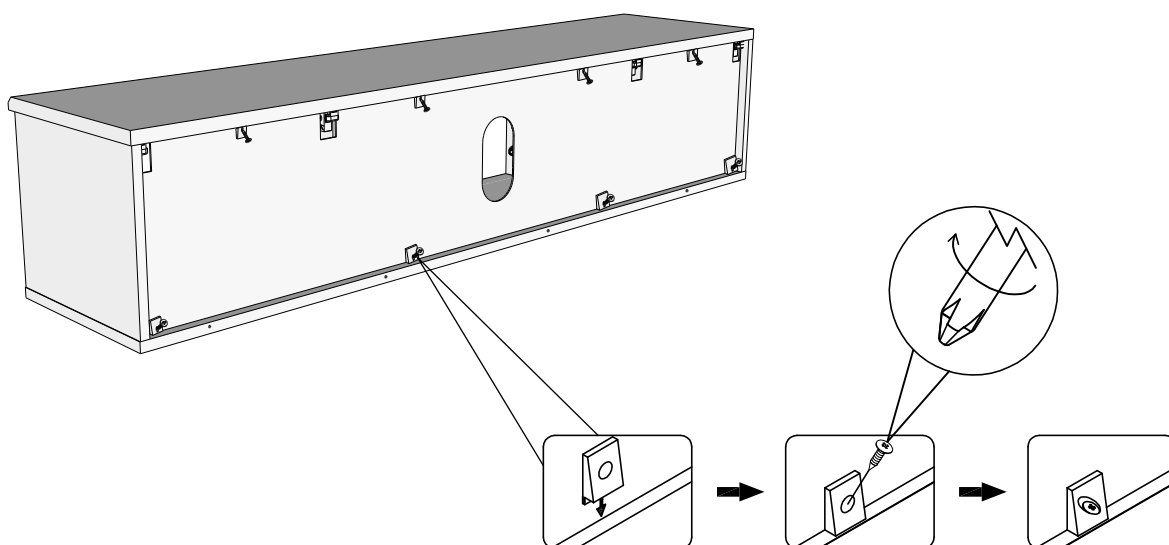

T38

N/A

8



 
not supplied

BRONX WALL MOUNTED TV UNIT

459600


Assembly instructions

9

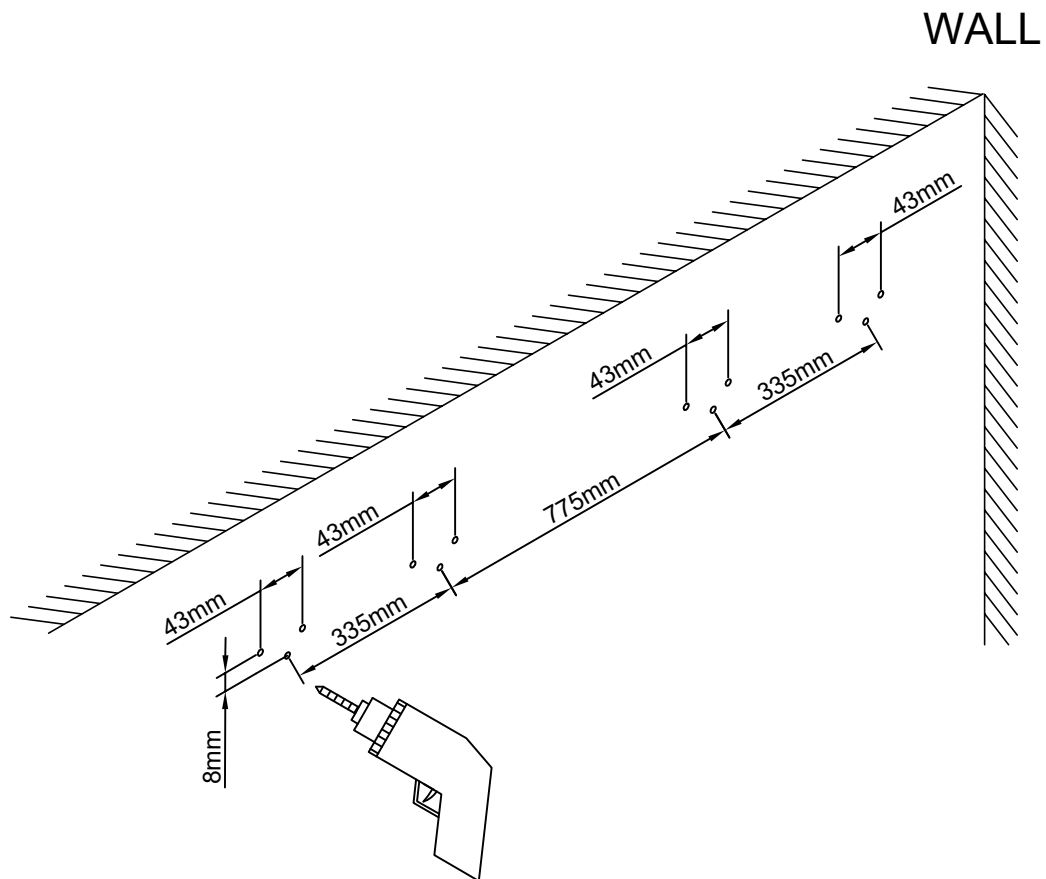

Drill two holes.

 Warning: Always ensure wall area to be drilled is free from hidden electrical wires, water and gas pipes.

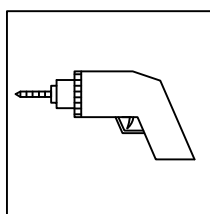

not supplied

NEXT

BRONX WALL MOUNTED TV UNIT

459600

Assembly instructions

 
10

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2 wall fixings the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

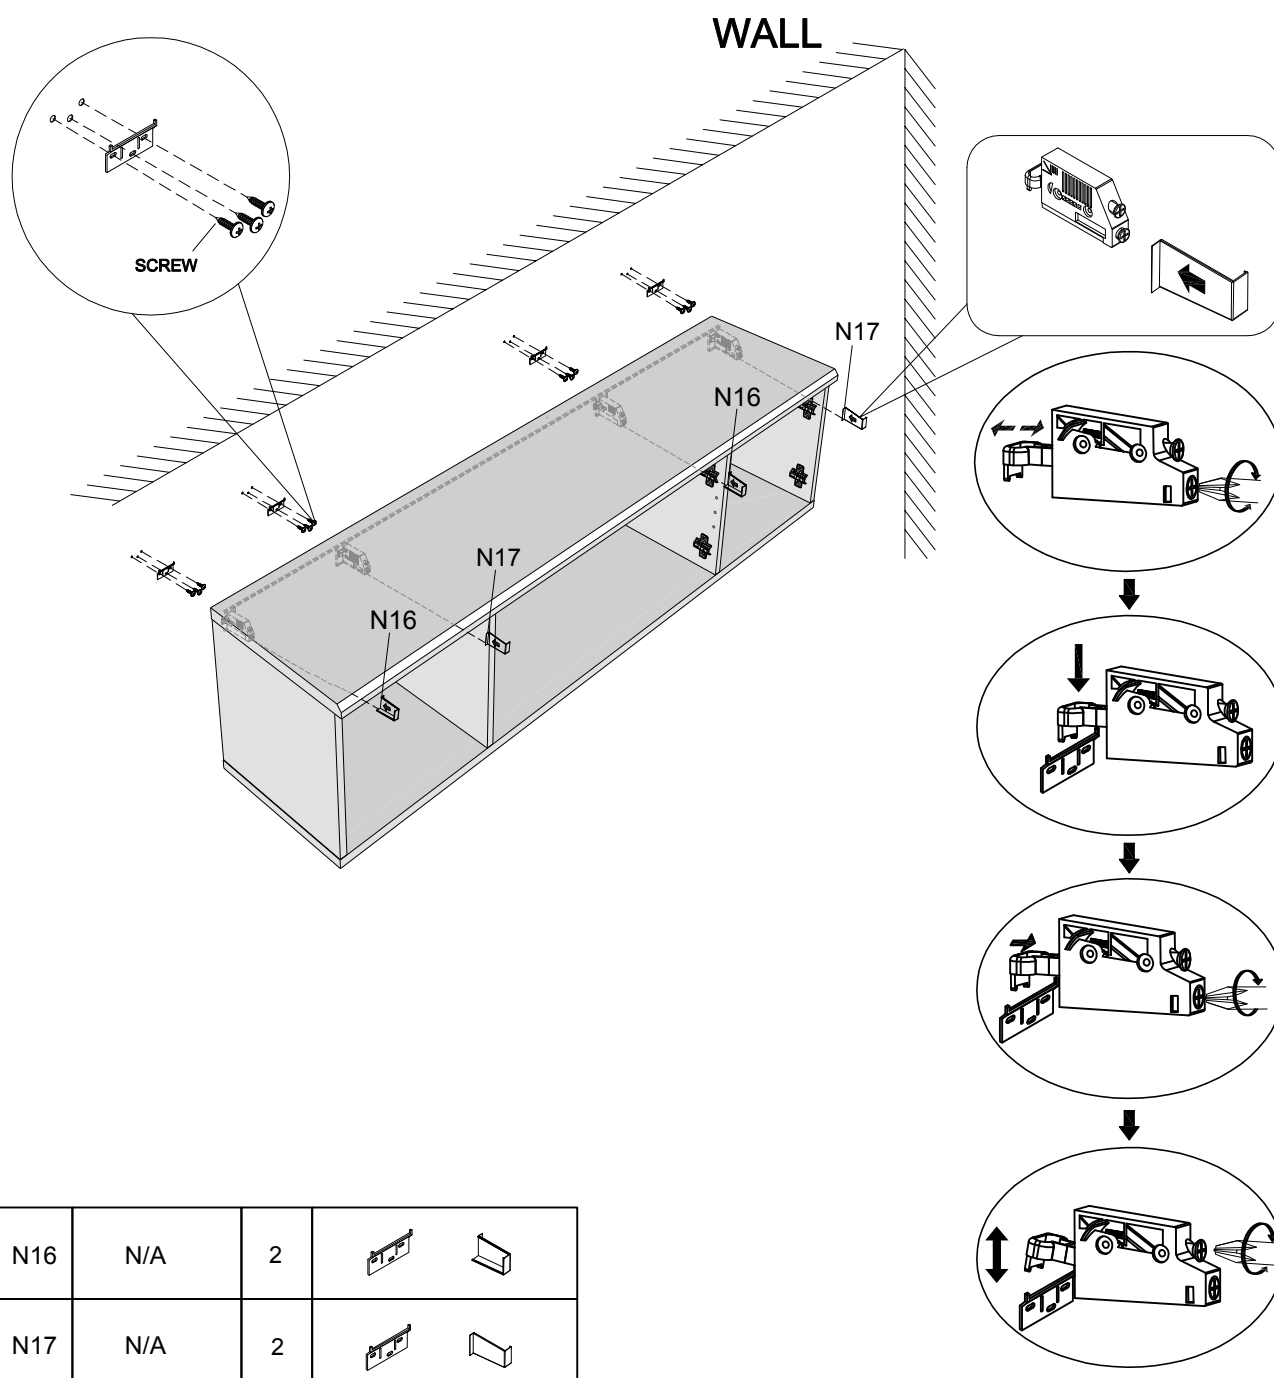


NEXT


BRONX WALL MOUNTED TV UNIT

459600





 
 
Assembly instructions




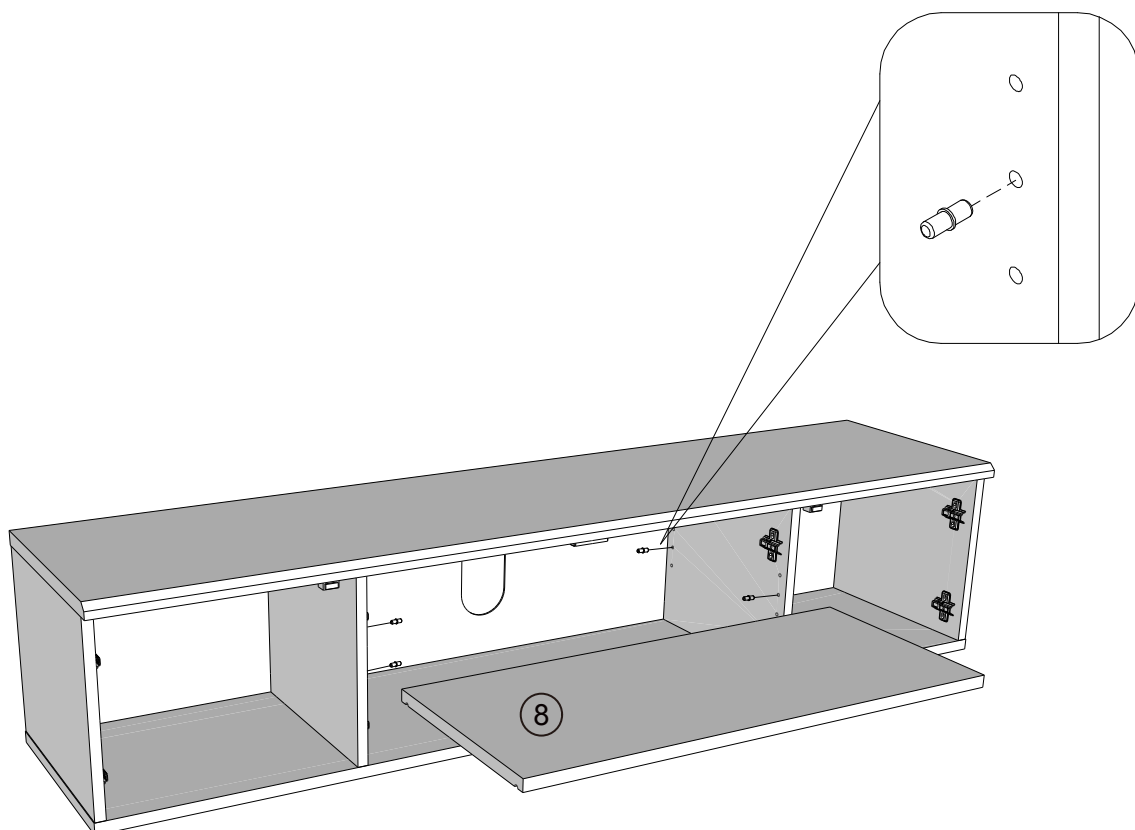

11

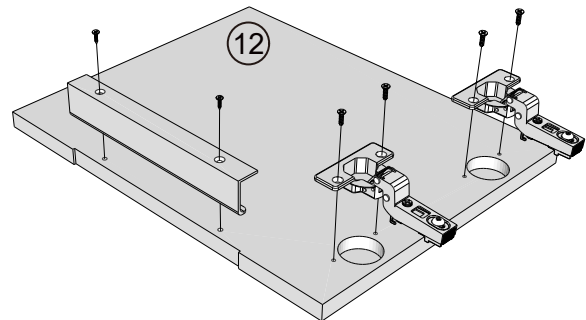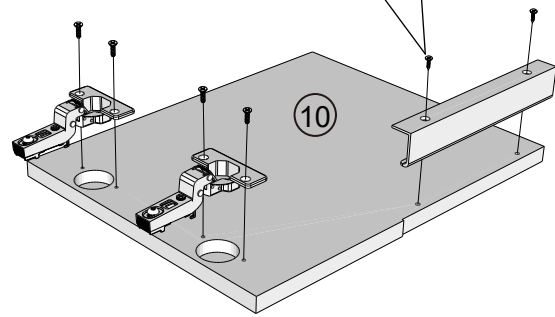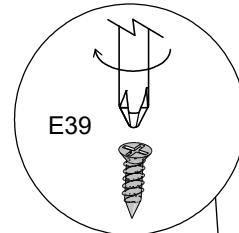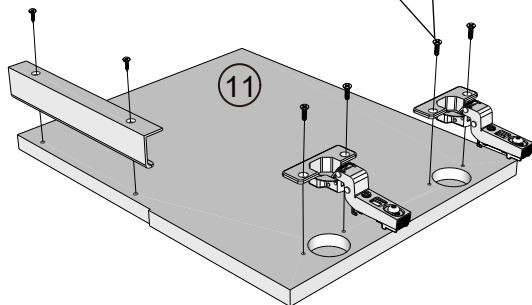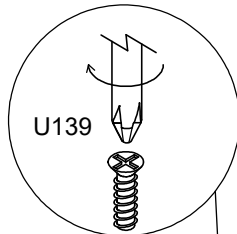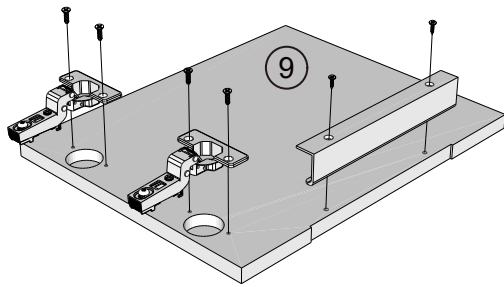      

P3	Ø5 x 16mm	4	
----	-----------	---	---

 12



E39	N/A	4		 not supplied
C11	N/A	8		
U139	Ø4.5 x15mm	16		 not supplied

NEXT

 
 
BRONX WALL MOUNTED TV UNIT

459600



Assembly instructions

13


Install hinge

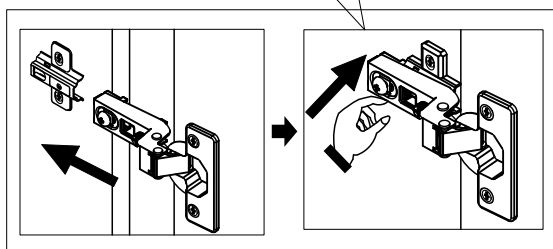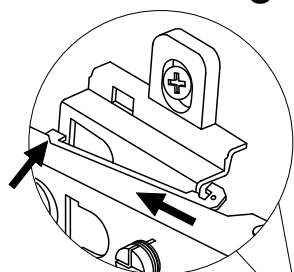

Remove hinge

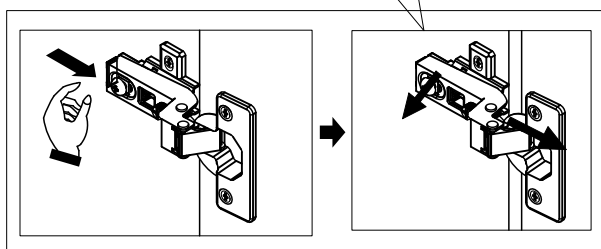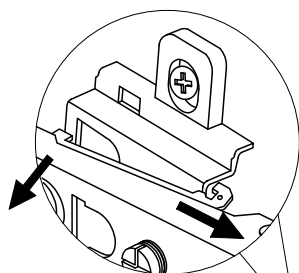  

Adjust Hinge Position

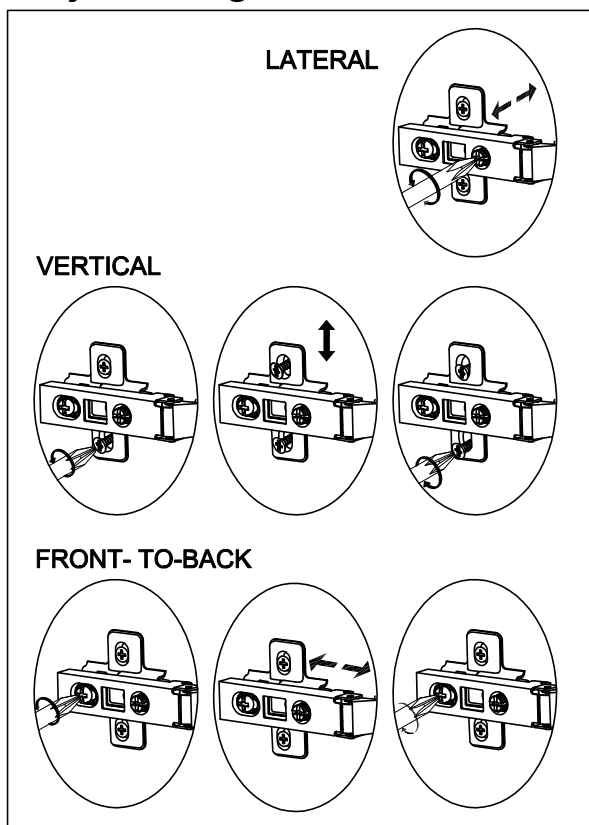 







NEXT BRONX WALL MOUNTED TV UNIT

459600

14

To disassemble:

    
 
 
Step1: Remove the plastic wedge (T38) from the back panel, and remove the screws from the rear of the bottom panel(1);

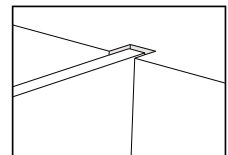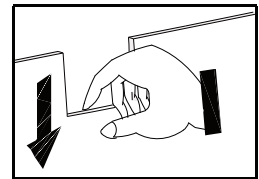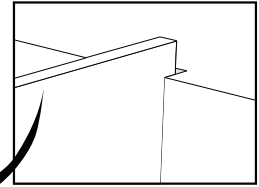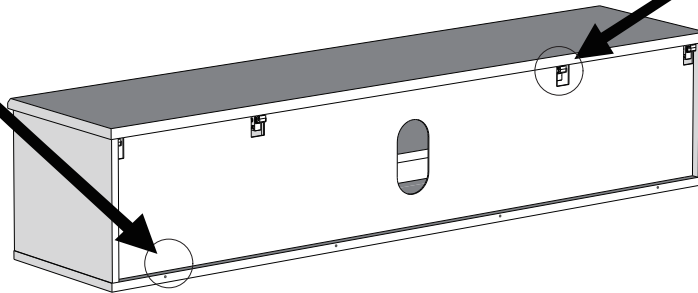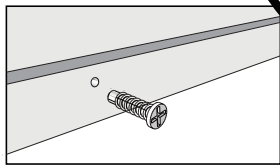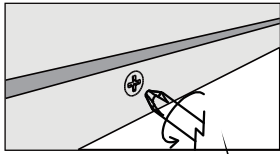

Step2: Press down the back panel so it is clear of the top panel slot;

15

   Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels;

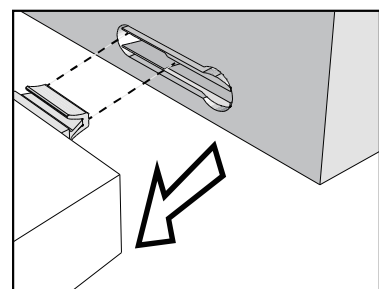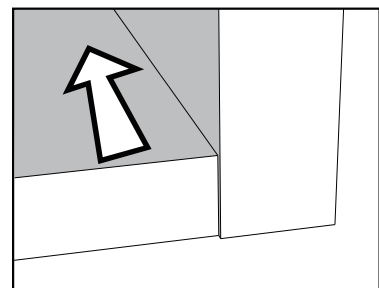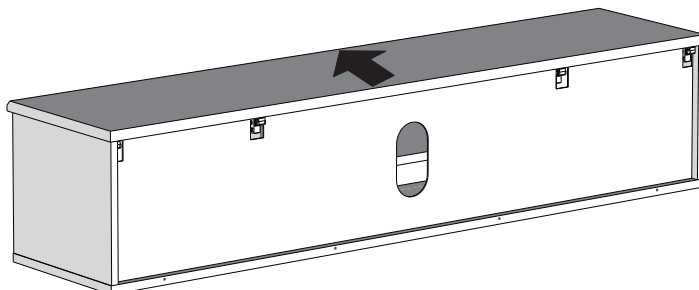


NEXT

BRONX WALL MOUNTED TV UNIT 459600

Actual product size

 H32x W150x D35cm

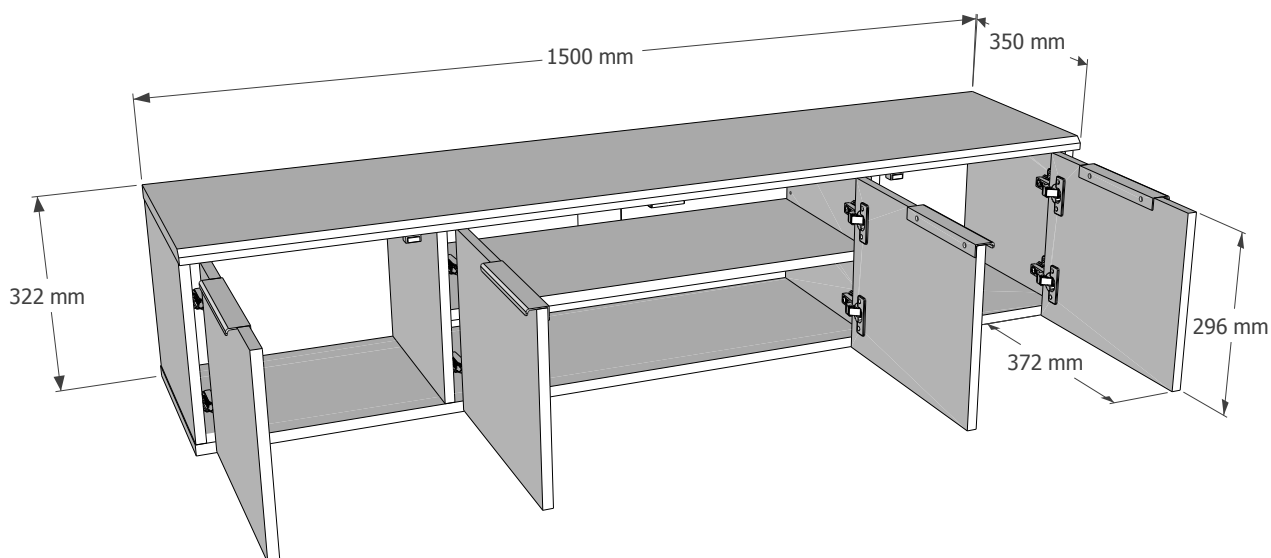

NEXT

BRONX WALL MOUNTED TV UNIT 459600

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk