 


NEXT

BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT
U72144/178233
Assembly instructions

Actual product size

H50.5 x W112 x D40cm

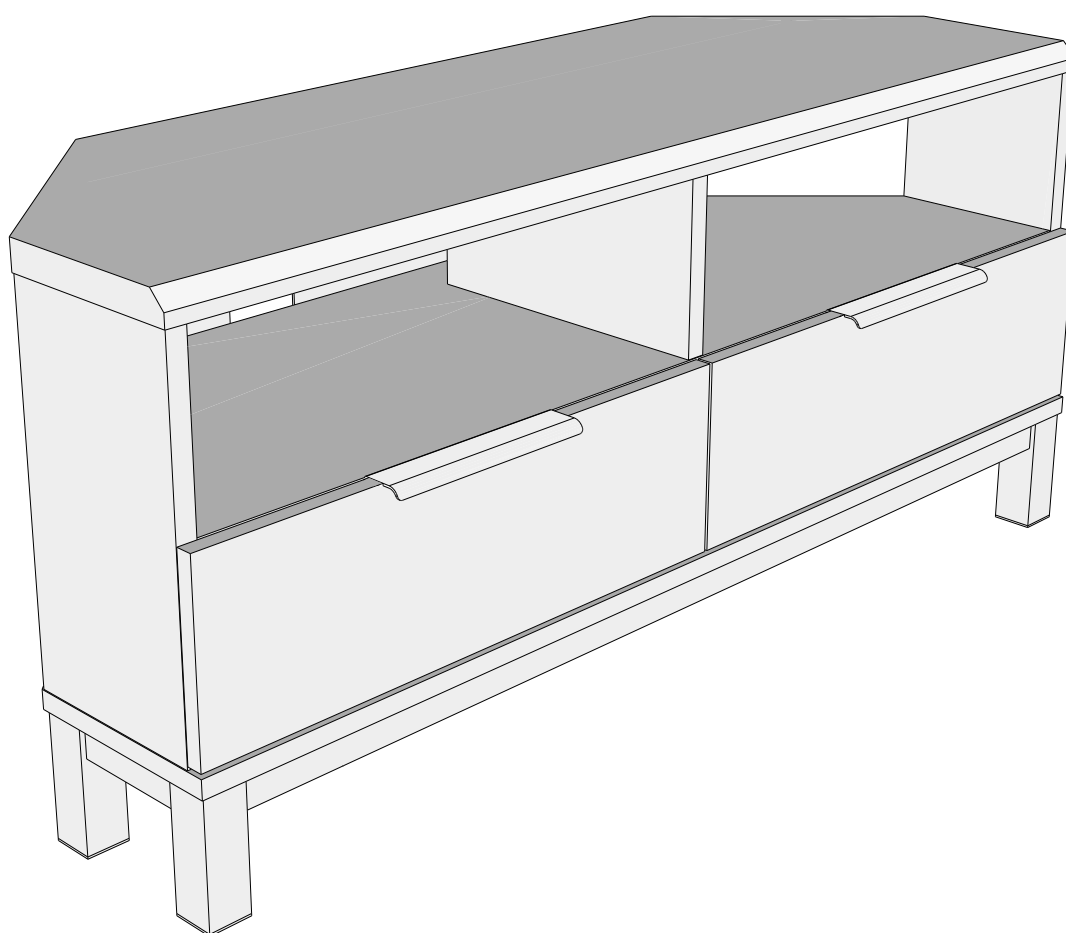

**IMPORTANT -
RETAIN FOR FUTURE REFERENCE**

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

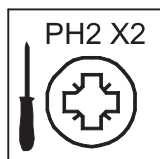

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

 
Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.








Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.







Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

GETTING TO KNOW YOUR PRODUCT


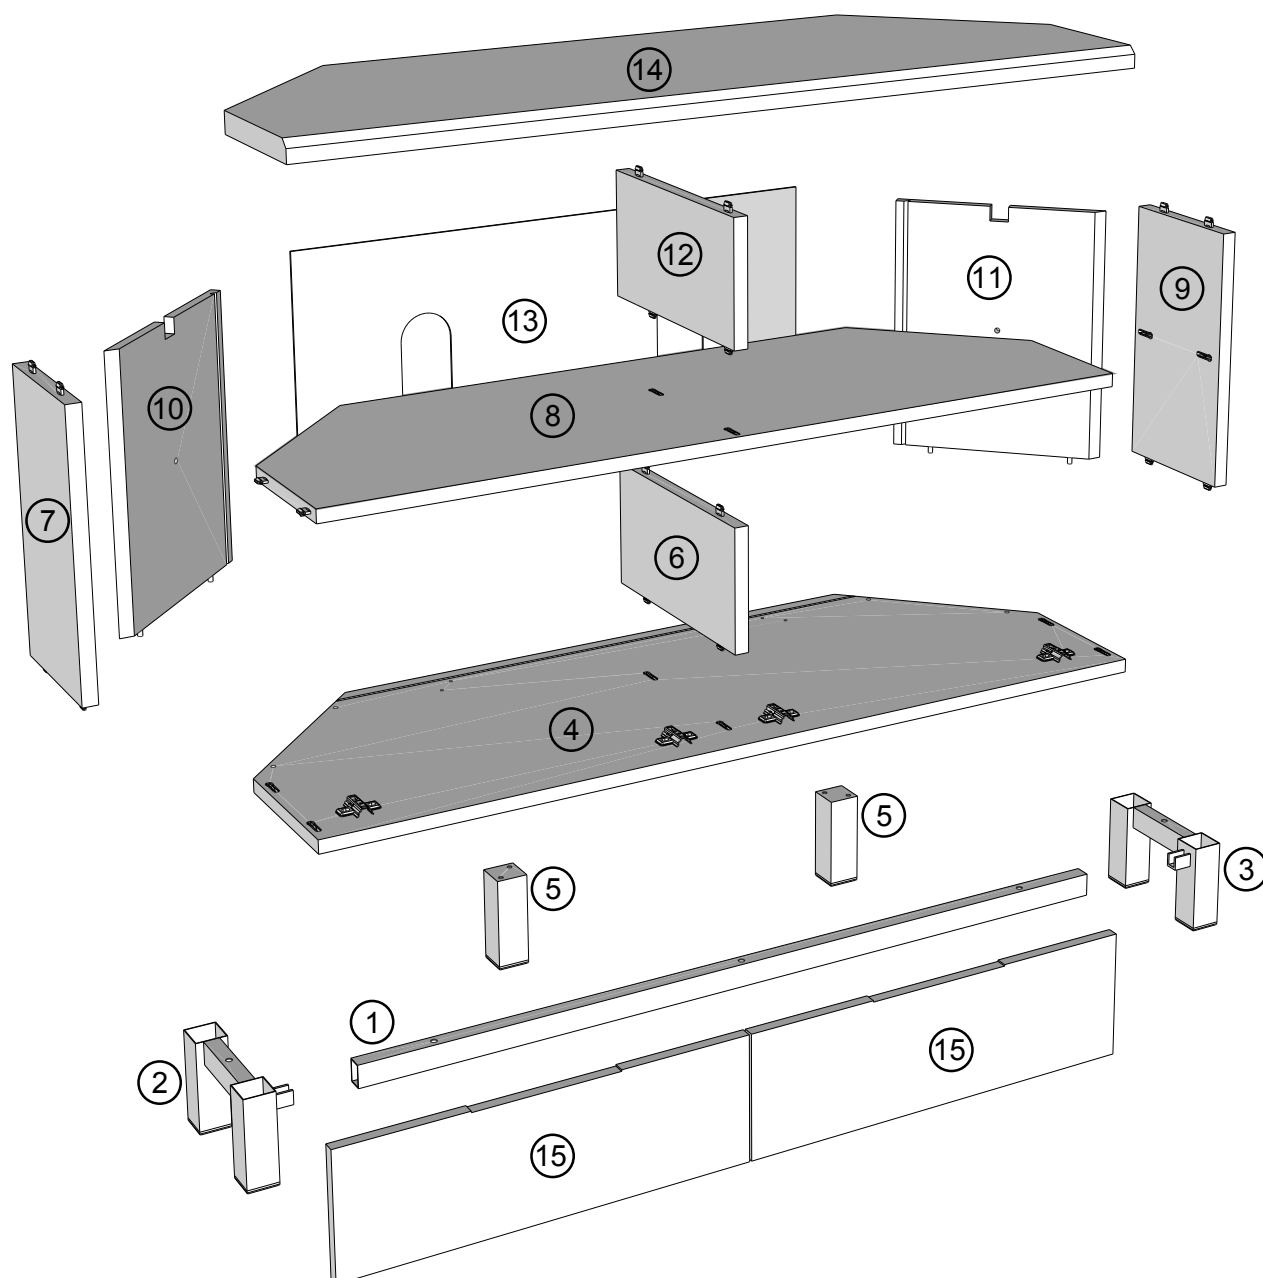


       Components supplied. Please use this guide if you require replacement parts.


Ref	Dimensions	Visual	Qty	Ctn
1	3x103.5cm		1	1
2	12x19cm		1	1
3	12x19cm		1	1
4	40x112cm		1	1
5	4x12cm		2	1
6	16x30cm		1	1
7	18x34cm		1	1
8	36x108cm		1	1
9	18x34cm		1	1

      Ref	Dimensions	Visual	Qty	Ctn
10	28x34cm		1	1
11	28x34cm		1	1
12	16x30cm		1	1
13	34.5x73cm		1	1
14	38.5x112cm		1	1
15	17.5x55.5cm		2	1

  next FITTINGS ASSEMBLE INSTRUCTIONS

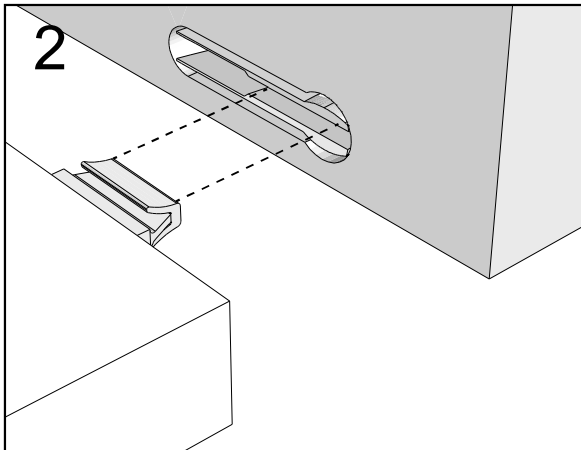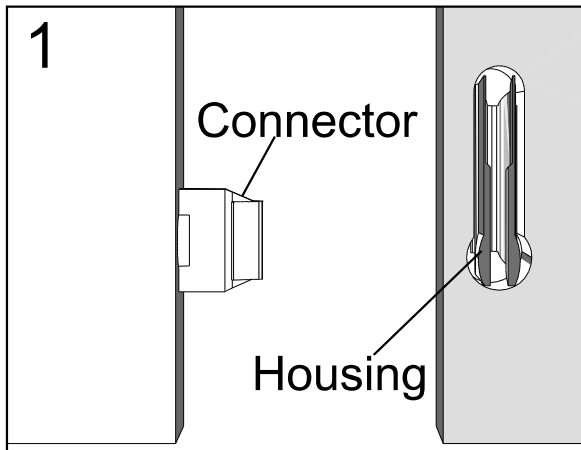


Push connector into housing to join.

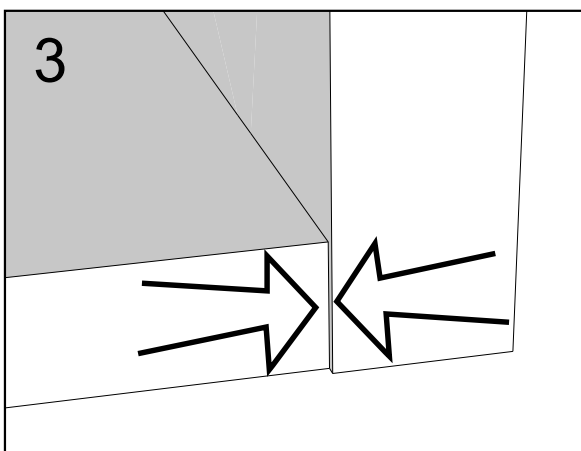 

Make sure there is no gap between the panels.

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
S41	Ø4 x 16mm	2	1
V35	Ø6 x 12mm	2	1
Y10	Ø6 x 35mm	2	1
V68	Ø6 x 40mm	5	1
U139	Ø4.5 x 15mm	8	1
D3	Ø6 x 30mm	N/A	1
V47	Ø6 x 25mm	4	1

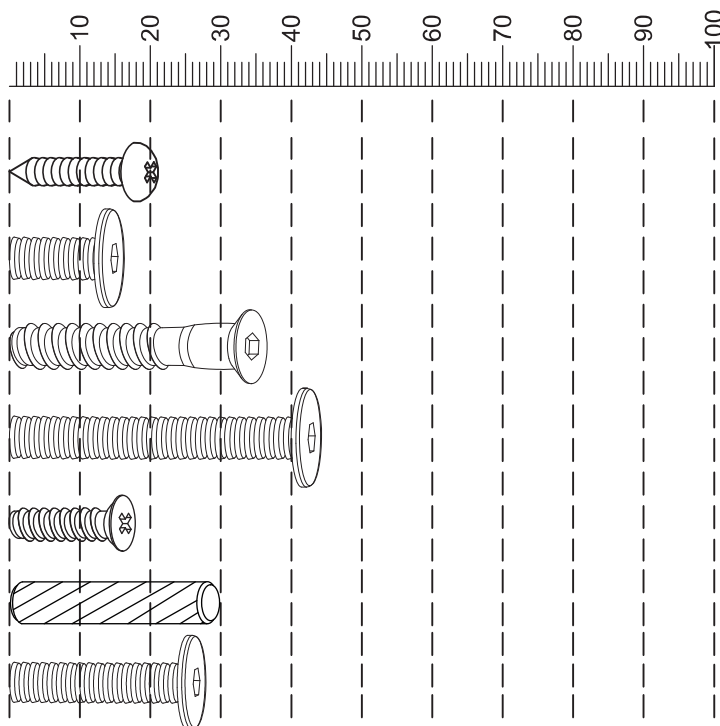 

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T38	N/A	4	1	
C11	N/A	4	N/A	
T1	N/A	2	N/A	
T39	N/A	2	N/A	
E39	N/A	2	N/A	

NEXT

BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT
U72144/178233
Assembly instructions

1

Diagram 1 illustrates the first step of assembly: attaching the top rail (1) to the side brackets (2) using screws (V35). A circular inset shows a hand inserting a screw into a bracket. Another circular inset shows the bracket being secured to the rail.

V35	Ø6 x 12mm	2	
-----	-----------	---	--

2


Diagram 2 illustrates the second step of assembly: attaching the bottom rail (4) to the side brackets (2) using screws (V68) and corner brackets (T1). A circular inset shows a hand inserting a screw into a bracket. Another circular inset shows the bracket being secured to the rail. A third circular inset shows the corner bracket being secured to the rail.



T1	N/A	2	
V68	Ø6 x 40mm	5	

NEXT


BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT
U72144/178233
Assembly instructions

   3

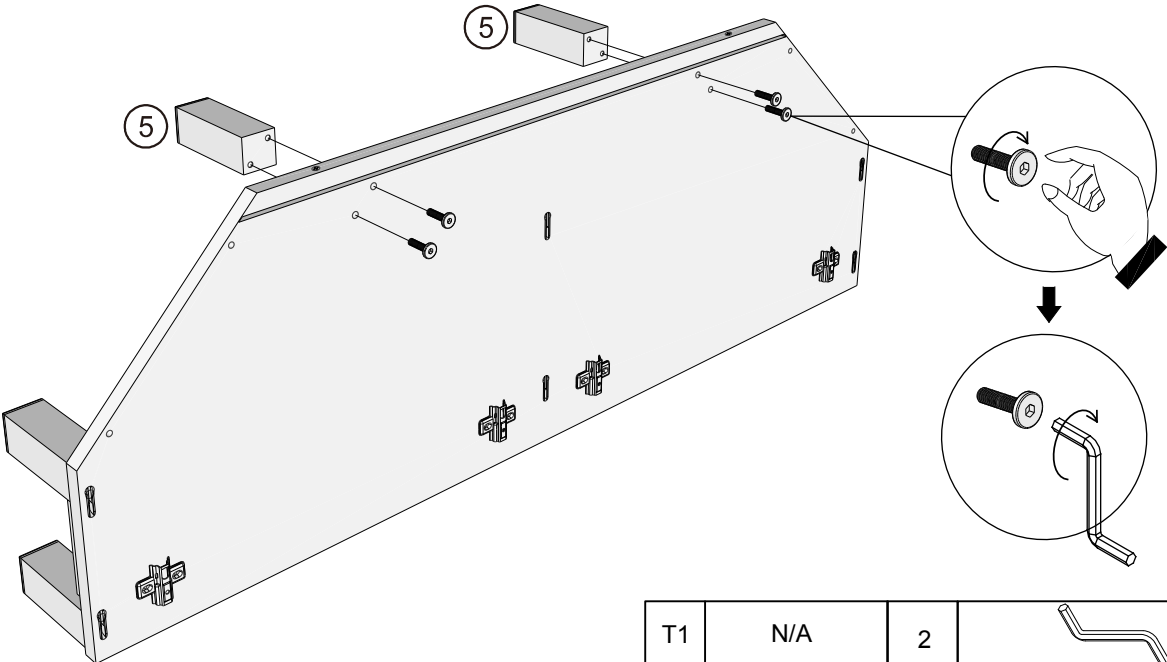

T1	N/A	2	
V47	Ø6 x 25mm	4	

 
4

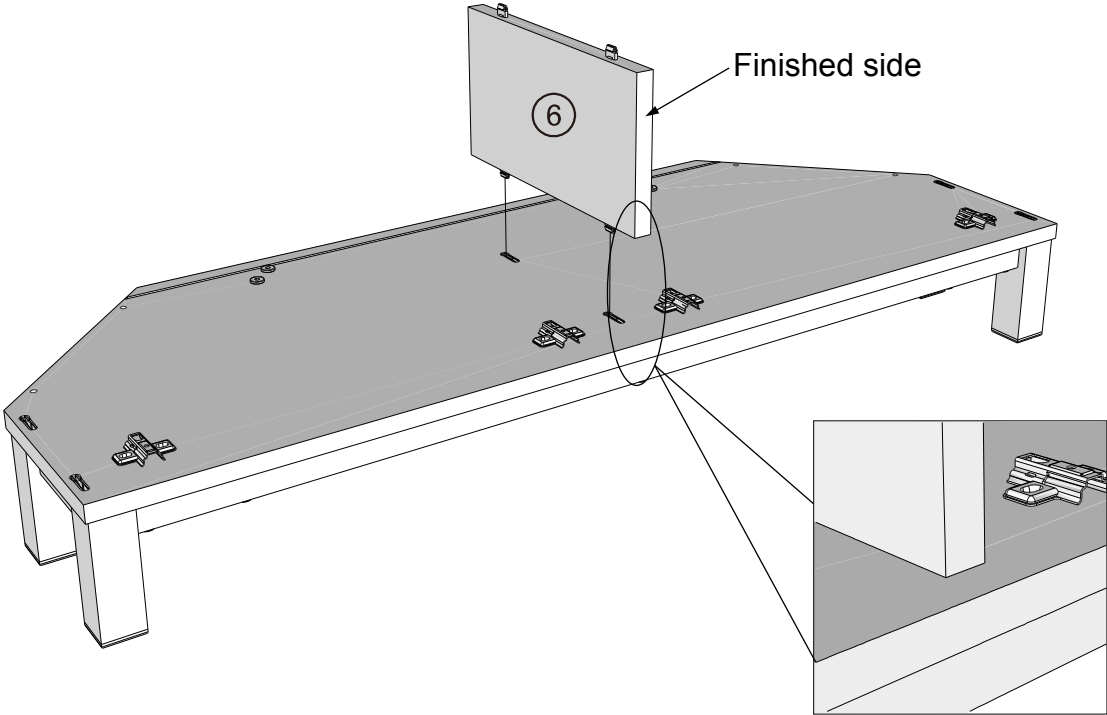


NEXT

BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT U72144/178233 Assembly instructions

 
5

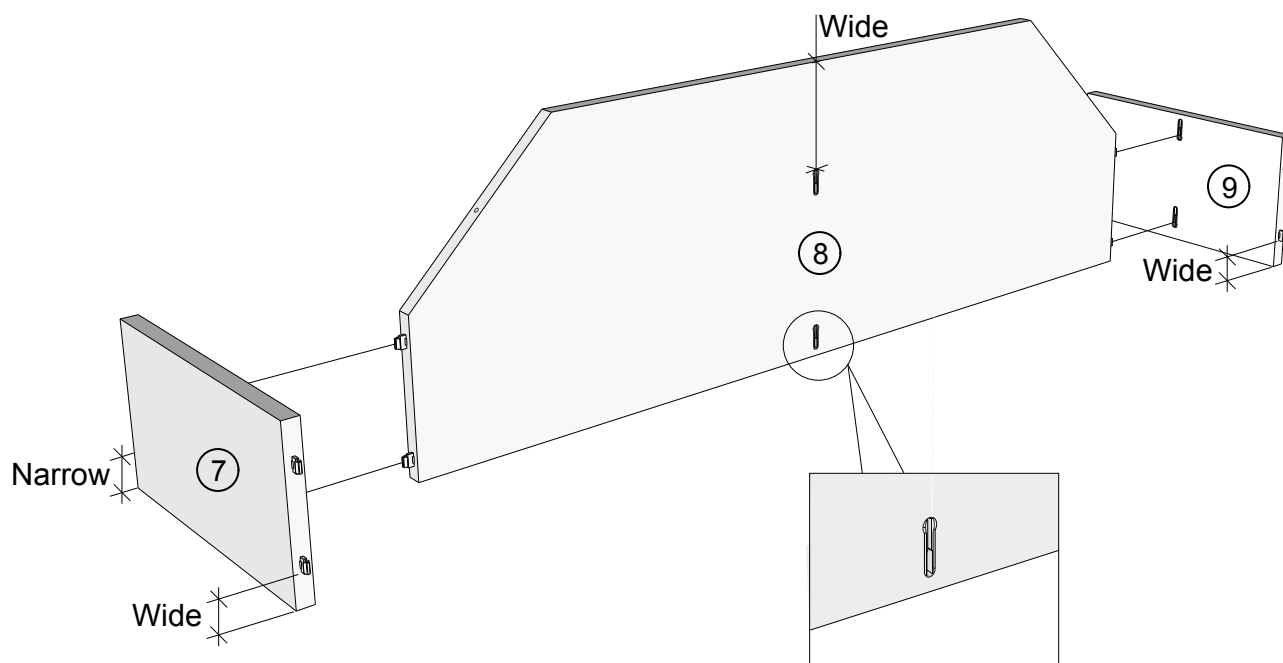


6

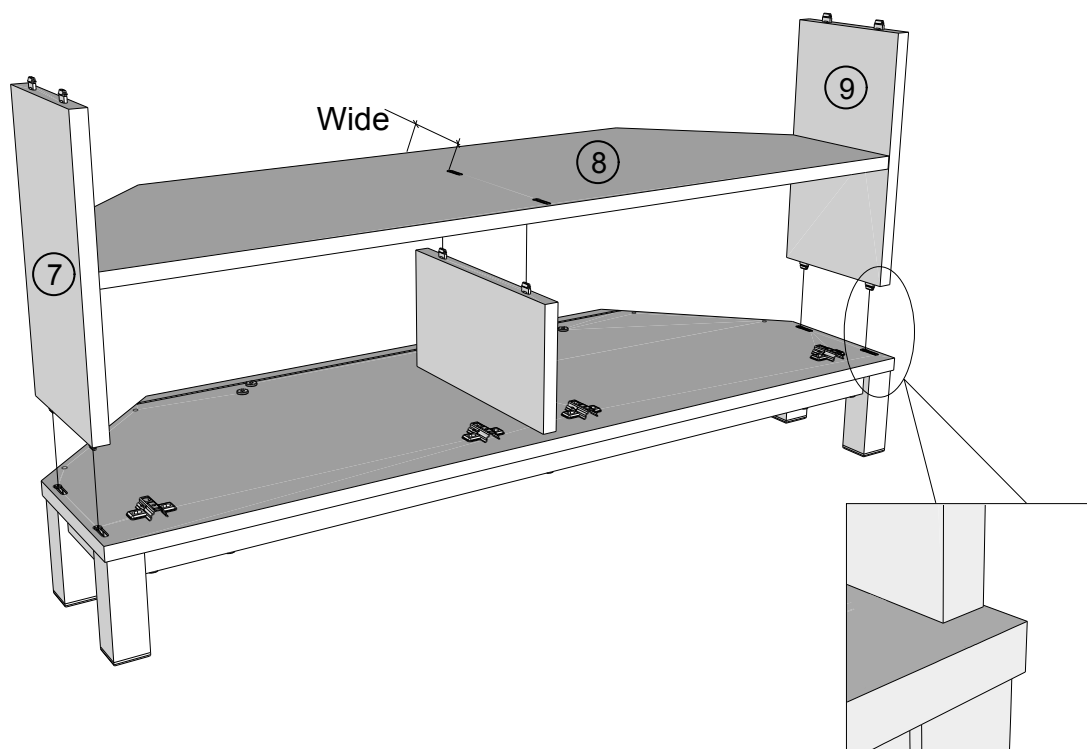 


7

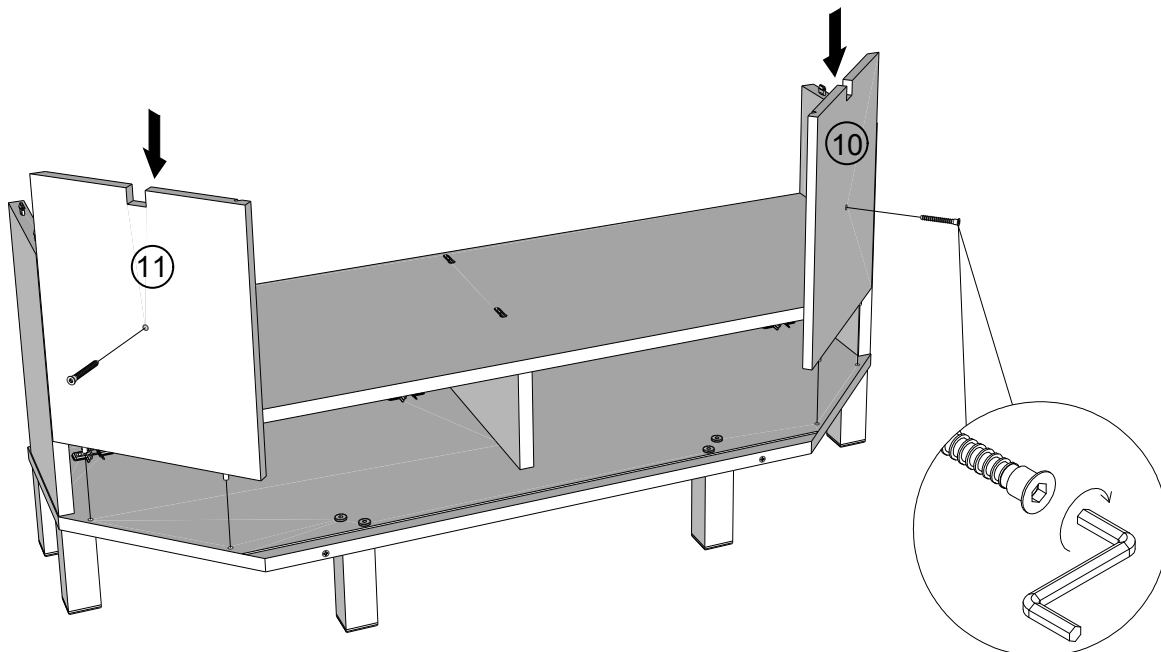 

 T1	N/A	2	
Y10	Ø6 x 35mm	2	

 
8

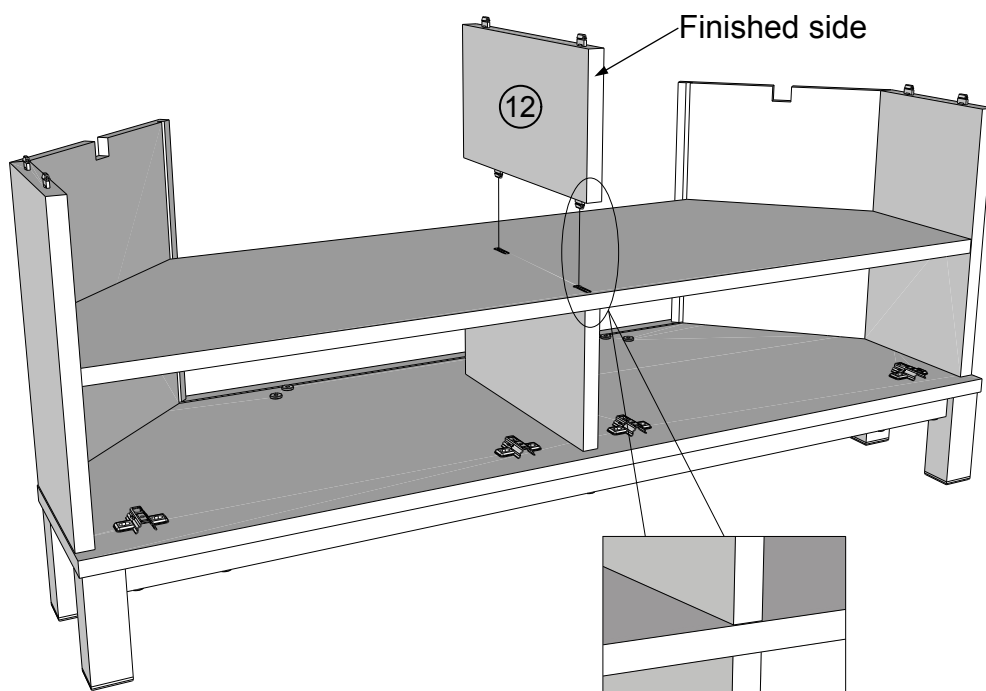


NEXT

BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT U72144/178233 Assembly instructions

 9

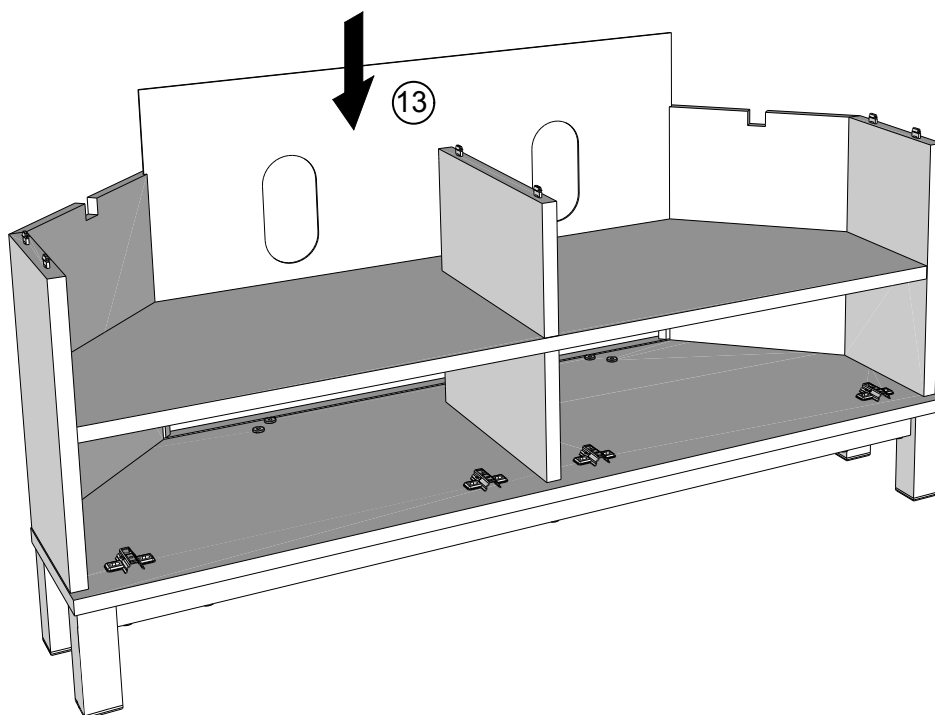


10

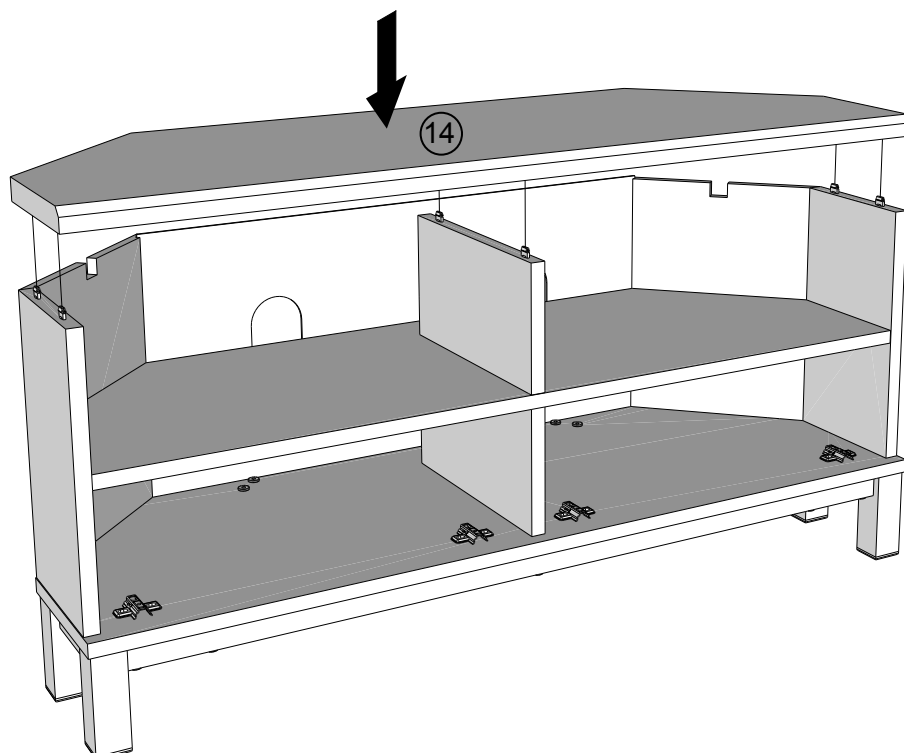 



NEXT

BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT U72144/178233 Assembly instructions

 11

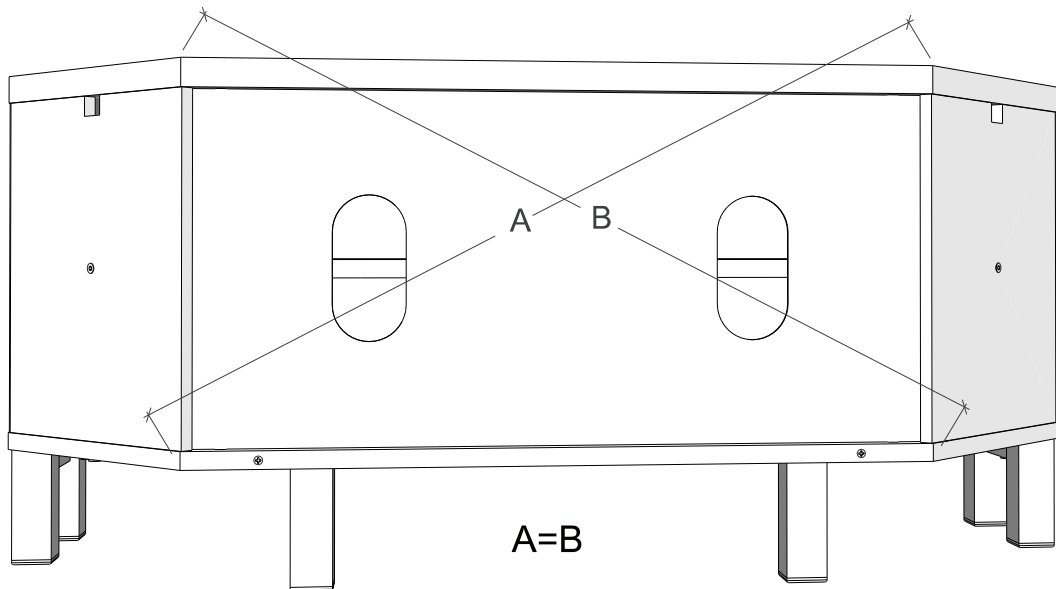

12

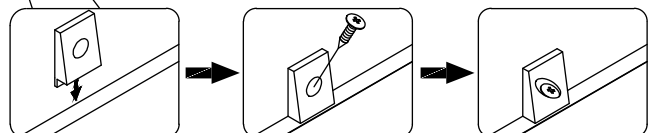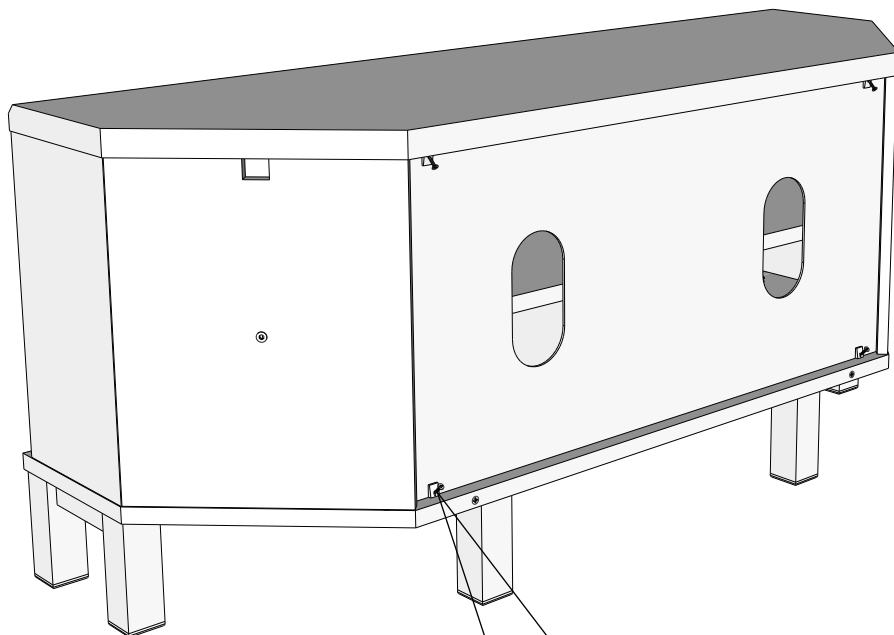  

T38

N/A

4



NEXT

BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT
U72144/178233
Assembly instructions

13

C11	N/A	4	
U139	Ø4.5 x 15mm	8	 PH2 X2 not supplied


x2

14



E39	N/A	2	 PH2 not supplied
-----	-----	---	-------------------------

x2


 
15

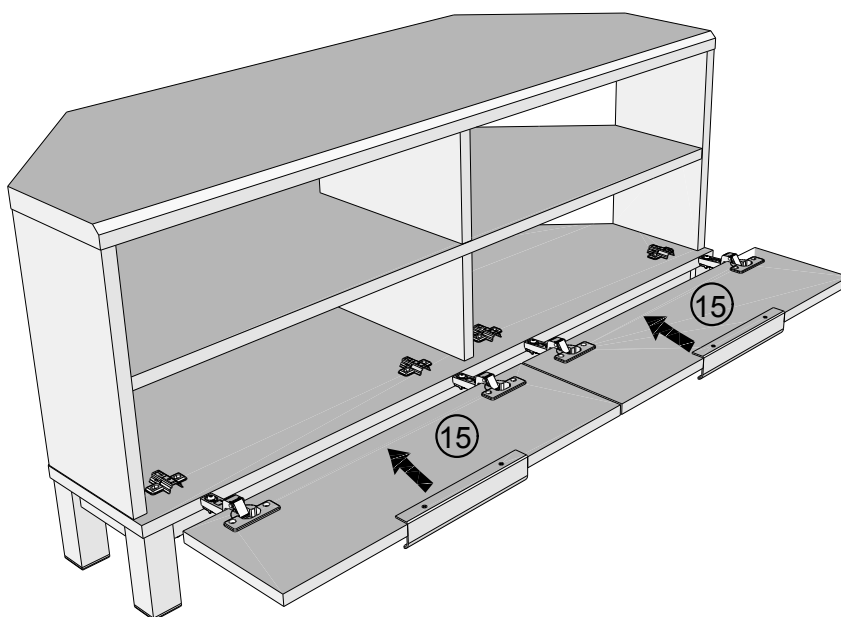

Install hinge

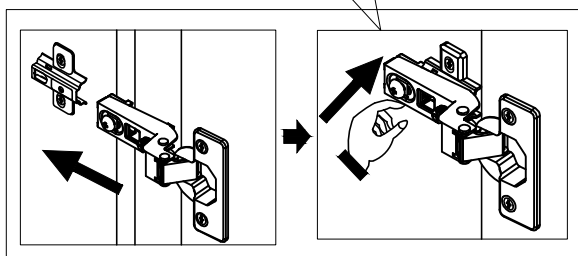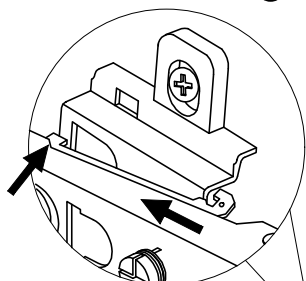  


Install hinge


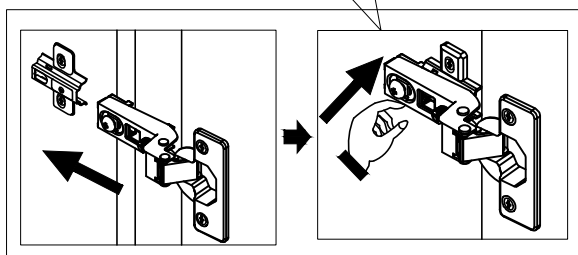 
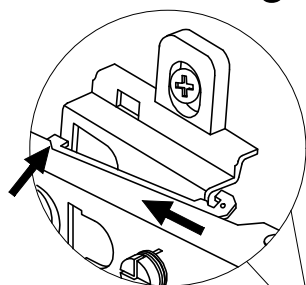 


Adjust Hinge Position



 
LATERAL

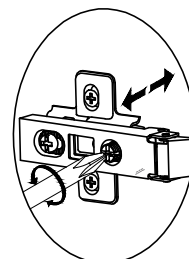

VERTICAL

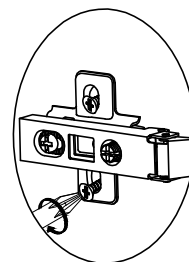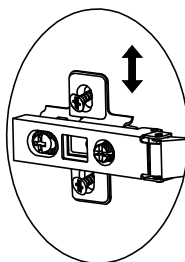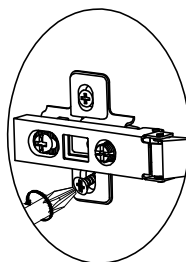   

FRONT- TO-BACK

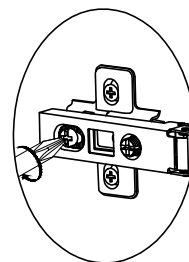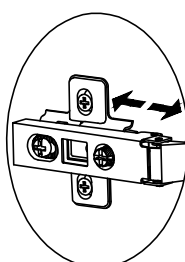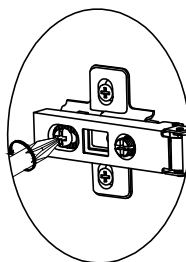   

NEXT

 
BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT
U72144/178233
Assembly instructions

 
16

We recommend the use of the wall attachment bracket/strap provided for safety reasons.
Secure the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).
To hide the strap behind the unit ,drill the hole lower than the top of unit.

Attach the other end of the strap to the underside of the top panel with screw.
Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires,water and gas pipes.
NB:Wall fixings are not included-Please source suitable fixing for your wall type.
If in doubt please consult a qualified trades person.

Please ensure you secure your product to the wall for your and your family's safety before you use it.






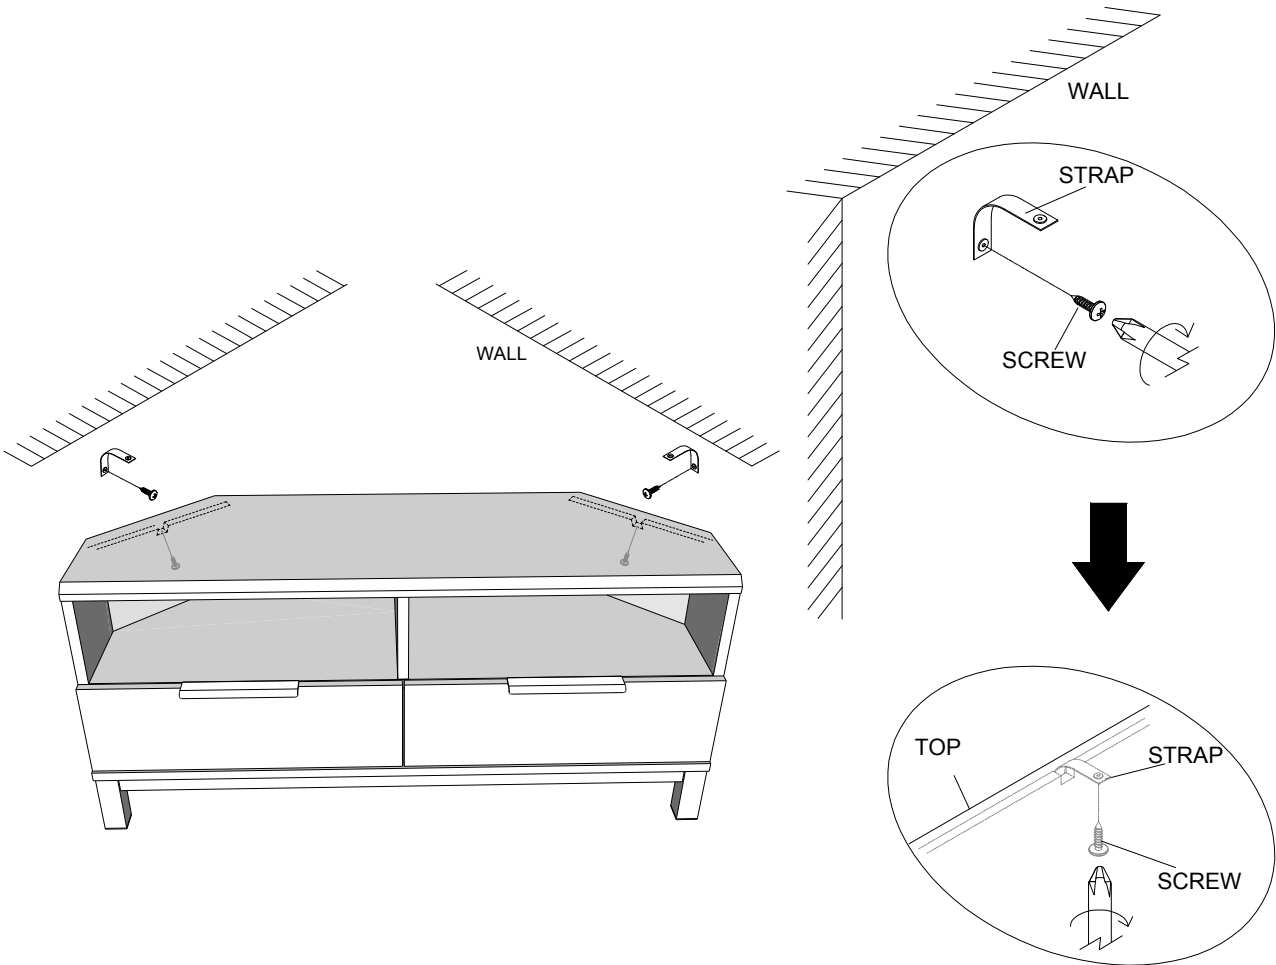


T39	N/A	2	
S41	Ø4 x 16mm	2	 

17

To disassemble:

    
 
 
Step1: Remove the plastic wedges (T38) from the back panels and screws from the rear of the base panel (4);

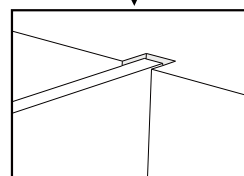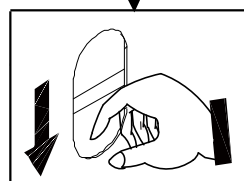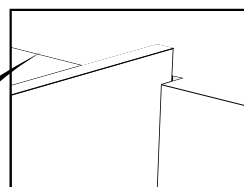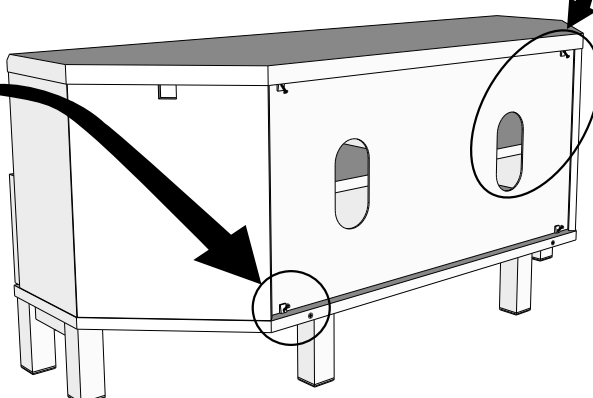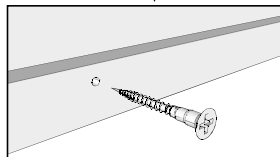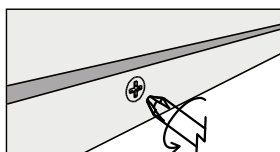

Step2: Press down the back panel so they are clear of the top panel slot;

18

   Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels;

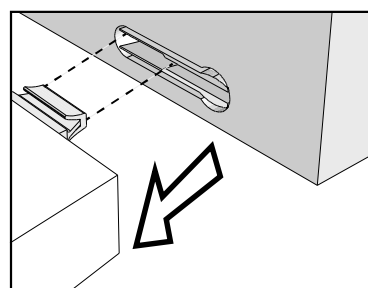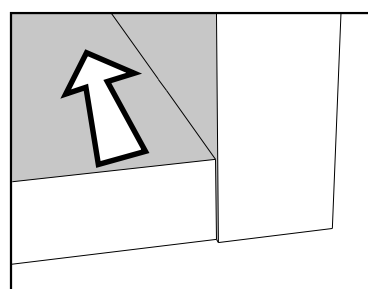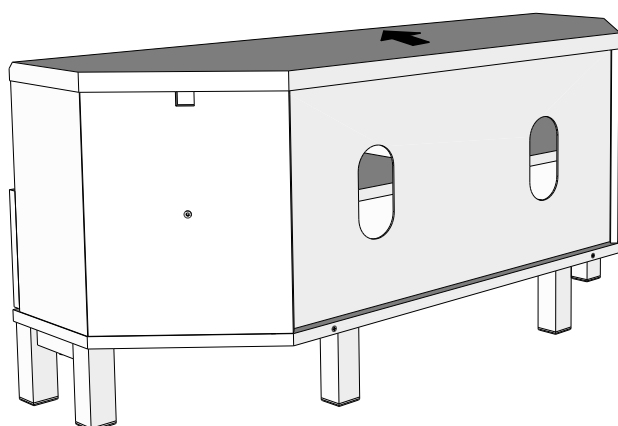


NEXT BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT
U72144/178233

NEXT BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT
U72144/178233

Actual product size

 H50.5 x W112 x D40cm

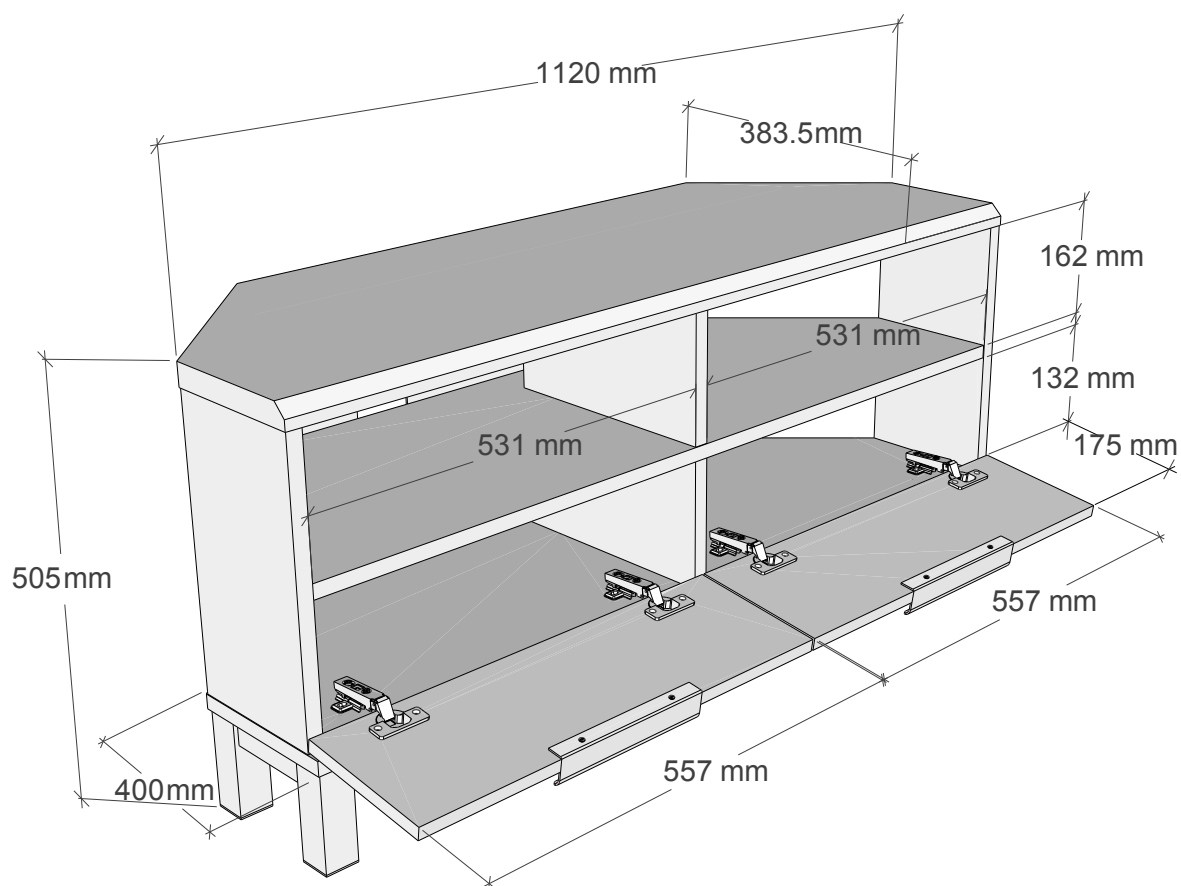

Produced in China for Next Retail Ltd.
U72144/178233-2023-V1.

NEXT

BRONX BLACK / BRONX BLACK AND DARK CORNER TV UNIT
U72144/178233

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk