 


next

STOCKHOLM 6 TO 8 EXTENDING DINING TABLE
514033
Assembly instructions

Actual product size
H78 x W178x D83cm

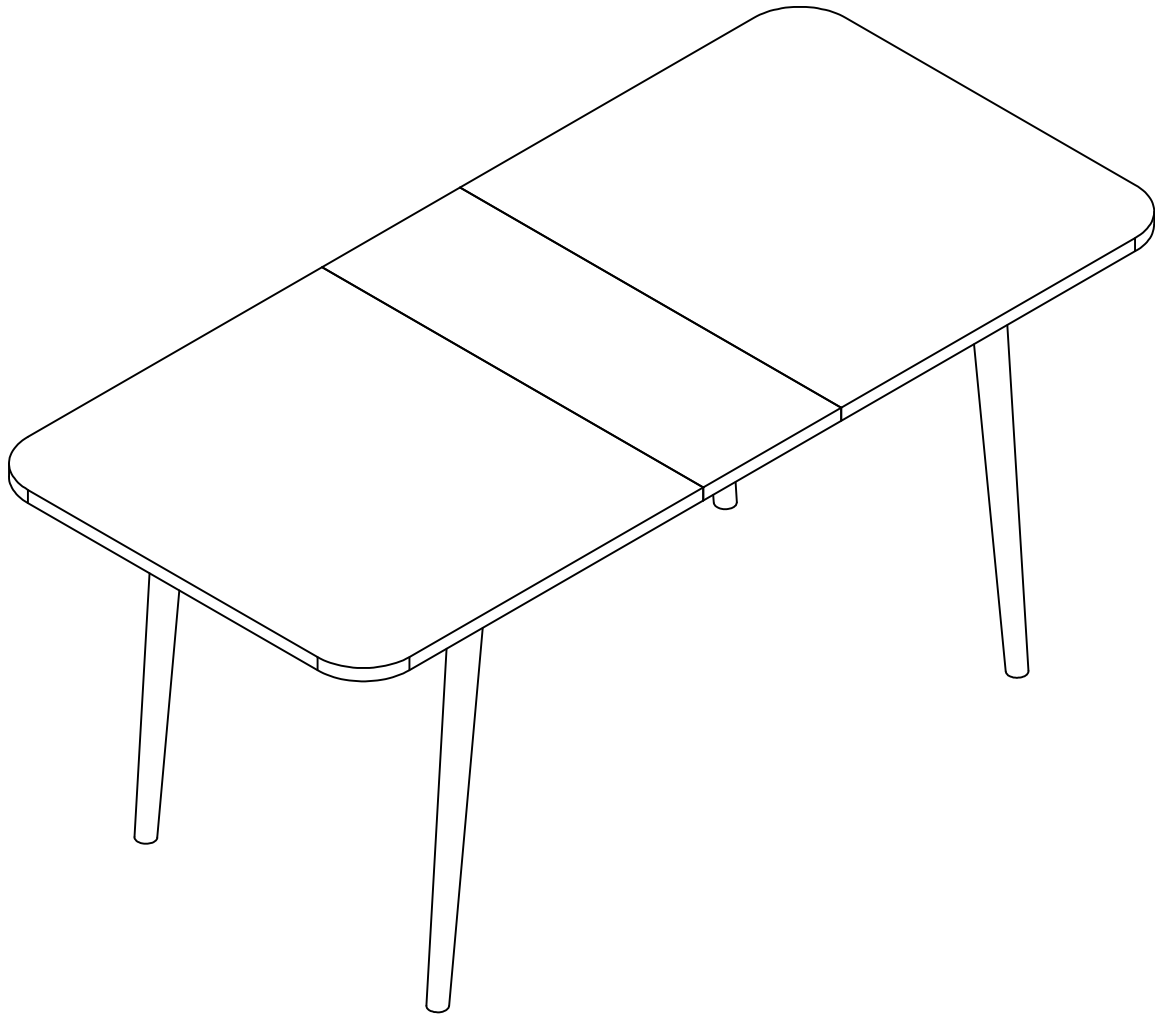

**IMPORTANT- RETAIN
THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

This wardrobe conforms to FIRA/FRQG C004:2008

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

 
BEFORE YOU START

Number of people required to assemble


Two people are required to assemble this item



Time to assemble

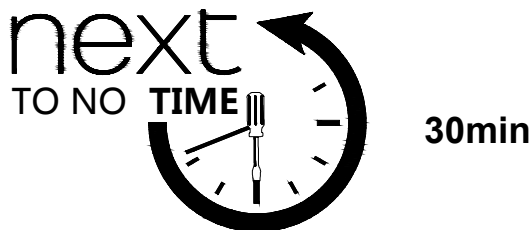

Tools required

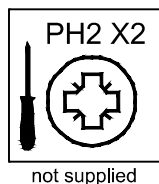 

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

 
Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.






Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

GETTING TO KNOW YOUR PRODUCT

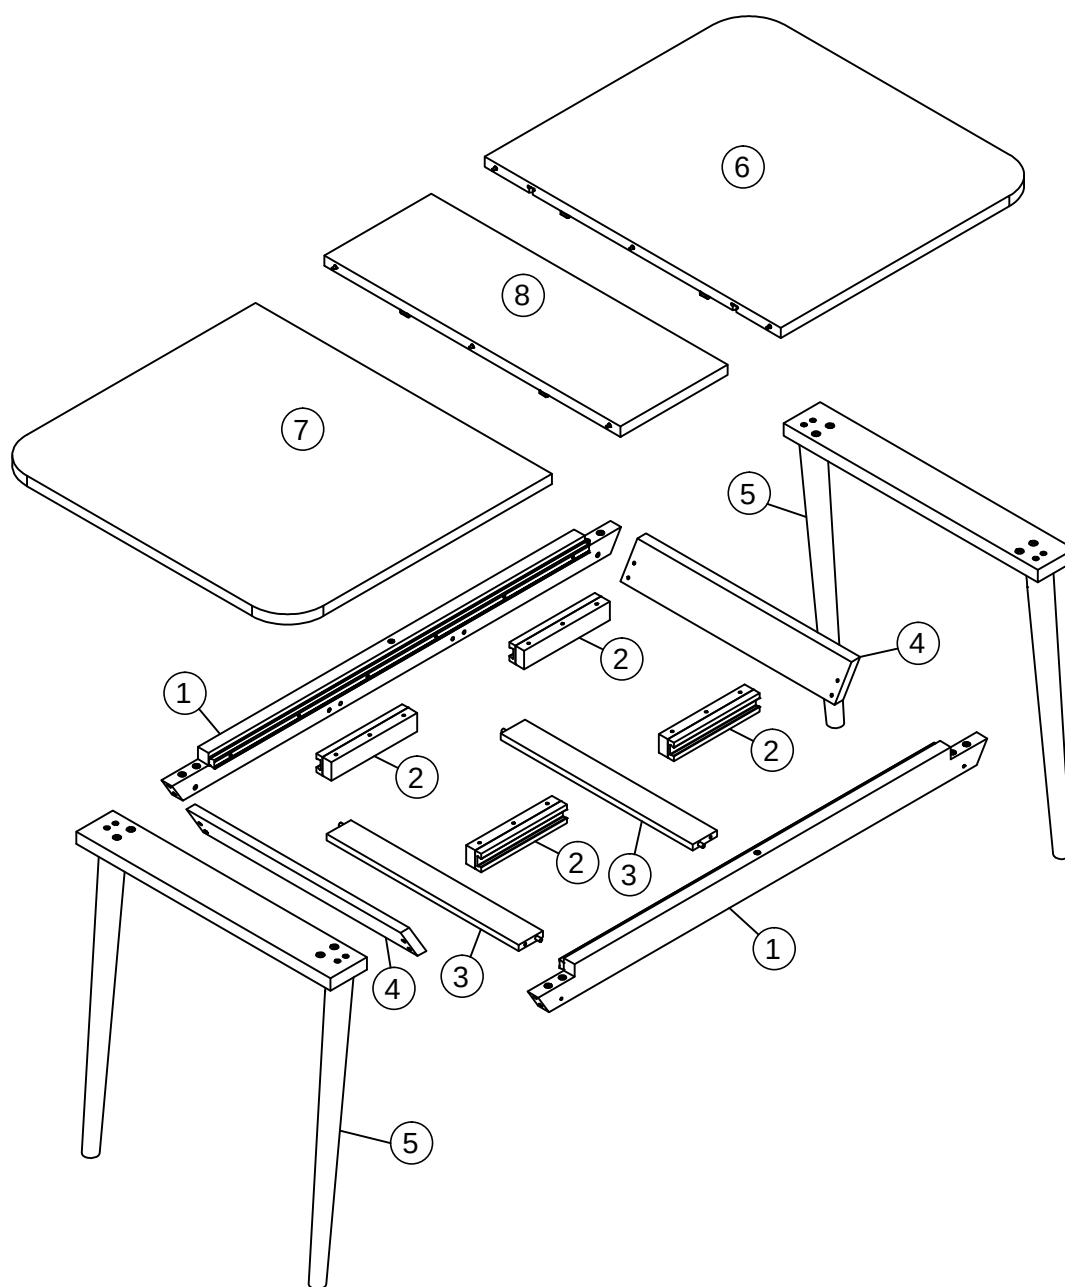


     Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	11*117cm		2	1
2	20*5cm		4	1
3	54*7cm		2	1
4	60*12cm		2	1
5	77*75cm		2	2
6	74*83cm		1	2
7	74*83cm		1	2
8	30*83cm		1	2

Fixtures and fittings supplied (actual size)


Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	4	1
B12	Ø6 x 33mm	4	1
D6	Ø8 x 30mm	N/A	1
Y8	Ø6 x 50mm	12	2
W27	Ø8 x 45mm	8	1
V83	Ø6 x 60mm	12	2

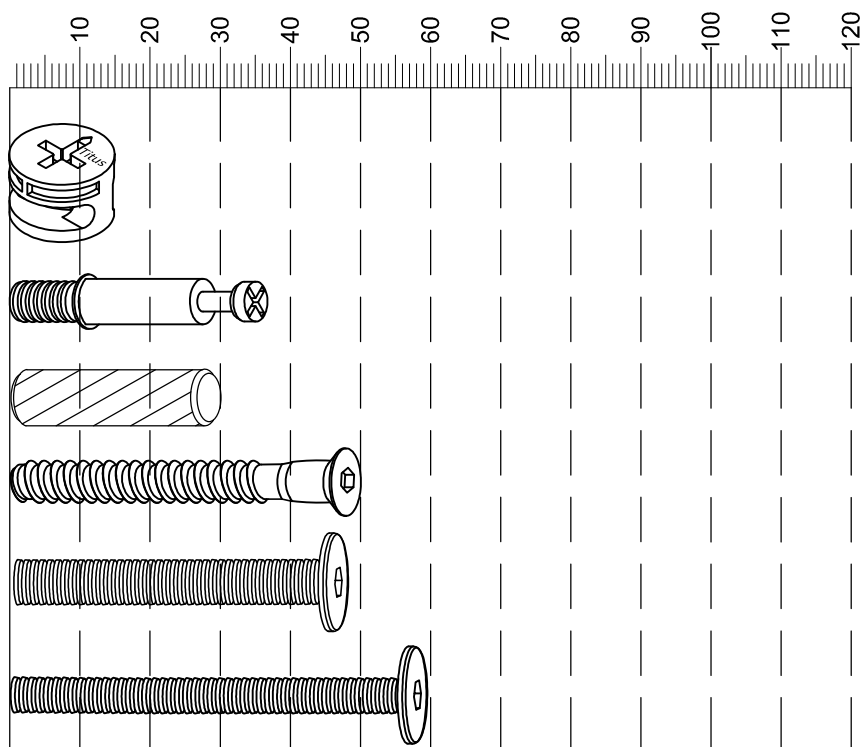 

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T4	N/A	2	N/A	
P8	N/A	2	N/A	
D14	N/A	1	N/A	
O1	N/A	8	1	

 1

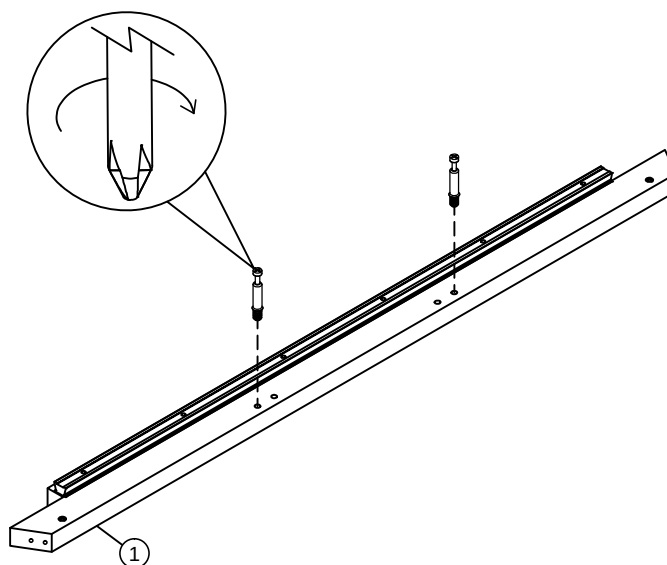


x2


B12

Ø6 x 33mm

 4



2

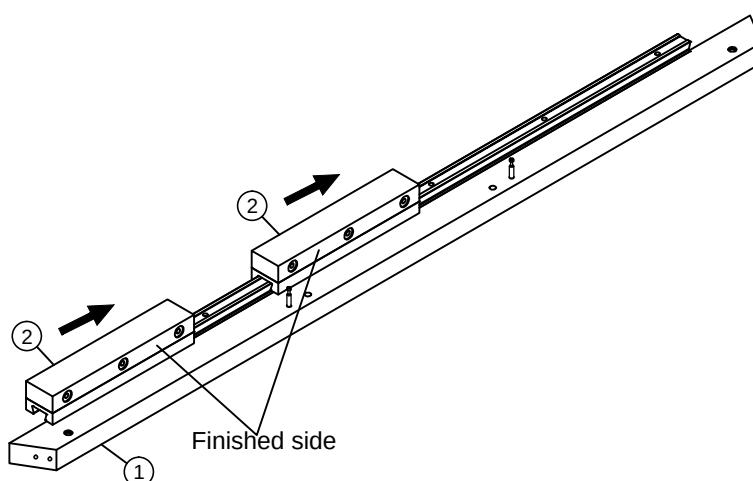 


x2


3

DON'T STOP UNTIL THE 2 O'CLOCK LOCK

 
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE
ARROW POINTS IN THE POSITIONS SHOWN IN THE
DIAGRAMS BELOW

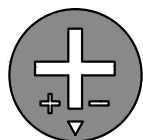


START

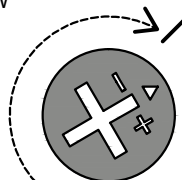 


CORRECT
LOCK

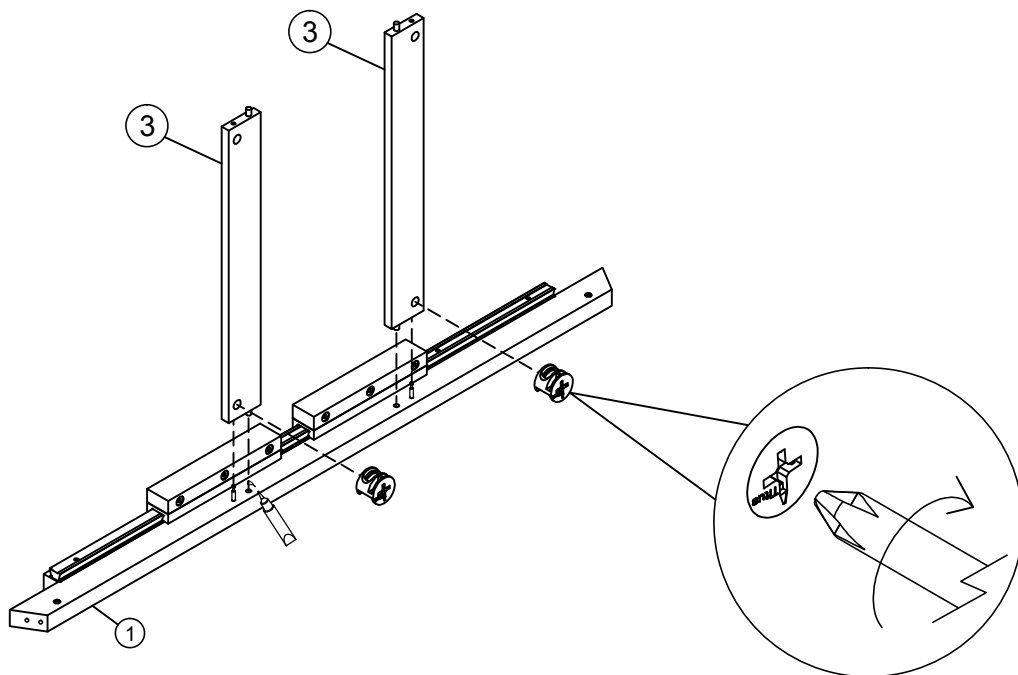 

 PUSH THE TWO PANELS TOGETHER ALLOWING THE
DOWEL TO ALIGN WITH THE HOLE

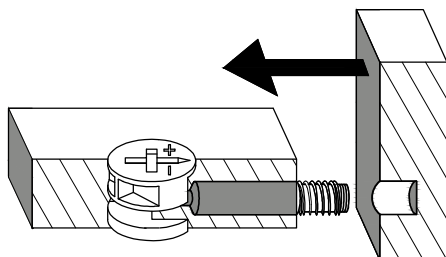

TURN THE CAM IN A CLOCKWISE DIRECTION

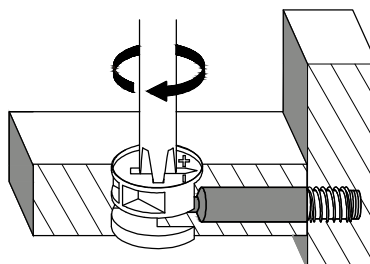 


B3

Ø15 x 12mm

2



 4

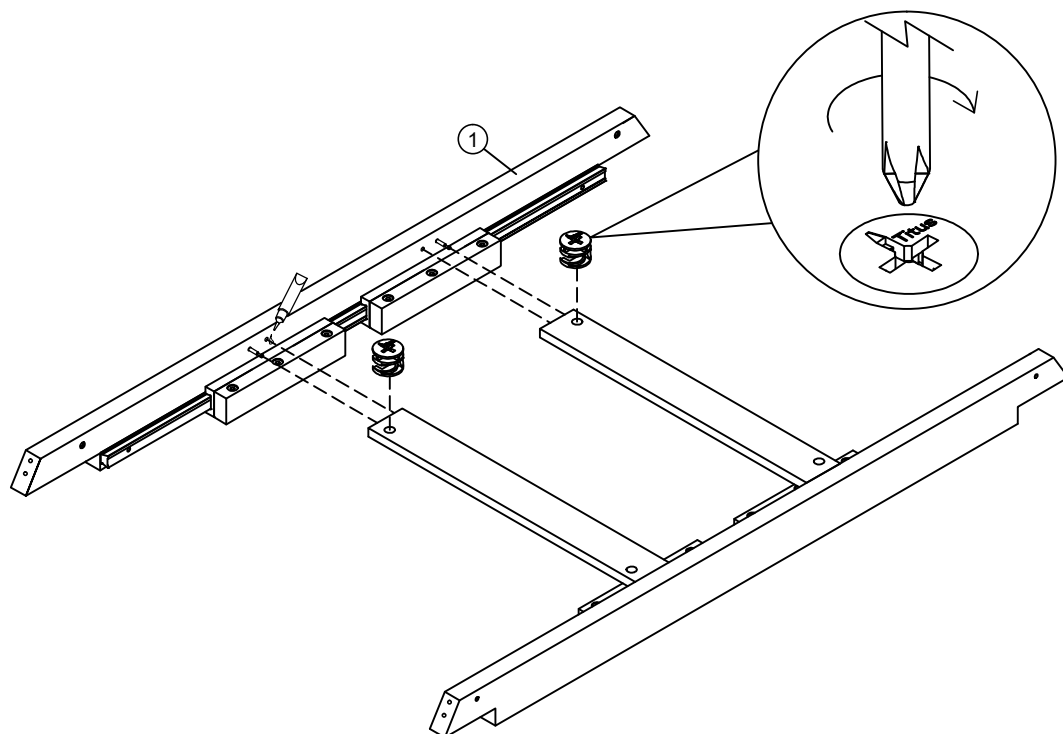


B3

Ø15 x 12mm


2



 5

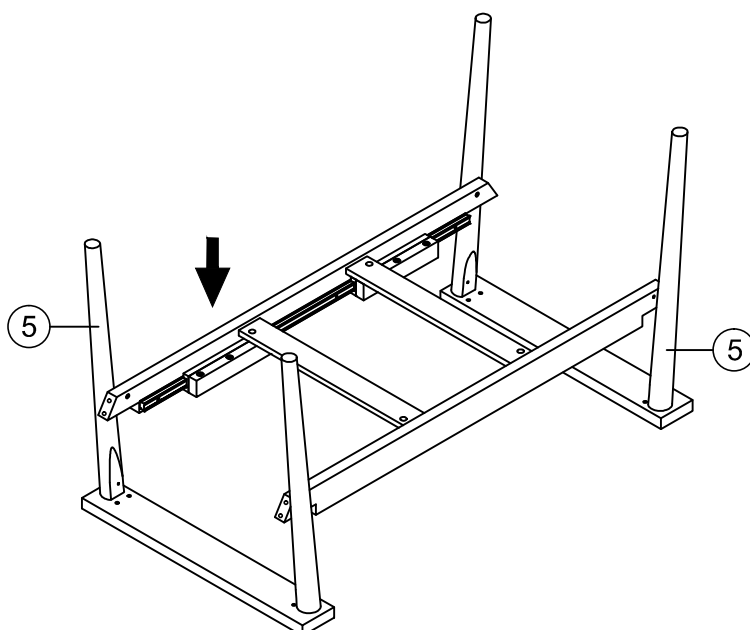


6

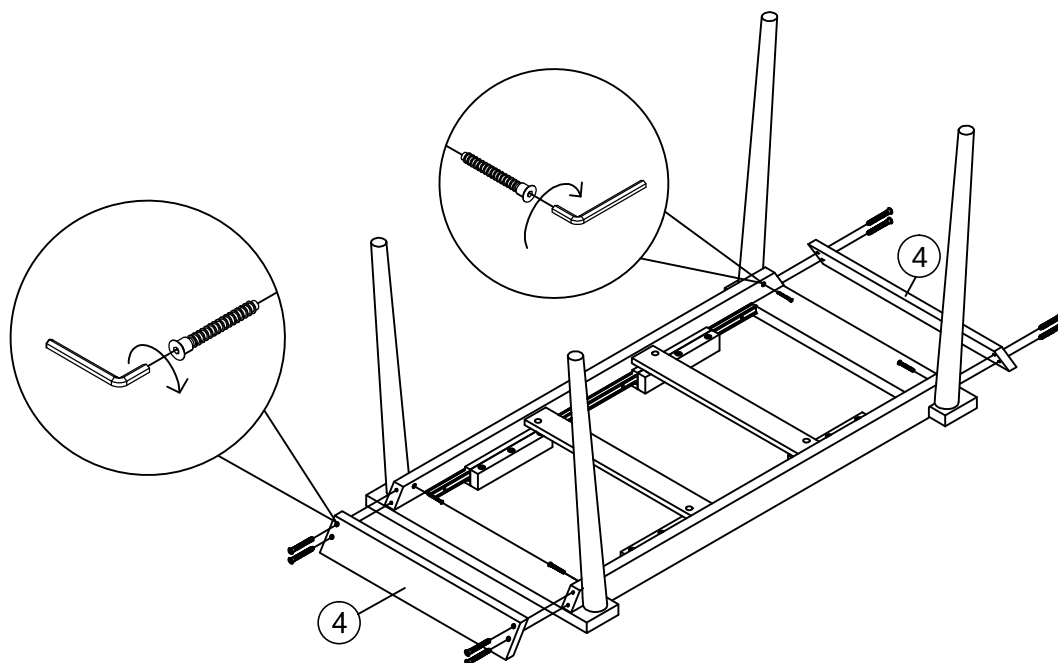 


Y8	Ø6 x 50mm	12	
T4	N/A	2	

 7

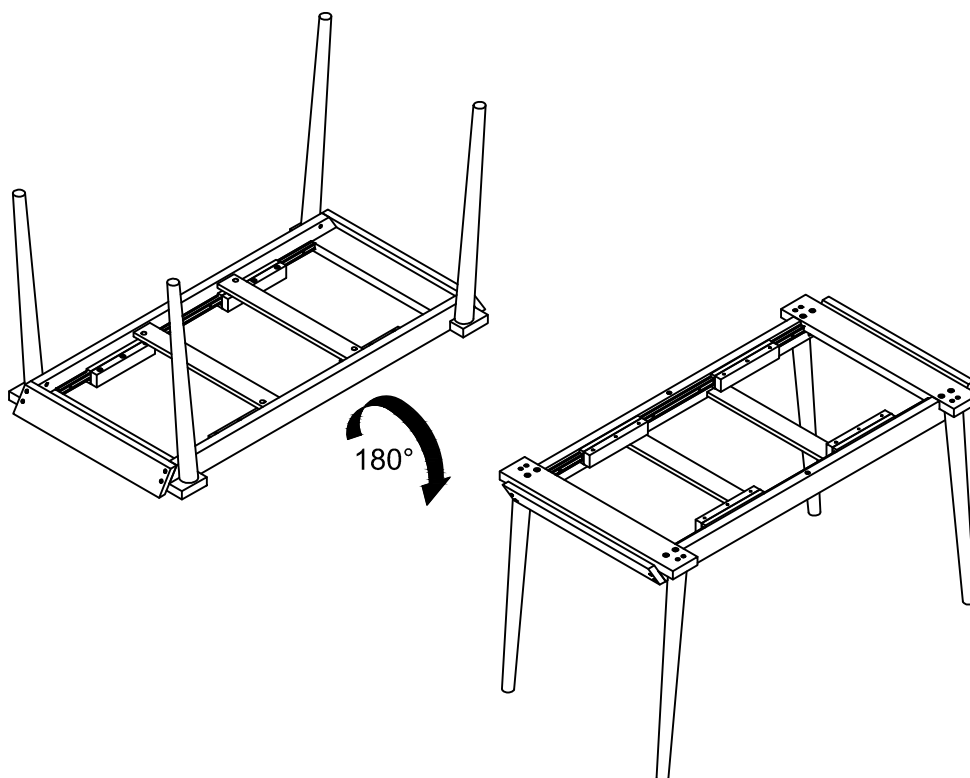



8

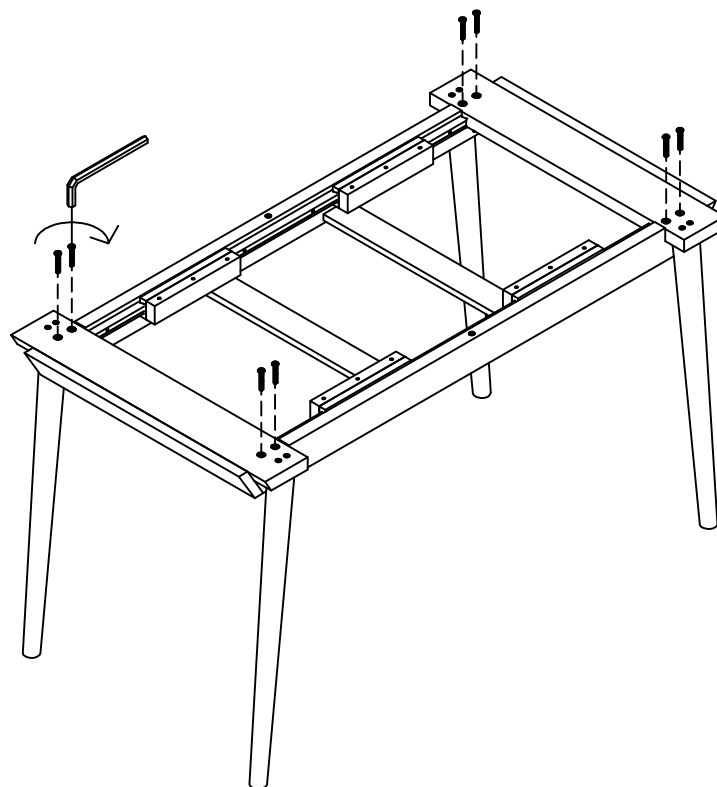 


W27	Ø8 x 45mm	8	
T4	N/A	2	

  9

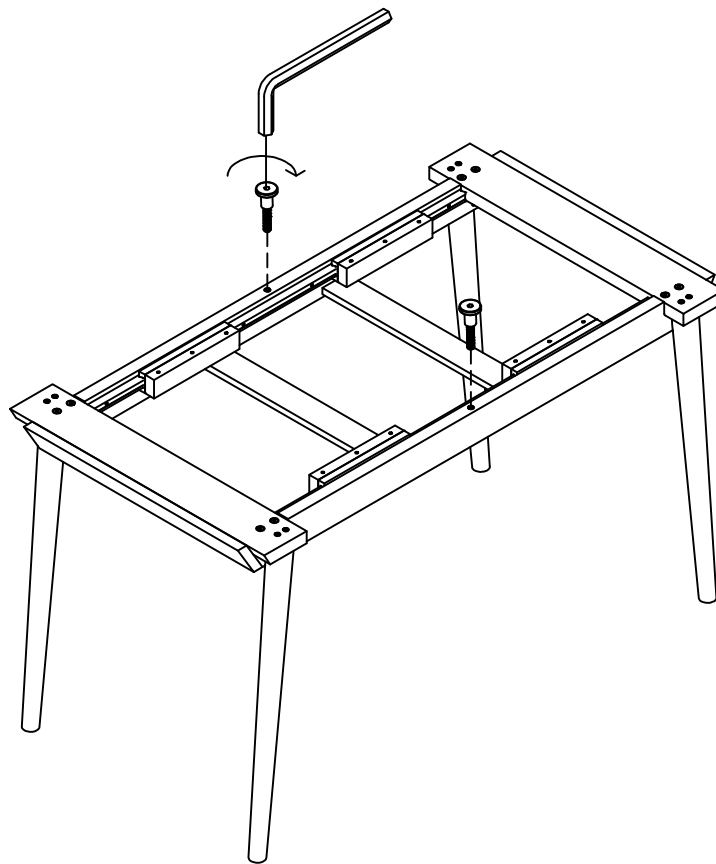


P8	N/A	2	
T4	N/A	2	

 10

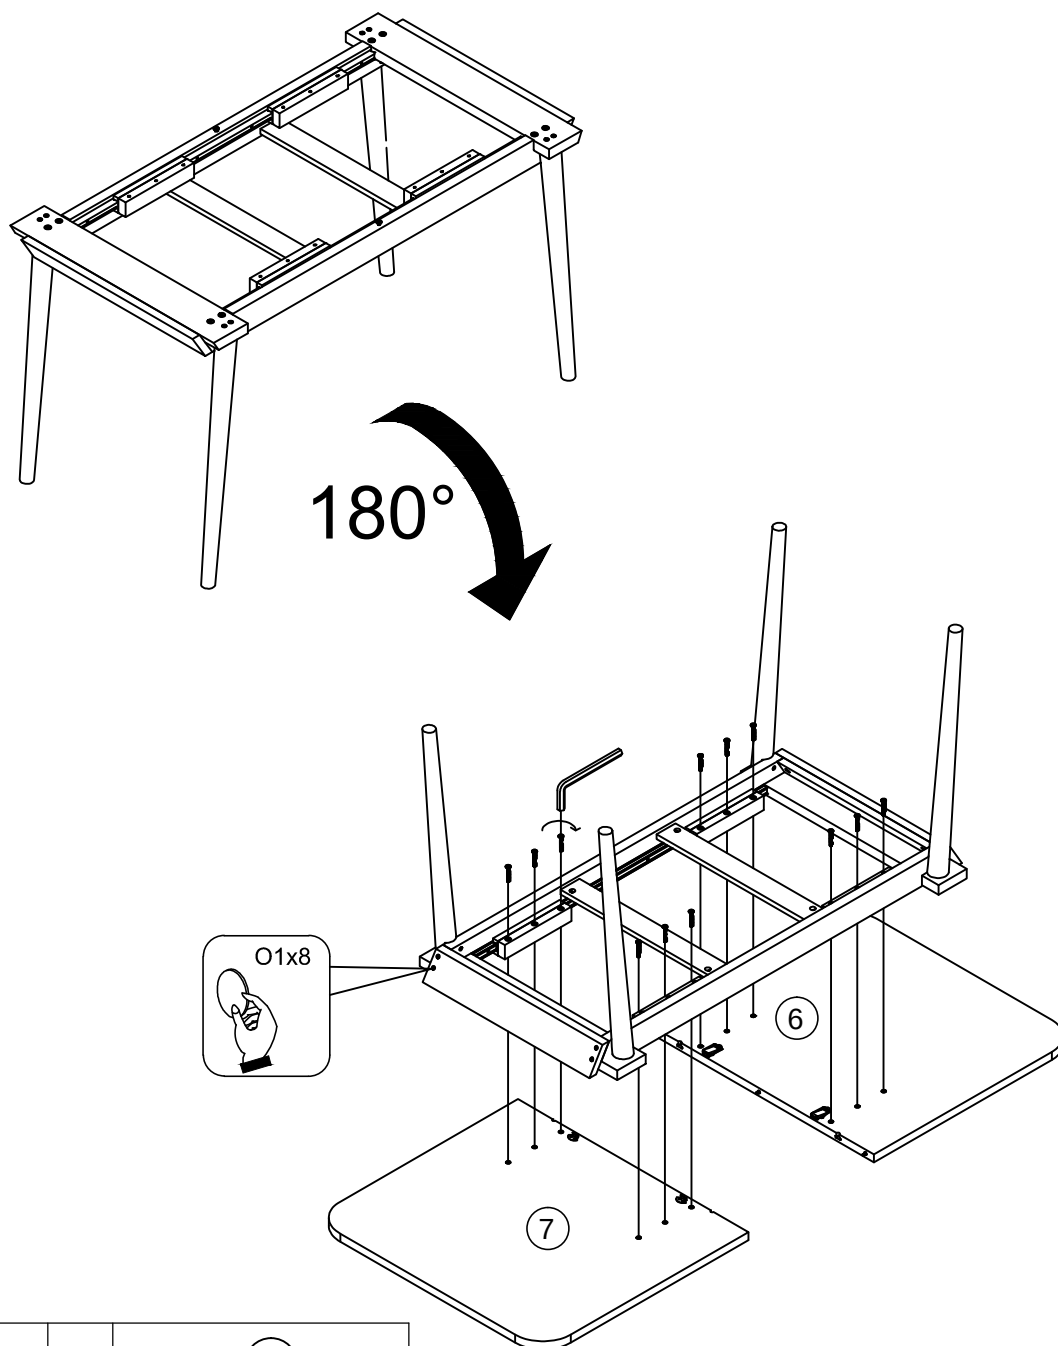


O1	N/A	8	
V83	Ø6 x 60mm	12	
T4	N/A	2	

 
11

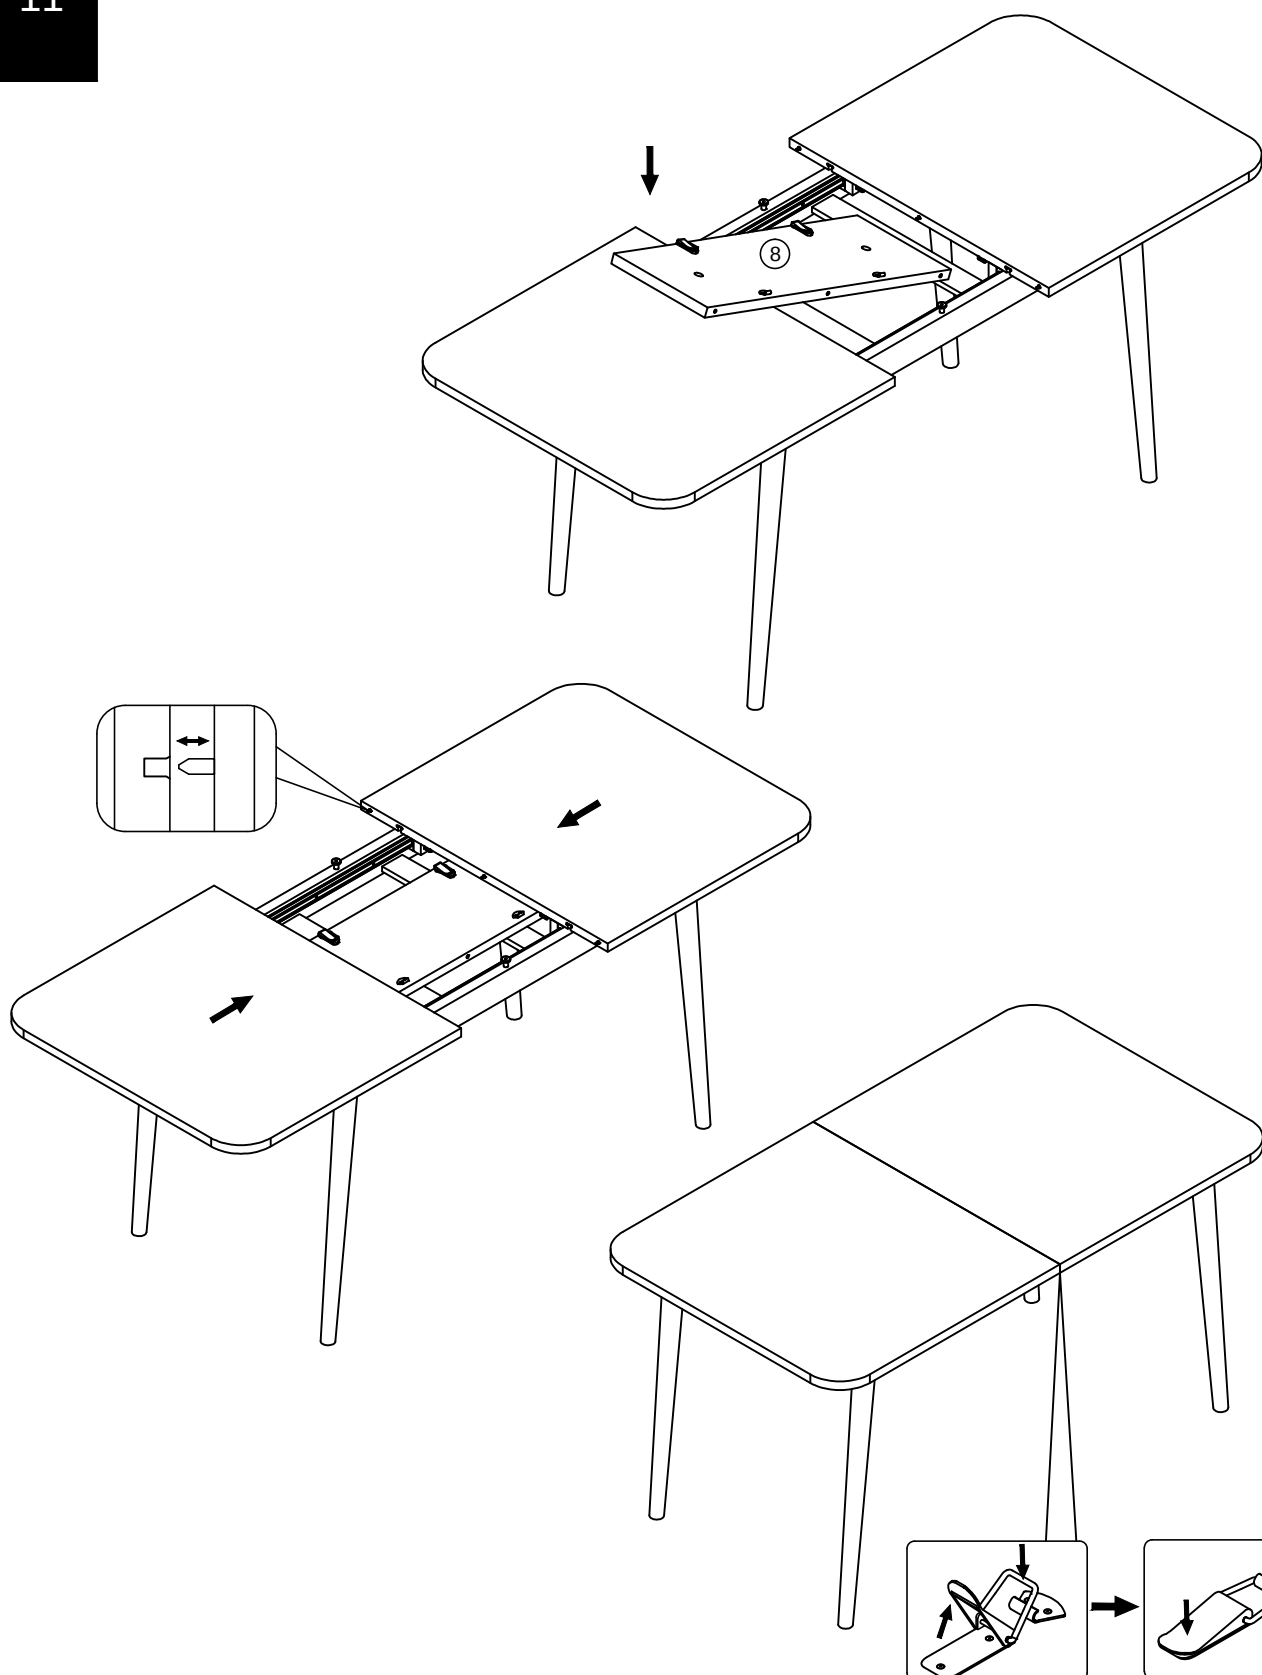


12

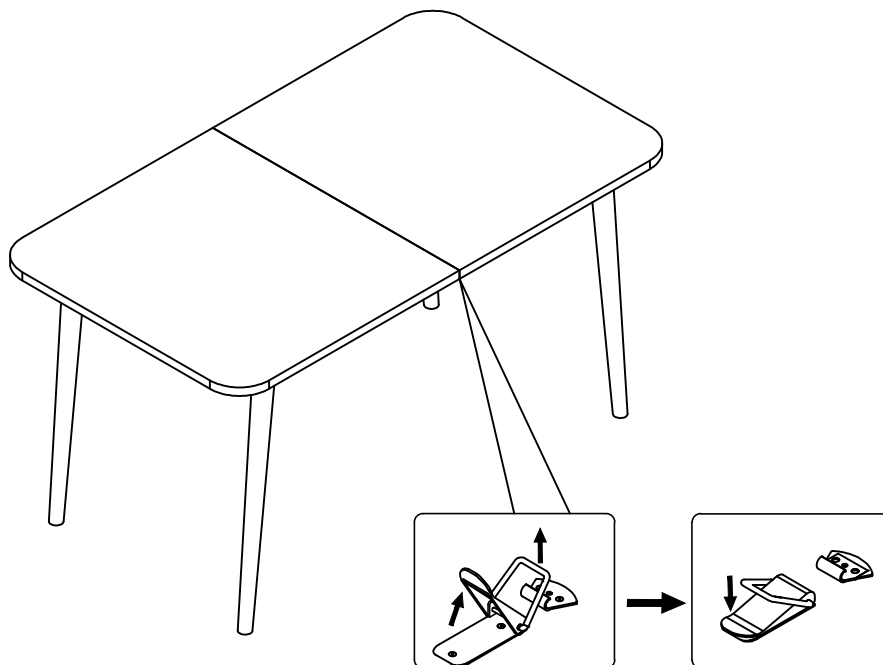 


13

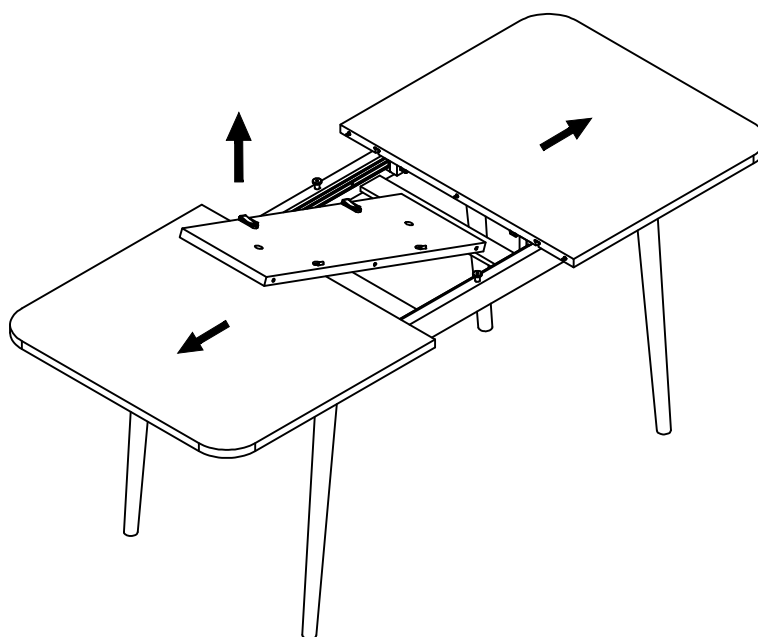 


14

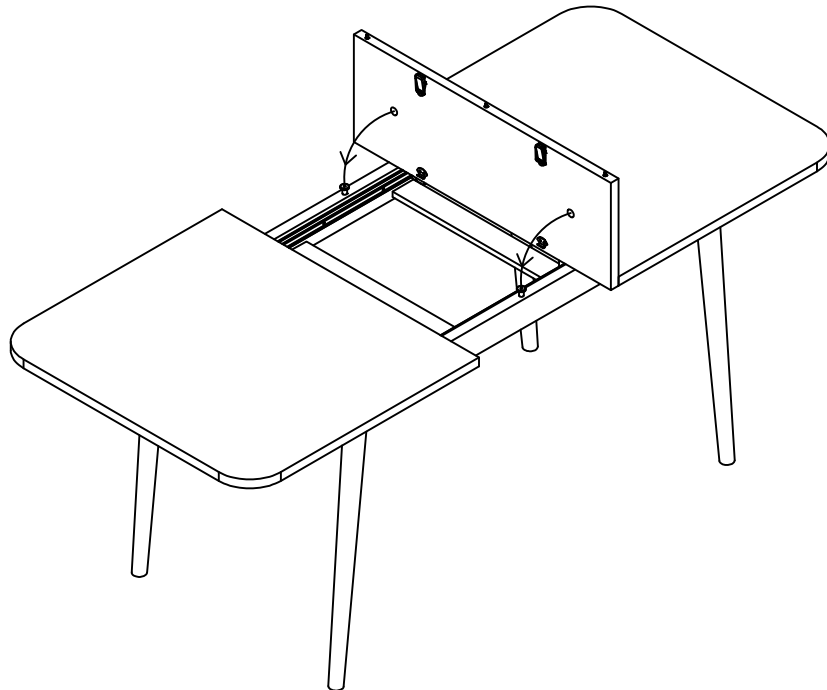 

15

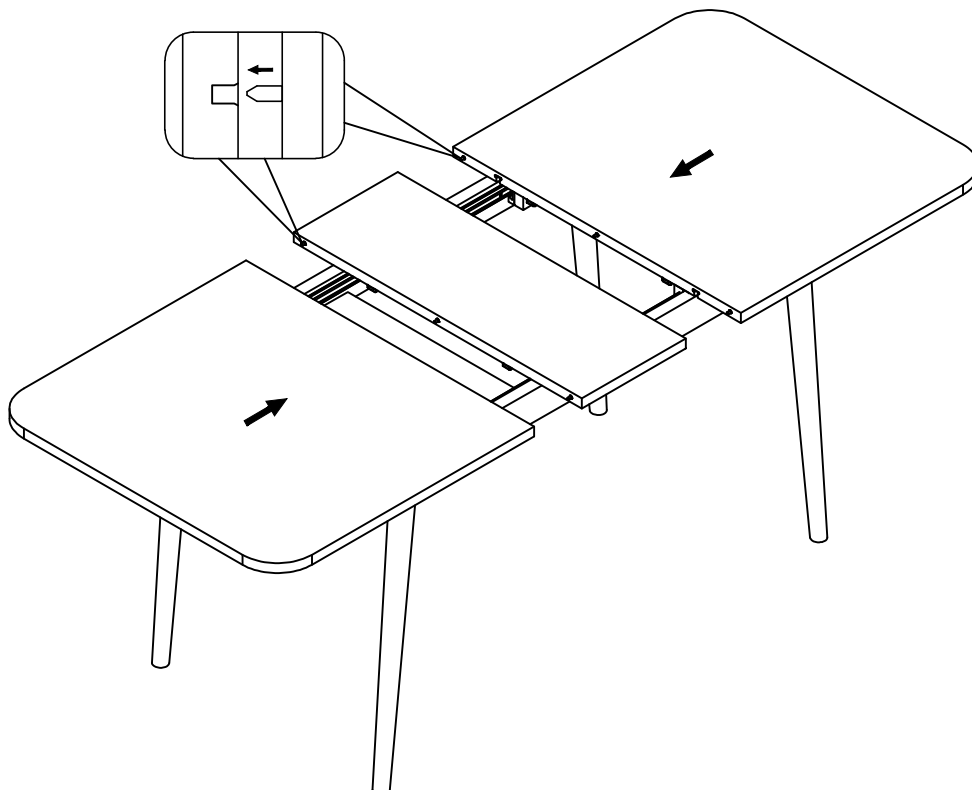 

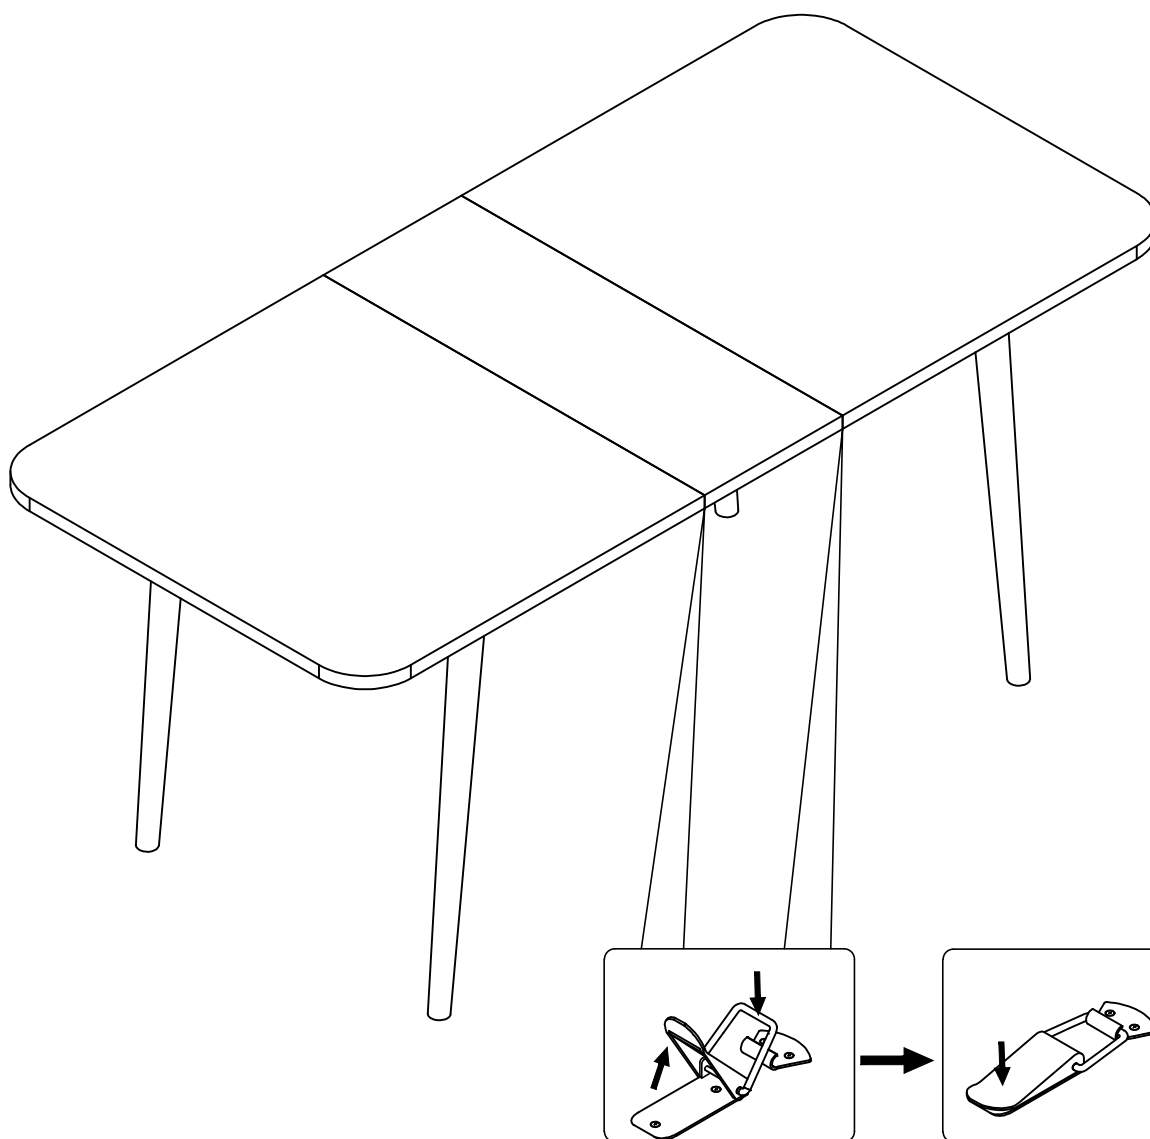 


next

STOCKHOLM 6 TO 8 EXTENDING DINING TABLE

514033

 Actual product size
H78 x W178x D83cm

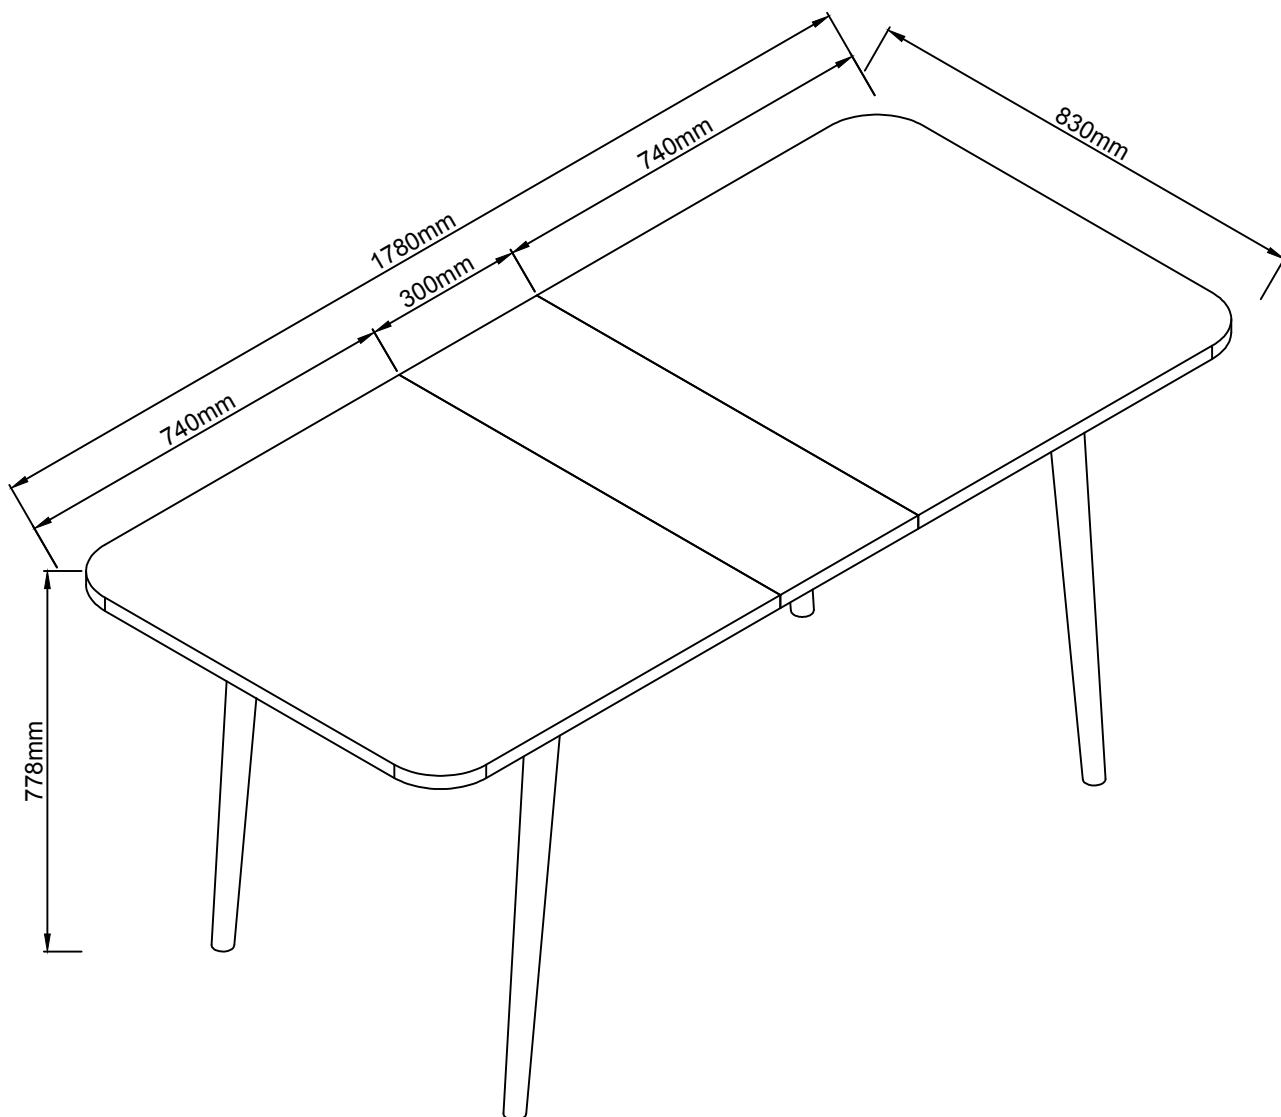

IMPORTANT- RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

This wardrobe conforms to FIRA/FRQG C004:2008

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Assembly to be carried out by a competent adult only.

During assembly children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

This product is suitable for children in the age range of children for which the product is designed (i.e. 7 – 12 years)

The maximum child weight or load 40KG.
Regularly check all fastenings to ensure that they properly tightened

Missing parts

If you are missing any fixtures and fittings for your product.
Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk