

BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

1. COLOUR

Make sure you're happy with the colour
No need to unpack everything, just check the first component.

2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

TIPS FOR RETURNS

Not completely happy with the product? No problem.
We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T

 


- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly – as it may get damaged.


next
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

The structures of hollow board & honeycomb board are as below:

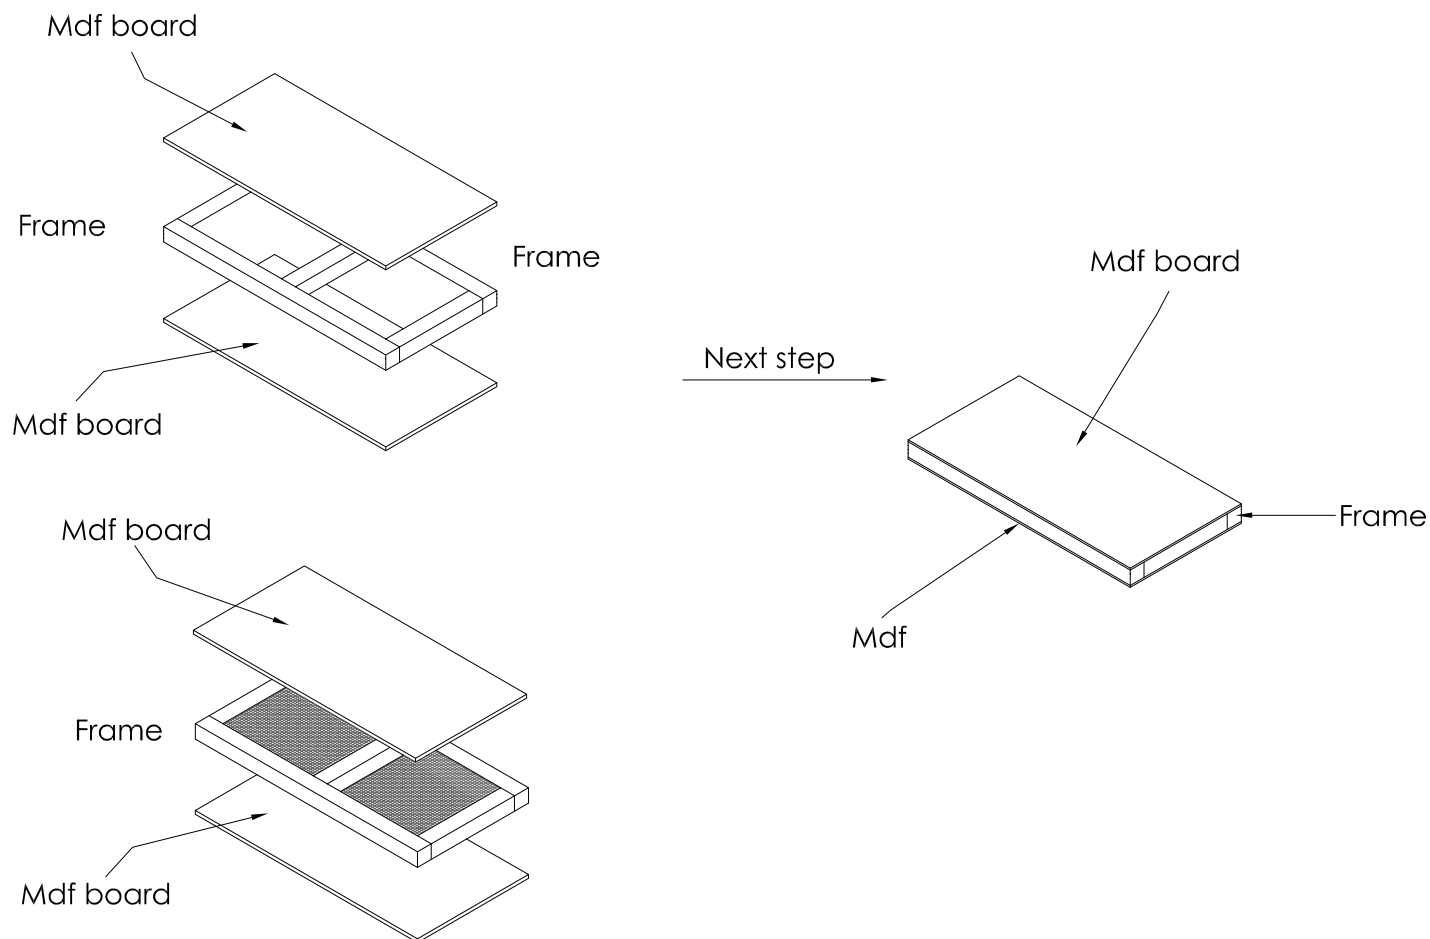

 The centre of Hollow board & Honeycomb board is hollow. To avoid damaging the hollow board/honeycomb board, we suggest you not step on the hollow board/honeycomb board or not put other part on the board on the end when you assemble the product.

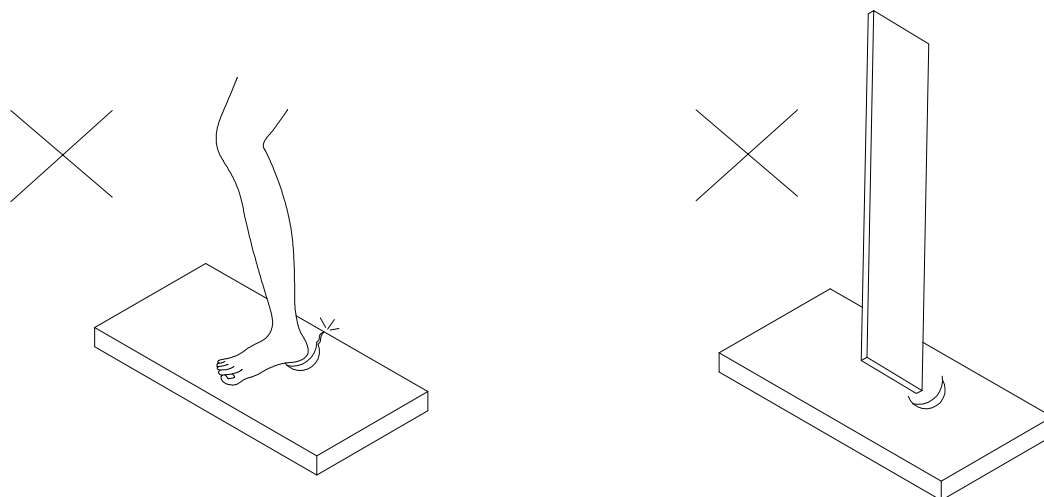

Next Retail Ltd, Dasford Road, Enderby, Leicester, LE19 4AT

next

 
COLORADO CHEST

548255

Assembly instructions

Actual product size

H103 x W76 x D42cm

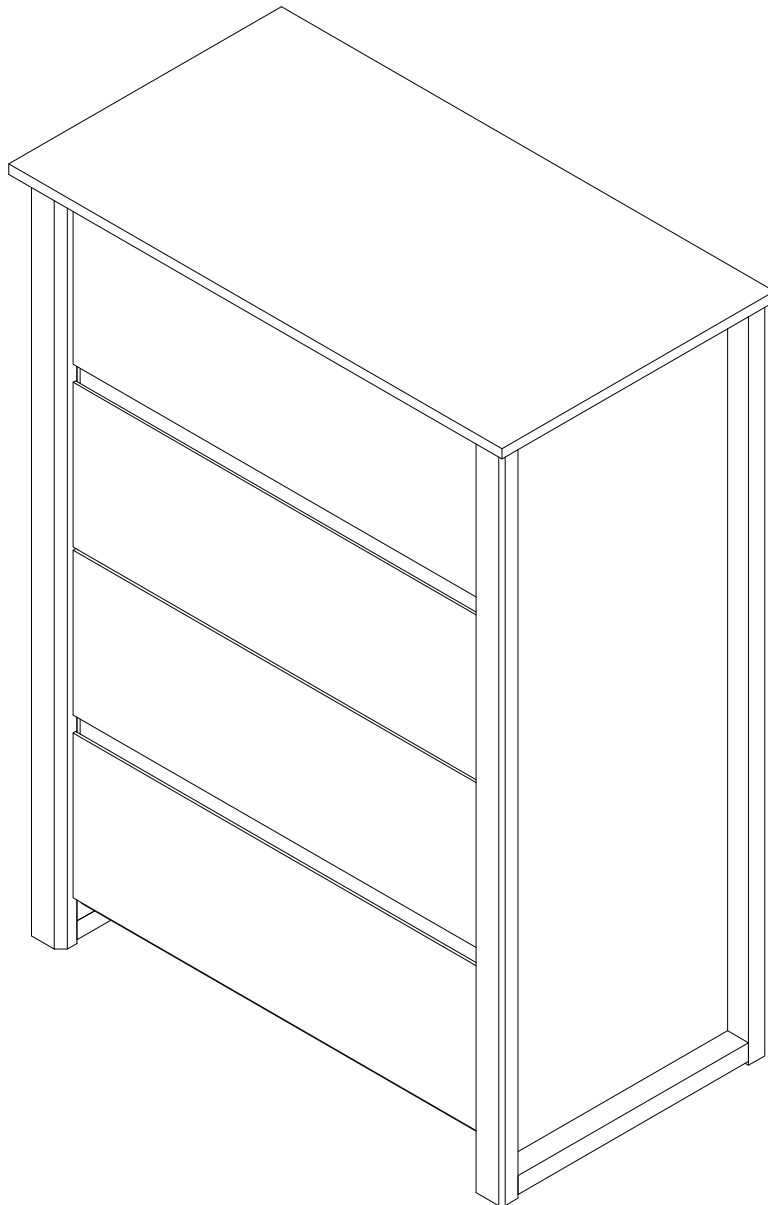

Need Help?

With: Assembly instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT — RETAIN FOR FUTURE REFERENCE

BEFORE YOU START

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from the construction area.

This product should only be used on firm, level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly

Due to the size of the product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.

 
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placement or coaster.

Number of people required to assemble

Two persons are required to assemble this item.


Time to assemble

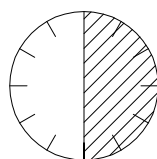

30 Minutes



 Tools required

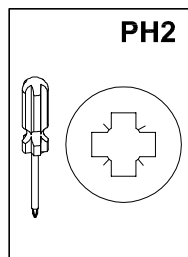

not supplied

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible.

 
If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT

To View our full furniture range please visit www.next.co.uk

GETTING TO KNOW YOUR PRODUCT

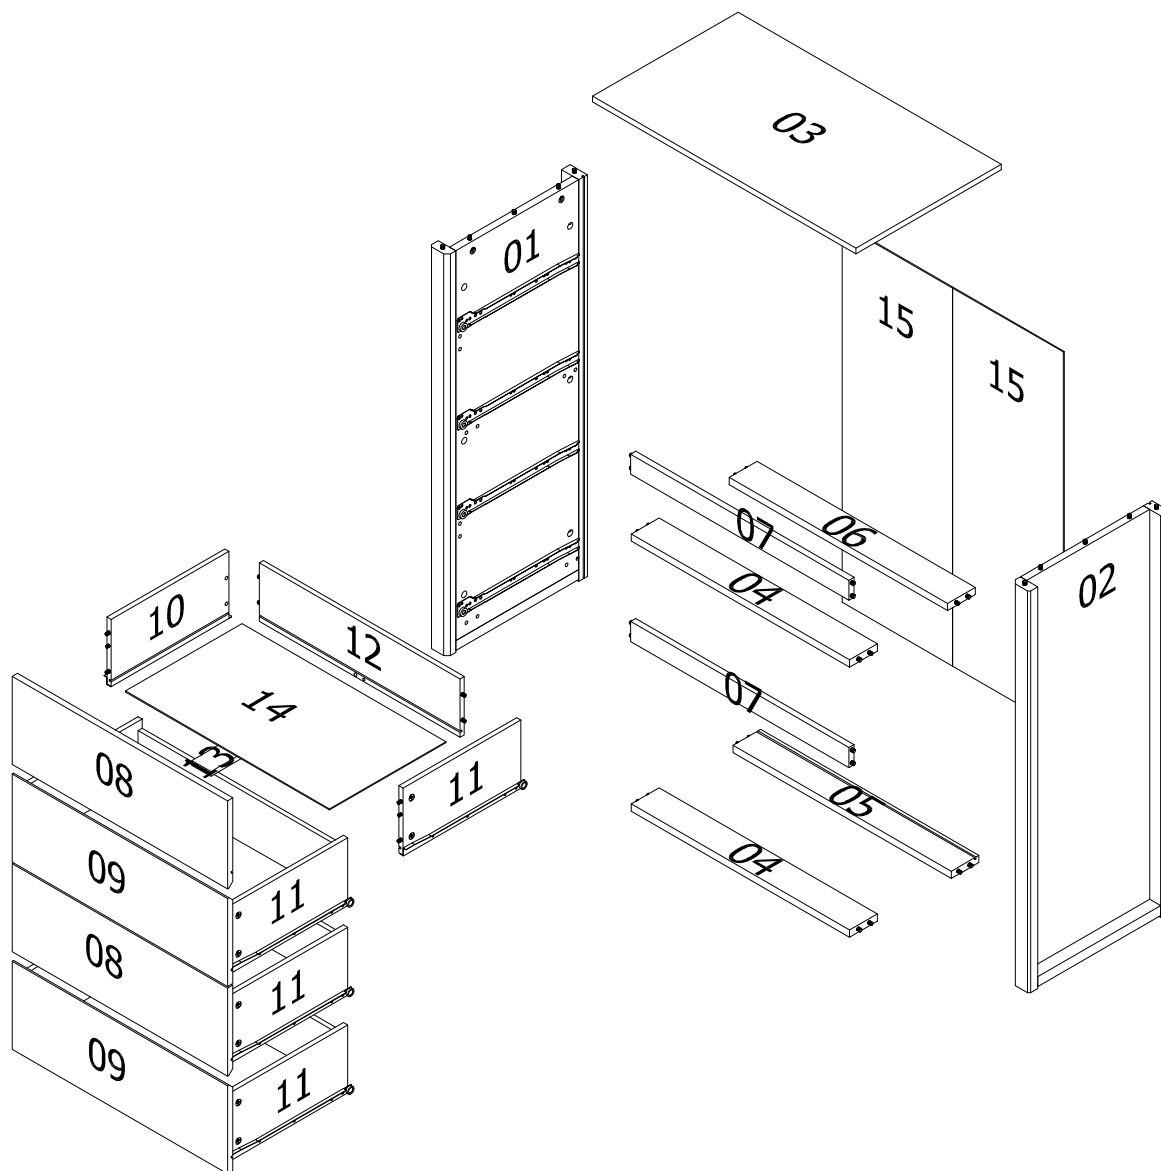


NO.	PART NAME	QTY
1	SIDE PANEL (LEFT)	1
2	SIDE PANEL (RIGHT)	1
3	TOP PANEL	1
4	FRONT RAIL PANEL (CENTER & BOTTOM)	2
5	BACK RAIL PANEL (BOTTOM)	1
6	BACK RAIL PANEL (TOP)	1
7	CENTER RAIL PANEL	2
8	DRAWER FRONT (TOP)	2

NO.	PART NAME	QTY
9	DRAWER FRONT (BOTTOM)	2
10	DRAWER SIDE (LEFT)	4
11	DRAWER SIDE (RIGHT)	4
12	DRAWER BACK	4
13	DRAWER SUPPORT	4
14	DRAWER BOTTOM	4
15	BACK PANEL	2

Fixtures and fittings
supplied (actual size)

Ref	Dimensions	Qty	* Extra Fittings
A	M3.5 x 15mm	8	1
-	Ø6 x 20mm	NA	2
-	Ø8 x 25mm	NA	2
-	28mm x Ø8	NA	2
-	Ø15 x 12mm	NA	2
-	12/13mm	NA	2

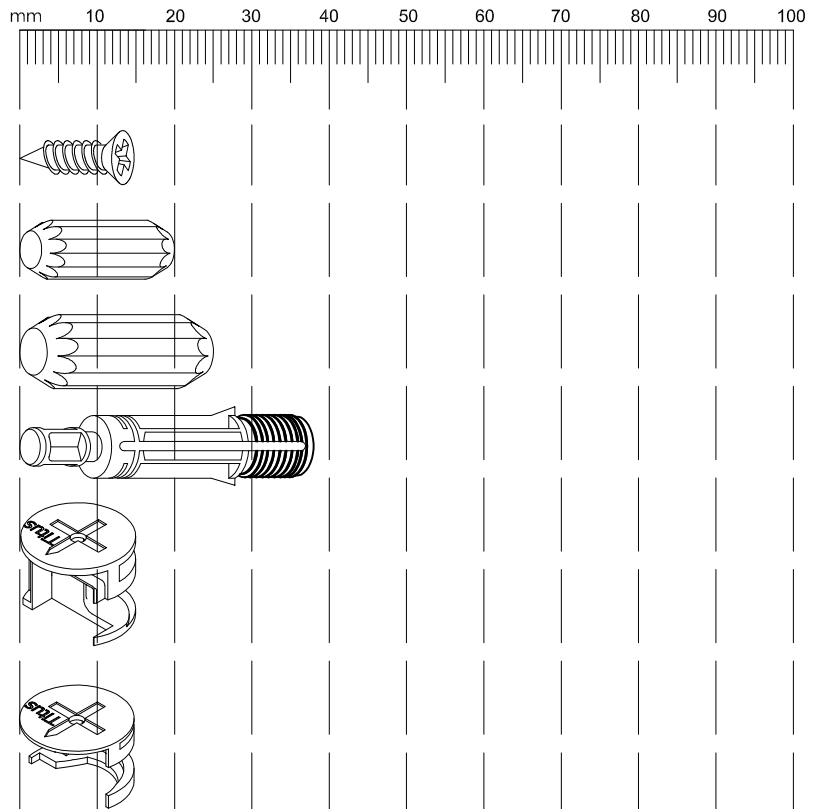 

Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Visual	Qty	* Extra Fittings
B	N/A		8	1

1

DON'T STOP UNTIL THE 2 O'CLOCK LOCK
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN
THE POSITIONS SHOWN IN THE DIAGRAMS BELOW




 START







CORRECT
LOCK

 
PUSH THE TWO PANELS TOGETHER ALLOWING
THE DOWEL TO ALIGN WITH THE HOLE

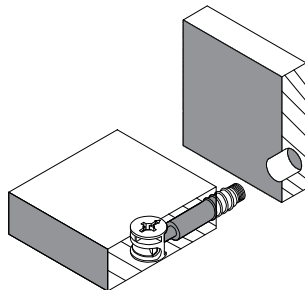



TURN THE CAM IN A CLOCKWISE DIRECTION

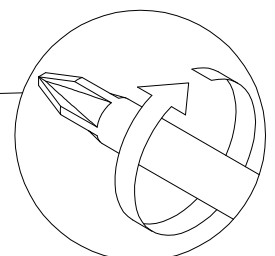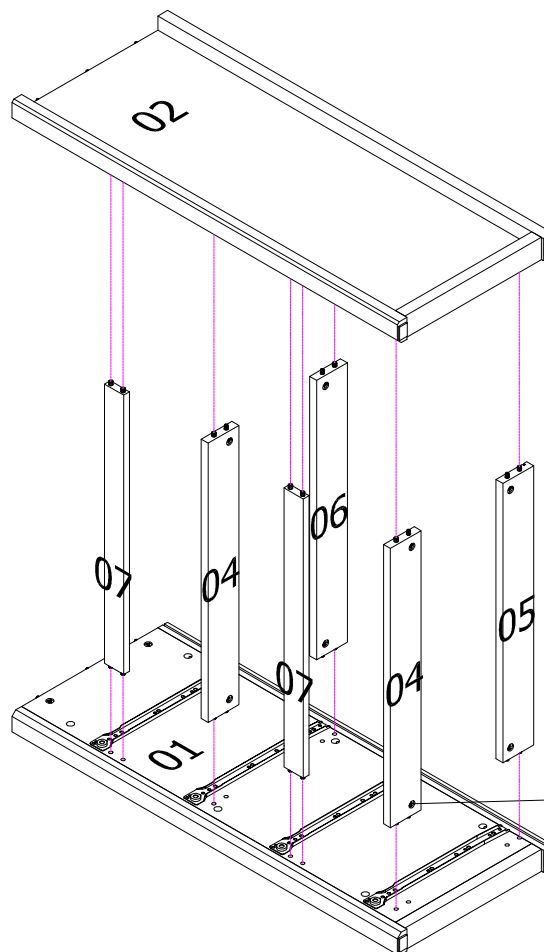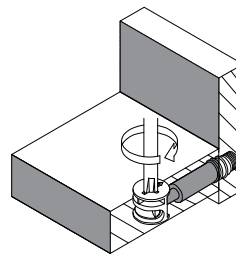    



2

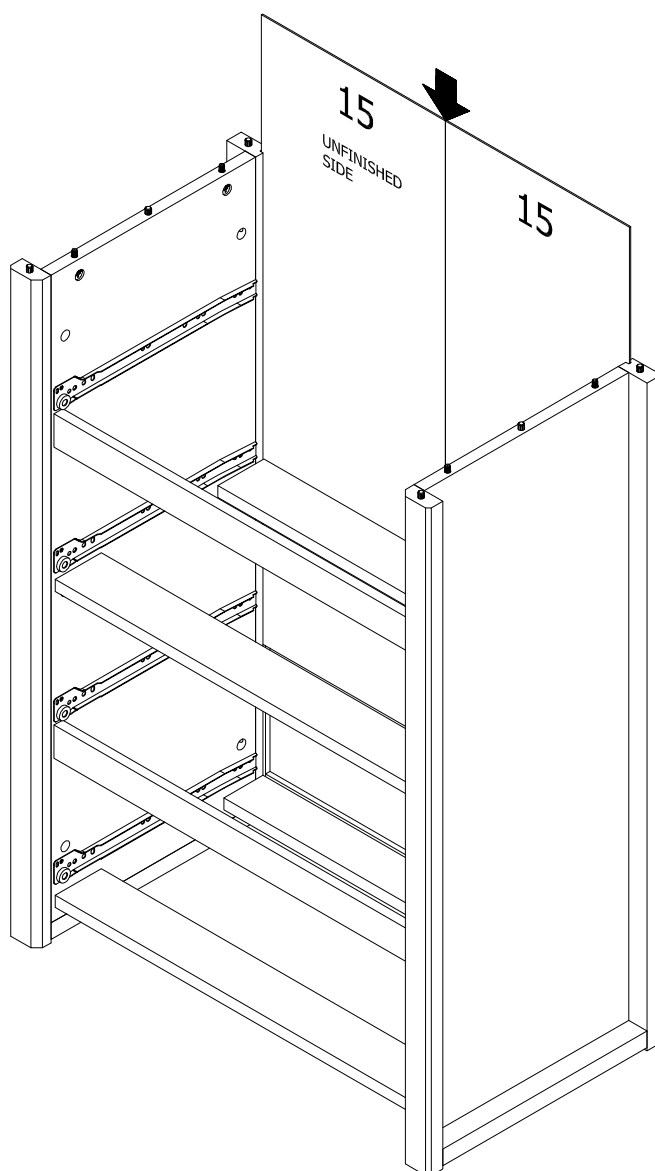 

3

 
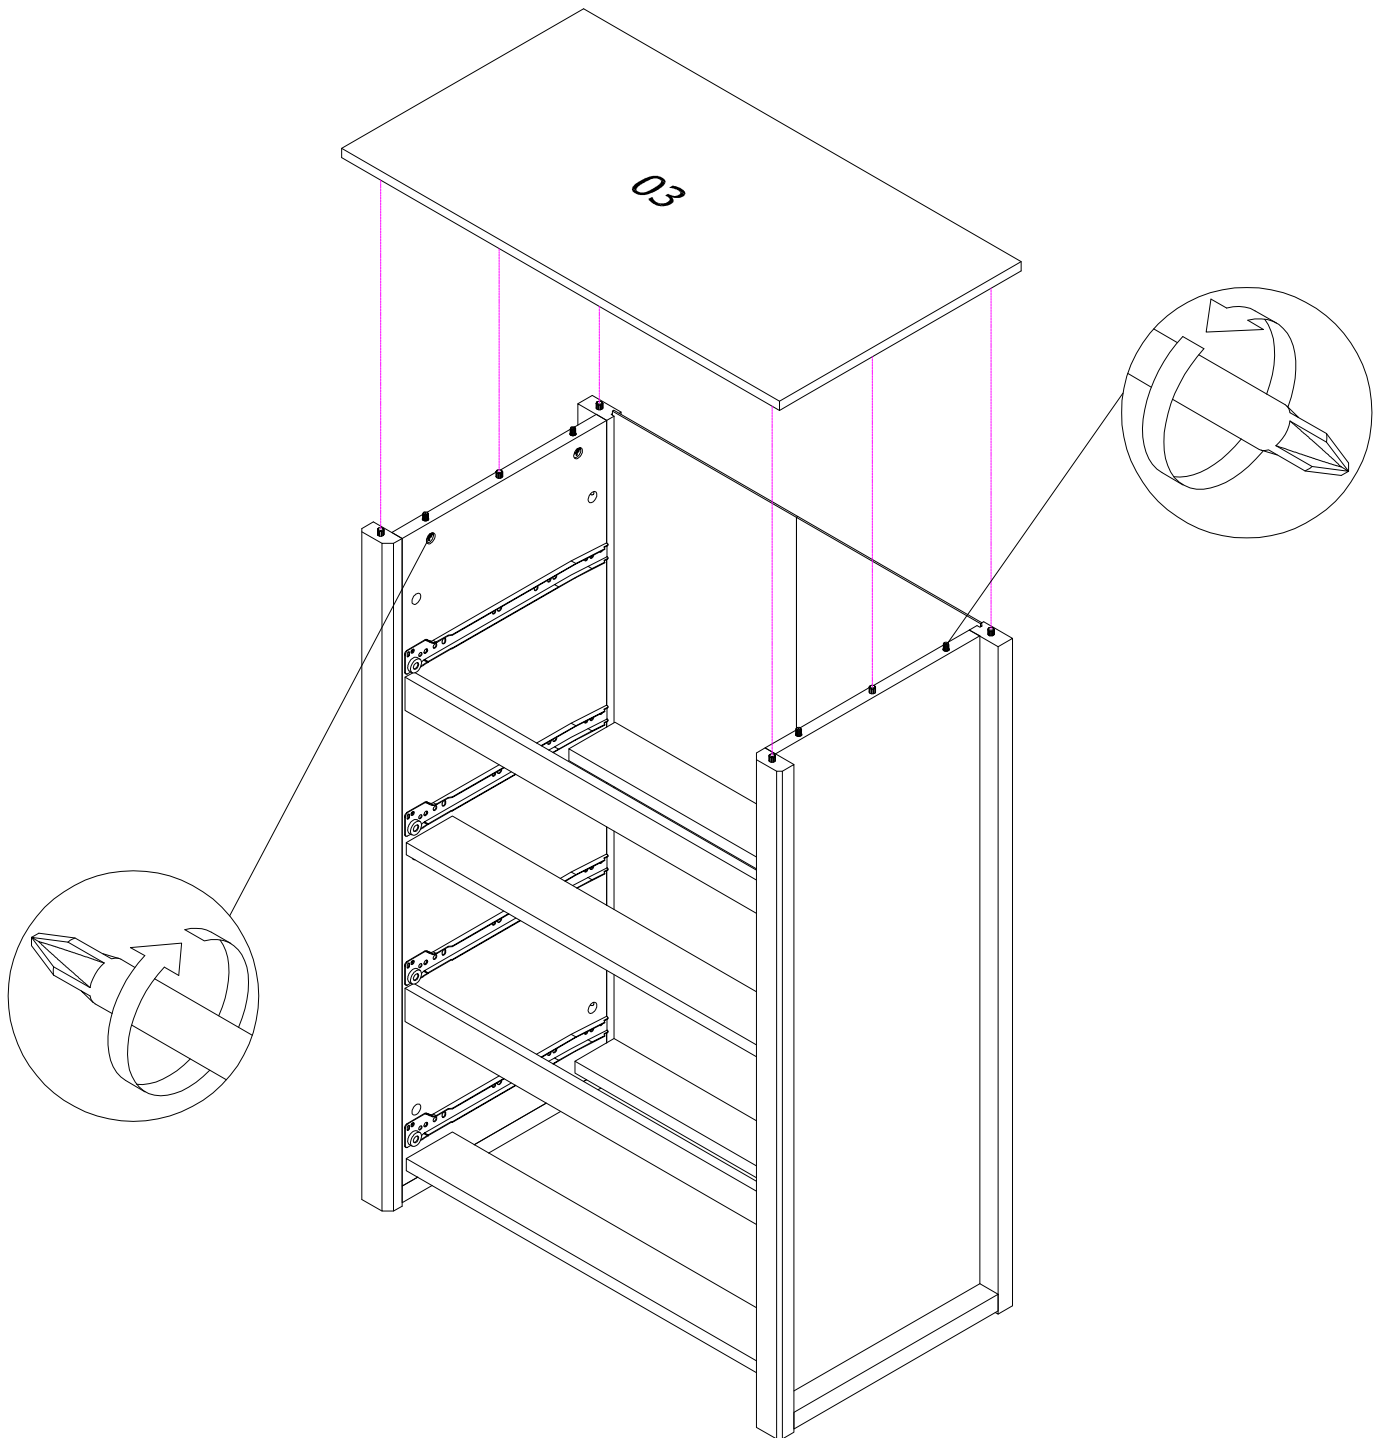 


4

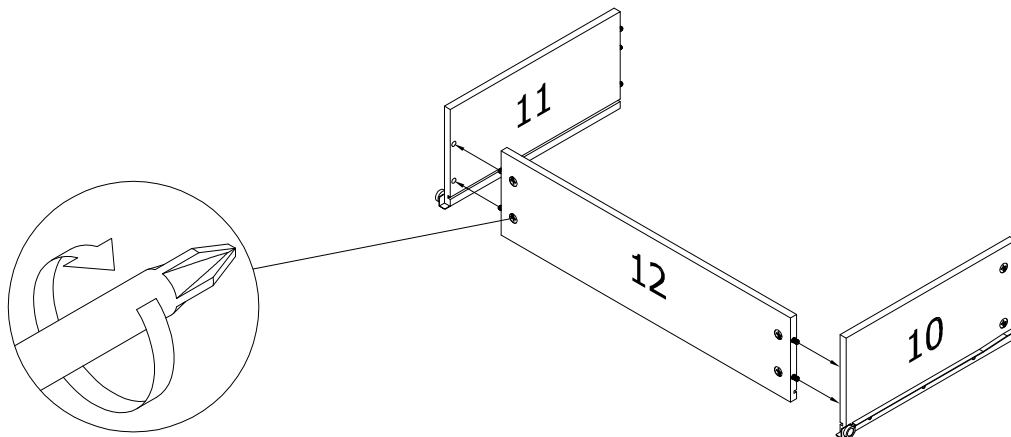  



X4

  5

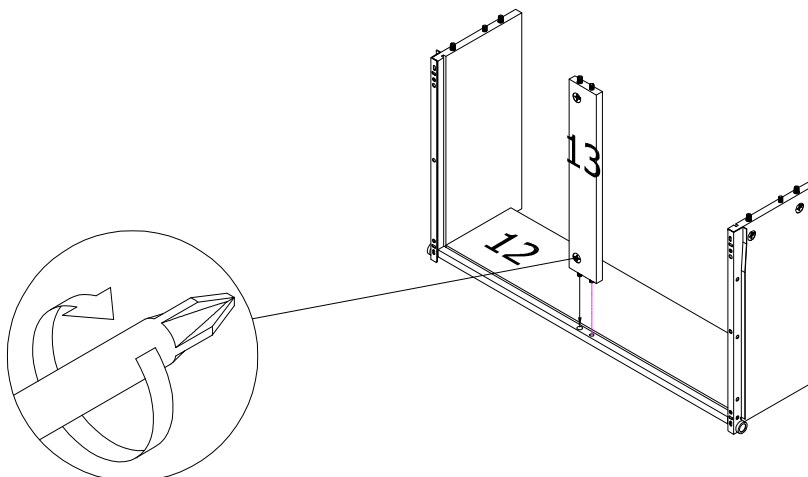


X4

  6



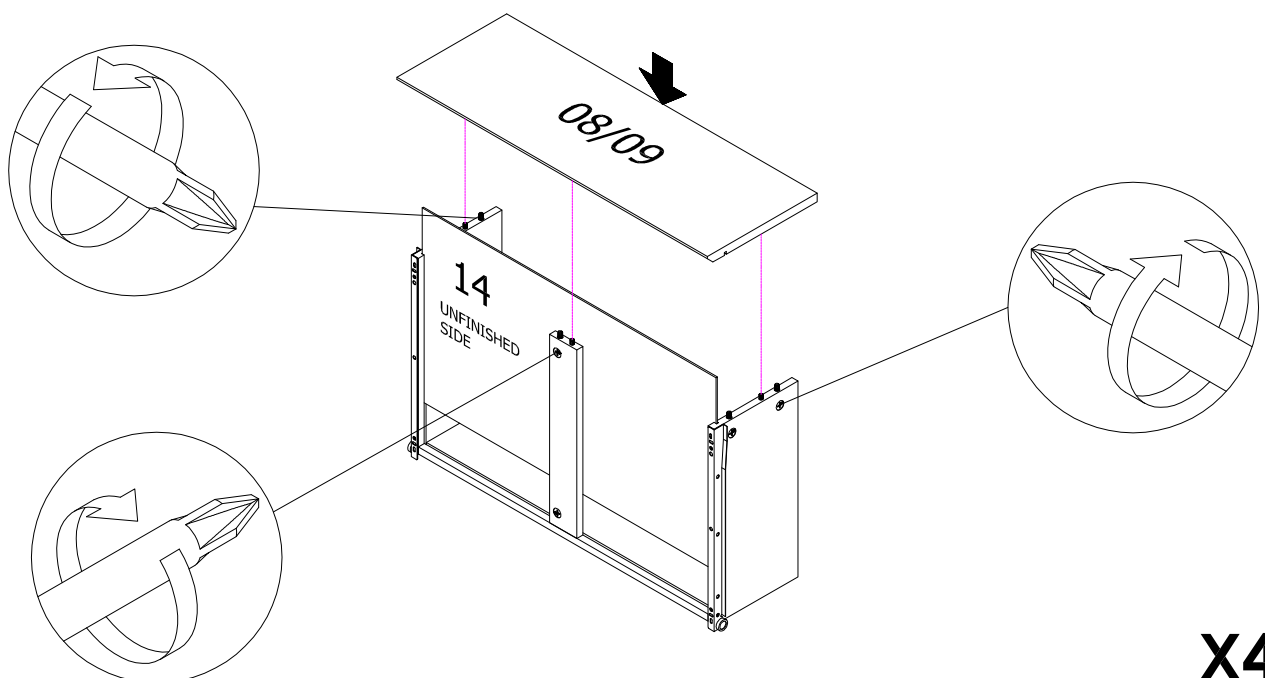


X4

 7

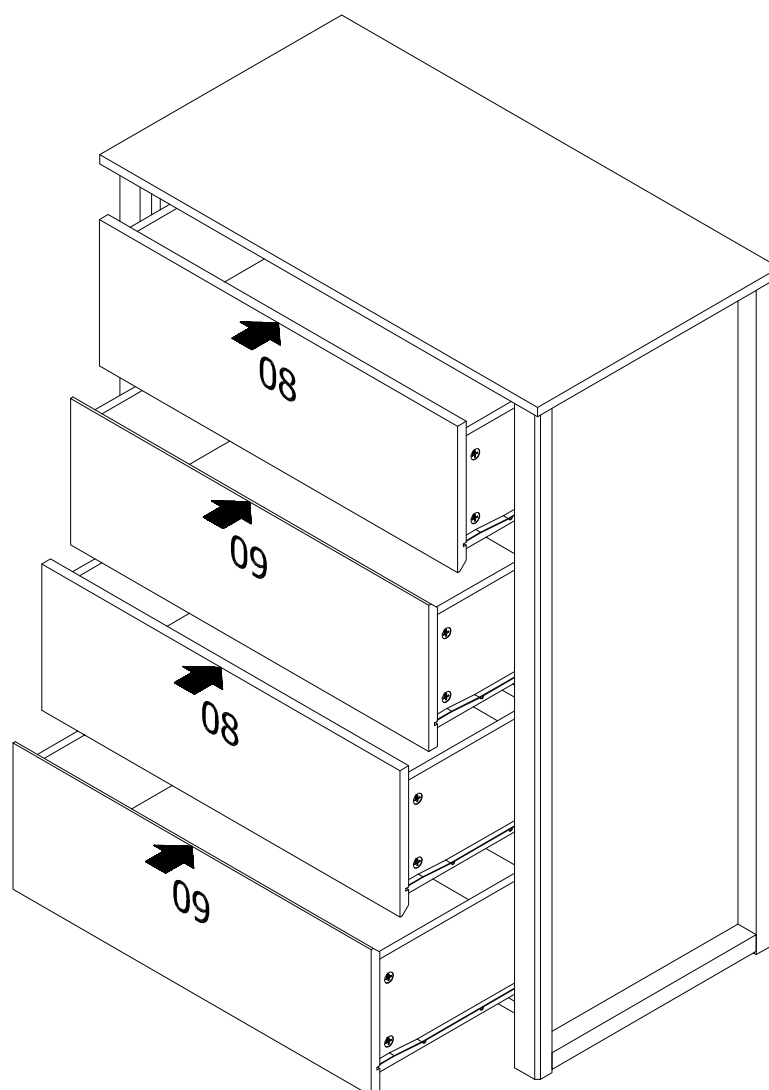


8

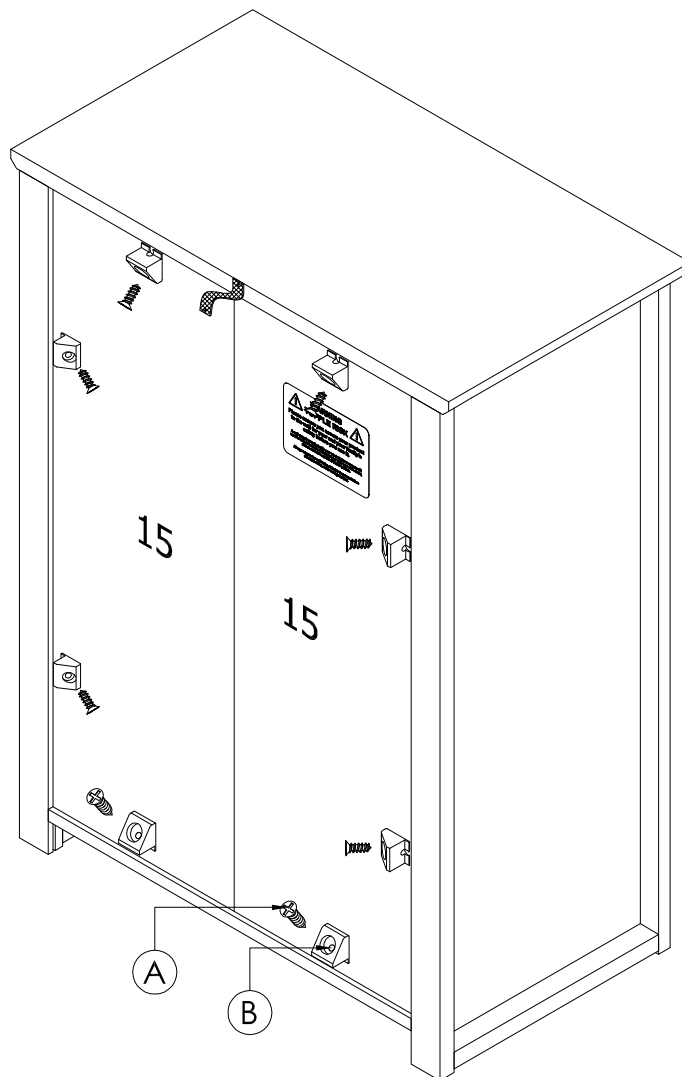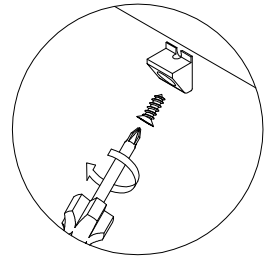   

PH2

 A X 8



3.5 X 15MM

B X 8

 
 


N/A

9

NOTE :
WE RECOMMEND THE USE OF THE WALL STRAP PROVIDED FOR SAFETY REASONS. PLEASE FOLLOW THE INSTRUCTIONS INCLUDED WITH THE STRAP. N. B. WALL FIXINGS ARE NOT INCLUDED PLEASE SOURCE SUITABLE FIXINGS FOR YOUR WALL TYPE. IF IN DOUBT, PLEASE CONSULT A QUALIFIED TRADESPERSON.
WARNING: ALWAYS ENSURE THE WALL TO BE DRILLED IS FREE FROM HIDDEN ELECTRICAL WIRES, WATER AND GAS PIPES.

WALL

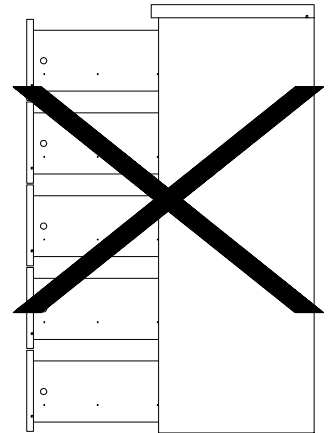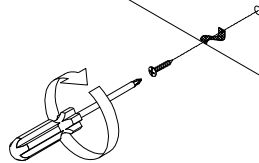

CAUTION :
PLEASE DO NOT OPEN MORE THAN ONE DRAWER AT A TIME, ESPECIALLY WHEN LOADED, AS THIS MAY CAUSE THE UNIT TO TIP FORWARD

Actual product size

H103 x W76 x D42cm

