

next

 
# STOCKHOLM TRIPLE WARDROBE

527059/644776

Assembly instructions

**Actual product size**

H185 x W141x D50cm

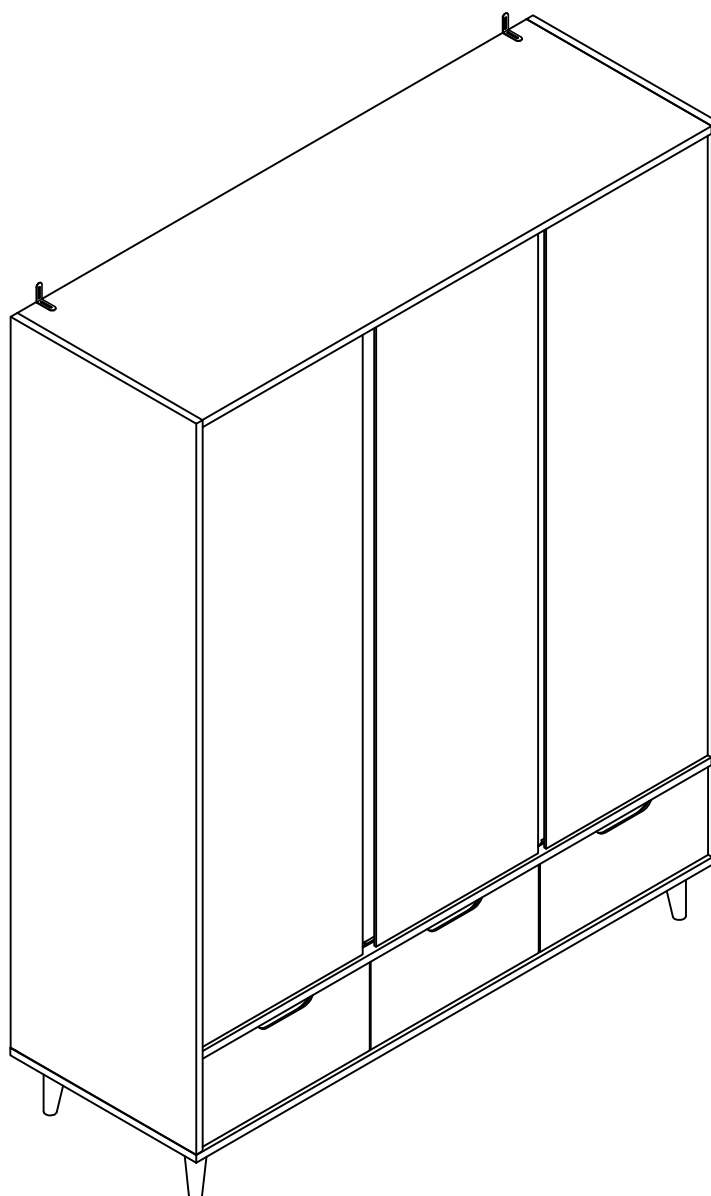

**IMPORTANT !  
RETAIN FOR FUTURE REFERENCE**

**Need Help ?**

With: Assembly instruction

Missing or damaged parts

**CALL: 0333 777 8999**

 
## BEFORE YOU START

### Number of people required to assemble


Two people are required to assemble this item



### Time to assemble

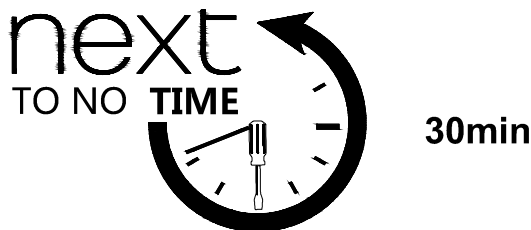

### Tools required

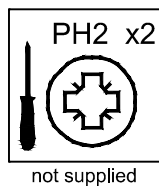 

### Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

### Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

## Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Assembly to be carried out by a competent adult only.

During assembly children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

This product is suitable for children in the 7–12 years of children for which the product is designed

The maximum 30kgs load for which the product is suitable.

## Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

## Home service technicians

 
If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

## You can write to us at

Home Customer Services  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

 



 
 
 
 

 
 

 
To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)

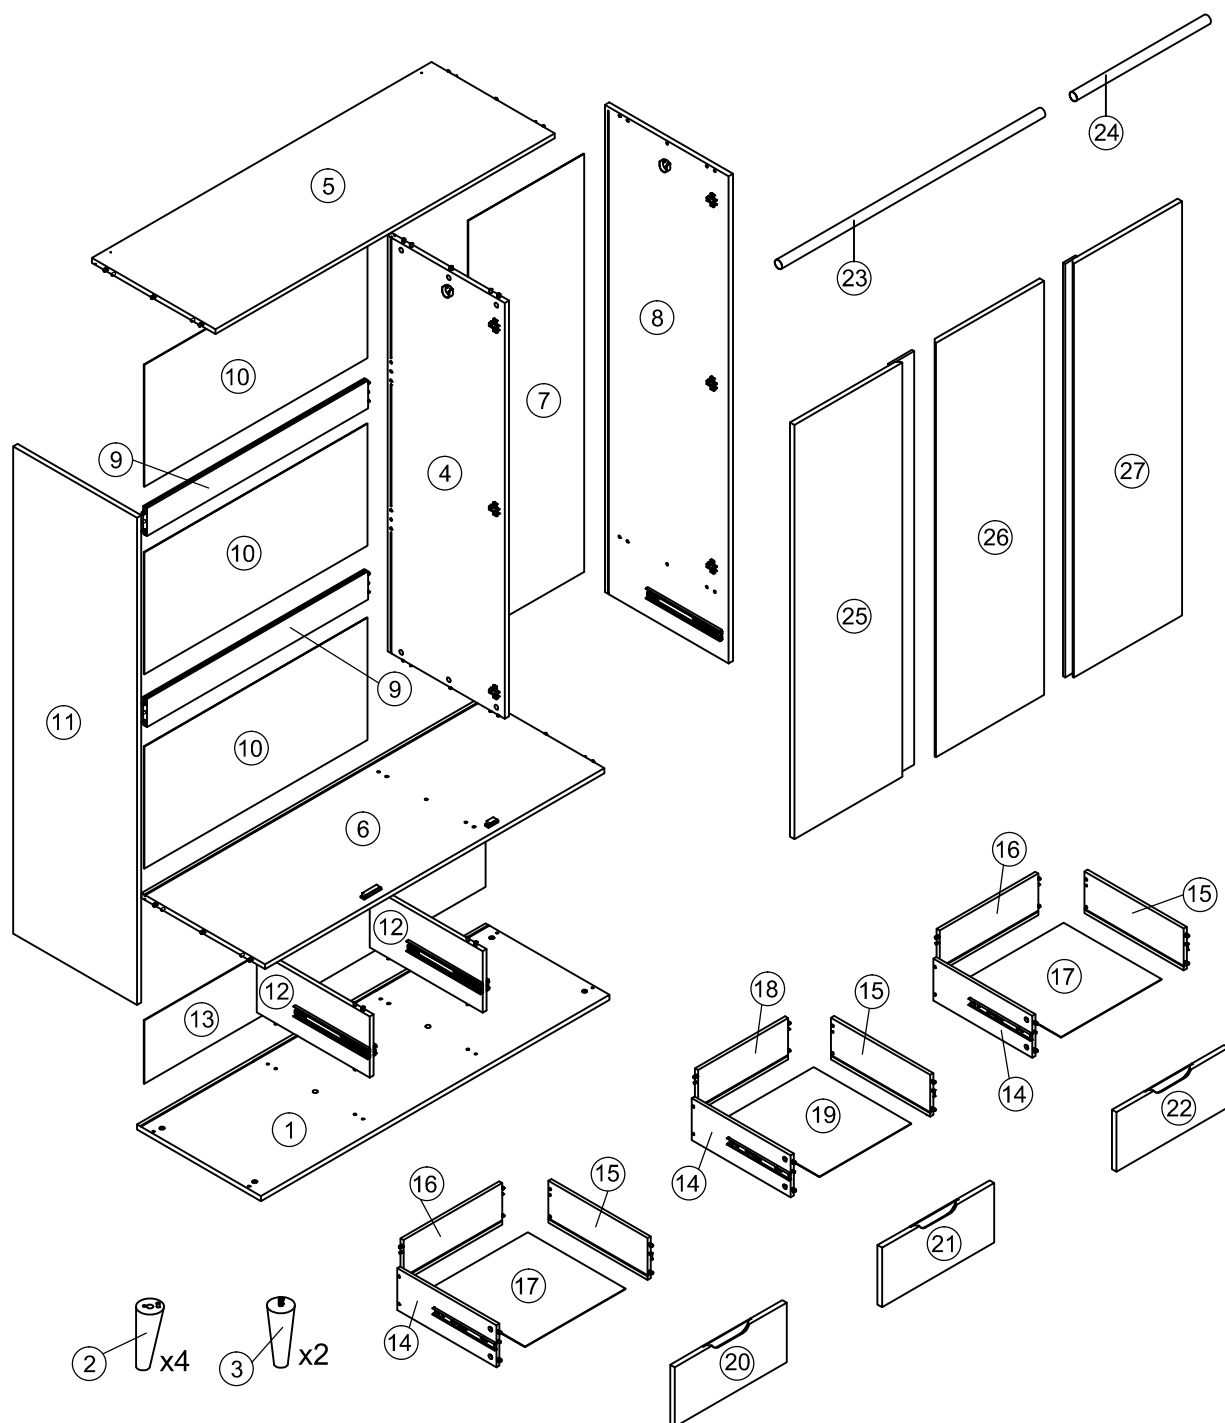


 










## GETTING TO KNOW YOUR PRODUCT






Components supplied. Please use this guide if you require replacement parts.

    Ref	Dimensions	Visual	Qty	Ctn
1	141*50cm		1	2
2	5*13cm		4	3
3	5*13cm		2	3
4	47*147cm		1	1
5	50*137cm		1	2
6	50*137cm		1	2
7	47*148cm		1	3
8	50*170cm		1	1
9	10*89cm		2	1
10	43*90cm		3	2
11	50*170cm		1	1
12	19*46cm		2	3
13	20*138cm		1	3

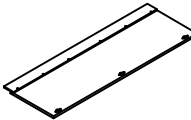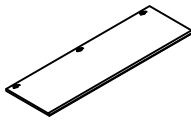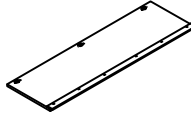Ref	Dimensions	Visual	Qty	Ctn
14	15*40cm		3	3
15	15*40cm		3	3
16	15*40cm		2	2
17	39*41cm		2	2
18	15*39cm		1	2
19	39*40cm		1	2
20	19*45cm		1	2
21	19*45cm		1	2
22	19*45cm		1	2
23	3*89cm		1	1
24	3*46cm		1	1
25	50*147cm		1	3
26	44*147cm		1	3
27	45*147cm		1	3

**Fixtures and fittings supplied (actual size)**

 
Ref	Dimensions	Qty	Spare Qty
B2	Ø15 x 10mm	N/A	2
B3	Ø15 x 12mm	N/A	2
B8	Ø8 x 38mm	N/A	2
D6	Ø8 x 30mm	N/A	2
D3	Ø6 x 30mm	N/A	2
D16	Ø6 x 20mm	N/A	1
W19	Ø8 x 35mm	4	1
S41	Ø4 x 16mm	2	1
U139	Ø4.5 x 15mm	18	2
Y8	Ø6 x 50mm	8	1

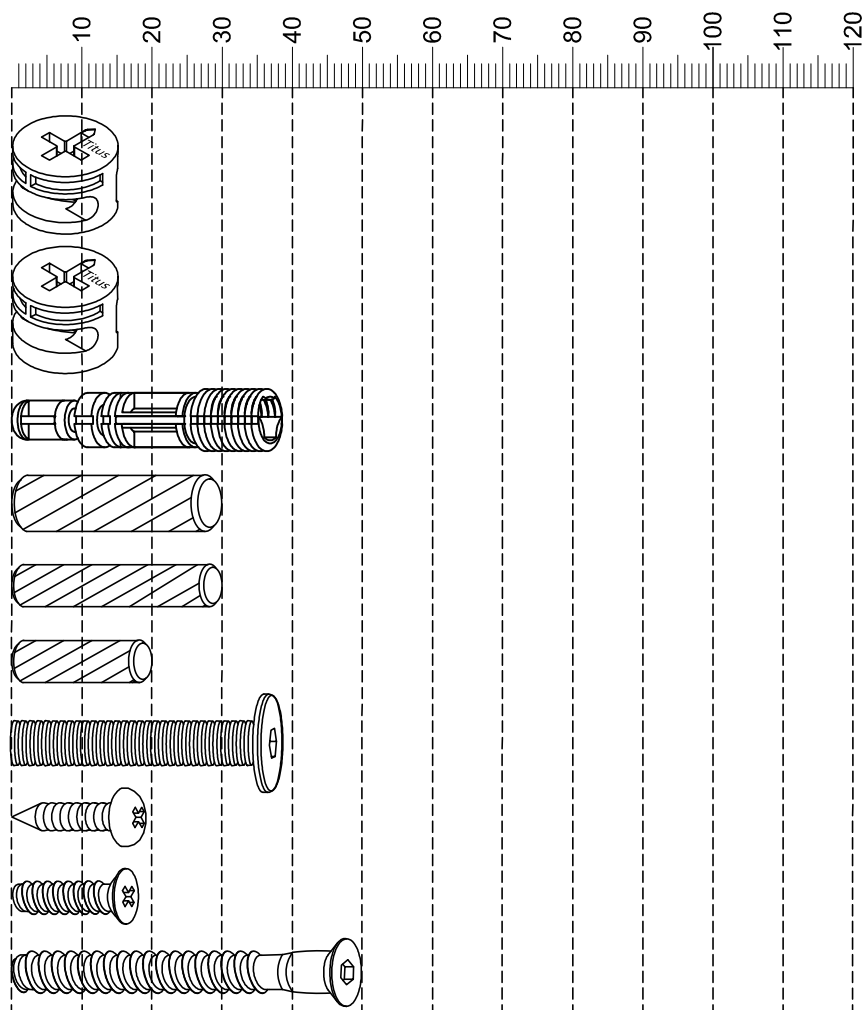



**Fixtures and fittings supplied ( not to scale)**

 
Ref	Dimensions	Qty	Spare Qty	Visual
T4	N/A	2	N/A	
O1	Ø25	24	2	
T38	N/A	16	2	
N1	N/A	2	N/A	
C11	N/A	6	N/A	
C16	N/A	3	N/A	

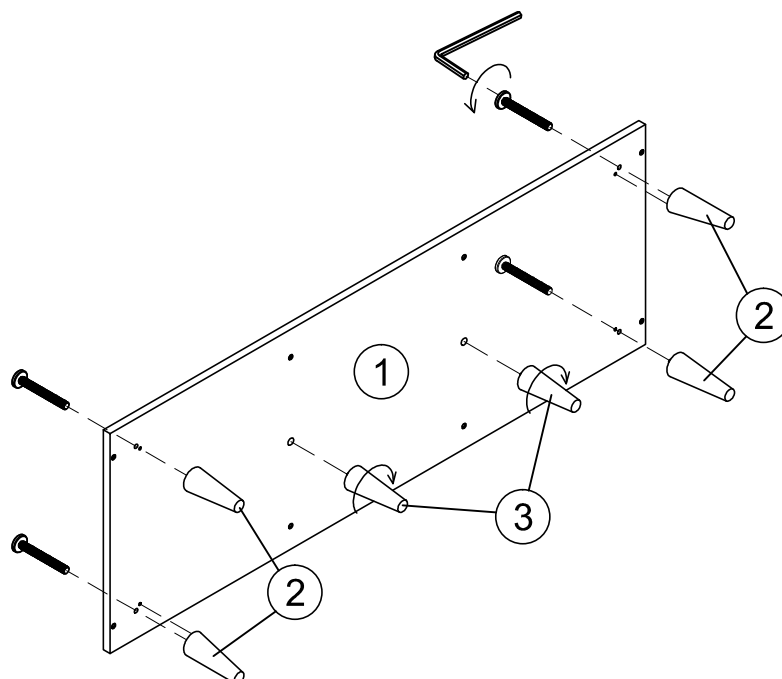

1



T4	N/A	2	
W19	Ø8 x 35mm	4	

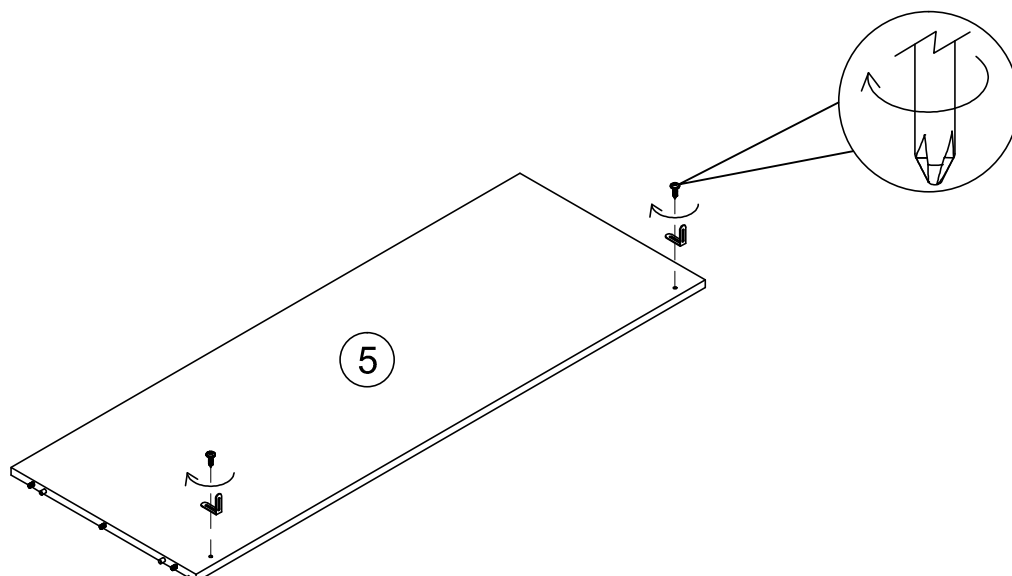 2




S41	Ø4 x 16mm	2	 
N1	N/A	2	


3

## DON'T STOP UNTIL THE 2 O'CLOCK LOCK

 
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE  
ARROW POINTS IN THE POSITIONS SHOWN IN THE  
DIAGRAMS BELOW

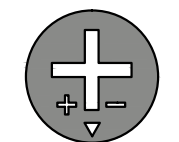


START

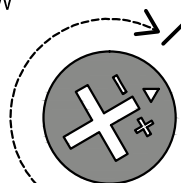 


CORRECT  
LOCK

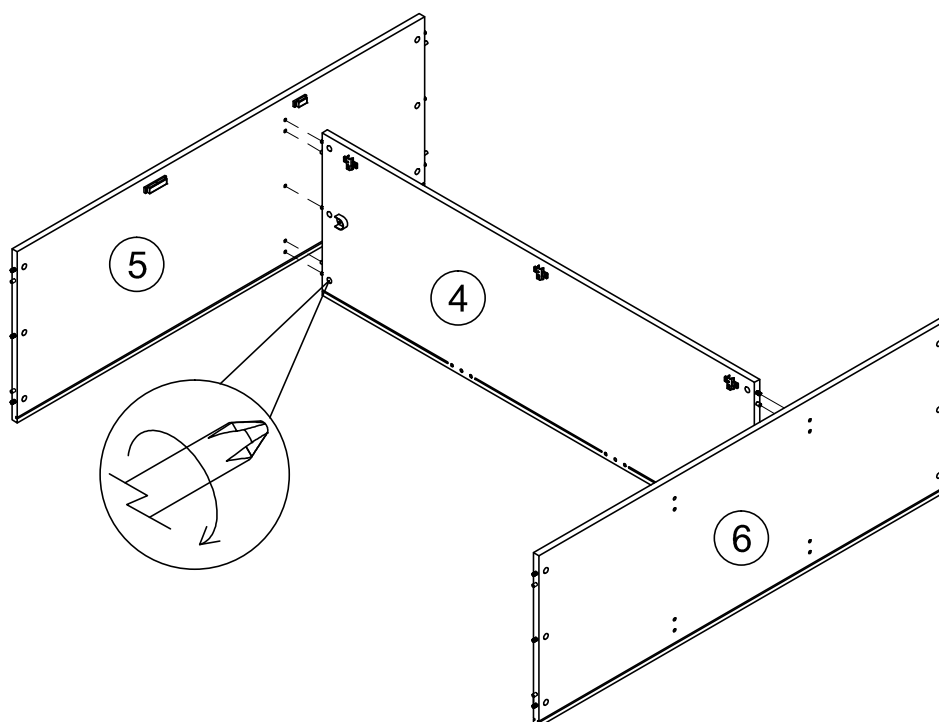 

 
PUSH THE TWO PANELS TOGETHER ALLOWING THE  
DOWEL TO ALIGN WITH THE HOLE

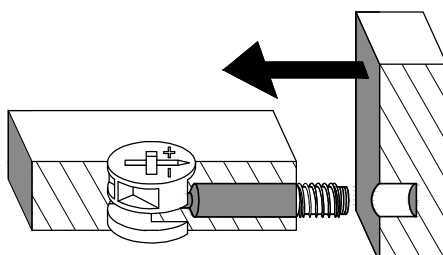


TURN THE CAM IN A CLOCKWISE DIRECTION

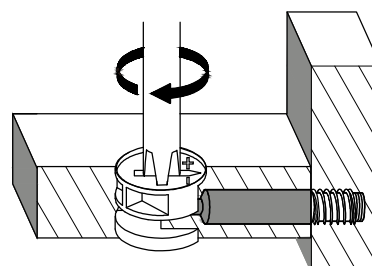 


4

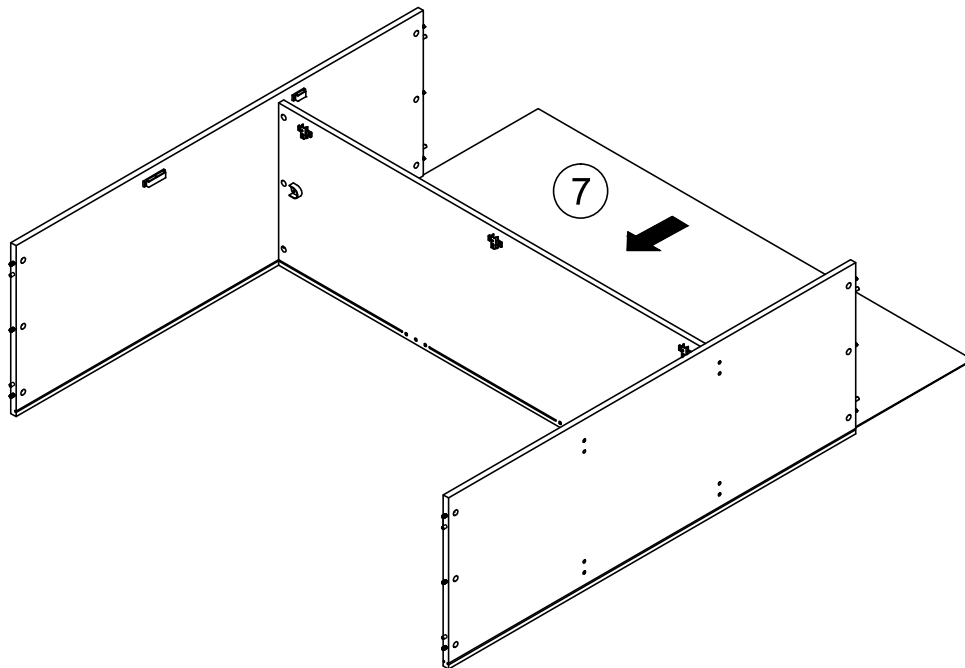 


5

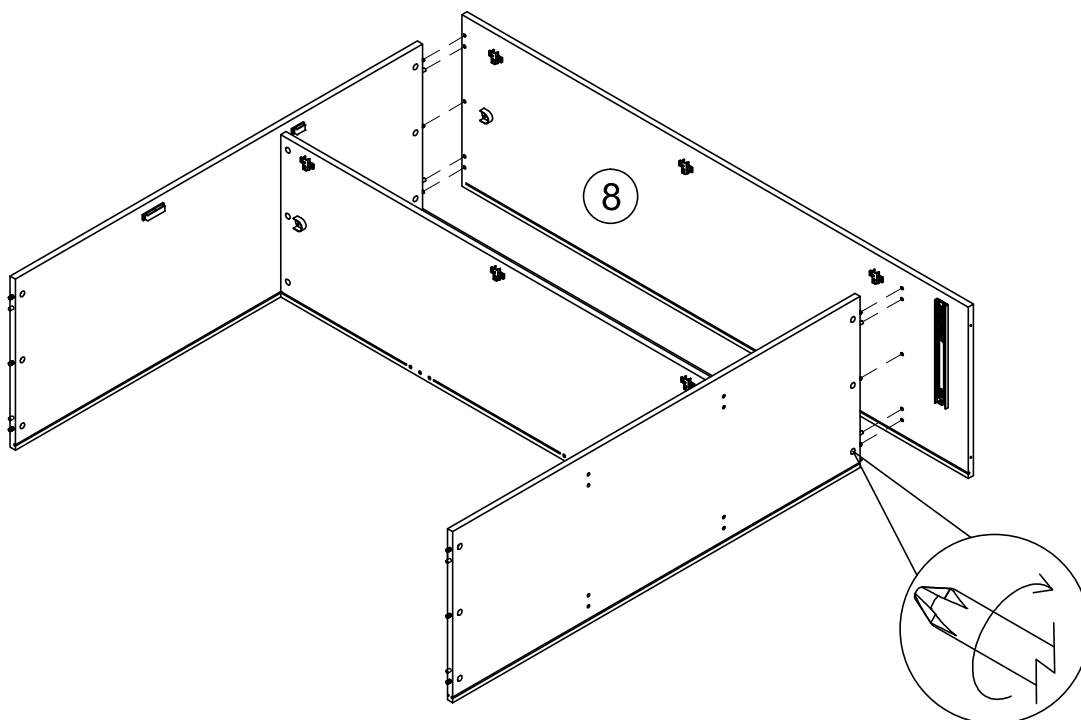 


6

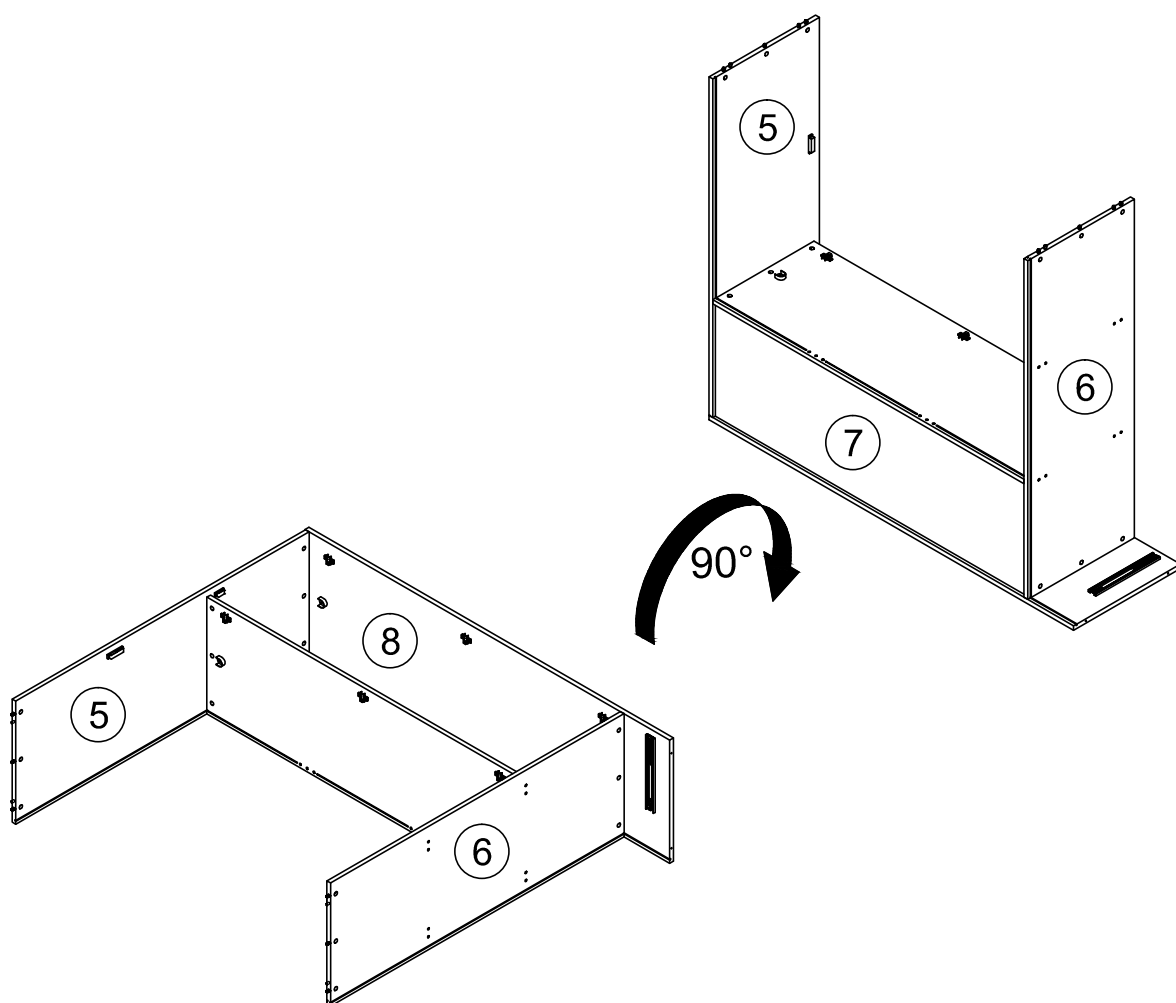 


7

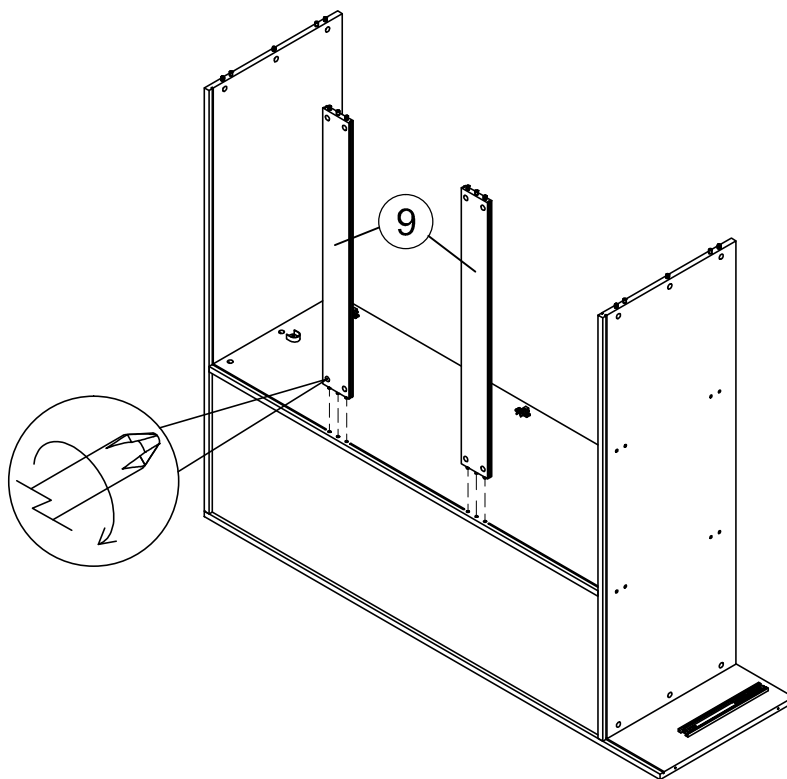 


8

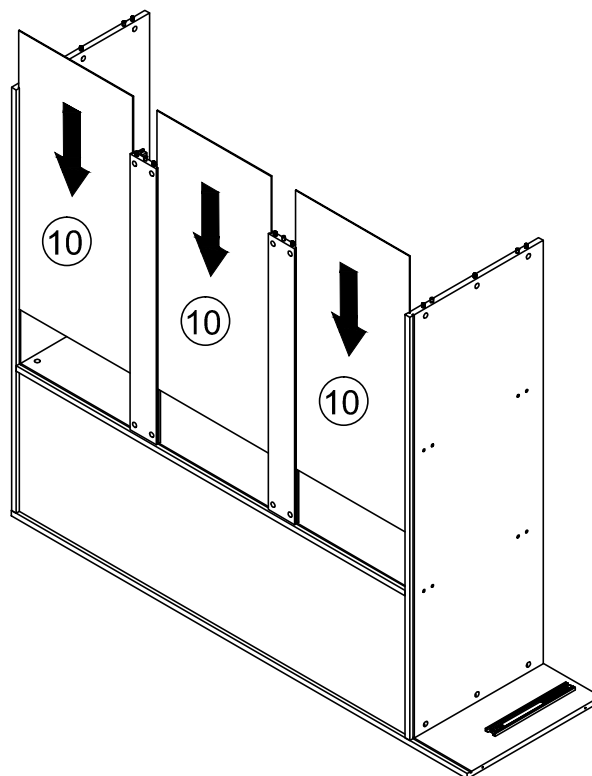 

9

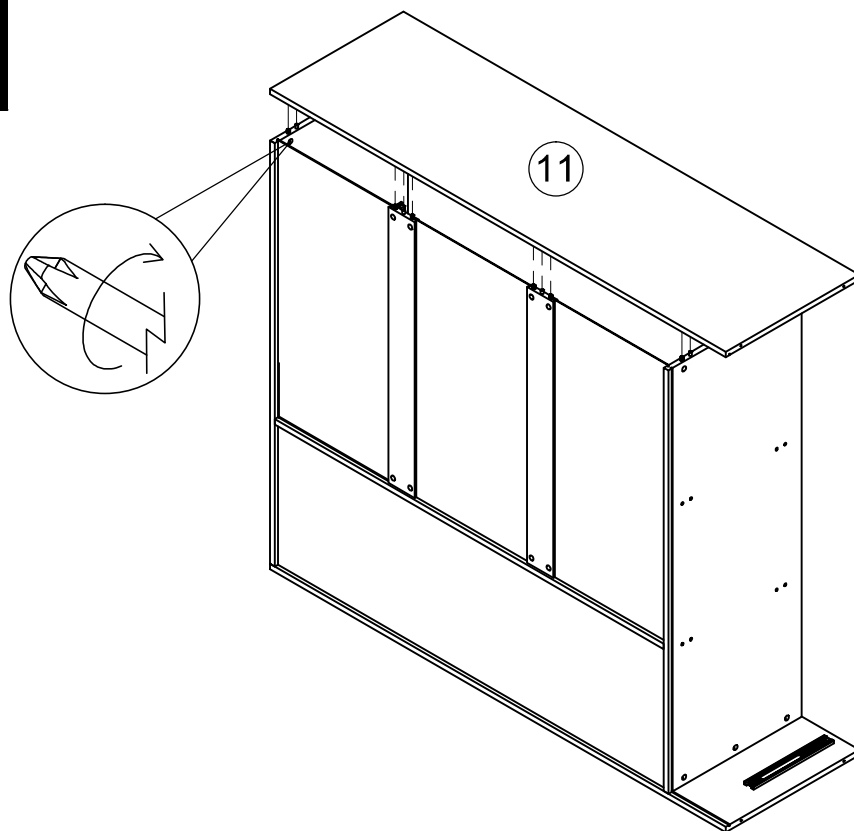 


10

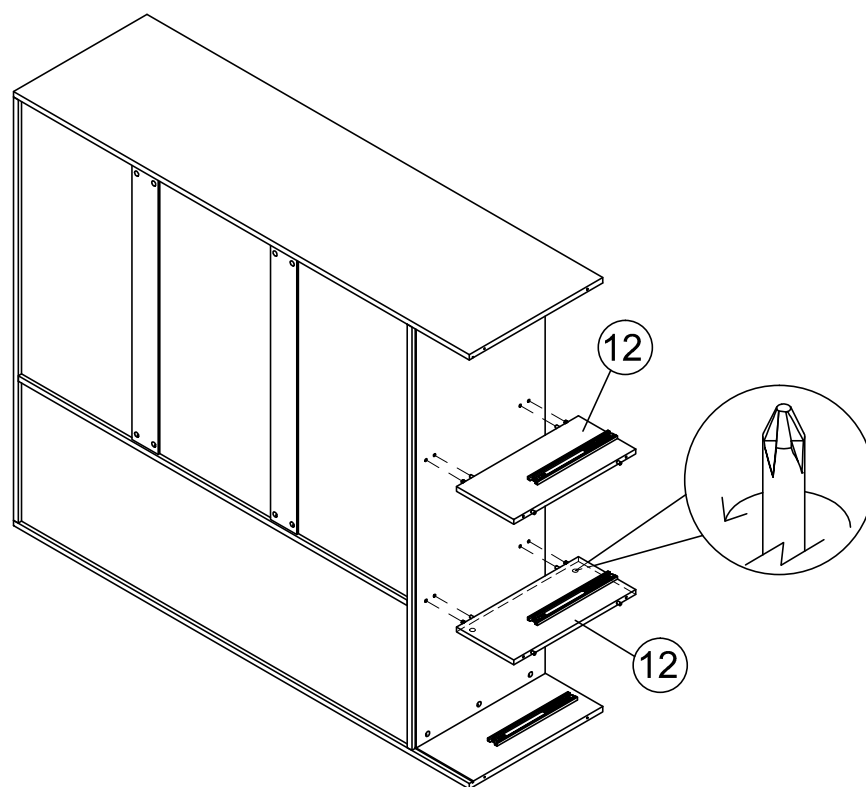 




11

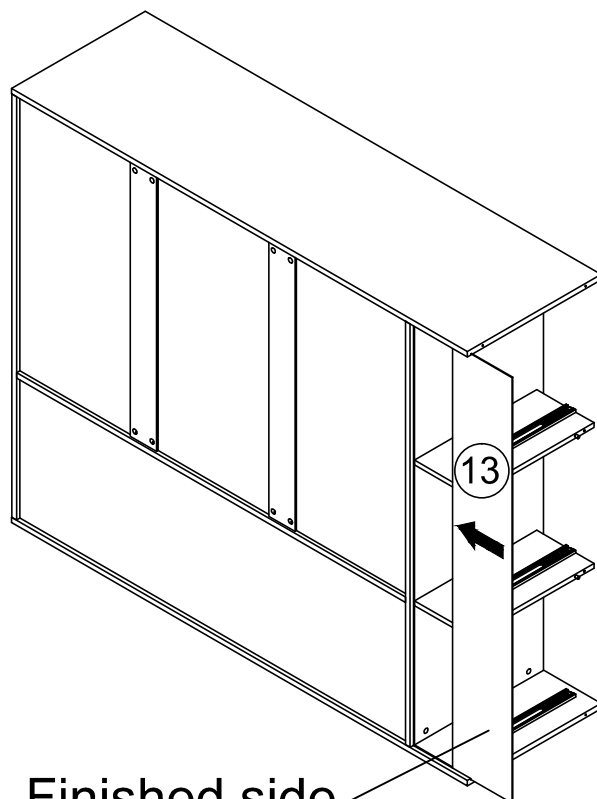 

12

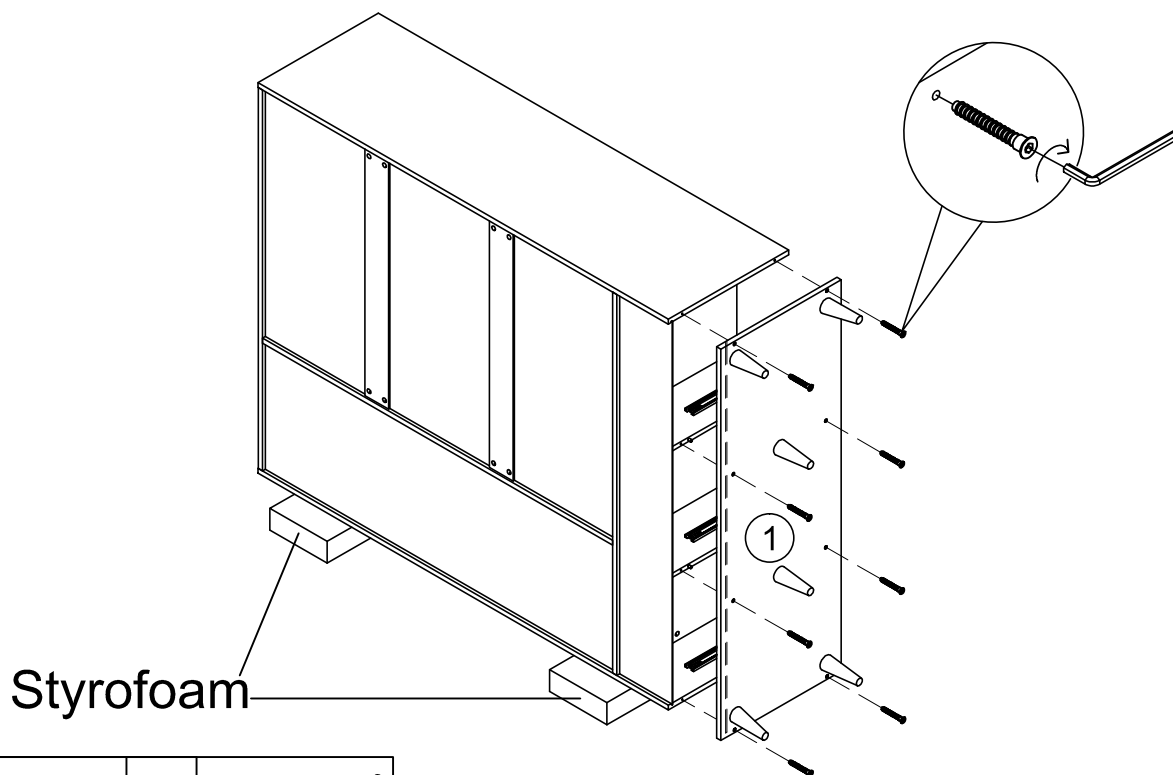 


Y8

Ø6 x 50mm


8



 13

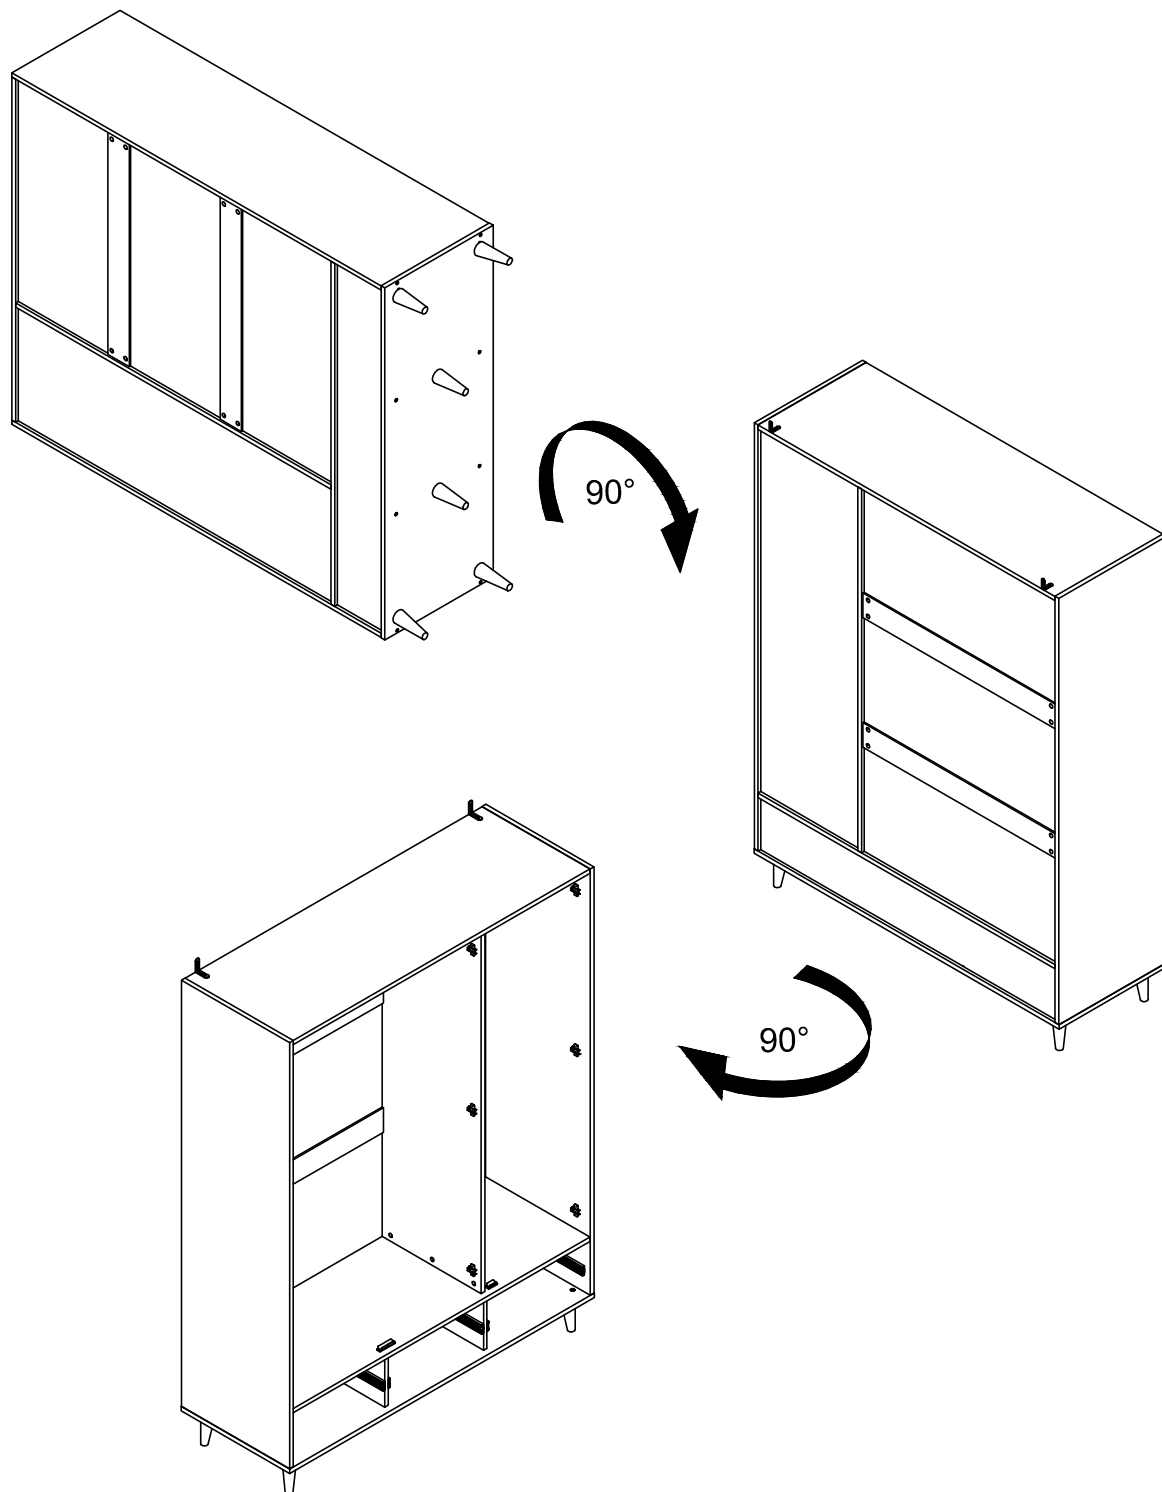


14

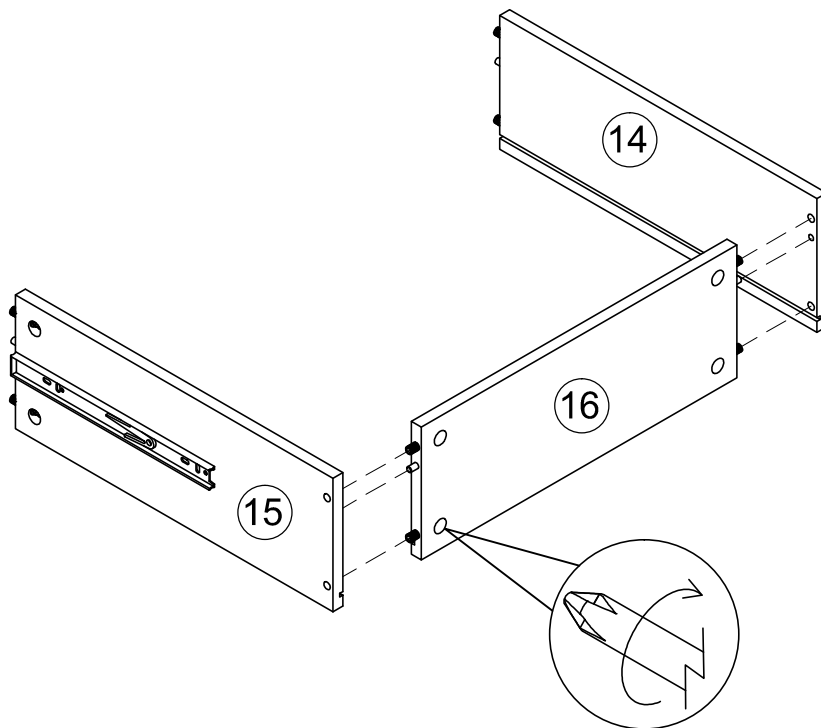 


X2

 15

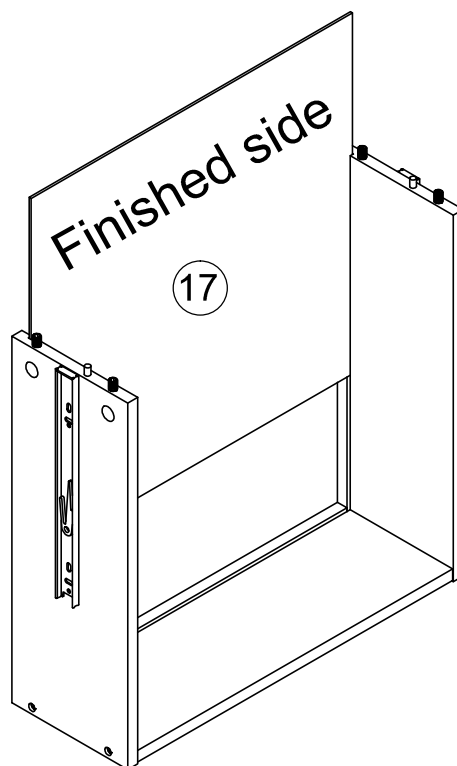


X2

 
16

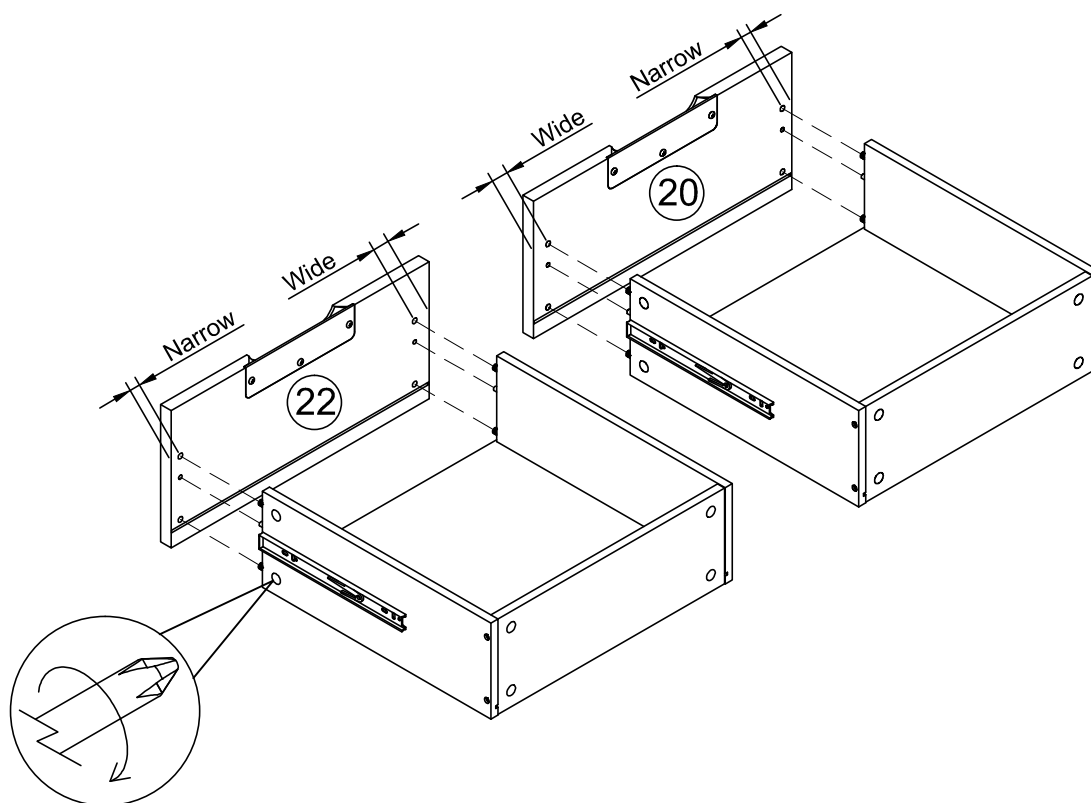


17

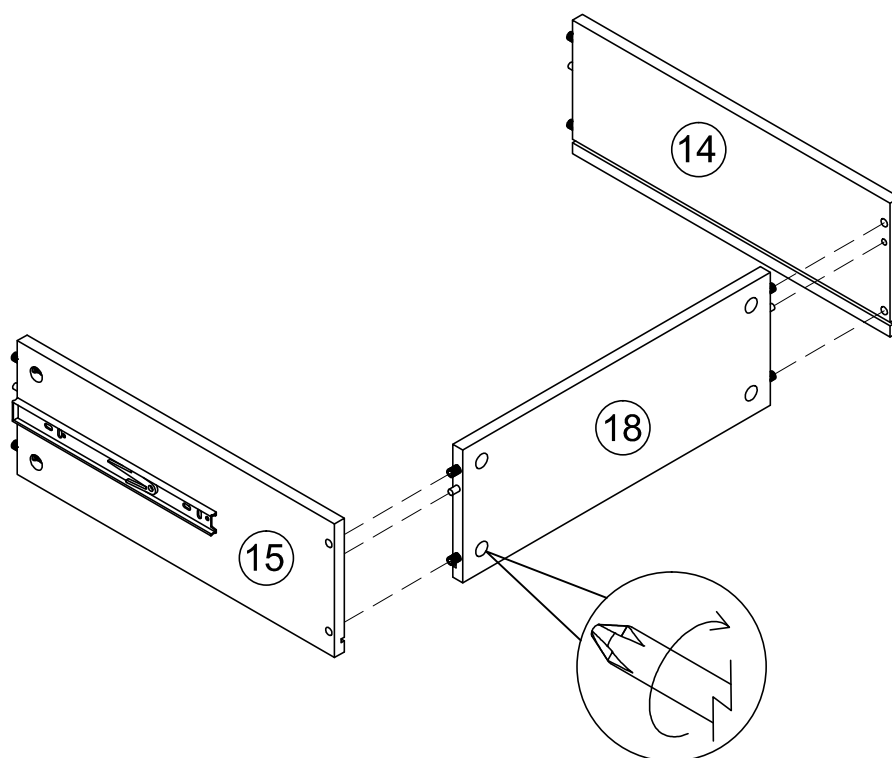 


18

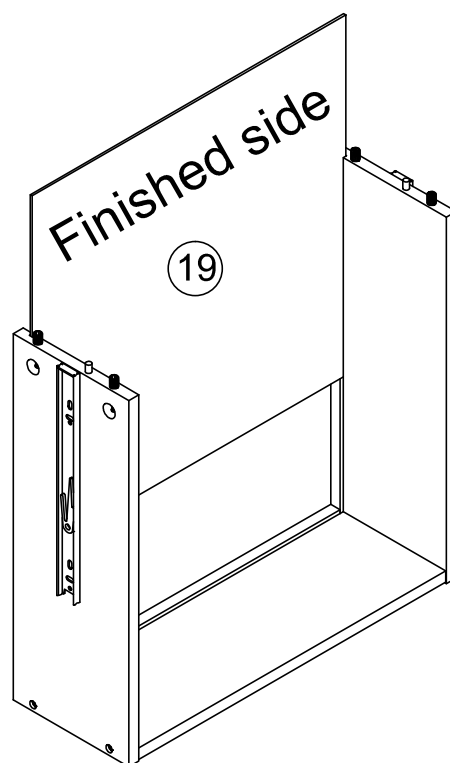 


19

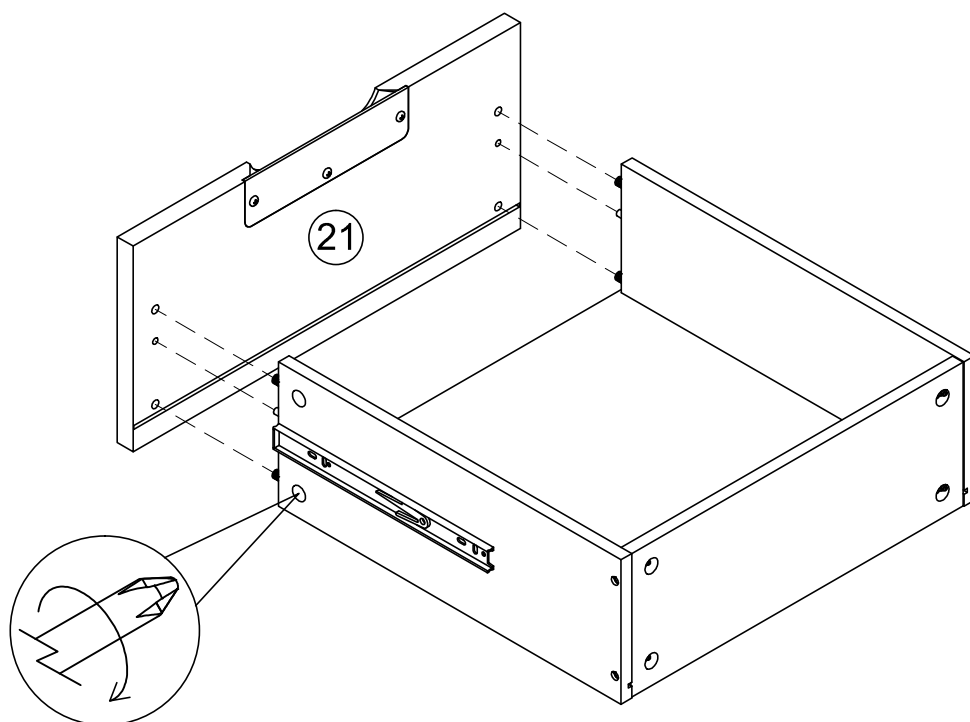 

20

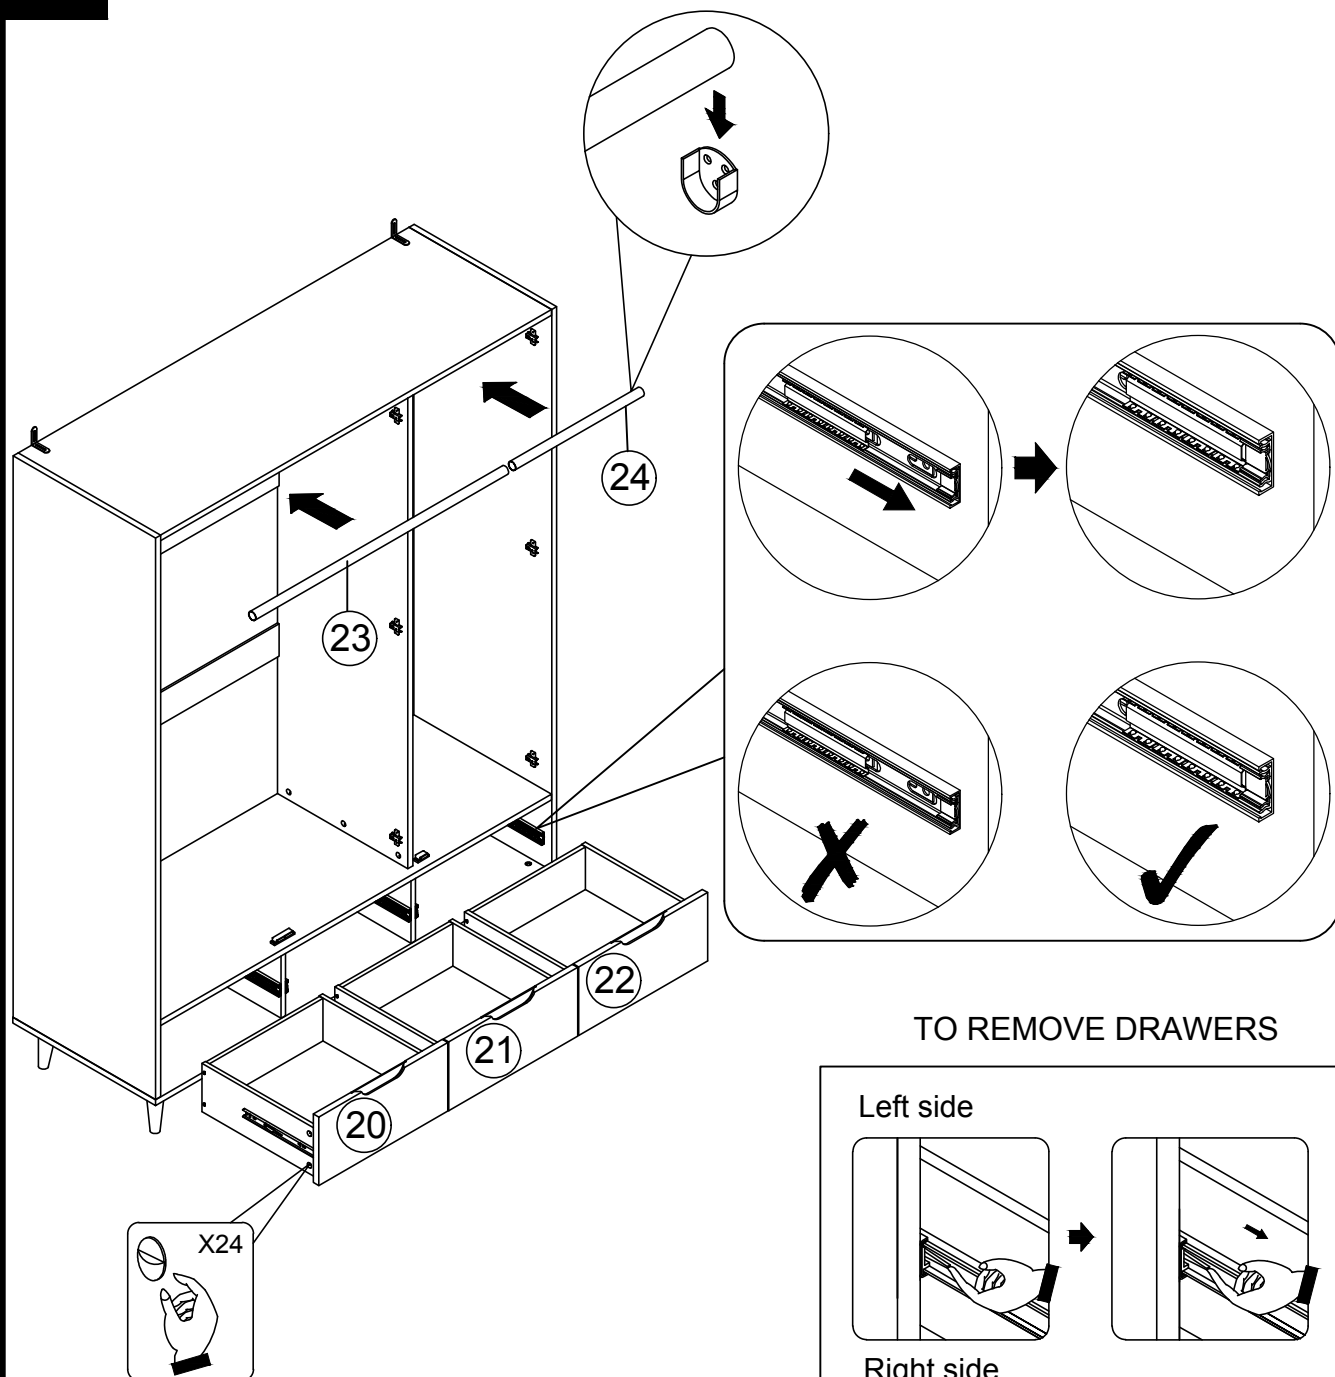 




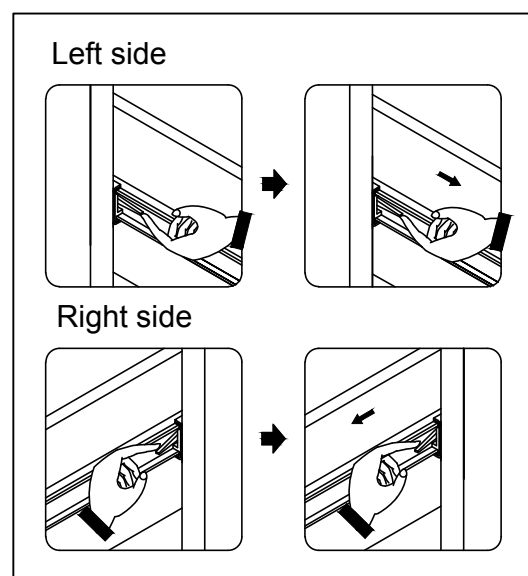 

## TO REMOVE DRAWERS

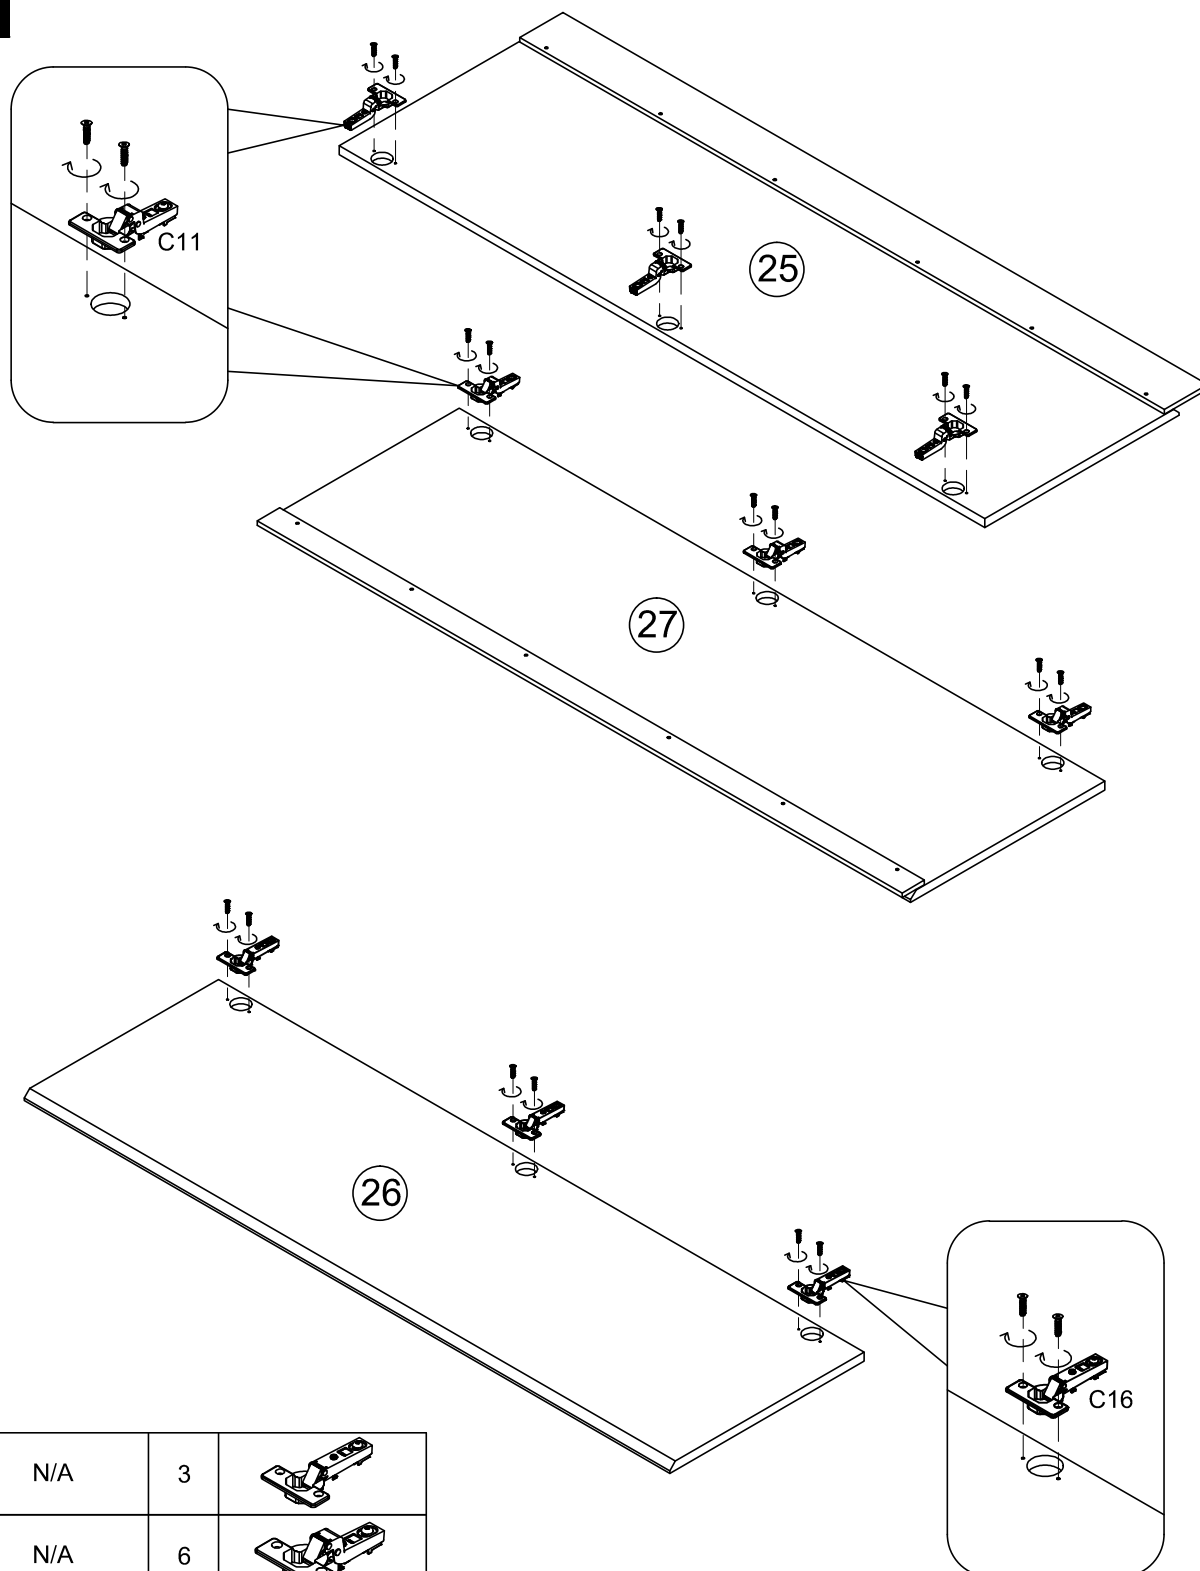 

O1	Ø25	24	
----	-----	----	--



21






C16	N/A	3	
C11	N/A	6	
U139	Ø4.5 x 15mm	18	  not supplied

22

### Install hinge

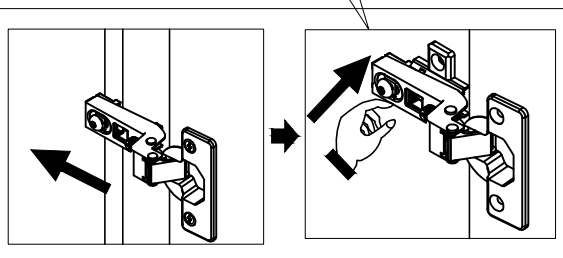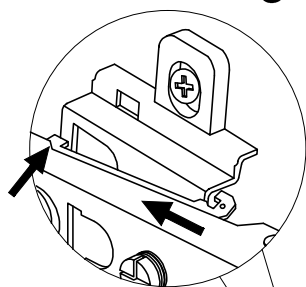  


### Remove hinge

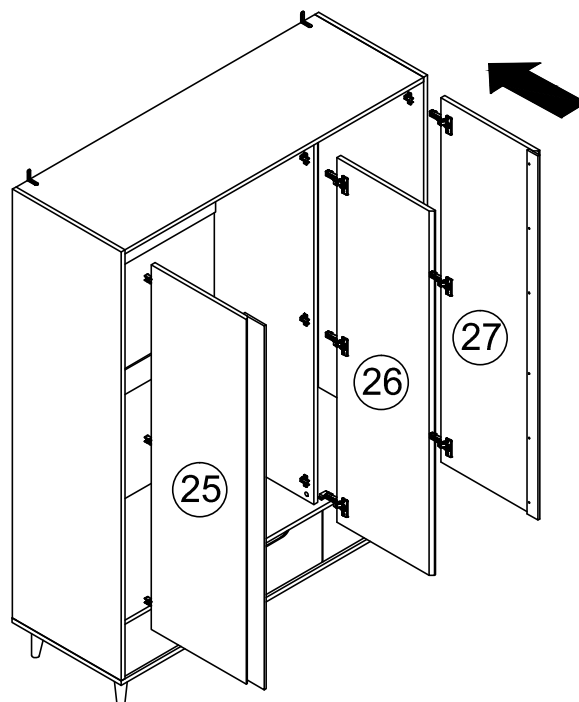 
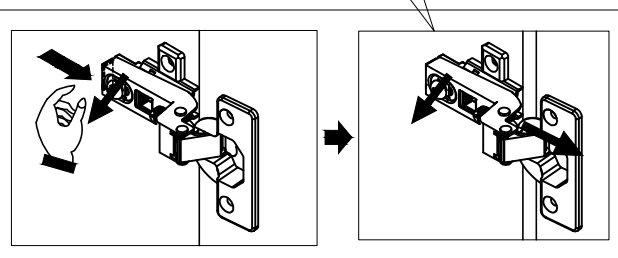 
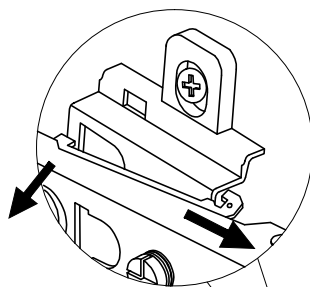 


### Adjust Hinge Position



 
#### LATERAL

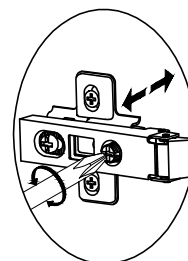


#### VERTICAL

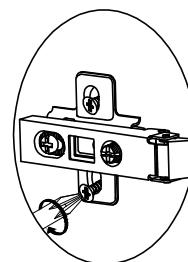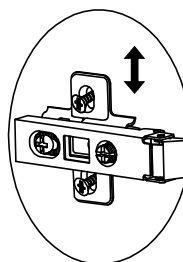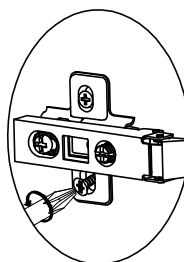   

#### FRONT- TO-BACK

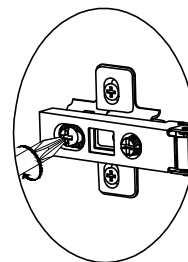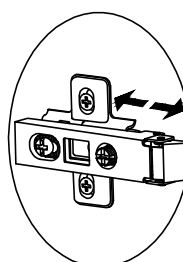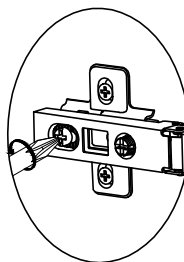   



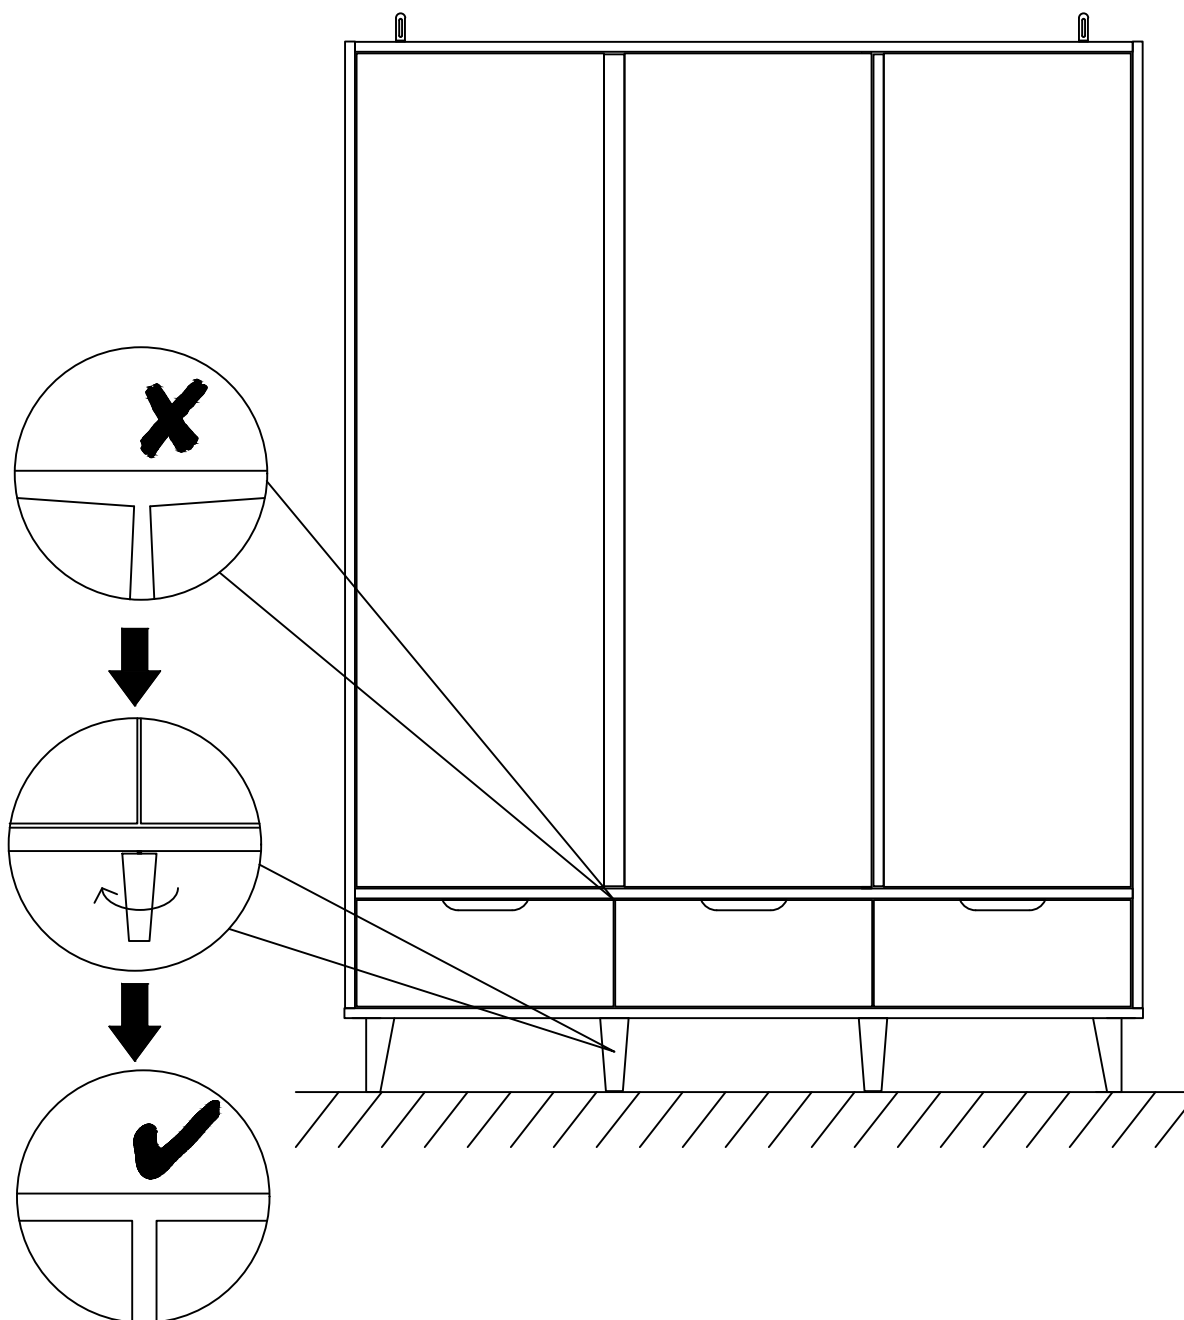 






24

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X"L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

     If in doubt please consult a qualified trades person.

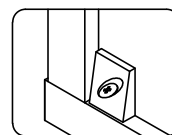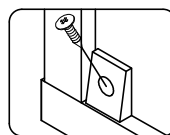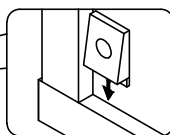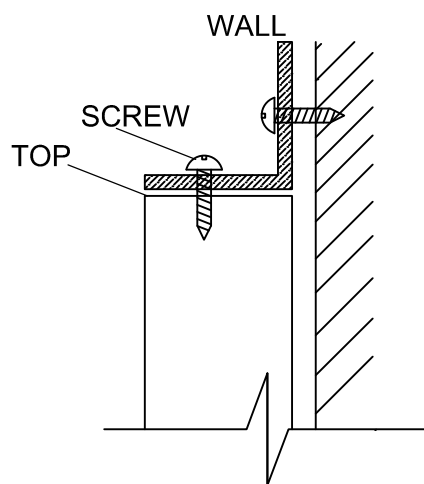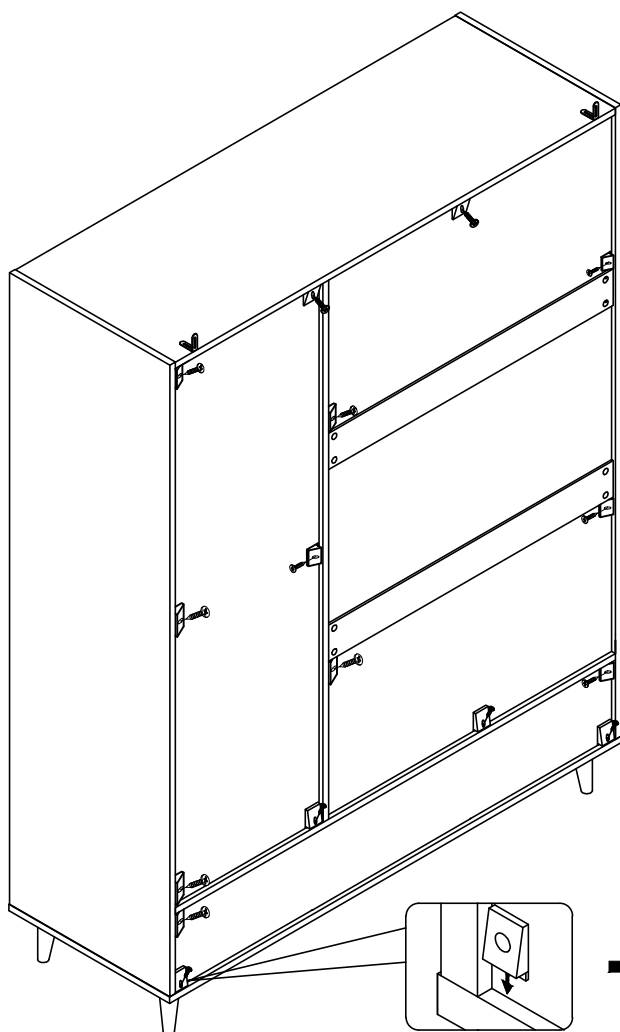

## WHEN LOOSENING THE CAM

TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



MAXIMUM  
LOCK



TURN  
TO UNLOCK



UNLOCKED

T38

N/A

16



not supplied

next

# STOCKHOLM TRIPLE WARDROBE

527059/644776

## Actual product size

H185 x W141x D50cm

