

# NEXT

## MALVERN STATEMENT/CHALK 1.5M SLIDING WARDROBE AH9766/654773 Assembly instructions

**Actual product size**  
H220 x W150 x D63 cm



### Need Help ?

With: Assembly instruction  
Missing or damaged parts

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

**CALL: 0333 777 8999**

## BEFORE YOU START

### Number of people required to assemble


Two people are required to assemble this item




**Time to assemble : 90 minutes**



### Tools required

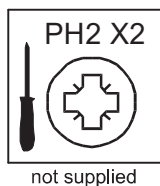

not supplied

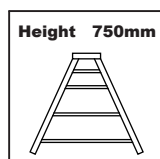

not supplied

### Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

### Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.


Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.











Absorption can cause wood to warp or finishes to de-laminate.








Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

## GETTING TO KNOW YOUR PRODUCT





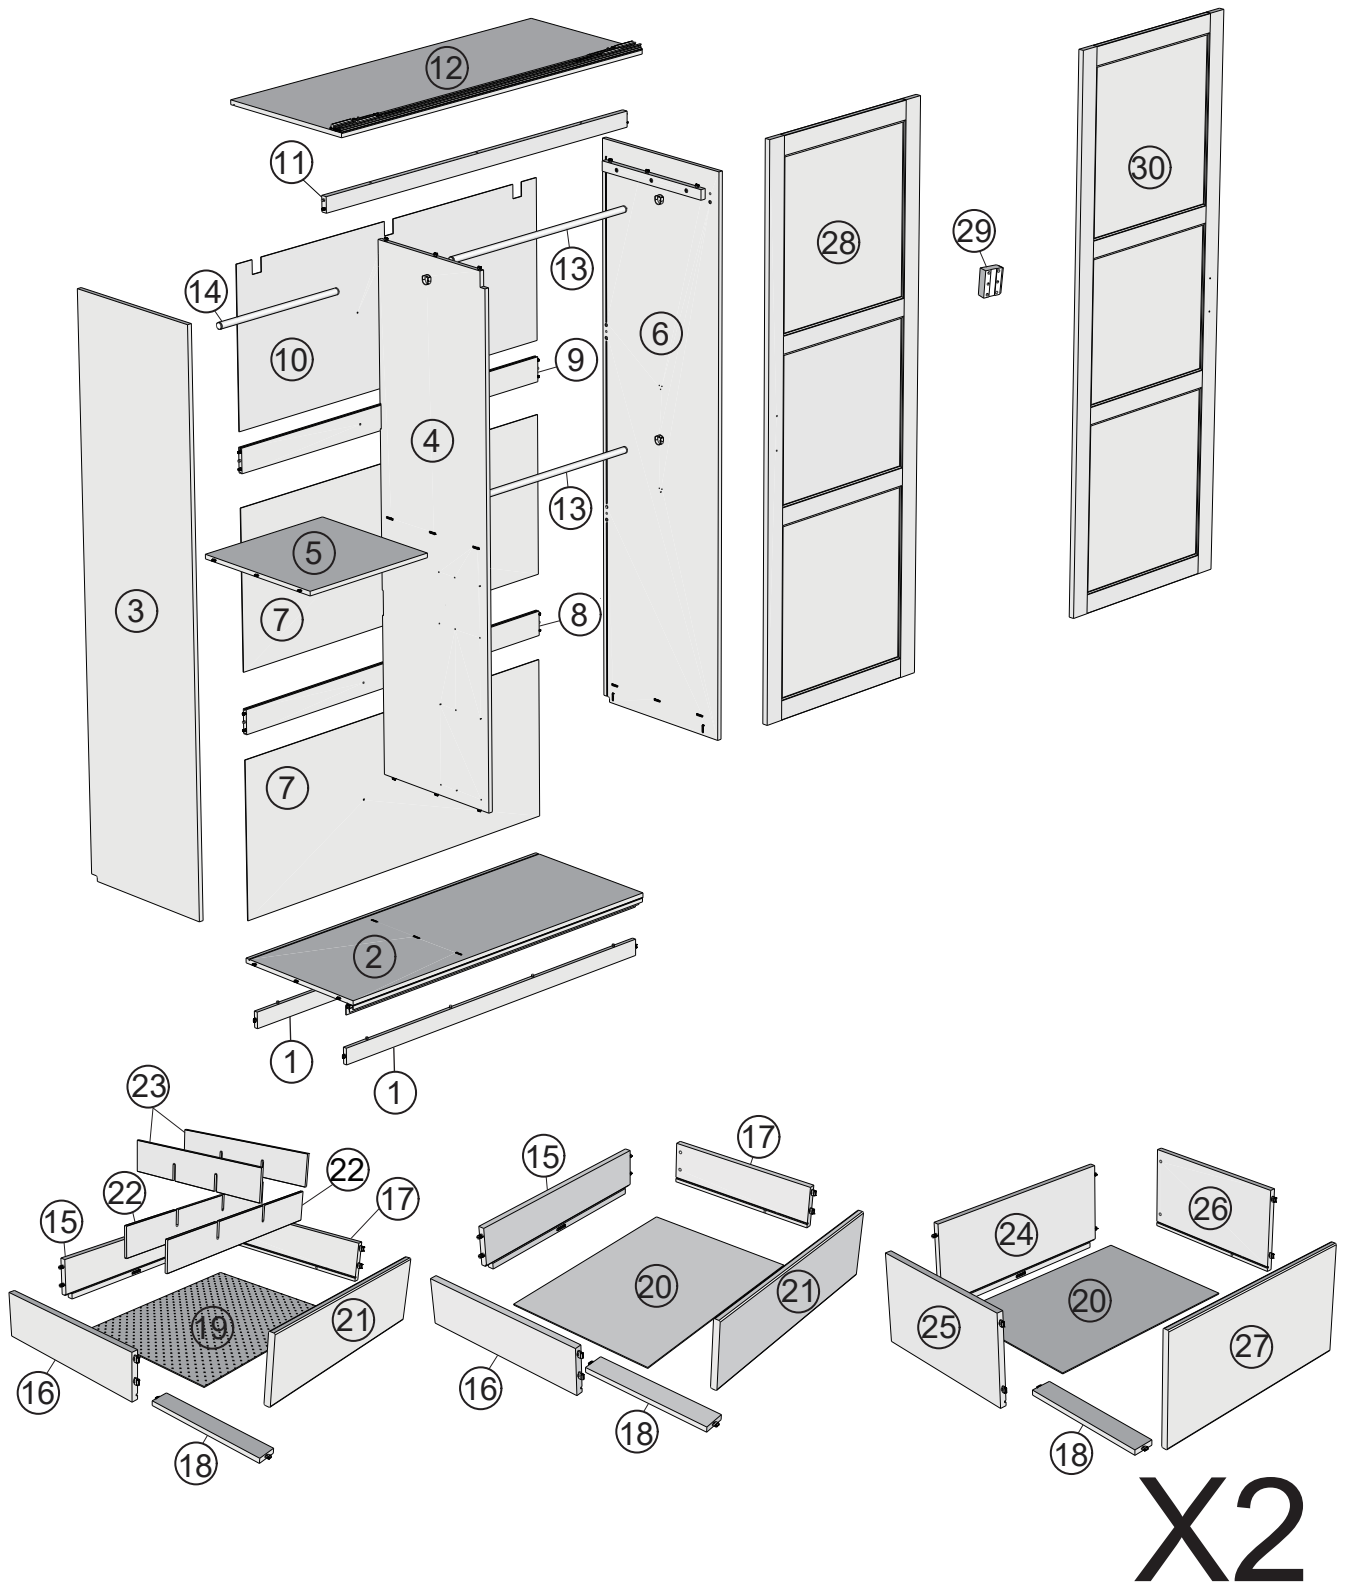


          Components supplied. Please use this guide if you require replacement parts.



| Ref | Dimensions   | Visual                                                                              | Qty | Ctn |
|-----|--------------|-------------------------------------------------------------------------------------|-----|-----|
| 1   | 6.5x146.5cm  |    | 2   | 2   |
| 2   | 57x146.5cm   |    | 1   | 1   |
| 3   | 57x220cm     |    | 1   | 3   |
| 4   | 55x204cm     |    | 1   | 3   |
| 5   | 54.5x56.5cm  |   | 1   | 2   |
| 6   | 60x220cm     |  | 1   | 3   |
| 7   | 62.5x147.5cm |  | 2   | 3   |
| 8   | 9.5x146.5cm  |  | 1   | 2   |
| 9   | 9.5x146.5cm  |  | 1   | 2   |
| 10  | 62.5x147.5cm |  | 1   | 3   |
| 11  | 6x146.5cm    |  | 1   | 2   |
       
| Ref | Dimensions  | Visual                                                                                | Qty | Ctn |
|-----|-------------|---------------------------------------------------------------------------------------|-----|-----|
| 12  | 57x146.5cm  |    | 1   | 2   |
| 13  | 2.5x86.5cm  |    | 2   | 2   |
| 14  | 2.5x55cm    |    | 1   | 2   |
| 15  | 11.5x52.5cm |    | 2   | 1   |
| 16  | 11x40cm     |   | 2   | 1   |
| 17  | 11x40cm     |  | 2   | 1   |
| 18  | 6x38cm      |  | 4   | 1   |
| 19  | 38.5x53cm   |  | 1   | 1   |
| 20  | 38.5x53cm   |  | 3   | 1   |
| 21  | 16.5x56cm   |  | 2   | 2   |
| 22  | 8x52.5cm    |  | 2   | 1   |

    
Components supplied. Please use this guide if you require replacement parts.
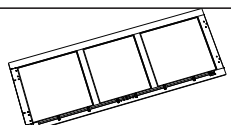
| Ref | Dimensions  | Visual                                                                              | Qty | Ctn |
|-----|-------------|-------------------------------------------------------------------------------------|-----|-----|
| 23  | 8x38cm      |    | 2   | 1   |
| 24  | 23.5x52.5cm |    | 2   | 1   |
| 25  | 23x40cm     |    | 2   | 1   |
| 26  | 23x40cm     |    | 2   | 1   |
| 27  | 28x56cm     |    | 2   | 2   |
| 28  | 76 x216cm   |  | 1   | 4   |
| 29  | 5.5x9.5cm   |  | 1   | 1   |
| 30  | 76 x216cm   |  | 1   | 4   |


## NEXT FITTINGS ASSEMBLE INSTRUCTIONS

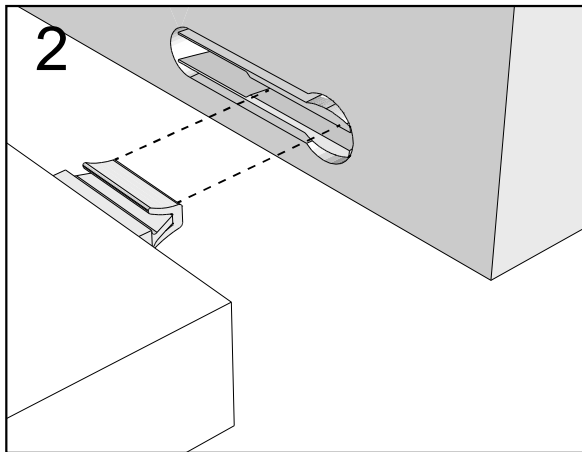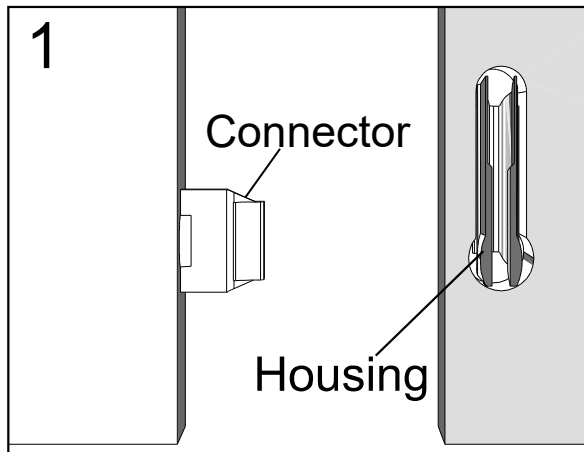


Push connector into housing to join.

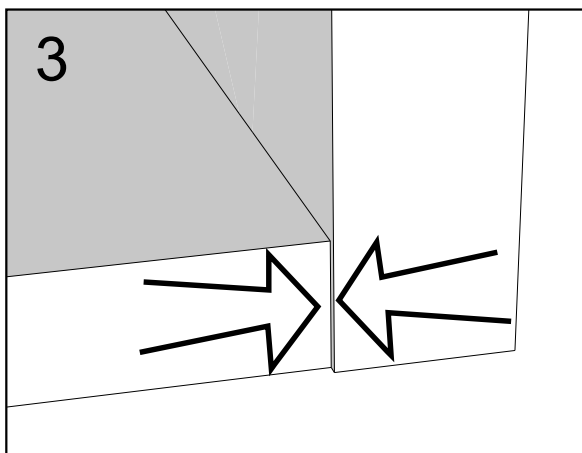


Make sure there is no gap between the panels.

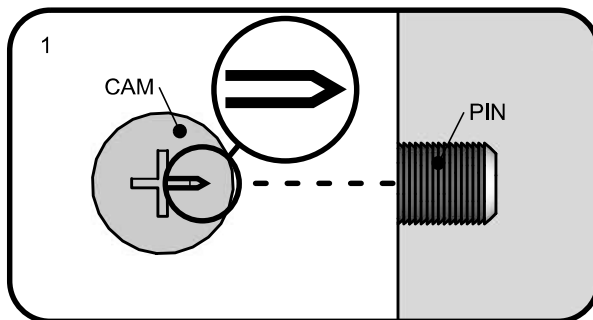


Line up the arrow on the CAM with the PIN.

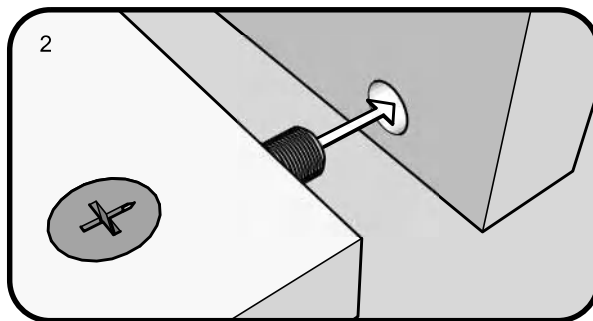


Push the pins into the holes in the panel to be joined.

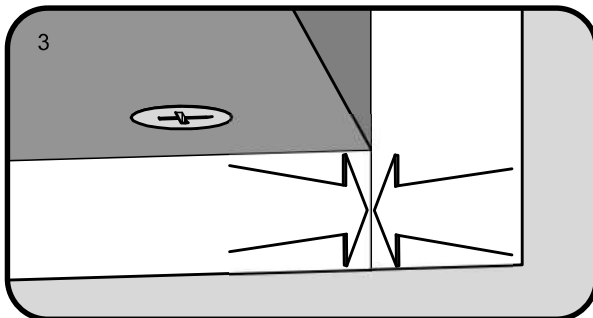

Make sure there is no gap between the panels.

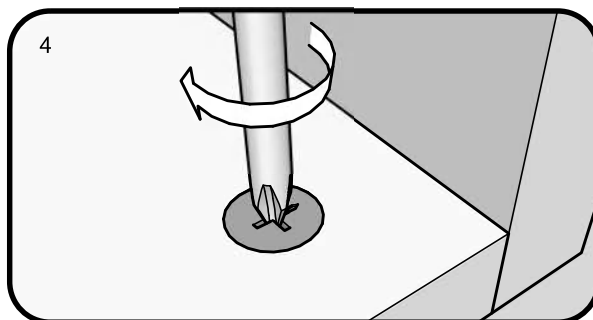


Use a cross-point screwdriver (PH2 or PZ2 is ideal) to tighten the cams and lock the panels together.

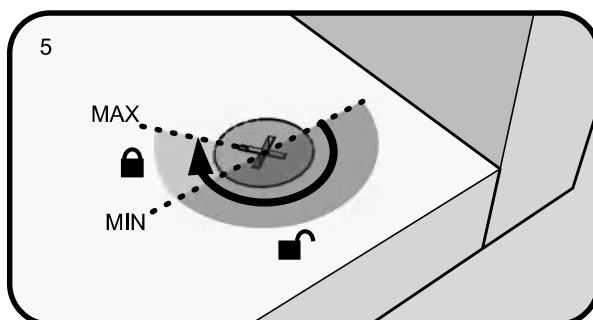

The panels are locked when each cam is turned to between 1/2 and 2/3 of a full turn (Maximum rotation)

### Fixtures and fittings supplied (actual size)

| Ref  | Dimensions  | Qty | Spare Qty |
|------|-------------|-----|-----------|
| B3   | Ø15x12mm    | N/A | 2         |
| B8   | Ø8x38mm     | N/A | 2         |
| D6   | Ø8x30mm     | N/A | 2         |
| D17  | Ø10x30mm    | 4   | 1         |
| V87  | Ø6x70mm     | 3   | 1         |
| V59  | Ø6x35mm     | 2   | 1         |
| S35  | Ø4x14mm     | 6   | 1         |
| Y8   | Ø6x50mm     | 2   | 1         |
| U139 | Ø4.5 x 15mm | 24  | 2         |
| U134 | Ø4x14mm     | 36  | 2         |

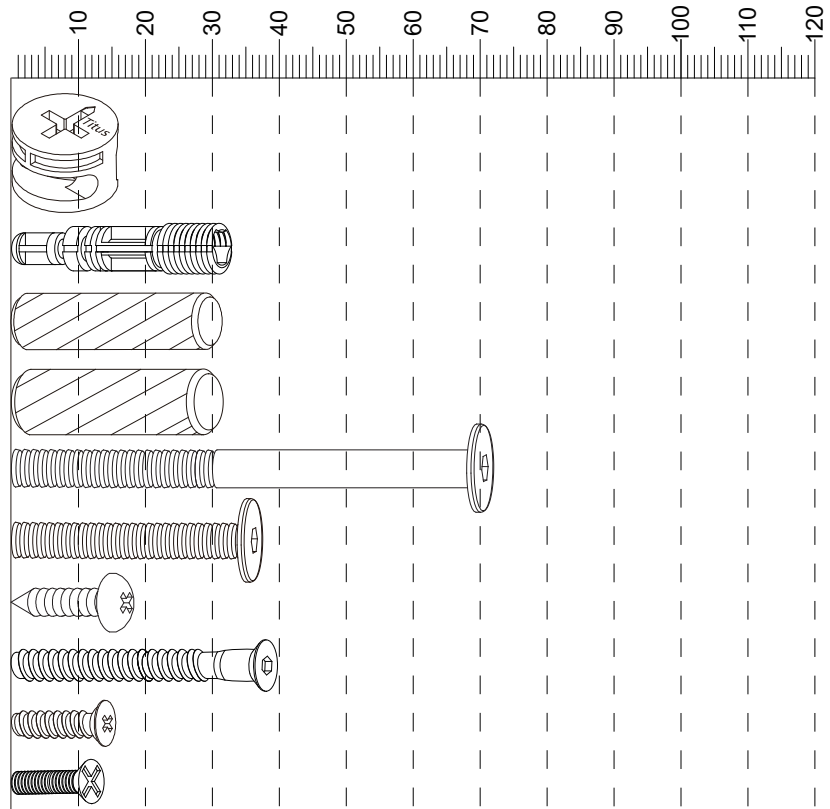

### Fixtures and fittings supplied ( not to scale)

| Ref | Dimensions | Qty | Spare Qty | Visual |
|-----|------------|-----|-----------|--------|
| N16 | N/A        | 3   | N/A       |        |
| T38 | N/A        | 18  | 2         |        |
| N30 | LED light  | 2   | N/A       |        |
| T6  | N/A        | 2   | N/A       |        |
| L31 | N/A        | 1   | N/A       |        |
| L32 | N/A        | 1   | N/A       |        |
| L33 | N/A        | 1   | N/A       |        |
| L34 | N/A        | 1   | N/A       |        |
| T13 | N/A        | 1   | N/A       |        |
| E62 | N/A        | 2   | N/A       |        |

| Ref | Dimensions         | Qty | Spare Qty | Visual |
|-----|--------------------|-----|-----------|--------|
| L   | N/A                | 4   | N/A       |        |
| R   | N/A                | 4   | N/A       |        |
| N18 | N/A                | 3   | N/A       |        |
| R35 | N/A                | 1   | N/A       |        |
| R36 | N/A                | 1   | N/A       |        |
| R37 | N/A                | 1   | N/A       |        |
| R38 | N/A                | 1   | N/A       |        |
| M32 | Straightener Cover | 2   | N/A       |        |
| M39 | Brush              | 1   | N/A       |        |

TOP


③

## ➤ Packing materials


L

BOTTOM


|      |             |    |                                                                                                                                                                         |
|------|-------------|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| U139 | Ø4.5 x 15mm | 12 |   |
| L    | N/A         | 4  |                                                                                      |

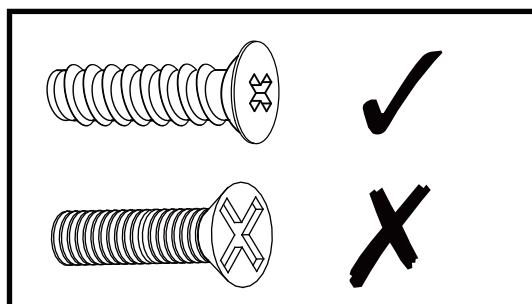


TOP

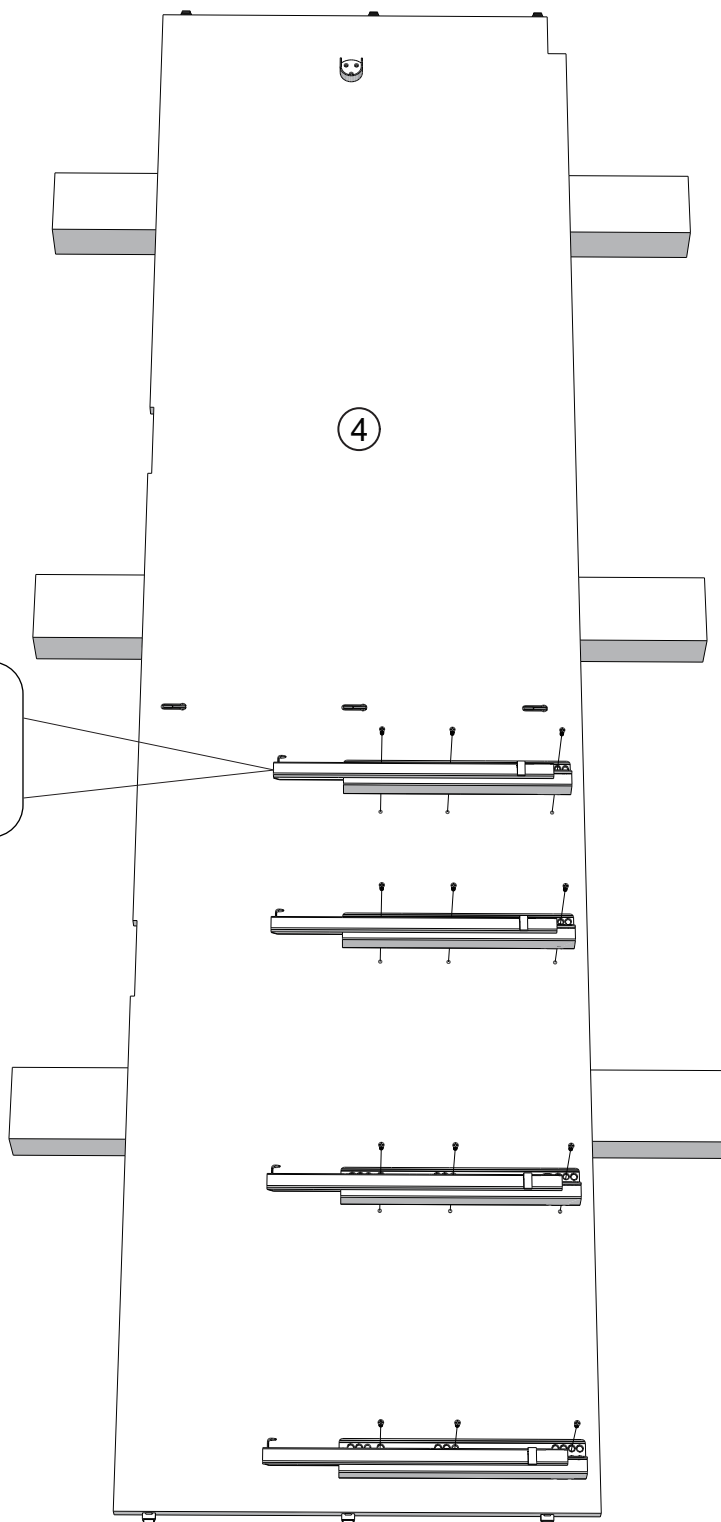


BOTTOM

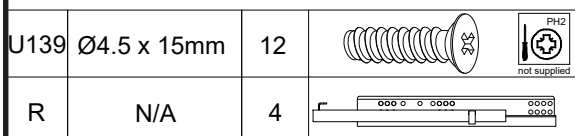


3

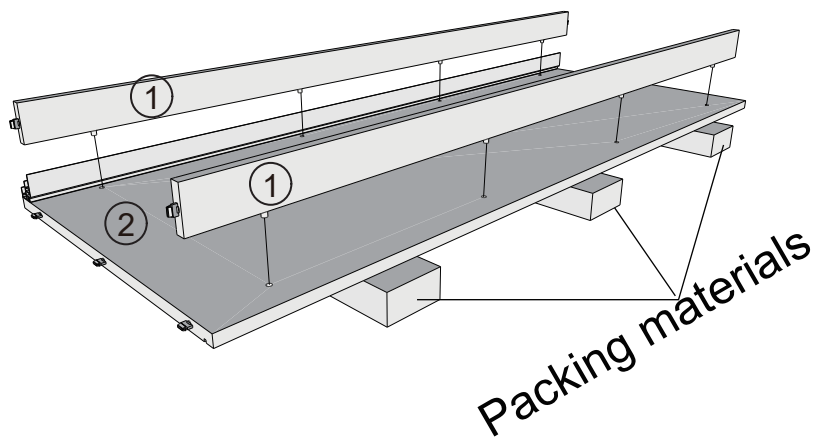


4

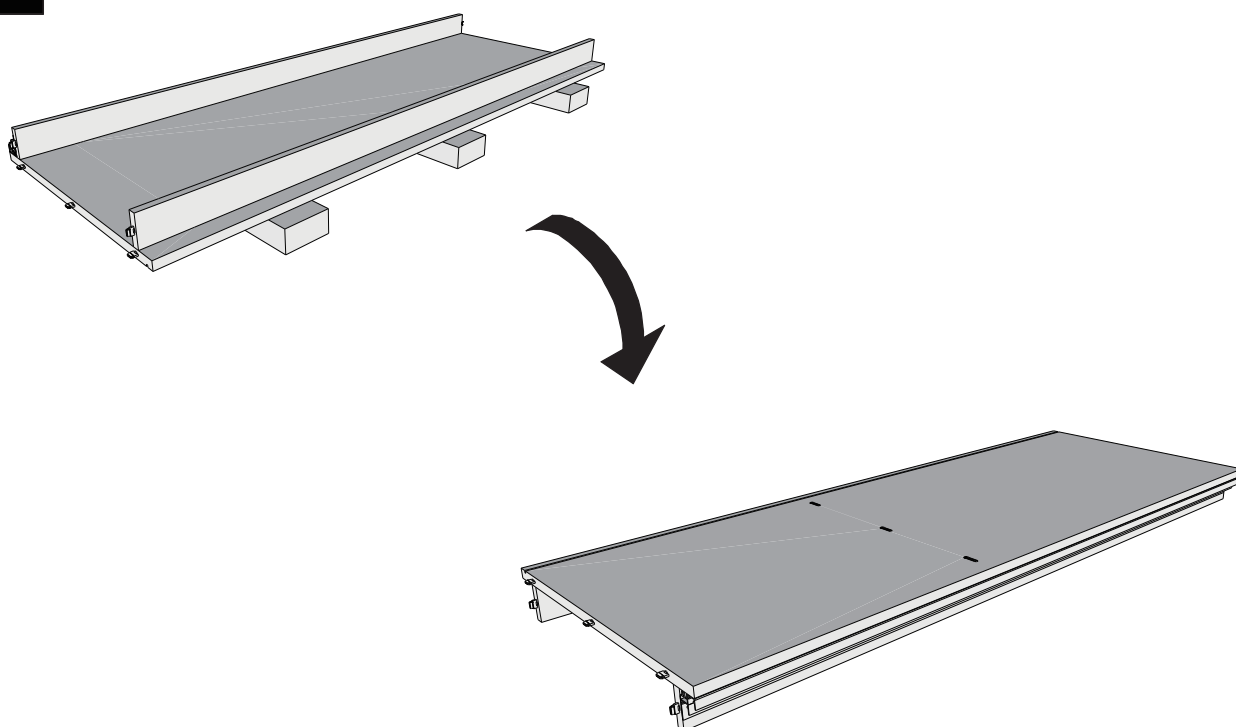


5

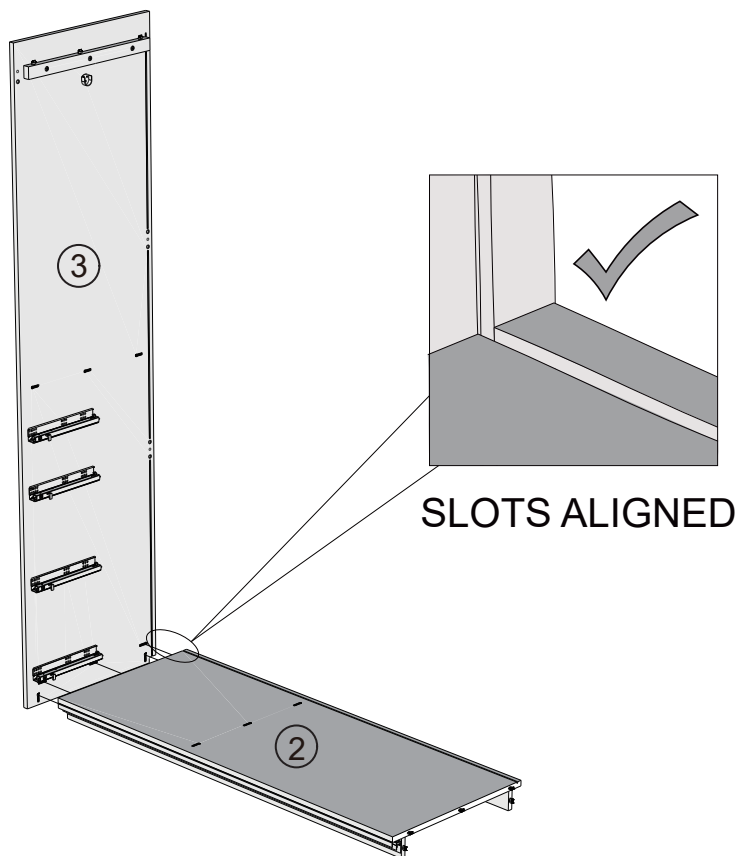

6

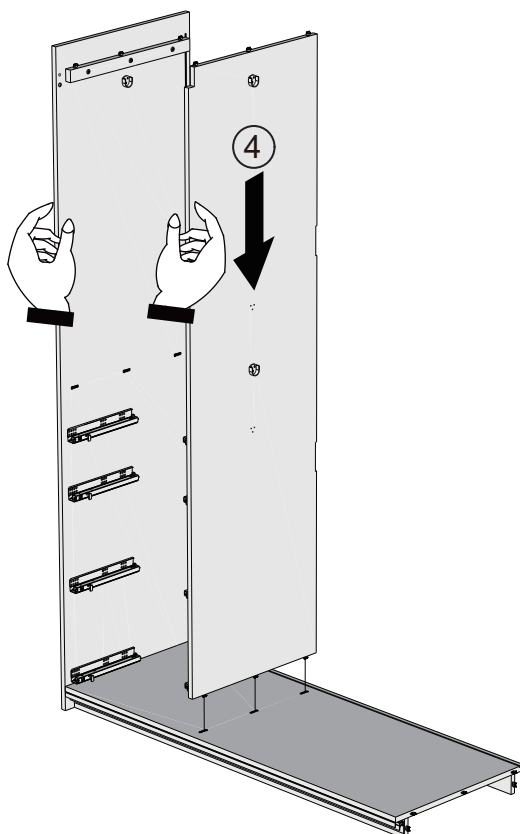


7

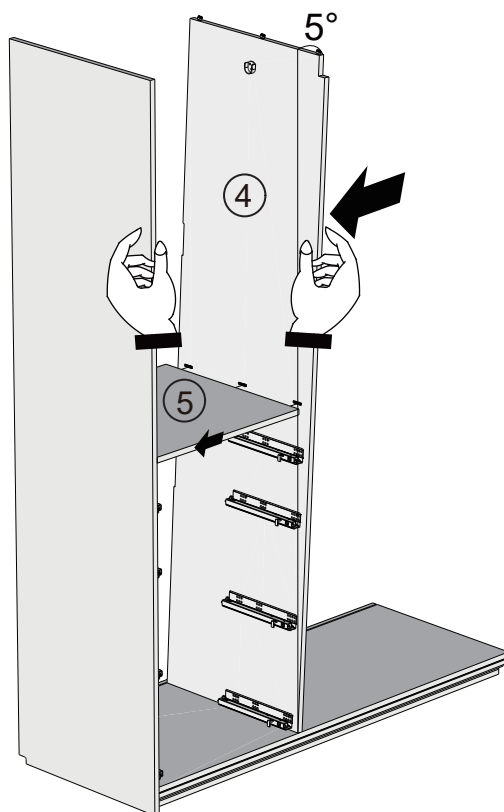


Open the panel (4) by 5 angle.

8

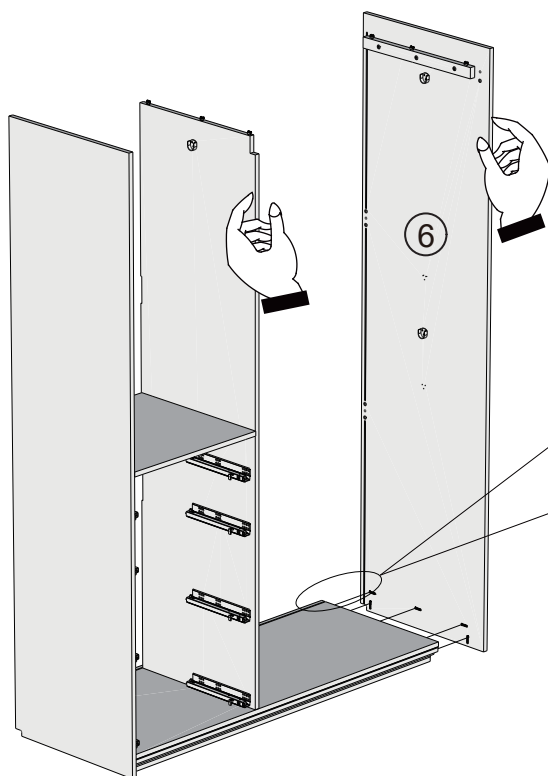


One person must support panels (6) until panel (7) and (8) are secured.

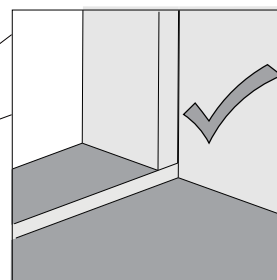


SLOTS ALIGNED

9

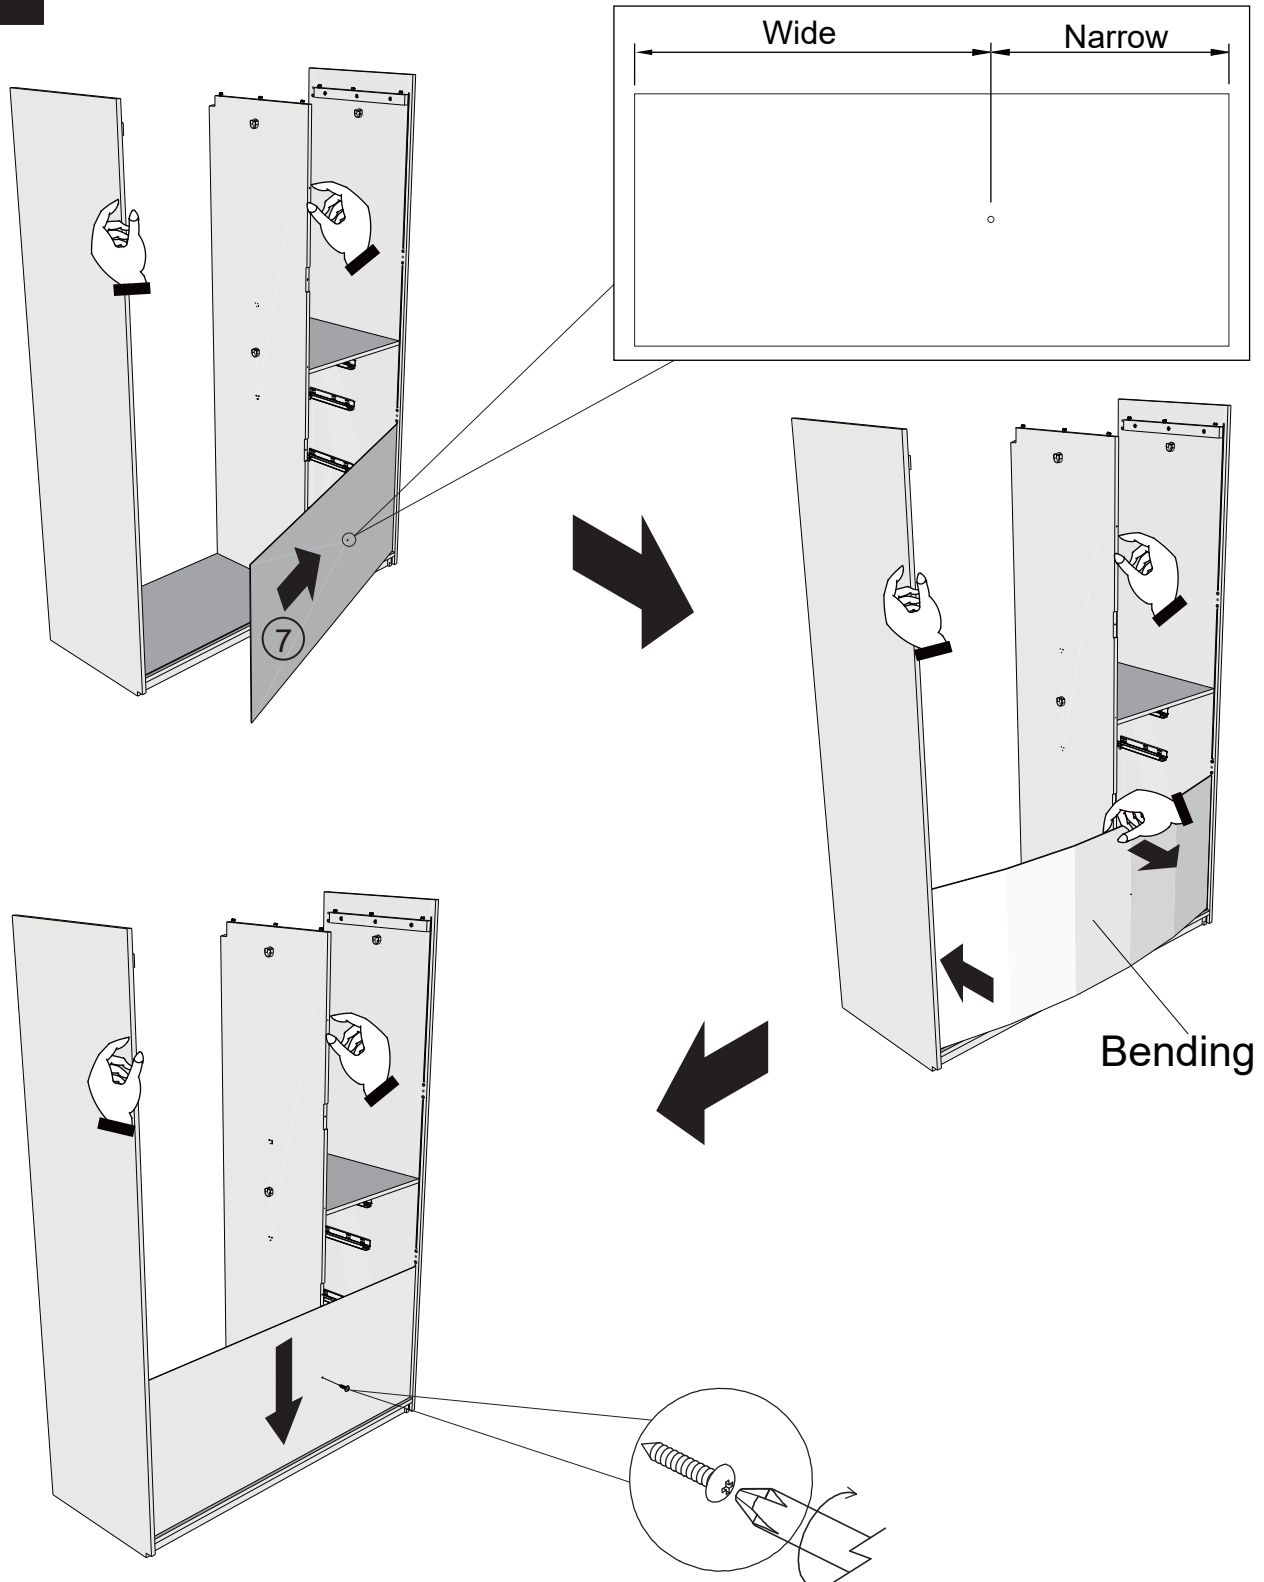


S35 Ø4 x 14mm 1

 


not supplied


10

Open the panel (6) by 5 angle.

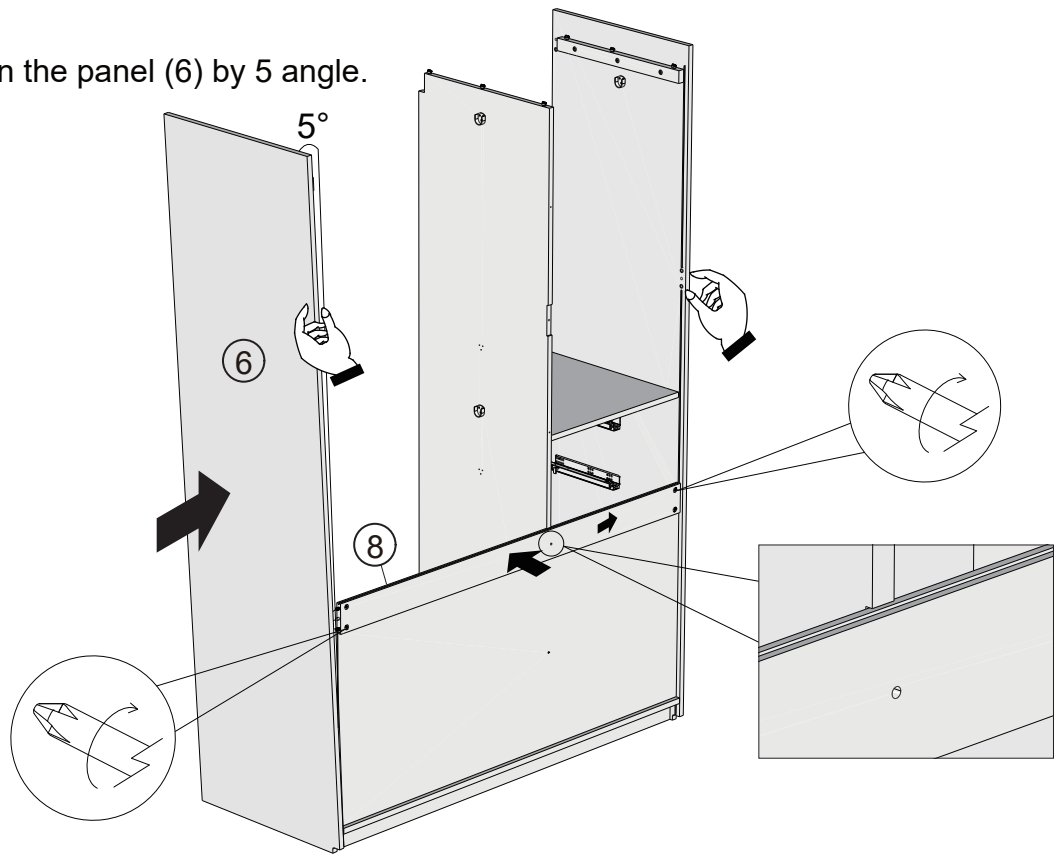


11

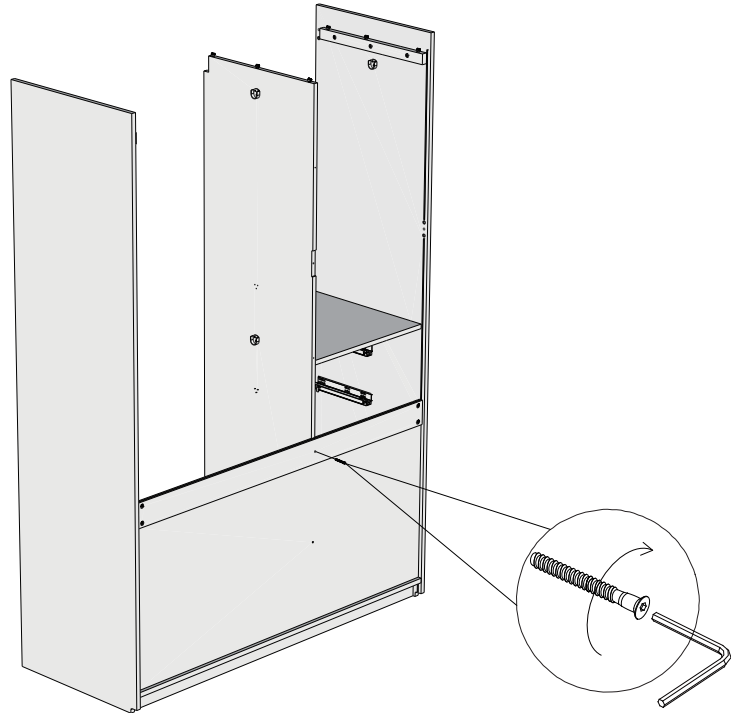

 
|    |           |   |                                                                                     |
|----|-----------|---|-------------------------------------------------------------------------------------|
| Y8 | Ø6 x 50mm | 1 |  |
| T6 | N/A       | 2 |  |

12

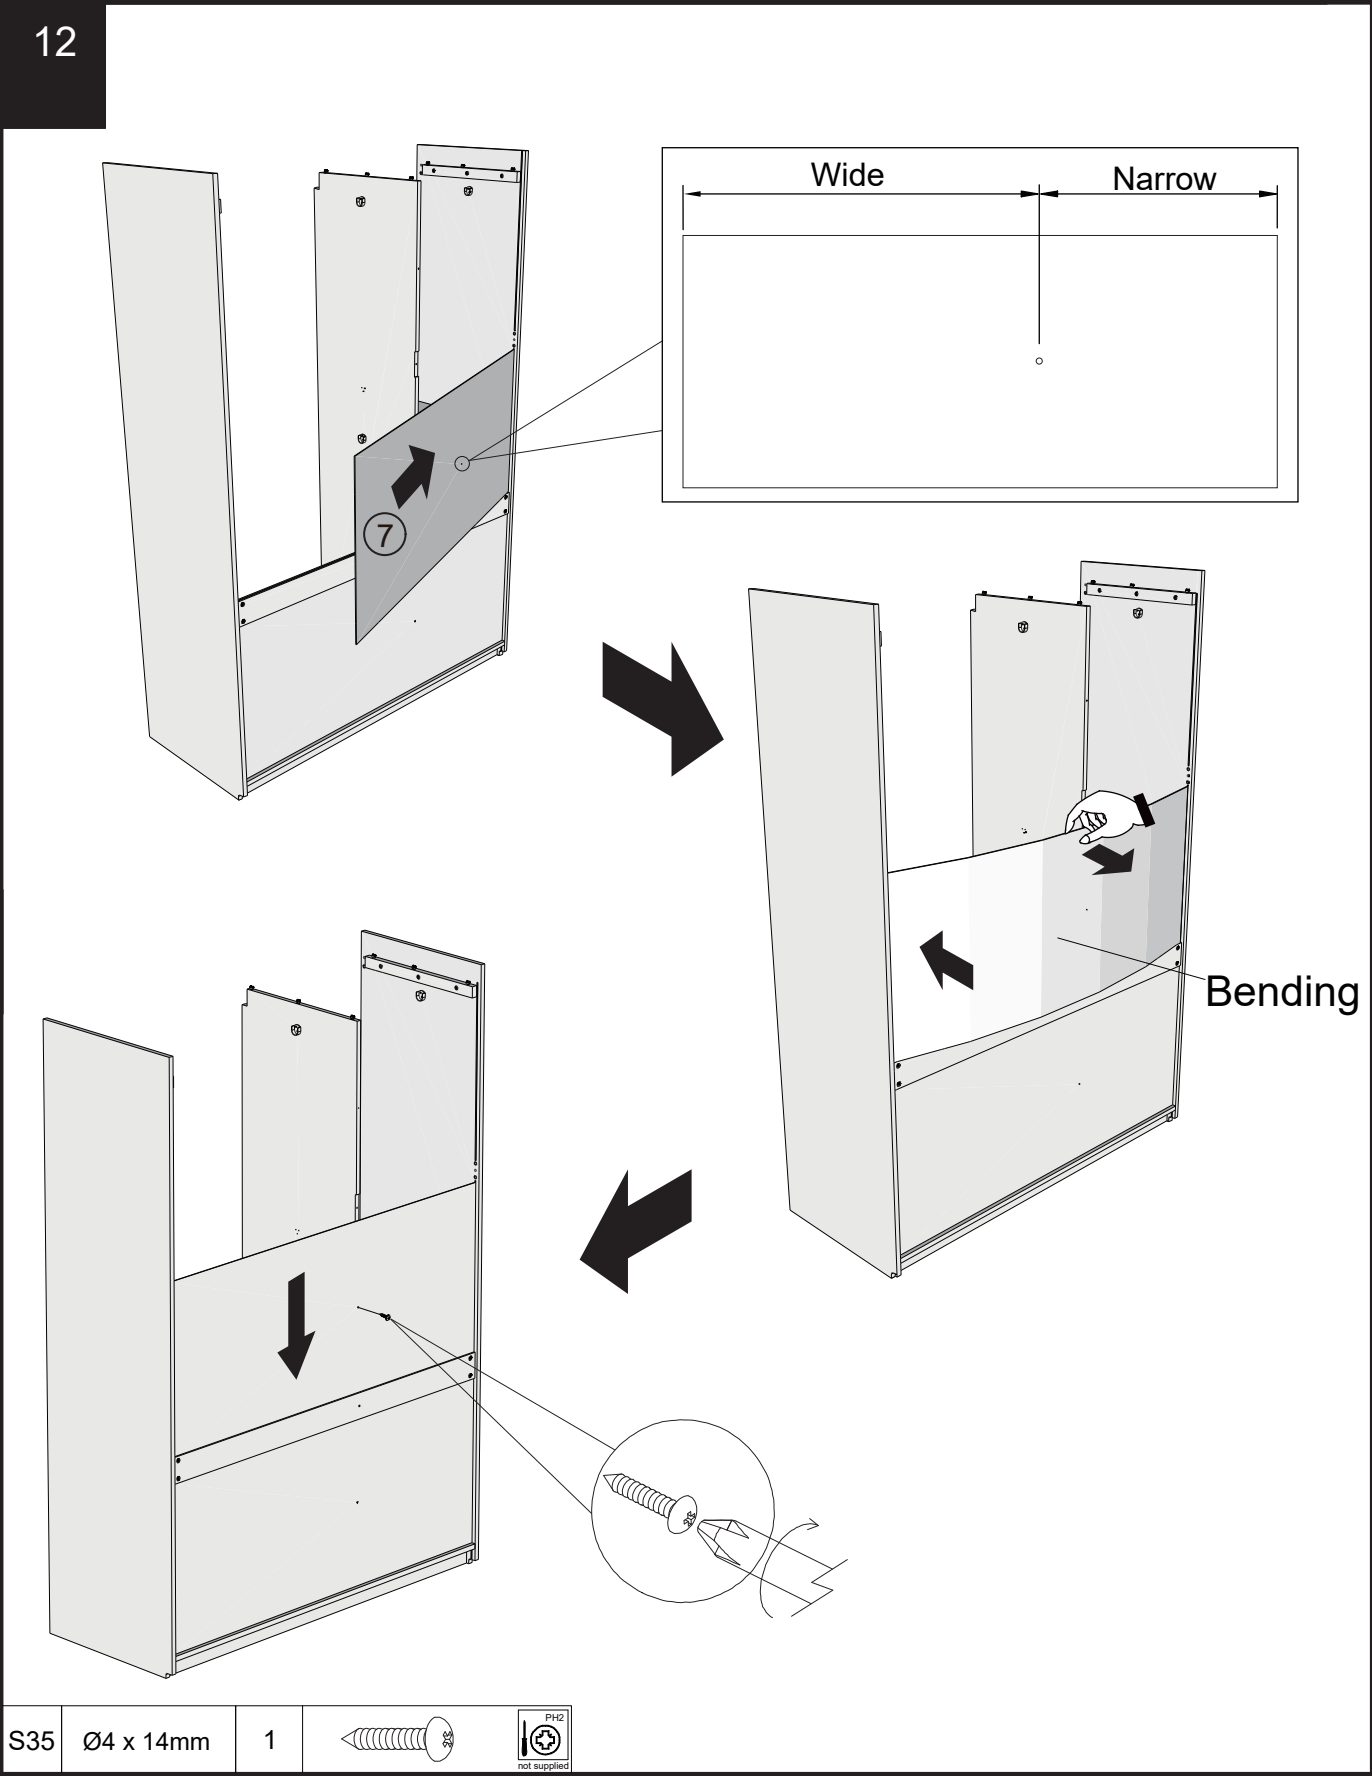



13

Open the panel (6) by 5° angle.


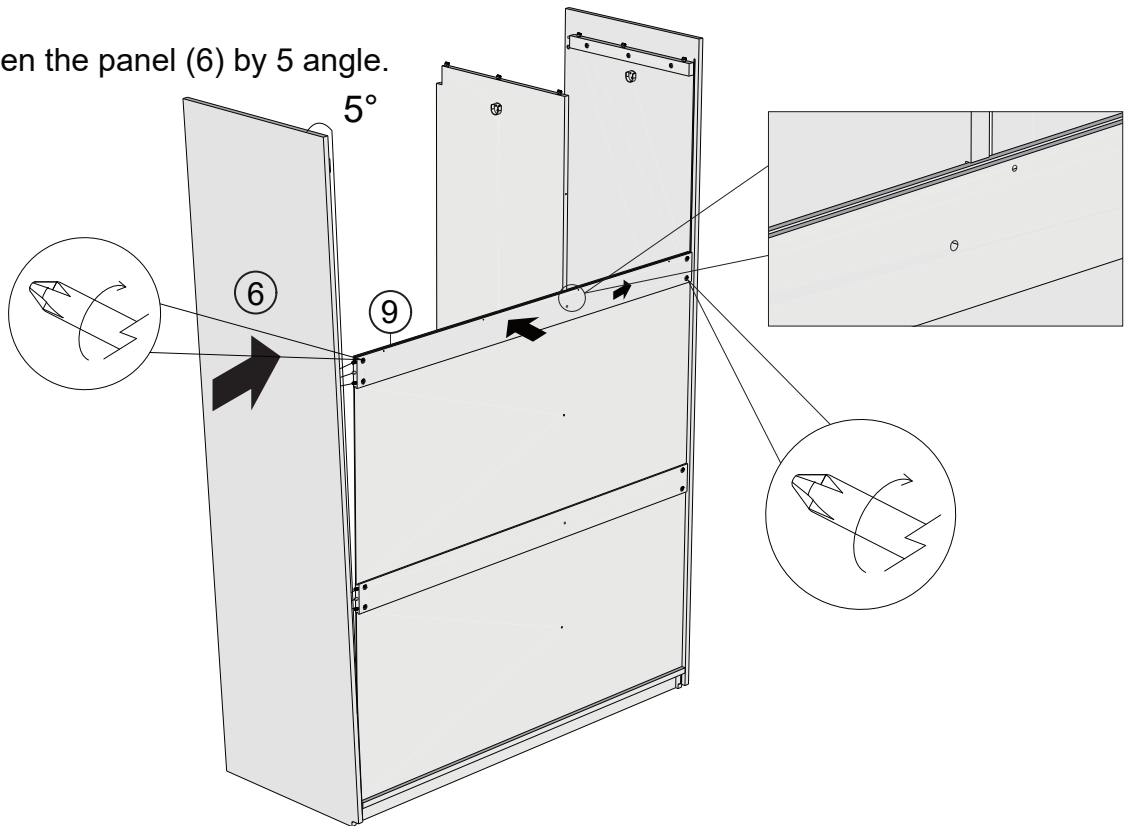


14



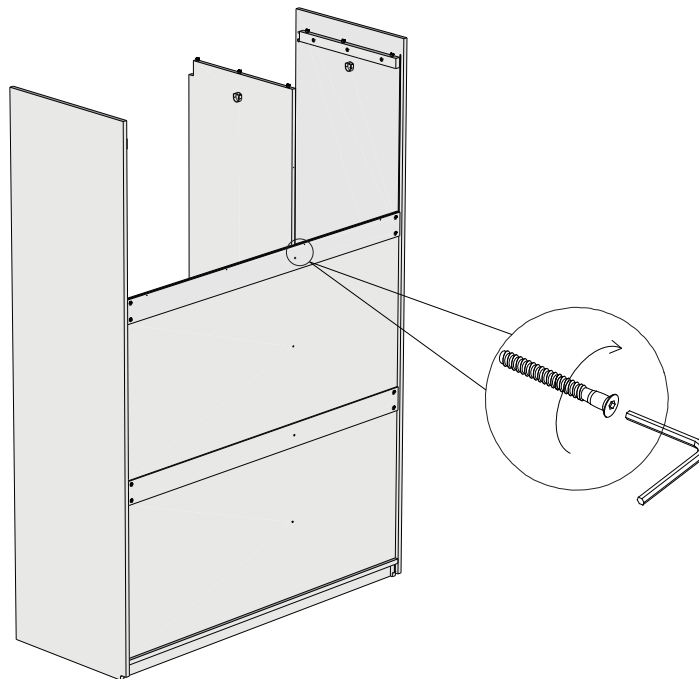


 
|    |           |   |                                                                                     |
|----|-----------|---|-------------------------------------------------------------------------------------|
| Y8 | Ø6 x 50mm | 1 |  |
| T6 | N/A       | 2 |  |

15

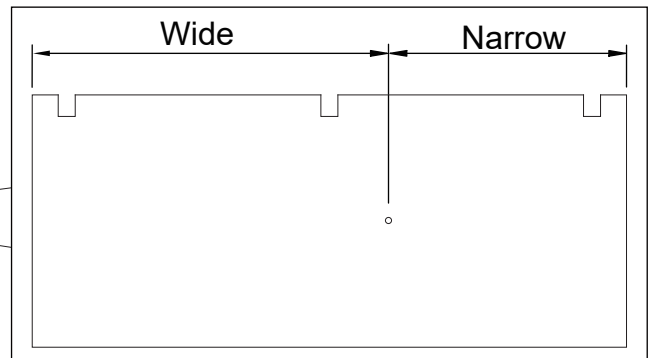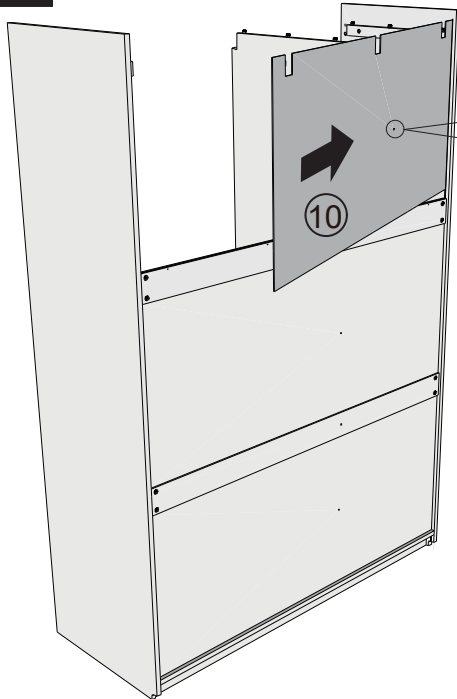


Bending

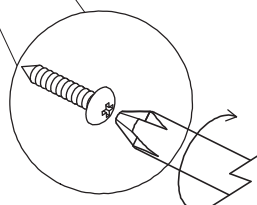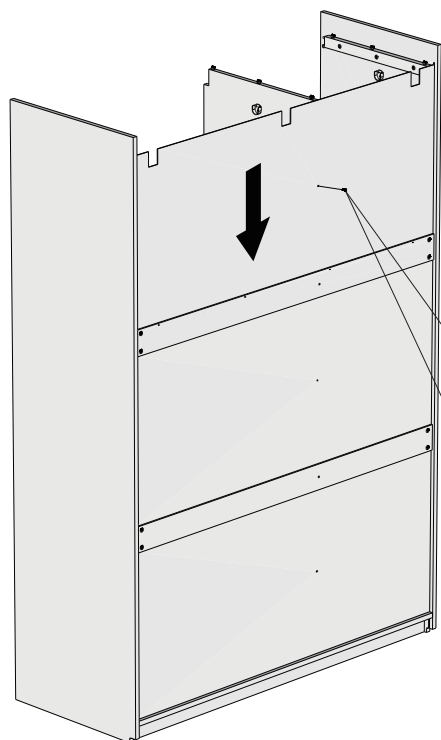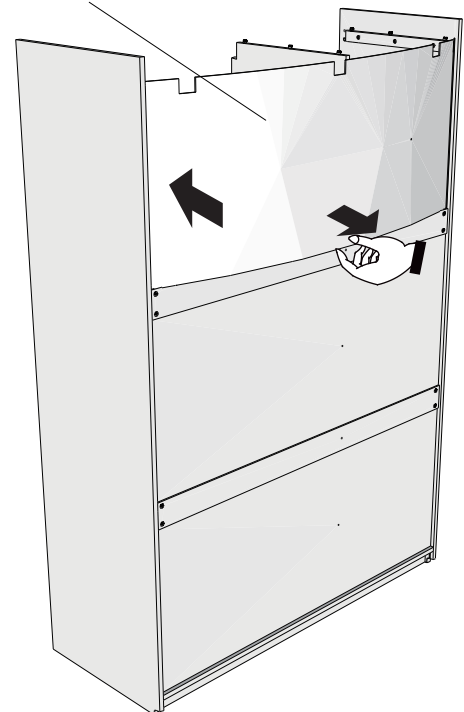

 
|     |           |   |                                                                                     |                                                                                     |
|-----|-----------|---|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| S35 | Ø4 x 14mm | 1 |  |  |
|-----|-----------|---|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|


not supplied

16 Open the panel (6) by 5° angle.

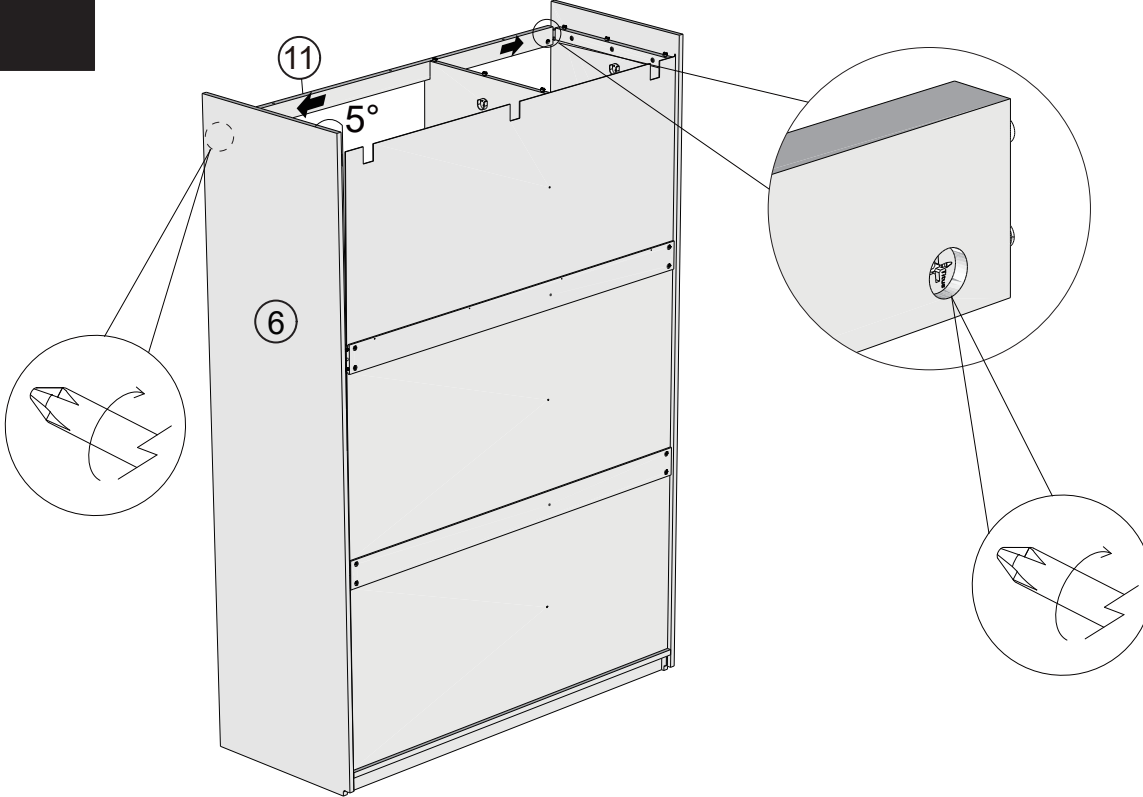

 17 **x4** Remove the protective film from the magnetic attraction plate.



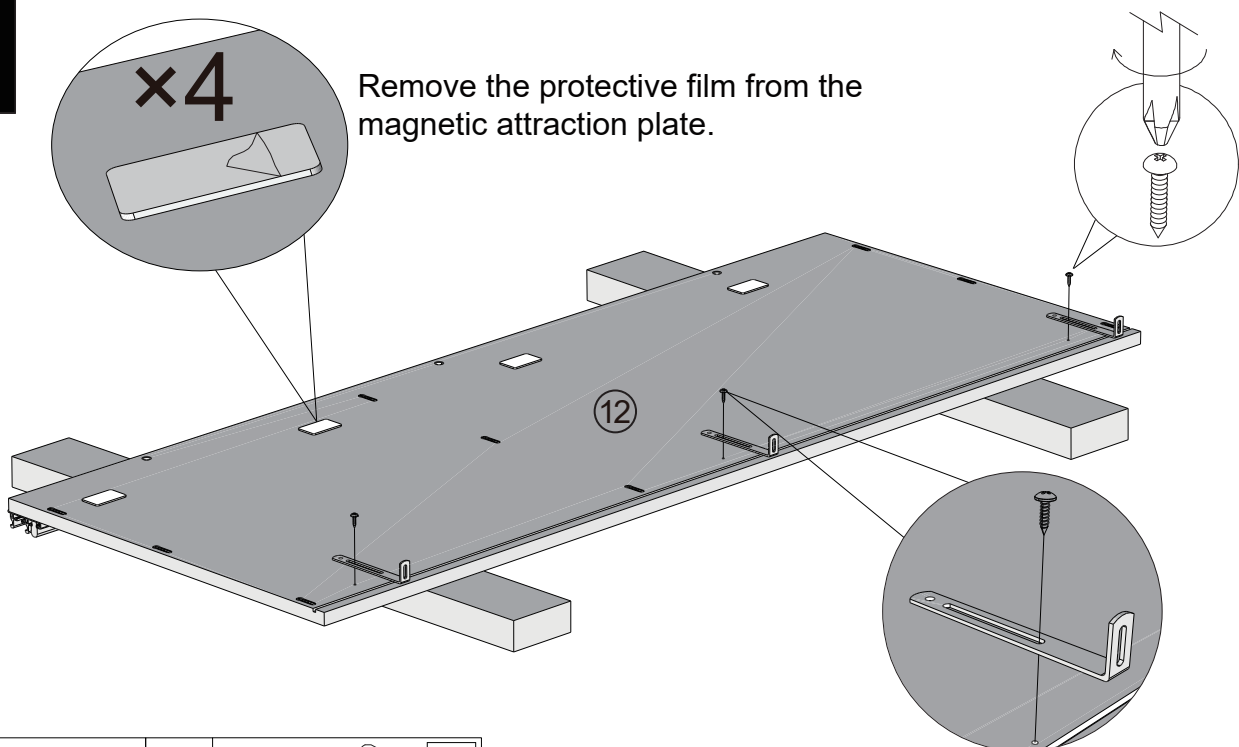


|     |           |   |                                                                                     |                                                                                                     |
|-----|-----------|---|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| S35 | Ø4 x 14mm | 3 |  | <br>not supplied |
| N16 | N/A       | 3 |  |                                                                                                     |


18

Before you install the doors, please push all the soft close to the same position as the diagram as below.


Screwdriver (not supplied)

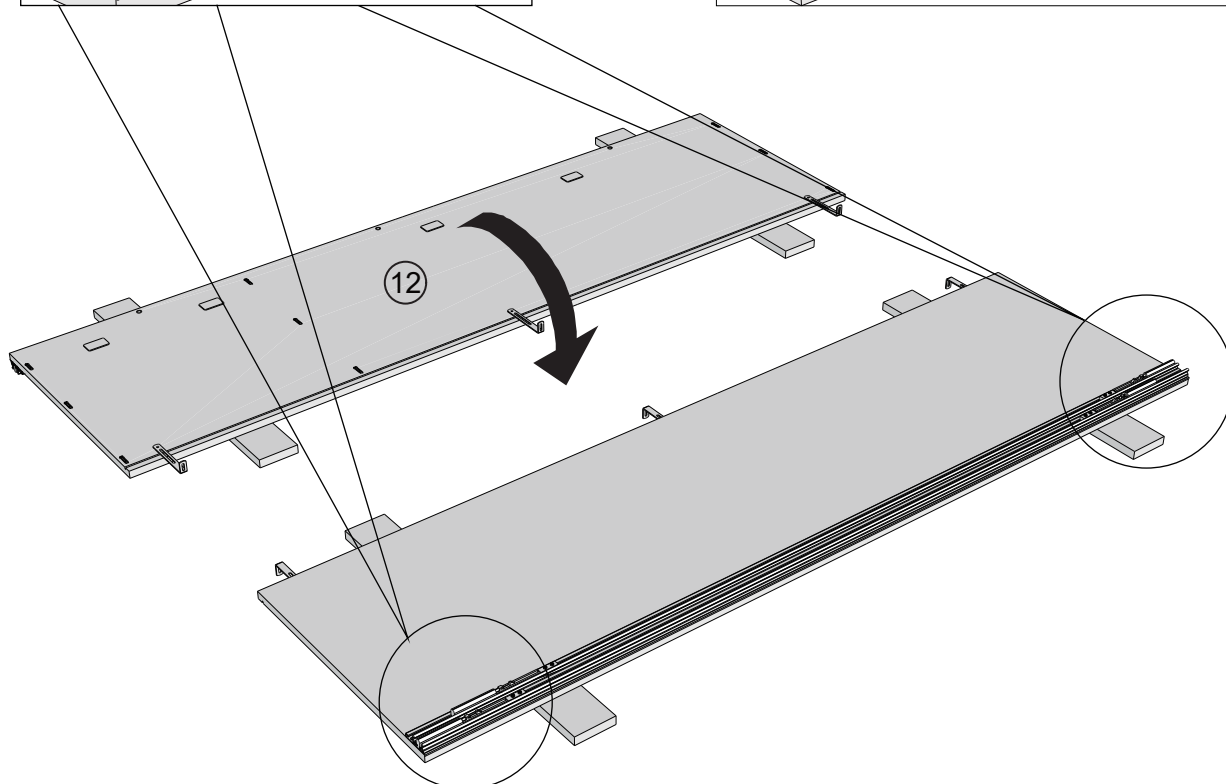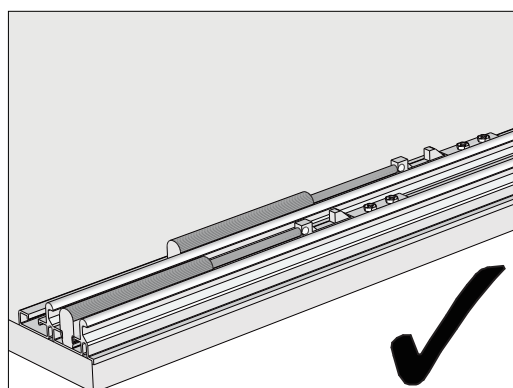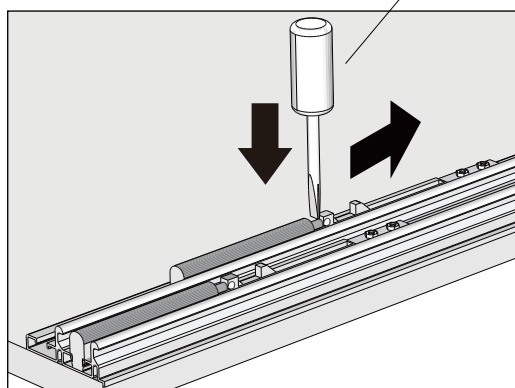

19

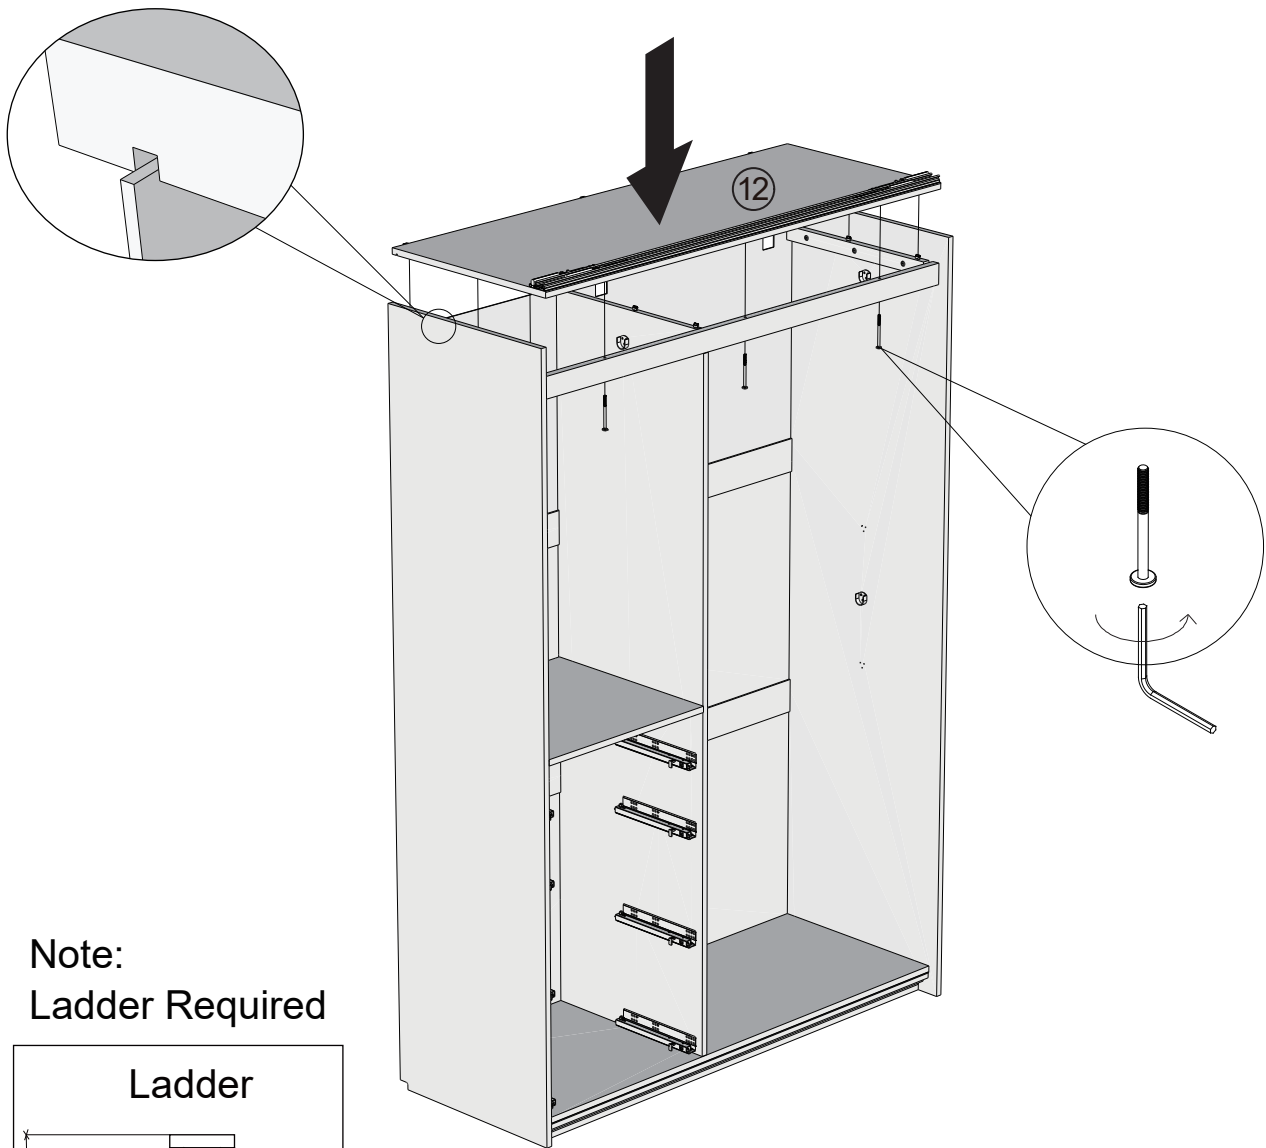


**Note:**  
 Ladder Required

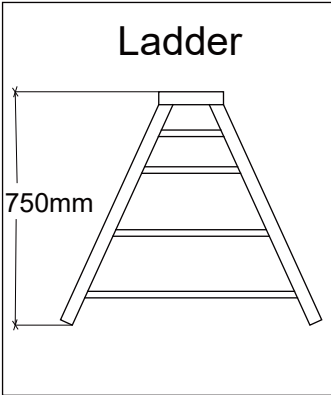


|     |           |   |  |
|-----|-----------|---|--|
| V87 | Ø6 x 70mm | 3 |  |
| T6  | N/A       | 2 |  |

20

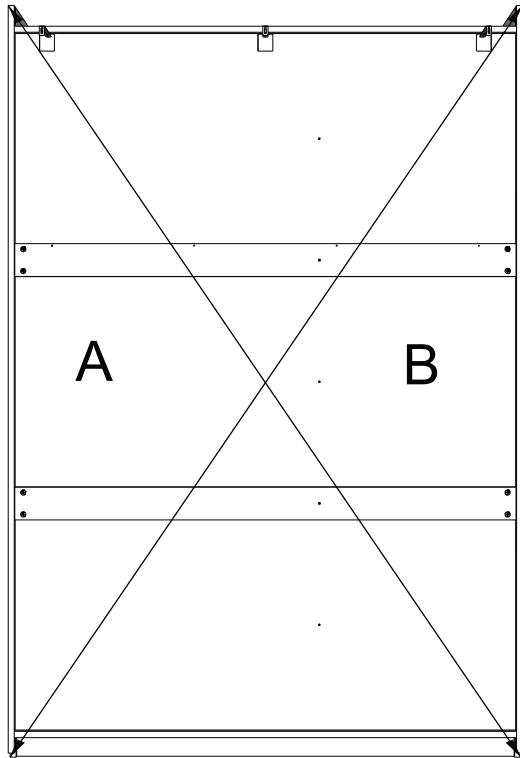

$$A = B$$

21

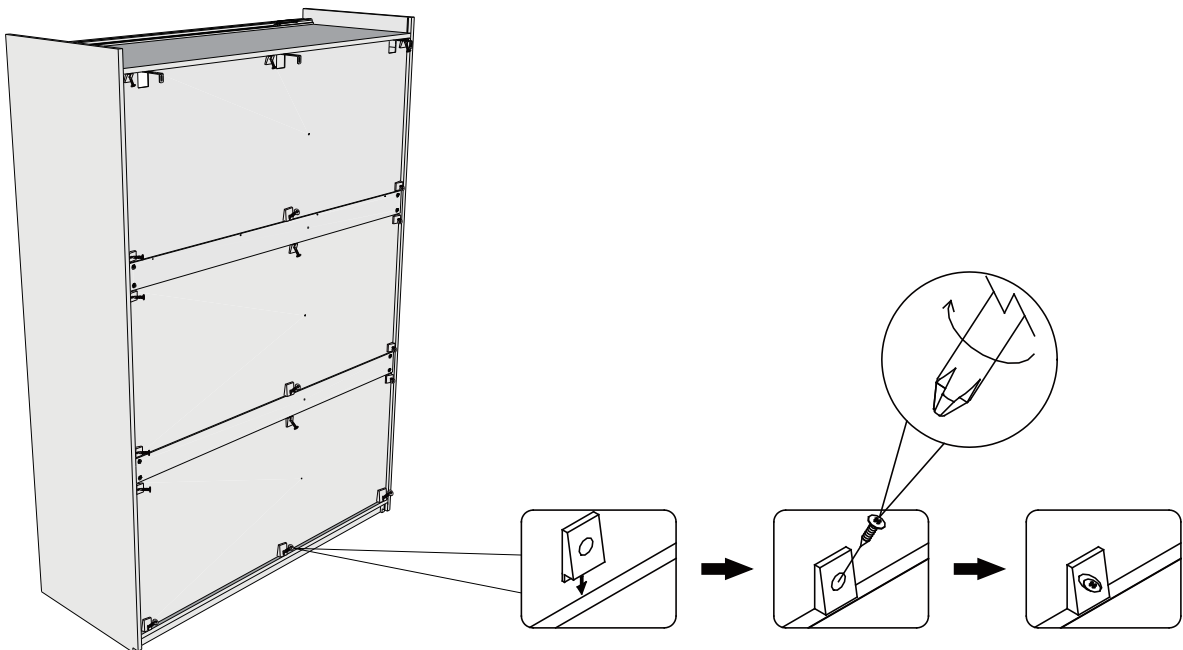


|     |     |    |                                                                                     |                                                                                     |                                                                                                     |
|-----|-----|----|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| T38 | N/A | 18 |  |  | <br>not supplied |
|-----|-----|----|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|

22

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 3X"L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type. If in doubt please consult a qualified trades person.

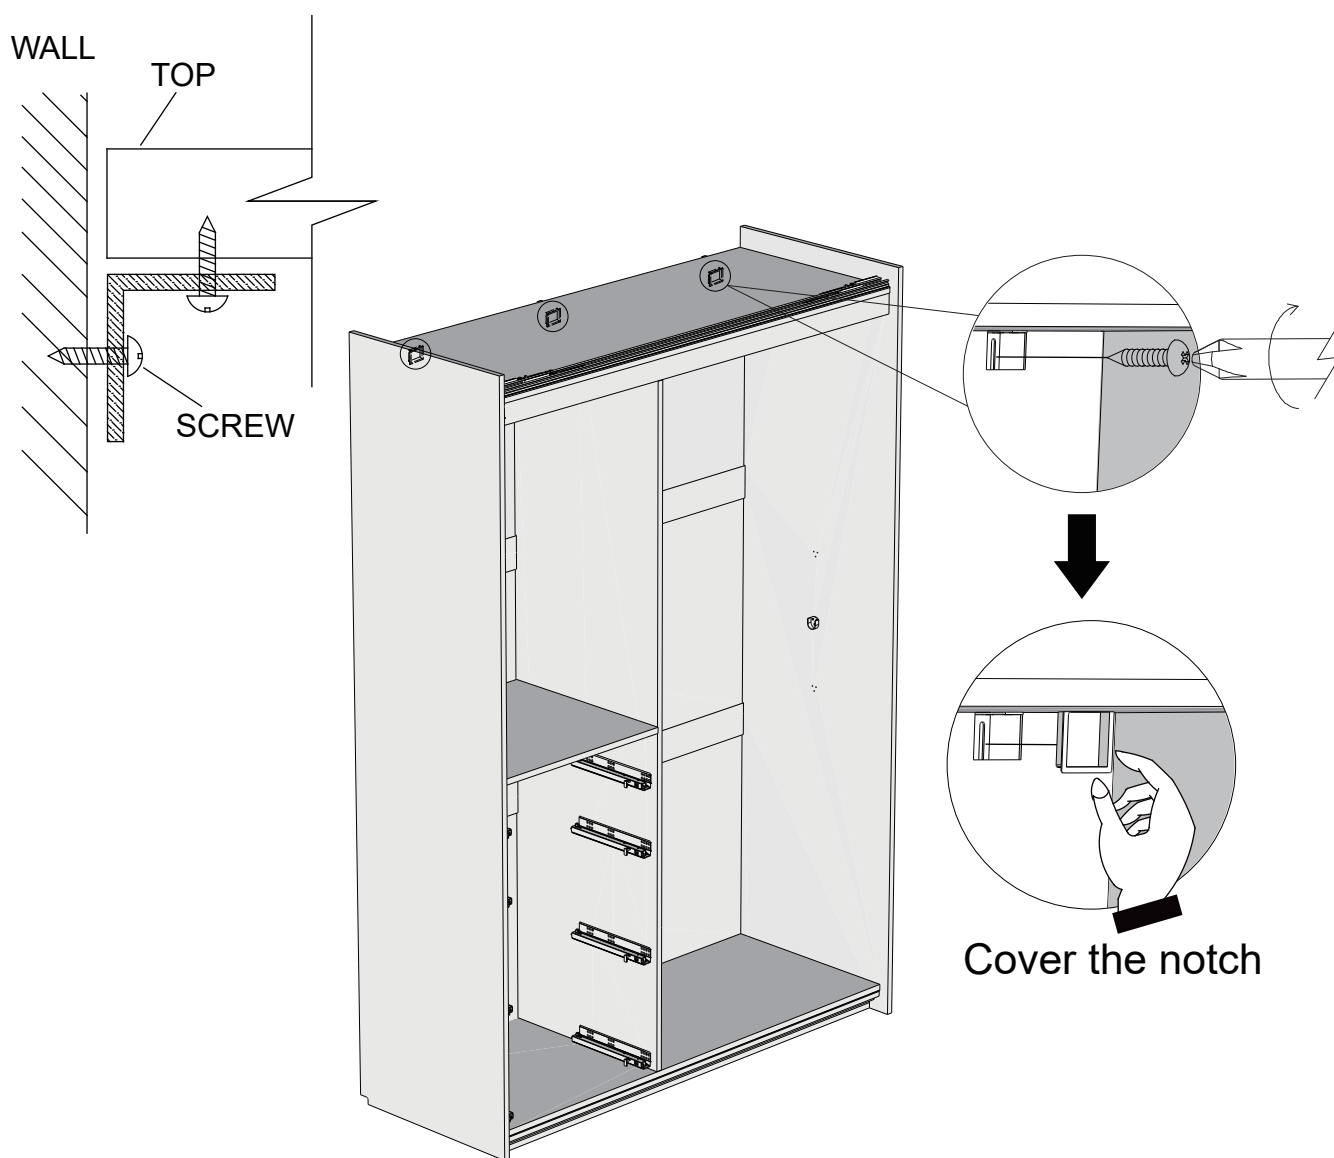


N18

N/A


3



23

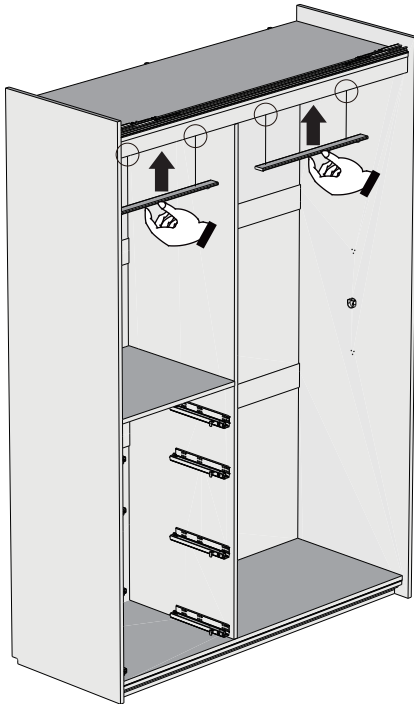

Set the LED lights to automatic sensing mode follow the last page.

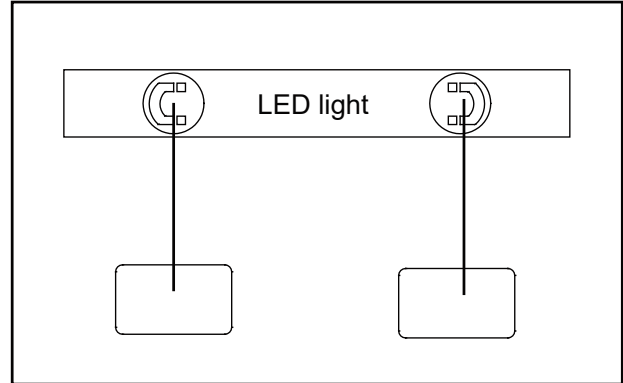

Place the lamp tube position as show in the picture.

N30


LED light

2




24

Please adjust the height of the second hanging rail holes as your needed.

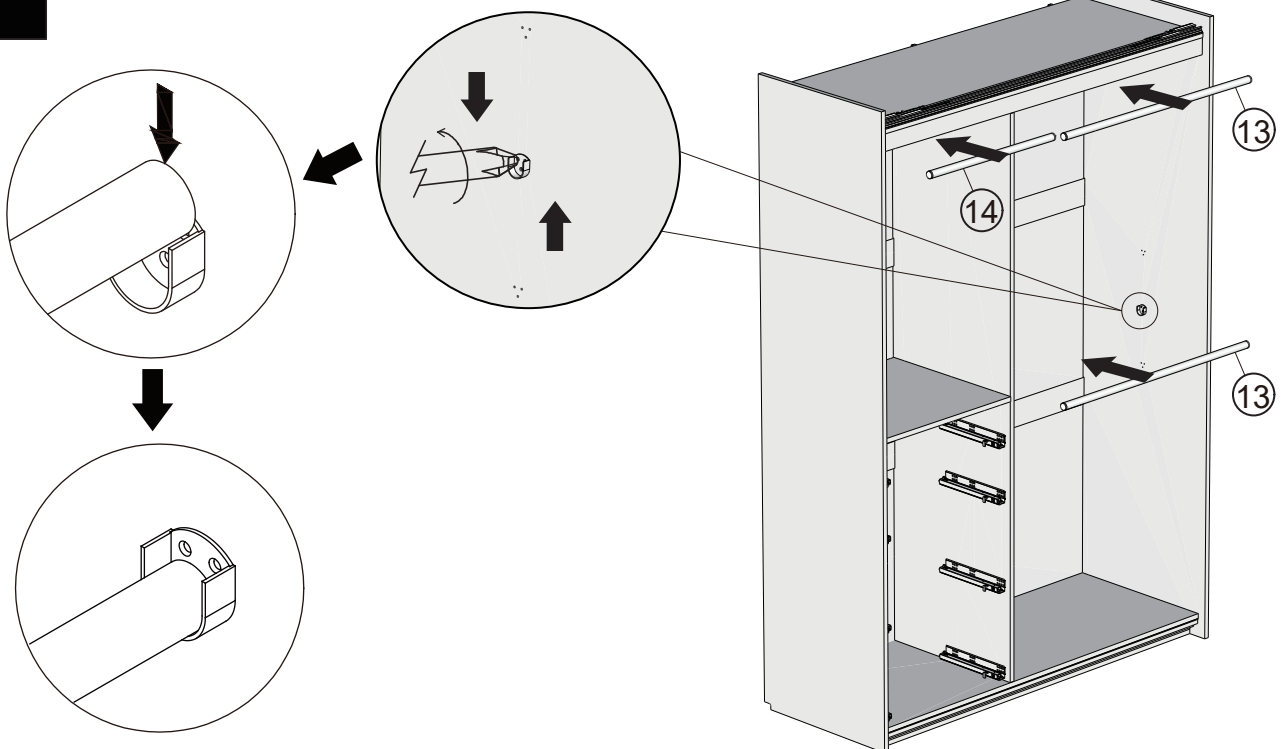


25

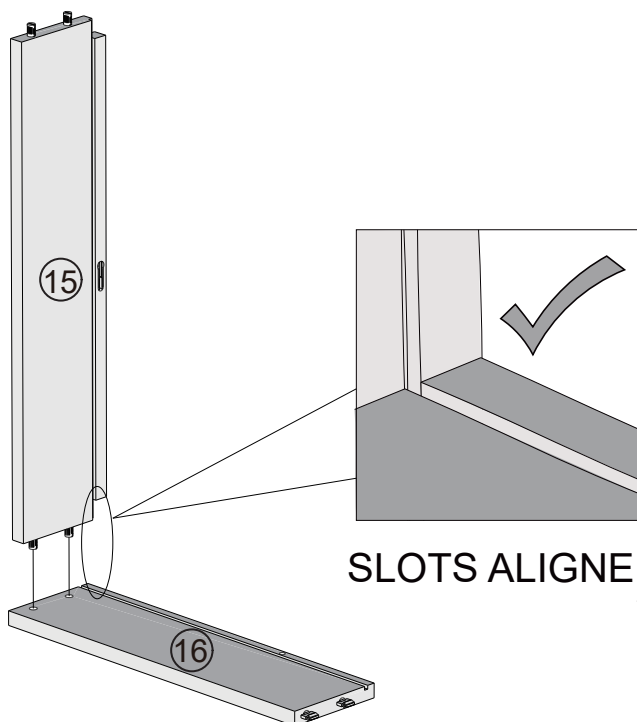

SLOTS ALIGNED

X2


26

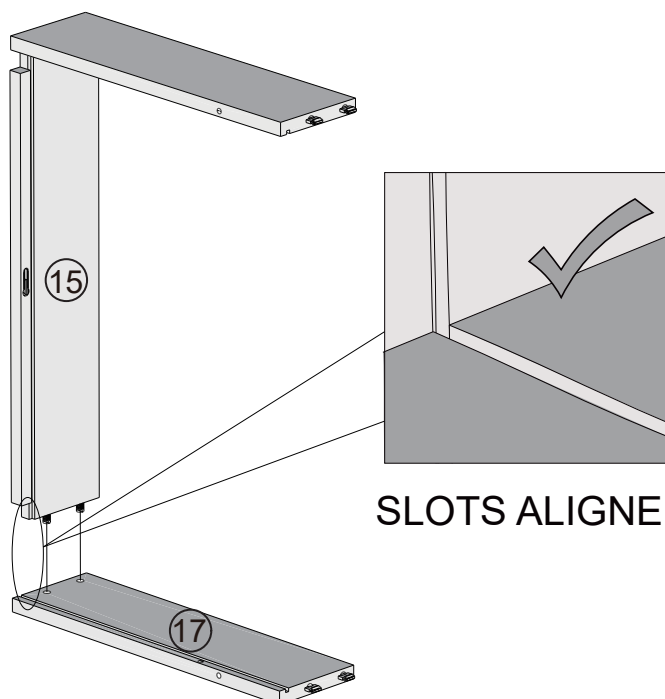

SLOTS ALIGNED



X2

27

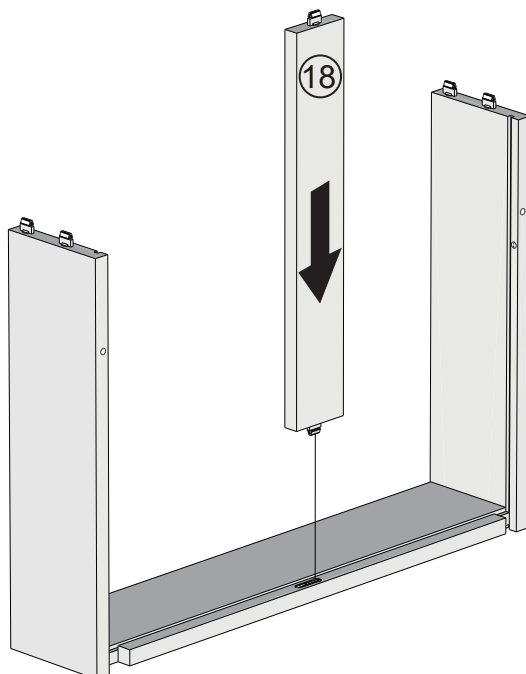



X2

28

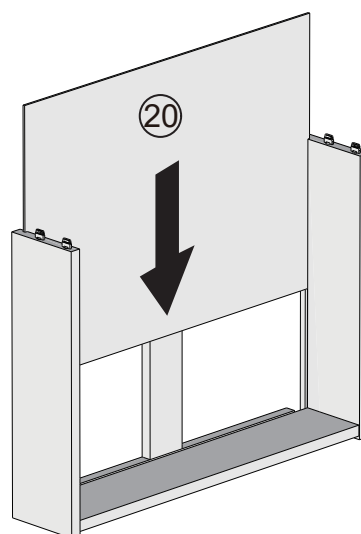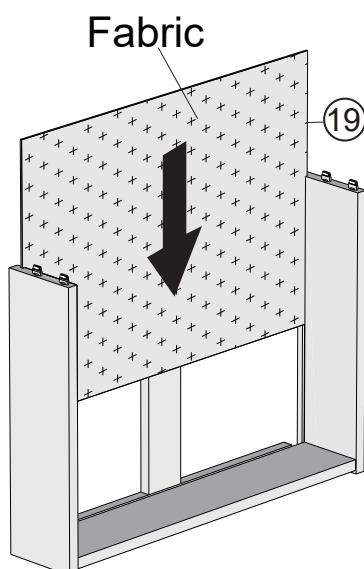


29


Note: Drawer will be permanently assembled once panel (21) is fitted.

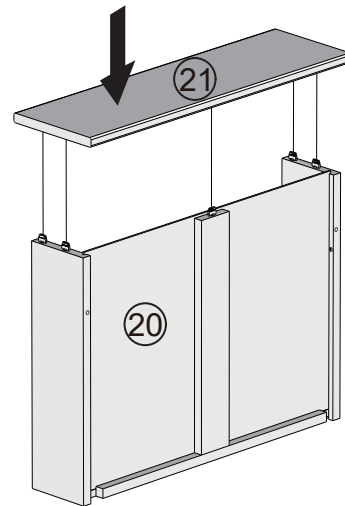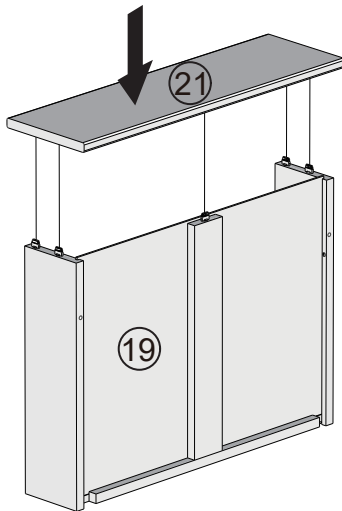



30

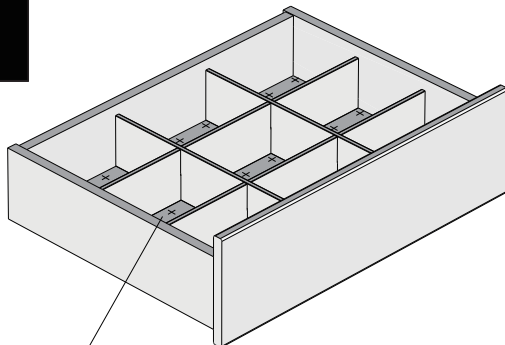


Fabric

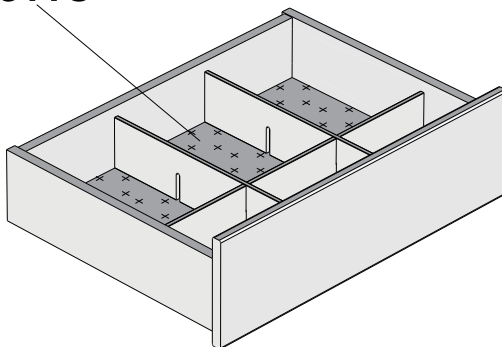

Choose two Jewelry sections from the 2 options below according to your need.

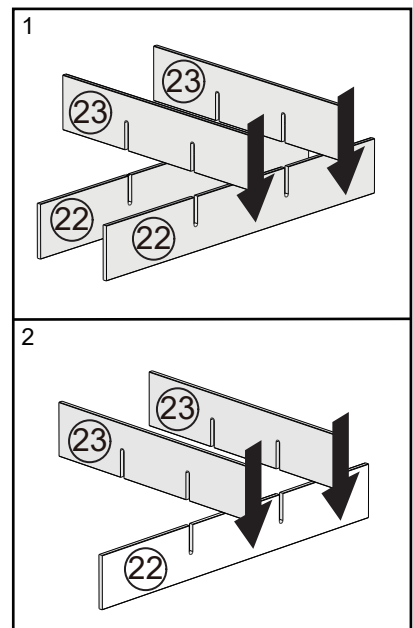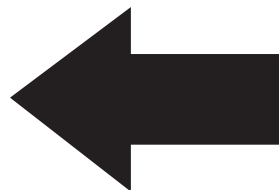


31

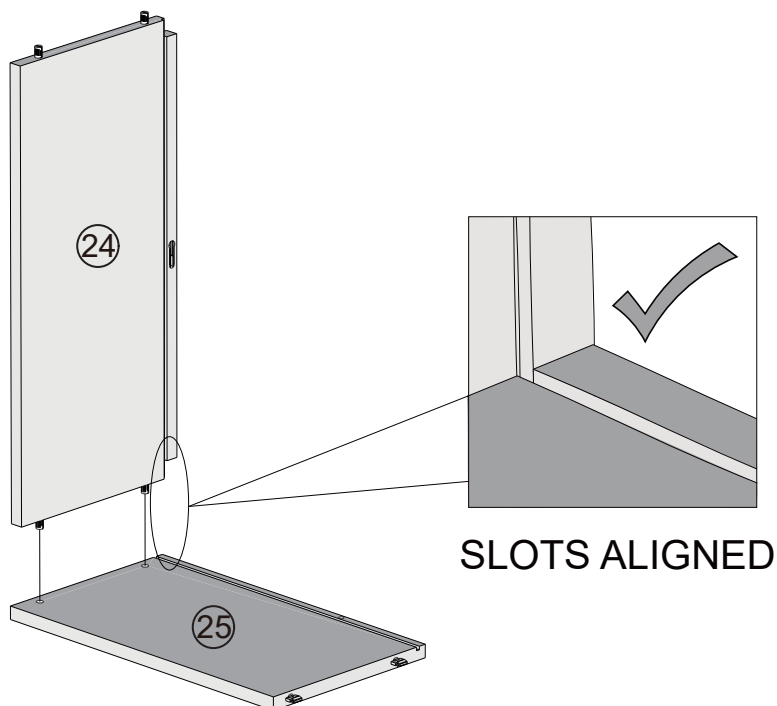


X2

32

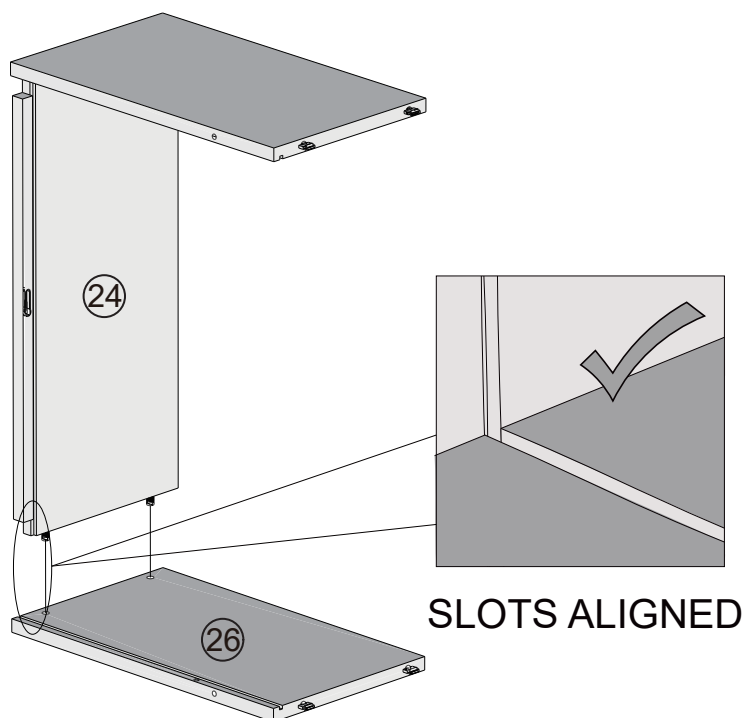


X2

33

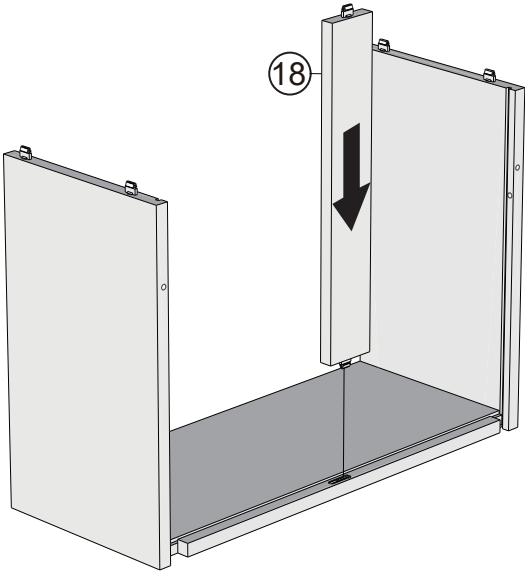


X2

34

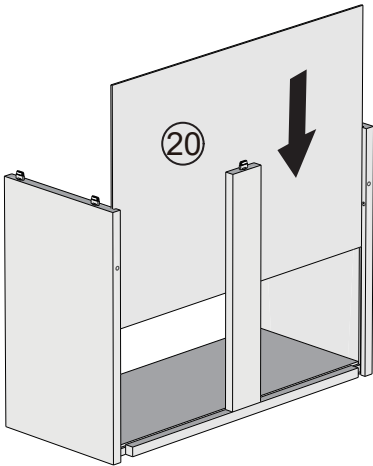


X2

Note: Drawer will be permanently assembled once panel 27 is fitted.

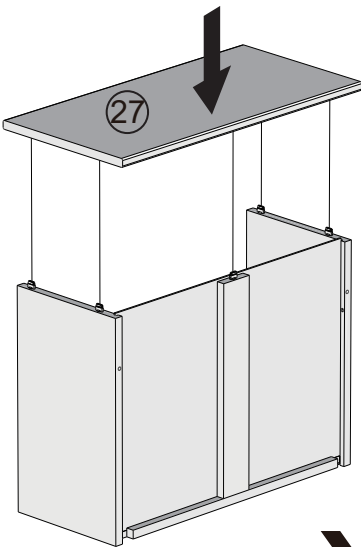


X2

35

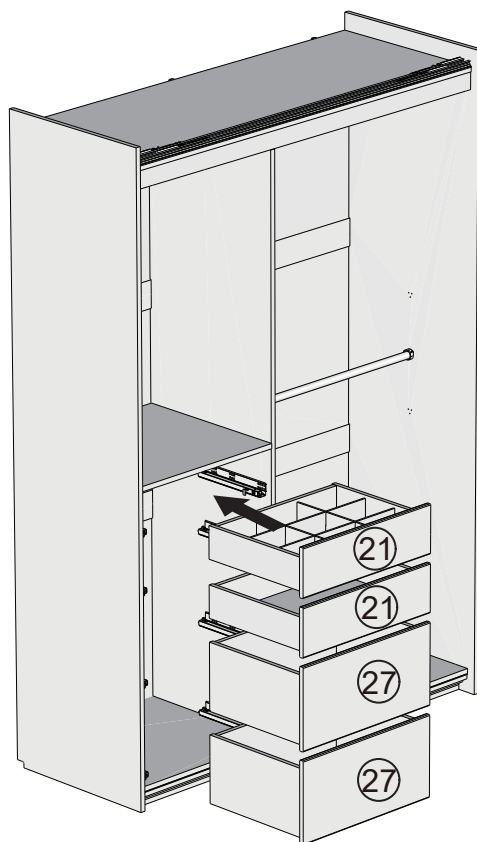


36

1. Pull runners out.
2. Pull plastic tabs inwards.

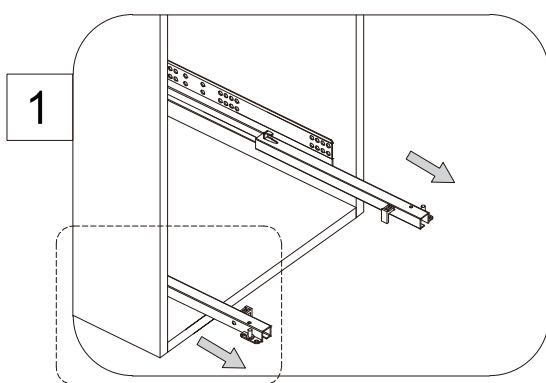


step:1.pull out runner

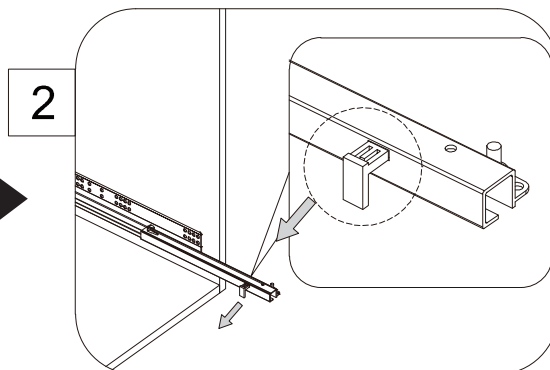


step:2.unlock

37


- 3 .Place drawers on runner making sure hooks at back of runners.
4. Locate pin under drawer.
5. Lock drawer in position.

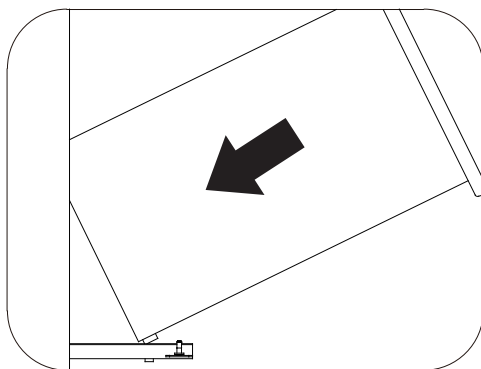


step:3. Locate

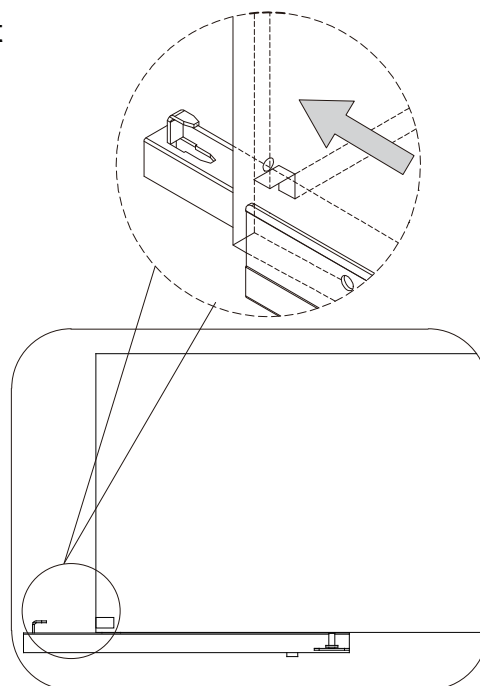


step:4. All the way

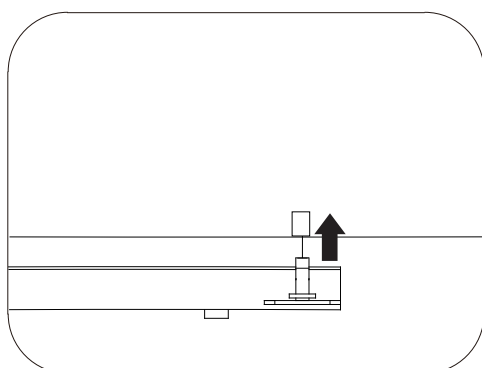

step:6. Locate adjustment pin in hole

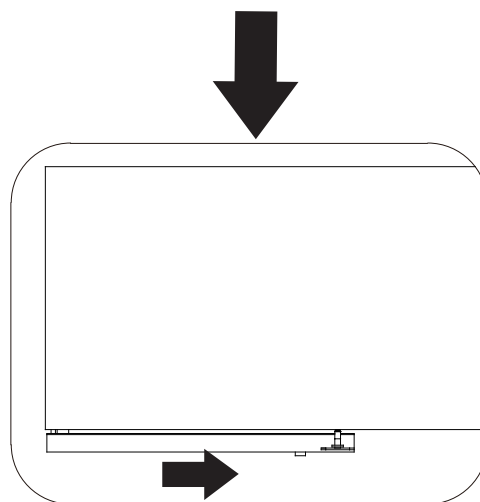


step:5. Pull runner forward

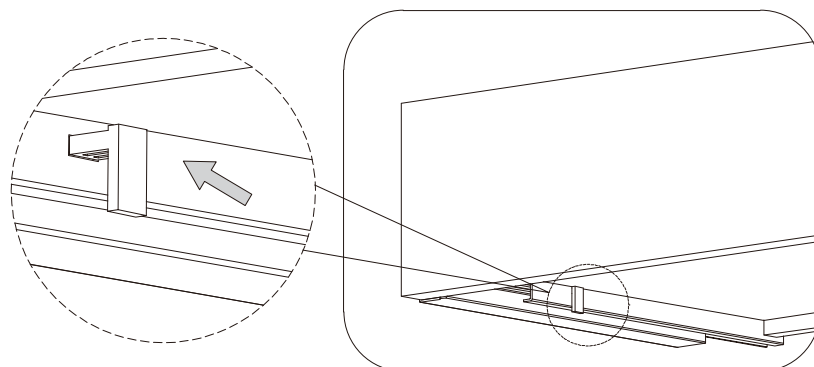


step:7. Lock

38


6. Adjust drawer height if needed.

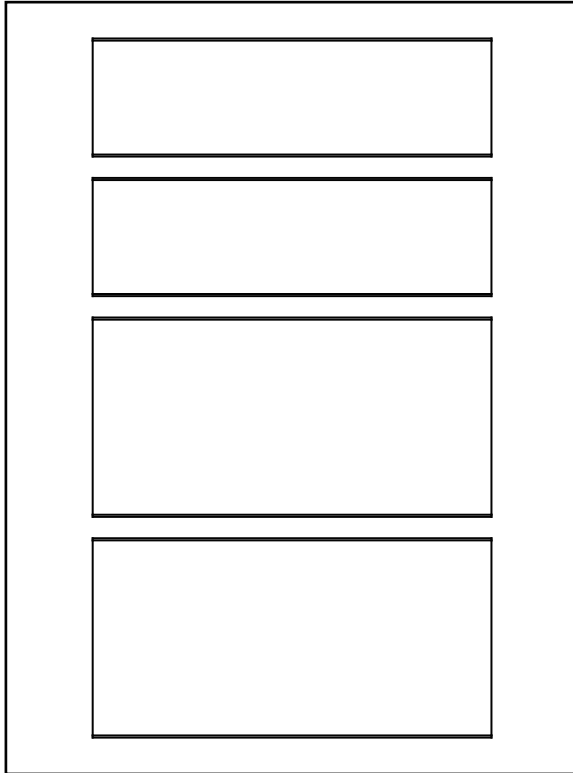


OK

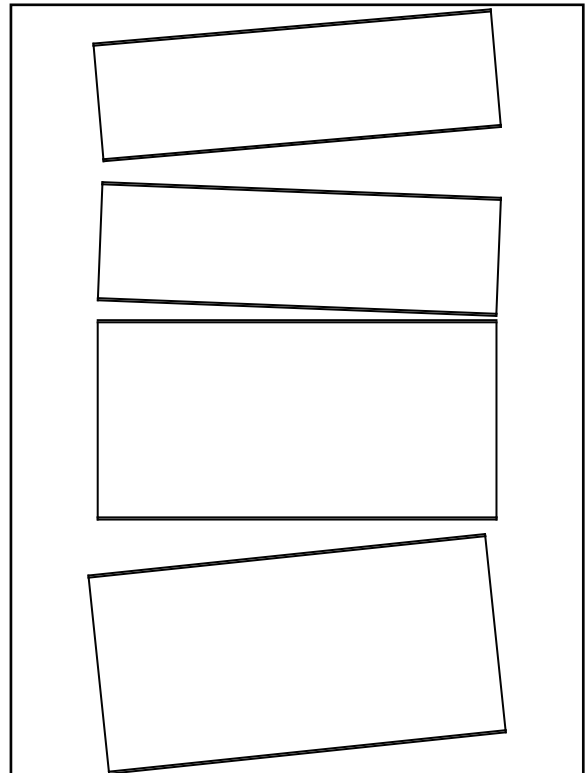

Need to adjust as below

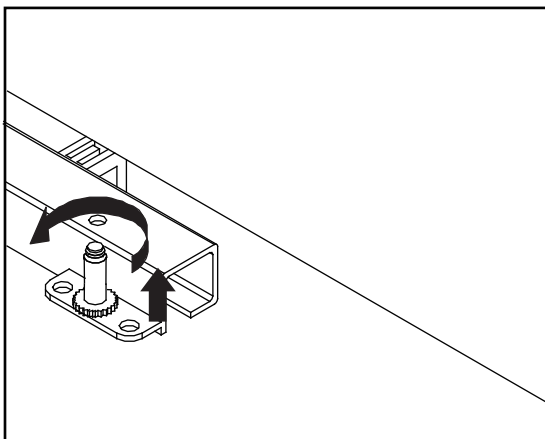


Anti-clockwise is up

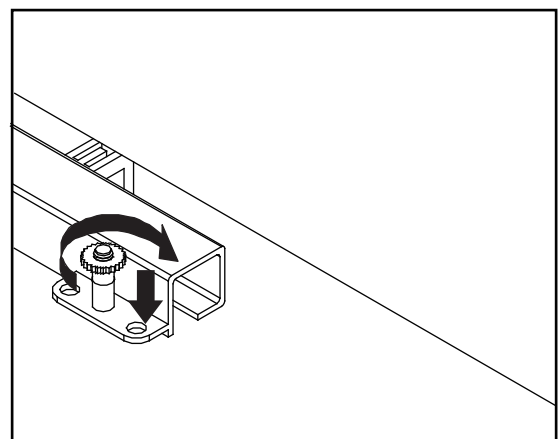

Clockwise is down

39

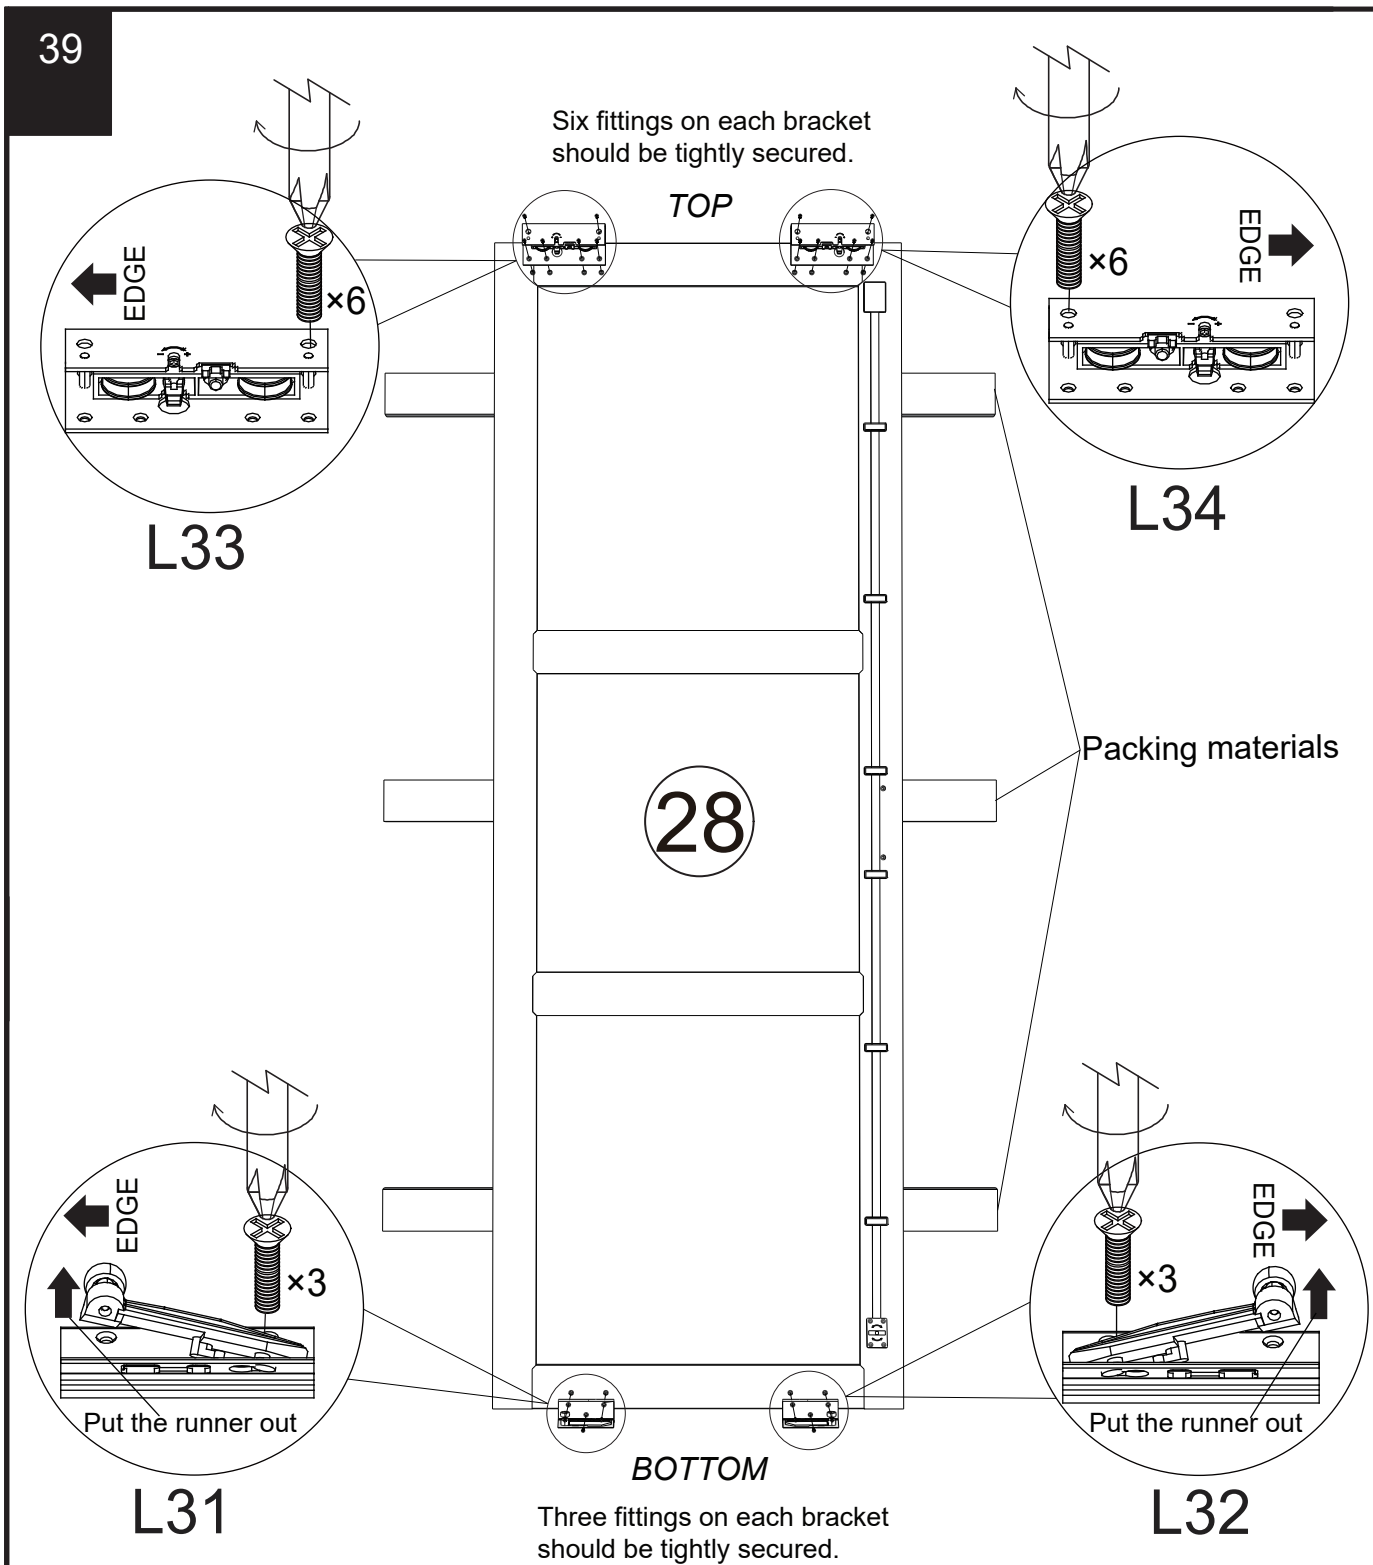

|      |         |    |                                                                                     |                                                                                                         |     |     |   |                                                                                       |
|------|---------|----|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|-----|-----|---|---------------------------------------------------------------------------------------|
| U134 | Ø4x14mm | 18 |  |  PH2<br>not supplied |     |     |   |                                                                                       |
| L31  | N/A     | 1  |  |                                                                                                         | L32 | N/A | 1 |  |
| L33  | N/A     | 1  |  |                                                                                                         | L34 | N/A | 1 |  |

Six fittings on each bracket should be tightly secured.



30

R38



R35

# R36

|      |         |    |                                                                                                                            |     |          |   |                                                                                       |
|------|---------|----|----------------------------------------------------------------------------------------------------------------------------|-----|----------|---|---------------------------------------------------------------------------------------|
| V59  | Ø6x35mm | 2  |                                         | D17 | Ø10x30mm | 4 |  |
| U134 | Ø4x14mm | 18 | <br><small>PH2<br/>not supplied</small> | T6  | N/A      | 2 |  |
| R35  | N/A     | 1  |                                         | R36 | N/A      | 1 |  |
| R37  | N/A     | 1  |                                         | R38 | N/A      | 1 |  |

41



If the door panel is bent, adjust the straightener as shown in the picture.

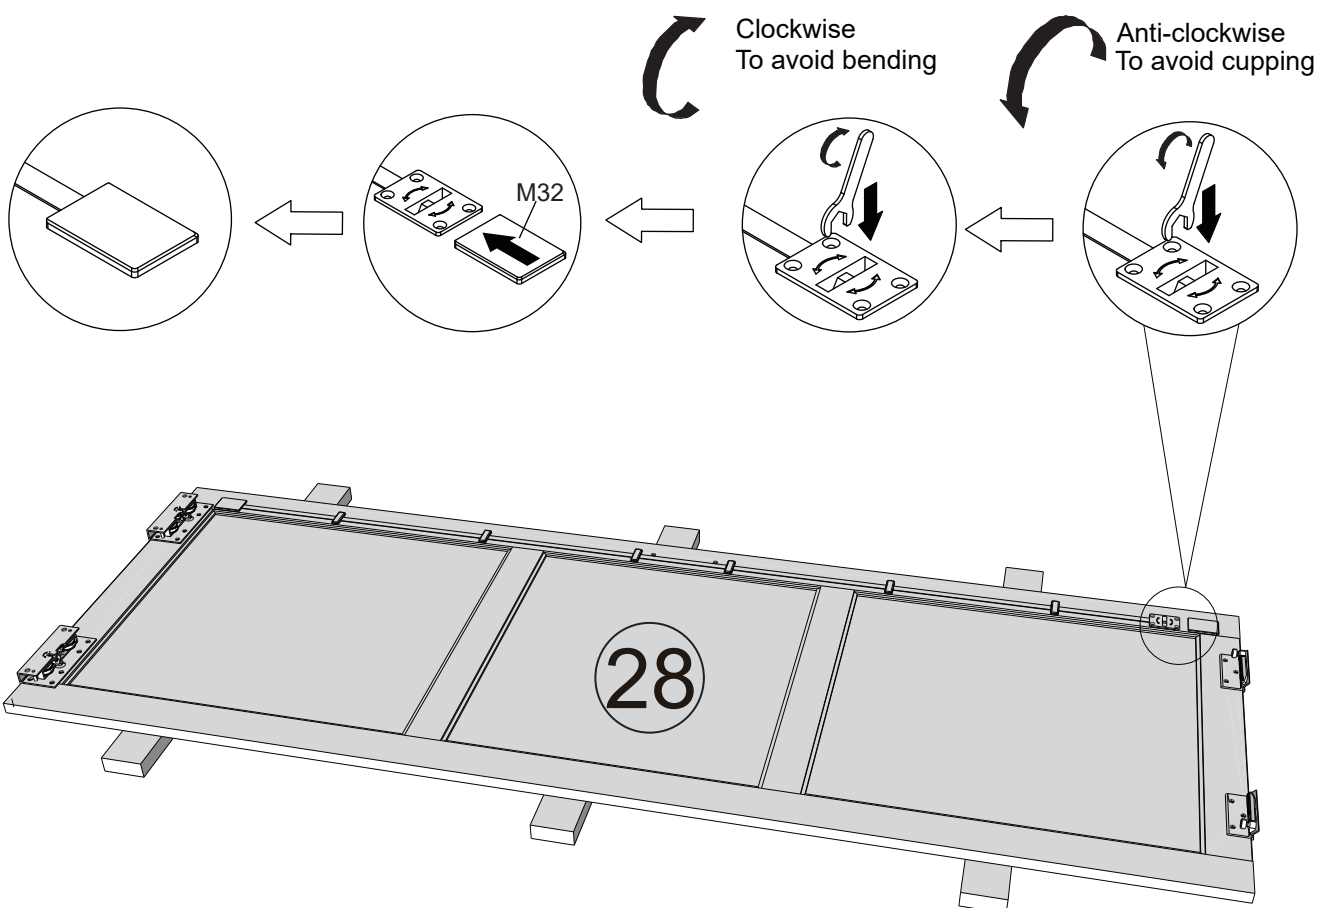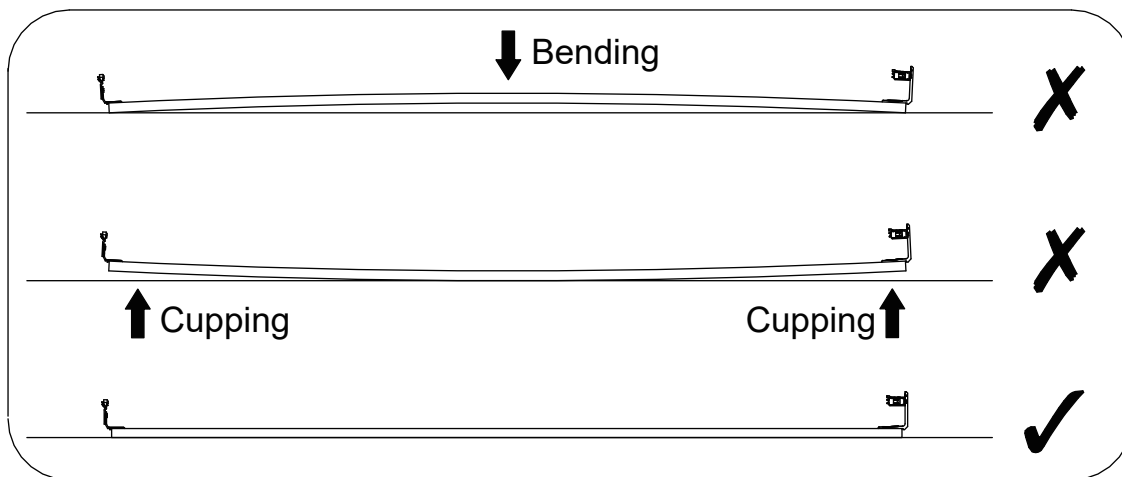

|     |                    |   |                                                                                     |
|-----|--------------------|---|-------------------------------------------------------------------------------------|
| T13 | N/A                | 1 |  |
| M32 | Straightener Cover | 1 |  |

42


If the door panel is bent, adjust the straightener as shown in the picture.

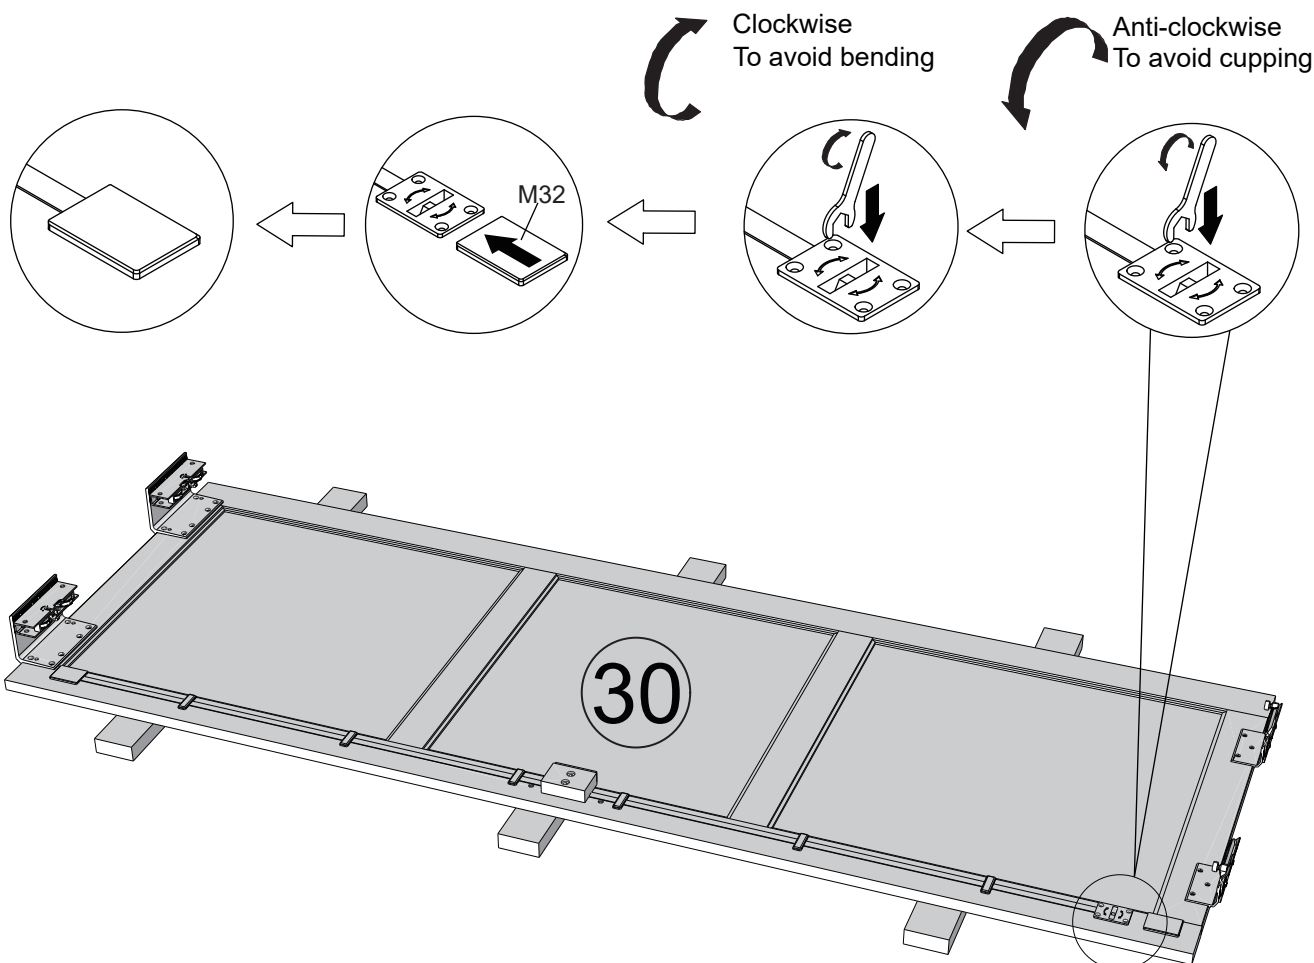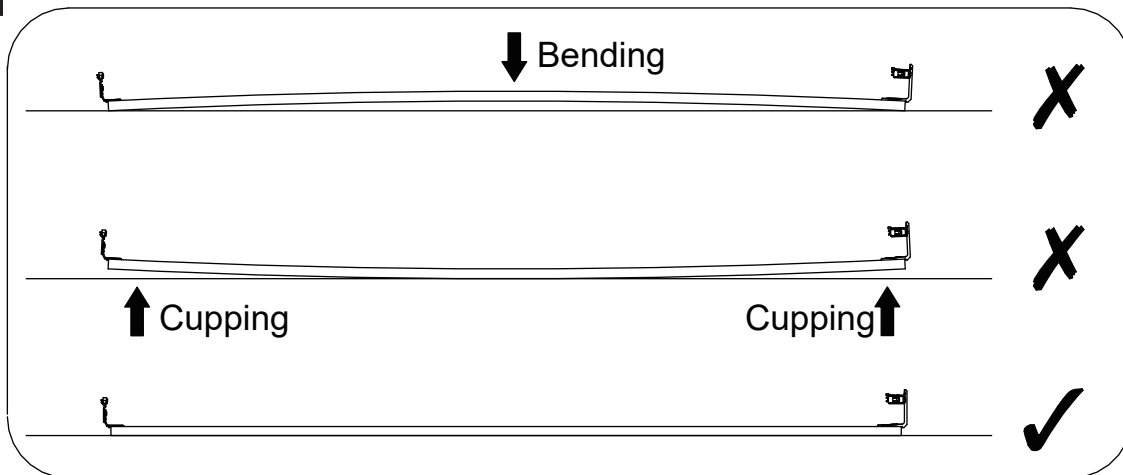

|     |                    |   |                                                                                     |
|-----|--------------------|---|-------------------------------------------------------------------------------------|
| T13 | N/A                | 1 |  |
| M32 | Straightener Cover | 1 |  |

43

Please remove the adhesive from the brush and start applying it 15mm away from the edge.

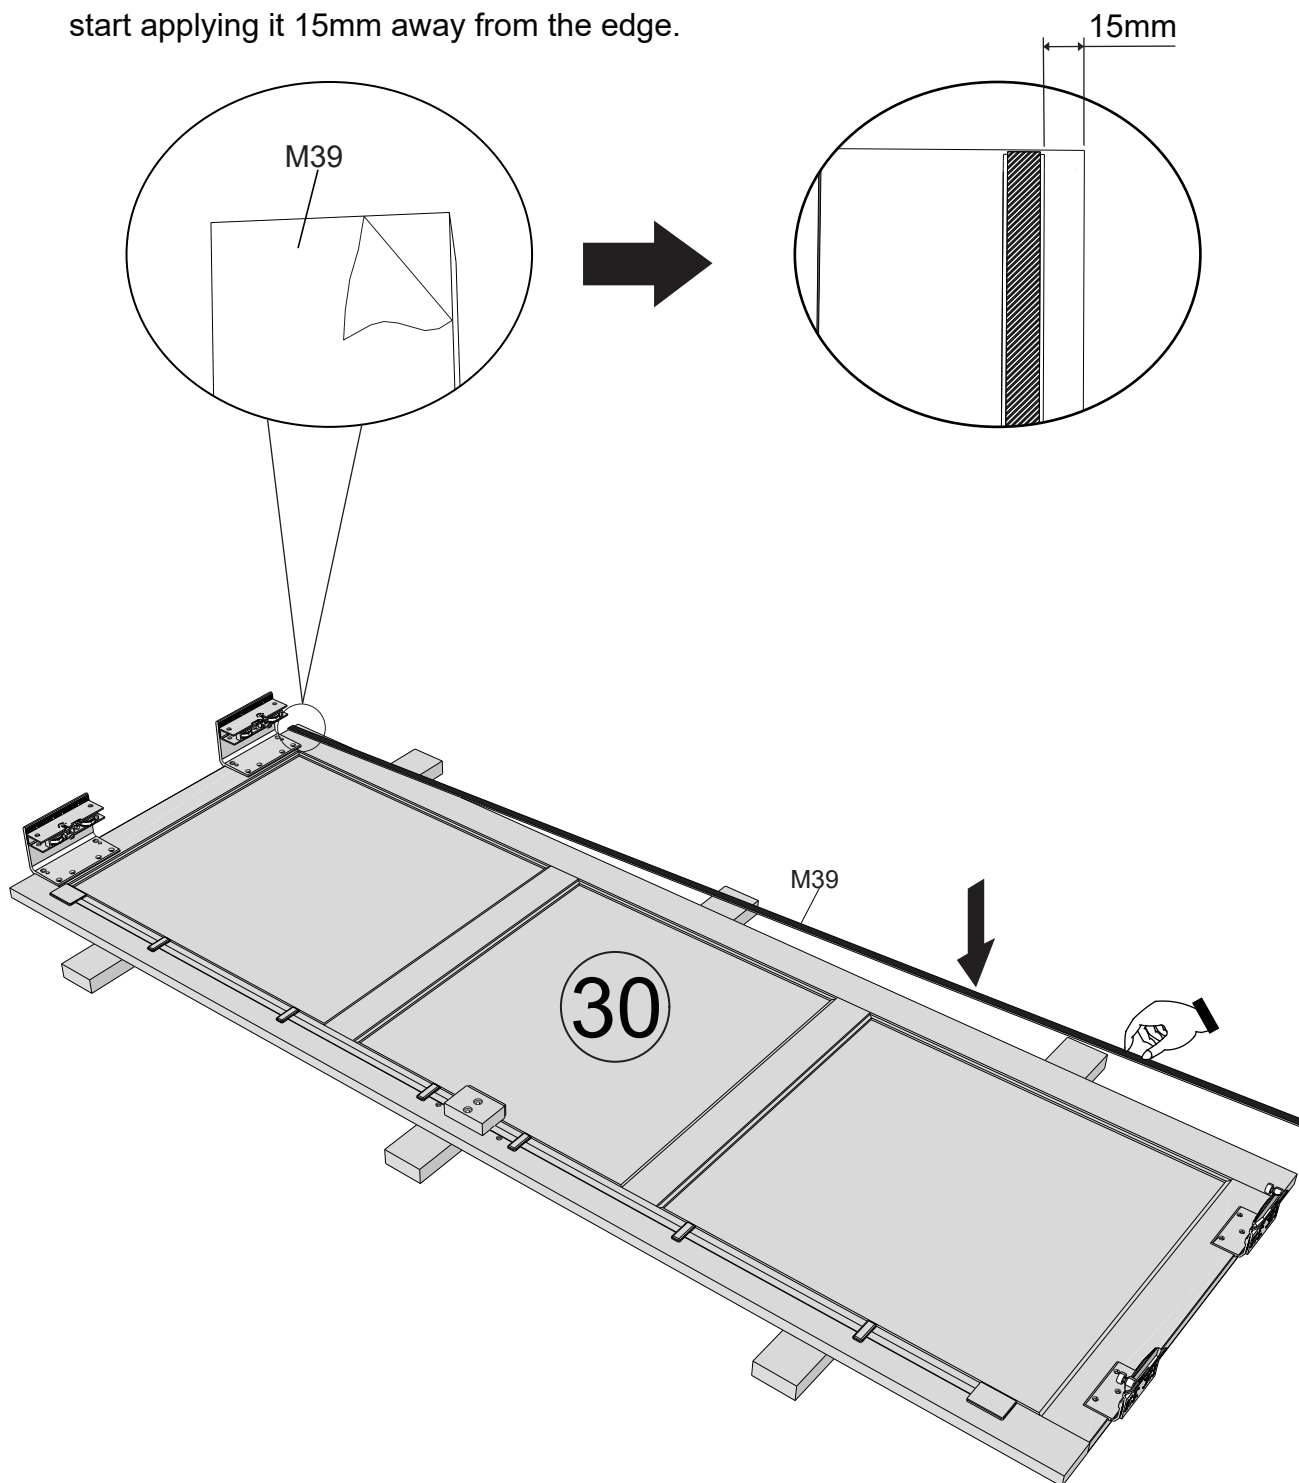


M39


Brush

1



 44

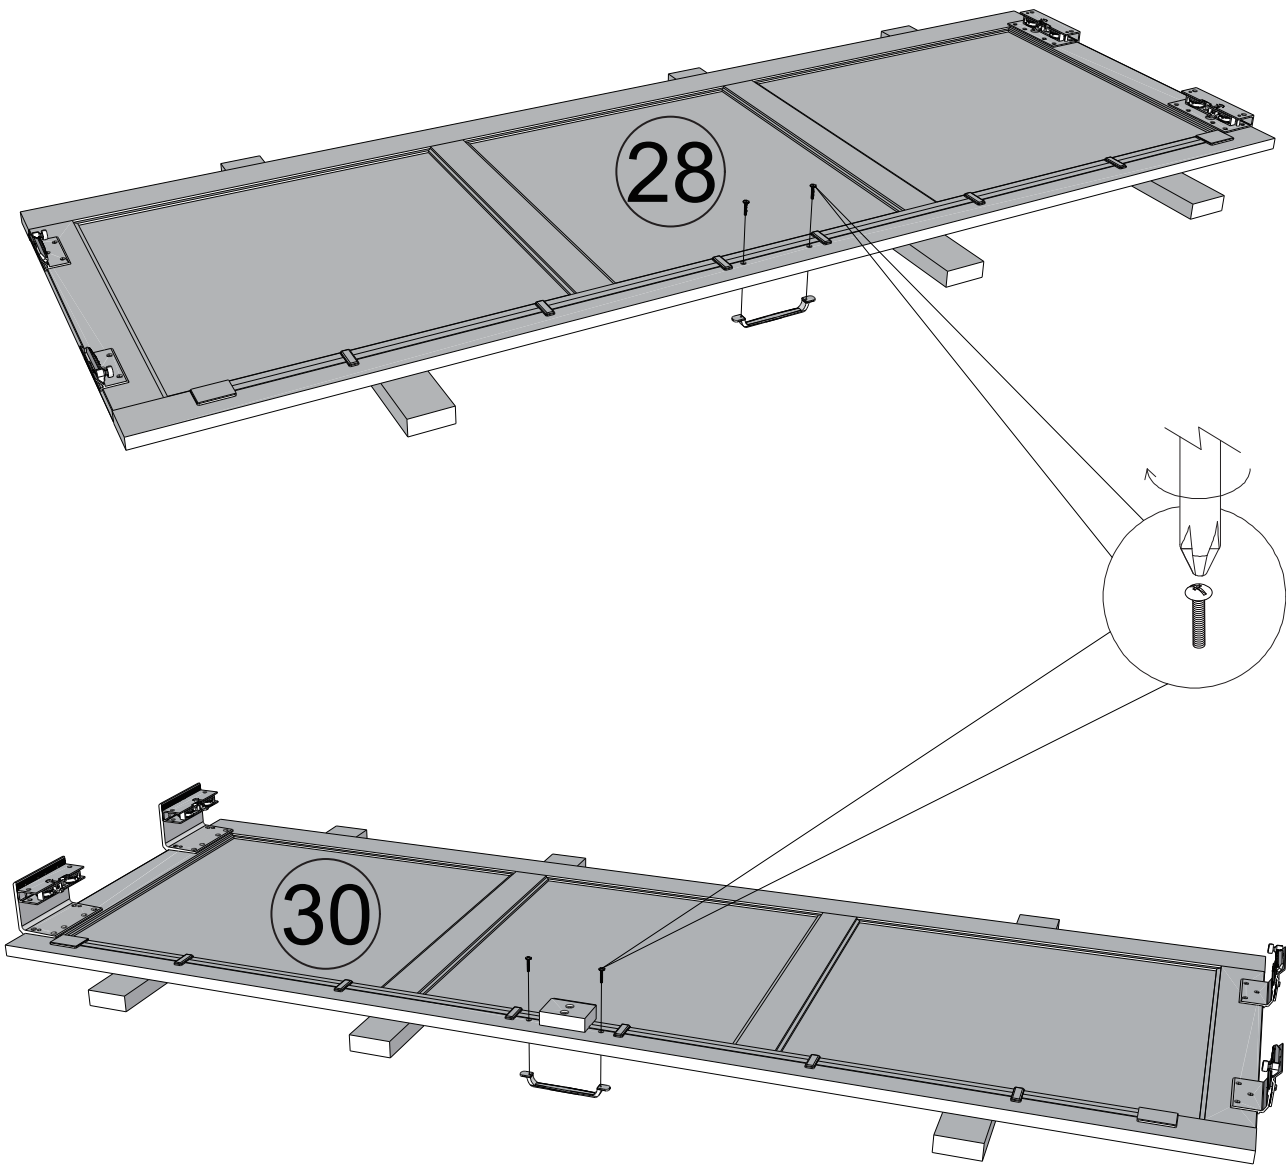


|     |     |   |                                                                                                                                                                                                                                                                                                                                                 |
|-----|-----|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E62 | N/A | 2 |     |
|-----|-----|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

45

## Reminder



Before you install the doors, please push all the soft close to the same position as the diagram as below.

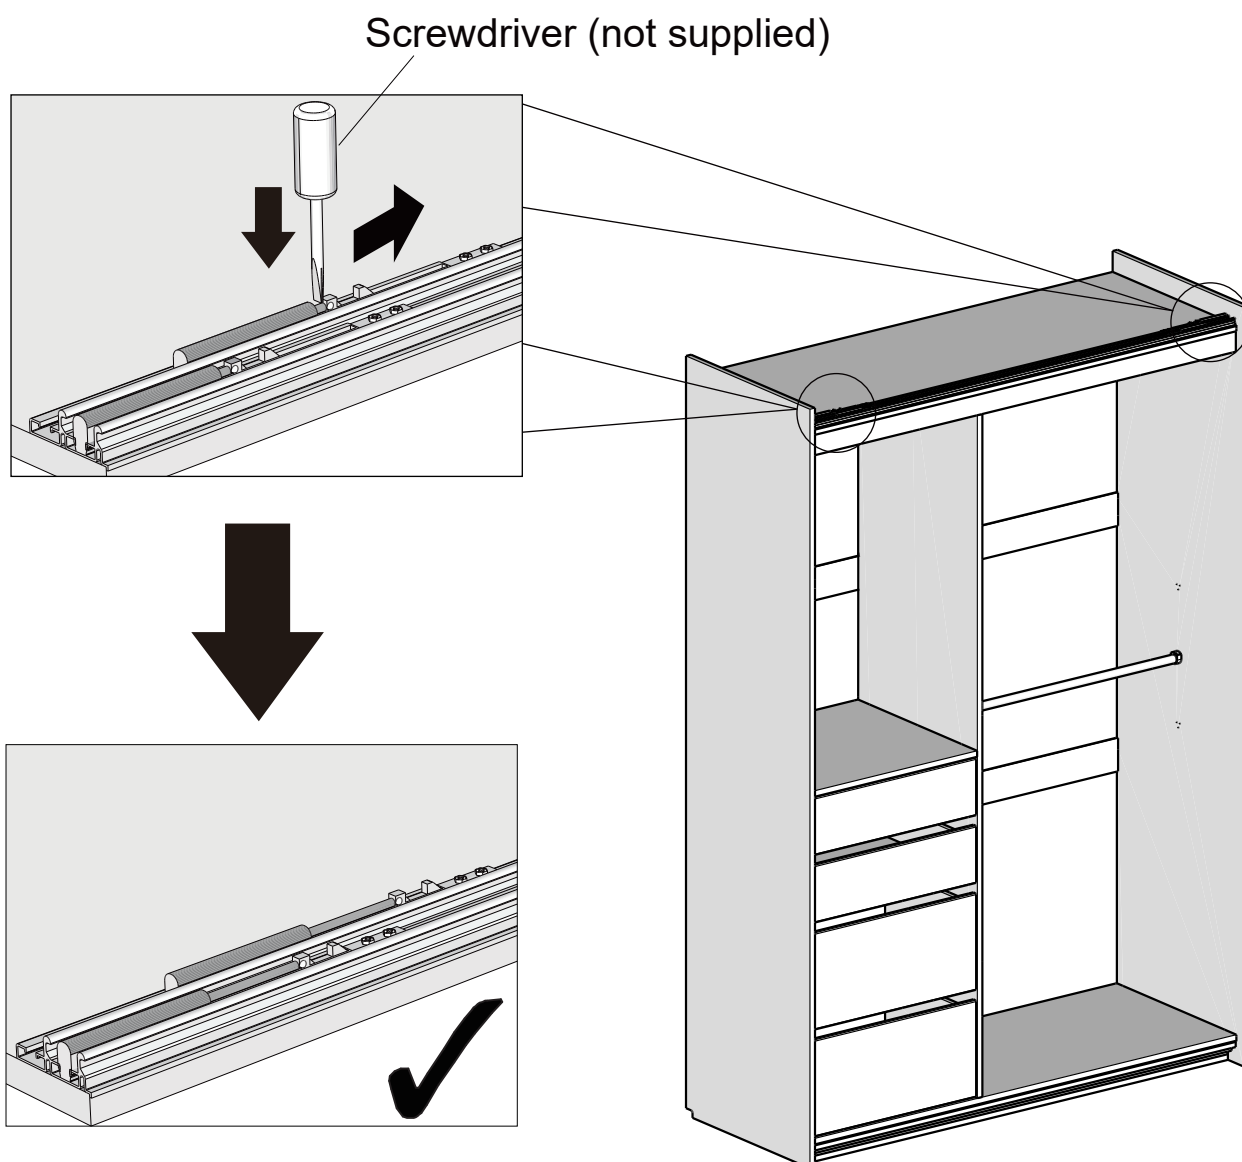

46

Install from the middle !

Note:  
Ladder Required

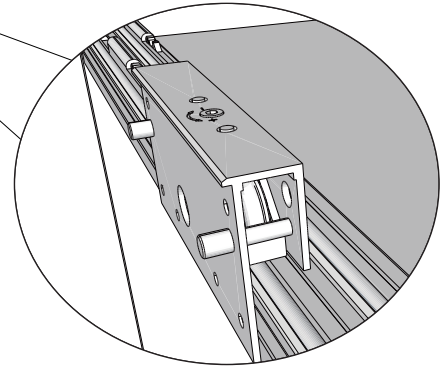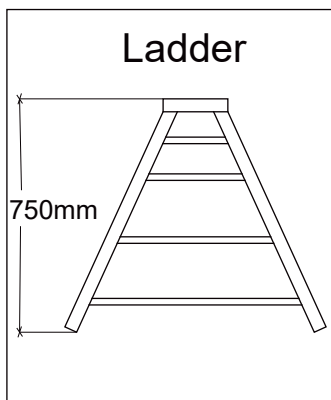

Place the slider onto the correct runner at the front.


47



Push the door into the right runner.

48

After the door panel is installed, if you find that the door panel is not properly aligned left and right, you can make fine adjustments by adjusting the "+" and "-" signs to make the door panel perfectly coincide with the carcass.

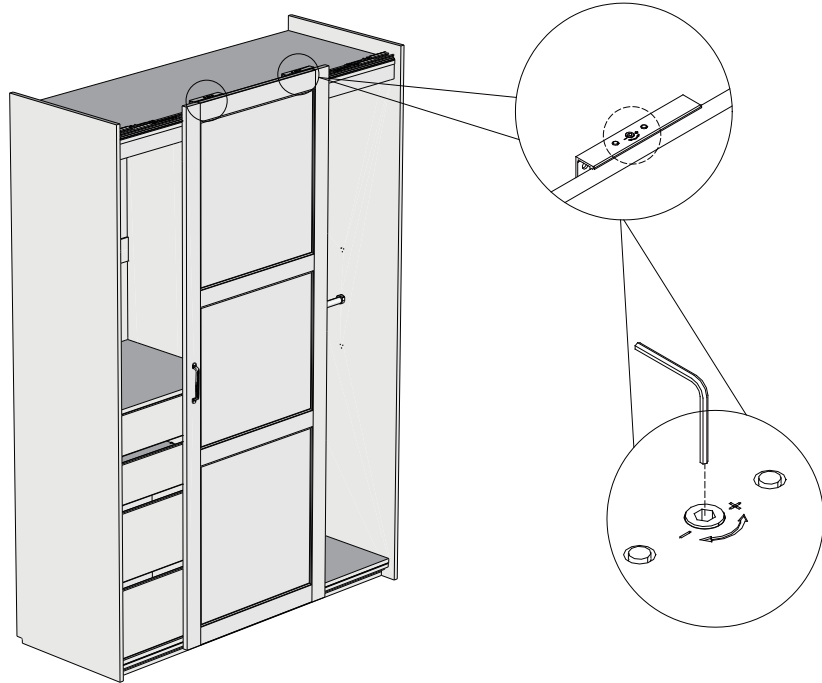


T6

N/A

2






49

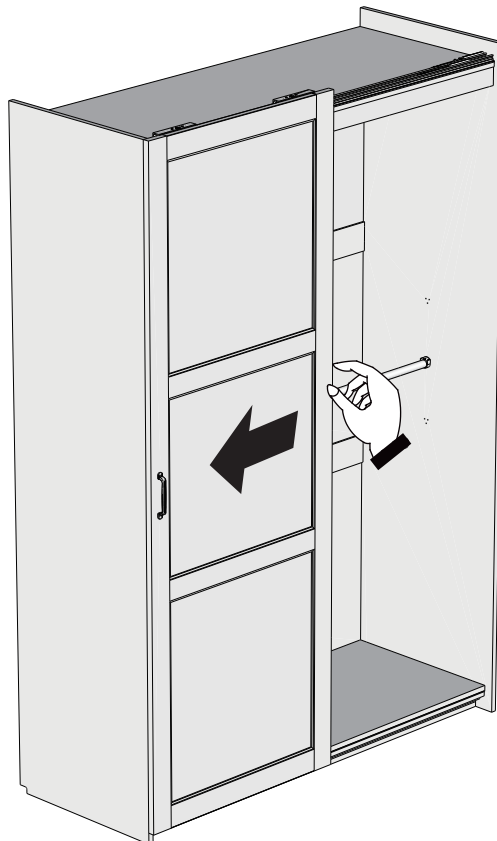

50


Install from the middle !

Note:  
Ladder Required

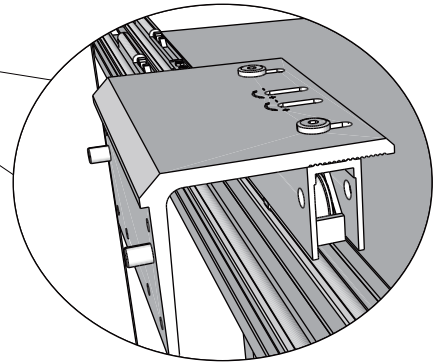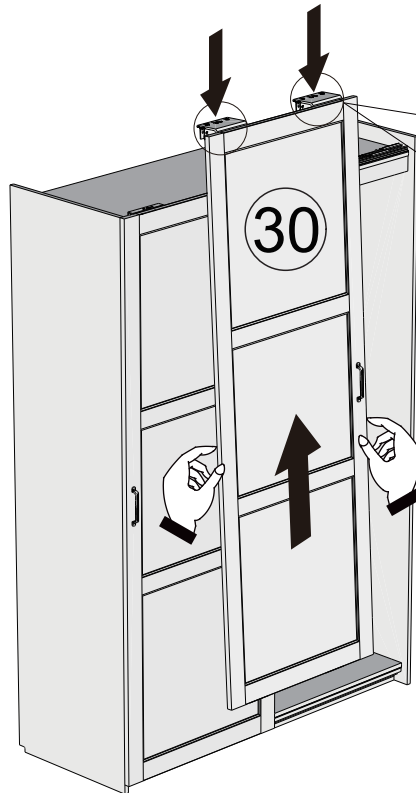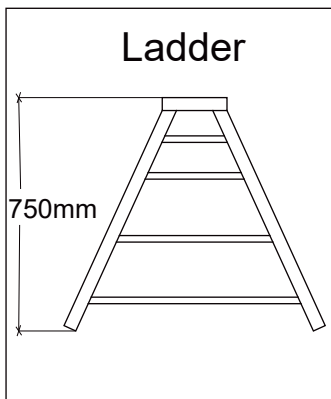

Place the slider onto the correct runner at the back.


51

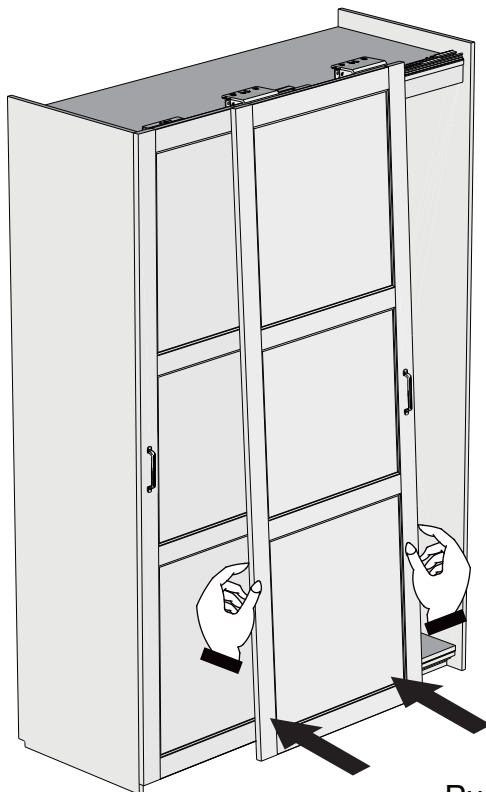

Push the door into the right runner.

52

After the door panel is installed, if you find that the door panel is not properly aligned left and right, you can make fine adjustments by adjusting the "+" and "-" signs to make the door panel perfectly coincide with the carcass.

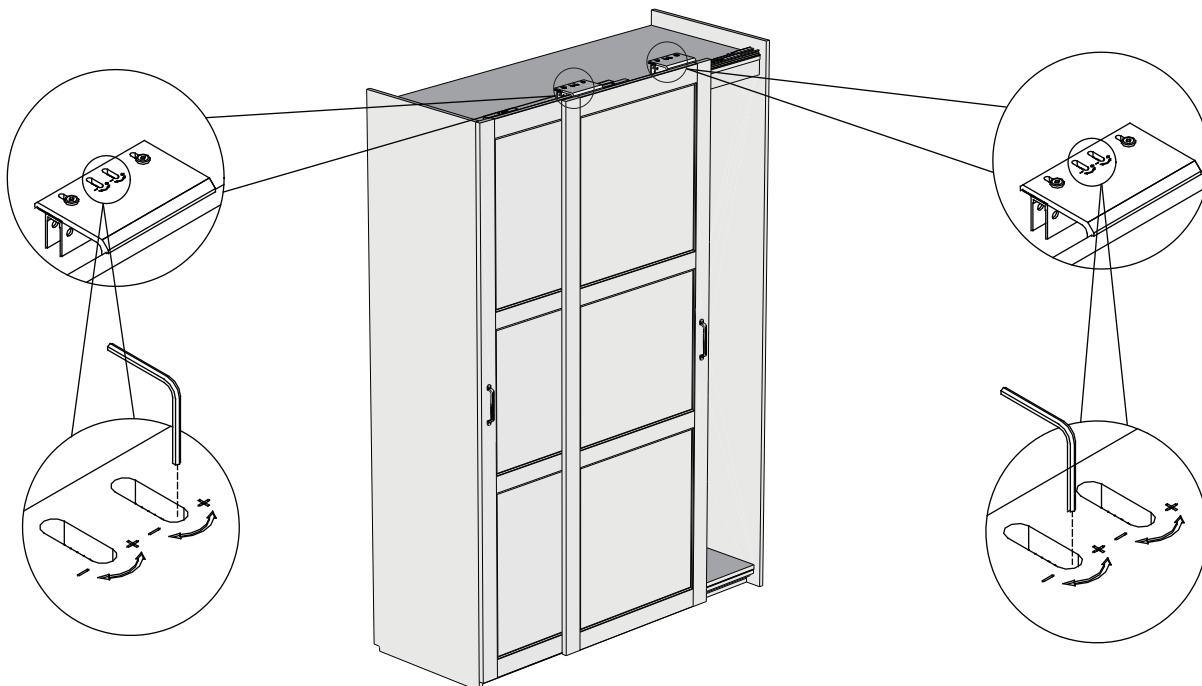

T6


N/A

2





53

After the door panel is installed, if you find that the inner and outer door gap is too narrow, please adjust the "+" and "-" signs to prevent panel collision follow the step 51.

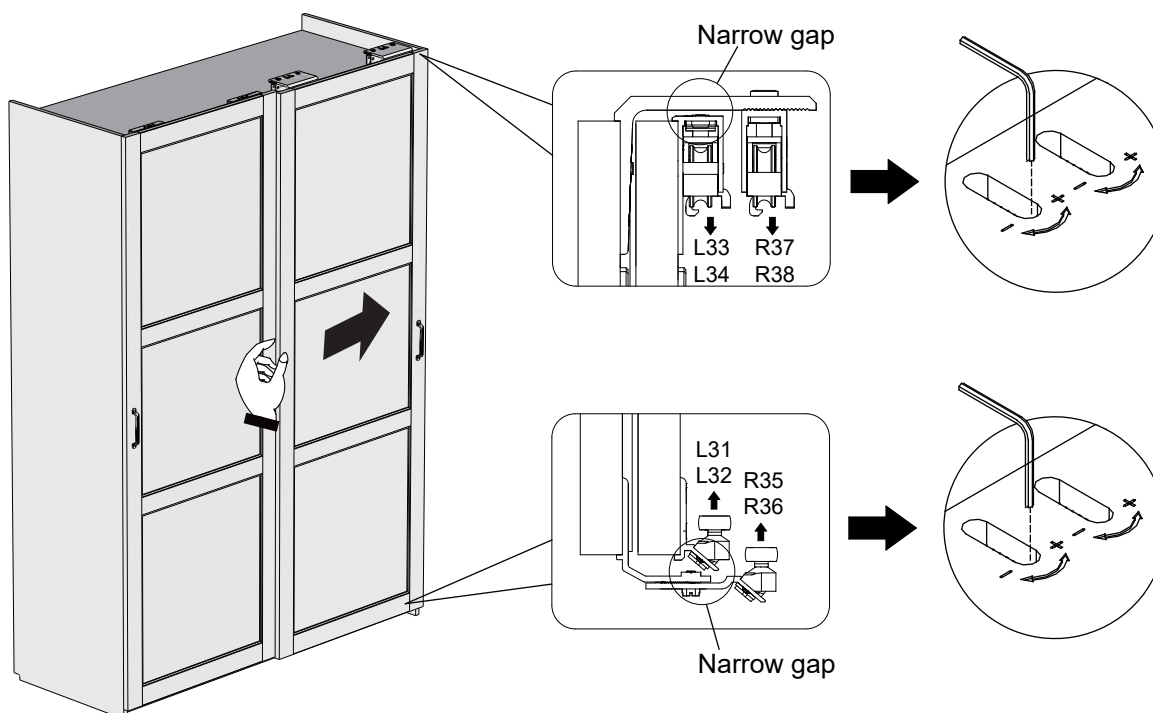

54


After hanging it up, if you find that it is deformed, please adjust it according to the following steps.

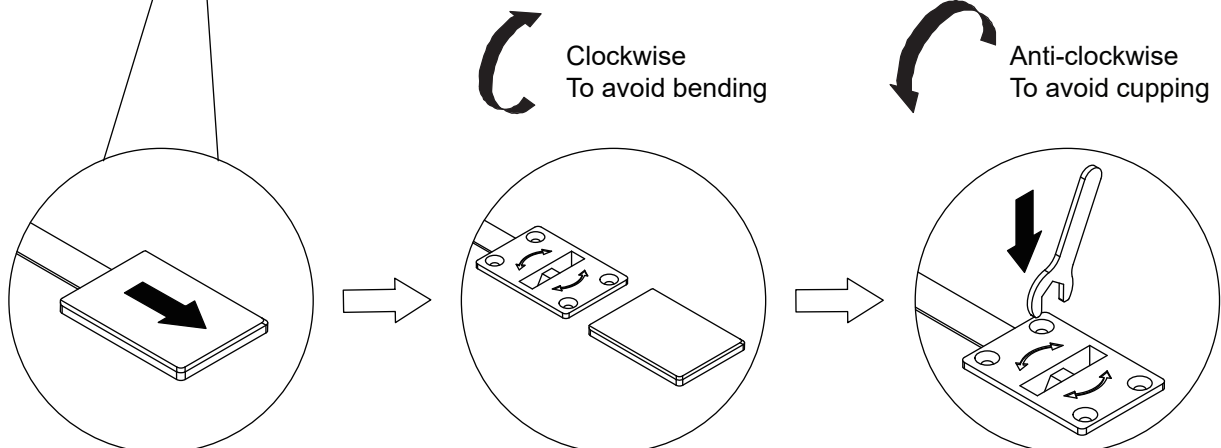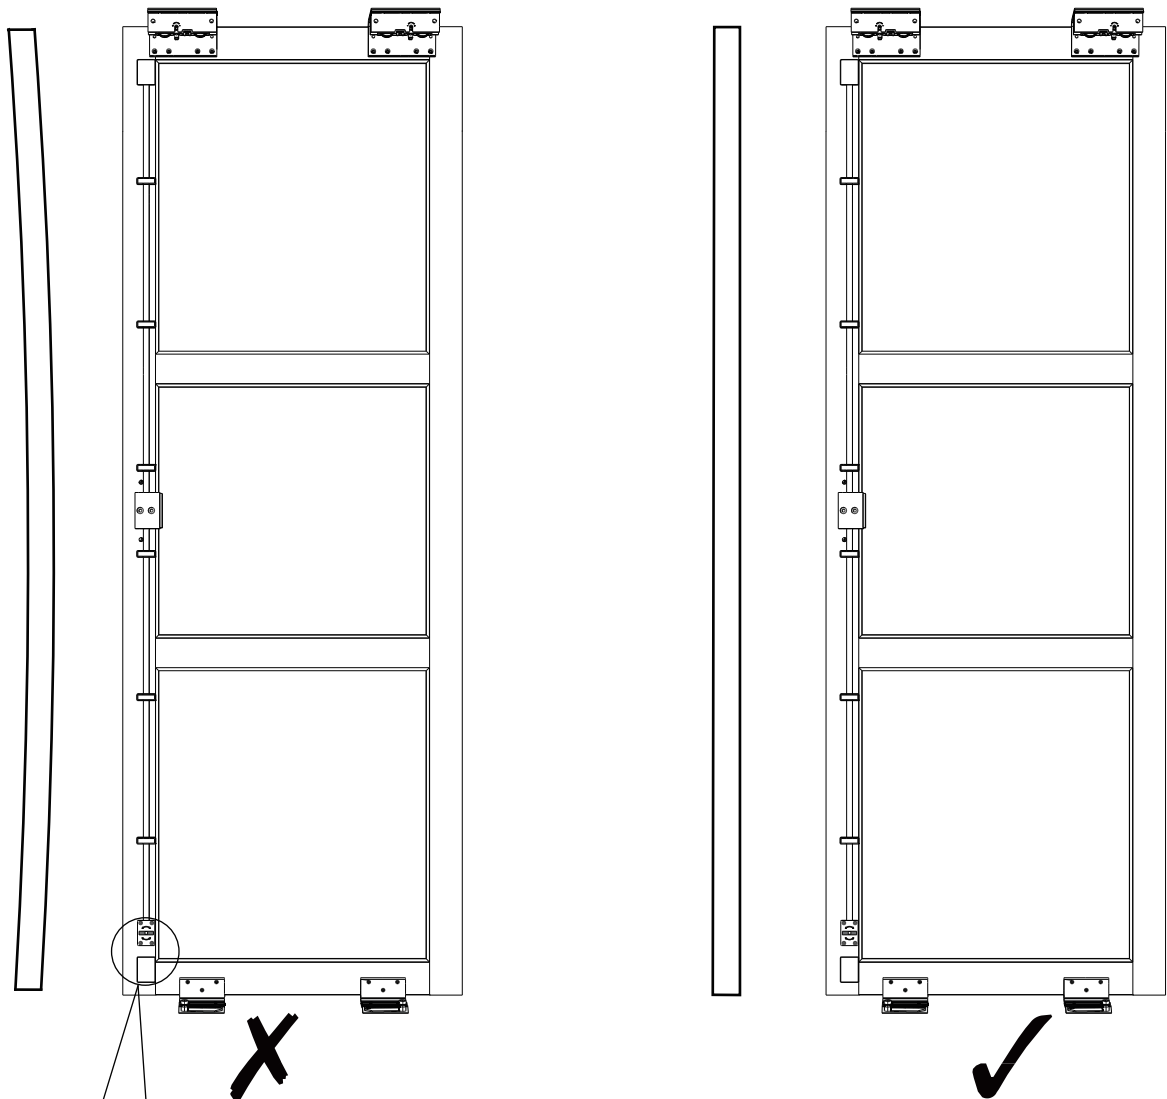

## To disassemble:


Step1: Loosen the hook of the bracket above the door panel as shown in the picture.

- ① As shown in the picture, push the door panel to the middle.
  - ② Turn the screw in the '-/anti-clockwise' direction to lose the hook.
- Notice: when re-installing the door panel, please tighten the screw in the '+ clockwise' direction first to tighten the hook.

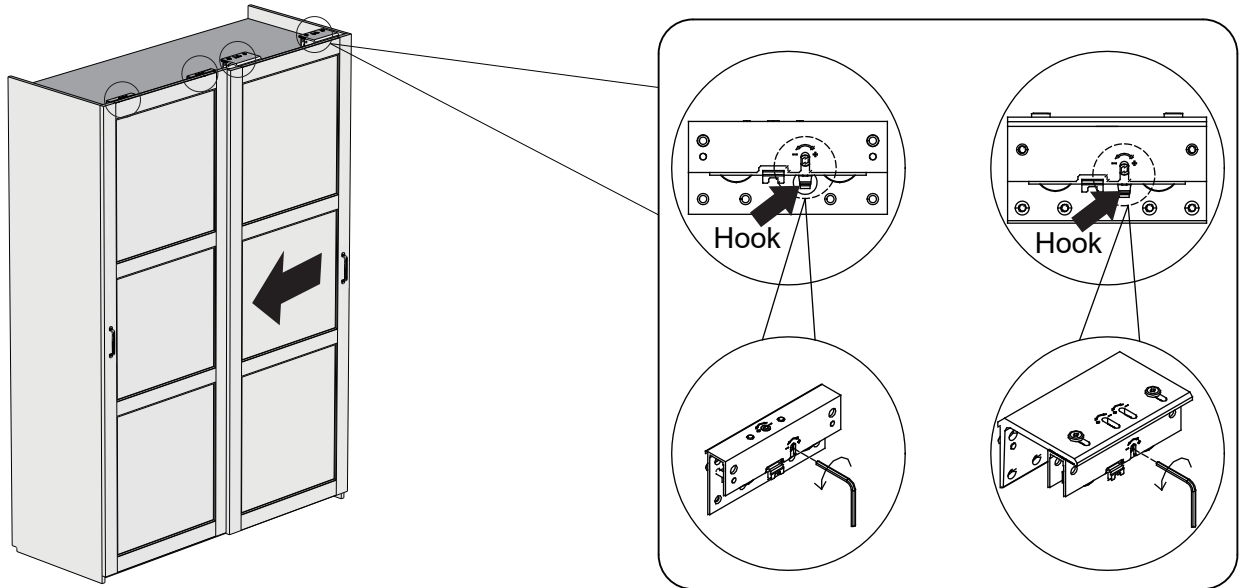


Step2: Remove the door from the slide rail as below.

Step3: Remove the inner panel in the same way.

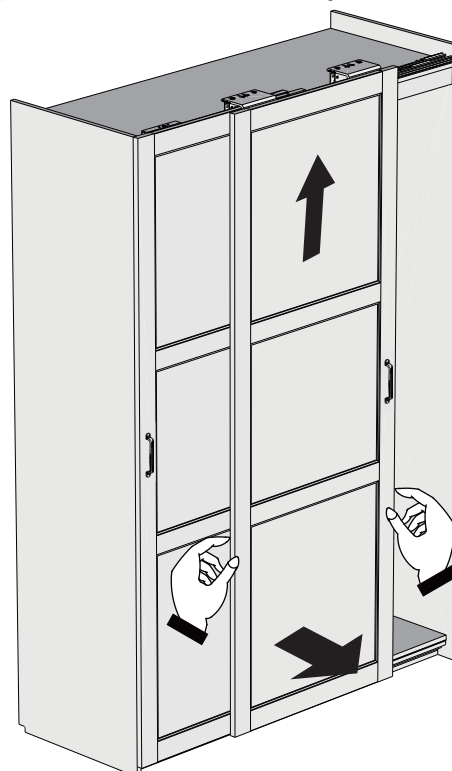

- ① pull out the bottom.
- ② Raise up the door till it removed.


**Step4:** Remove the plastic wedge (T38) from the back plates, and remove the screws from the rear of the panel(7) and the panel(8) and the panel(9) and the panel(10);

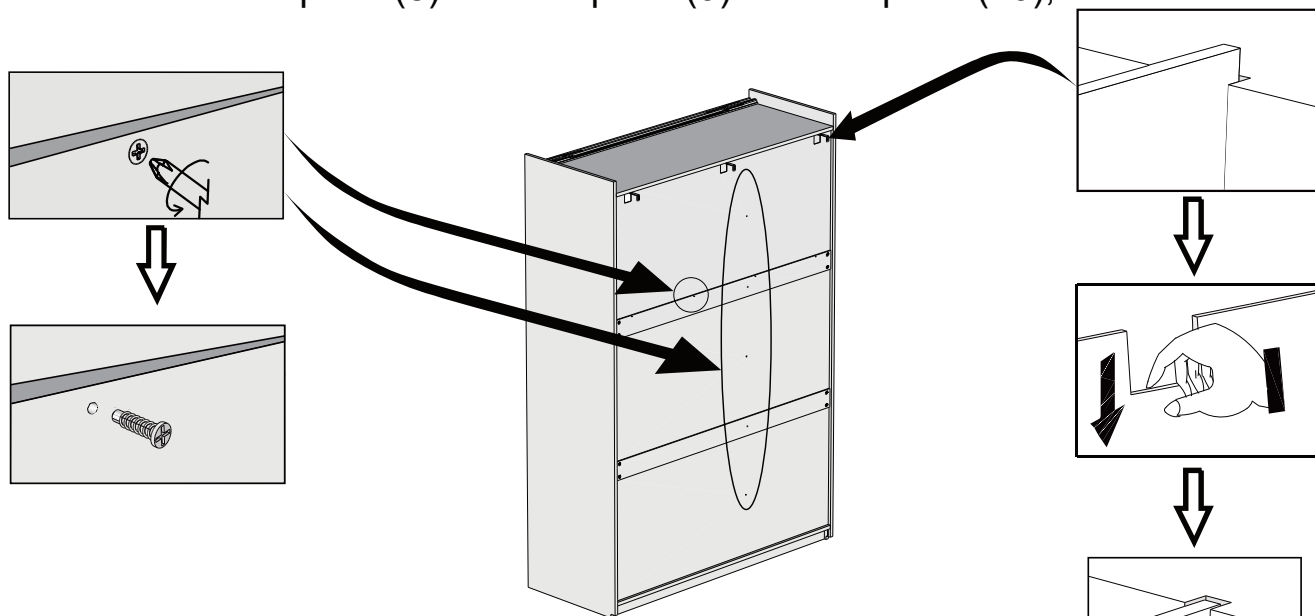

**Step5:** Press down the back panel so it is clear of the top panel slot;


**Step6:** Remove the screws from the panel(11);

**Step7:** Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels.

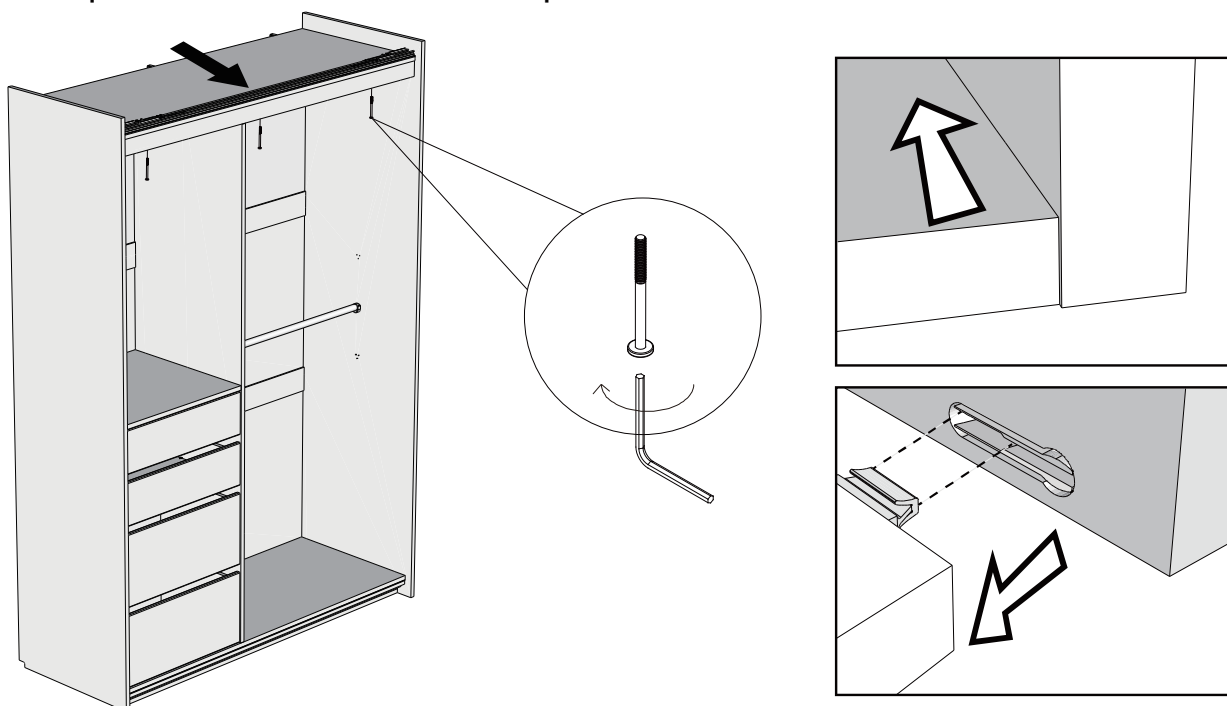

# NEXT

## MALVERN STATEMENT/CHALK 1.5M SLIDING WARDROBE AH9766/654773

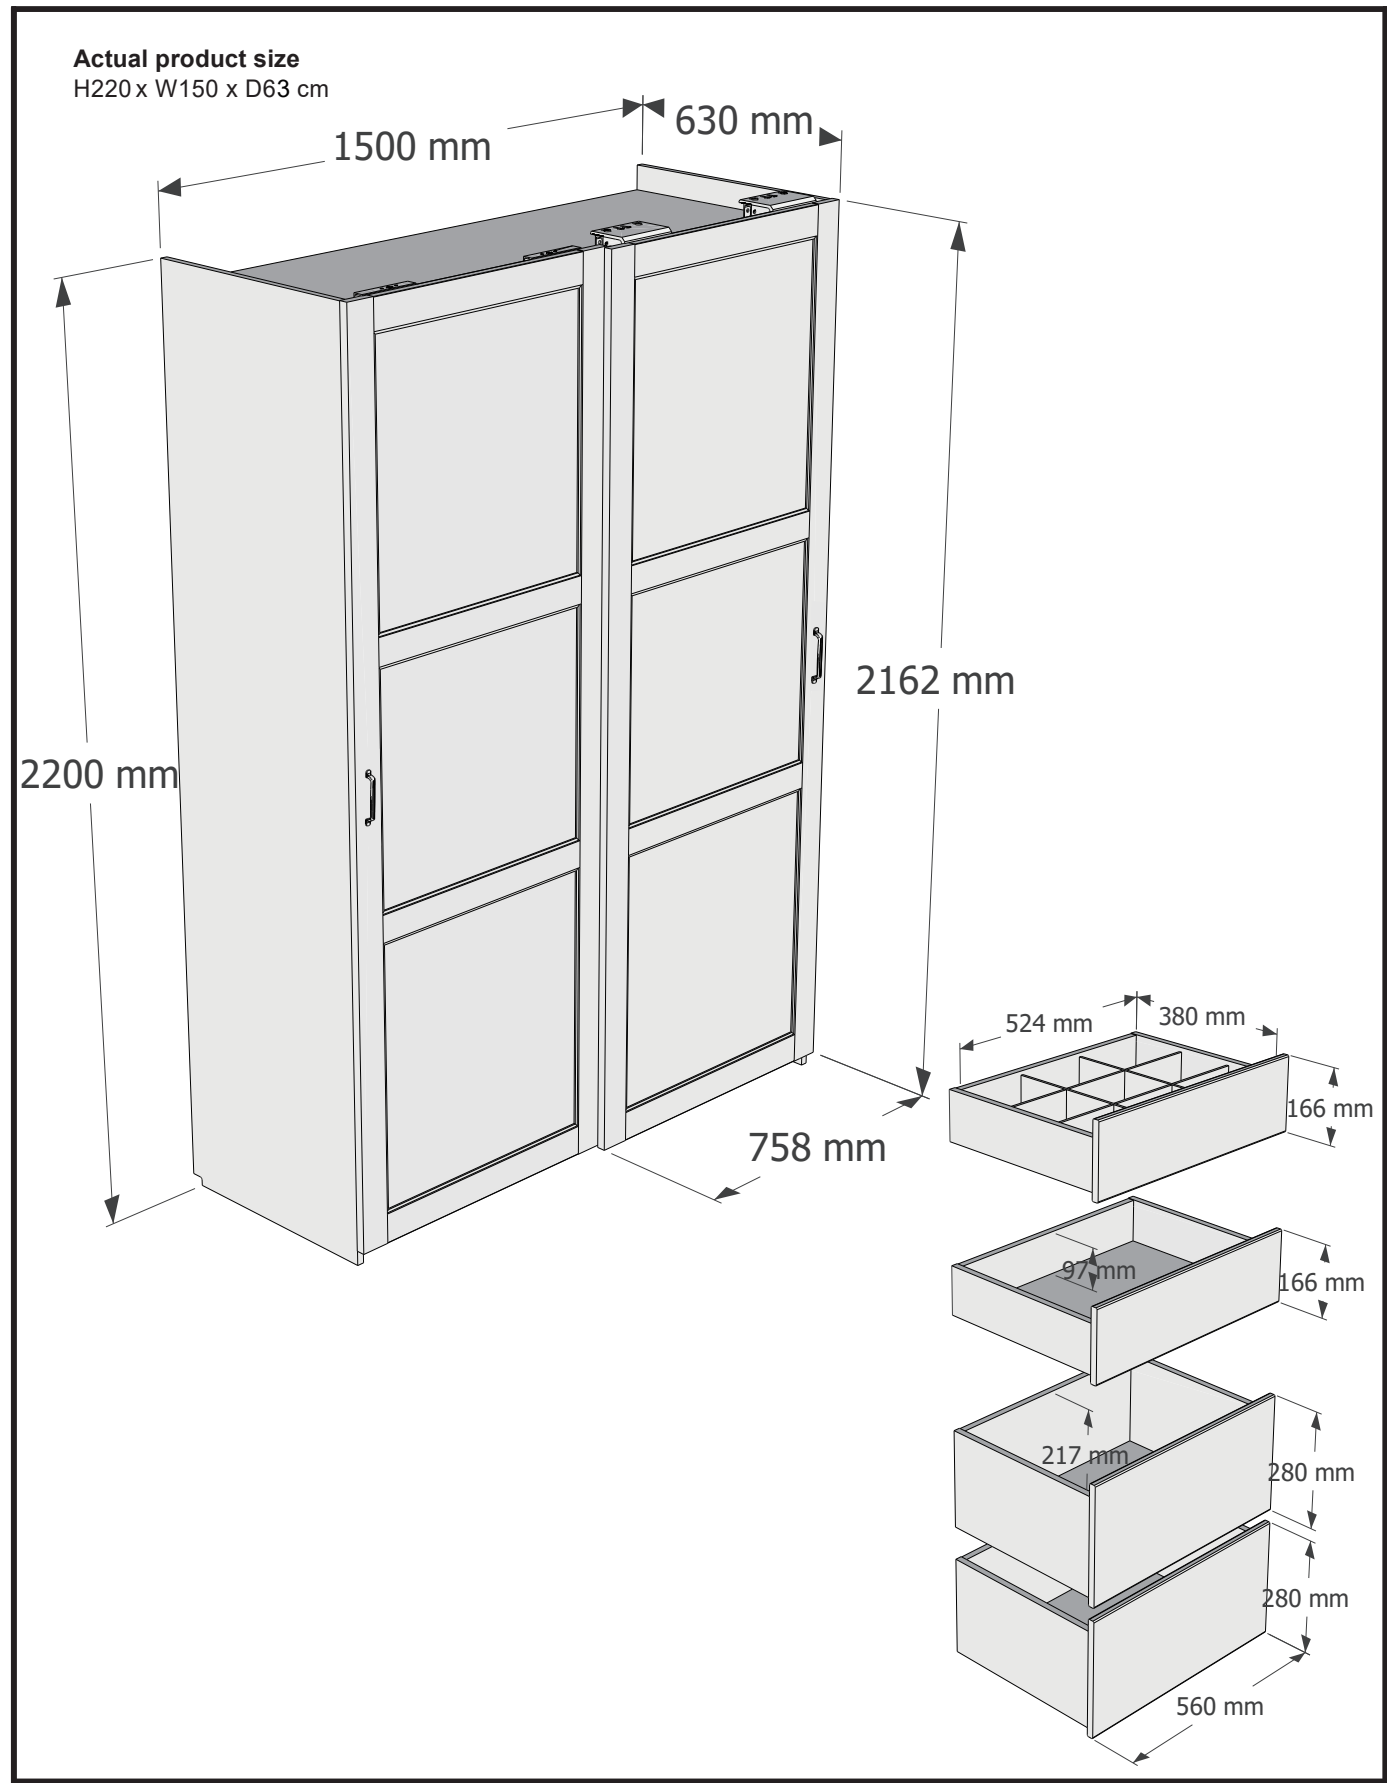

# NEXT

MALVERN STATEMENT/CHALK 1.5M SLIDING WARDROBE  
AH9766/654773

## Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

## Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

## Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

## You can write to us at

Home Customer Services  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)

# NEXT

MALVERN STATEMENT/CHALK 1.5M SLIDING WARDROBE  
AH9766/654773

## Contents and specification:

- 1x sensor LED wardrobe which doesn't need to be plugged in to function.
- This product contains 1x battery which are non-replaceable.
- Rechargeable by USB port 0.8m USB charging cable included (USB plug is needed to charge but not included)
- Integrated LED lamp/strip - bulbs not required.
- Average run time: 6 hours (keep lighting)
- Wattage: 1.63W
- Light output: 93.52 lumens
- Colour temperature: 3000K/4000K/6000K
- The light will only go through the 3 stage touch when in contact with the switch on the top of the LED
- This product has a charging indicator light. When charging the light will show red. Once charging is complete, the light will change to white. In order to maintain the longevity of the product, please do not overcharge or leave on the charge for 24 hours.
- Constant On Mode: The light stays on continuously, the sensing function does not work, and it does not turn off automatically.
- Night Sensing Mode: The light will automatically light up when both sensing human and in low lit environment, otherwise it won't automatically light up. The light will automatically turn off when human left the sensing range for after 25 seconds. The light will keep lighting if human stay in the sensing range.
- The sensing range of the light is 120° from the center point of the probe, within a 3 meter area. However, improper installation or obstructions near the sensing probe may affect the sensing effect.
- Ensure that all packaging is disposed of carefully and responsibly.
- Keep all plastic wrapping materials away from children to avoid danger of suffocation

# NEXT

**MODEL NUMBER:AH9766/654773**

**BULB TYPE:NOT REQUIRED**

**VOLTAGE:2.6-5V.MAX 388 MA.1.63W**

**BATCH NO:03/2025**



**UK  
CA**



**LE19 4AT  
D02 ED70**

### Manual -LED

Please fully charge the battery before using it for the first time.


#### Description of Modes and Their Functions

|                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Constant On Mode   | <ul style="list-style-type: none"> <li>The light stays on continuously, the sensing function does not work, and it does not turn off automatically.</li> </ul>                                                                                                                                                                                                    |
|  Night Sensing Mode | <ul style="list-style-type: none"> <li>The light will automatically light up when both sensing human and in low lit environment, otherwise it won't automatically light up.</li> <li>The light will automatically turn off when human left the sensing range for after 25 seconds.</li> <li>The light will keep on if human stay in the sensing range.</li> </ul> |

#### Instructions for buttons

|                    |                                                                                                                                                                      |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Push button switch | <ul style="list-style-type: none"> <li>Press button: Cycle through the light colors. (ON mode)</li> <li>Holding button: Adjusts the brightness. (ON mode)</li> </ul> |
| Toggle switch      | <ul style="list-style-type: none"> <li>AUTO: Night Sensing mode.</li> <li>ON: Constant ON mode.</li> <li>OFF: Turn off the lamps.</li> </ul>                         |

#### Sensing range and its precautions

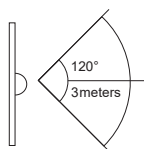

- The sensing range of the light is 120° from the center point of the probe, within a 3 meter area.
- However, improper installation or obstructions near the sensing probe may affect the sensing effect.

#### Charging instructions

- Charging voltage: DC5V/1A
- Charging port: Type-C
- Charging indication: Red light on- charging / Green light on- fully charged

#### Precautions

- Please fully charge the battery before using it for the first time.
- Please do not use charging devices with output voltage greater than 5V/1A to charge the lamp.
- Please use a safety-certified mobile phone charging adapter to charge the light.
- Do not use while charging.
- Keep away from fire. Do not use this light in a damp or high-temperature environment. Do not allow children to use or come into contact with this light. Do not attempt to repair or replace any parts by yourself.

**If the contents of the manual can not solve the problem for you, please contact the merchant in time, thank you for your support and trust.**

