

# BEFORE YOU GET STARTED...

*We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.*

*So, let's quickly run through these three steps:*

## 1. COLOUR

Make sure you're happy with the colour  
No need to unpack everything, just check the first component.

## 2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

## 3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

## TIPS FOR RETURNS

Not completely happy with the product? No problem.  
We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly – as it may get damaged.

 
next  
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

**next**

**NEWHAVEN PAINTED STORAGE SIDE TABLE**  
673420  
Assembly instructions

**Actual product size**  
H58.3 x W43.8 x D38.4cm

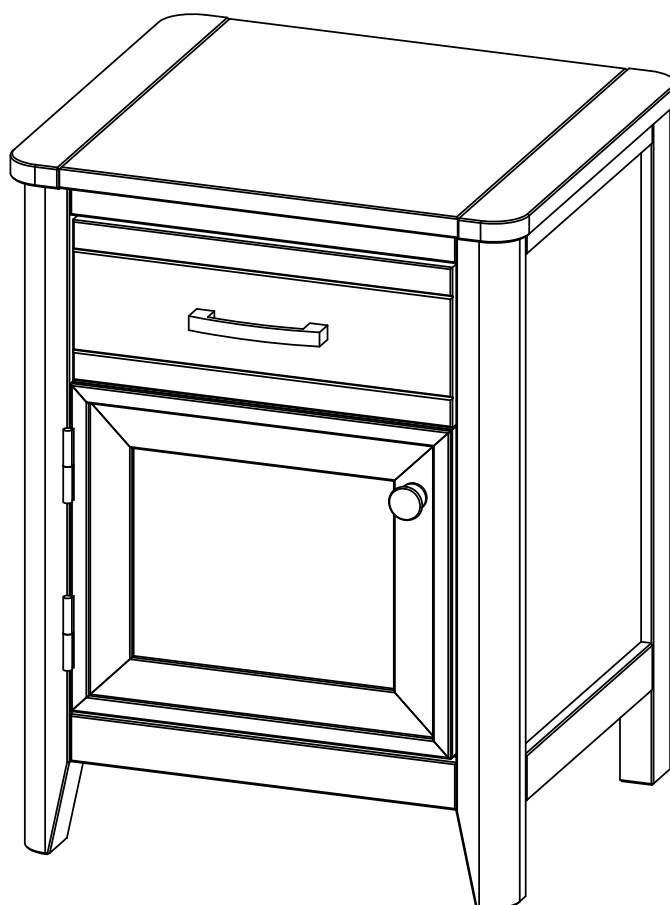

**Need Help?**

With: Assembly instructions  
Missing or damaged parts

 
**CALL: 0333 777 8999**

**IMPORTANT — RETAIN FOR FUTURE REFERENCE**


## BEFORE YOU START

### Number of people required to assemble

Two people are required to assemble this item.

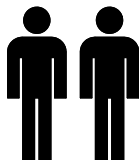


### Tools required

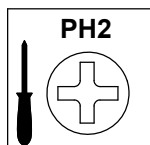 

not supplied

 x2

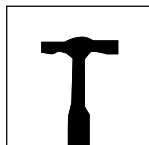

not supplied

### Missing parts

 
If you are missing any fixtures and fittings for your product, please contact our customer service team on **0333 777 8999**, and they will be happy to arrange for a replacement to be sent to you free of charge.

### Home service technicians

If you have a fault with your product please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

### PRODUCT SUPPLIED WITH WALL FIXING STRAPS

#### Time to assemble

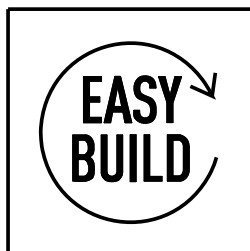


30 minutes

### You can write to us at



 
 
 
 
 
 
 
 
Home Customer Services  
Next Retail Ltd,  
Desford Road,  
Leicester,  
LE19 4AT


To View our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)
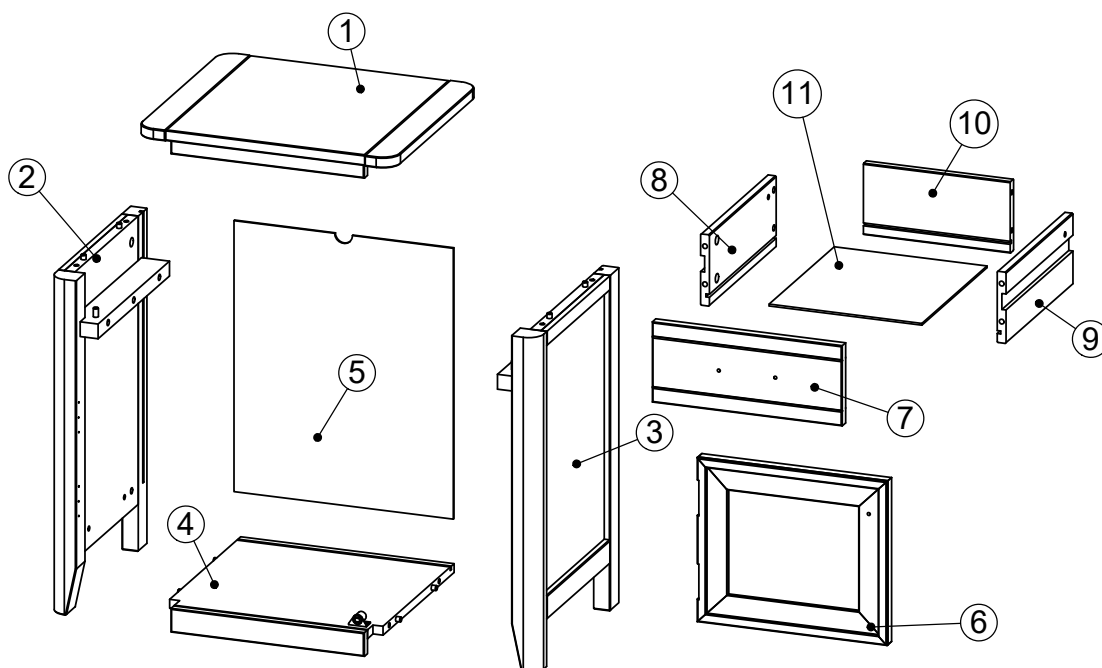
## GETTING TO KNOW YOUR PRODUCT



 
Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	44 x 38cm		1	1
2	57 x 36cm		1	1
3	57 x 36cm		1	1
4	36 x 36cm		1	1
5	46 x 37cm		1	1
6	32 x 28cm		1	1
7	32 x 14cm		1	1
8	30 x 12cm		1	1
9	30 x 12cm		1	1
10	25 x 12cm		1	1





Ref	Dimensions	Visual	Qty	Ctn
11	29 x 26cm		1	1

**Fixtures and fittings supplied (actual size)**

 
Ref	Dimensions	Qty	*Extra Fittings
A	Ø 10x43.5mm	16	2
B	Ø 15x9.6mm	16	2
C	Ø 8x30mm	2	1
E	Ø 3.5x15mm	10	2
G	M4x25mm	3	1

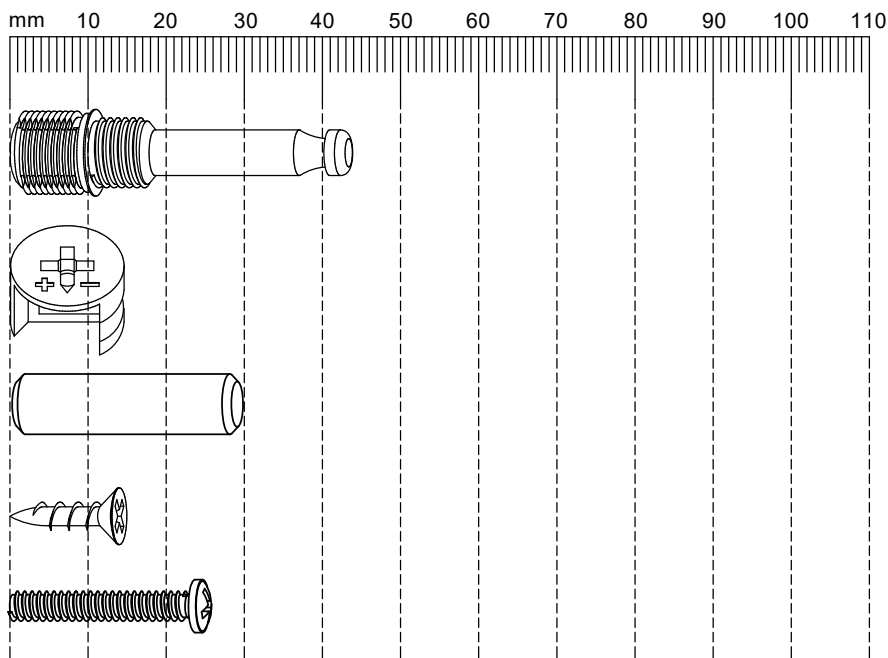

**Fixtures and fittings supplied(not to scale)**

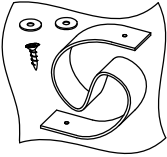    
Ref	Dimensions	Visual	Qty	*Extra Fittings
D	N/A		1	
F	N/A		10	2
H	N/A		1	
J	Ø 30x25mm		1	

 1

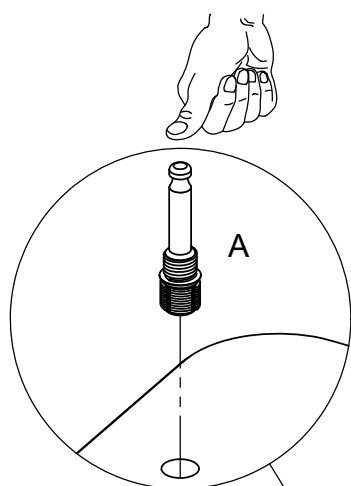


**Cam-lock**

 
Push in until shoulder sits flush with panel.

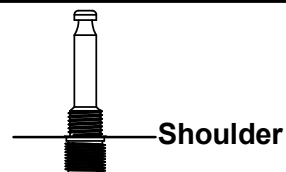

Shoulder

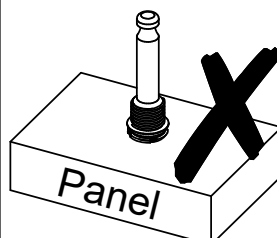 


Panel

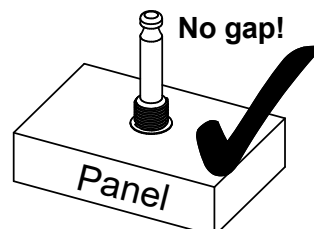 


No gap!

 Panel

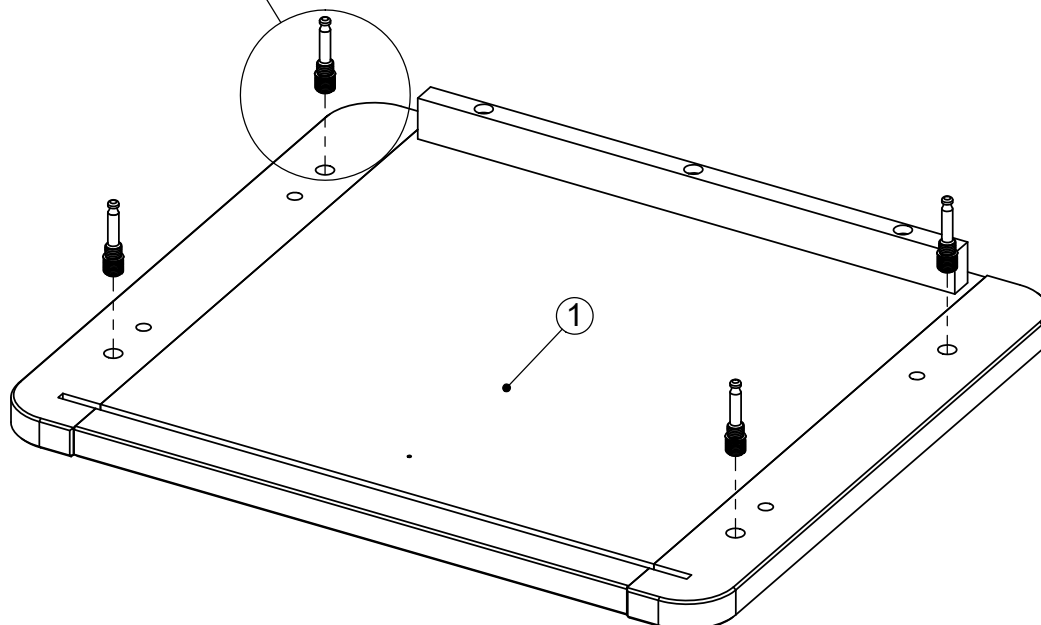


A x 4

 
Ø10x43.5mm




2

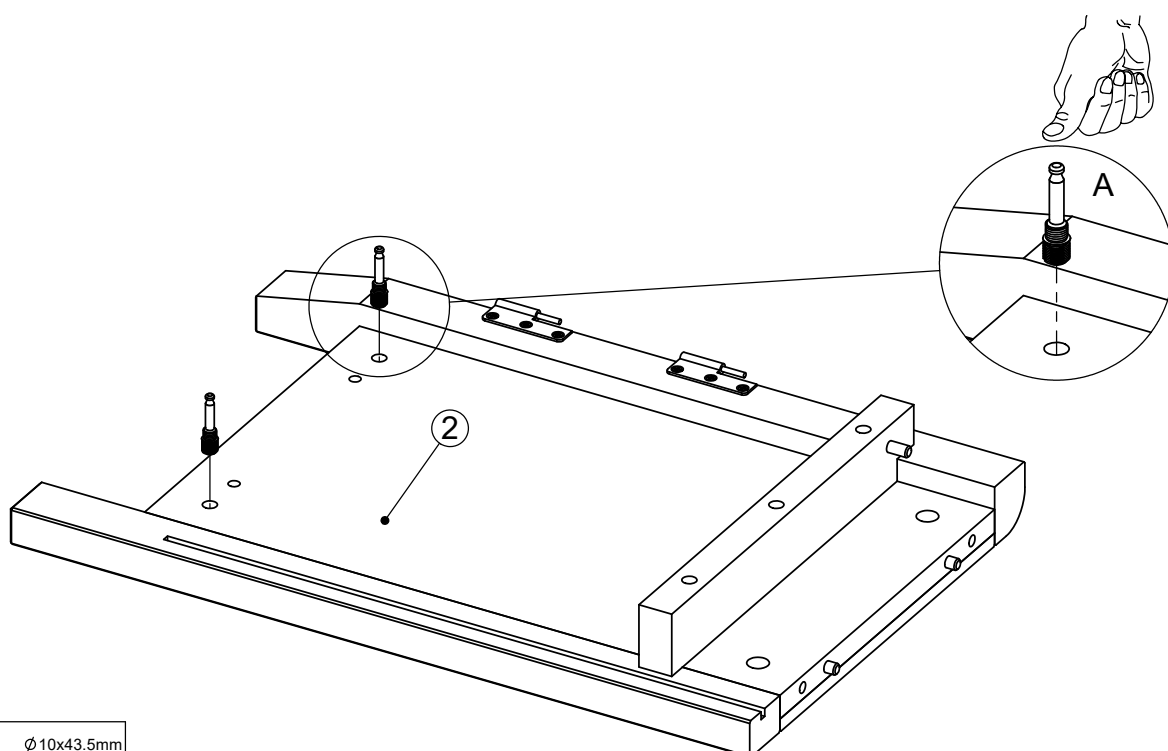 

A x 2 Ø10x43.5mm

 


3

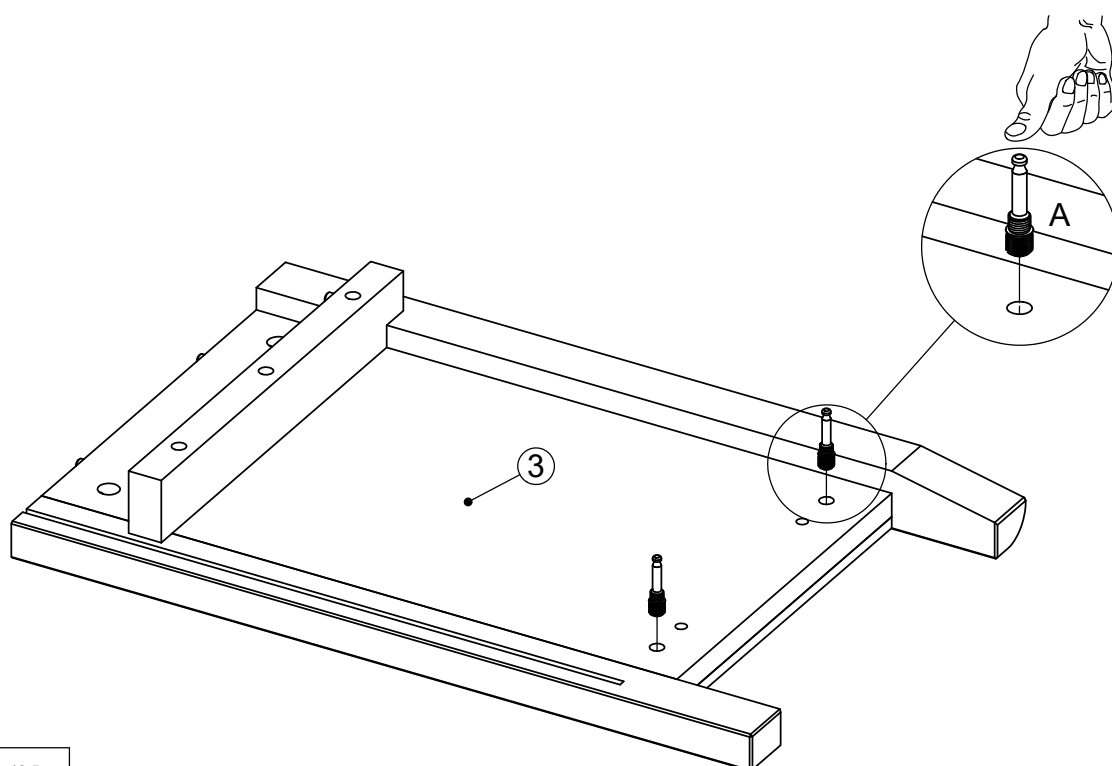 

A x 2 Ø10x43.5mm



 4

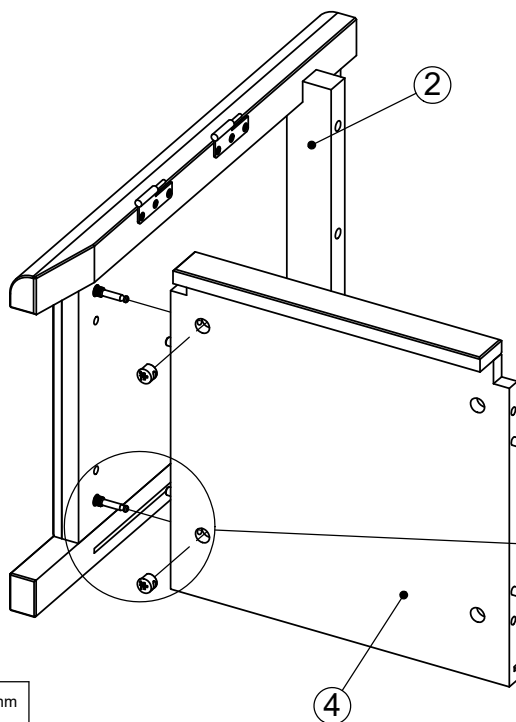



**DON'T STOP UNTIL THE 2 O'CLOCK LOCK**  
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE  
ARROW POINTS IN THE POSITIONS SHOWN IN THE  
DIAGRAMS BELOW



START






  CORRECT  
LOCK

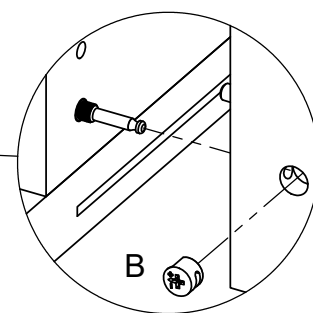

B x 2  $\phi 15 \times 9.6 \text{ mm}$

   
5

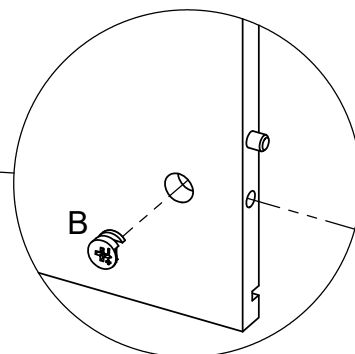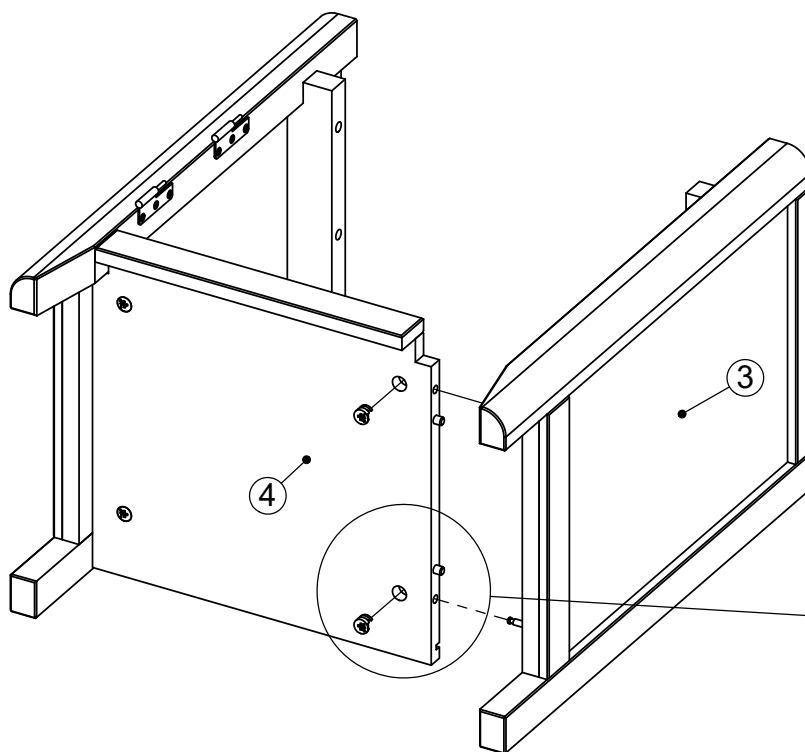



B x 2  $\phi 15 \times 9.6 \text{ mm}$




 
6

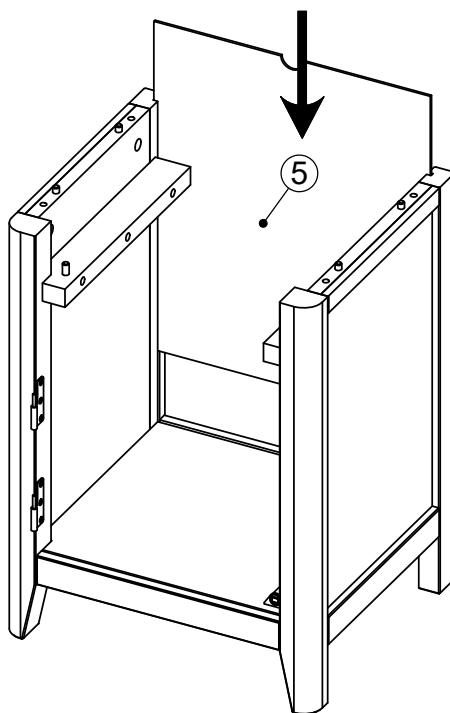


7

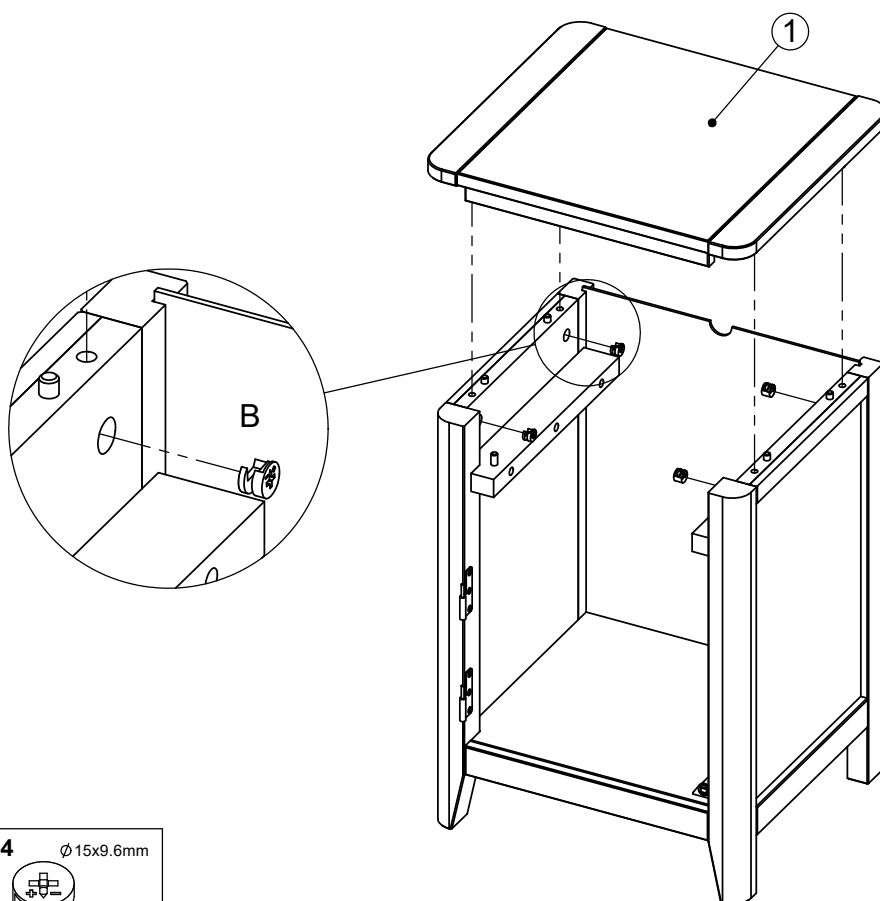  

8

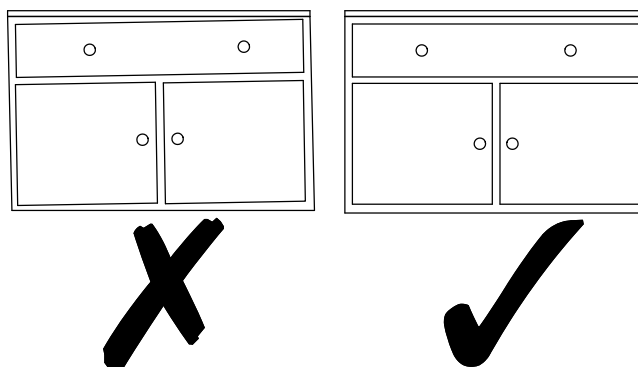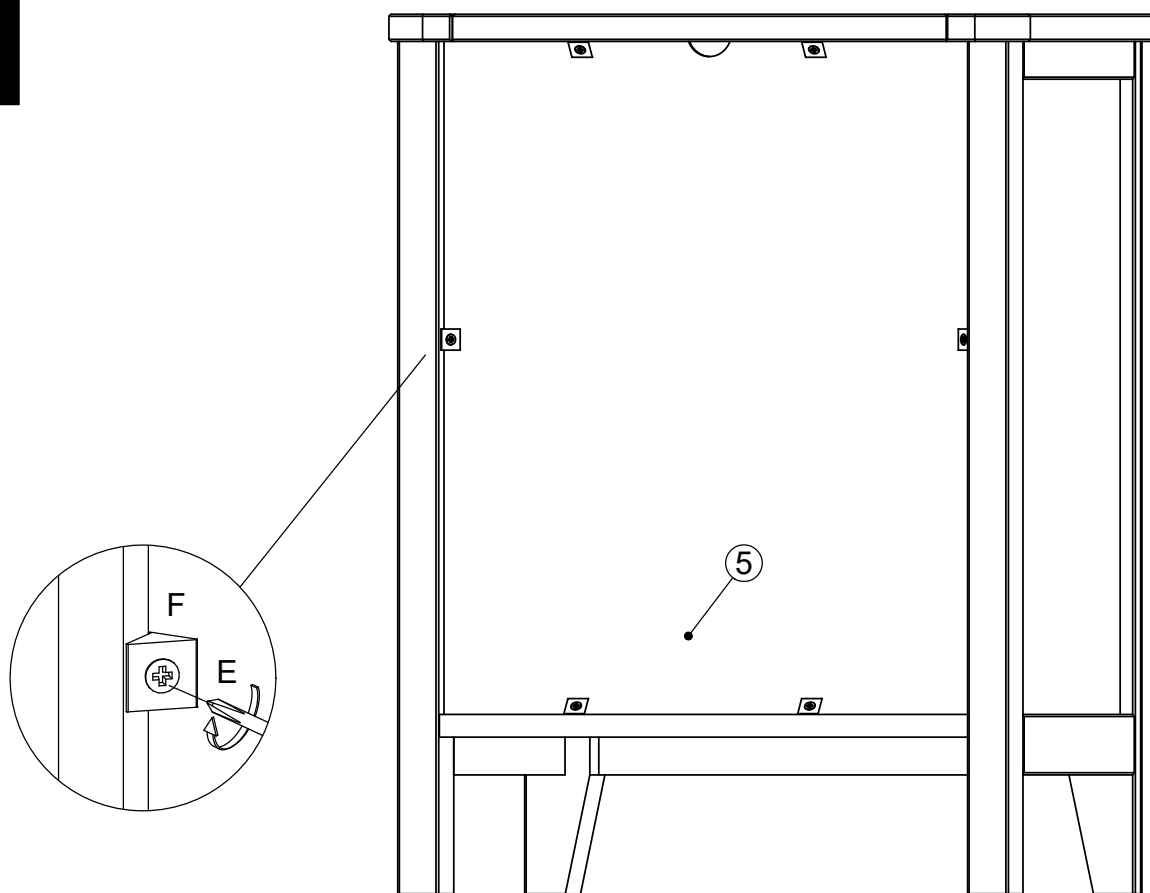  

**Please ensure all doors and drawers are aligned and evenly spaced before applying the back panel fixings.**

 

9

We recommend the use of wall attachment bracket/strap provided for safety reasons. Secure the other end of the strap to the wall with an appropriated screw and wall plug for your wall type(not provided).

 
 
 
 
To hide the strap behind the unit, drill the hole lower than the top of unit.

Warning: Always ensure the intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.



NB: Wall fixing are not included. Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.



Please ensure you secure your product to the wall for your and your family's safety before you use it.

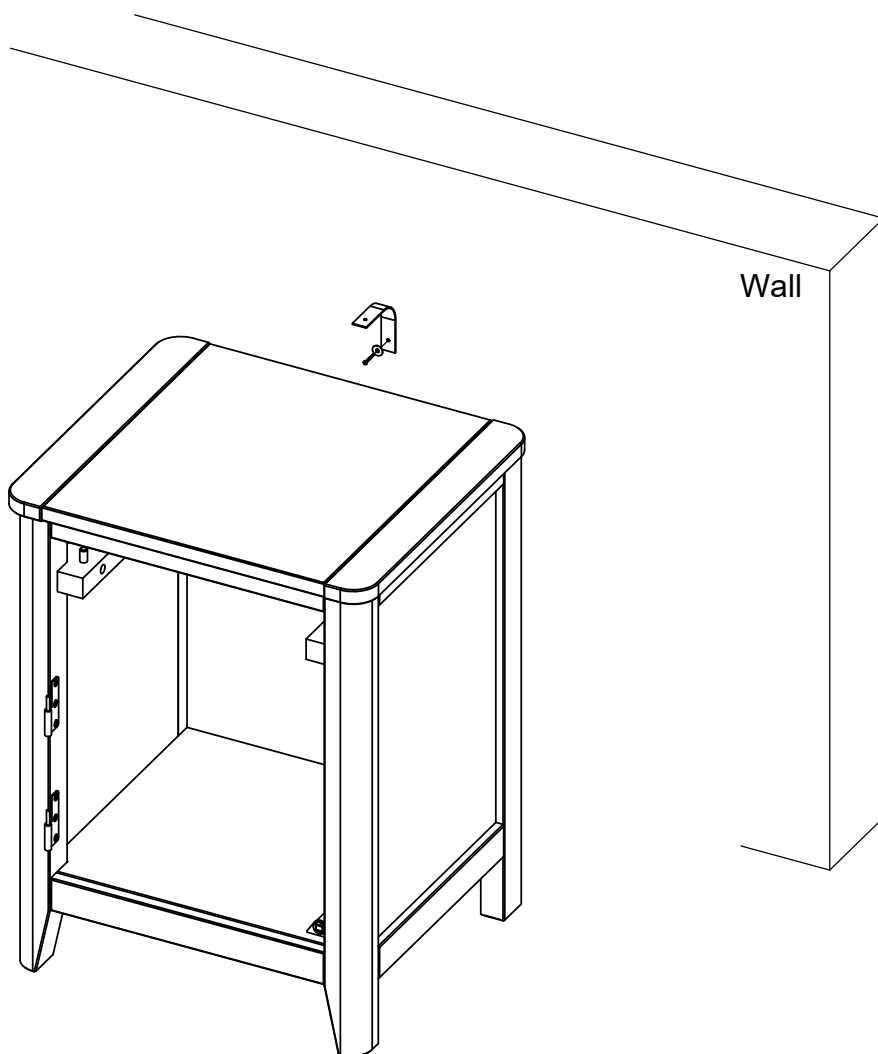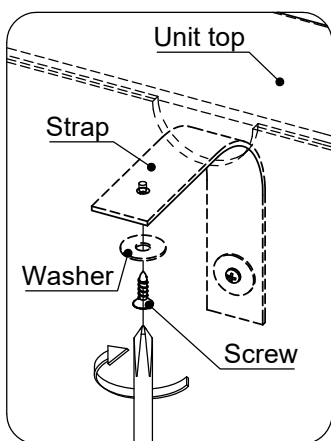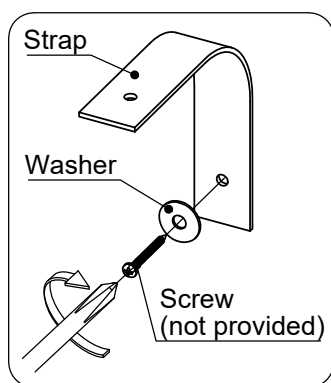


10

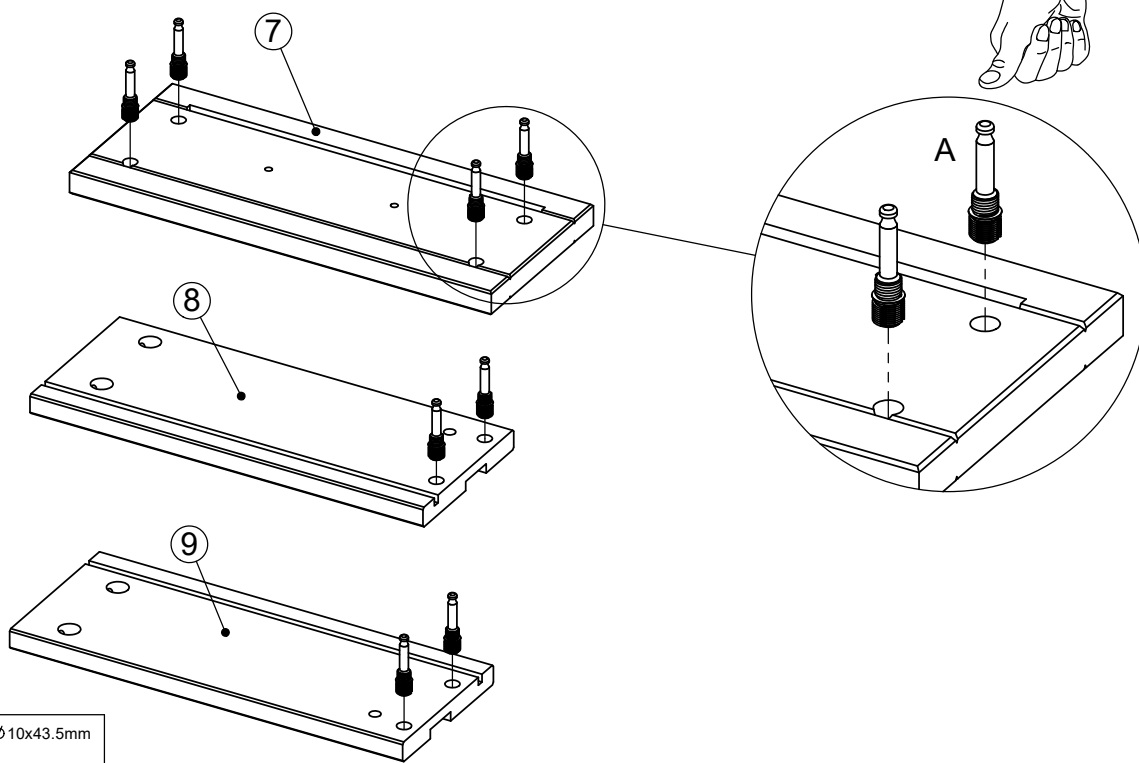  



11

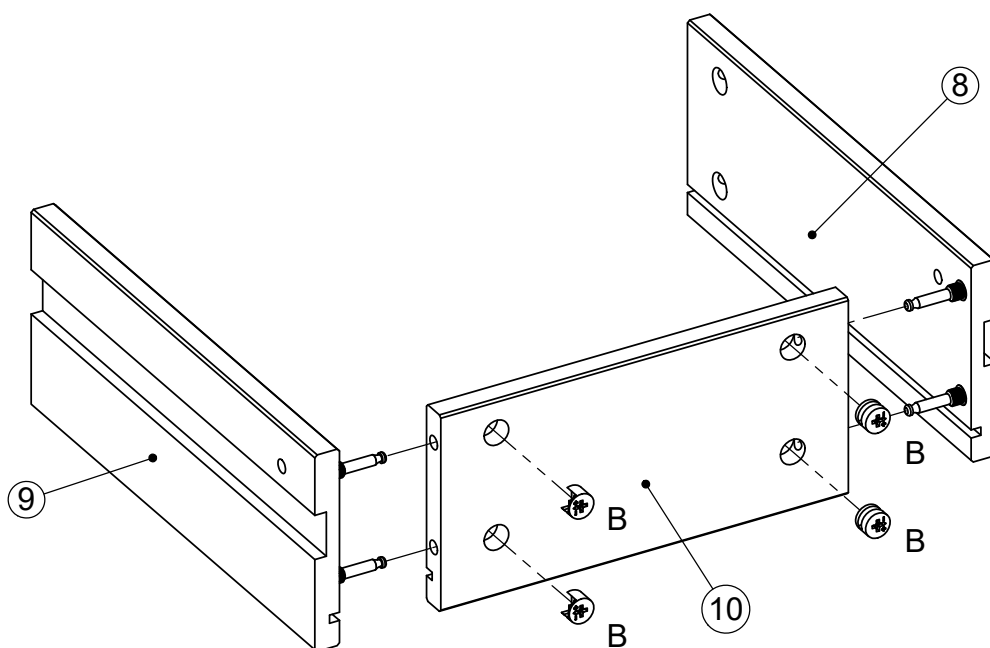  



This diagram illustrates the assembly of the front panel (7) to the side panels (8). The front panel (7) is shown at the bottom, and the side panels (8) are shown above it. Screws (B) are used to secure the front panel to the side panels. Spacers (9) are used to maintain the distance between the front panel and the side panels. The diagram shows the front panel (7) being attached to the side panels (8) using screws (B) and spacers (9).

 




14

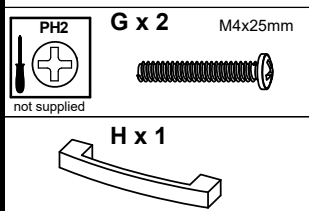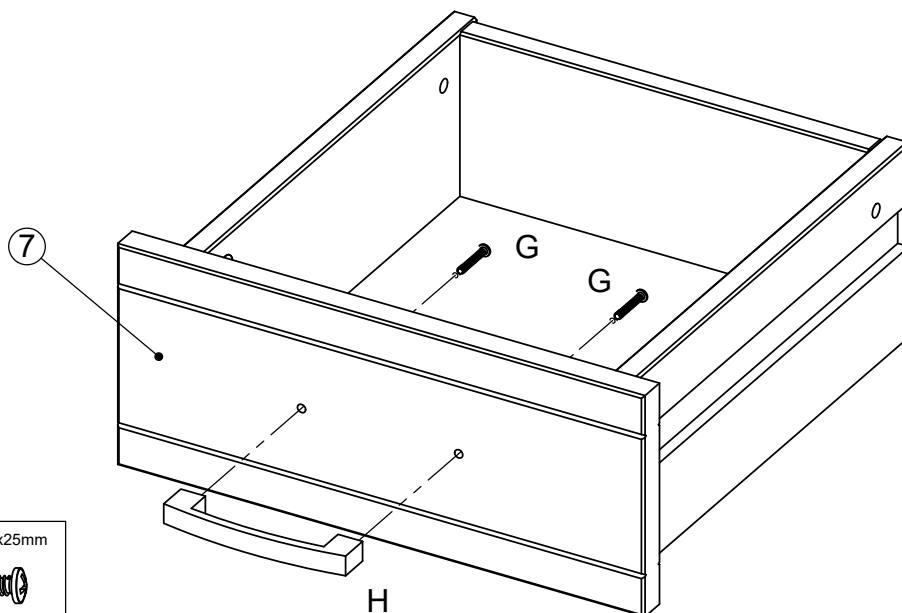  



15

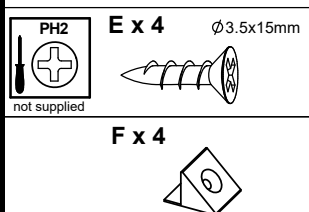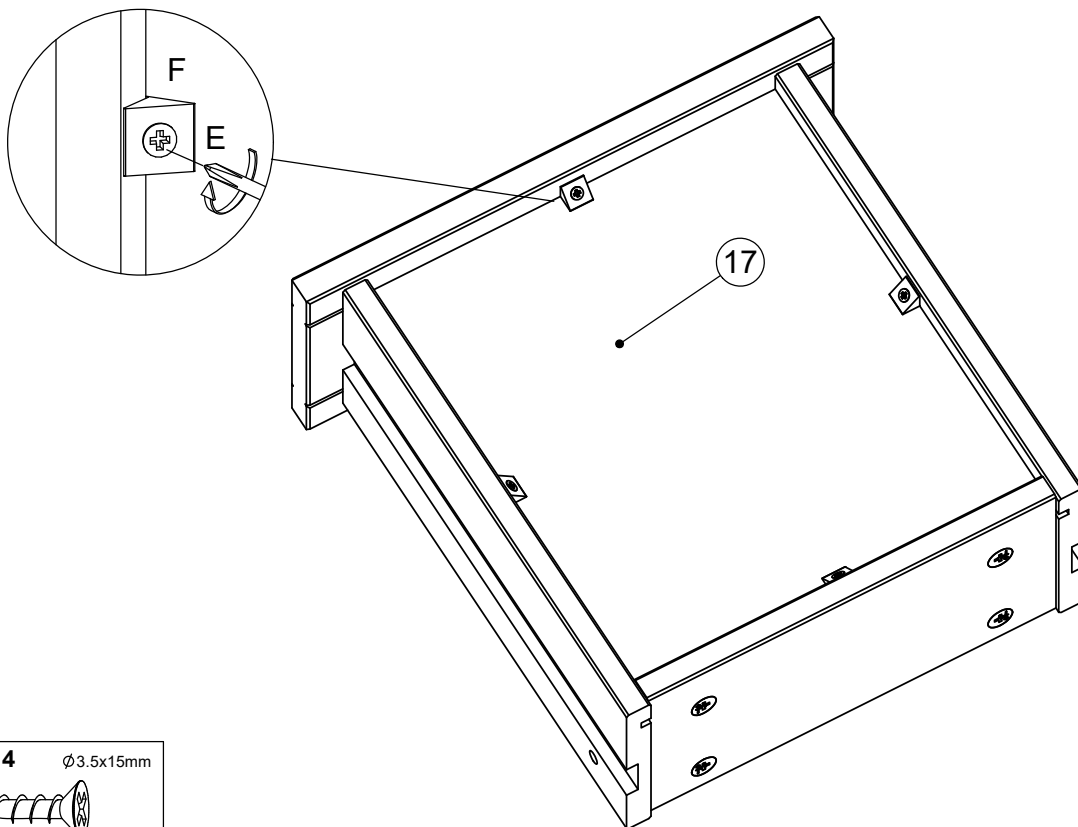  



16

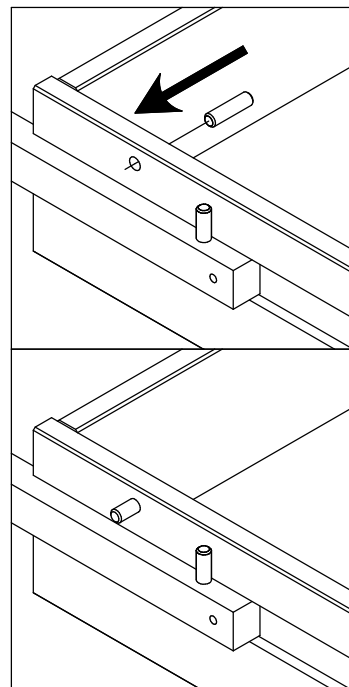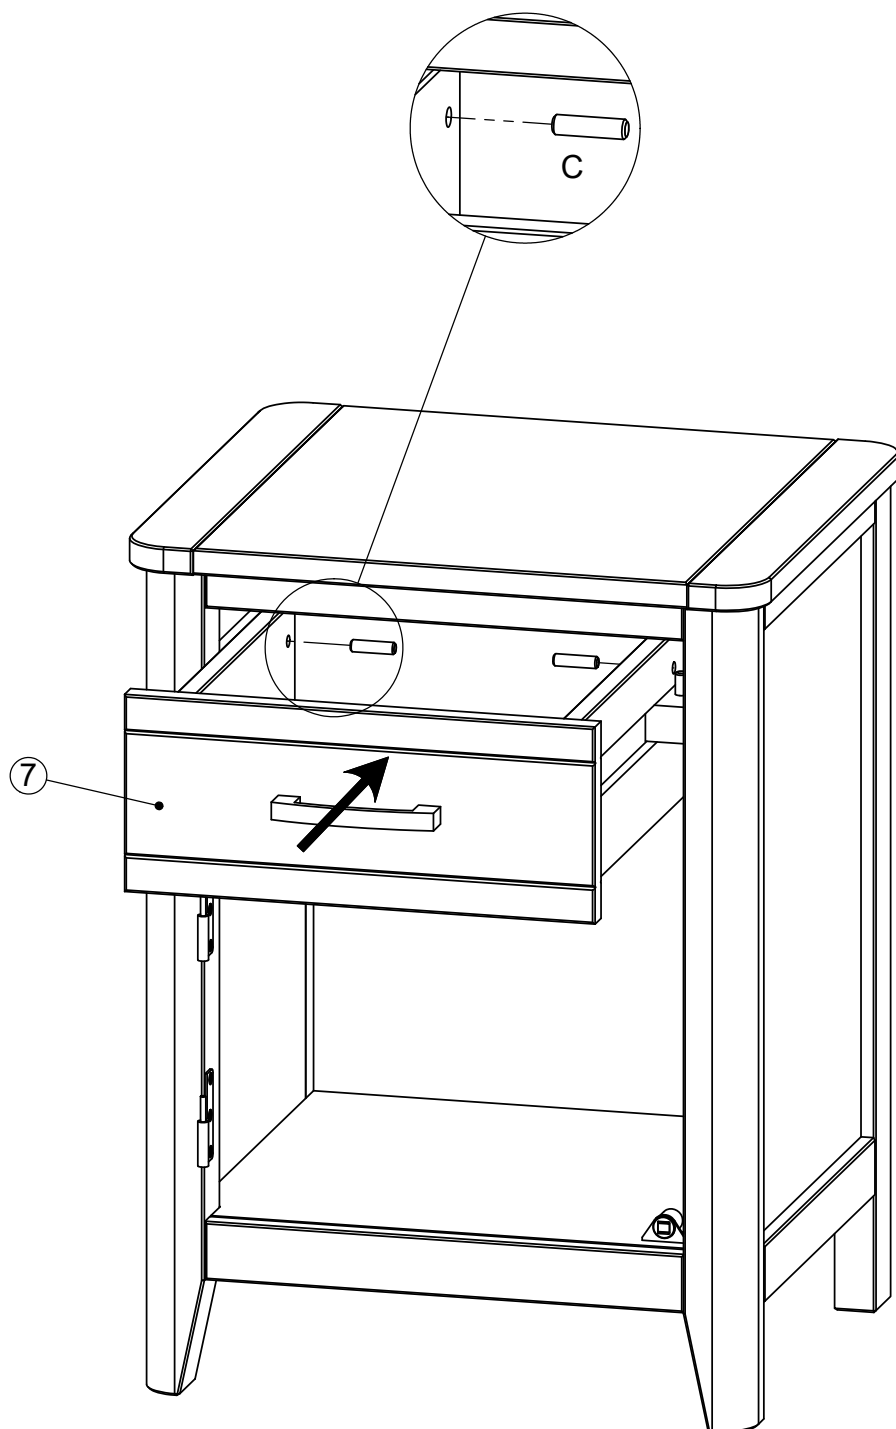   

17

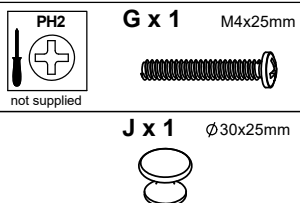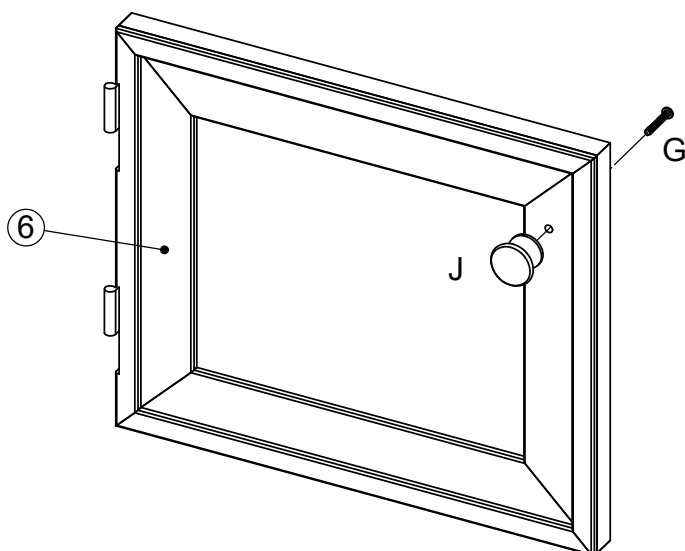  


18

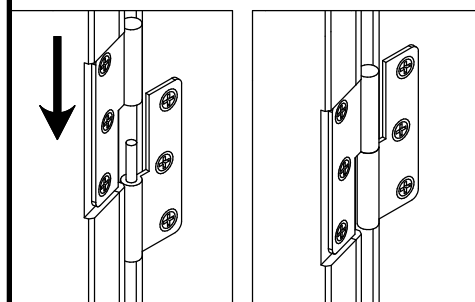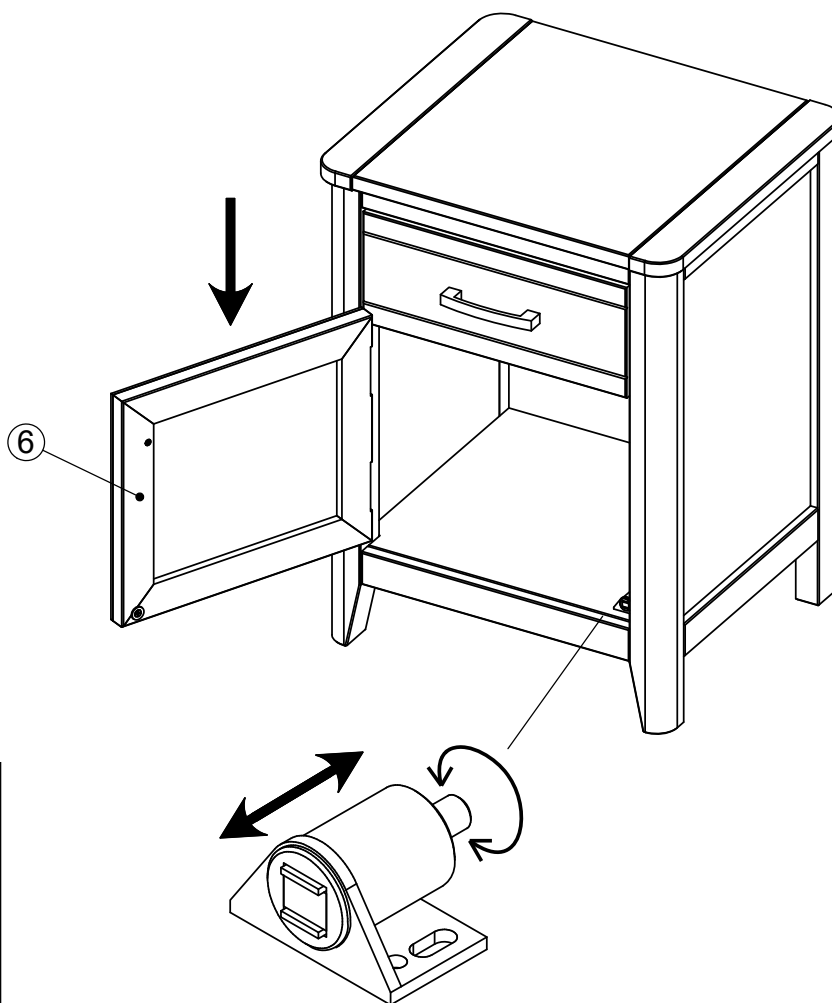  



19

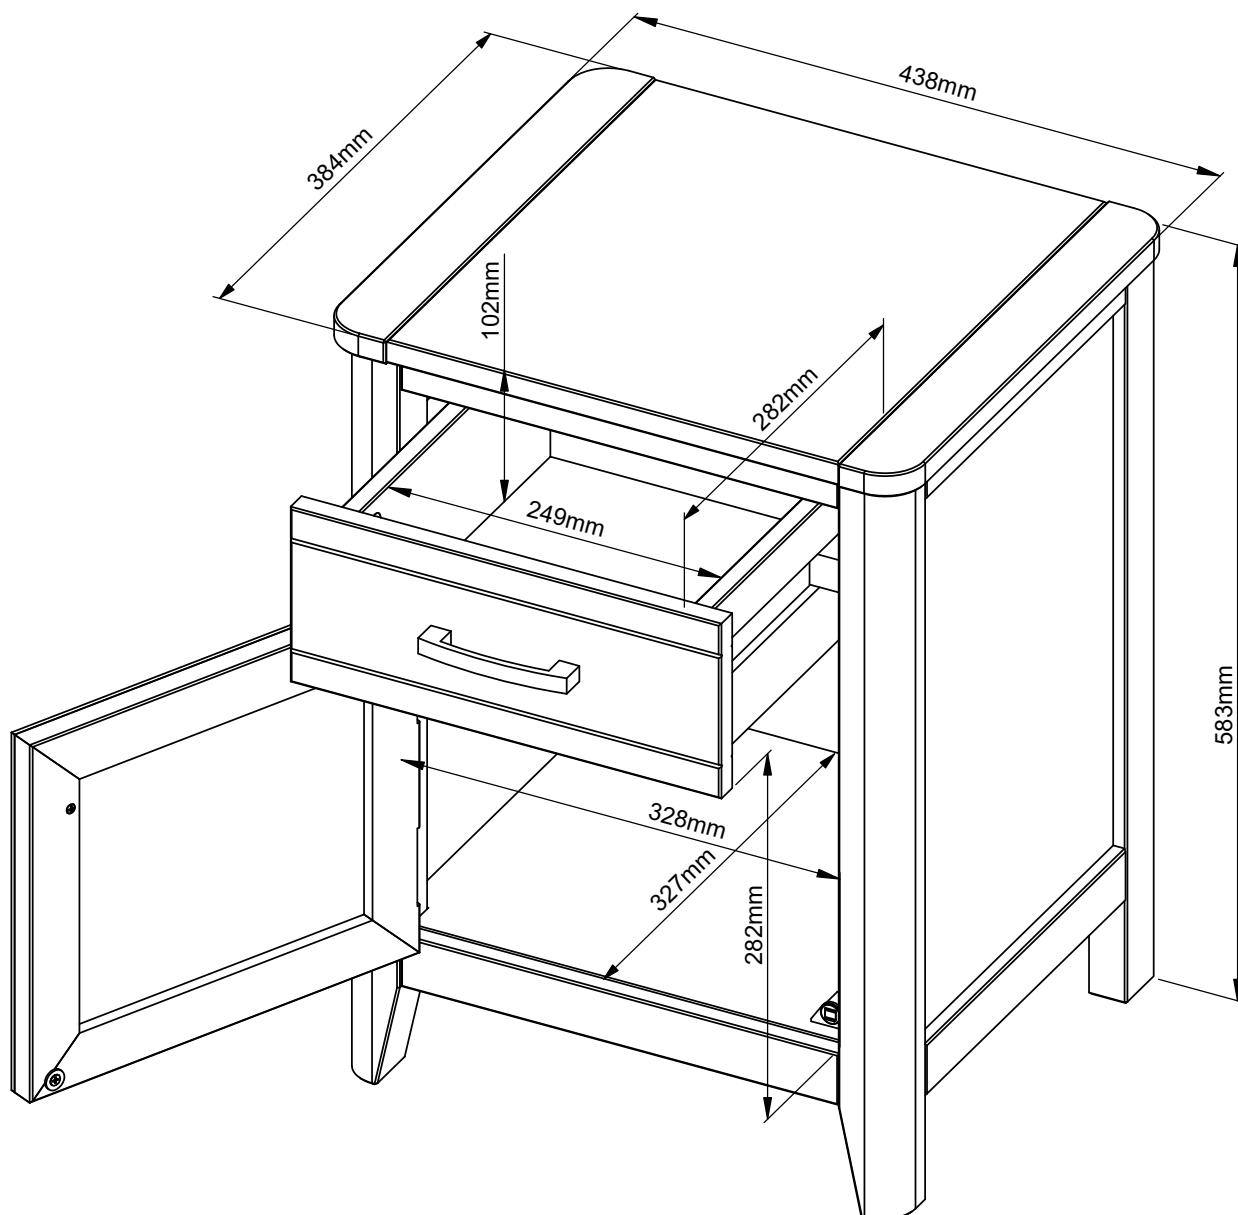 

### Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from the construction area.

This product should only be used on firm, level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

### Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly

Due to the size of the product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

### Don'ts

Do not drag or pull your furniture.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.

Absorption can cause wood to warp or finishes to de-laminate.