

 
CLARKE & CLARKE

CLARKE & CLARKE CABINET

793444

Assembly instructions

Actual product size:
H95 x W65 x D40 cm

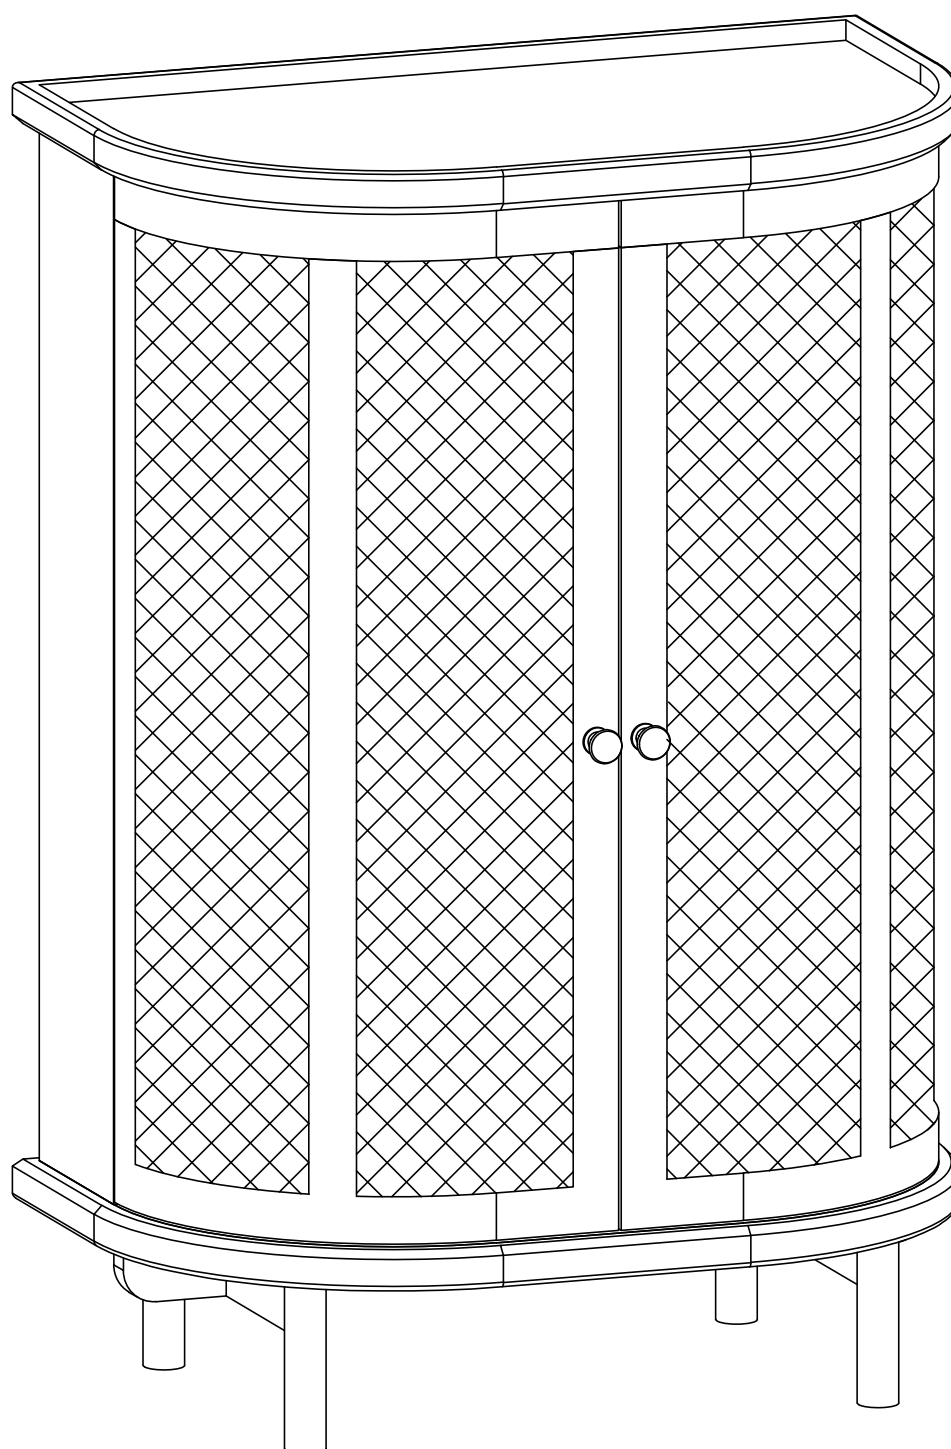

Need Help?

With: Assembly instructions
Missing or damaged parts

IMPORTANT — RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

Warnings

We suggest you retain these instructions for future reference

Keep fittings out of children's reach and keep children well away from construction area

This product should only be used on firm level ground

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Do's

We suggest you spend a short time reading through this leaflet before you start

When you are ready to start, make sure that you have the right tools and plenty of space

We recommend that the packaging is used to protect the surfaces during assembly

Carefully check that you have all the parts before beginning assembly

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight

Always wipe dry after cleaning

For wooden or metal Chairs, please add the following

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth

For upholstered leather chairs;

Dust regularly with a soft cloth, preferably once a week, to keep the leather pores free from dust particles and follow standard cleaning method mentioned above.

Keep away from strong heat sources.

Don'ts

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

 
Do not stand or lean back on your chairs

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Number of people required to assemble


Two persons are required to assemble this item.

Time to assemble

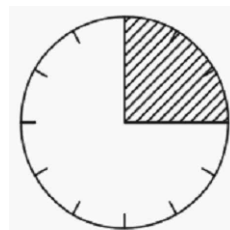

15mins

 Tools required

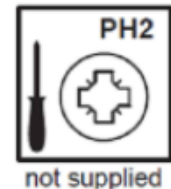

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

 
Home service technicians

If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT

GETTING TO KNOW YOUR PRODUCT

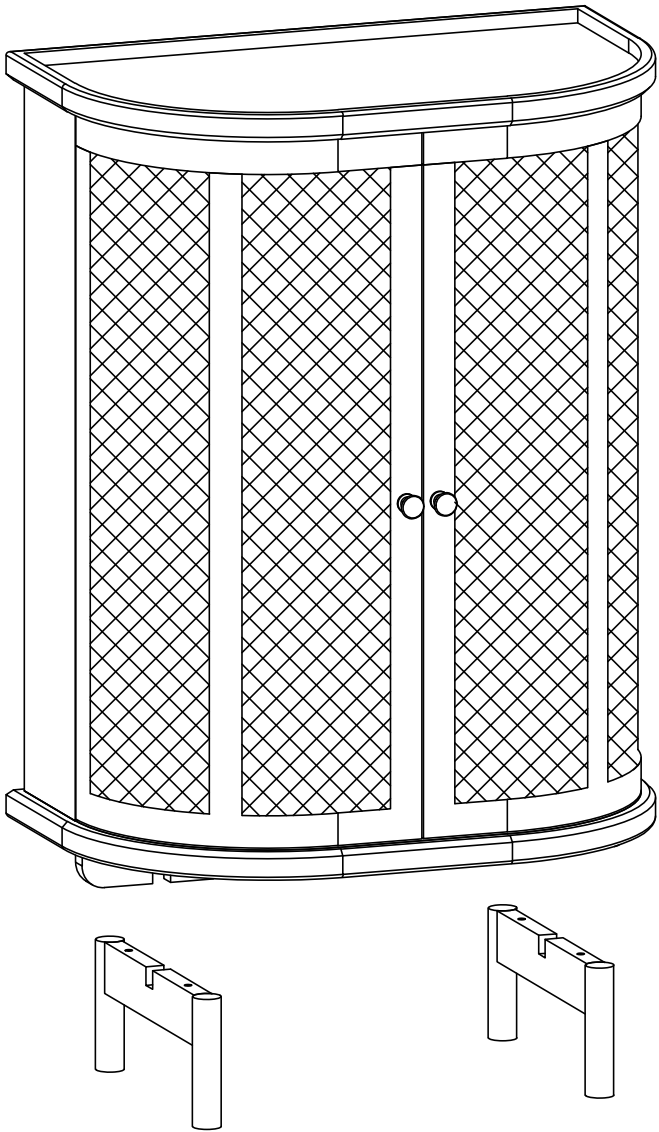


Ref.	Dimensions	Visual	Qty	Ctn
A	82.5X65X40 cm		1	1
B	14X32.5X3 cm		2	1



Assembly instructions

Fixtures and fittings
supplied (actual size)



Ref.	Dimensions	Qty	*Extra
C	Allen Bolt 70 x 6 MM	4	
D	Washer 16 x 8 MM	4	
E	Lock Washer 16 x 8 MM	4	
F	Allen Key 4 MM	1	

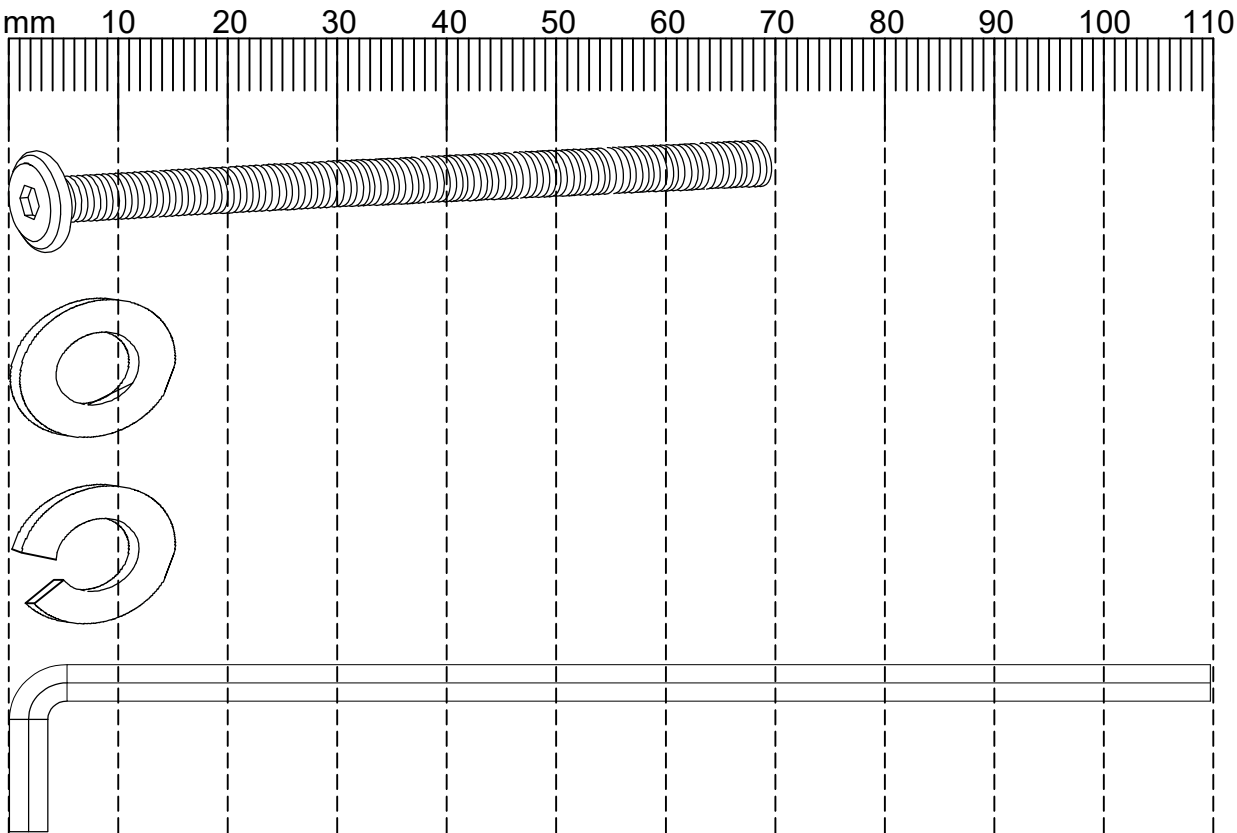 


1

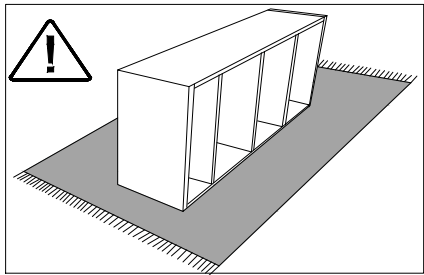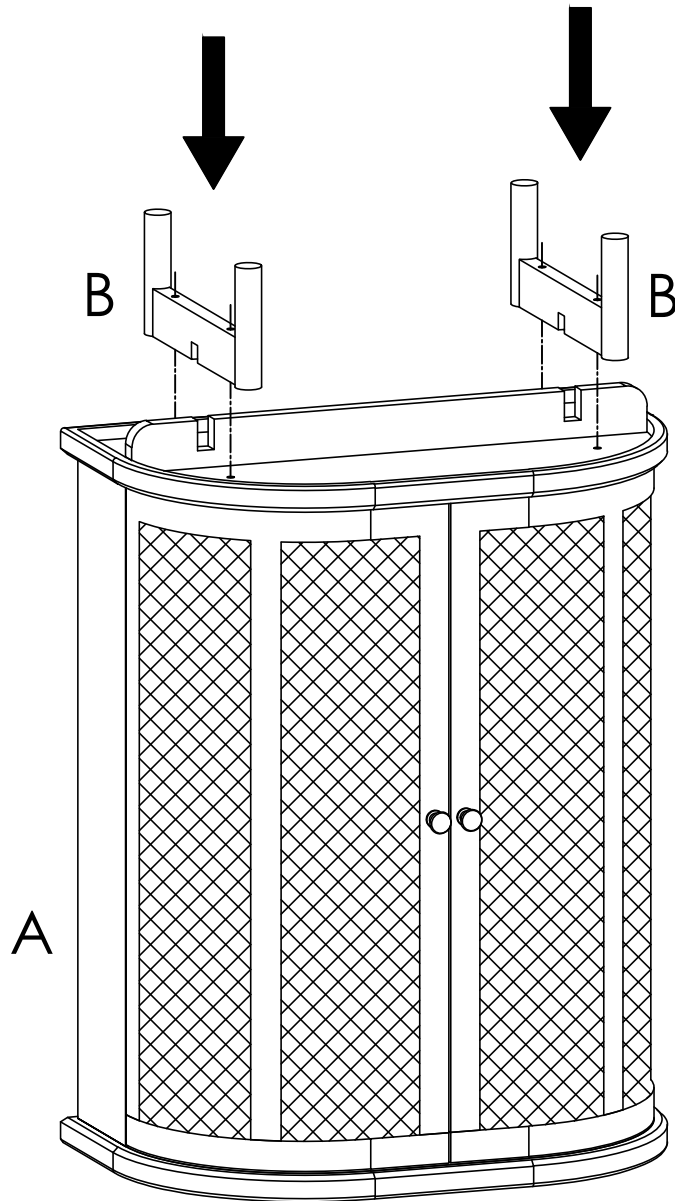  

2

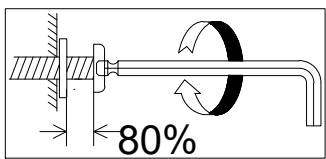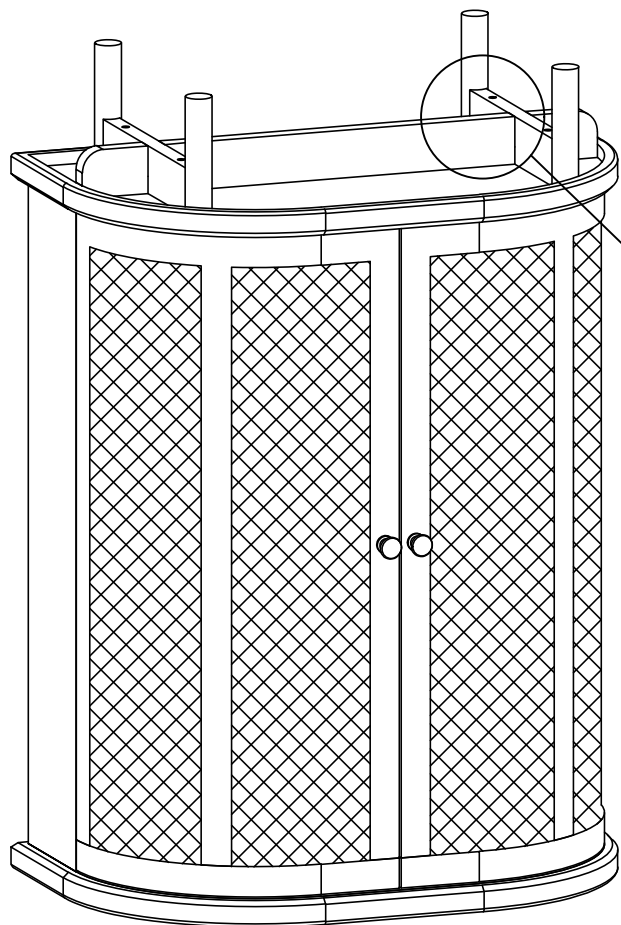  


 Tighten all the bolts upto 80% Capacity only

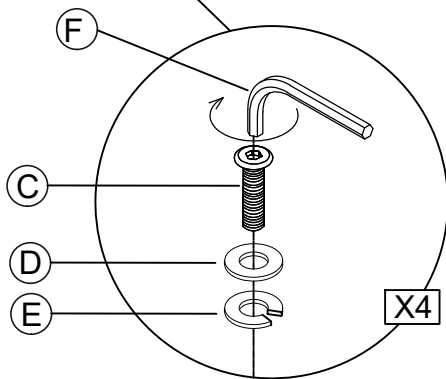


C	D	E	F

 
3

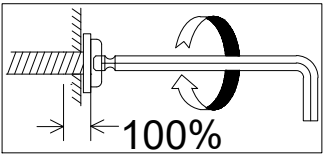

 Tighten all the bolts
upto 100% Capacity only

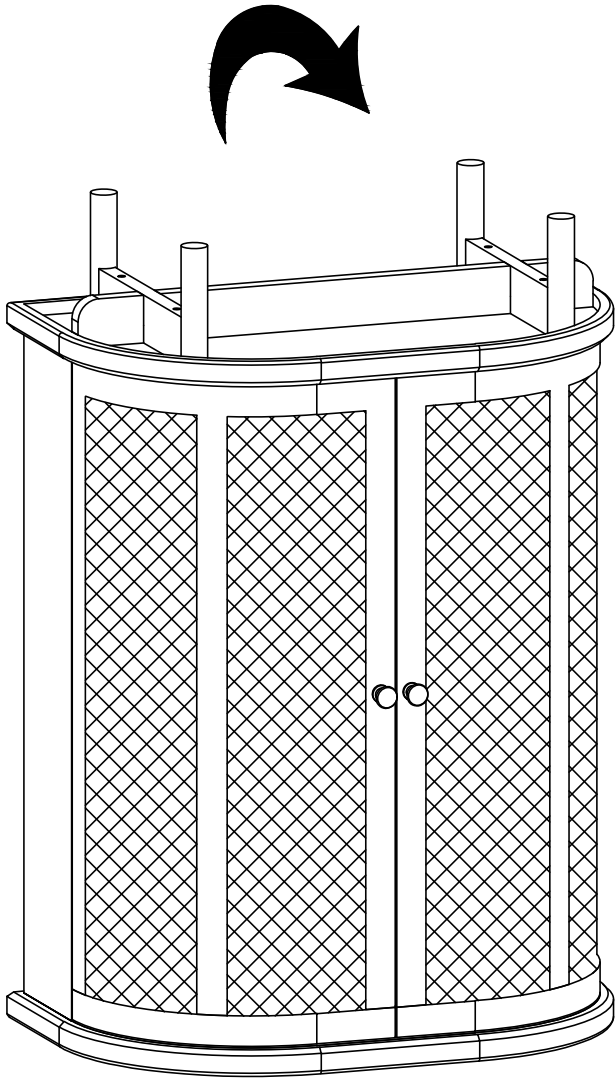


4

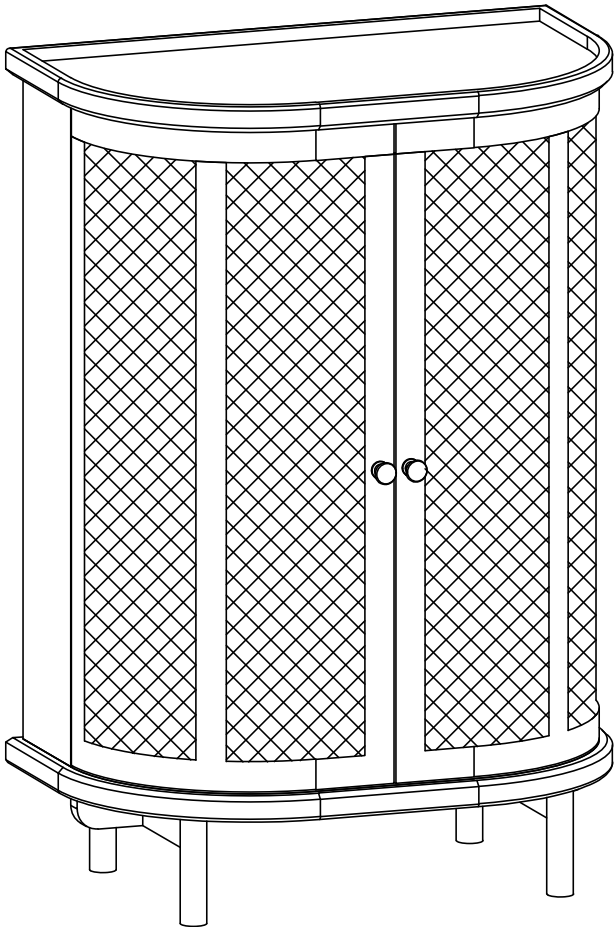 

5

We recommend the use of the wall strap provided for safety reasons. An a device is provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson.

 WARNING: Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

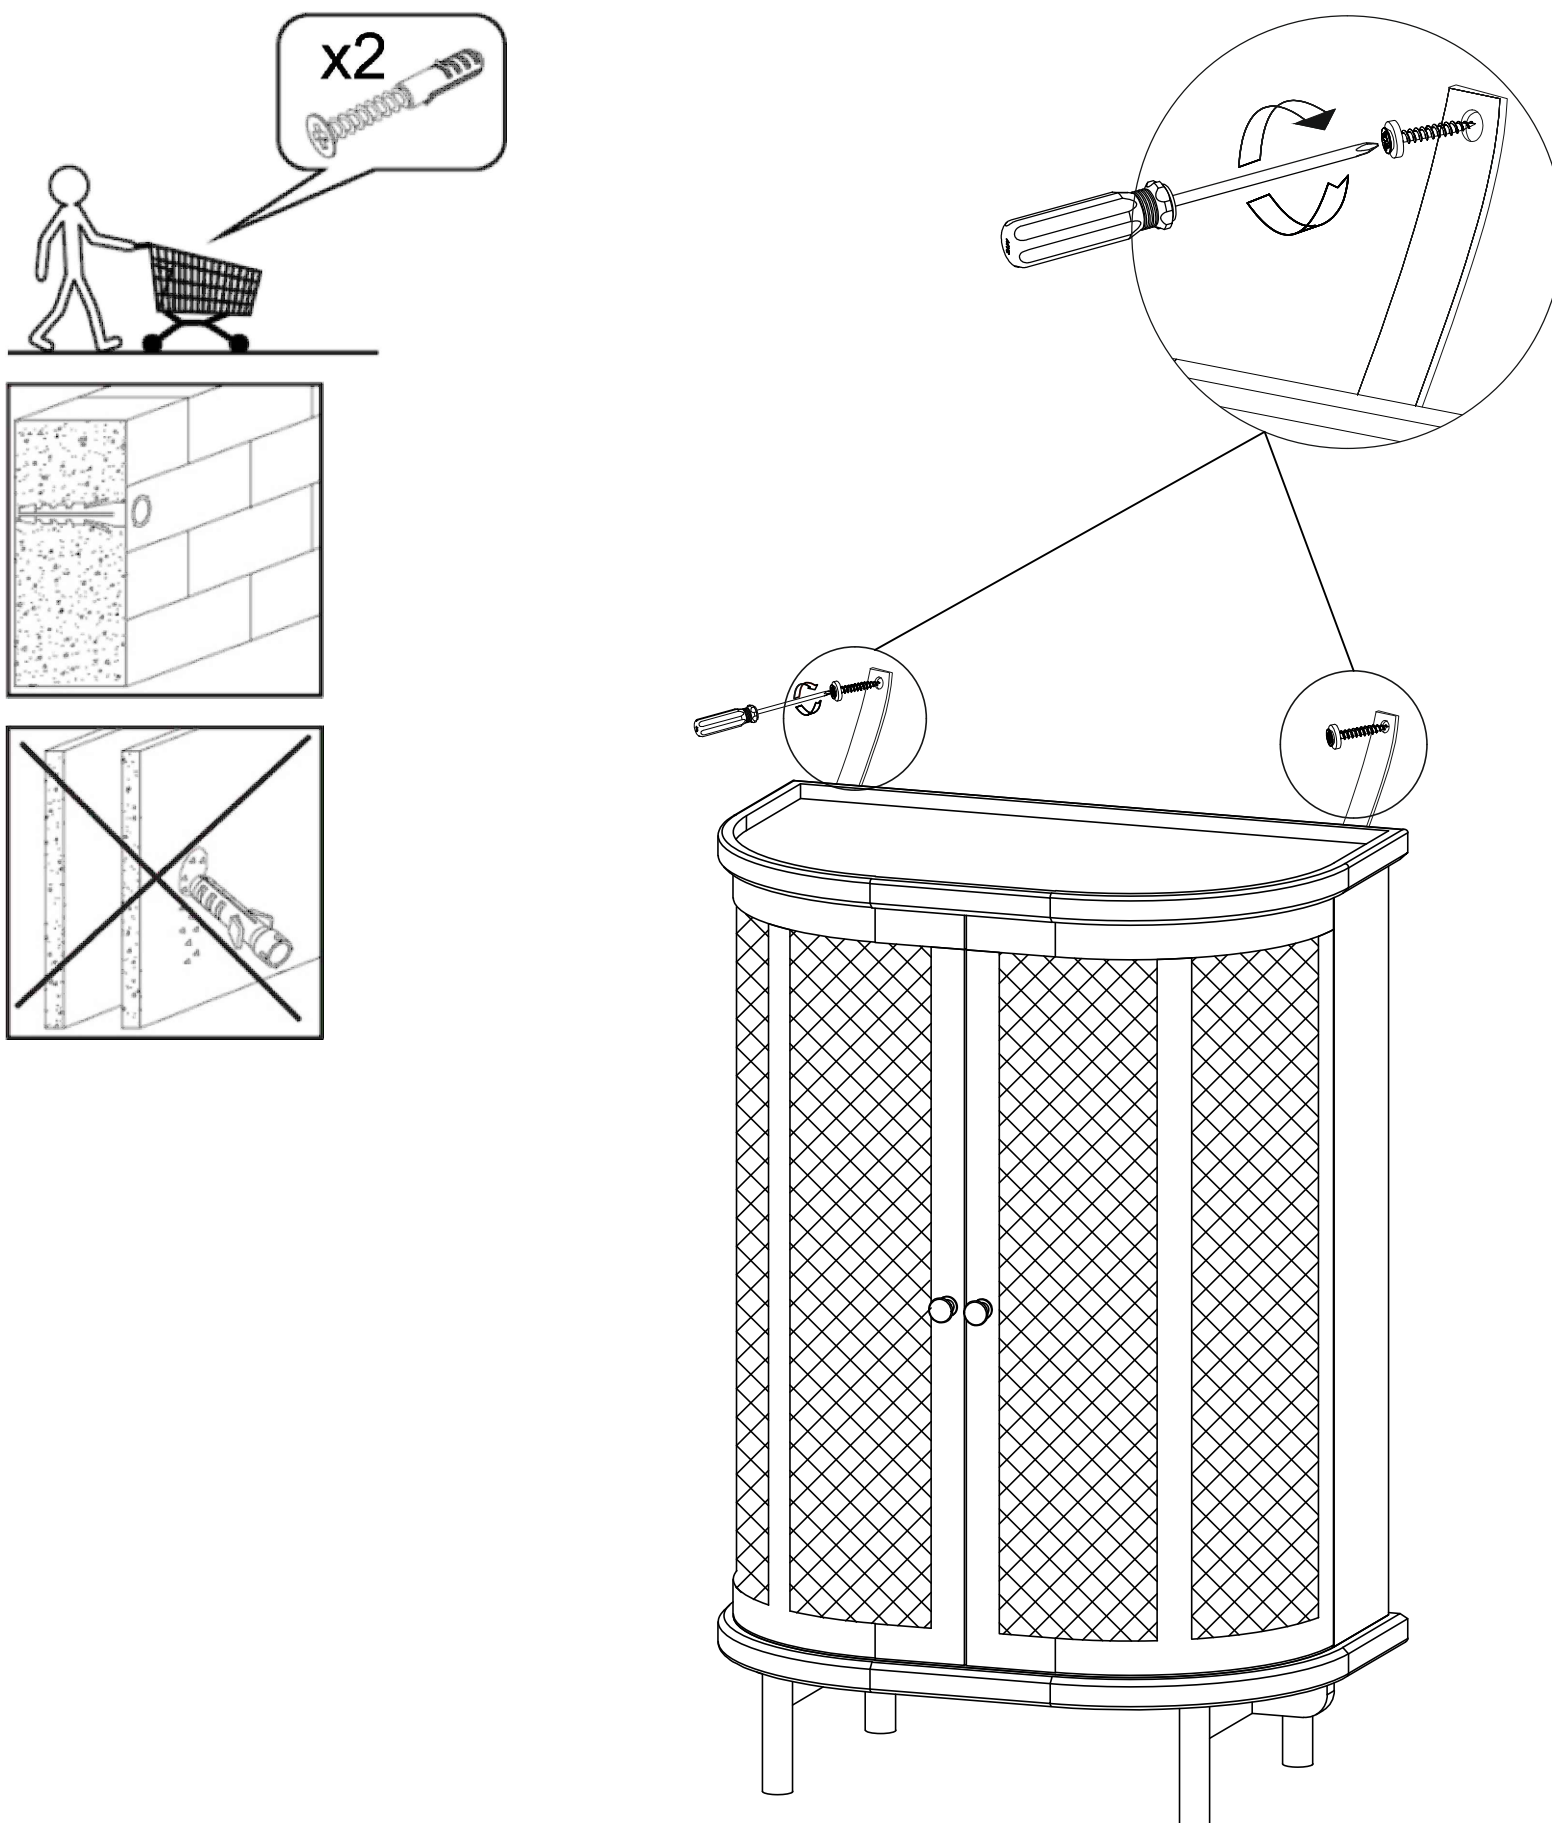

Actual product size:
H95 x W65 x D40 cm

