 


next

MODELLA COMPACT LARGE SIDEBOARD
798683
Assembly instructions

Actual product size
H75 x W105 x D30cm

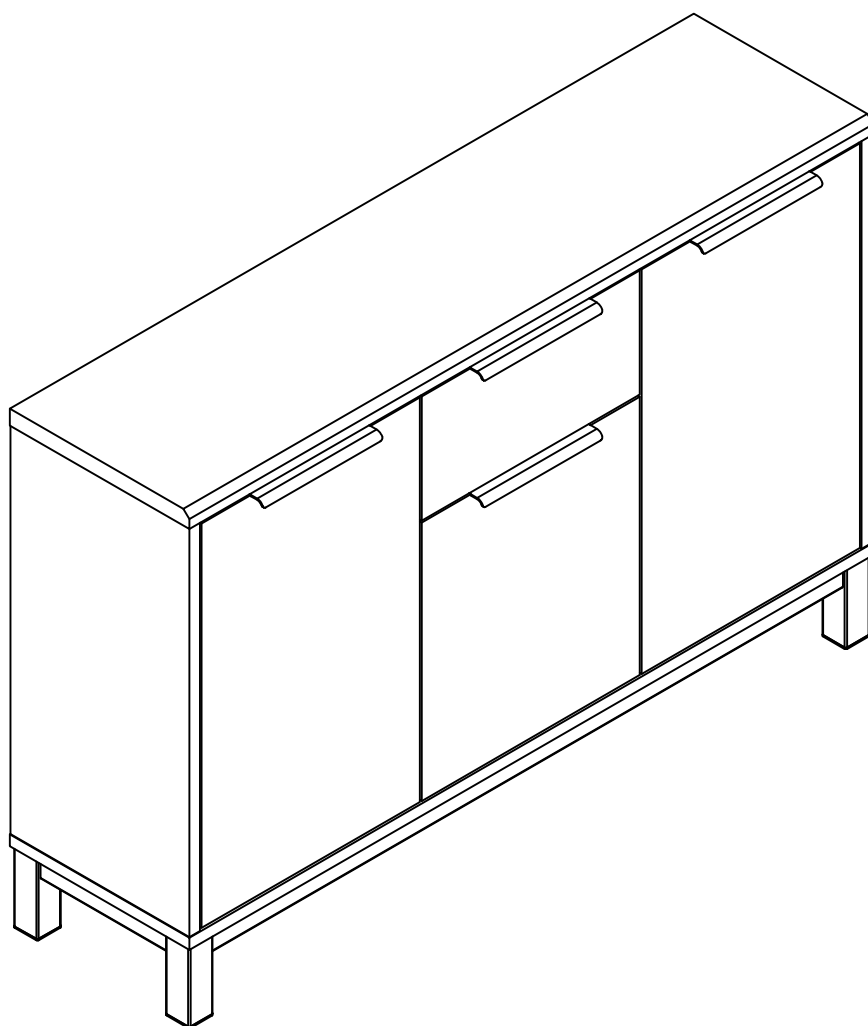

Need Help ?

With: Assembly instruction
Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

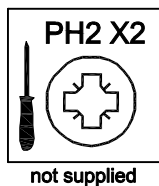

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

 
Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

 

 
 
 
 

 
 
 
 
 
 

Never allow any kind of liquid to remain on your furniture.
Absorption can cause wood to warp or finishes to de-laminate.






Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

GETTING TO KNOW YOUR PRODUCT

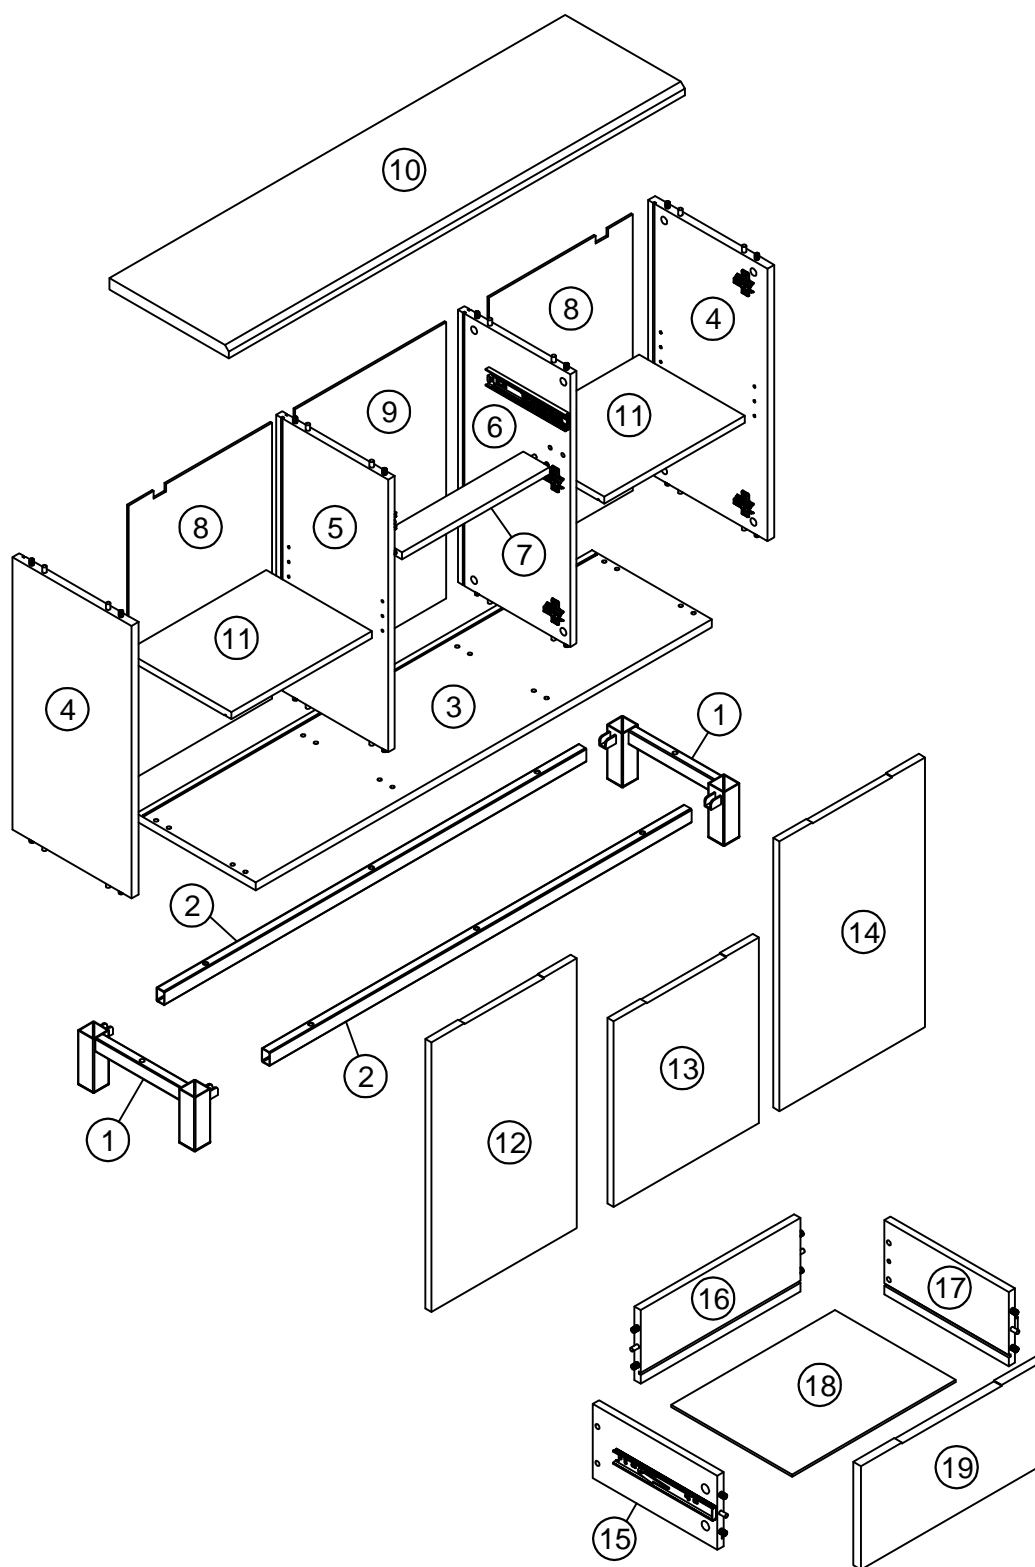


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	12 x 29.5cm		2	1
2	3 x 96cm		2	1
3	30 x 105cm		1	1
4	30 x 59cm		2	1
5	28.5 x 59cm		1	1
6	28.5 x 59cm		1	1
7	6.5 x 34cm		1	1
8	33 x 60cm		2	1
9	34.5 x 60cm		1	1
10	30 x 105cm		1	1
11	26.5 x 32cm		2	1
12	33.5 x 58.5cm		1	1
13	33.5 x 40.5cm		1	1
14	33.5 x 58.5cm		1	1

     Ref	Dimensions	Visual	Qty	Ctn
15	13 x 25cm		1	1
16	13 x 29cm		1	1
17	13 x 25cm		1	1
18	24 x 29.5cm		1	1
19	18 x 33.5cm		1	1

Fixtures and fittings supplied (actual size)


Ref	Dimensions	Qty	Spare Qty
B2	Ø15 x 10mm	N/A	1
B3	Ø15 x 12mm	N/A	2
B8	Ø8 x 38mm	N/A	2
D3	Ø6 x 30mm	N/A	1
D6	Ø8 x 30mm	N/A	2
P3	Ø5 x 16mm	8	1
U139	Ø4.5 x 15mm	12	2
S41	Ø4 x 16mm	2	1
V36	Ø6 x 14mm	4	1
V68	Ø6 x 40mm	8	1

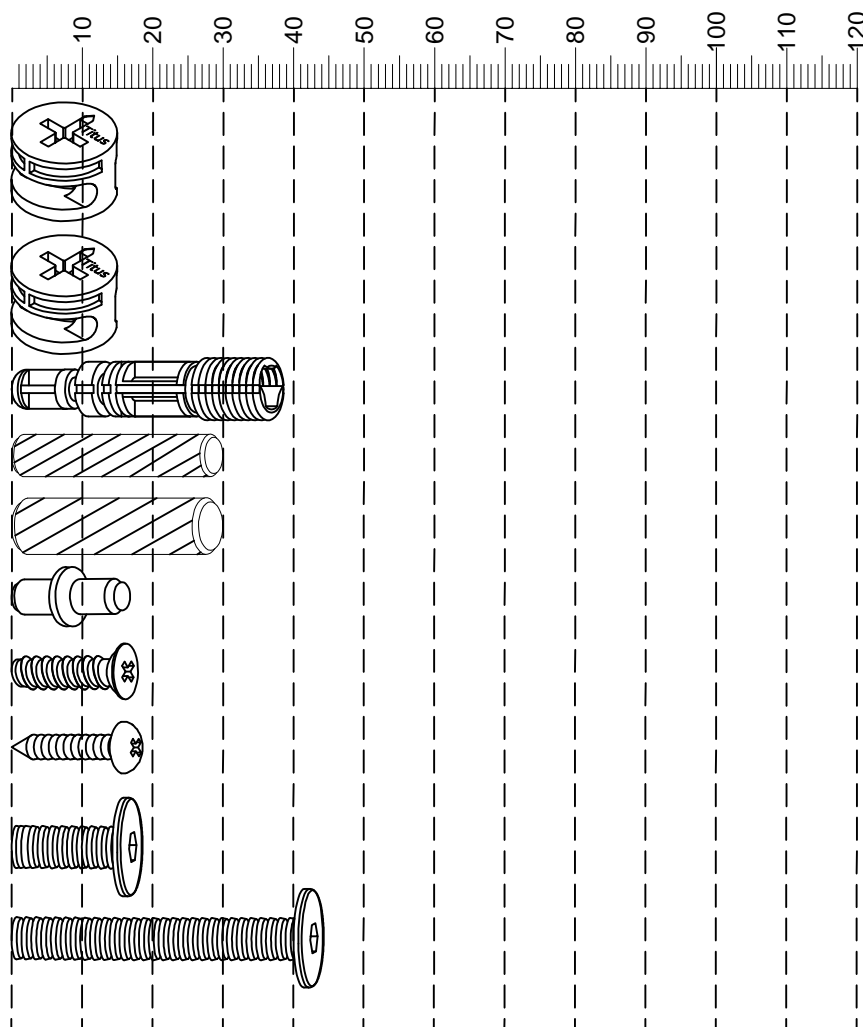 

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
C11	N/A	6	N/A	
T38	N/A	9	1	
E39	N/A	4	N/A	
T1	N/A	2	N/A	
O1	Ø25mm	16	2	
T39	N/A	2	N/A	

 1

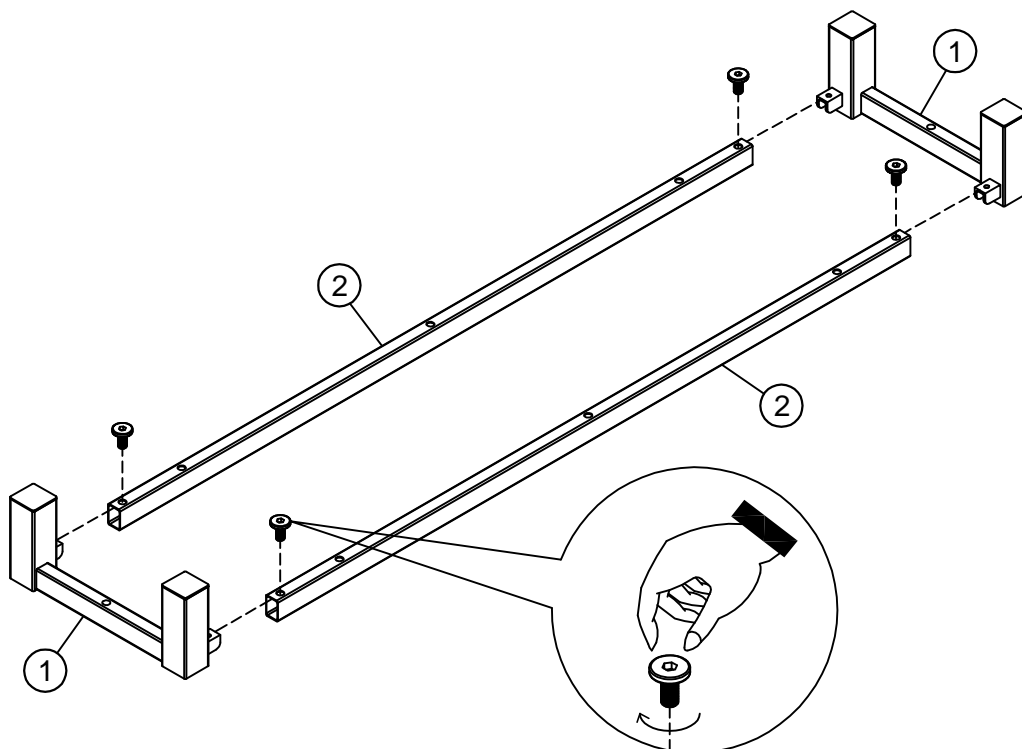


V36

Ø6 x 14mm

4



 2

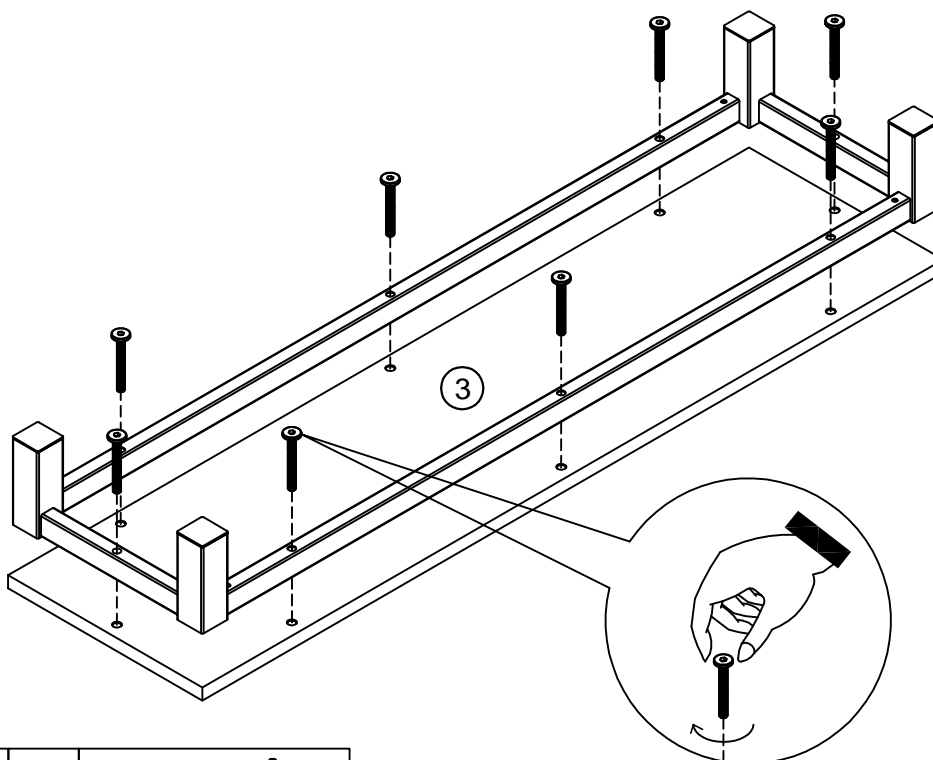


V68

Ø6 x 40mm

8



 3

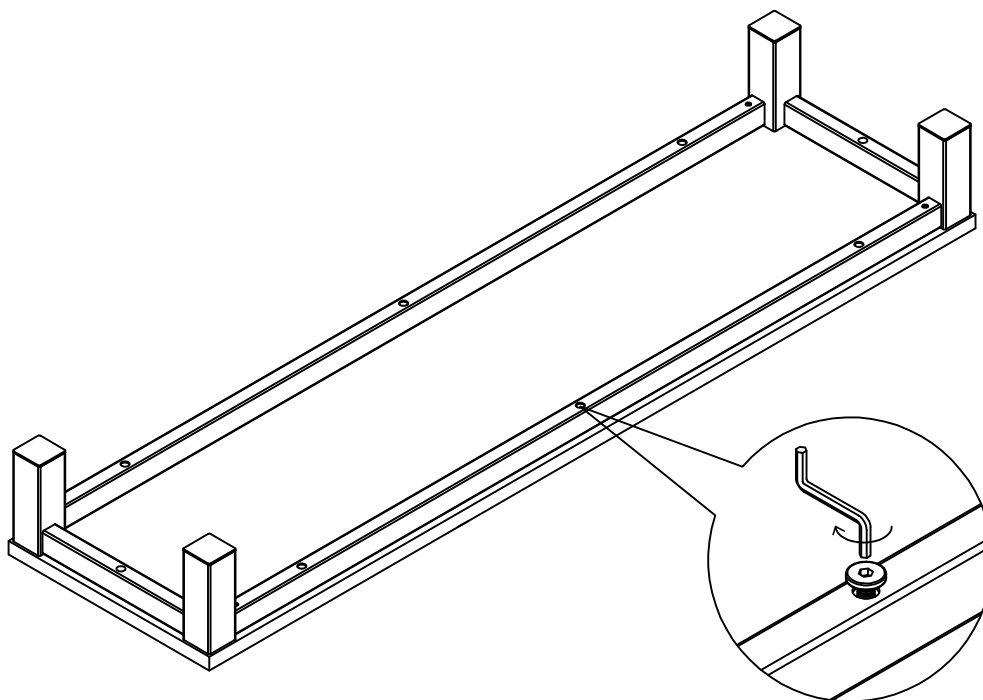


T1

N/A

2



 4

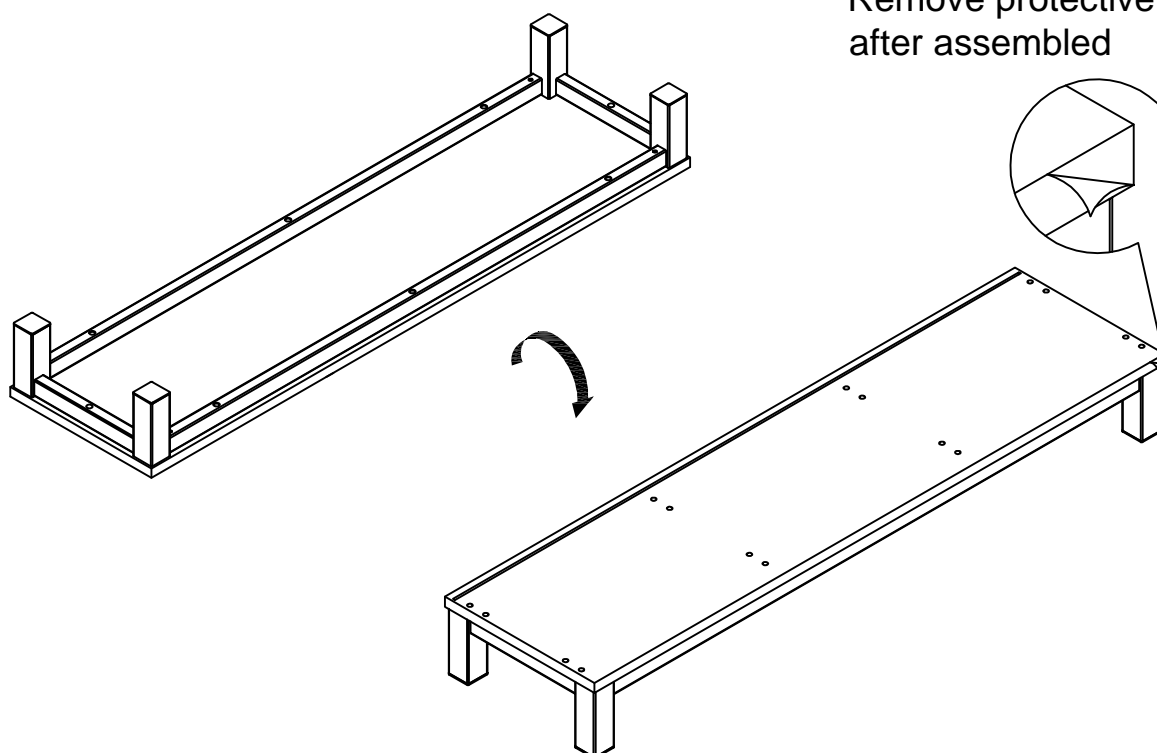

Remove protective film
after assembled

 
5

DON'T STOP UNTIL THE 2 O'CLOCK LOCK

TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE
ARROW POINTS IN THE POSITIONS SHOWN IN THE
DIAGRAMS BELOW




START

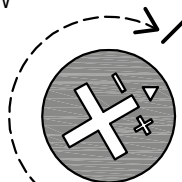


CORRECT
LOCK

 
Remove protective film
after assembled

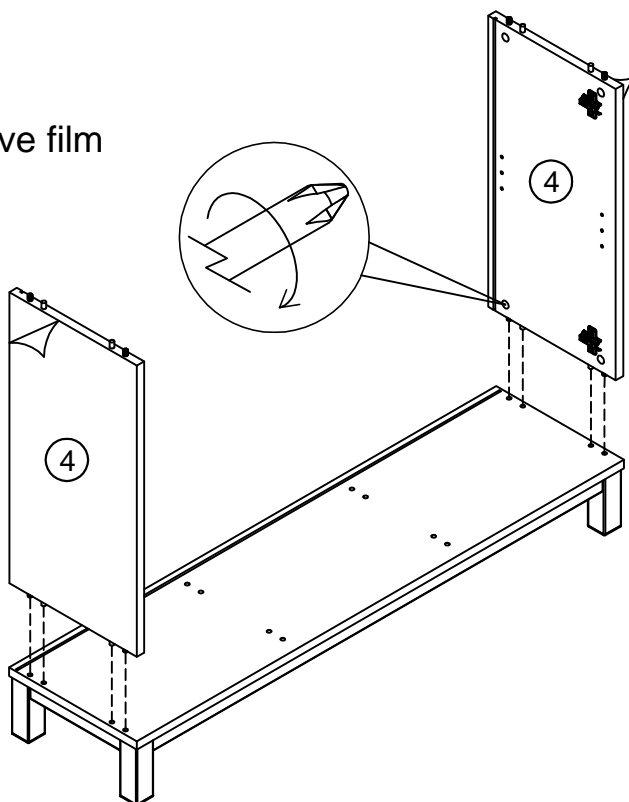

 
PUSH THE TWO PANELS TOGETHER ALLOWING THE
DOWEL TO ALIGN WITH THE HOLE

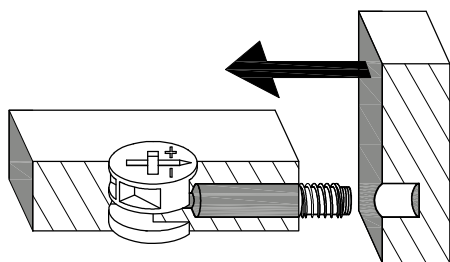


TURN THE CAM IN A CLOCKWISE DIRECTION

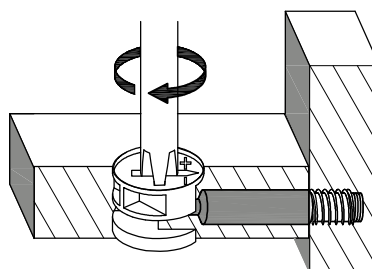 


6

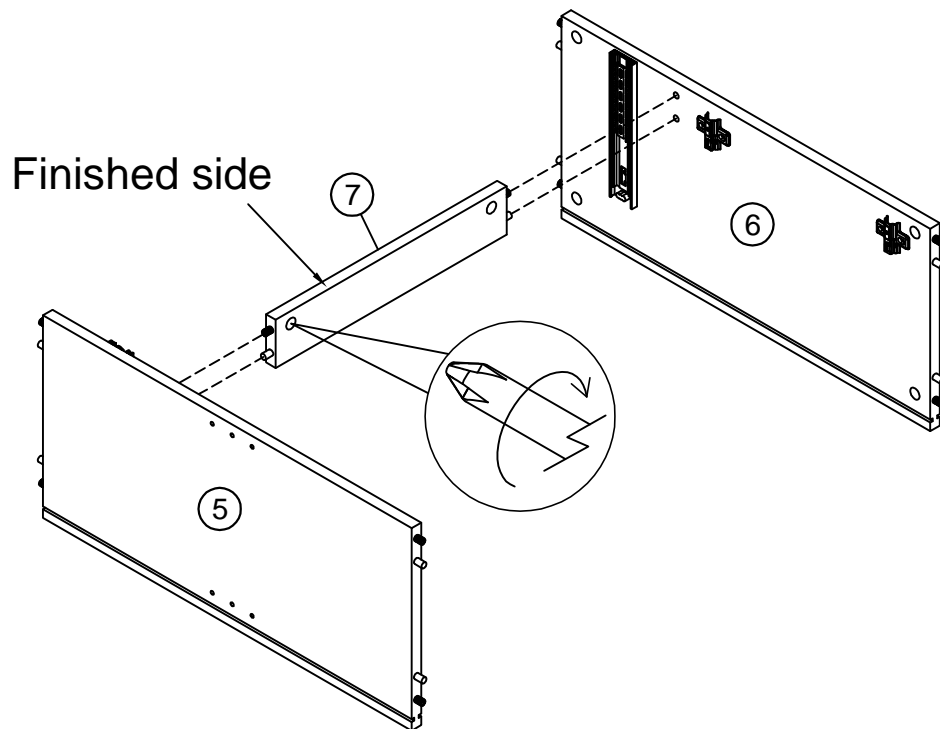 

7

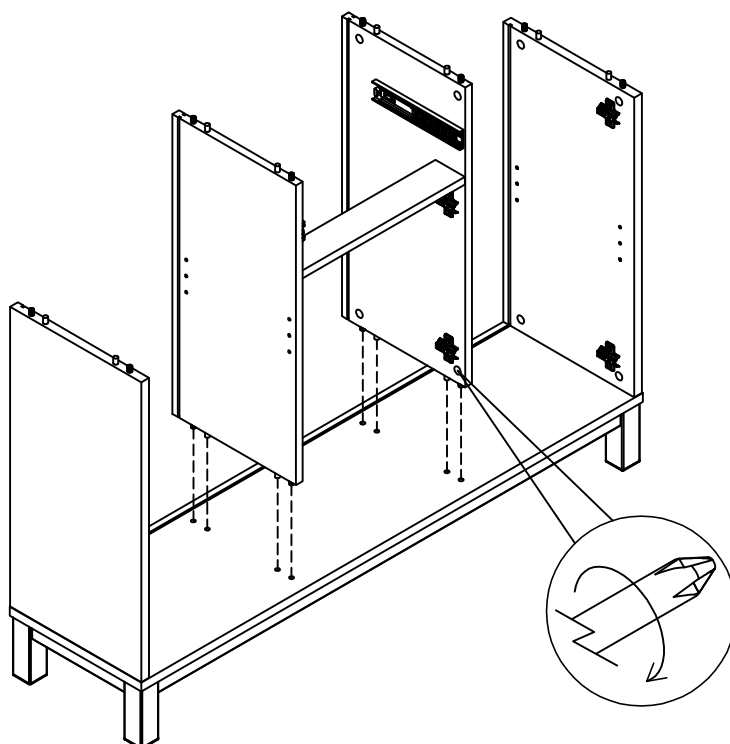 


8

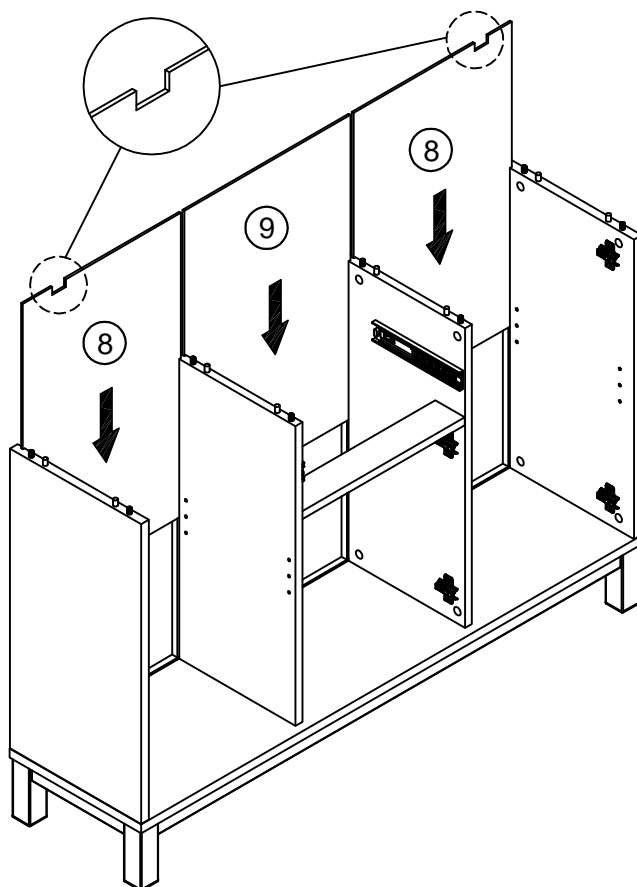 


9

 Remove protective film
after assembled

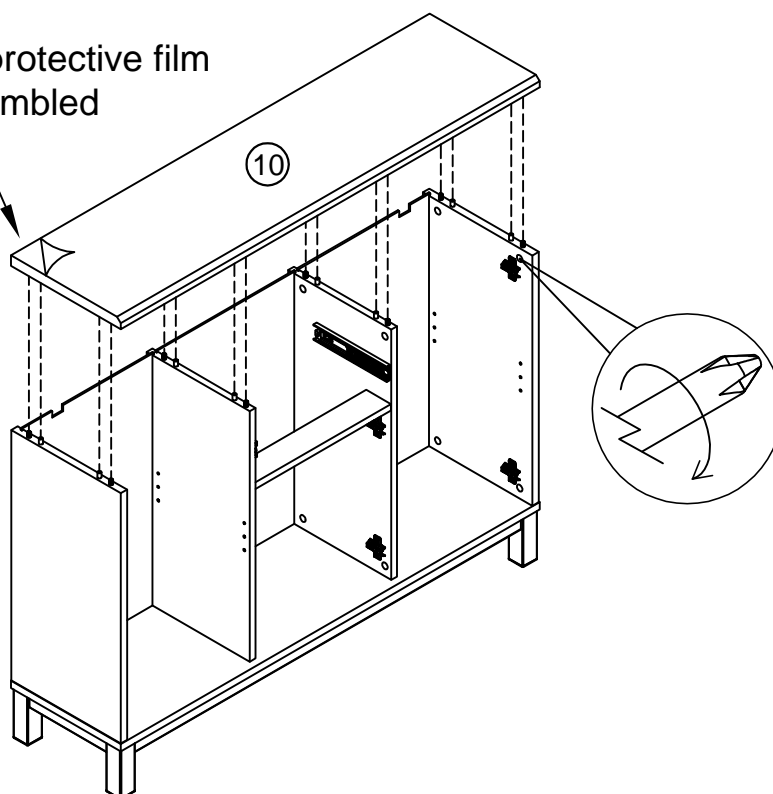

10

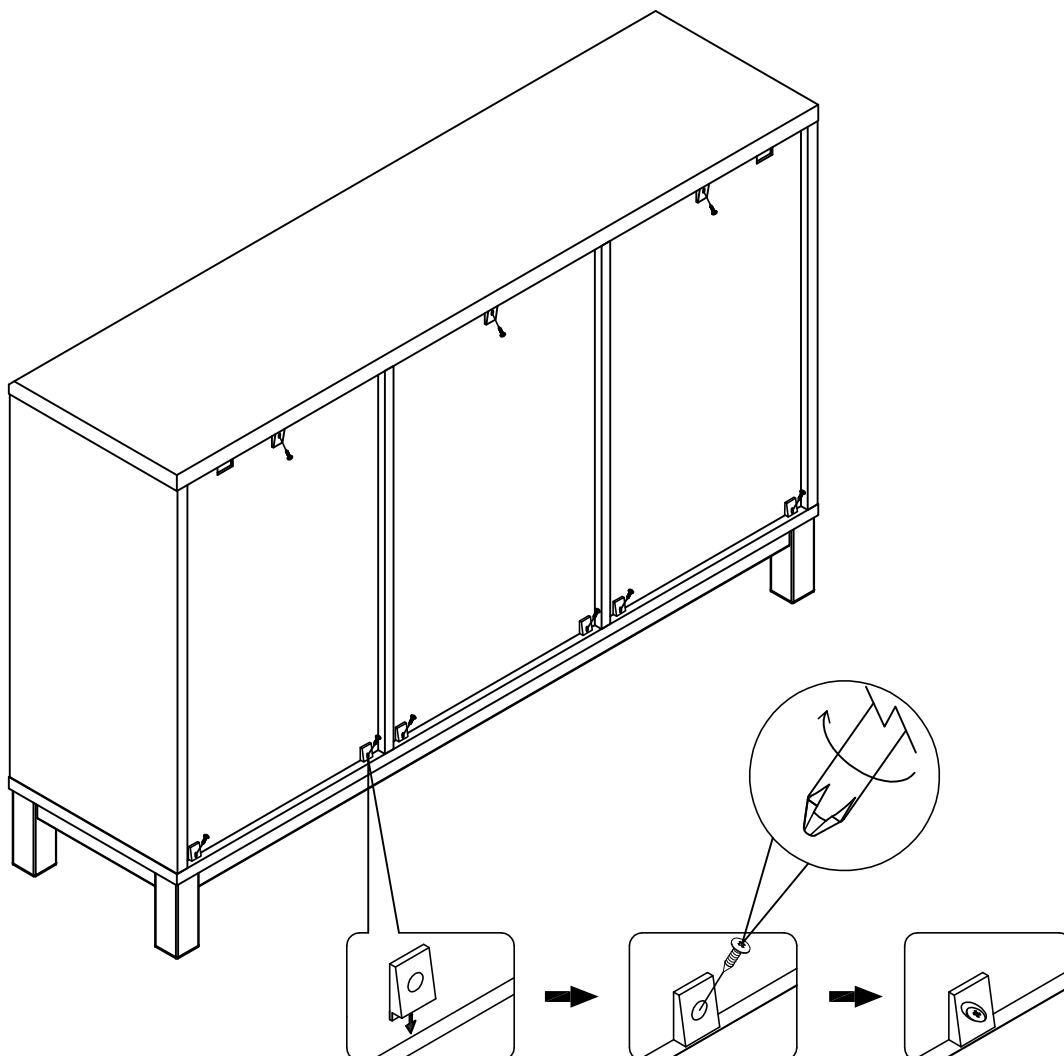 

T38

N/A

9

 



 

11

We recommend the use of the wall attachment bracket/strap provided for safety reasons.
Secure the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).
To hide the strap behind the unit, drill the hole lower than the top of unit.


Attach the other end of the strap to the underside of the top panel with screw.
Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.
NB: Wall fixings are not included-Please source suitable fixing for your wall type.
If in doubt please consult a qualified trades person.

Please ensure you secure your product to the wall for your and your family's safety before you use it.

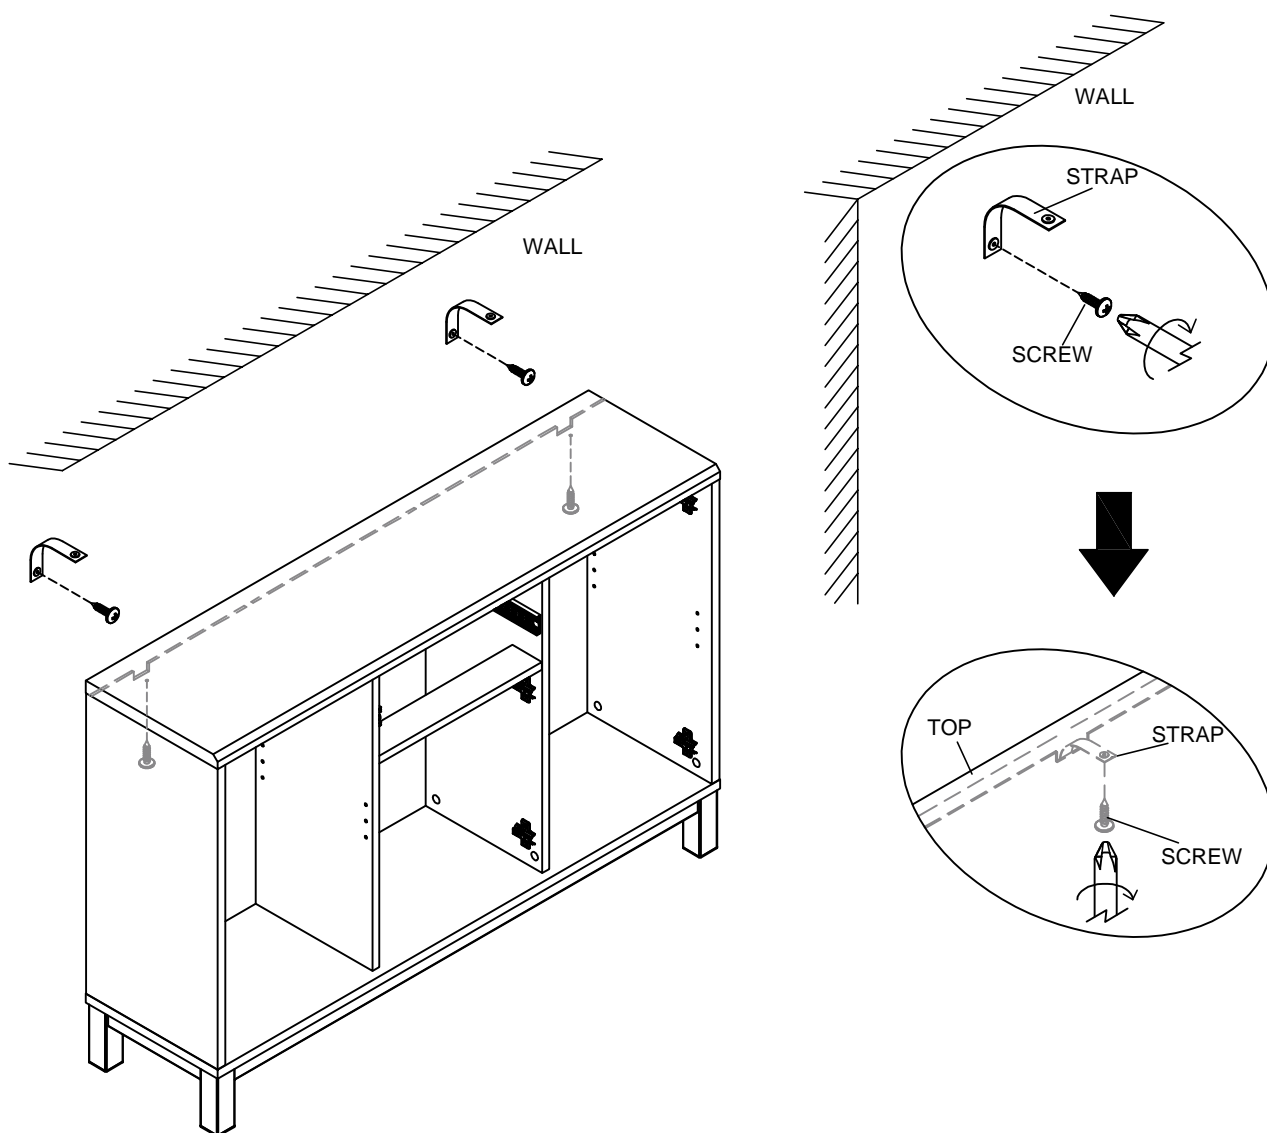


T39	N/A	2	
S41	Ø4 x 16mm	2	  not supplied

 12

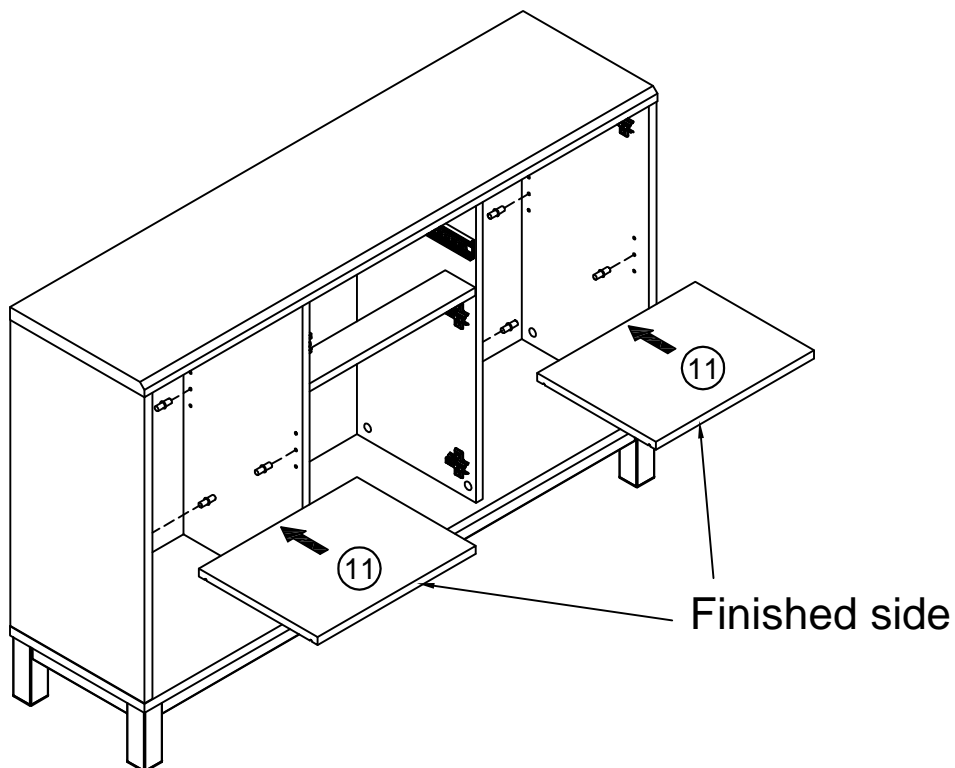

P3	Ø5 x 16mm	8	
----	-----------	---	--


 
13

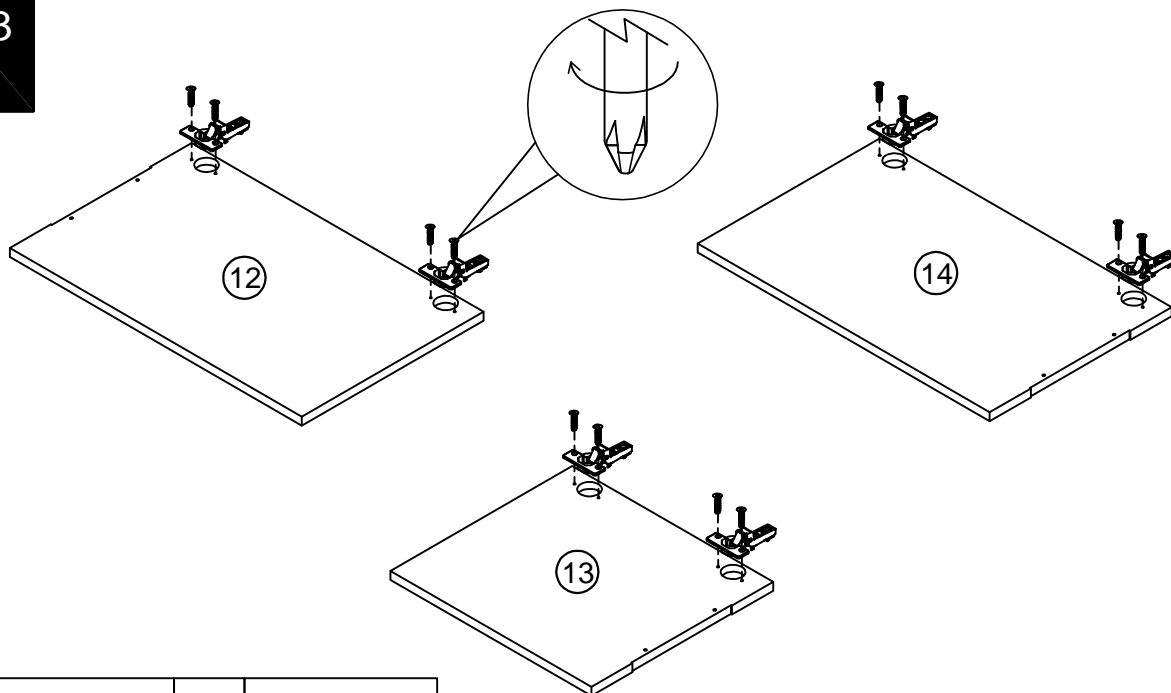


C11	N/A	6	
U139	Ø4.5 x 15mm	12	 not supplied

14

  Install hinge

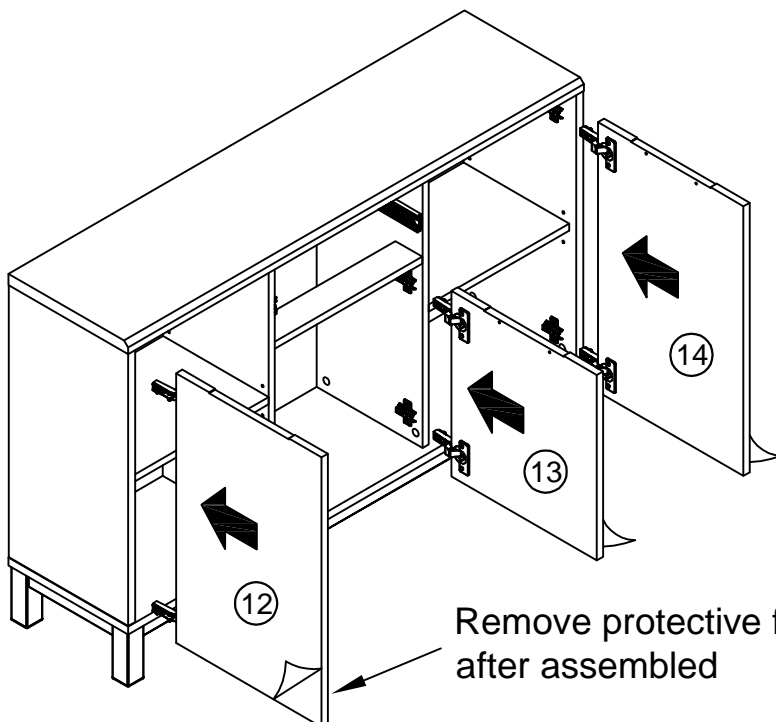
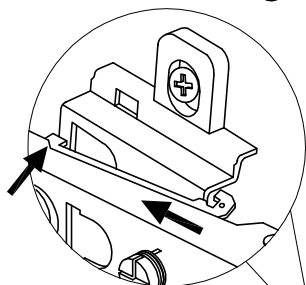


Remove protective film
after assembled

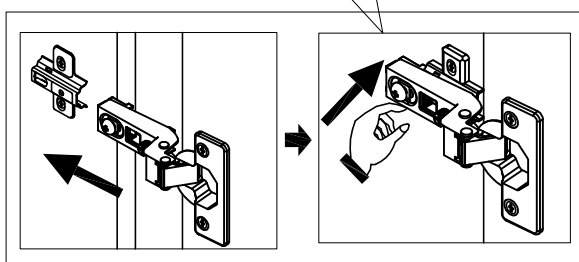 


Adjust Hinge Position


 
 
Remove hinge

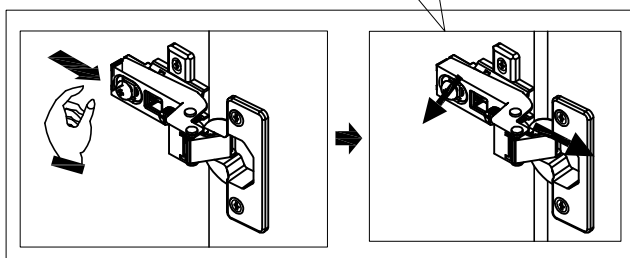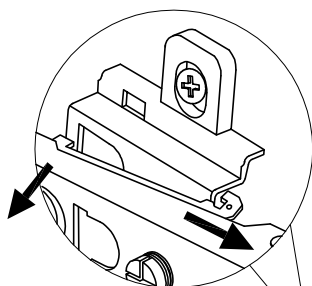




LATERAL

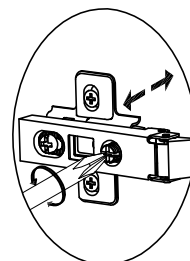 


VERTICAL

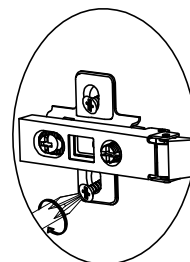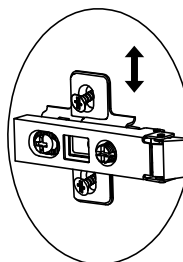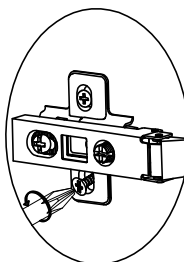   

FRONT- TO-BACK

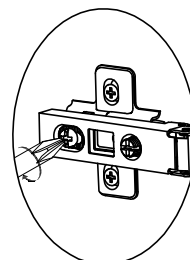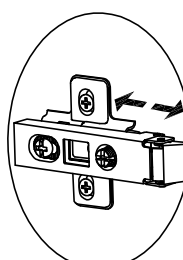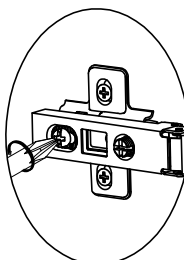   


15

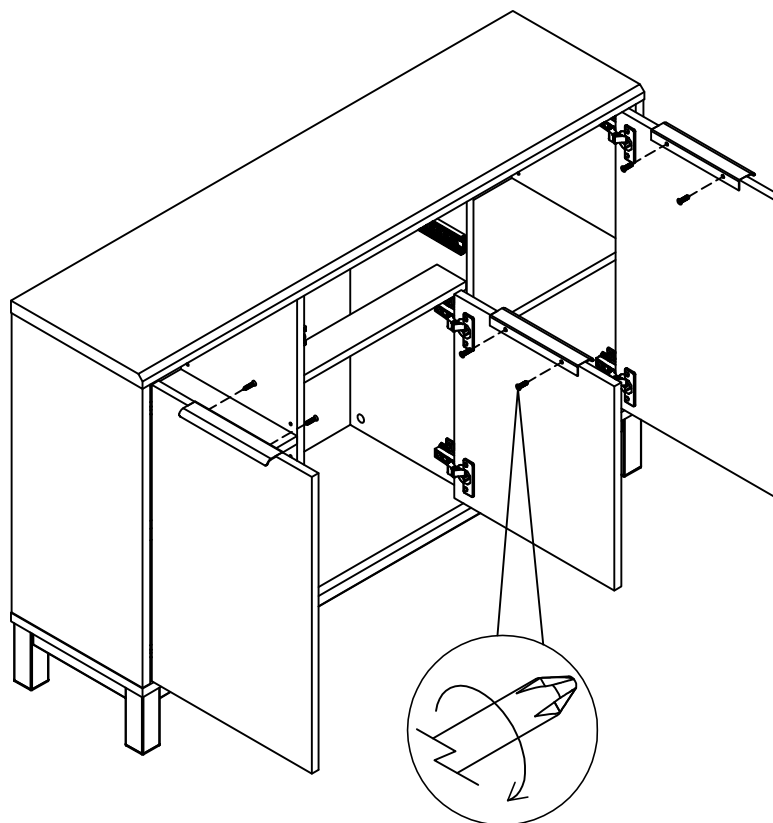 


E39

N/A

 
3




16

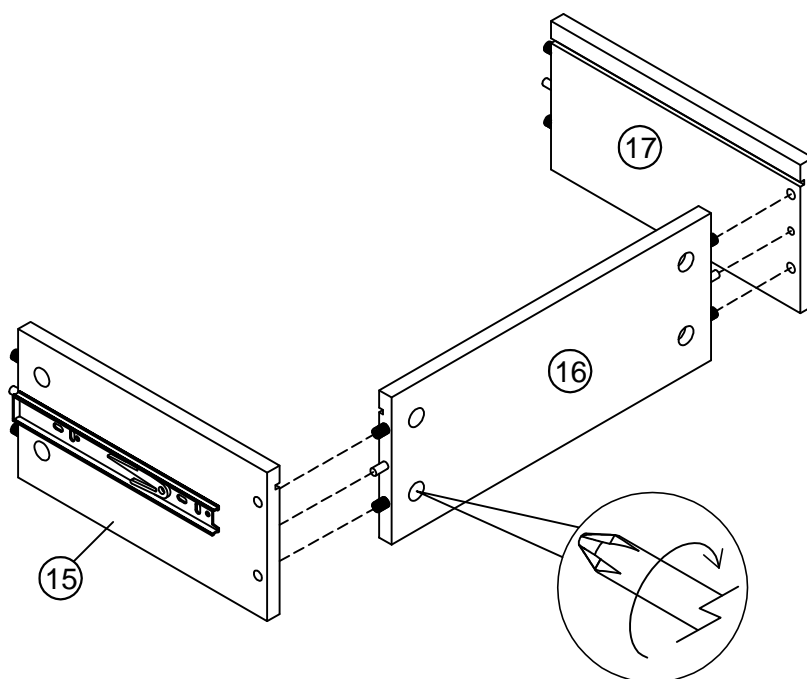 


17

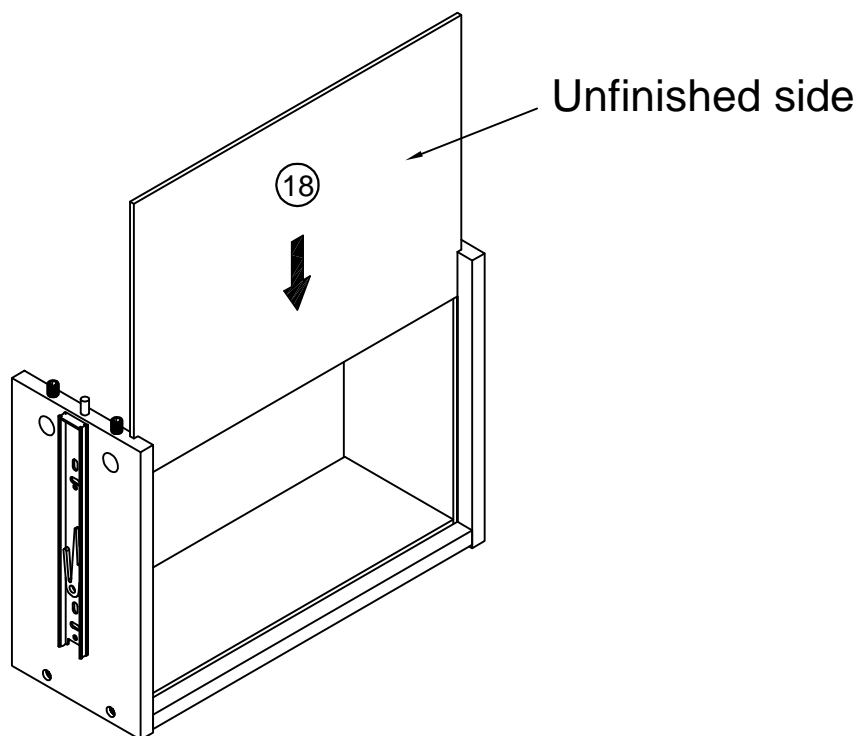 

18

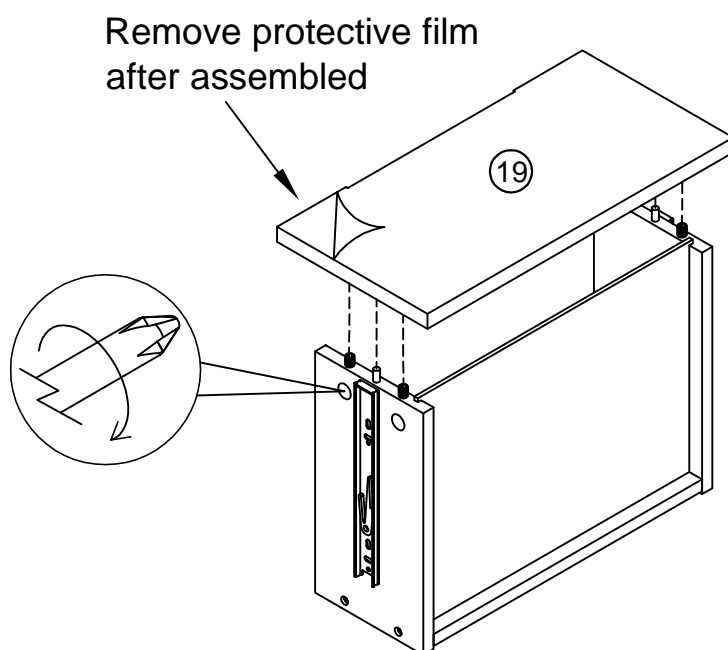 

19

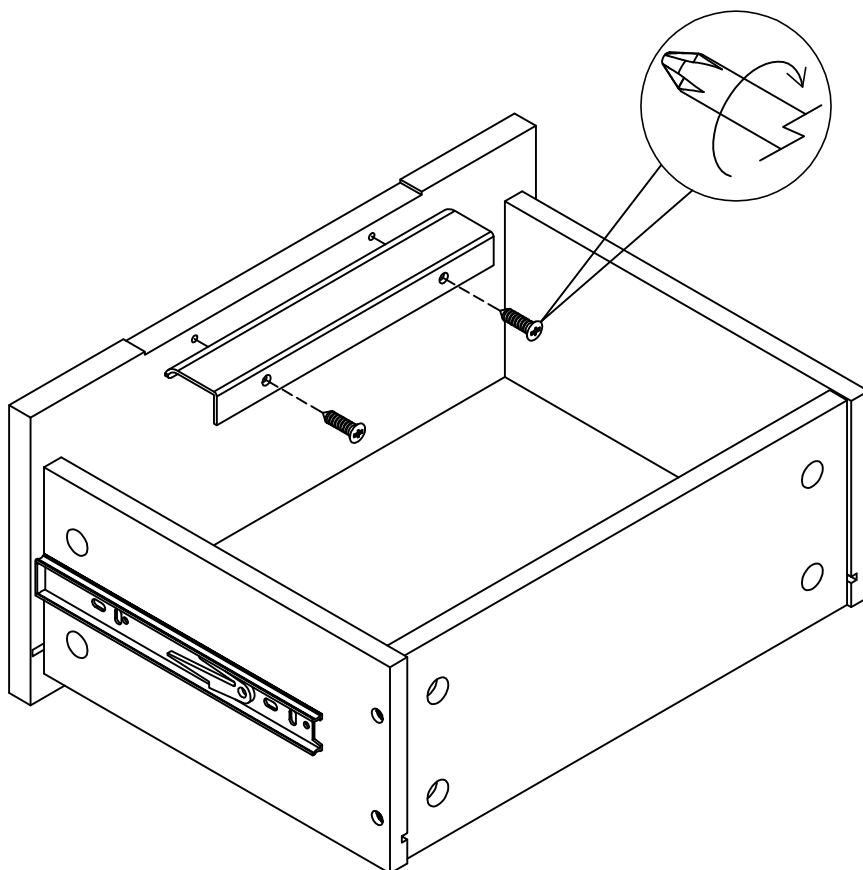 


WHEN LOOSENING THE CAM


TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION
UNTIL THE ARROW POINTS IN THE POSITION SHOWN
IN THE DIAGRAMS BELOW



 MAXIMUM
LOCK

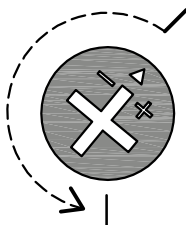

TURN
TO UNLOCK

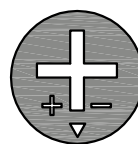 


UNLOCKED




E39

N/A


 
1





20

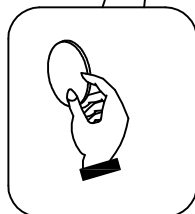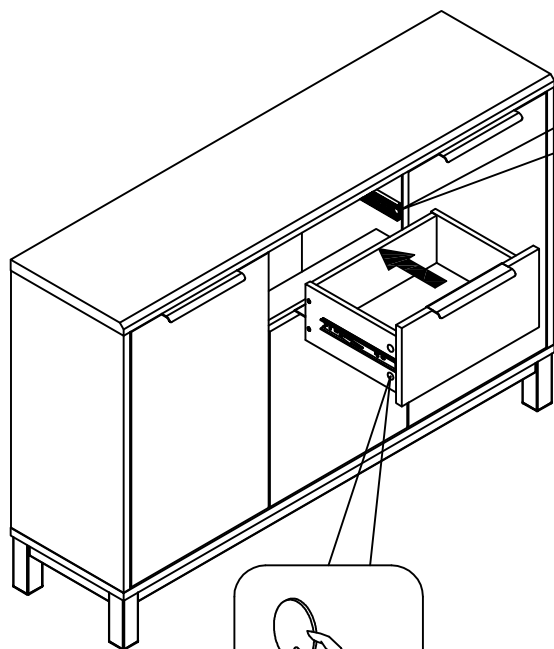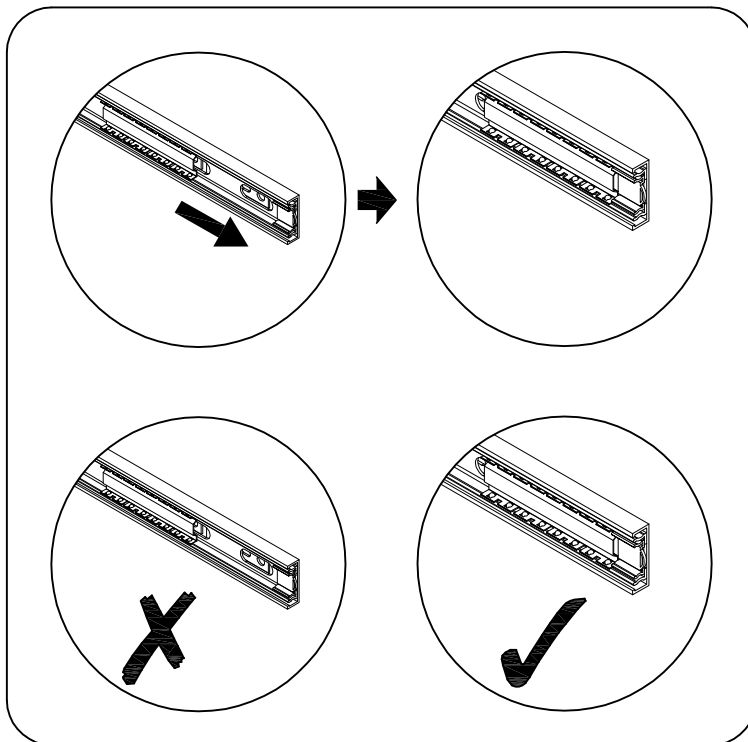   

Left side

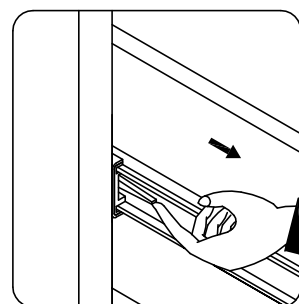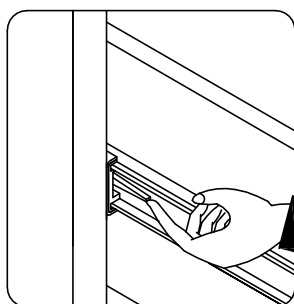  

Right side

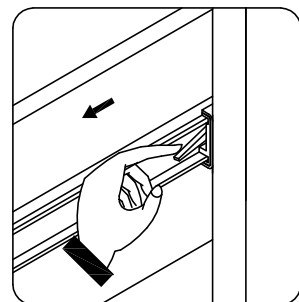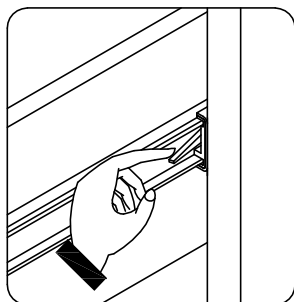  


O1	Ø25mm	16	
----	-------	----	--

next

MODELLA COMPACT LARGE SIDEBOARD
798683

 Actual product size
H75 x W105 x D30cm

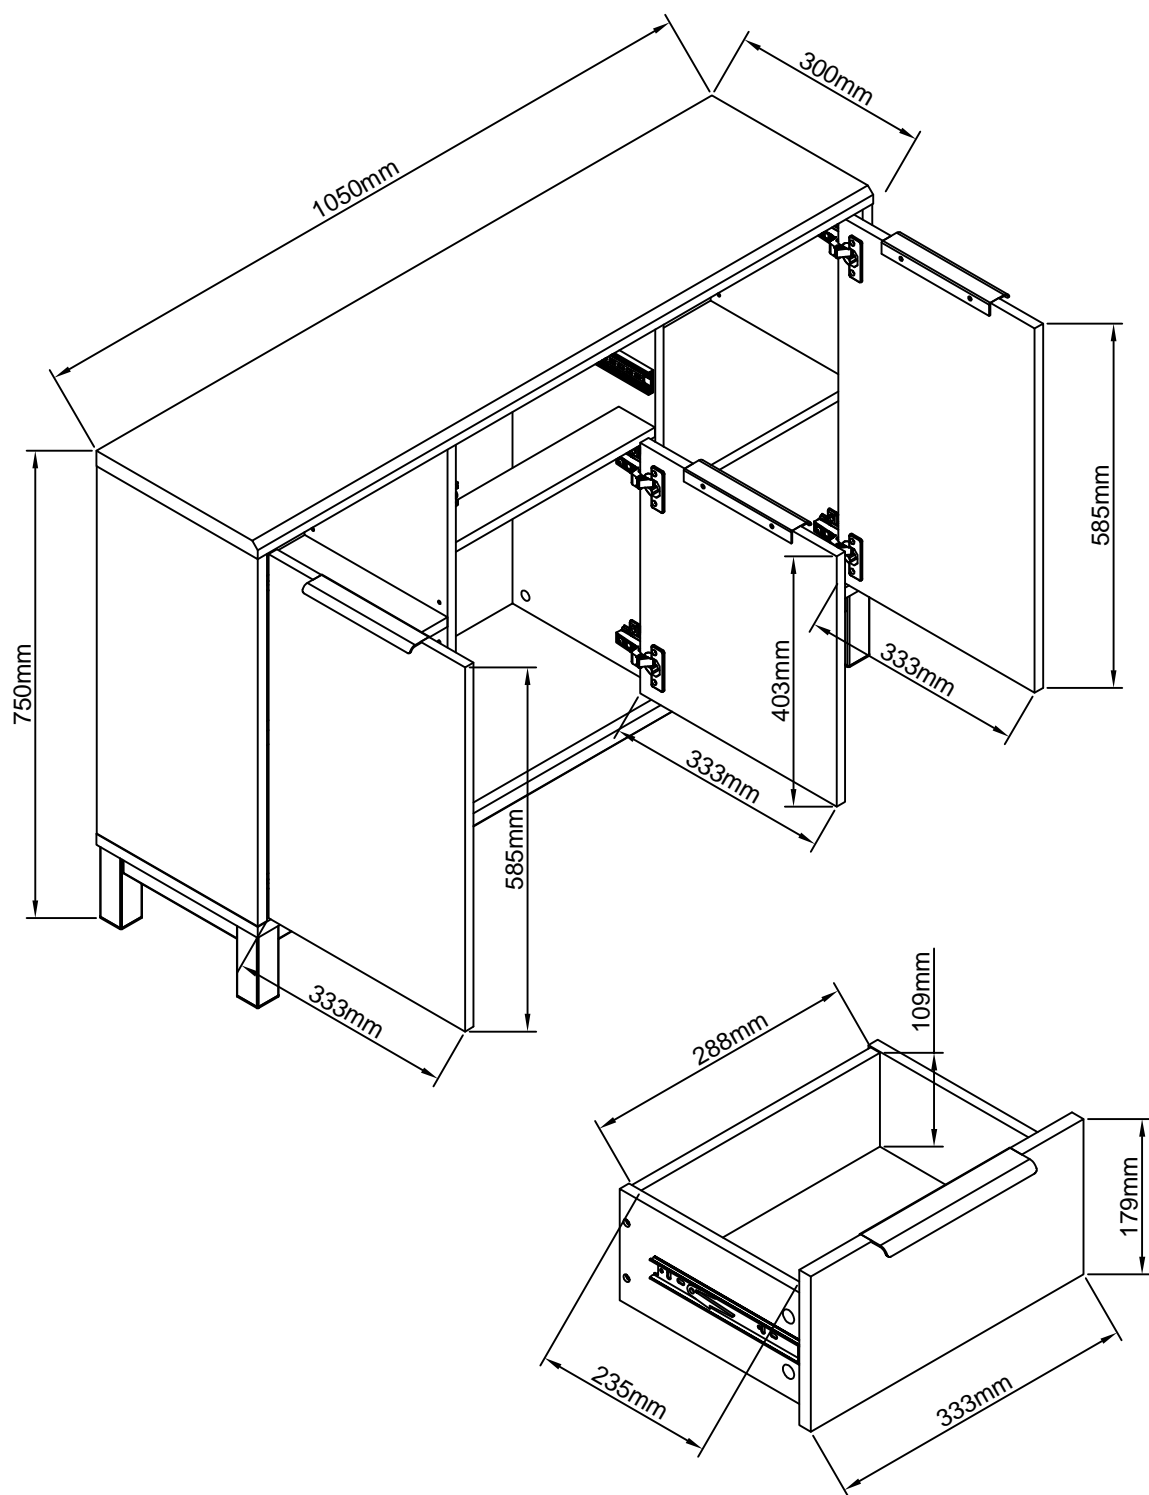

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk