

CHARLES
BENTLEY

EST. 1860



Acacia Dining Chairs

Set of 2

CARE INSTRUCTIONS

CARE INSTRUCTIONS

WARNINGS AND ADVICE

- For domestic and outdoor use only.
- Do not exceed the maximum weight.
- When you are ready to begin assembly, make sure you have the right tools, plenty of space, and carefully check that you have all the parts required.
- Unwrap all packaging material and place the components on a clean surface. We recommend using the packaging to protect the surfaces during assembly.
- Periodically check all fittings and retighten as necessary. We recommend retaining the assembly tools, you may need them in future to re-tighten the bolts, or to dismantle the furniture.
- This product should only be used on a firm, level ground.
- Do not stand or climb on the product and supervise young children whilst in use.

STORAGE

Winter Storage

During the colder months or periods of heavy rain, it's best to store your furniture in a dry, sheltered area whenever possible. If outdoor storage is necessary, use a durable, weatherproof cover. Avoid leaving the cover on continuously for long periods, as trapped moisture and lack of airflow can harm the furniture's material and finish. To prevent this, periodically remove the cover and allow the furniture to breathe. This simple step helps maintain its appearance and longevity throughout the winter.

Summer Storage

To keep your furniture in top condition during the warmer months, protect it from prolonged sun exposure, extreme heat, and sudden weather changes. Use a waterproof and UV-resistant cover that fits snugly and securely over the furniture. This helps prevent fading, warping, and other sun-related damage.

Chair tested up to a maximum weight of 110kg

WOOD CLEANING & MAINTENANCE

- **Cleaning** Regular cleaning is crucial to removing dirt, dust, and other contaminants that can accumulate on the furniture's surface. Use a mild dish soap and warm water solution, applying it with a soft cloth or sponge. Avoid using abrasive cleaners or detergents, as they can damage the coating.
- **Drying** After cleaning, it's essential to dry the furniture thoroughly. Use a clean, dry cloth to wipe down the surface, paying attention to areas where water collects.
- **Wood Protection** The wood has an oiled finish; a regular re-application of furniture oil must be applied to maintain good condition. The frequency will depend on weather conditions but should be done at least once a year. After being outside for some months, small dark spots may appear which is natural. You can use fine abrasive paper to sand off the spots and reapply furniture oil.
- **Moving the Product** When moving the product, never drag it across the floor, as this may cause damage to the joints and the floor.

FABRIC CARE

- To surface clean the fabric, wipe with mild soap and water, dry thoroughly.
- Wipe up any spills immediately and always refer to the care label sewn to the cushion.
- Do not use bleach, acid, solvents or abrasive cleaners on this item.
- Do not scrape the sofa with any sharp tool.

Washing instructions

The cushion covers are removable, we advise following the below instructions to wash them:

- Hand wash, if you wish to machine wash use a gentle cycle
- Wash on a low temperature
- Do not tumble dry
- Air dry, do not place on a radiator

NB: Please be aware repeated washing of the covers will deplete the fire retardancy of the fabric by washing away the protective coating.

charlesbentley.com

Charles Bentley & Son Ltd. Loughborough, LE11 5TP, UK

For EU Enquiries Contact: Authorised Rep Compliance Ltd., Ground Floor, 71 Lower Baggot Street, Dublin, D02 P593, Ireland
www.authorisedrepcompliance.com