

next

BRONX STANDARD BED  
BRONX LIGHT STANDARD BED  
BRONX GREY STANDARD BED  
Assembly instructions

840501

642771

971445

 
**Actual product size**

SMALL DOUBLE H110 x W128 x D200cm

DOUBLE H110 x W143 x D200cm

KING H110 x W158 x D210cm

SUPER KING H110 x W188 x D210cm

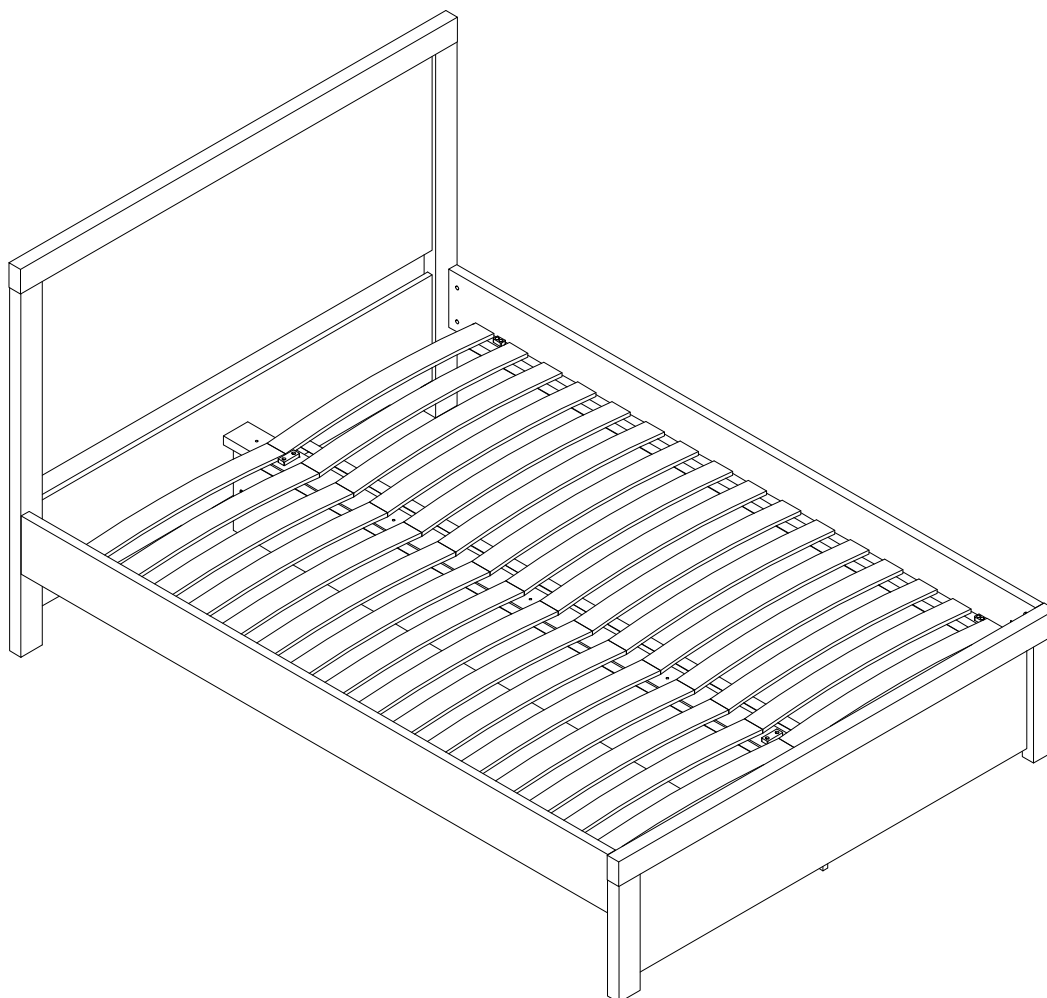

## Need Help?

With: Assembly instructions  
Missing or damages parts

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

**CALL: 0333 777 8999**

 
## BEFORE YOU START

### Number of people required to assemble


Two people are required to assemble this item



### Time to assemble

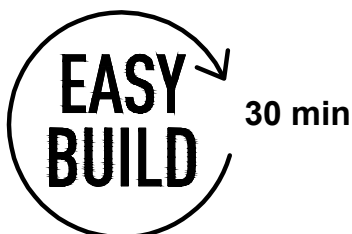

### Tools required

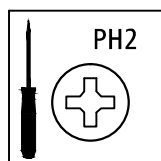 

not supplied

### Do's

We suggest you spend a short time reading through this leaflet before you start

When you are ready to start, make sure that you have the right tools and plenty of space

Unwrap all packaging materials and place the components on a clean surface to protect them from damage, we recommend that the packaging is used to protect the surfaces during assembly

Carefully check that you have all the parts before beginning assembly

Due to the size of the product we recommend that it is assembled in the room intended for use

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing

### Don'ts

Do not drag or pull your furniture

Do not rub or scrub the surface when cleaning

 
Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate











Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster

Do not use this item if any components are missing or damaged.

## GETTING TO KNOW YOUR PRODUCT

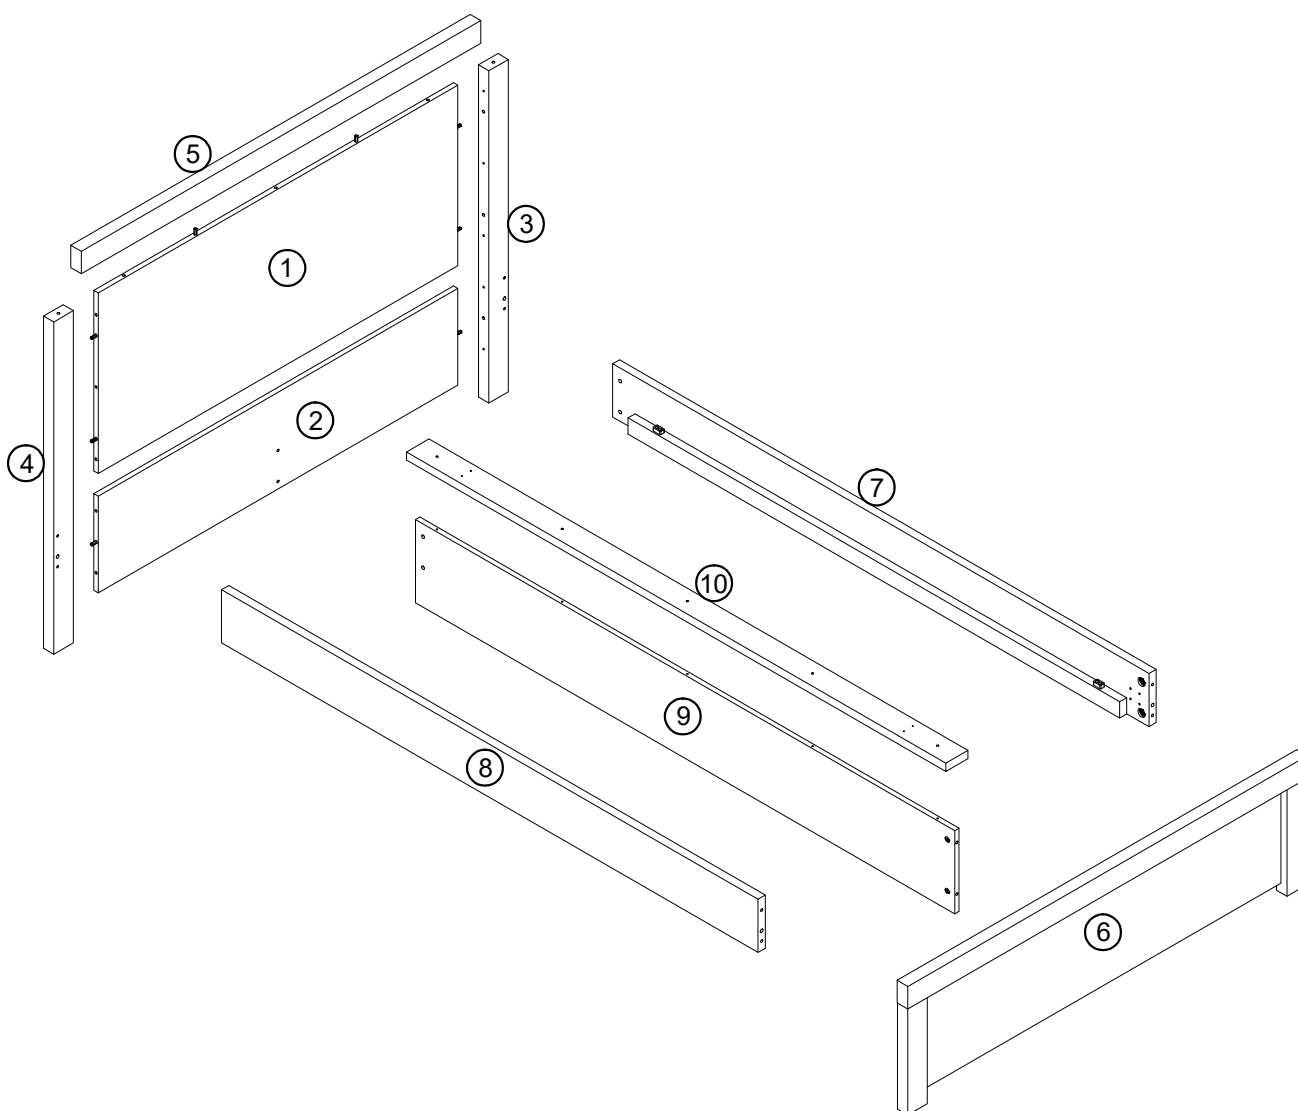


          Components supplied. Please use this guide if you require replacement parts.

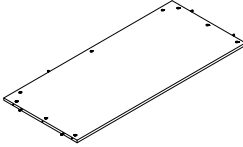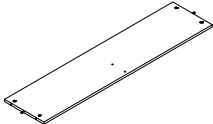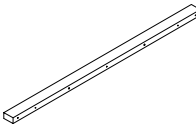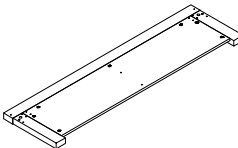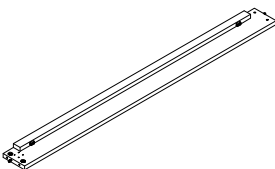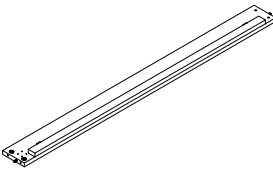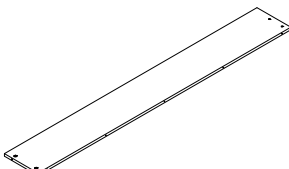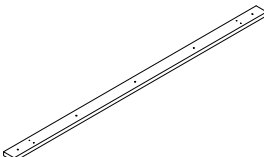Ref	Dimensions	Visual	Qty	Ctn
1	128.7 x 56cm		1	1
2	128.7 x 30cm		1	1
3	103 x 7cm		1	1
4	103 x 7cm		1	1
5	143 x 7cm		1	1
6	143.1 x 40.2cm		1	1
7	192 x 16.5cm		1	1
8	192 x 16.5cm		1	1
9	193 x 25.8cm		1	1
10	193 x 8cm		1	1

Fixtures and fittings  
supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
a	Ø6 x 62mm	6	1
a1	Ø5 x 50mm	5	1
c	Ø7 x 39mm	17	2
c1	Ø7.5 x 34mm	4	1
d	Ø10 x 35mm	N/A	1
d1	Ø8 x 40mm	N/A	1
f	Ø15 x 12mm	N/A	2
f1	Ø25 x 12mm	N/A	1
j	Ø3 x 30mm	8	1
j1	Ø6 x 15mm	16	2
b	Ø4 x 20mm	4	1

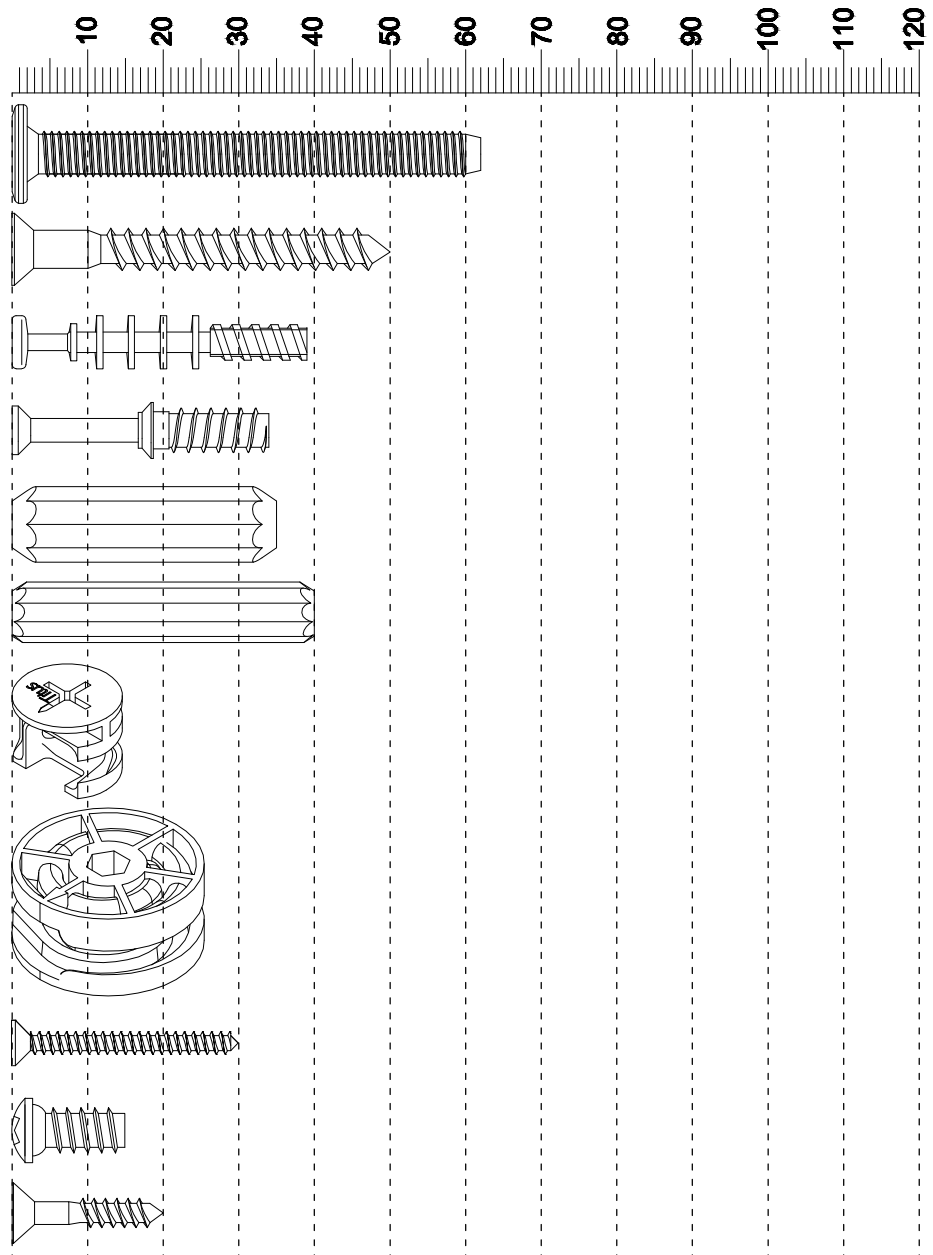 


Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Qty	Spare Qty	Visual
n	N/A	12	N/A	
r	N/A	2	N/A	
v	N/A	1	N/A	
v1	N/A	1	N/A	

Ref	Dimensions	Qty	Spare Qty	Visual
x	N/A	2	N/A	
y	N/A	6	N/A	
z	N/A	2	N/A	


## TITUS TIGHTENING INSTRUCTIONS

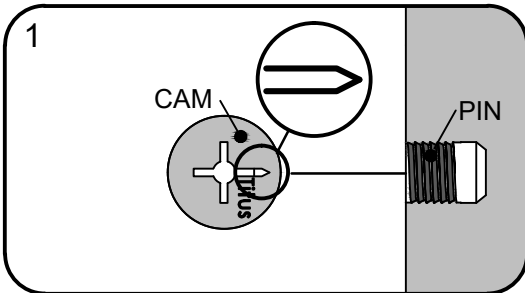 

 
Line up the arrow on the CAM with the PIN.

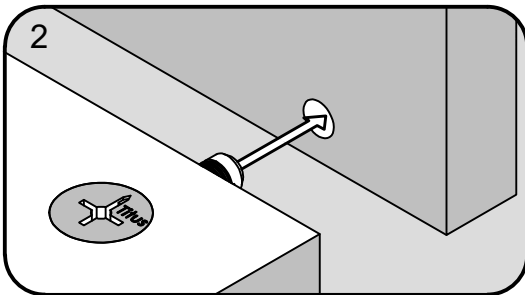

 
Push the pins into the holes in the panel to be joined.

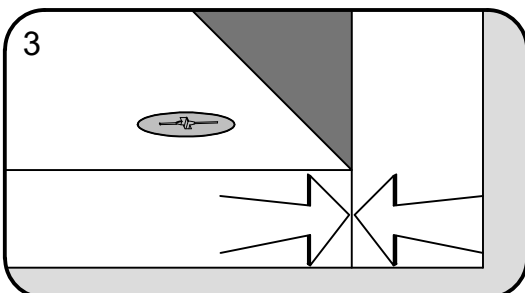

 Make sure there is no gap between the panels.

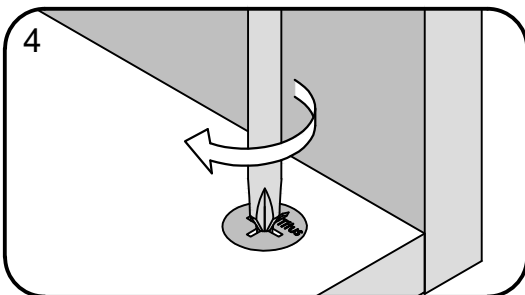


 Use a cross-point screwdriver (PH2 or PZ2 is ideal) to tighten the cams and lock the panels together.


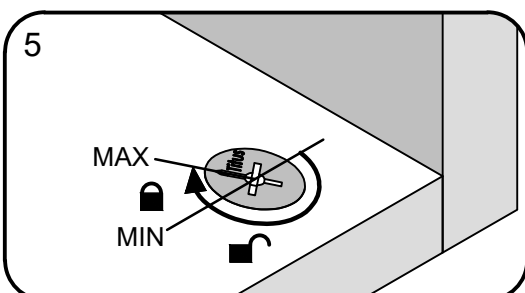


The panels are locked when each cam is turned to between 1/2 and 2/3 of a full turn (Maximum rotation)

 1

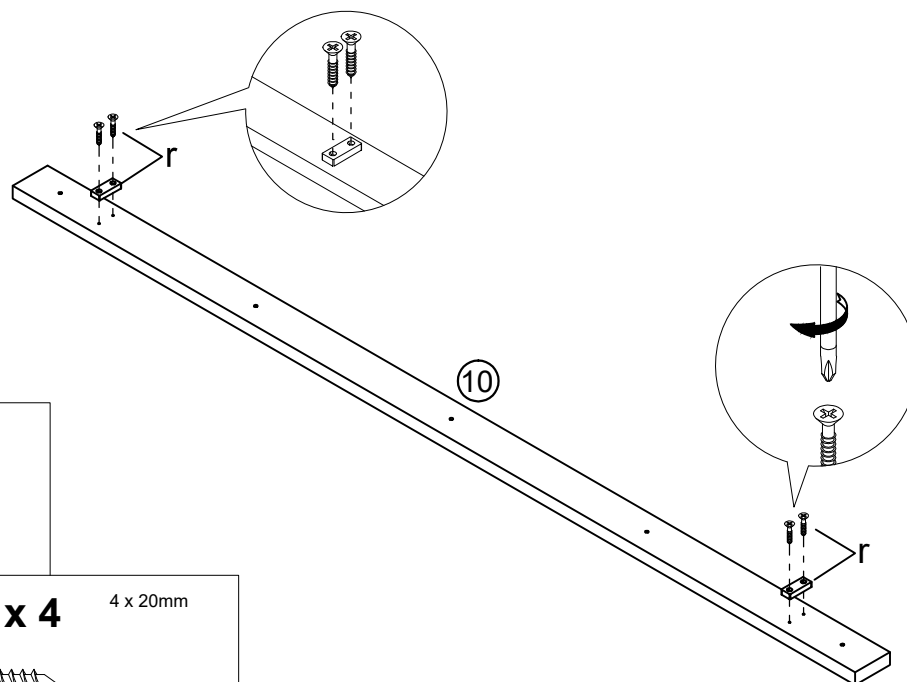


**r x 2**

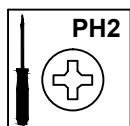  



not supplied

**b x 4**

 4 x 20mm




2

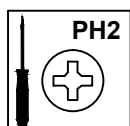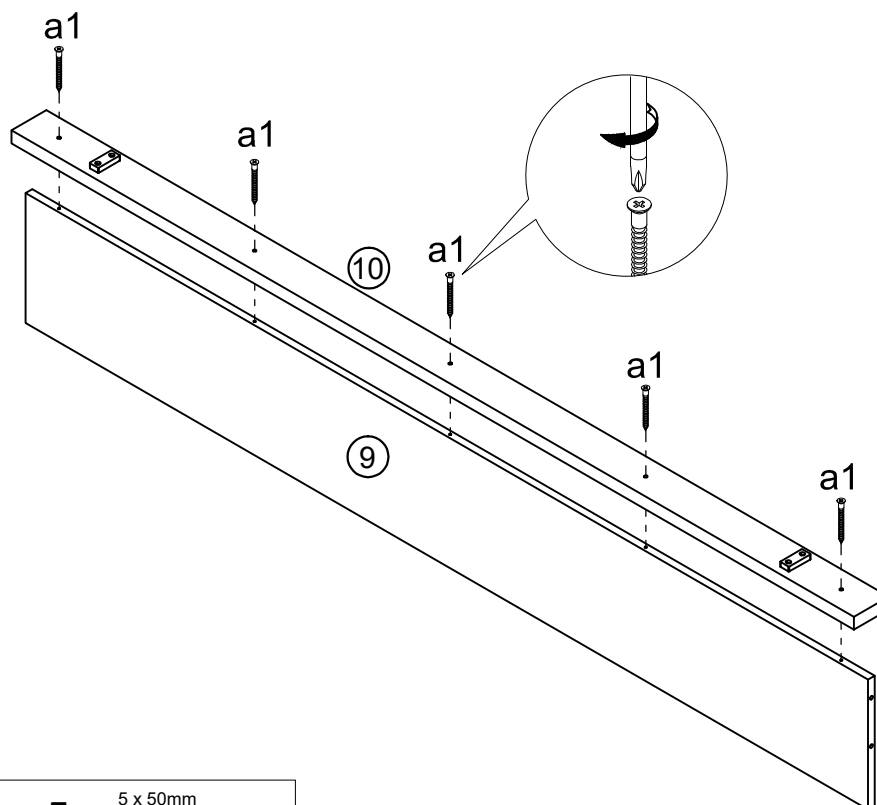  



not supplied

**a1 x 5**

 5 x 50mm



3

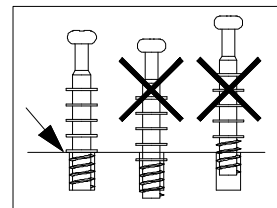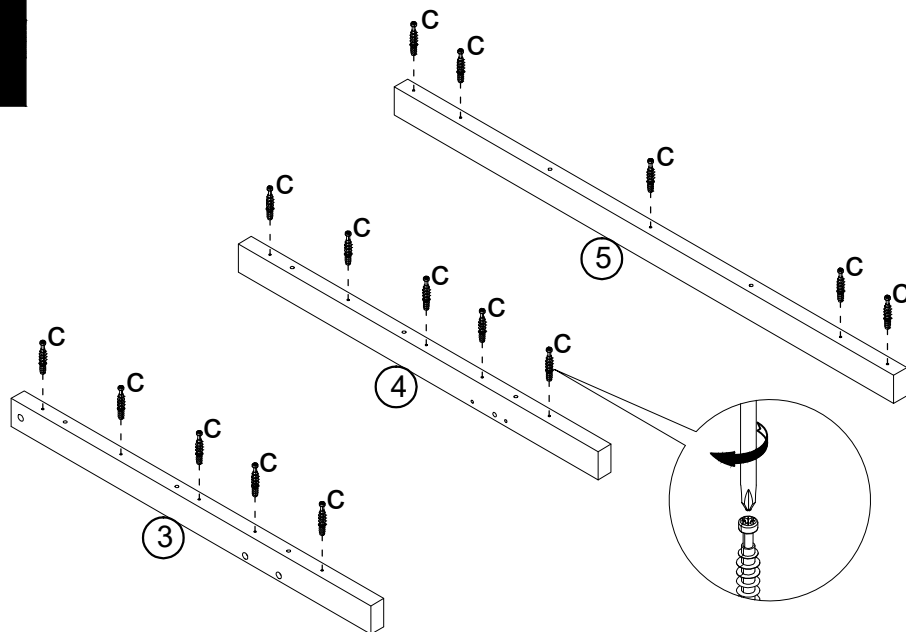  


**c x 15**

7 x 39mm



 4

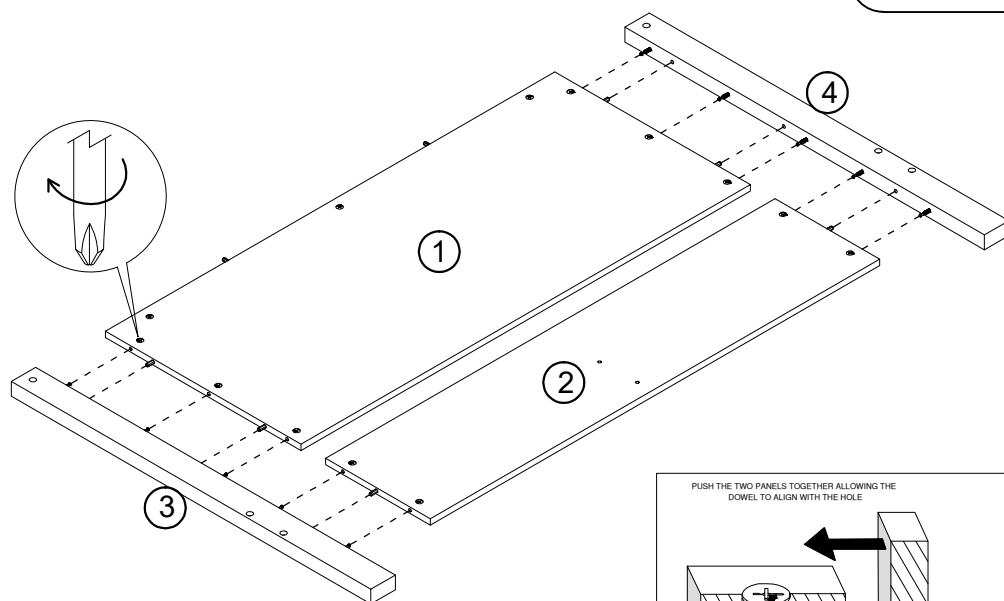

**WHEN TIGHTENING THE CAM**

TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITIONS SHOWN IN THE DIAGRAMS BELOW

 


START




MAXIMUM  
LOCK

PUSH THE TWO PANELS TOGETHER ALLOWING THE DOWEL TO ALIGN WITH THE HOLE

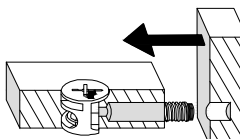


TURN THE CAM IN A CLOCKWISE DIRECTION




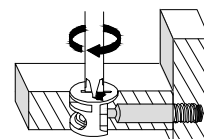 





5

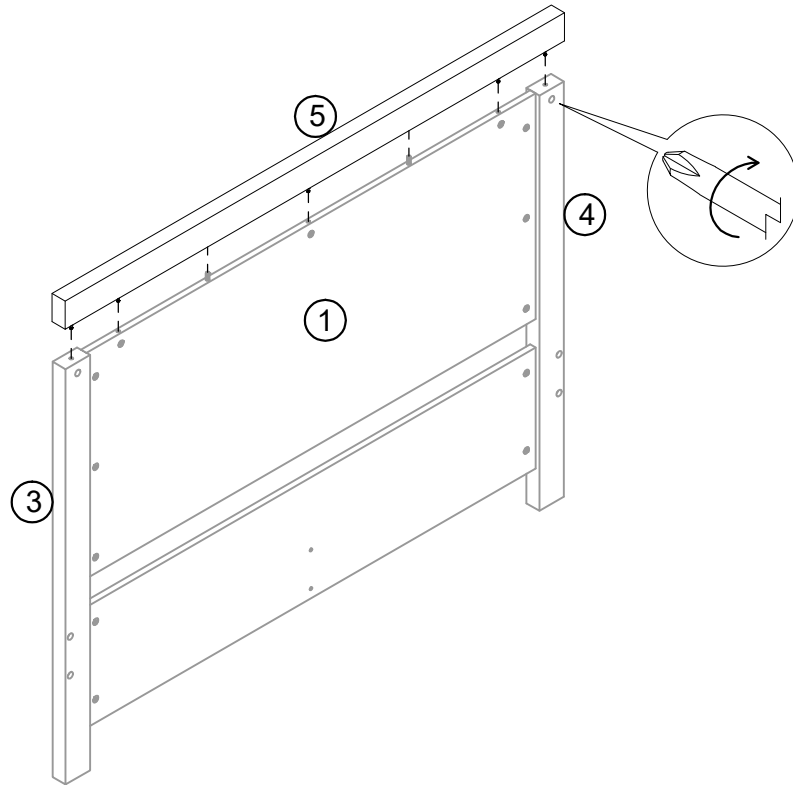 

6

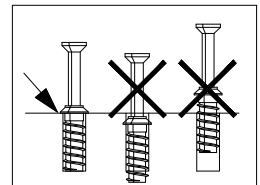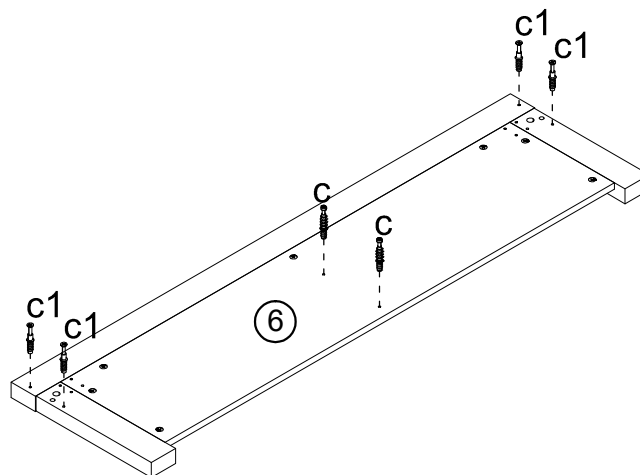    

7

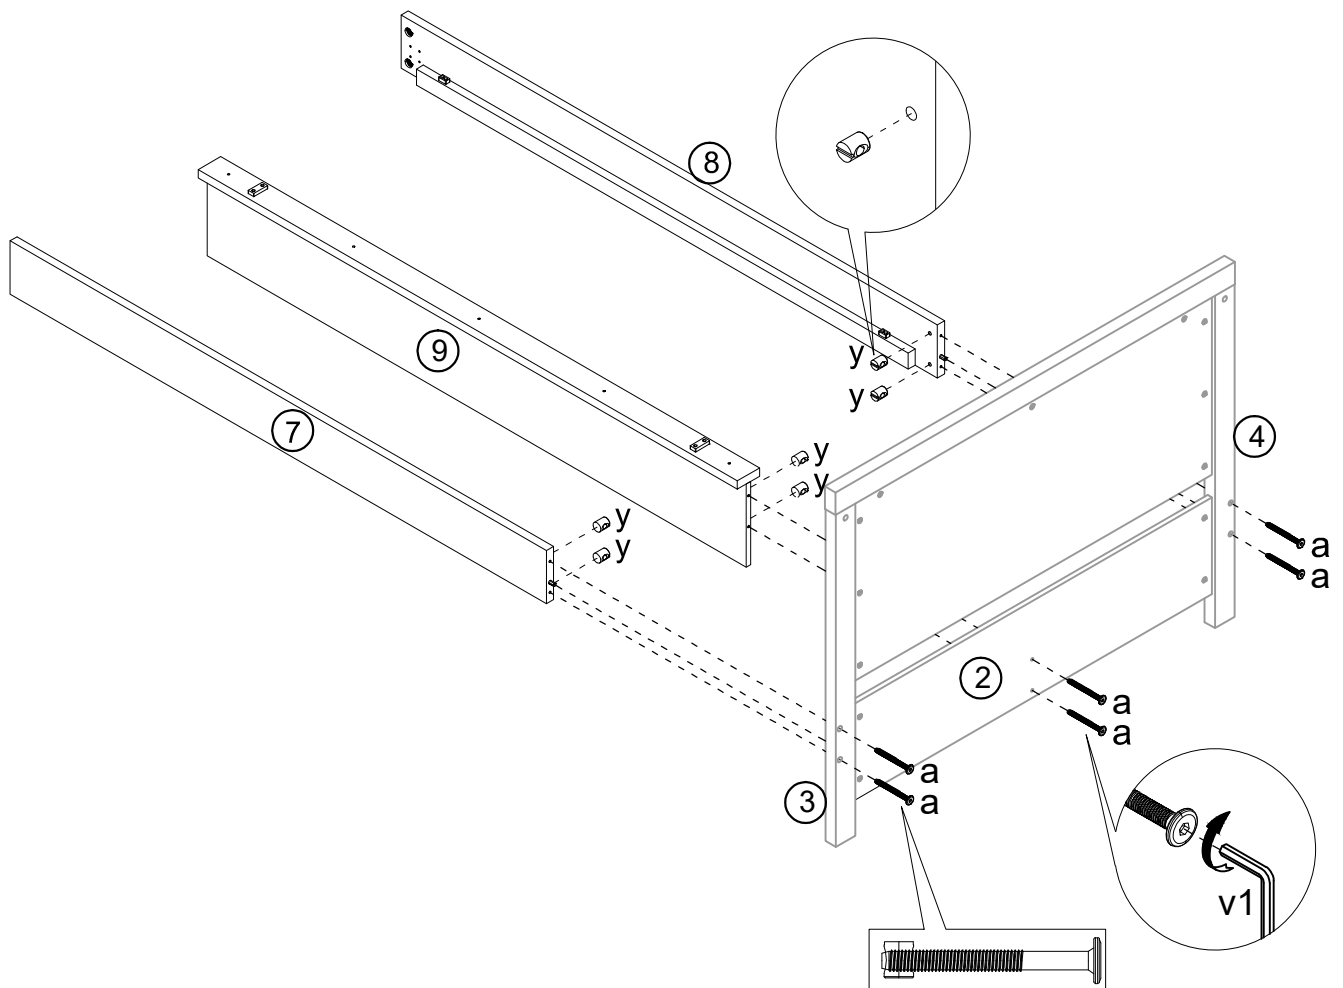 

**y x 6**



 
**v1 x 1**

4mm




**a x 6**


6 x 62mm



supplied

 


8

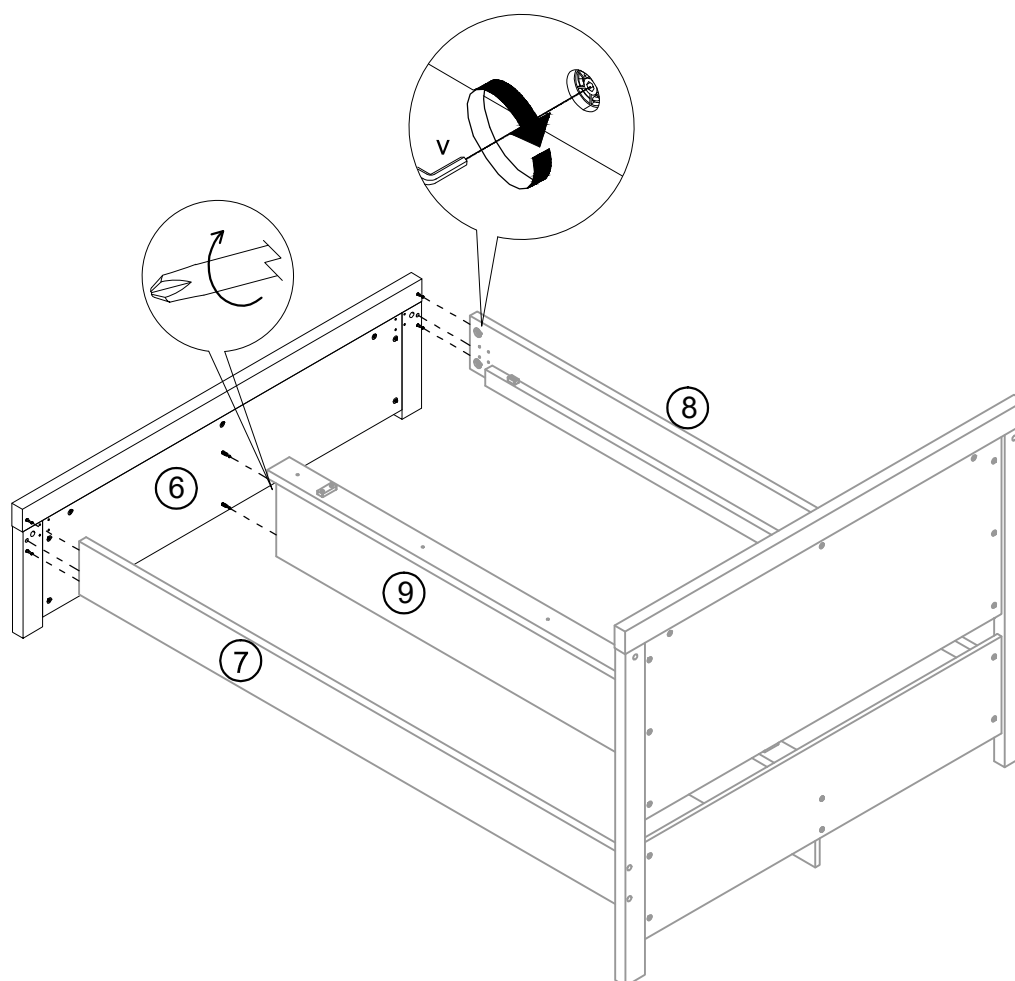 


v x 1


 
5mm



9

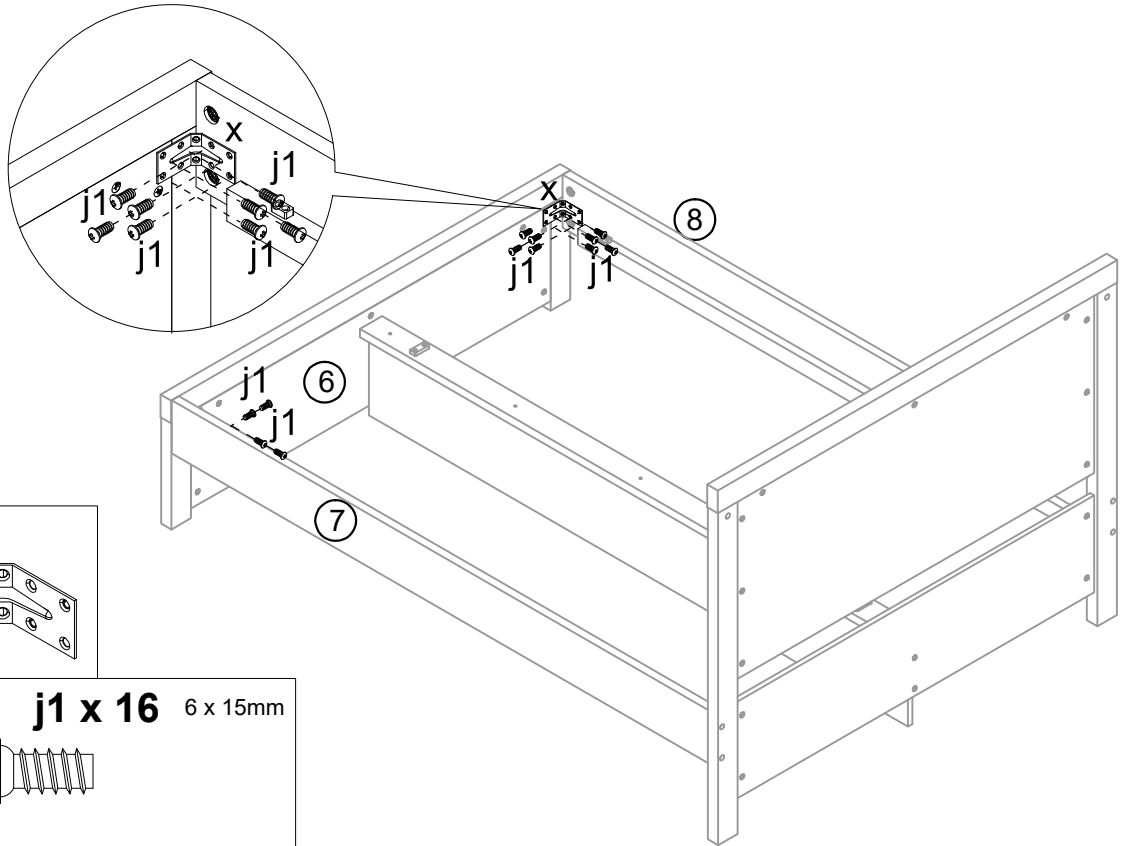 


x x 2

  

PH2



not supplied

 j1 x 16 6 x 15mm




10

 
 
"Clean the surface before affixing the pads, and also stand at least 24hrs after sticking to ensure good adhesion"

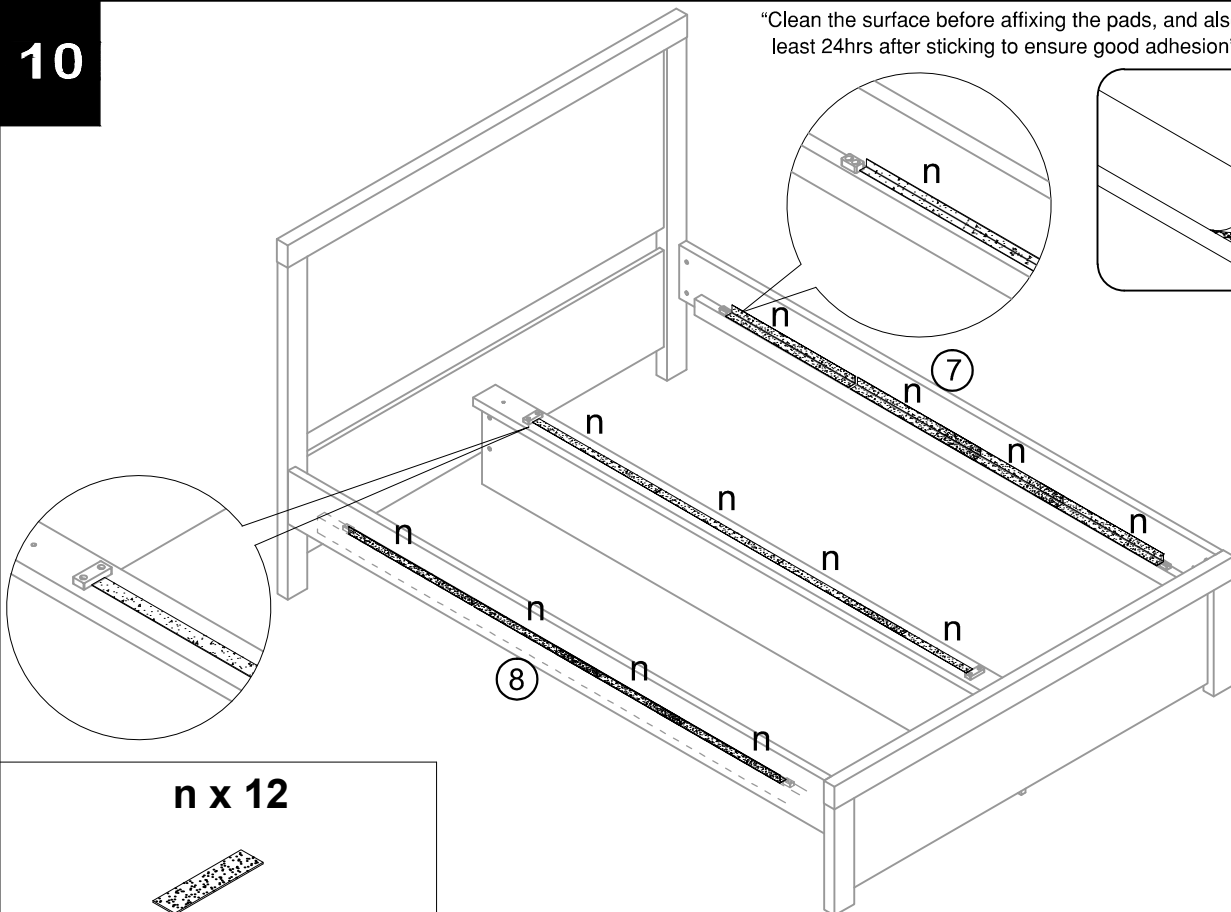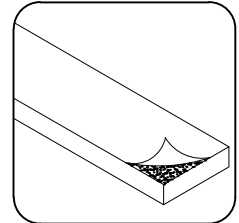



n x 12

 

11

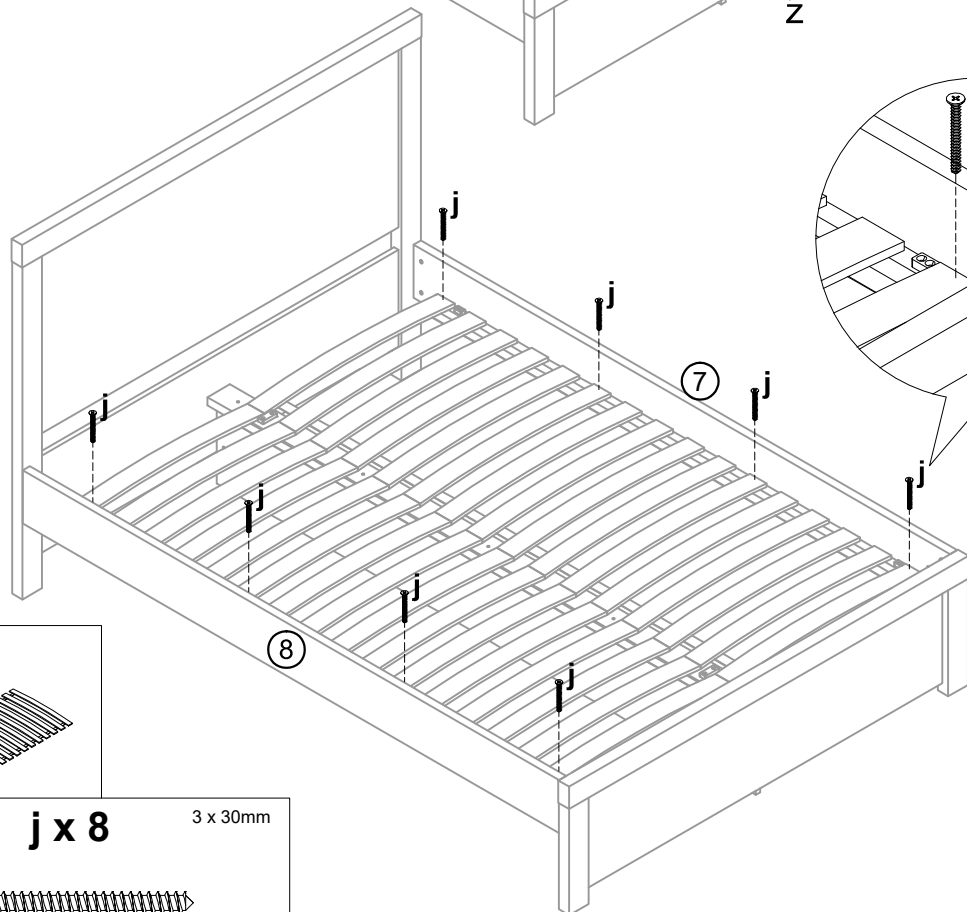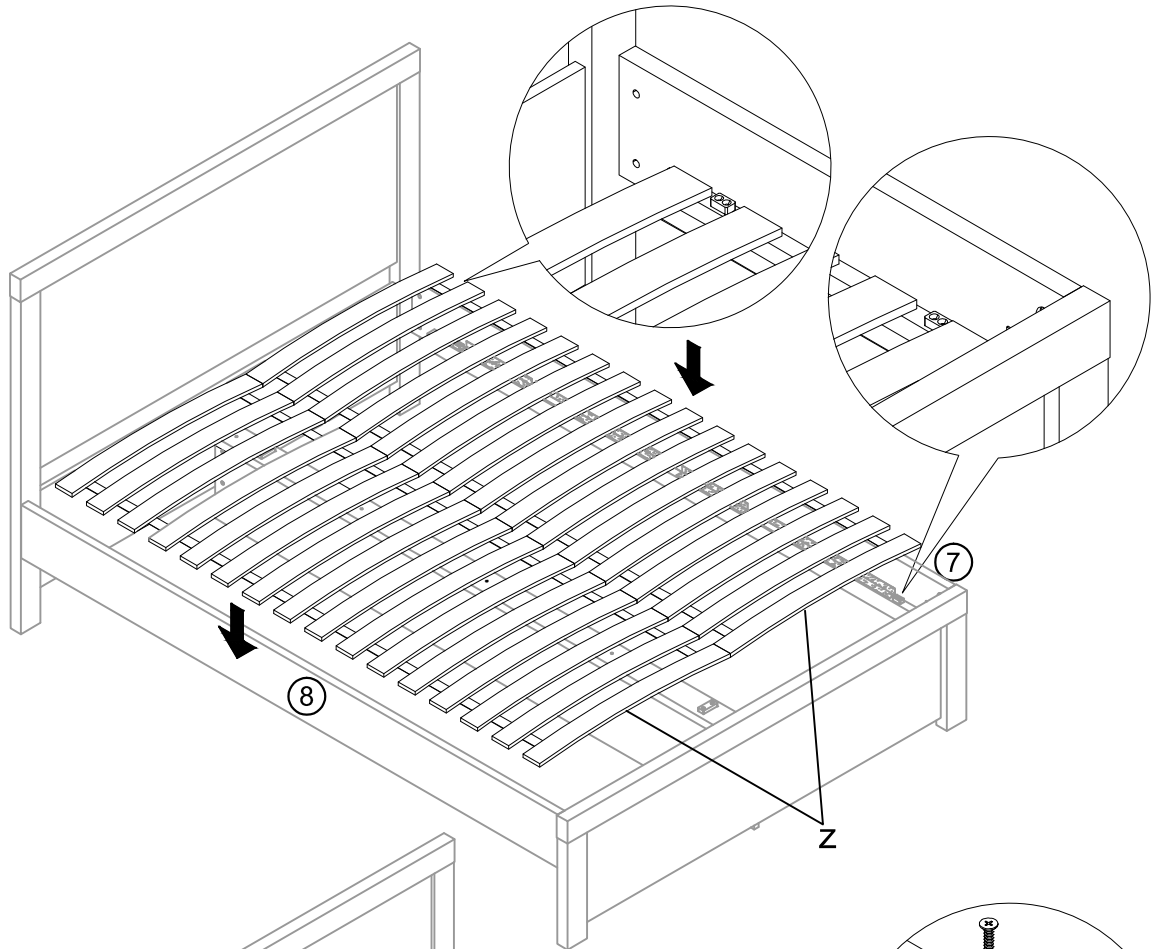  

**z x 2**

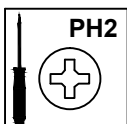  

PH2

**j x 8**

 
3 x 30mm



not supplied

**Actual product size**

SMALL DOUBLE	H110 x W128 x D200cm
DOUBLE	H110 x W143 x D200cm
KING	H110 x W158 x D210cm
SUPER KING	H110 x W188 x D210cm

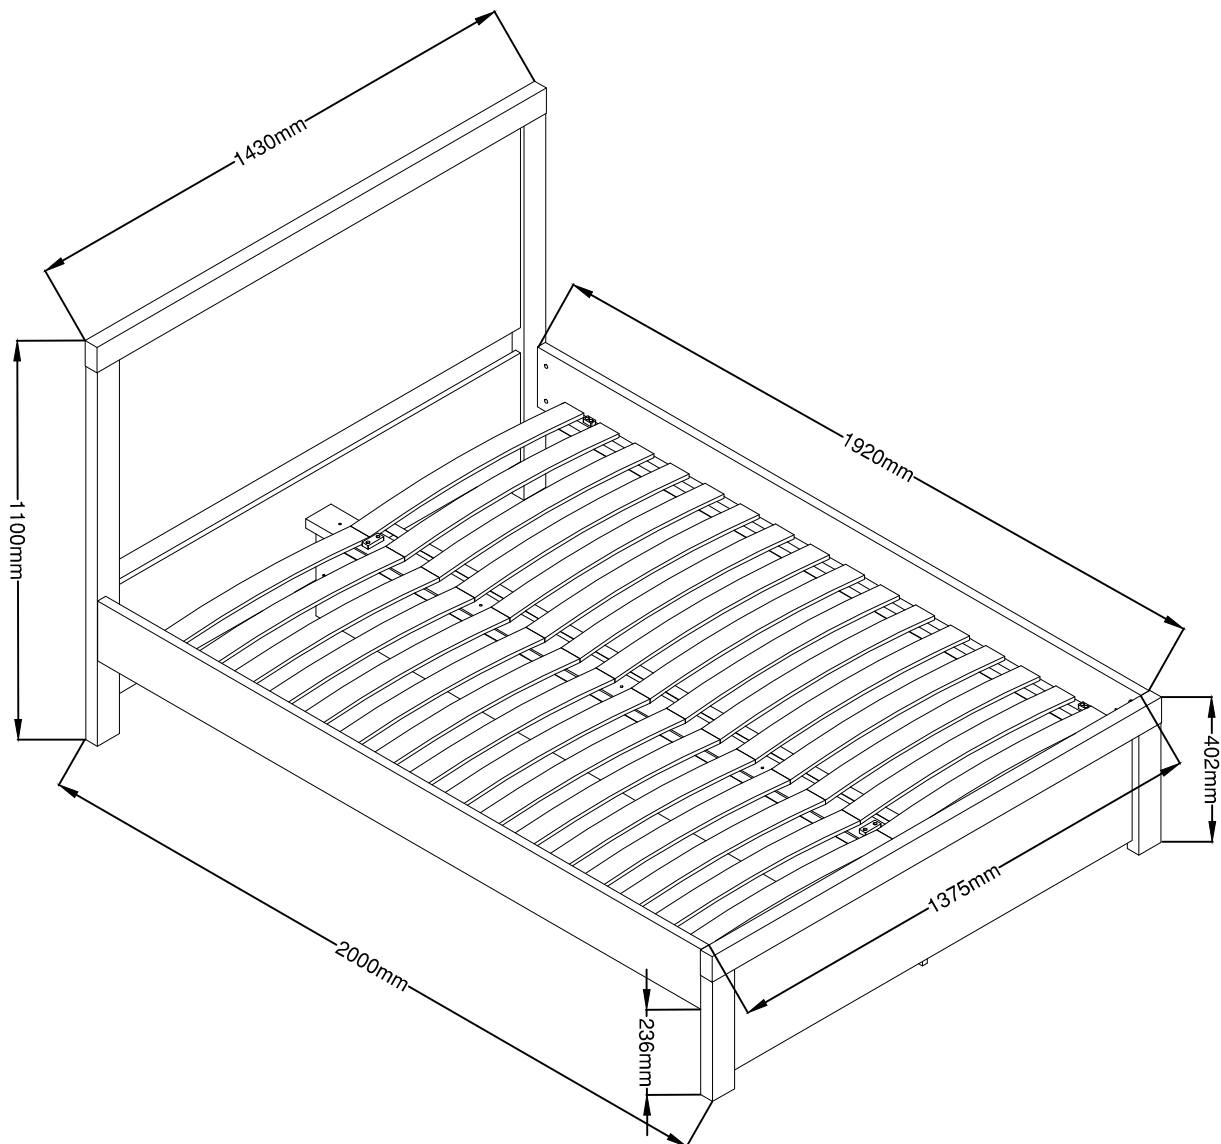

## Warnings

We suggest you retain these instructions for future reference.

Assembly to be carried out by a competent adult only.

Keep fittings out of children's reach and keep children well away from construction area.

During assembly children should be kept away from the product due to possible risk of injury.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

## Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

## Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

## You can write to us at

Home Customer Service  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)