

NEXT

 
BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936

Assembly instructions

Actual product size

H160 x W50x D50cm

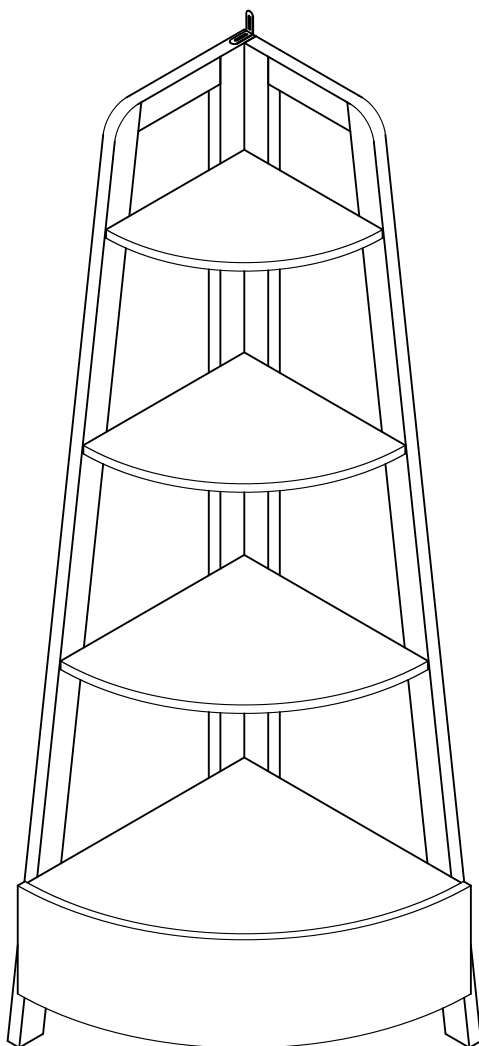

Need Help ?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

Produced in China for Next Retail Ltd.

217201 / 255104 / 550779 / C06482 / 943936-2024-V1.

NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936

Assembly instructions

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

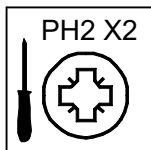

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

 
NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936

Assembly instructions

GETTING TO KNOW YOUR PRODUCT

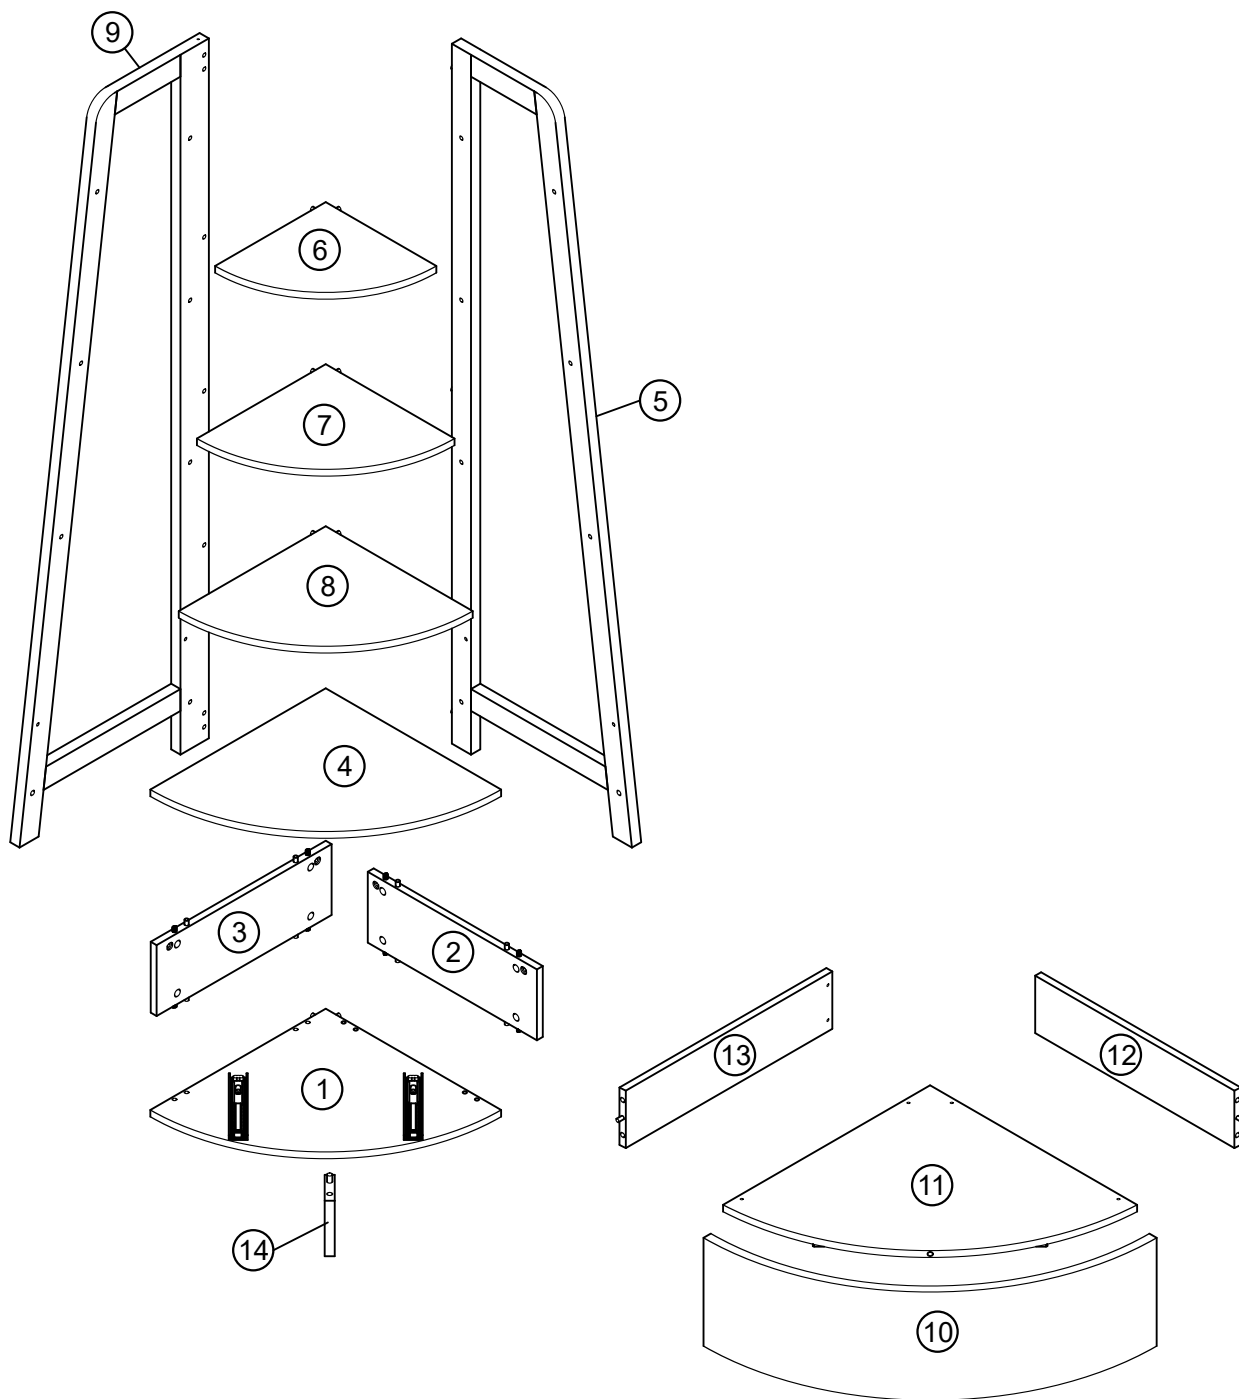










NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936


Assembly instructions

         Components supplied. Please use this guide if you require replacement parts.


Ref	Dimensions	Visual	Qty	Ctn
1	46 x 46cm		1	1
2	16 x 45cm		1	1
3	16 x 46cm		1	1
4	46 x 46cm		1	1
5	48 x 160cm		1	1
6	29 x 29cm		1	1
7	34 x 34cm		1	1
8	39 x 39cm		1	1
9	50 x 160cm		1	1
10	20 x 68cm		1	1
11	44 x 44cm		1	1
12	11 x 42cm		1	1
13	11 x 44cm		1	1
14	7 x 10cm		1	1

NEXT

 
TITUS TIGHTENING INSTRUCTIONS

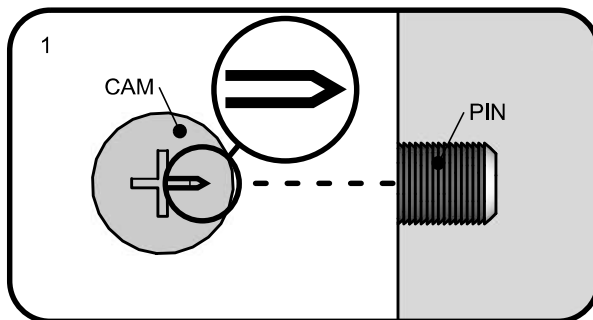

 
Line up the arrow on the CAM with the PIN.

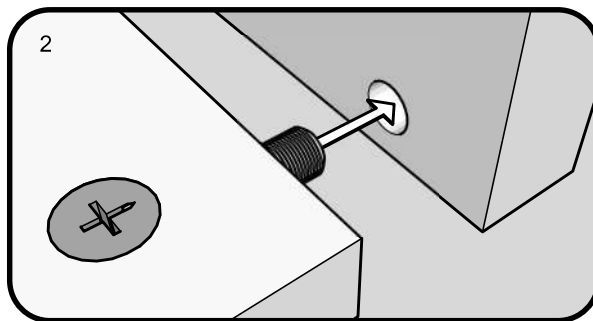

 
Push the pins into the holes in the panel to be joined.

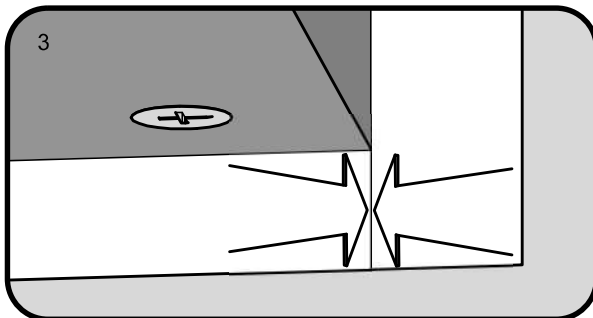

 Make sure there is no gap between the panels.

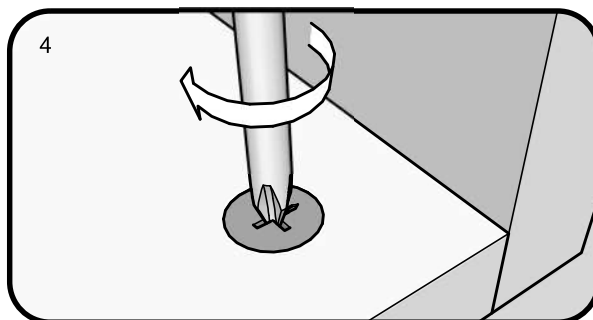

 Use a cross-point screwdriver (PH2 or PZ2 is ideal) to tighten the cams and lock the panels together.

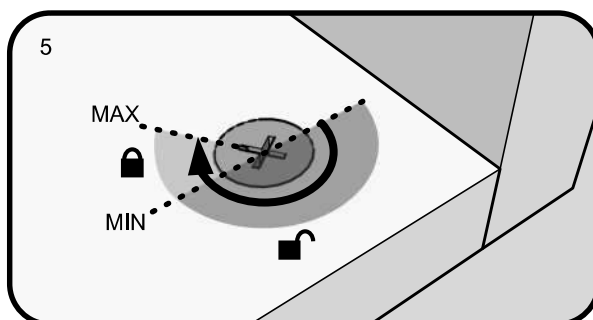

The panels are locked when each cam is turned to between 1/2 and 2/3 of a full turn (Maximum rotation)

NEXT


BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936

Assembly instructions

**Fixtures and fittings
supplied (actual size)**

Ref	Dimensions	Qty	Spare Qty
B2	Ø15 x 10mm	5	1
B3	Ø15 x 12mm	13	2
B8	Ø8 x 38mm	N/A	1
D3	Ø6 x 30mm	N/A	1
D6	Ø8 x 30mm	N/A	2
V47	Ø6 x 25mm	4	1
U154	Ø4 x 32mm	6	1
B12	Ø7.5 x 33mm	18	2
S41	Ø4x 16mm	1	1

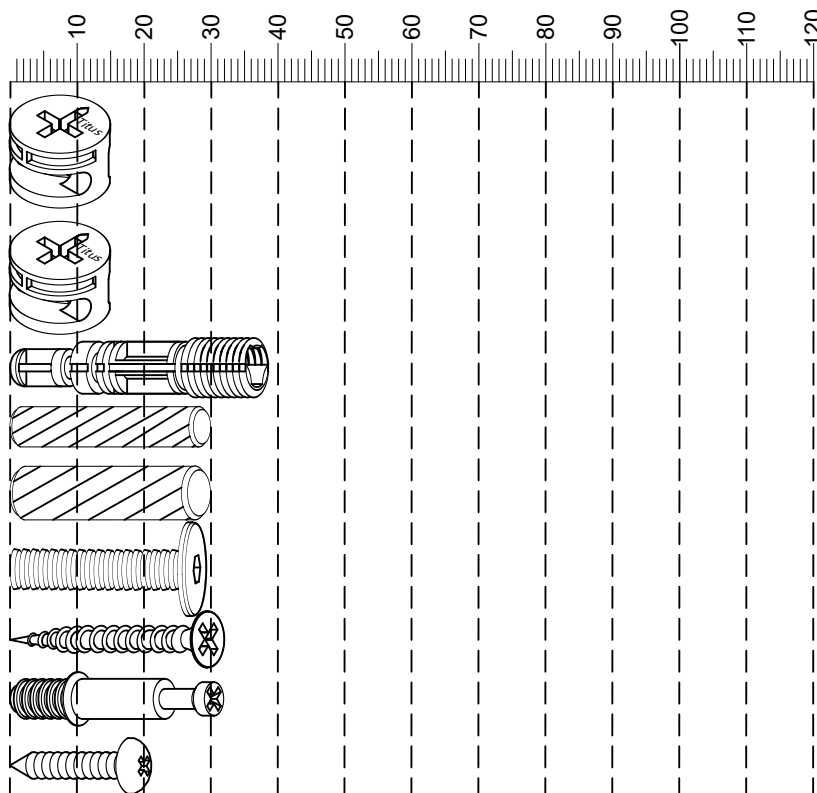 


Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Qty	Spare Qty	Visual
T4	N/A	2	N/A	
N1	N/A	1	N/A	
O1	21mm	4	1	
O2	21mm	4	1	

NEXT


BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER
217201 / 255104 / 550779 / C06482 / 943936
Assembly instructions

  1

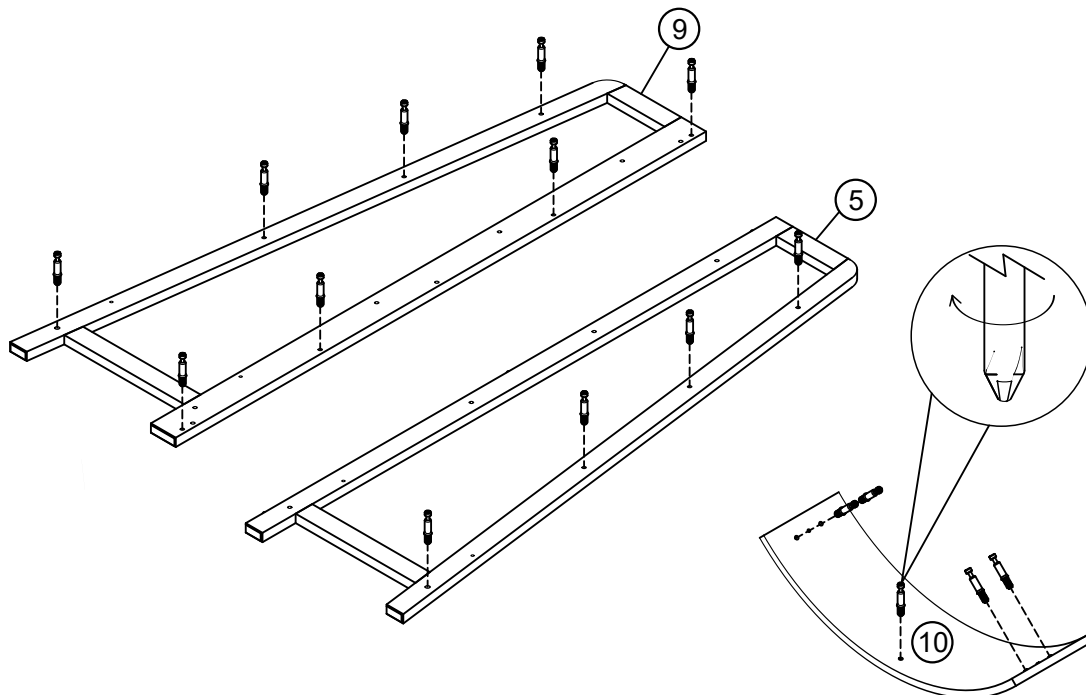

B12	Ø7.5 x 33mm	17	  not supplied
-----	-------------	----	---

 2

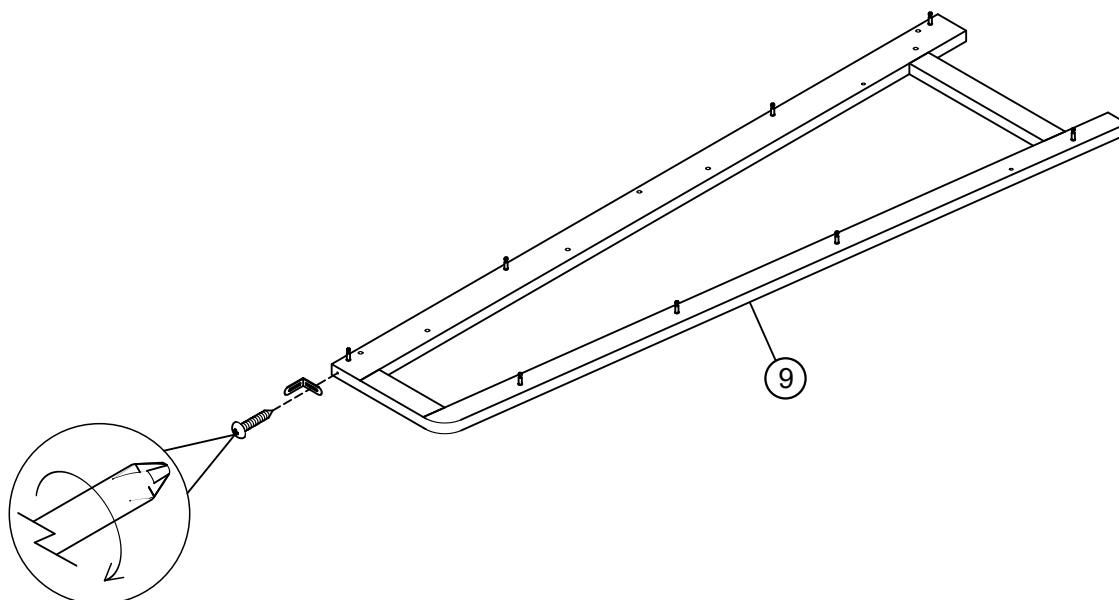

S41	Ø4x 16mm	1	  not supplied
N1	N/A	1	

NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

 
217201 / 255104 / 550779 / C06482 / 943936

Assembly instructions


3

DON'T STOP UNTIL THE 2 O'CLOCK LOCK


TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE
ARROW POINTS IN THE POSITIONS SHOWN IN THE
DIAGRAMS BELOW

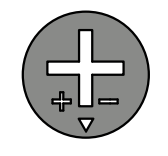


START

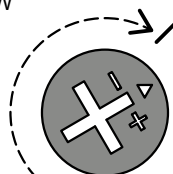 


CORRECT
LOCK

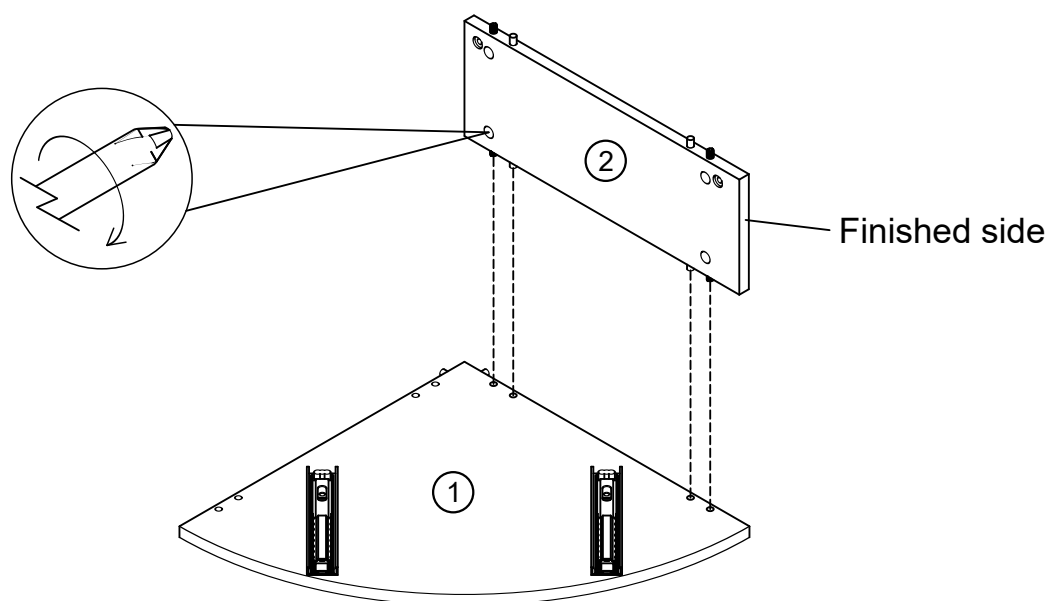 

 PUSH THE TWO PANELS TOGETHER ALLOWING THE
DOWEL TO ALIGN WITH THE HOLE

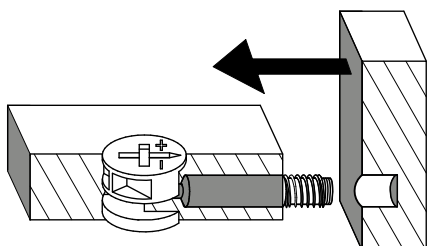

TURN THE CAM IN A CLOCKWISE DIRECTION

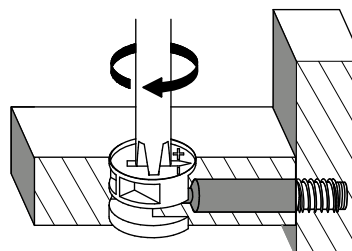 


NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER


217201 / 255104 / 550779 / C06482 / 943936

Assembly instructions

 4

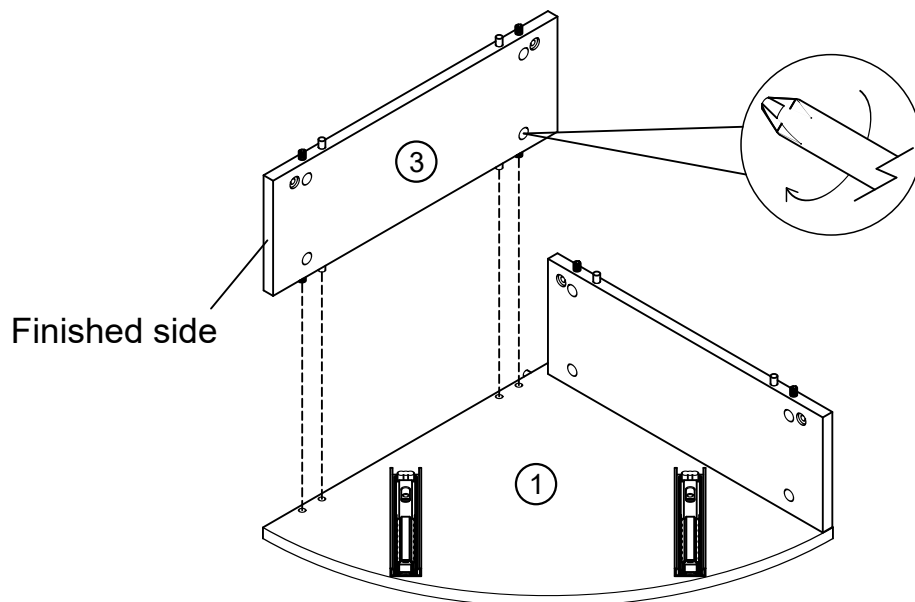

5

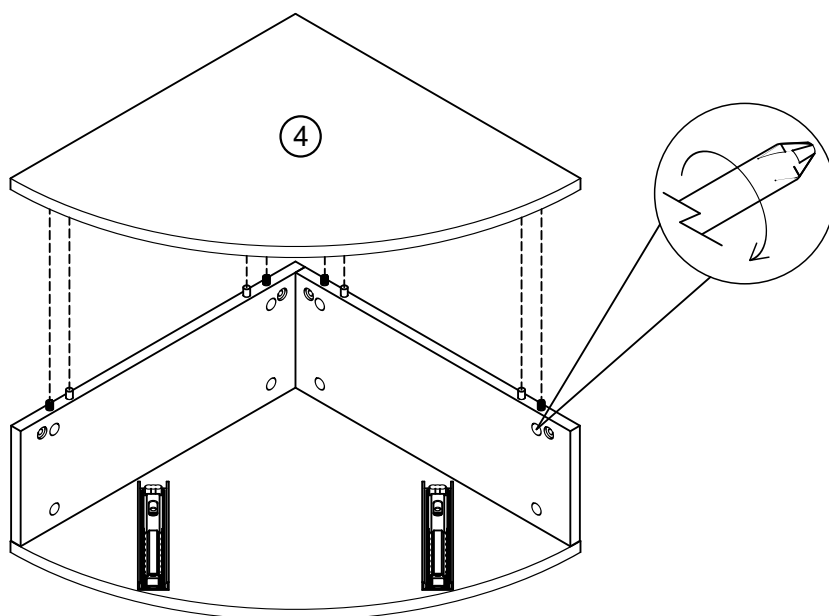 


NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936


Assembly instructions

 6

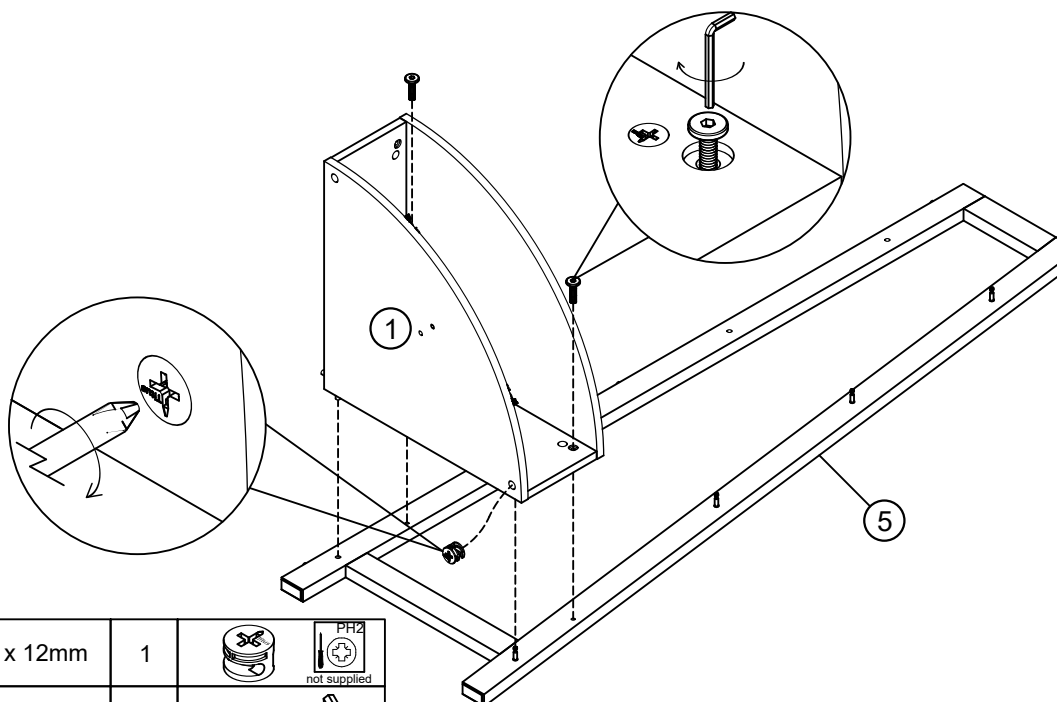

B3	Ø15 x 12mm	1	  not supplied
T4	N/A	2	
V47	Ø6 x 25mm	2	

 7

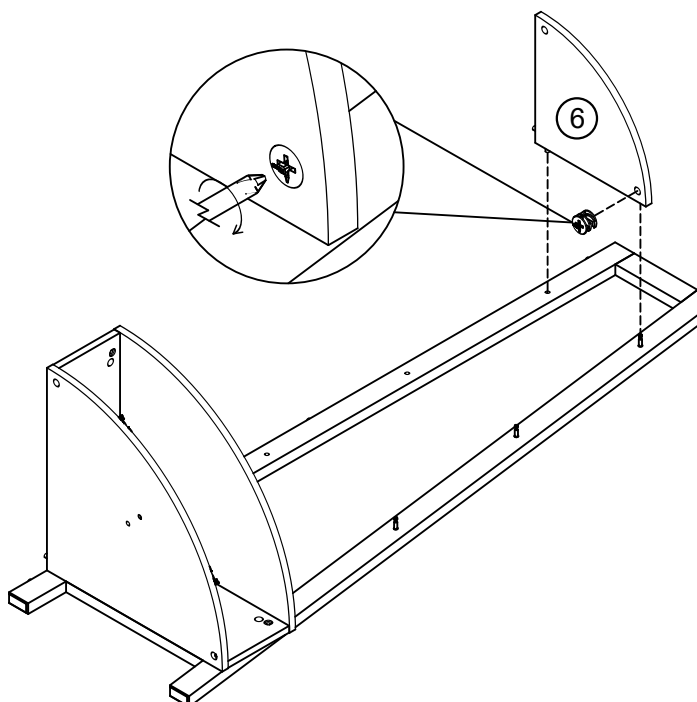

B3	Ø15 x 12mm	1	  not supplied
----	------------	---	---

 
NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936

Assembly instructions

8

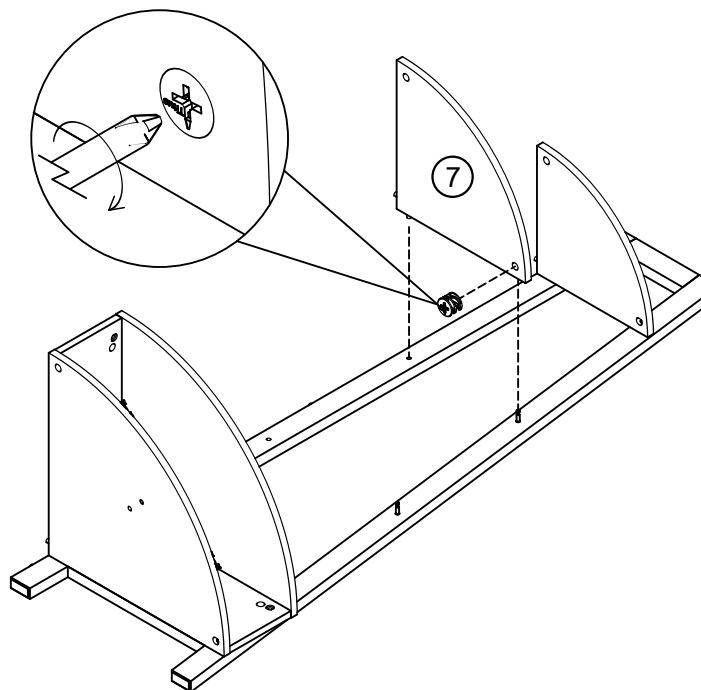

B3

 
Ø15 x 12mm

1



not supplied

9

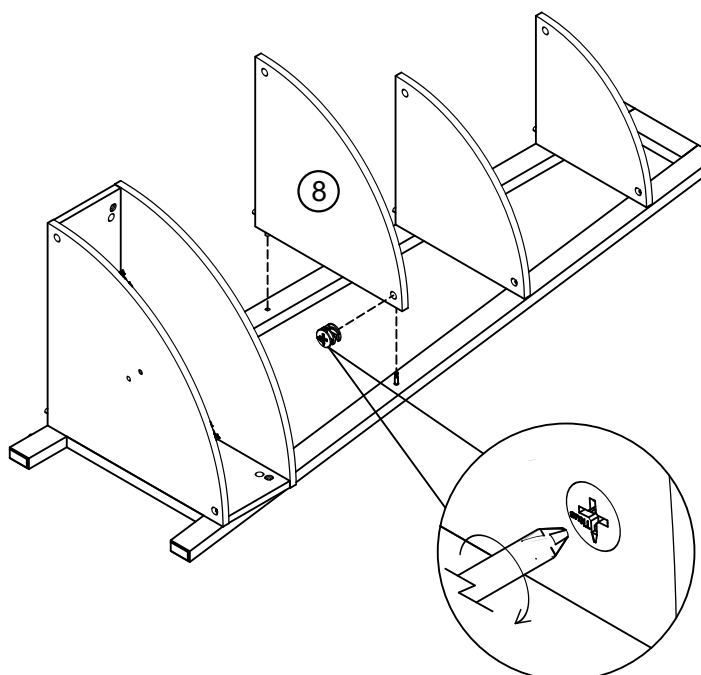

B3

Ø15 x 12mm

1



not supplied

 
NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936


Assembly instructions


10

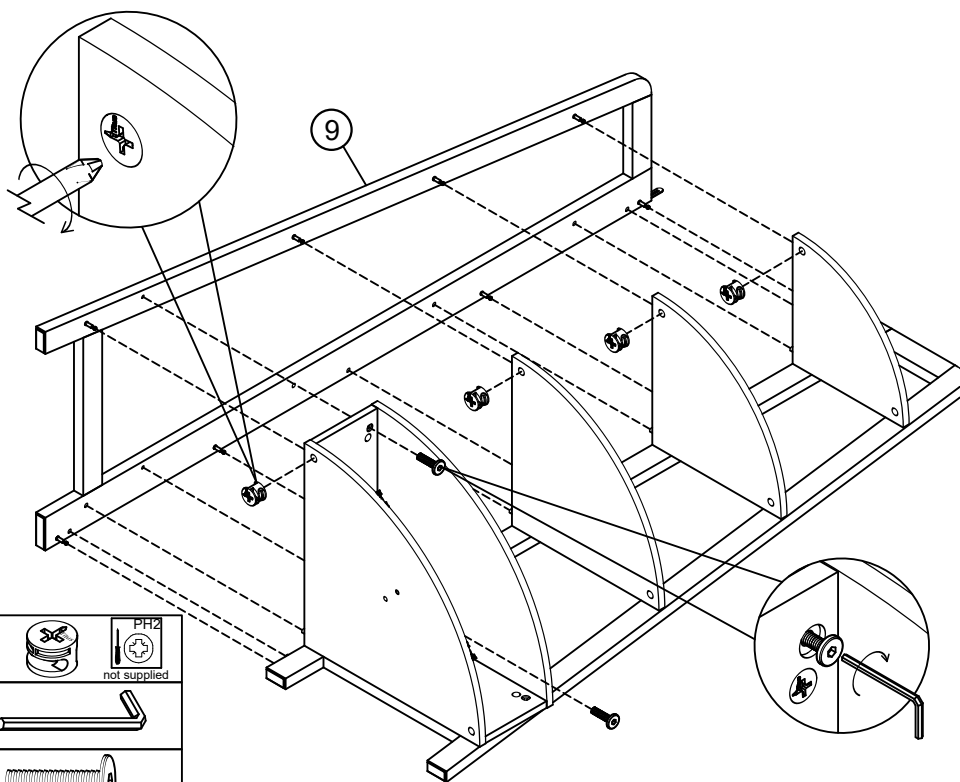

B3	Ø15 x 12mm	4	  not supplied
T4	N/A	2	
V47	Ø6 x 25mm	2	

  11

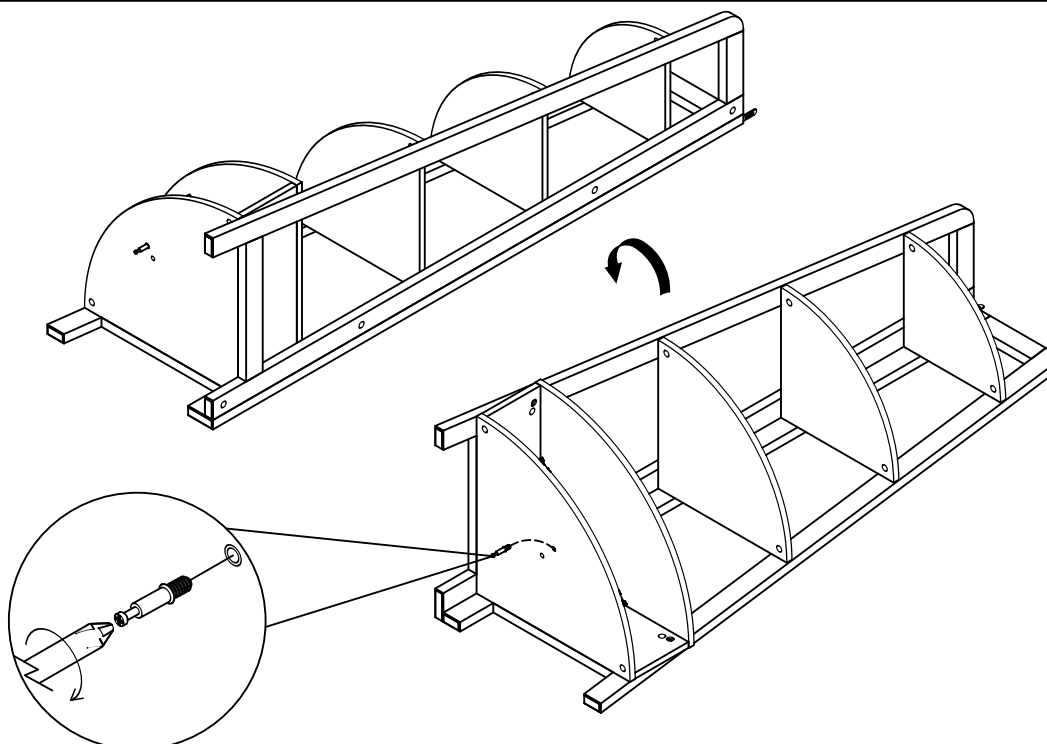


B12	Ø7.5 x 33mm	1	  not supplied
-----	-------------	---	---

NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER
217201 / 255104 / 550779 / C06482 / 943936
Assembly instructions

 12

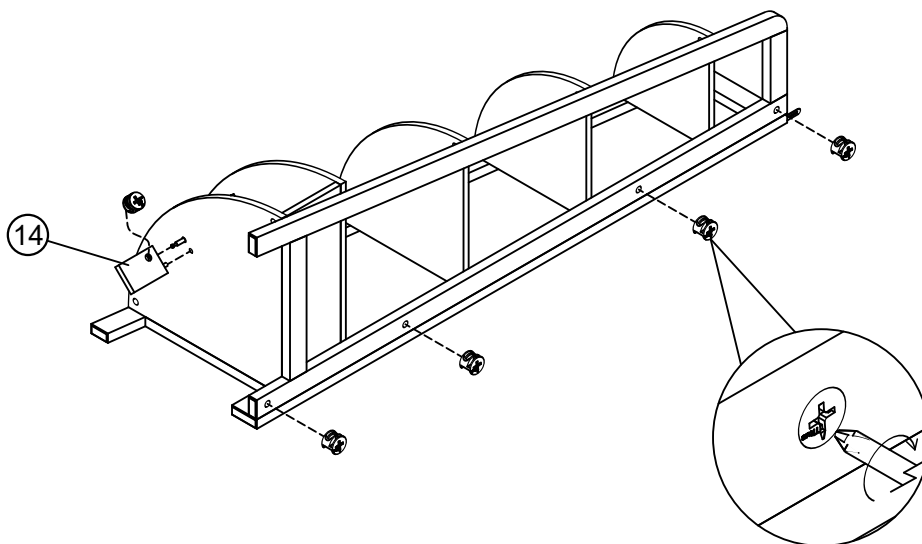


B3

Ø15 x 12mm

5



 13

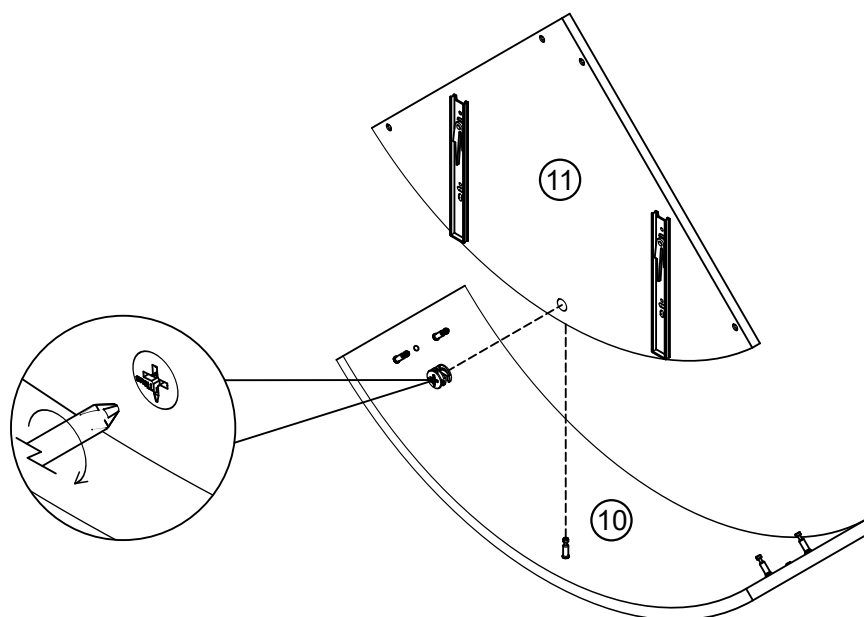

B2

Ø15 x 10mm

1



 
NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936

Assembly instructions

14

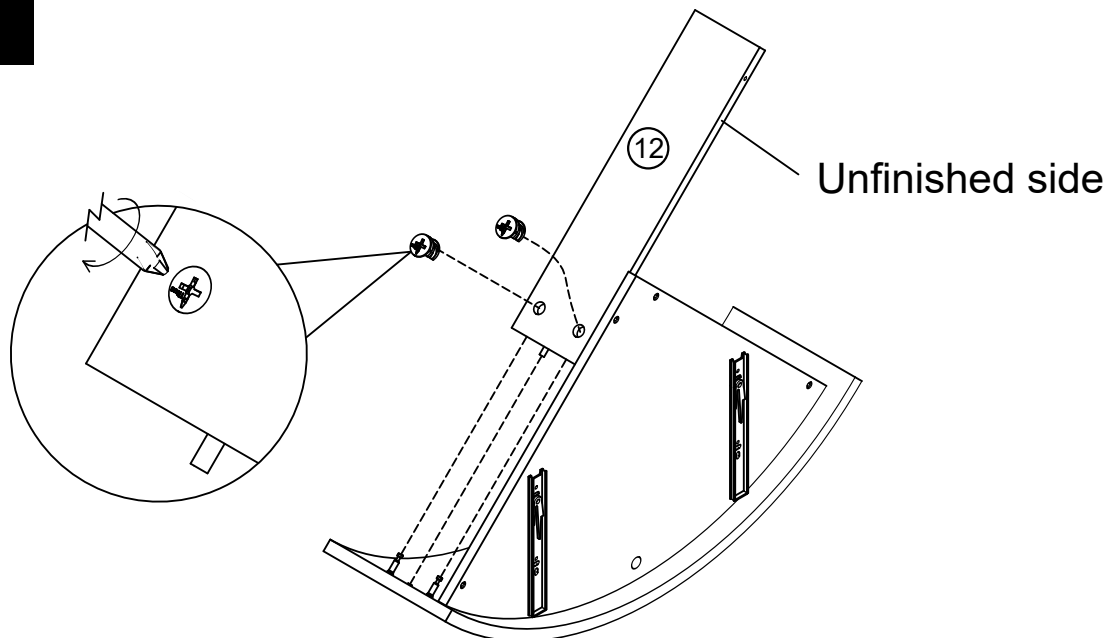

B2

 
Ø15 x 10mm

2



not supplied

15

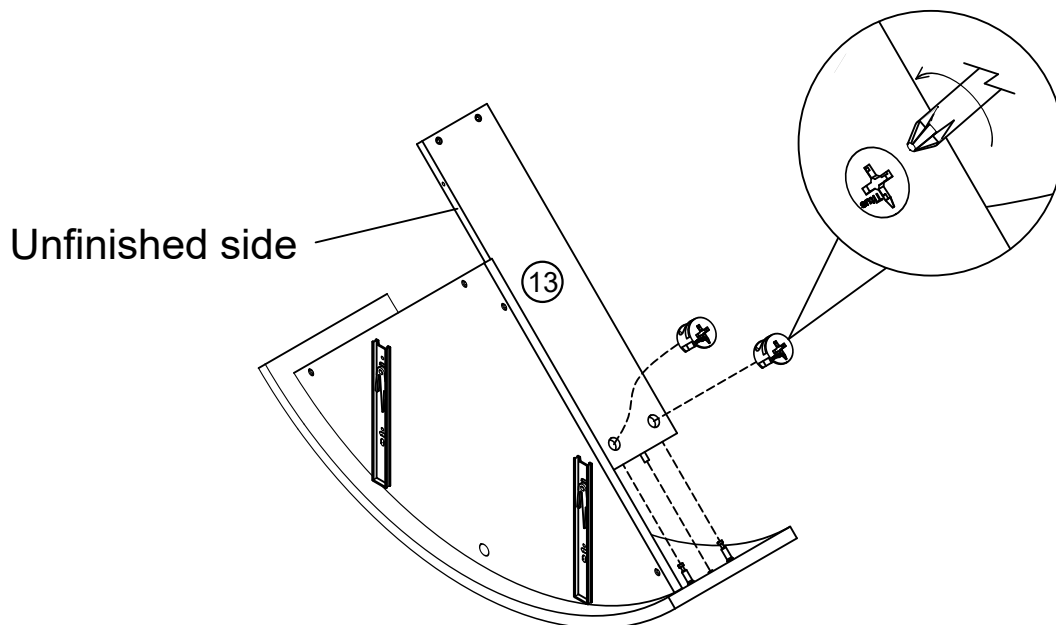

B2

Ø15 x 10mm

2

 


not supplied

NEXT


BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER
217201 / 255104 / 550779 / C06482 / 943936
Assembly instructions

16

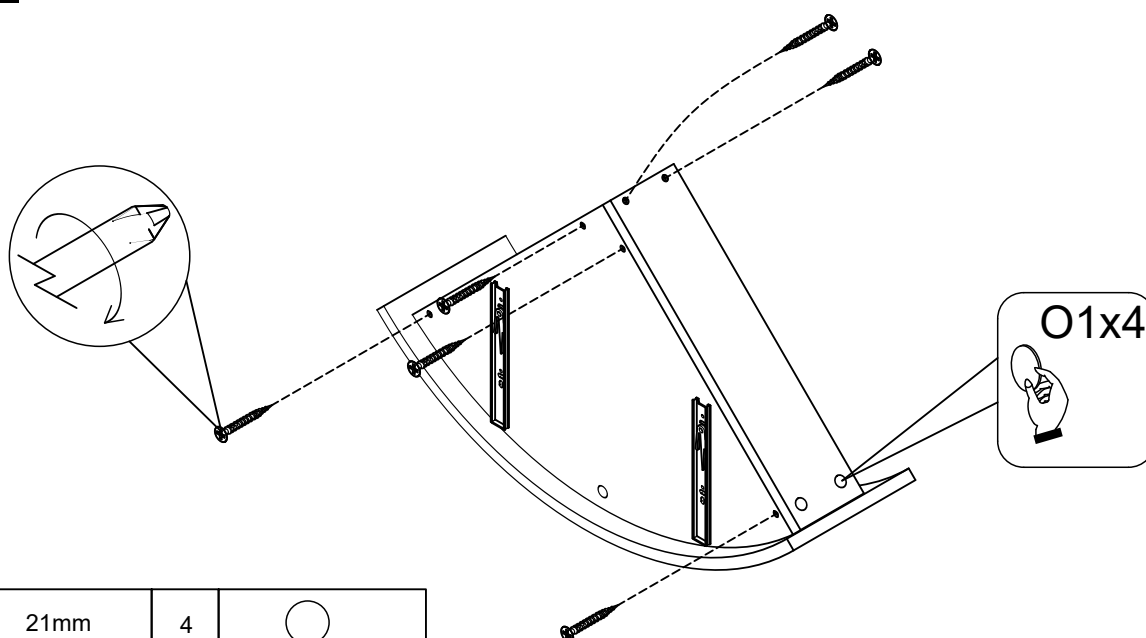

O1	21mm	4	
U154	Ø4 x 32mm	6	

 17

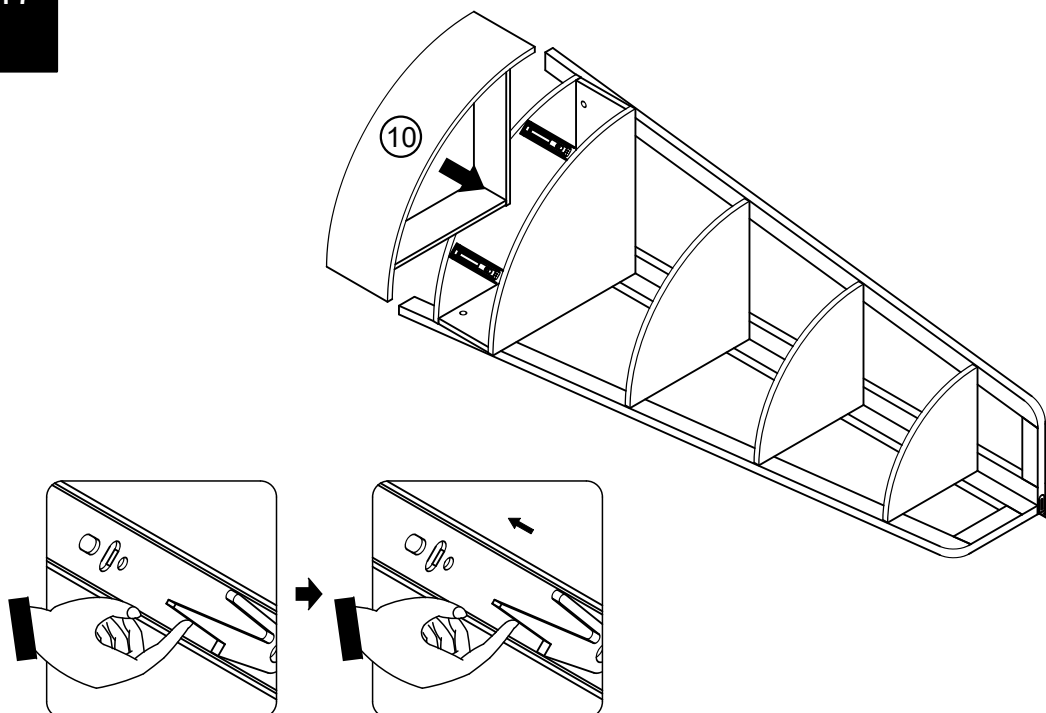


NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936

Assembly instructions

 18

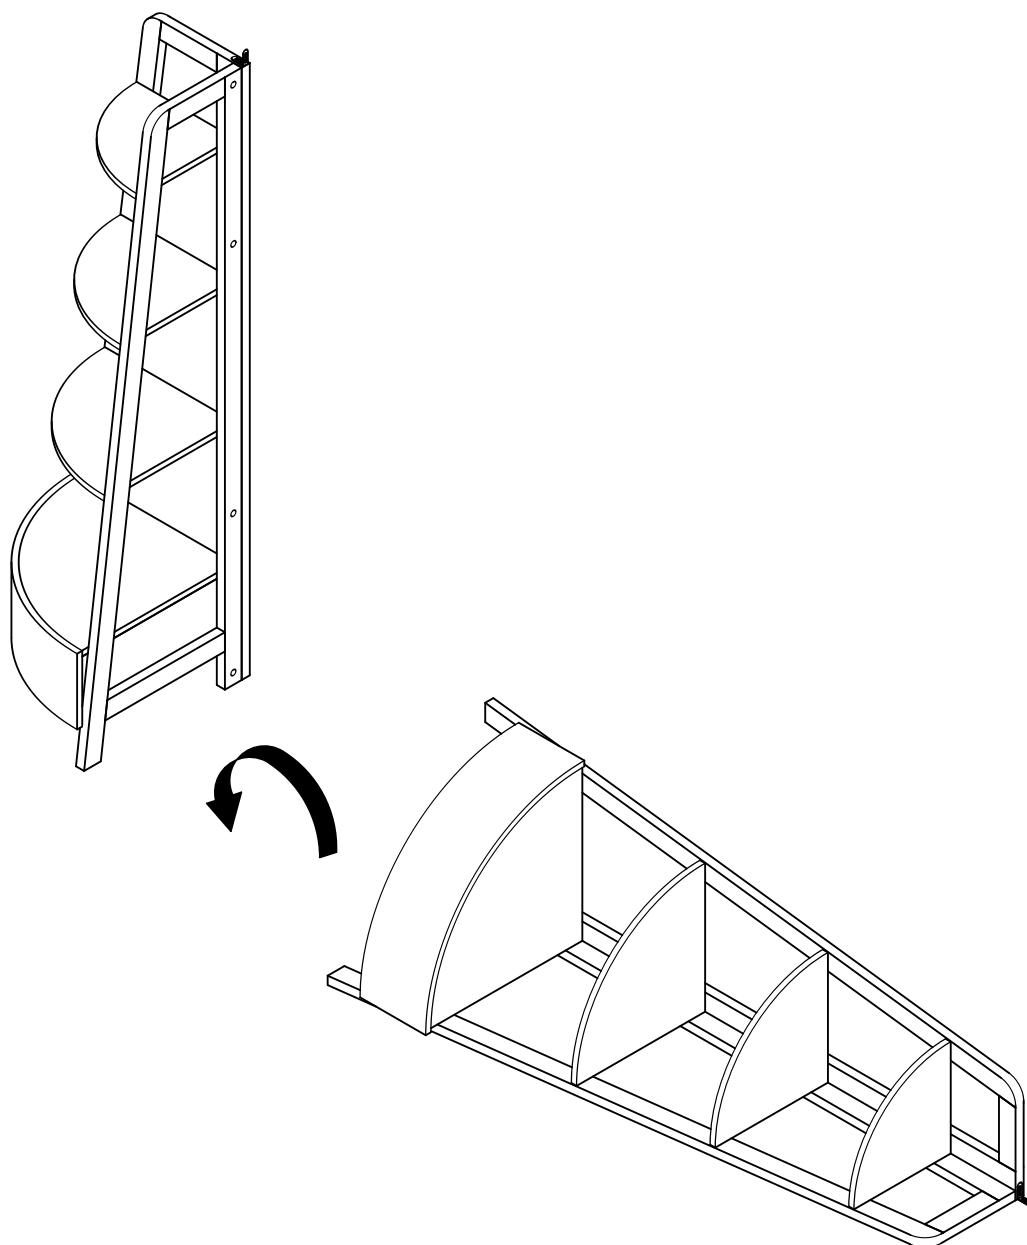


19

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 1X"L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

 If in doubt please consult a qualified trades person.

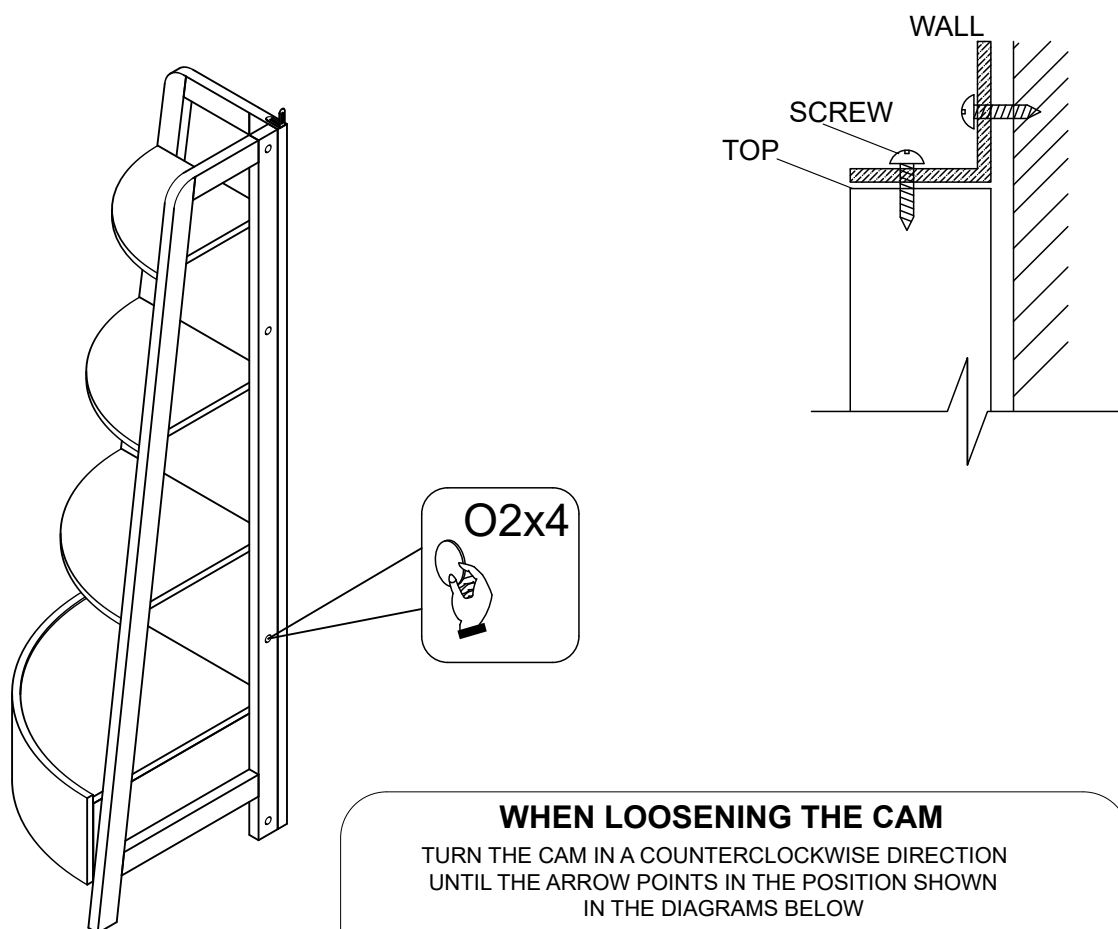


WHEN LOOSENING THE CAM


TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



 MAXIMUM
LOCK

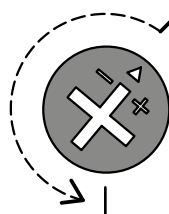

TURN
TO UNLOCK

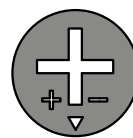 

UNLOCKED

O2

21mm

4



 
NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936

Actual product size

H160 x W50x D50cm

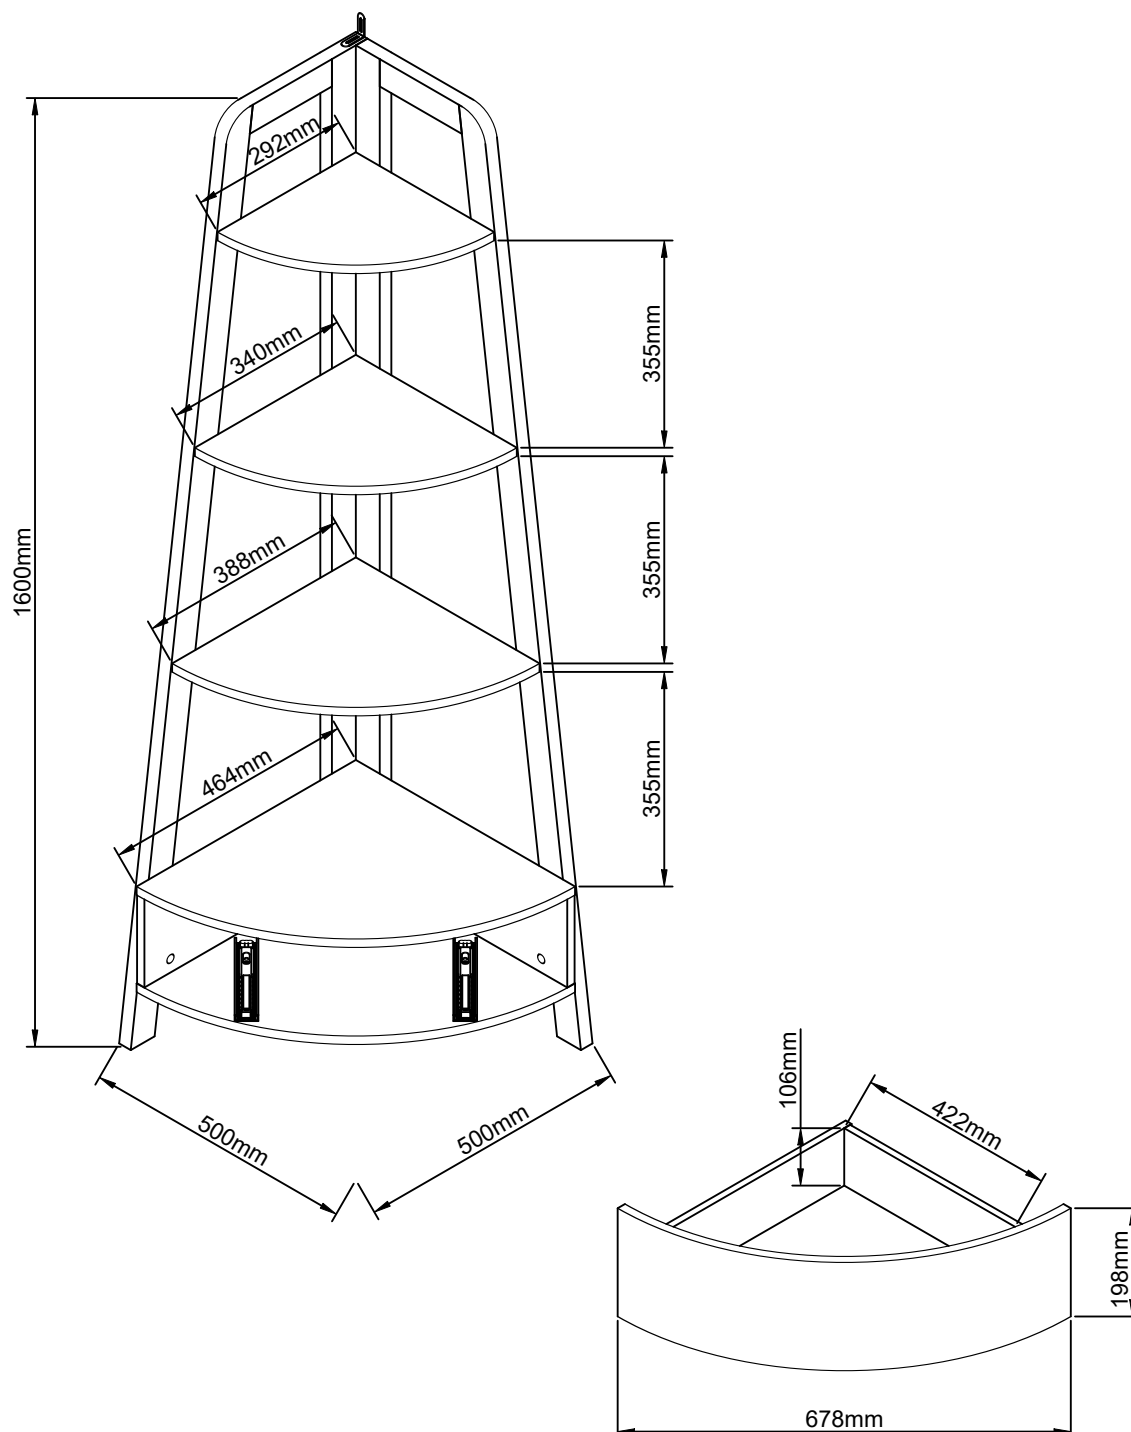

NEXT

BRONX / BRONX LIGHT / BRONX GREY / BRONX BLACK / BRONX WHITE CORNER LADDER

217201 / 255104 / 550779 / C06482 / 943936

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk