

NEXT

BRONX DOUBLE EXTENDER DINING TABLE

992151

 
Assembly instructions

Actual product size

H75 x W140x D86cm

H75 x W180x D86cm

H75 x W220x D86cm

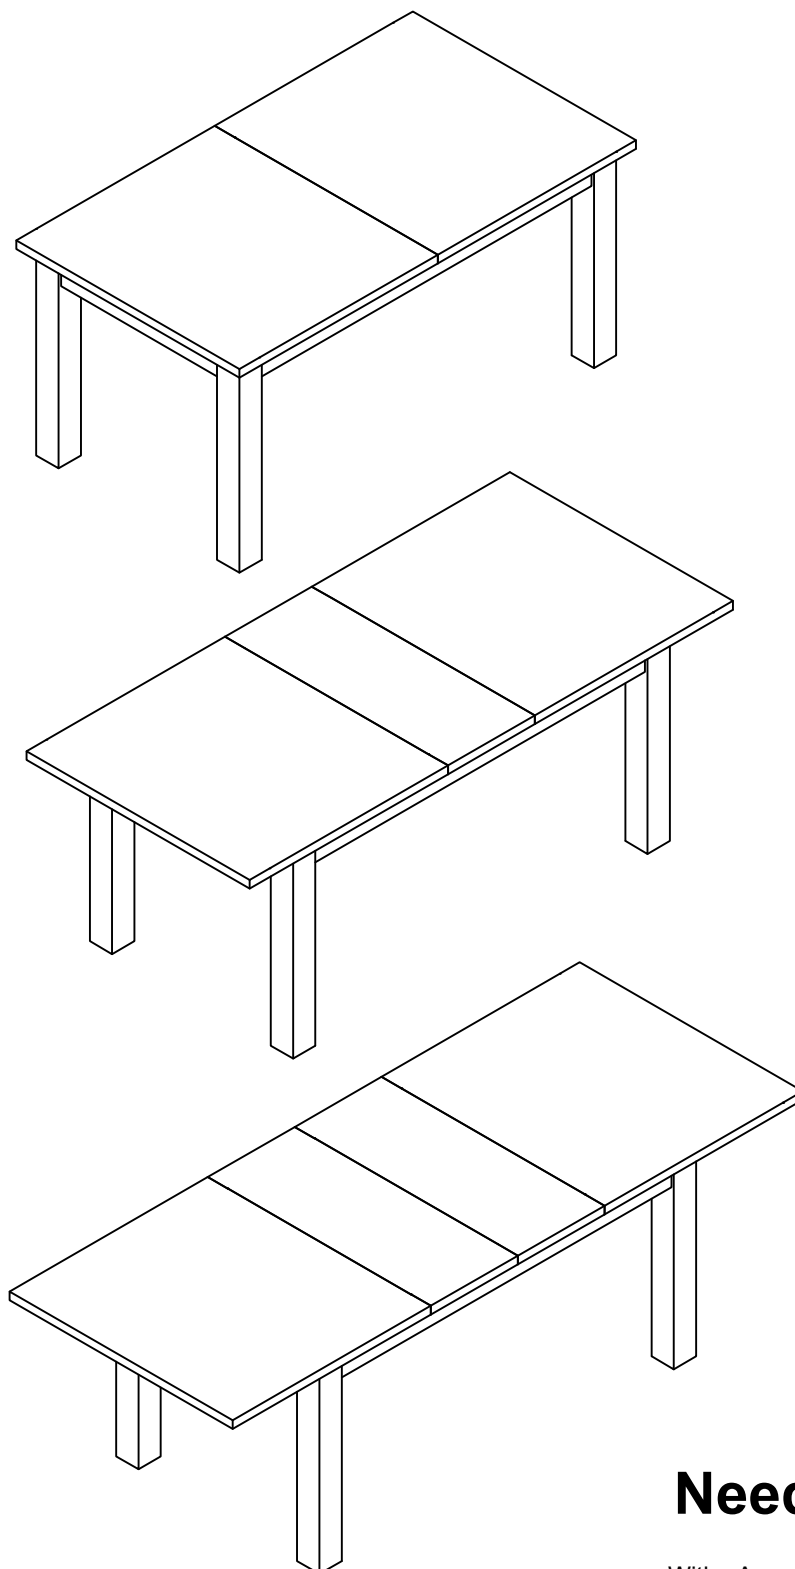

Need Help ?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

NEXT

BRONX DOUBLE EXTENDER DINING TABLE

992151

Assembly instructions

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

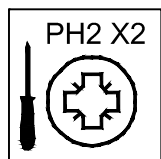

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

 
NEXT

BRONX DOUBLE EXTENDER DINING TABLE

992151

Assembly instructions

GETTING TO KNOW YOUR PRODUCT

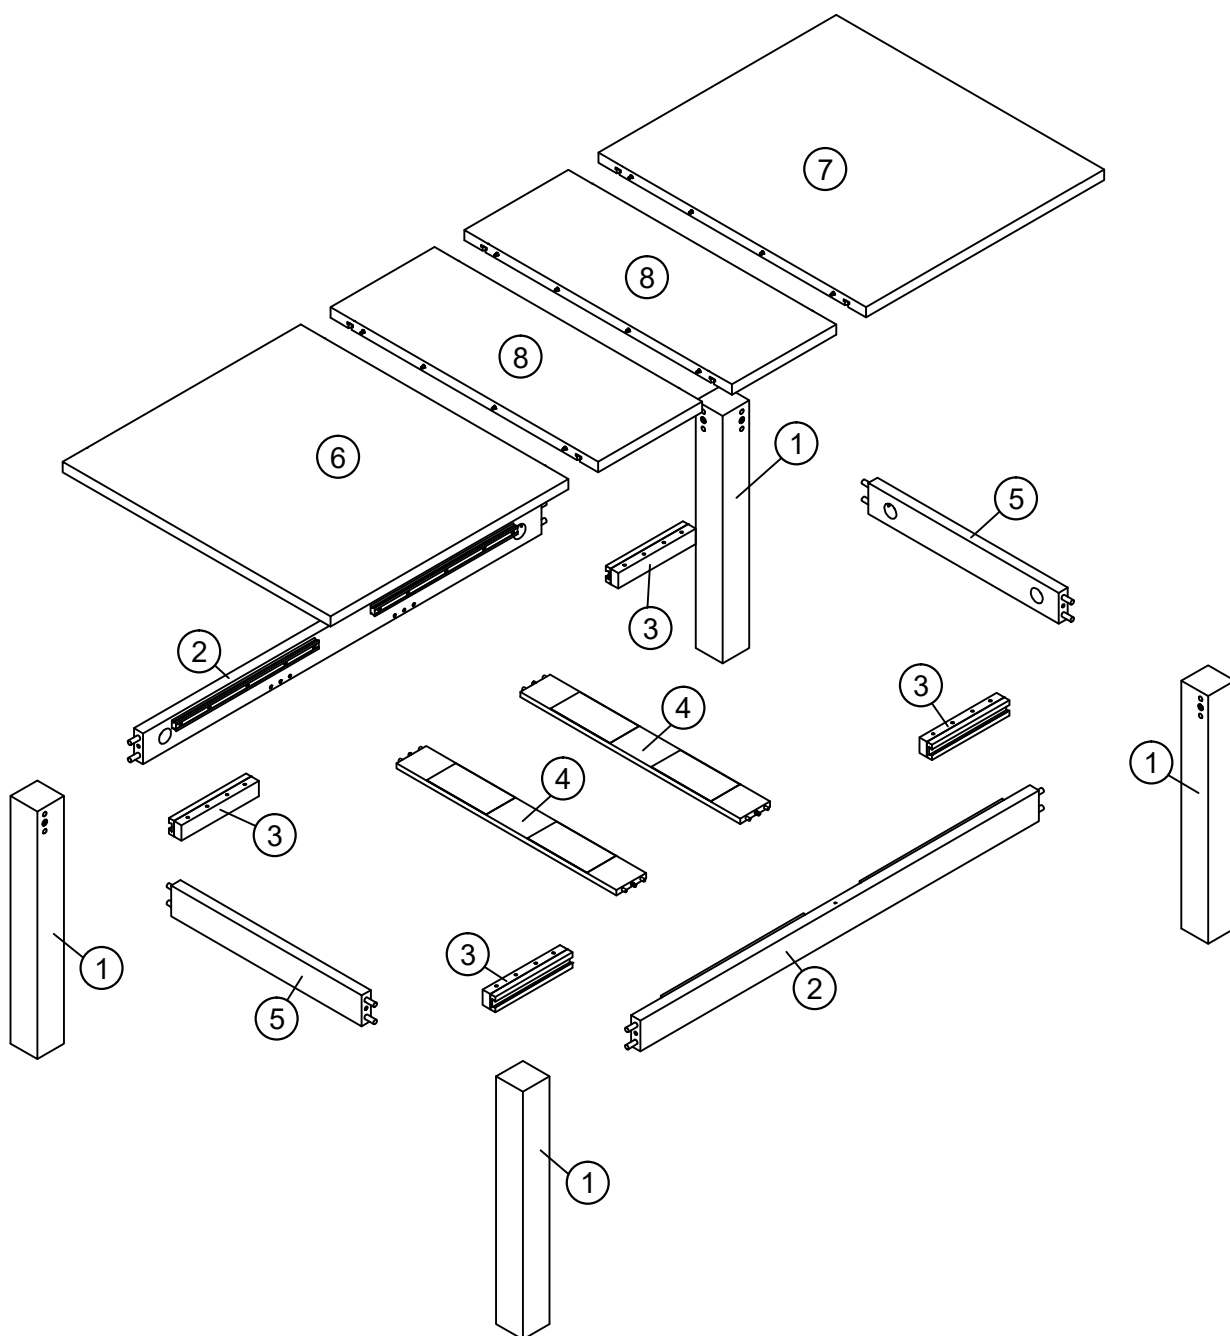







NEXT


BRONX DOUBLE EXTENDER DINING TABLE

992151


Assembly instructions

      Components supplied. Please use this guide if you require replacement parts.

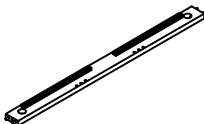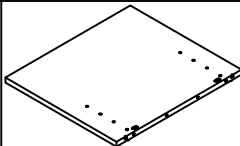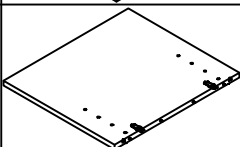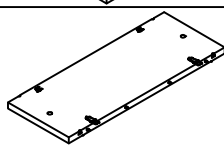
Ref	Dimensions	Visual	Qty	Ctn
1	73 x 7cm		4	2
2	122 x 10cm		2	2
3	18 x 5cm		4	2
4	74 x 10cm		2	2
5	68 x 10cm		2	2
6	86 x 70cm		1	1
7	86 x 70cm		1	1
8	86 x 40cm		2	1

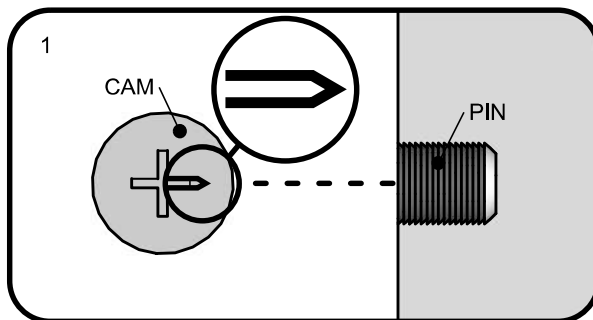 

 
Line up the arrow on the CAM with the PIN.

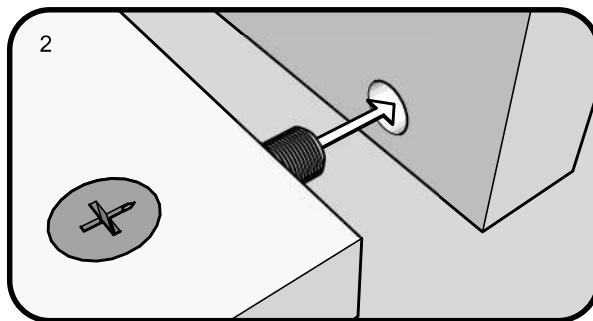

 
Push the pins into the holes in the panel to be joined.

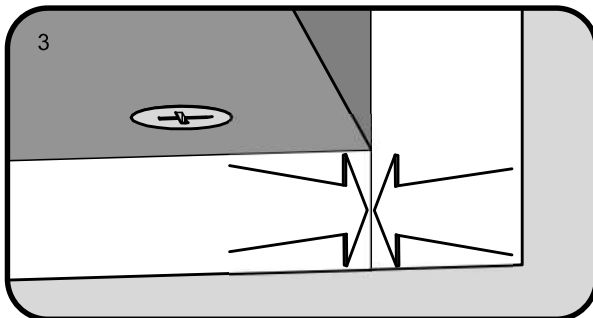

 Make sure there is no gap between the panels.

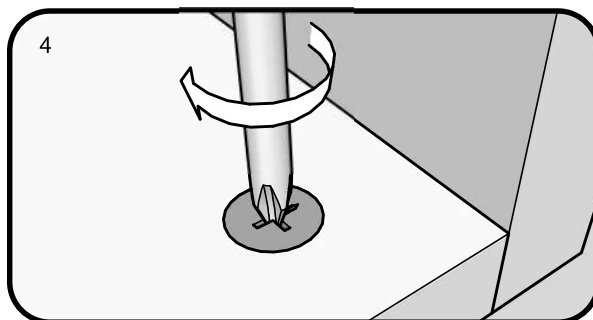

 Use a cross-point screwdriver (PH2 or PZ2 is ideal) to tighten the cams and lock the panels together.

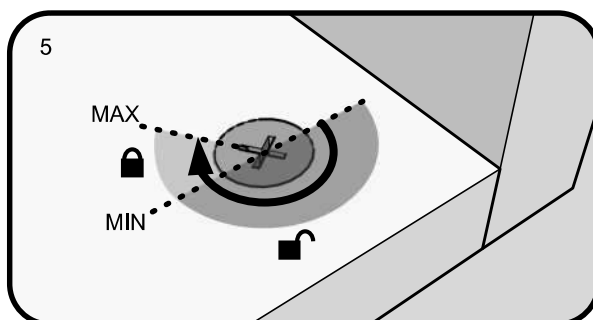

The panels are locked when each cam is turned to between 1/2 and 2/3 of a full turn (Maximum rotation)

NEXT


BRONX DOUBLE EXTENDER DINING TABLE

992151

Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B25	Ø35 x 17mm	8	N/A
B3	Ø15 x 12mm	N/A	1
B8	Ø8 x 38mm	N/A	1
D6	Ø8 x 30mm	N/A	1
B24	Ø8.5 x 63mm	8	N/A
D13	Ø12 x 60mm	N/A	2
V80	Ø6 x 55mm	16	2

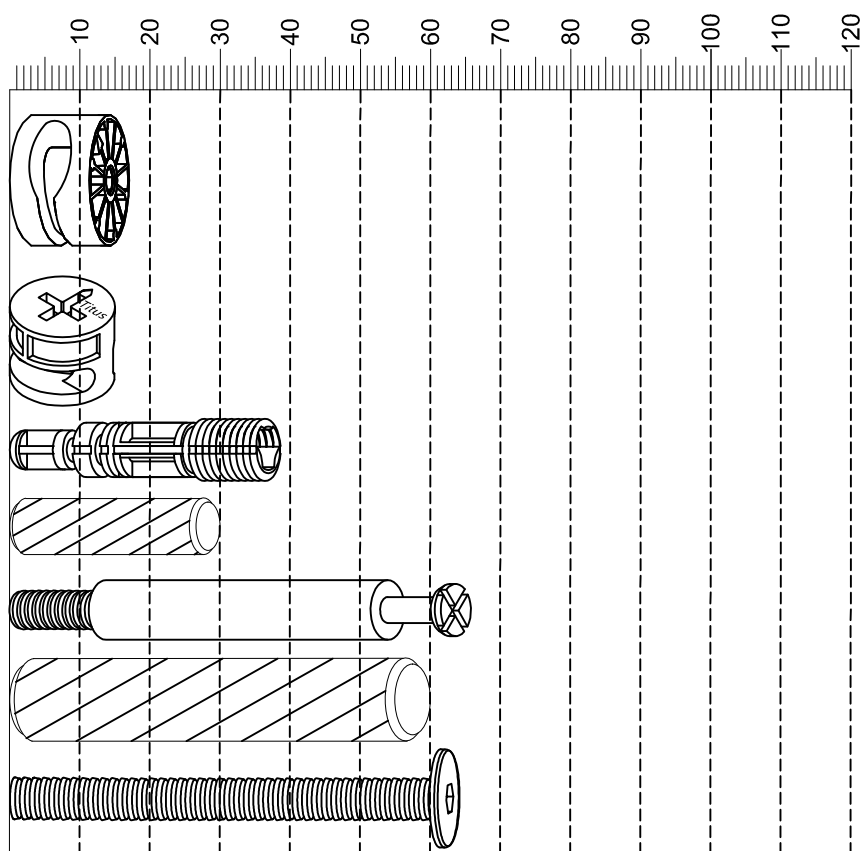 

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T4	4mm	2	N/A	
T7	6mm	2	N/A	
P8	N/A	2	N/A	

NEXT

BRONX DOUBLE EXTENDER DINING TABLE

 
992151

Assembly instructions


1

DON'T STOP UNTIL THE 2 O'CLOCK LOCK


TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE
ARROW POINTS IN THE POSITIONS SHOWN IN THE
DIAGRAMS BELOW

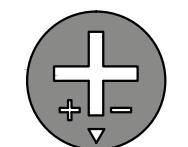

START

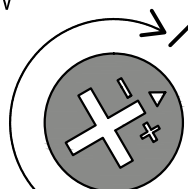 


CORRECT
LOCK

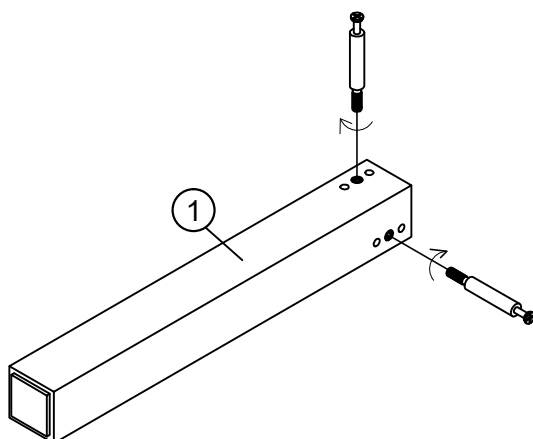 


x4

 PUSH THE TWO PANELS TOGETHER ALLOWING THE
DOWEL TO ALIGN WITH THE HOLE

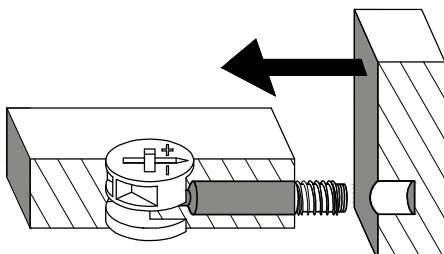

TURN THE CAM IN A CLOCKWISE DIRECTION

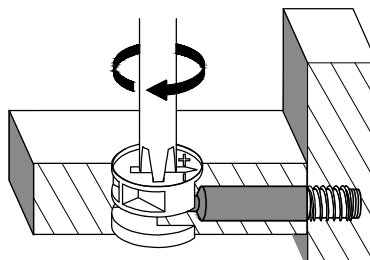 

B24

Ø8.5 x 63mm

8



not supplied

 
NEXT

BRONX DOUBLE EXTENDER DINING TABLE


992151

Assembly instructions

2

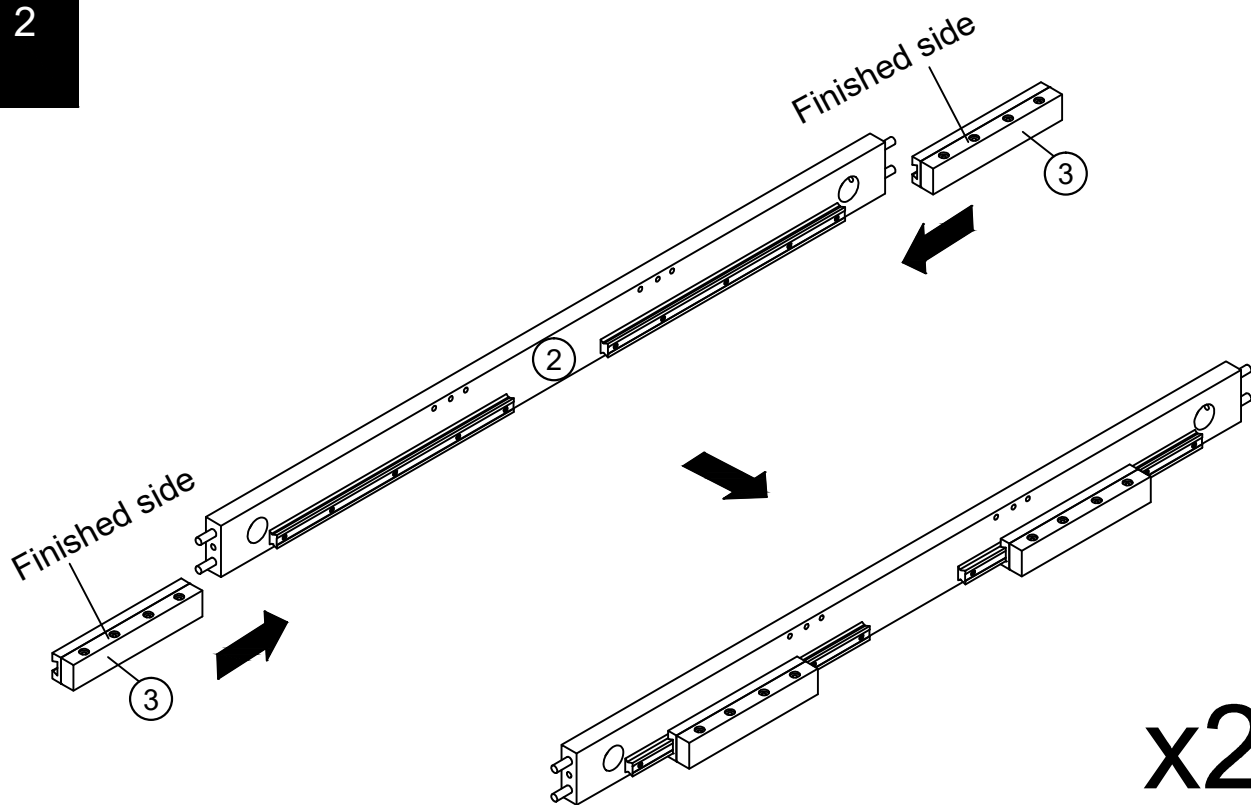

3

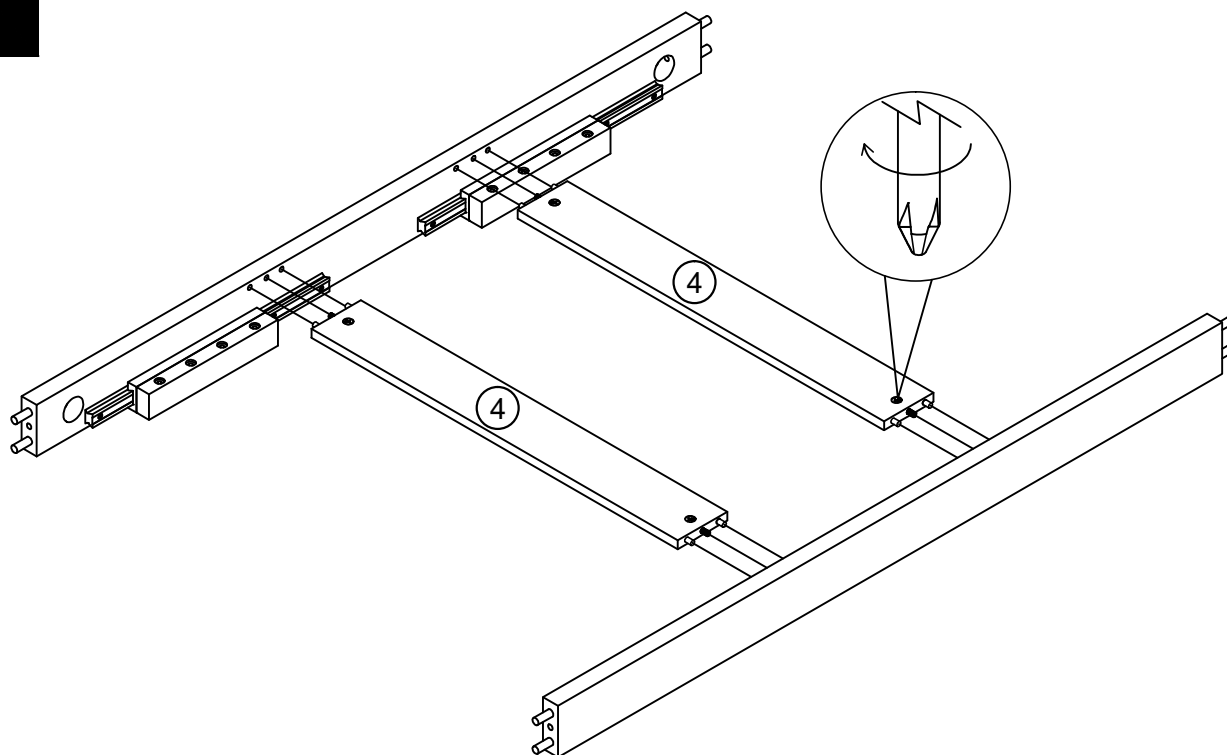 


NEXT

BRONX DOUBLE EXTENDER DINING TABLE

992151

Assembly instructions

 
4

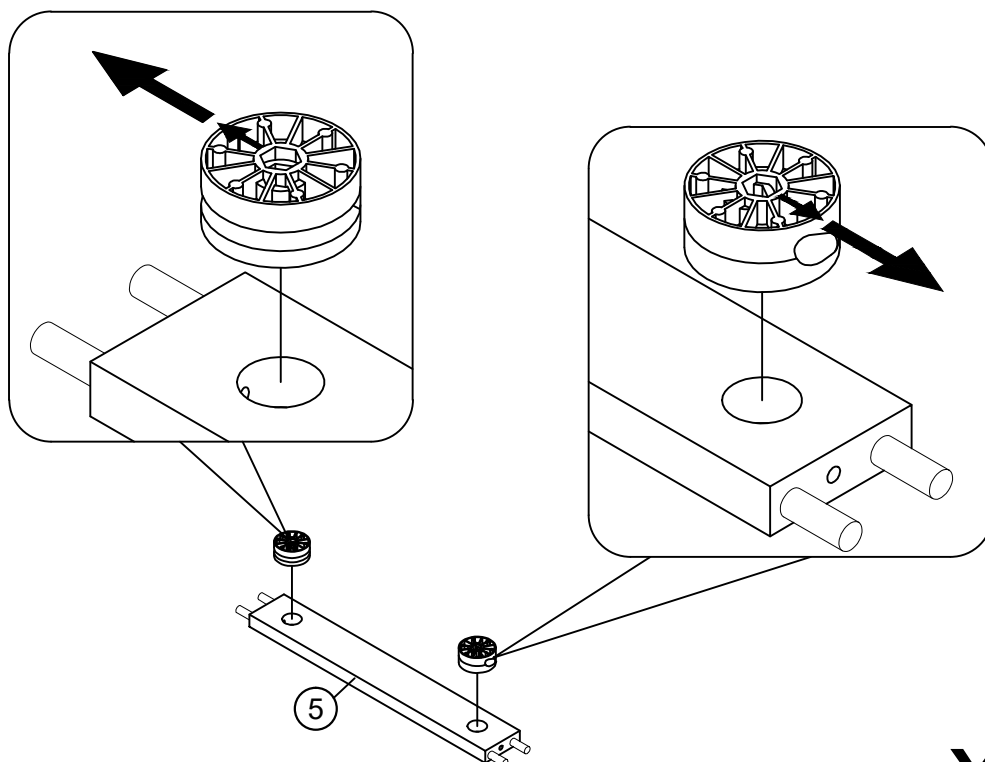


x2

B25	Ø35 x 17mm	4	
-----	------------	---	---

 5

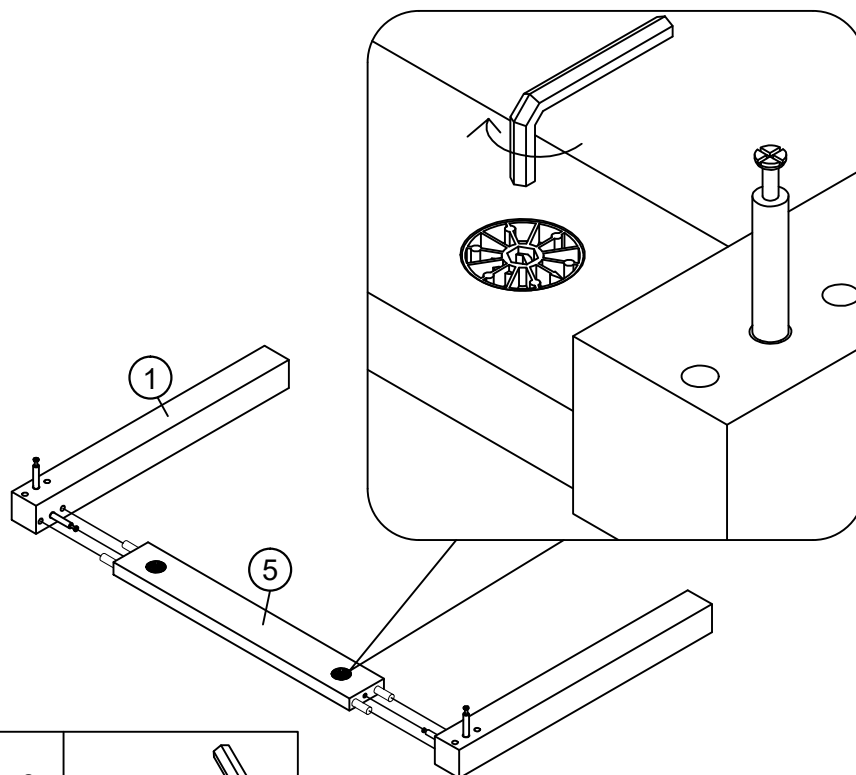

x2

 T7	6mm	2	
----	-----	---	---

 
NEXT

BRONX DOUBLE EXTENDER DINING TABLE

992151

Assembly instructions

6

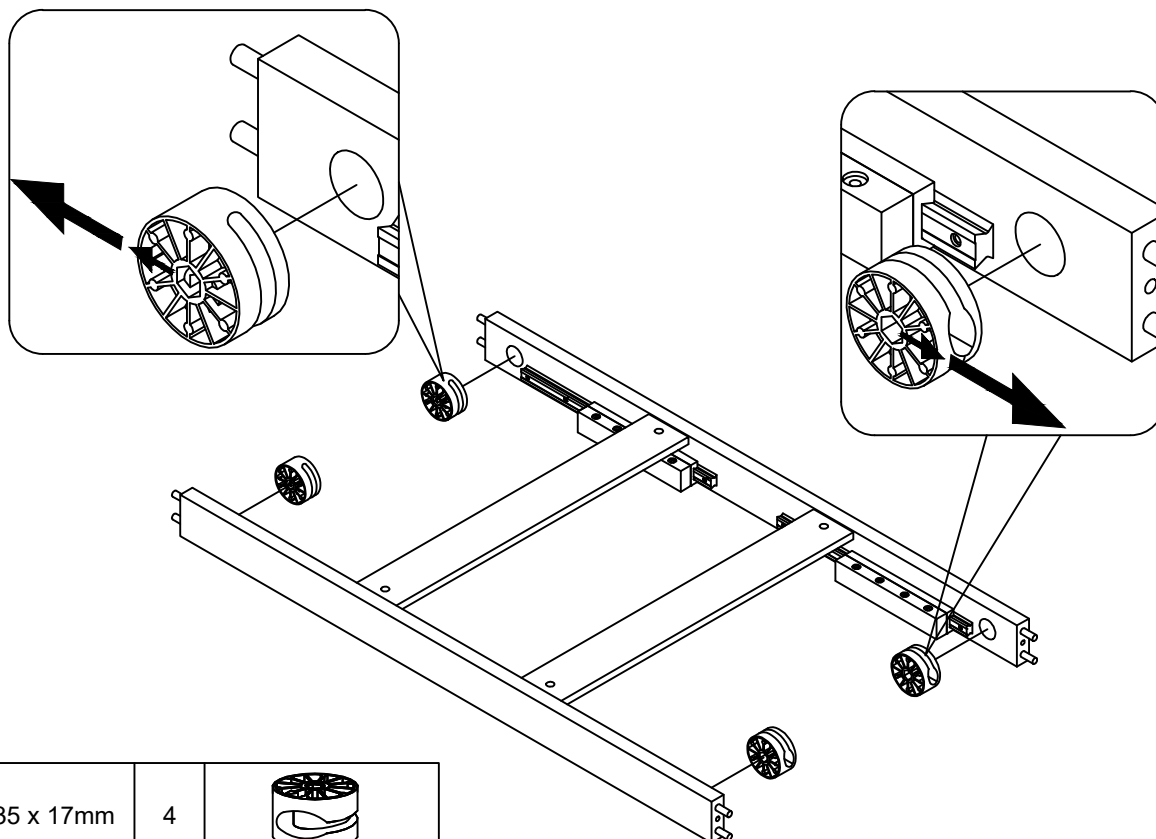


B25

Ø35 x 17mm

4



 7

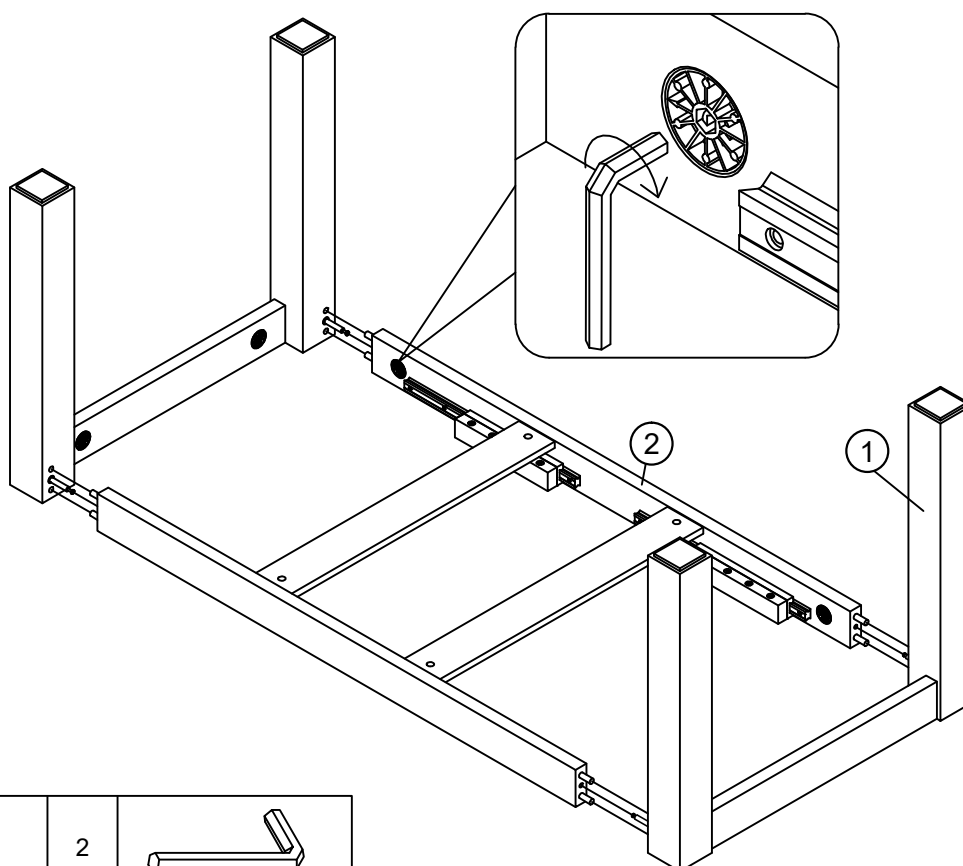

T7

6mm

2



 
NEXT

 
 
BRONX DOUBLE EXTENDER DINING TABLE

992151

Assembly instructions

8

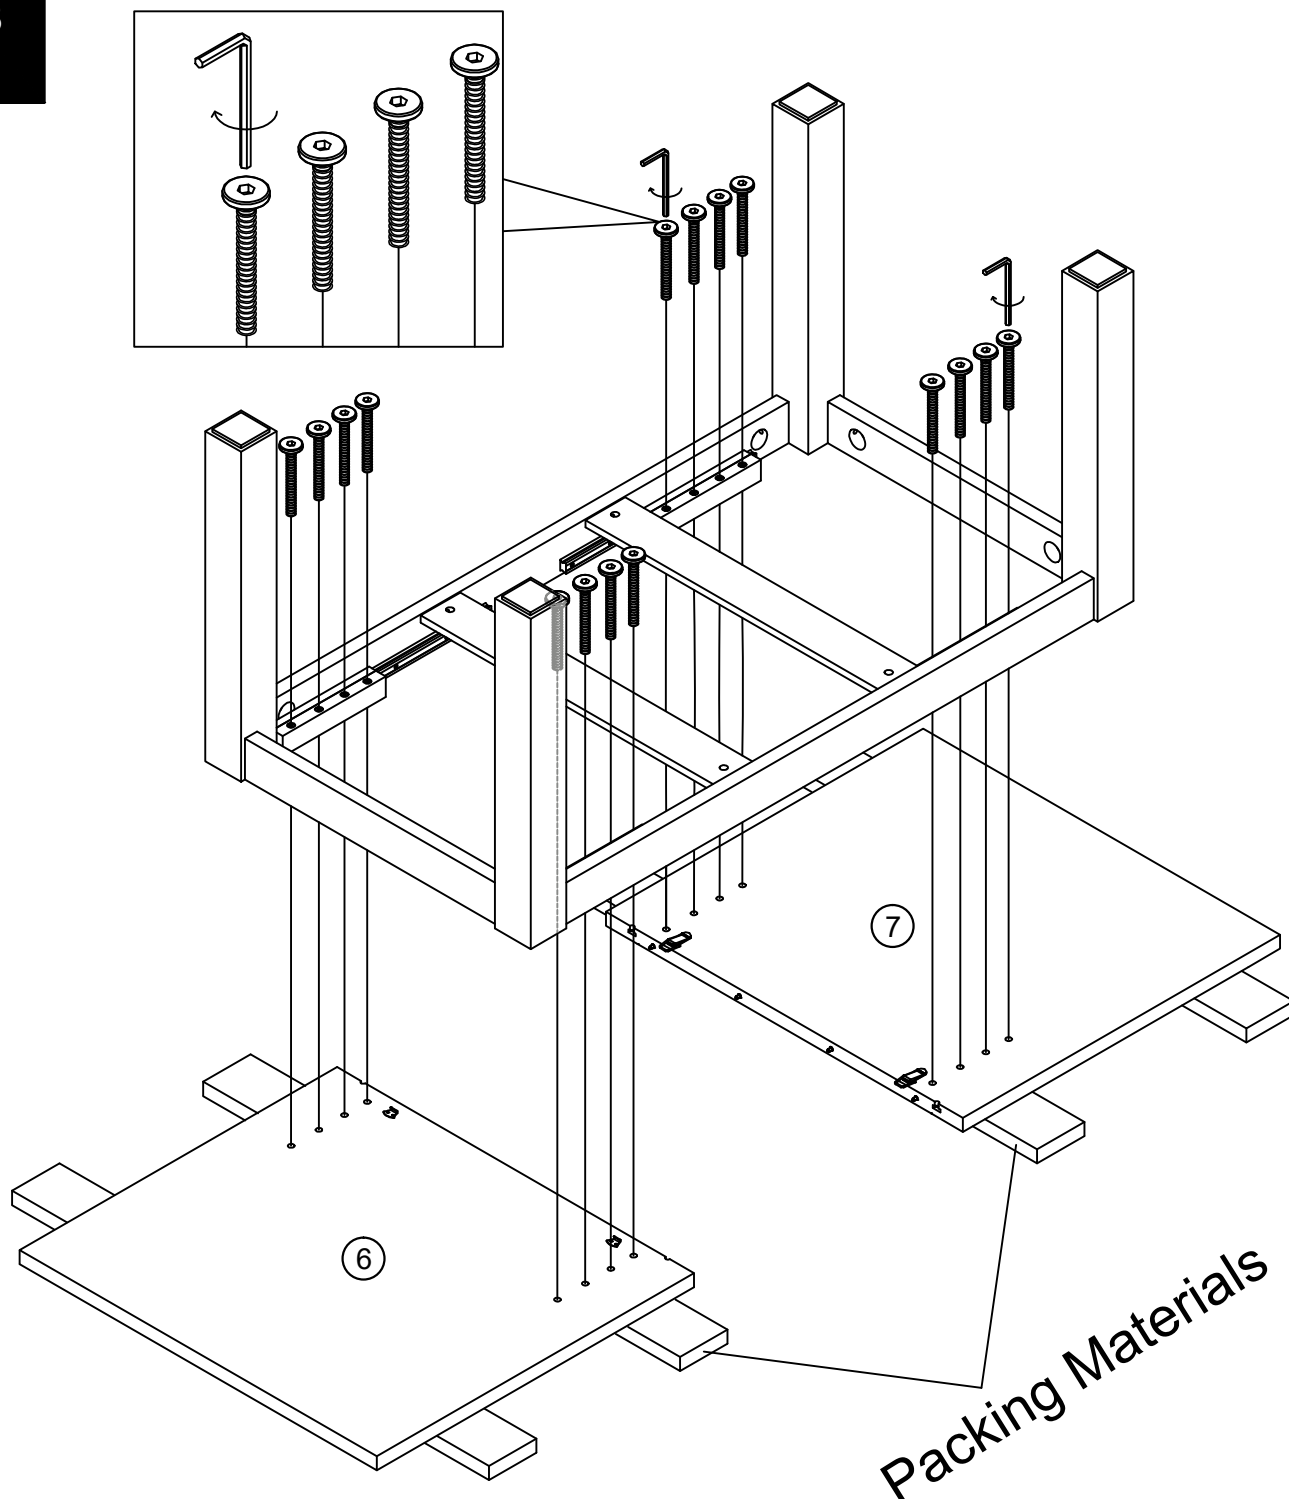

T4	4mm	2	
V80	Ø6 x 55mm	16	

 
NEXT

BRONX DOUBLE EXTENDER DINING TABLE

992151

Assembly instructions

9

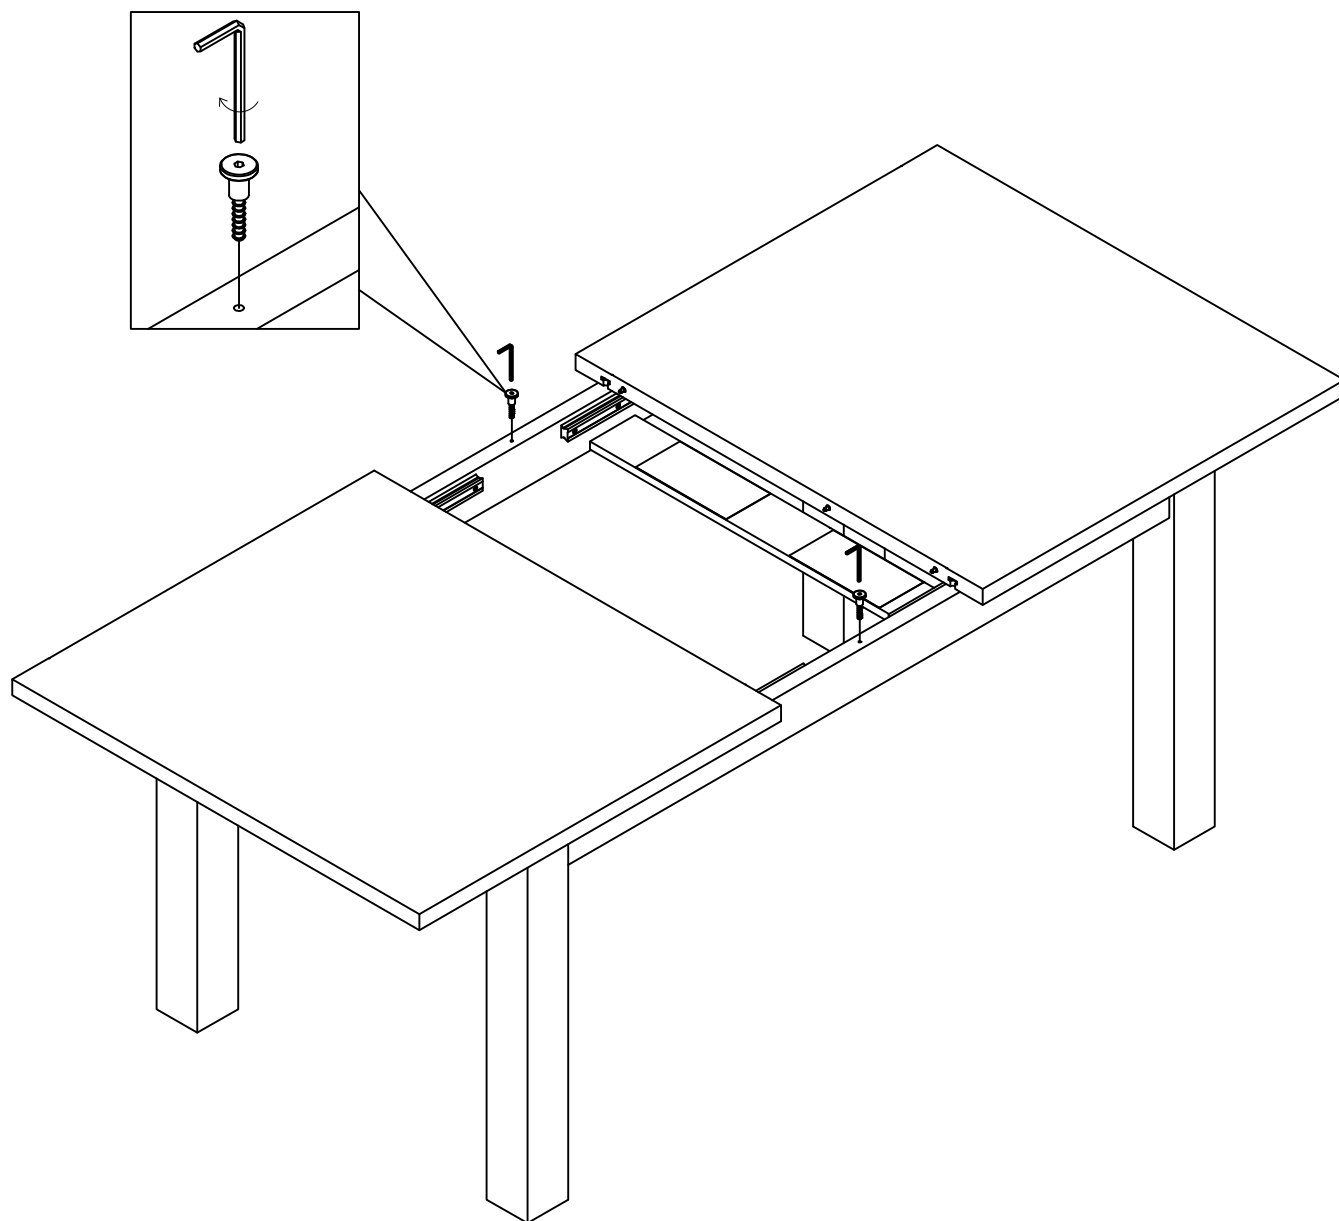

T4	4mm	2	
P8	N/A	2	

NEXT

 
BRONX DOUBLE EXTENDER DINING TABLE

992151

Assembly instructions

10

Please ensure panels 8*2 face to face to avoid placing the latches where they will rub on the part of the table leaf that is visible in use.

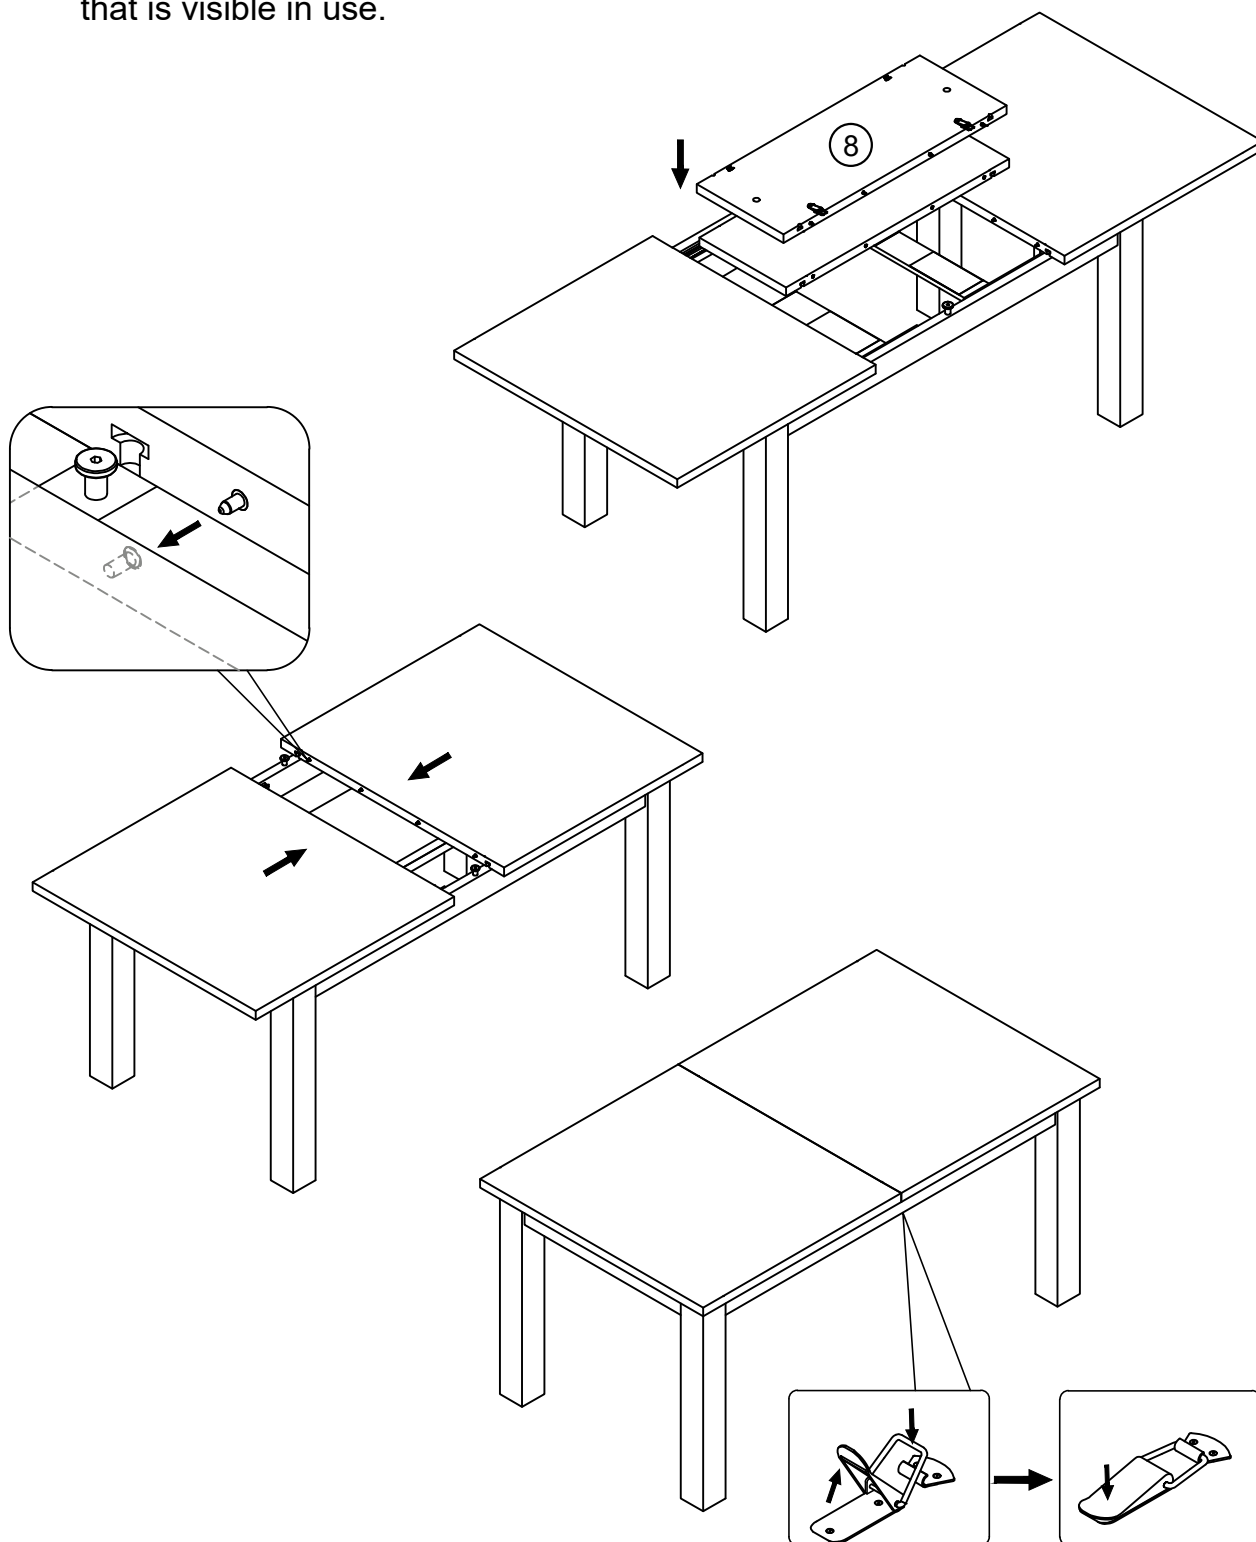





NEXT

BRONX DOUBLE EXTENDER DINING TABLE


992151

Assembly instructions

    11

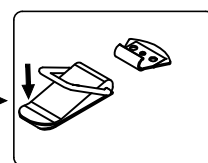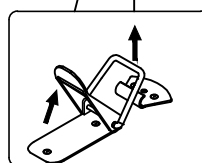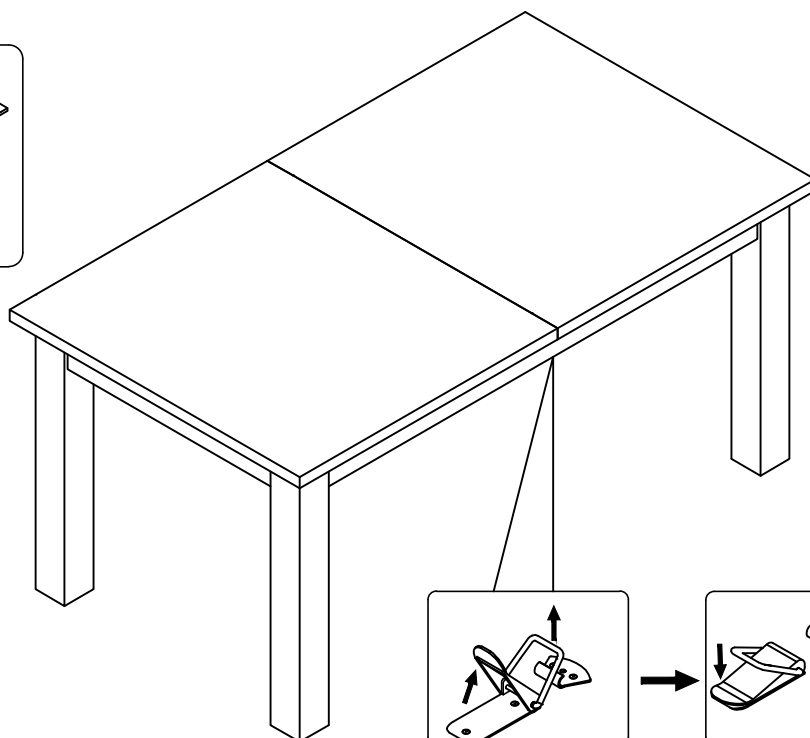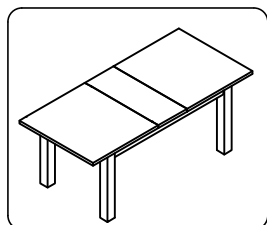

12

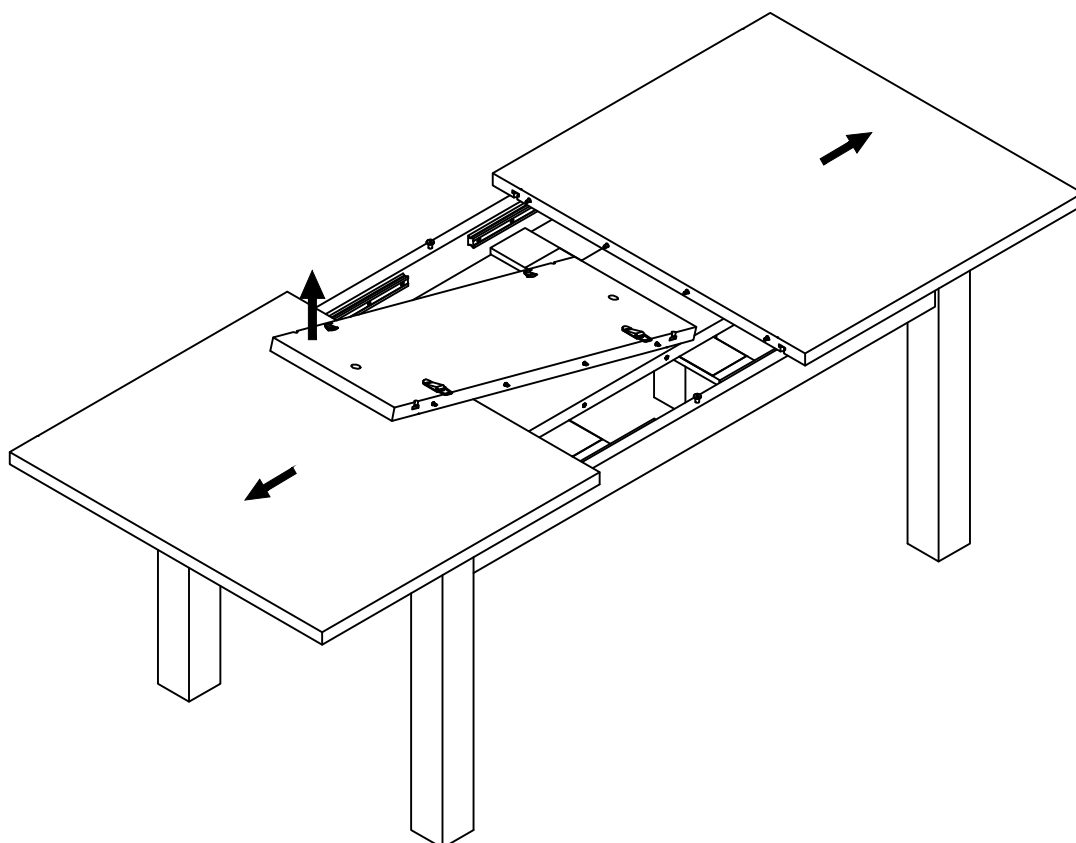 


NEXT

BRONX DOUBLE EXTENDER DINING TABLE


992151

Assembly instructions

 13

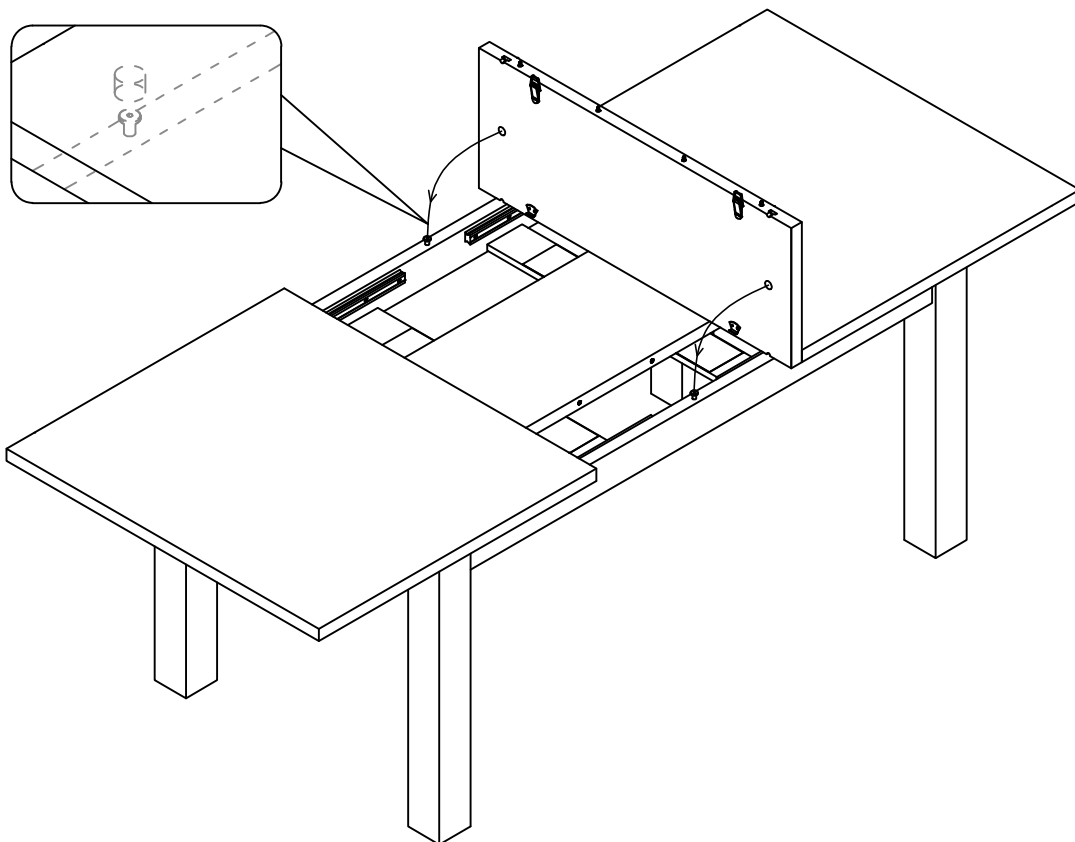

14

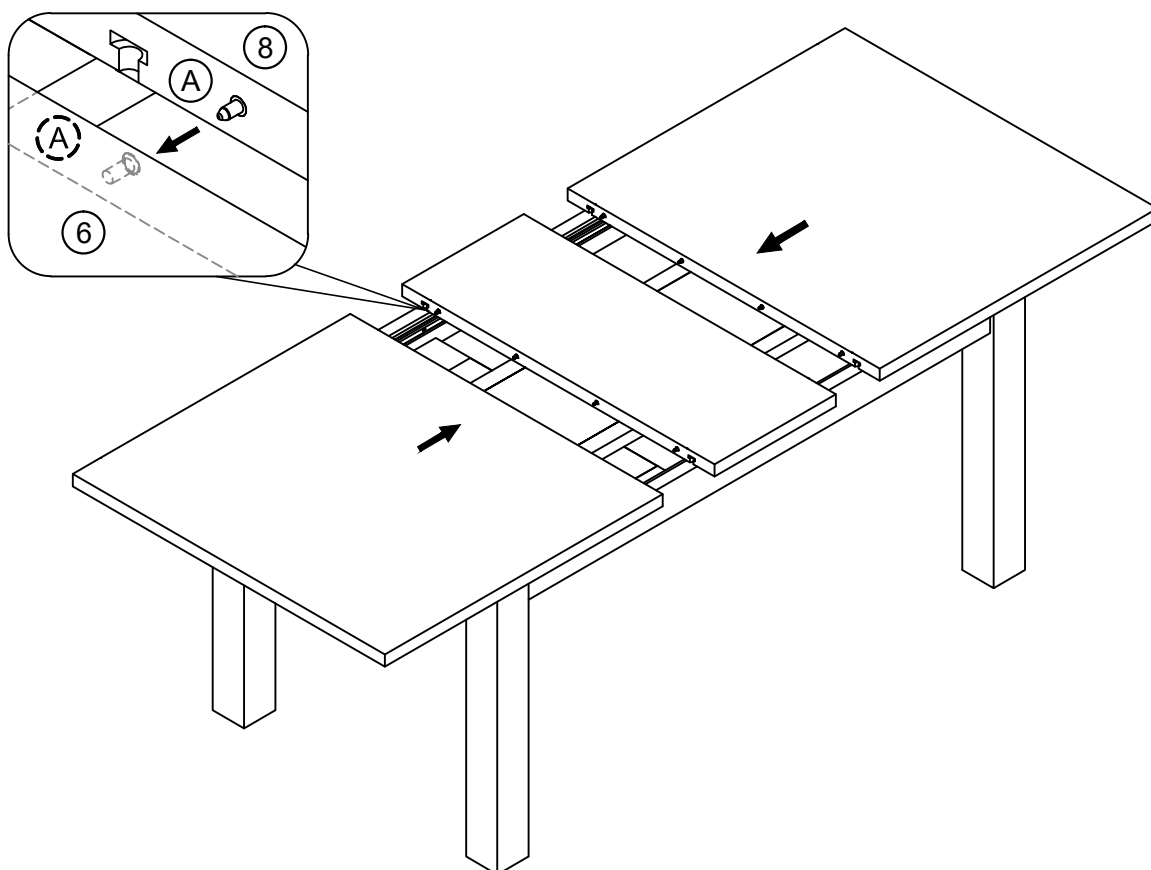 


NEXT

BRONX DOUBLE EXTENDER DINING TABLE


992151

Assembly instructions

 15

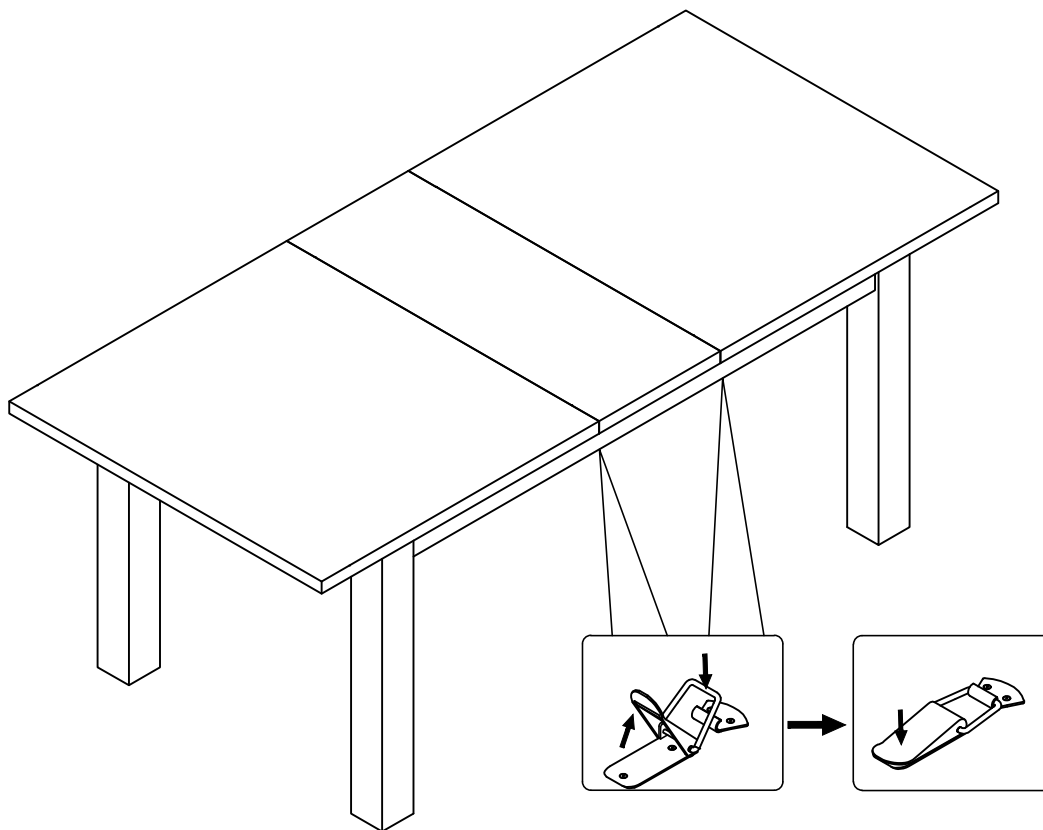

16

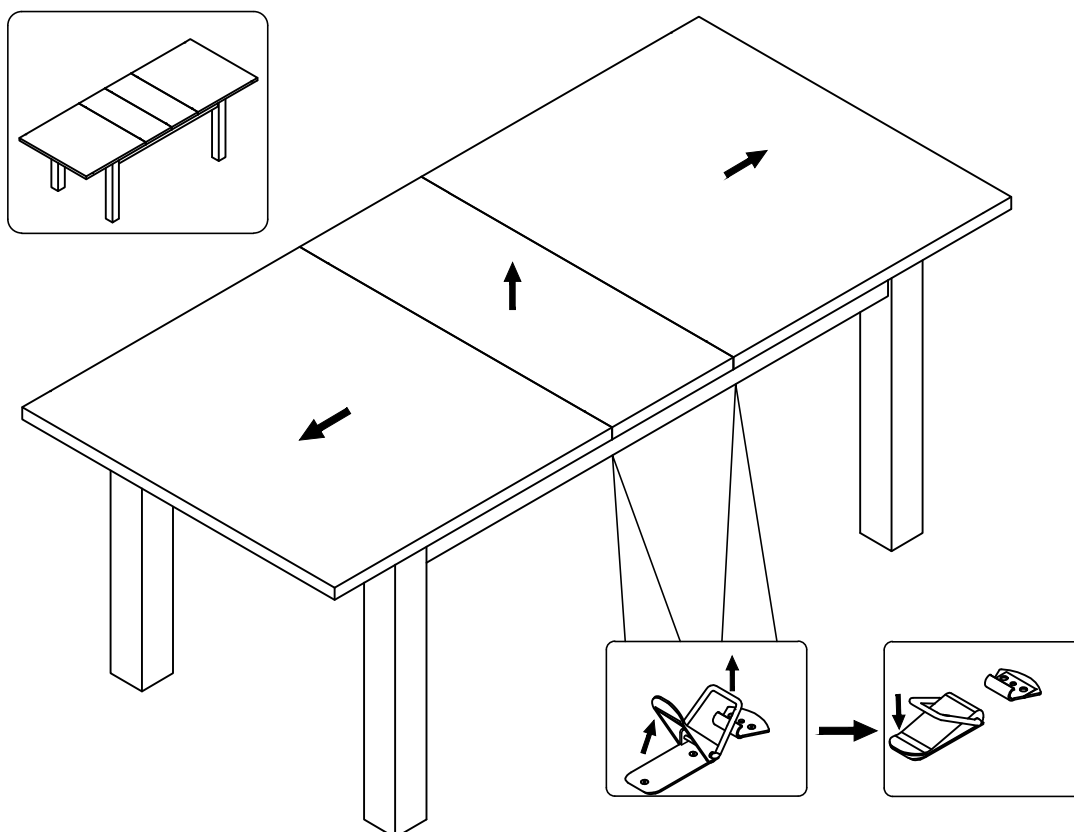 


NEXT

BRONX DOUBLE EXTENDER DINING TABLE


992151

Assembly instructions

 17

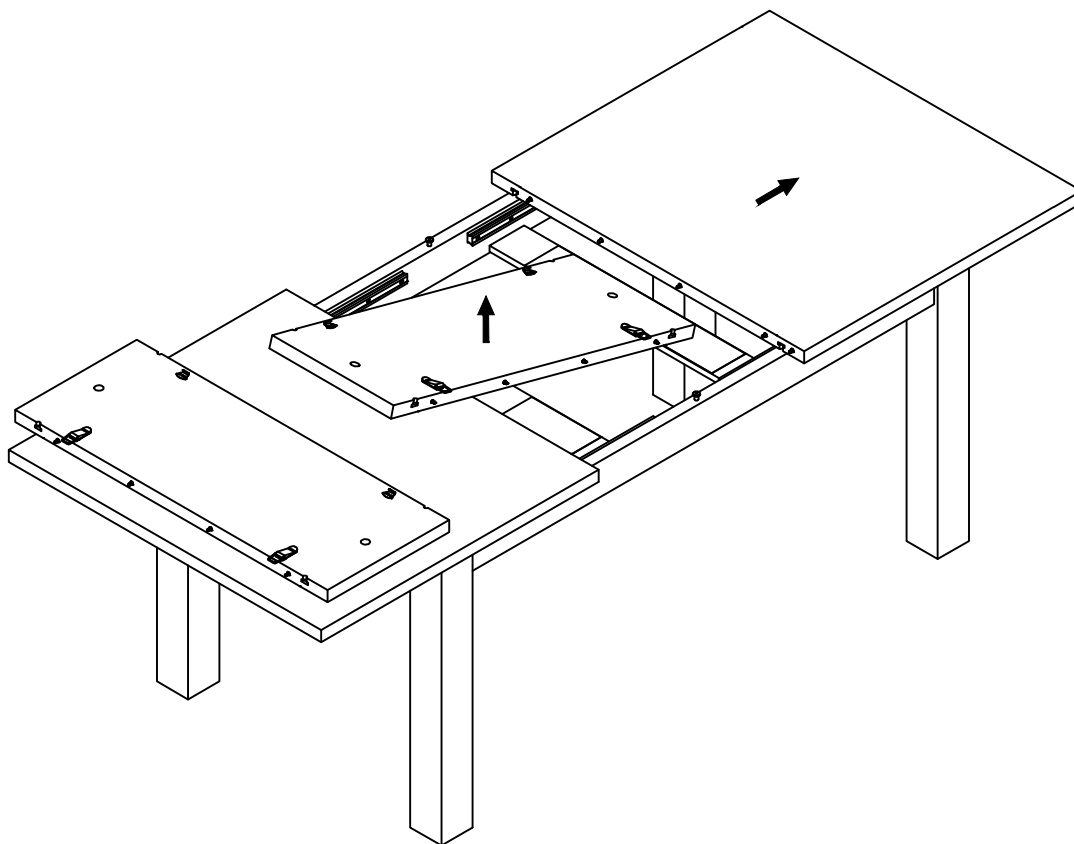

18

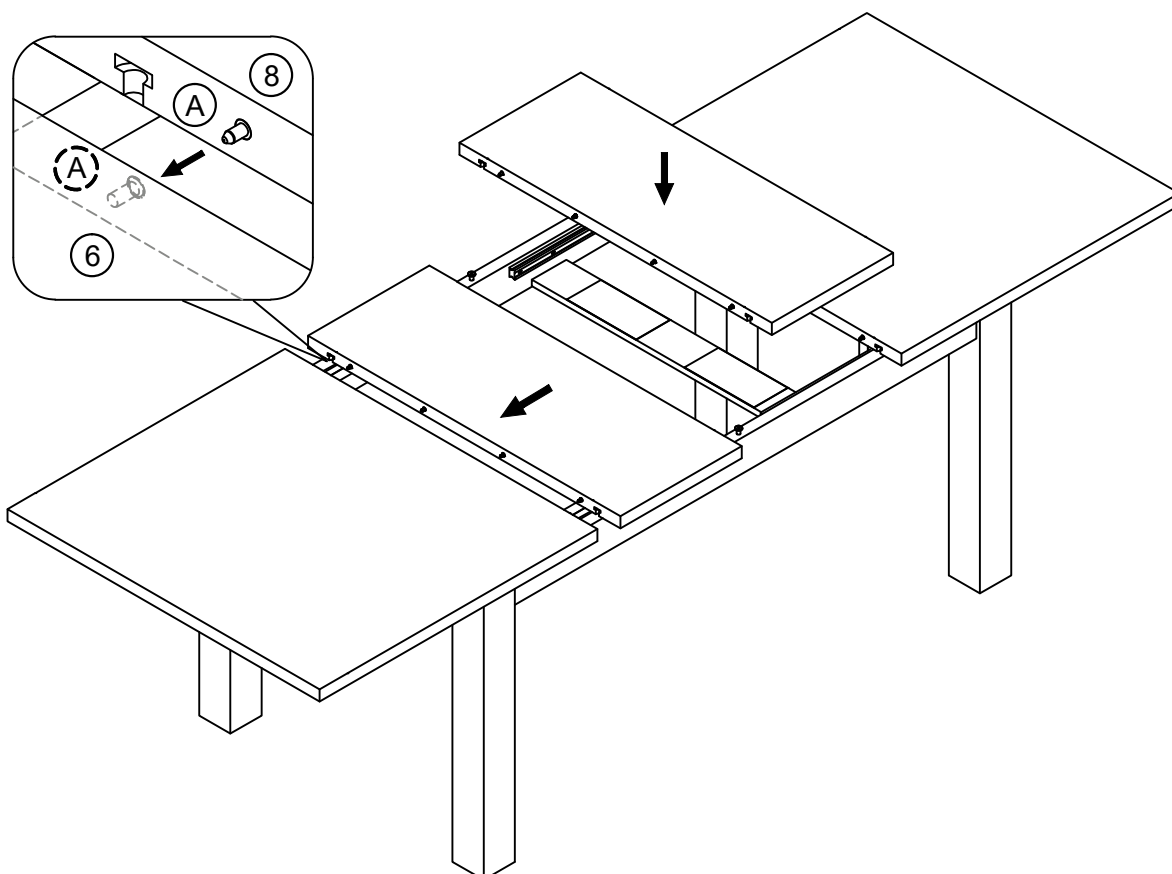 


NEXT

BRONX DOUBLE EXTENDER DINING TABLE


992151

Assembly instructions

 19

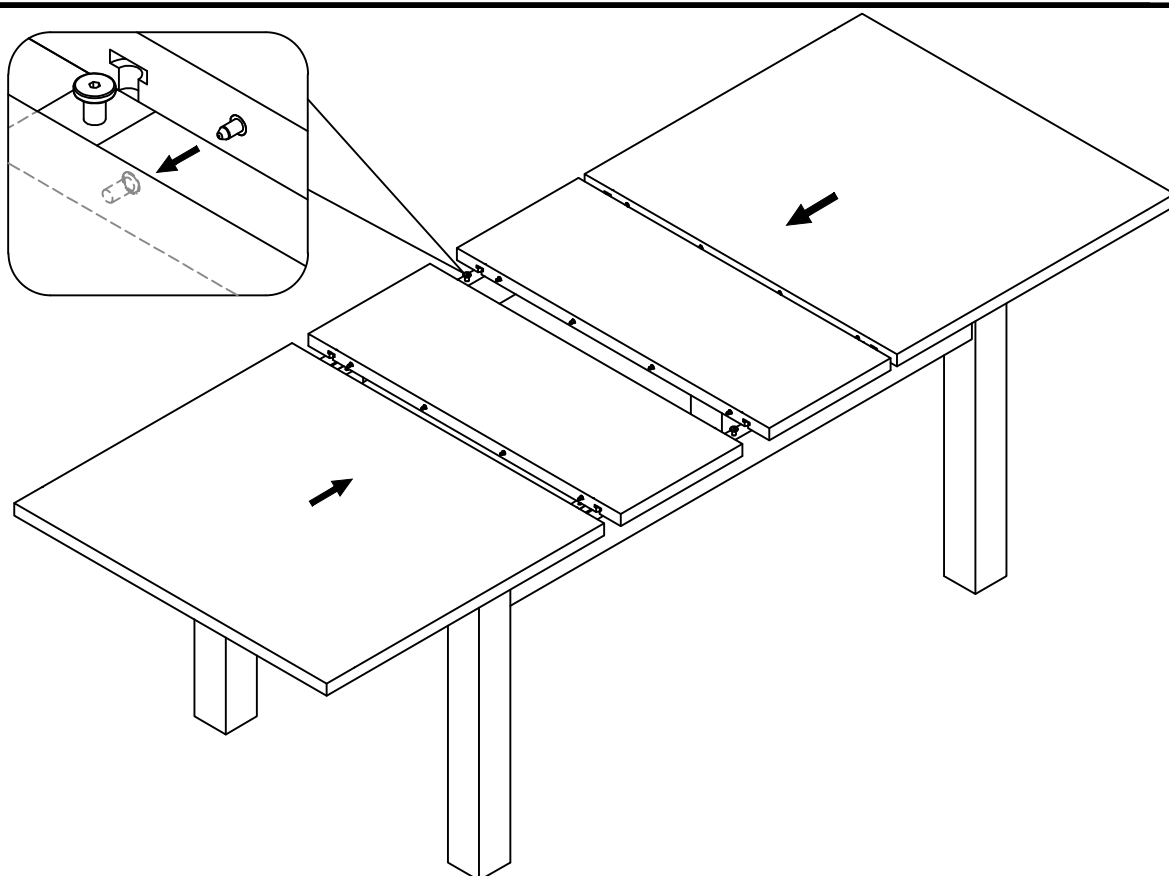

20

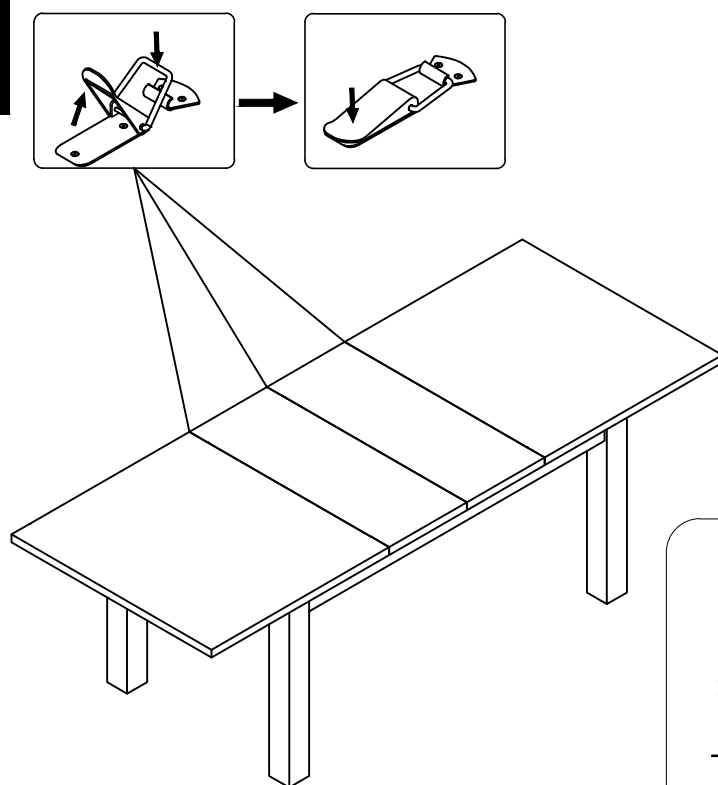 


WHEN LOOSENING THE CAM

TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



 MAXIMUM
LOCK

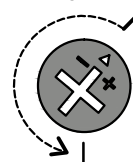

TURN
TO UNLOCK



UNLOCKED

NEXT

 
BRONX DOUBLE EXTENDER DINING TABLE 992151

Actual product size

H75 x W140x D86cm

H75 x W180x D86cm

H75 x W220x D86cm

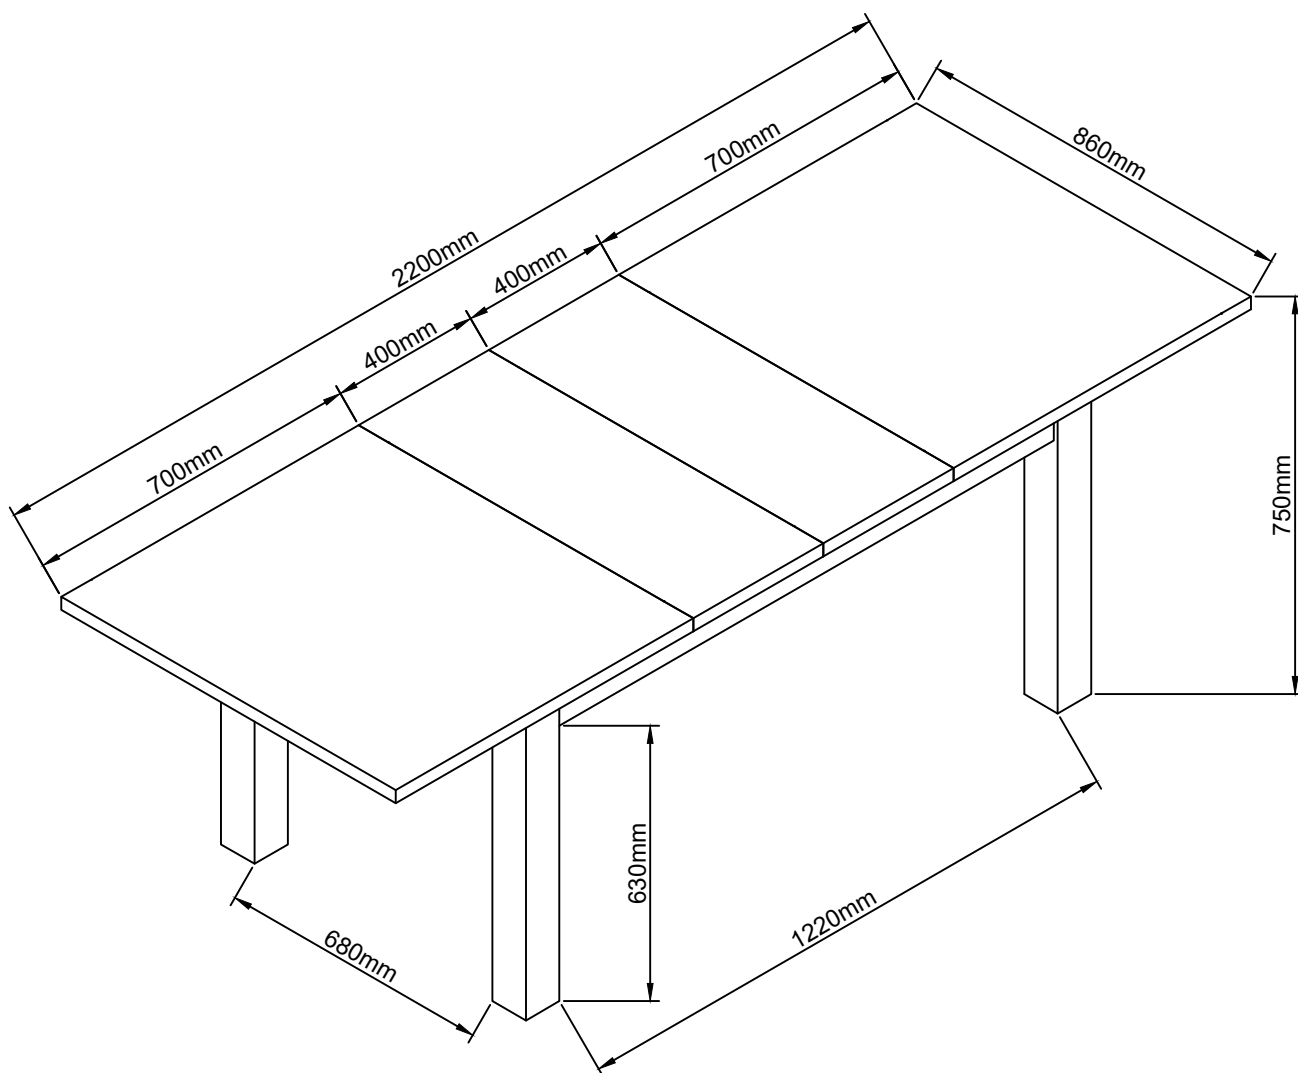

NEXT

BRONX DOUBLE EXTENDER DINING TABLE 992151

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk