

 
next

# ALIX KIDS TRIPLE WARDROBE

A19038

Assembly instructions

**Actual product size**  
H180 x W132 x D55cm

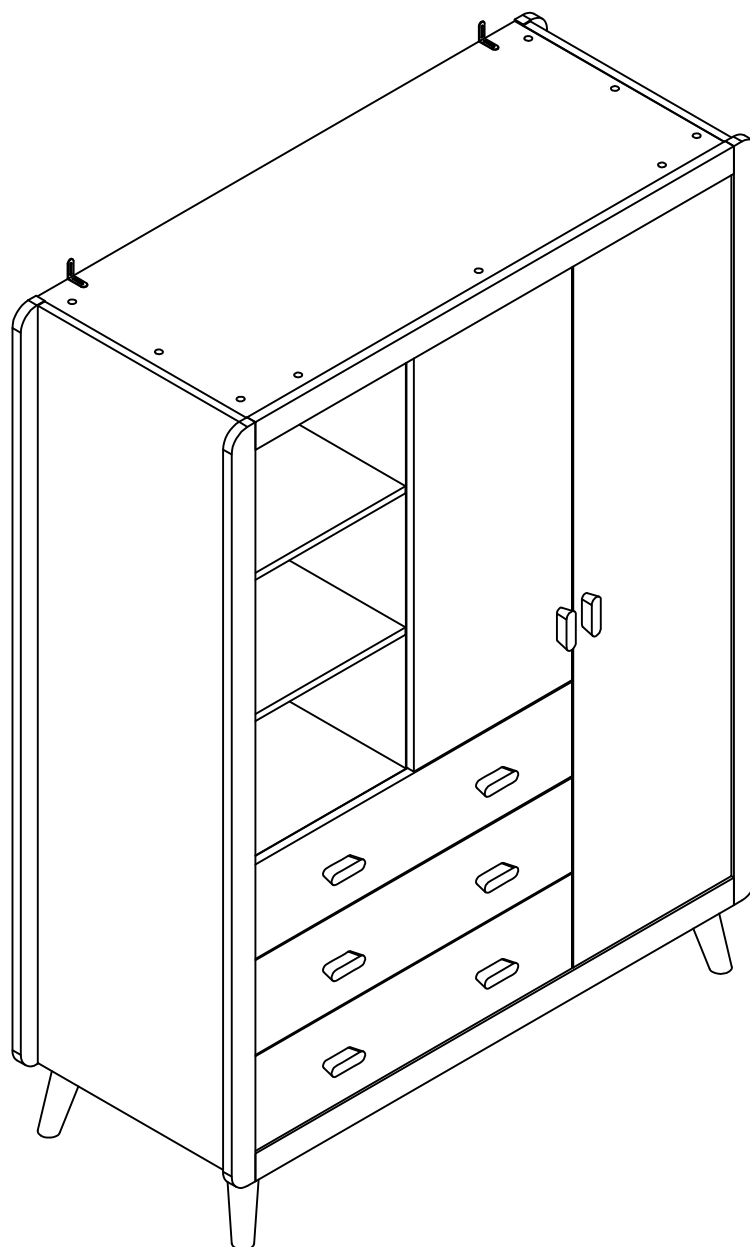

**IMPORTANT -  
RETAIN FOR FUTURE REFERENCE -  
READ CAREFULLY.**

**Need Help ?**

With: Assembly instruction  
Missing or damaged parts

**CALL: 0333 777 8999**

## BEFORE YOU START

### Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



### Tools required

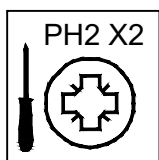

not supplied

### Warnings

We suggest you retain these instructions for future reference

Keep fittings out of children's reach and keep children well away from the construction area

This product should only be used on firm, level ground

Please periodically check all fittings and re-tighten as necessary

Please do not sit or stand on your furniture

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

### Do's

We suggest you spend a short time reading through this leaflet before you start

When you are ready to start, make sure that you have the right tools and plenty of space

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, we recommend that the packaging is used to protect the surfaces during assembly

Carefully check that you have all the parts before beginning assembly

Due to the size of the product we recommend that it is assembled in the room intended for use

 
 
Ensure the product is fully assembled as illustrated and all fixings fully tightened before use

### Don'ts


 
 

 








Do not drag or pull your furniture

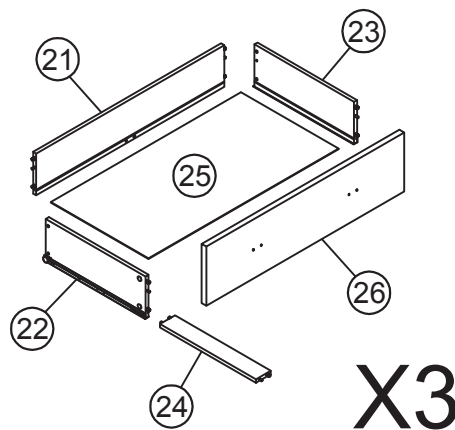
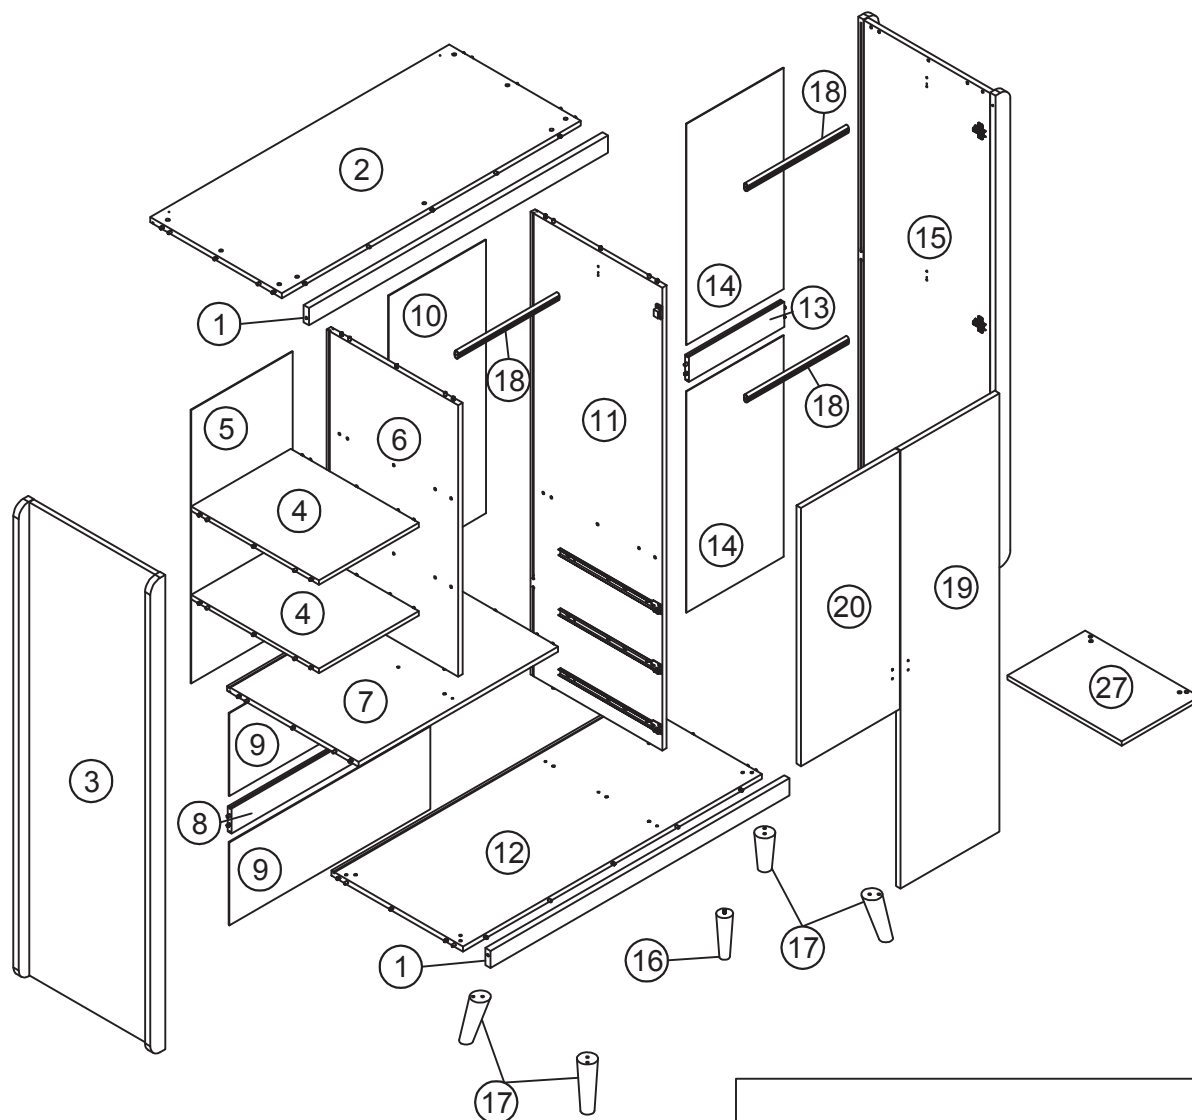


      
 





 
 
 
Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish

## GETTING TO KNOW YOUR PRODUCT



 
Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	6x120cm		2	2
2	53x120cm		1	2
3	55x165cm		1	1
4	40x51cm		2	1
5	41x95cm		1	2
6	52.5x94cm		1	2
7	53x80cm		1	2
8	8.5x80cm		1	1
9	29x81cm		2	2
10	39x95cm		1	2
11	53x161cm		1	1
12	53x120cm		1	2
13	8.5x38.5cm		1	1

Ref	Dimensions	Visual	Qty	Ctn
14	39x77cm		2	2
15	55x165cm		1	1
16	5.5x15cm		1	2
17	5.5x15cm		4	2
18	3x37.5cm		3	2
19	39.5x152cm		1	1
20	39.5x89.5cm		1	1
21	14.5x75cm		3	2
22	14.5x40cm		3	2
23	14.5x40cm		3	2
24	6x38.5cm		3	2
25	39x76cm		3	2
26	20.5x79.5cm		3	2
27	51.5x38cm		1	1

### Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B2	Ø15 x 10mm	N/A	2
B3	Ø15 x 12mm	4	2
B8	Ø8 x 38mm	N/A	2
D3	Ø6 x 30mm	N/A	2
D6	Ø8 x 30mm	N/A	2
Y8	Ø6 x 50mm	6	1
B12	Ø7.5 x 33mm	4	1
U139	Ø4.5 x 15mm	10	2
S41	Ø4 x 16mm	2	1
W17	Ø8 x 35mm	8	1
Z23	Ø4 x 25mm	16	2
U136	Ø4 x 14mm	6	1

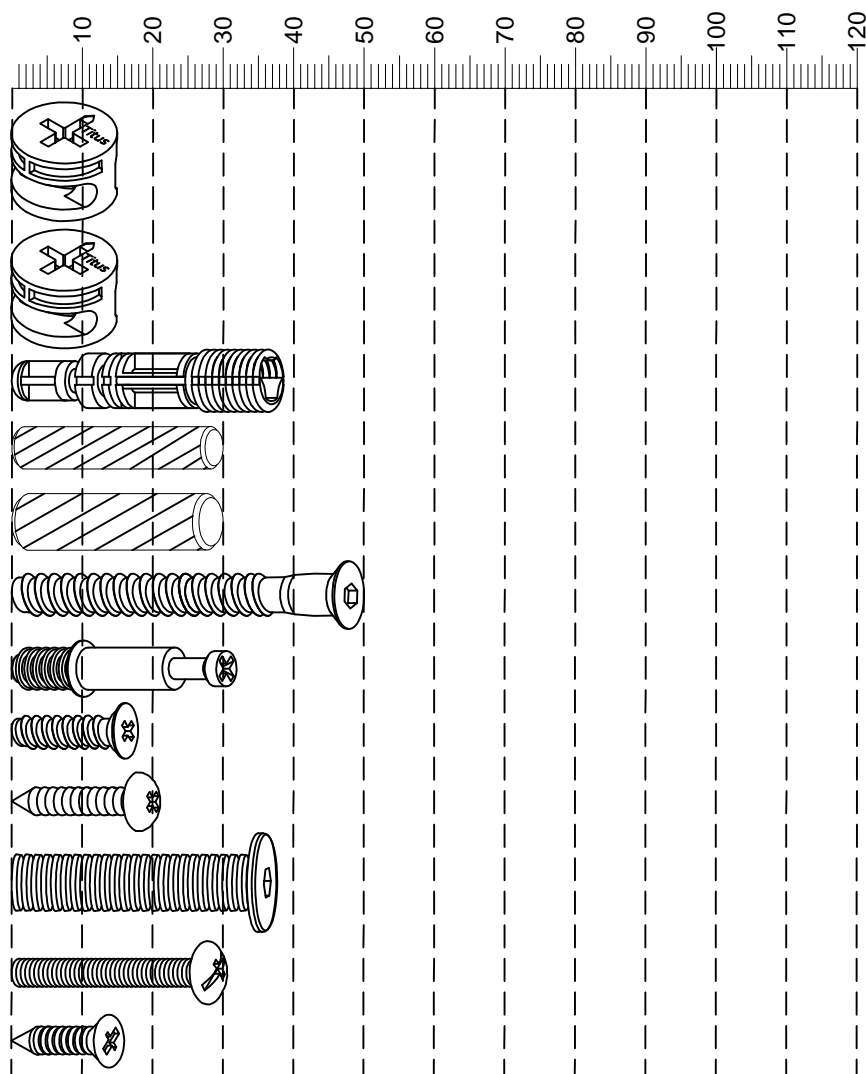



### Fixtures and fittings supplied ( not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T4	N/A	2	N/A	
N1	N/A	2	N/A	
T38	N/A	18	2	
A13	N/A	6	N/A	

### Fixtures and fittings supplied ( not to scale)

  
Ref	Dimensions	Qty	Spare Qty	Visual
C11	N/A	3	N/A	
C16	N/A	2	N/A	
E43	N/A	8	N/A	

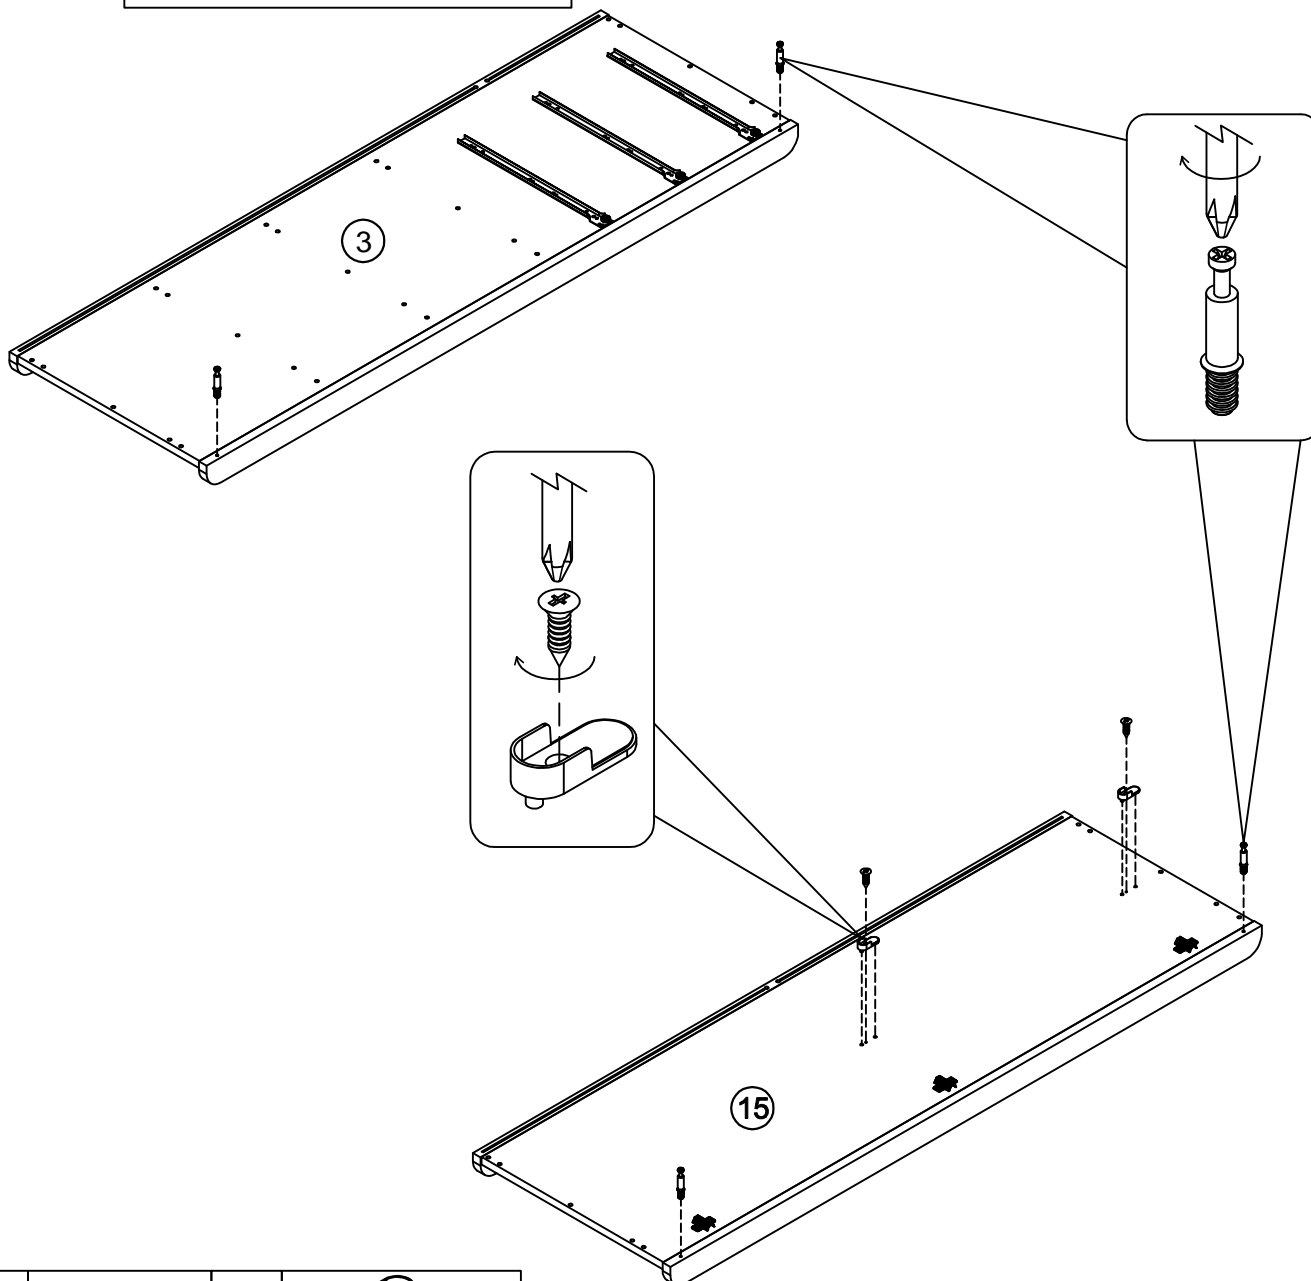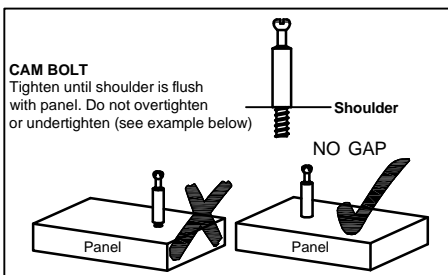


1





A13	N/A	2		
U136	Ø4 x 14mm	2		PH2 not supplied
B12	Ø7.5 x 33mm	4		PH2 not supplied

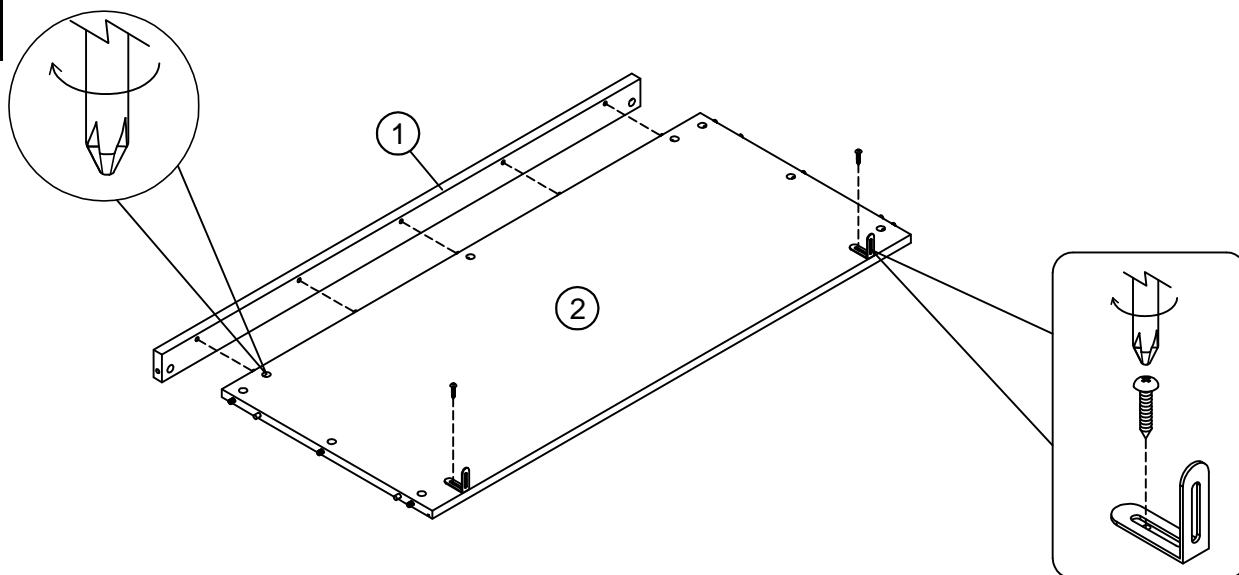 

2




N1	N/A	2	
S41	Ø4 x 16mm	2	  not supplied

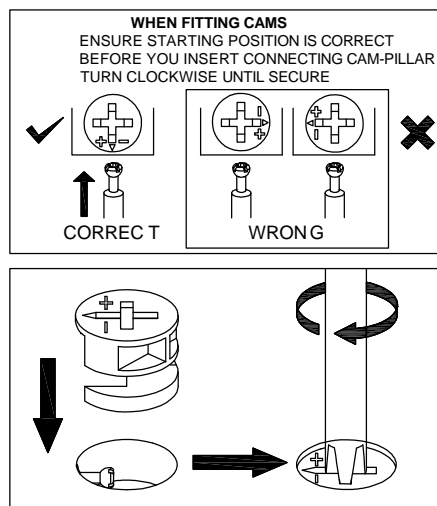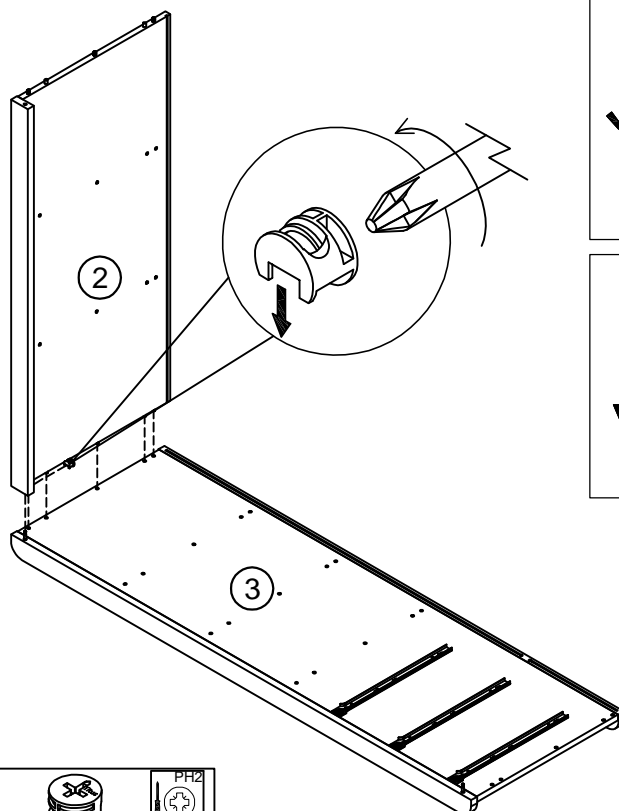  3




B3	Ø15 x 12mm	1	  not supplied
----	------------	---	---


 
 
4

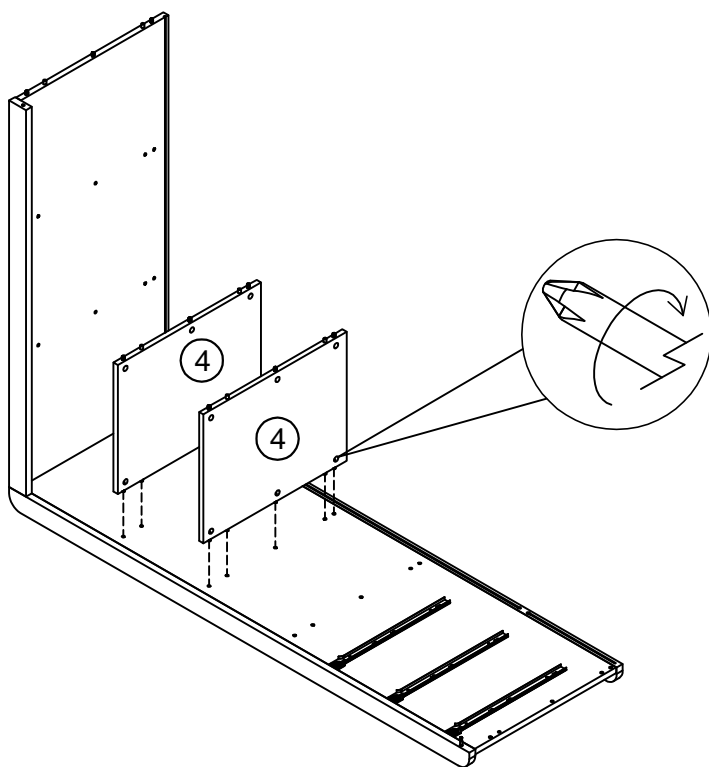

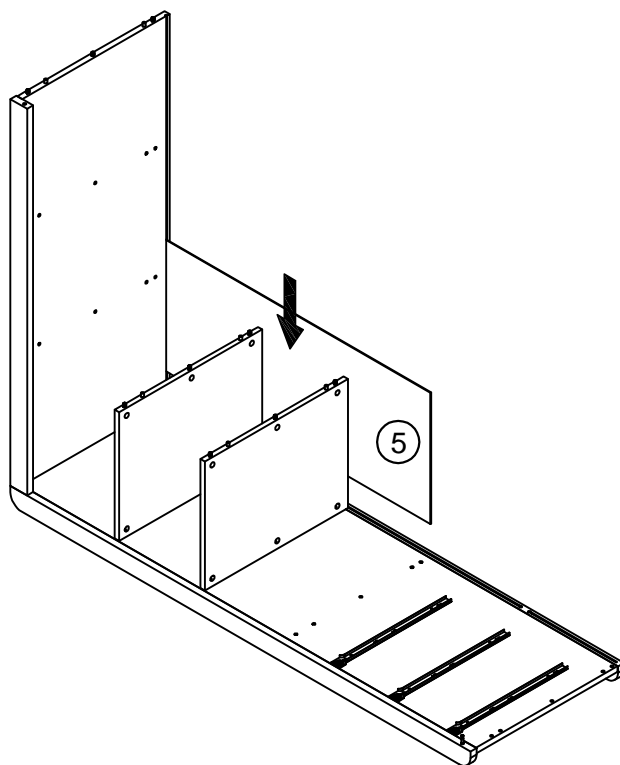


5

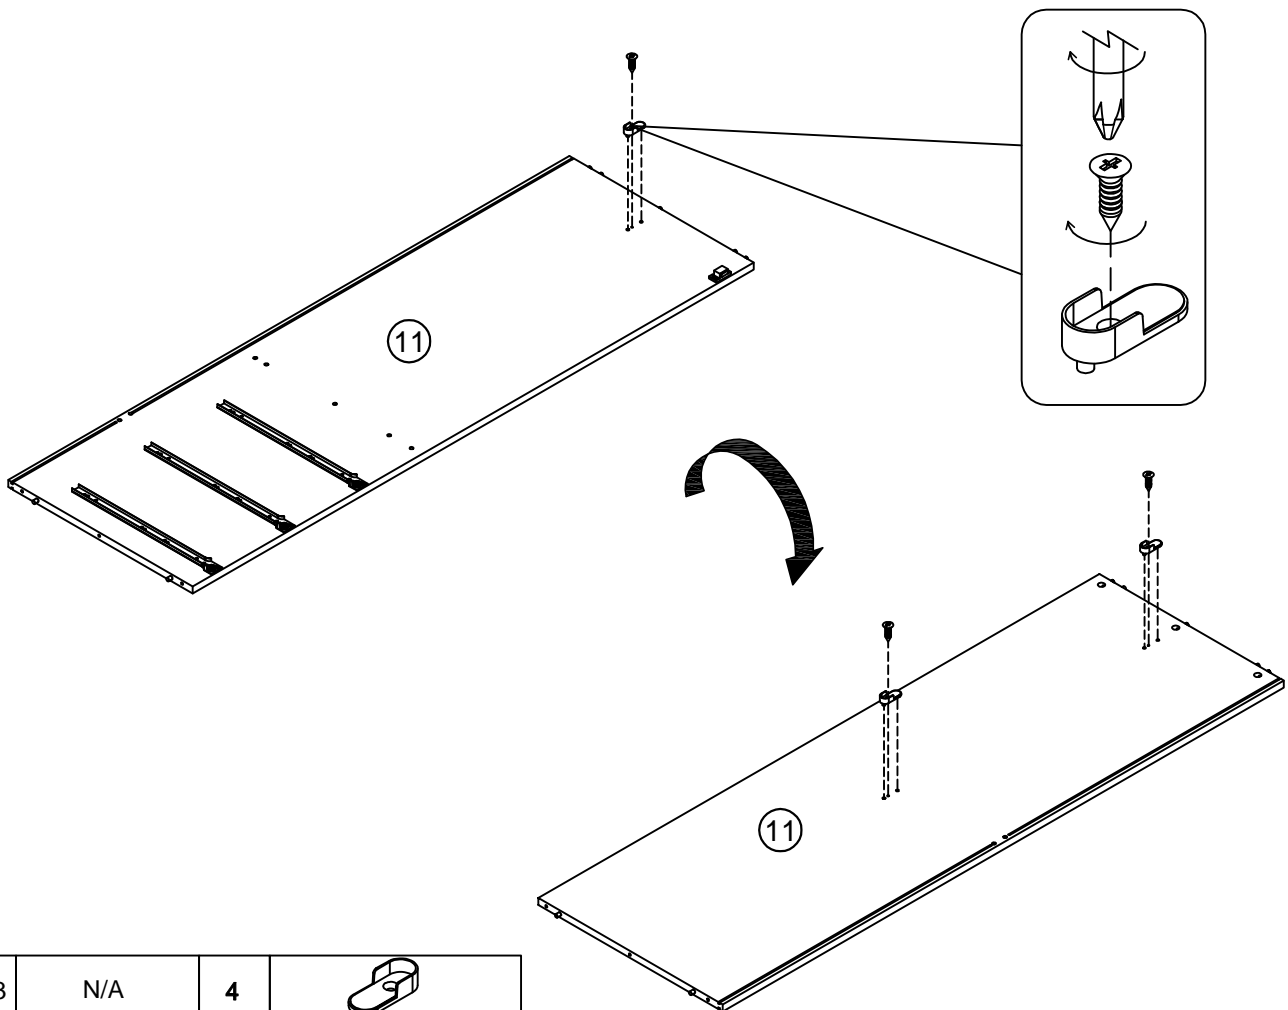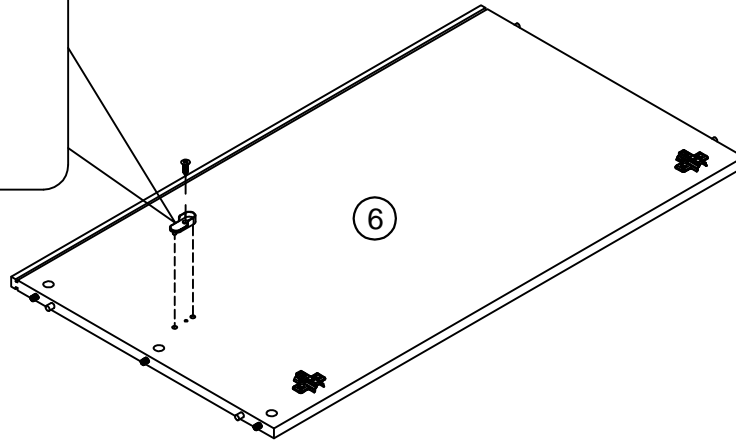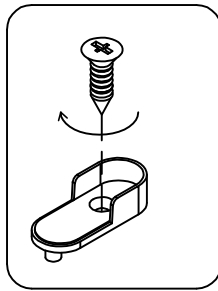   


6

 


A13	N/A	4	
U136	Ø4 x 14mm	4	 



 not supplied

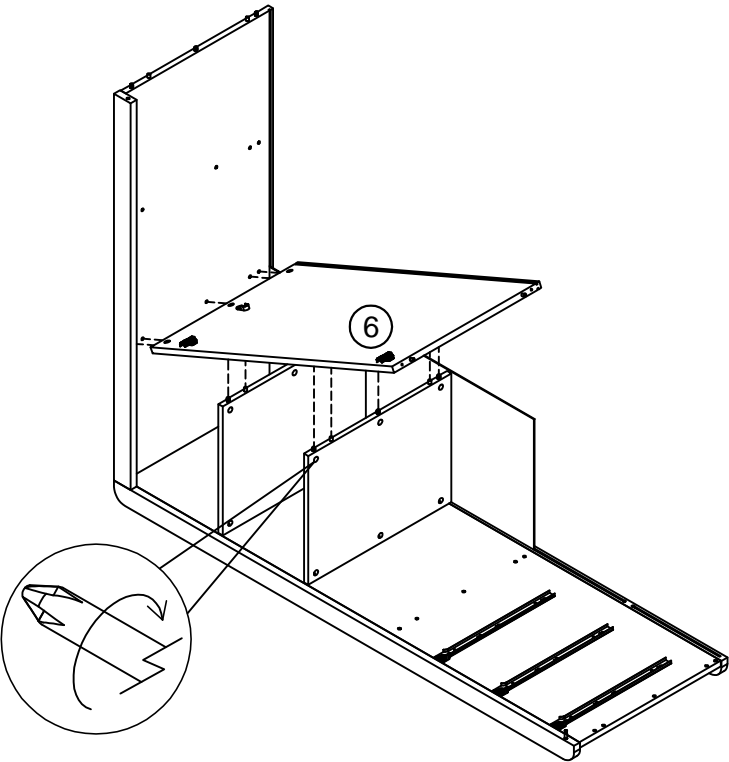7

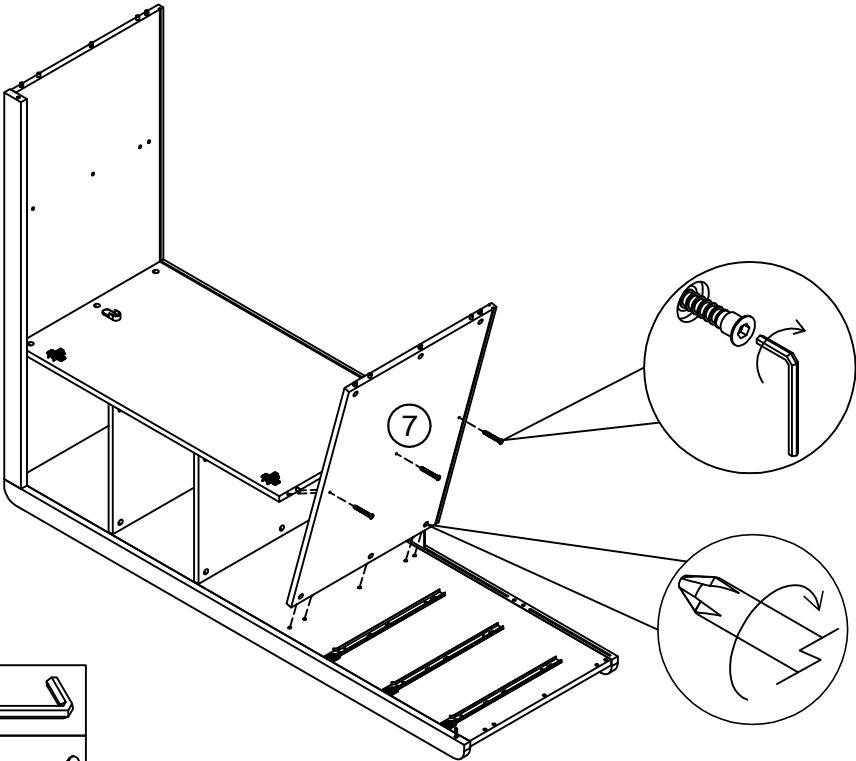 


8




T4	N/A	2	
Y8	Ø6 x 50mm	3	

 
9

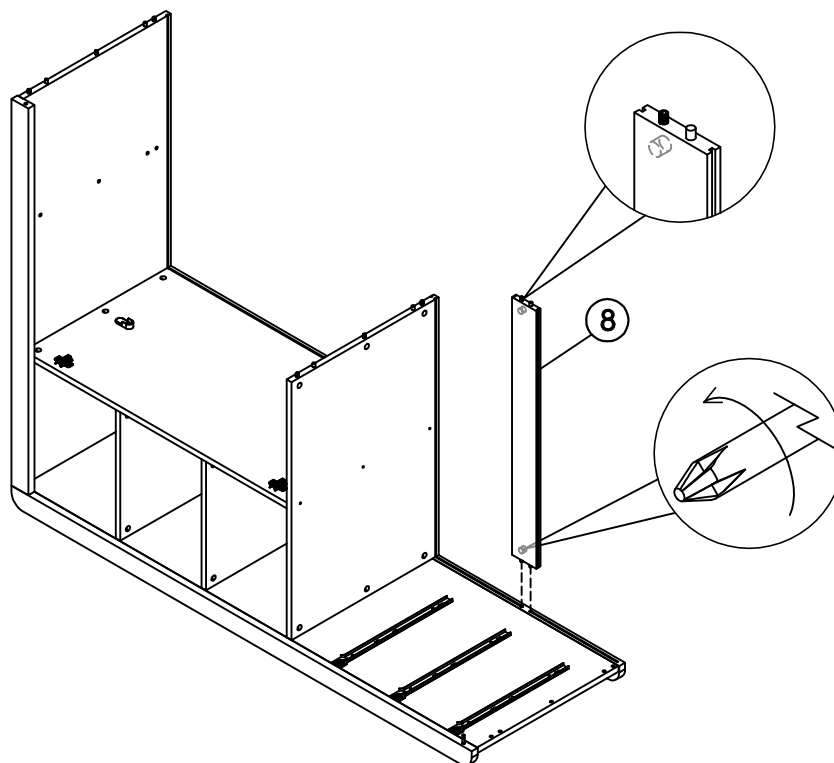


10

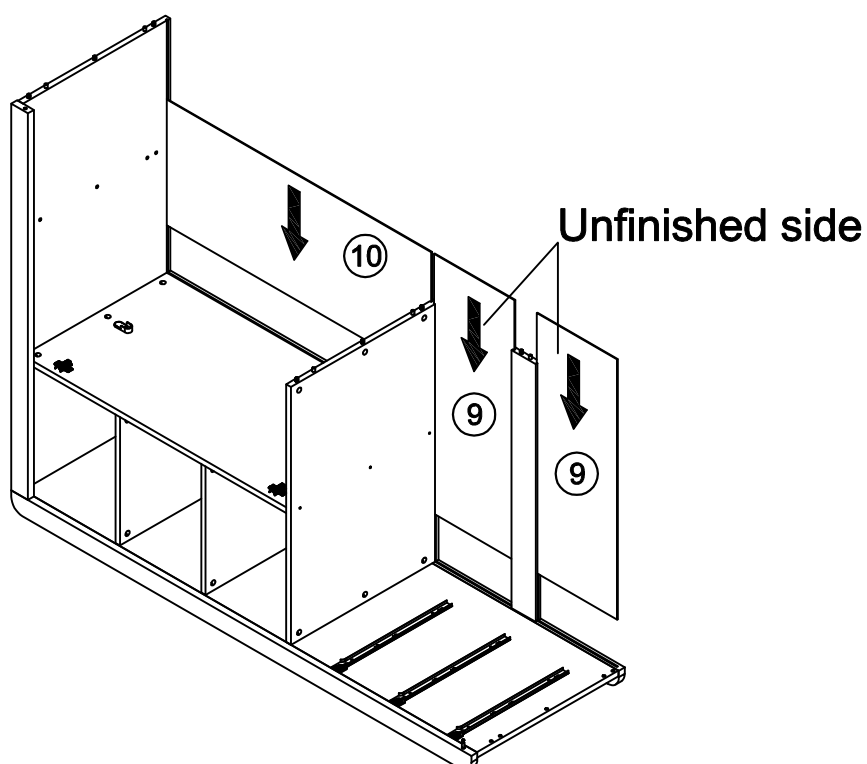 





11

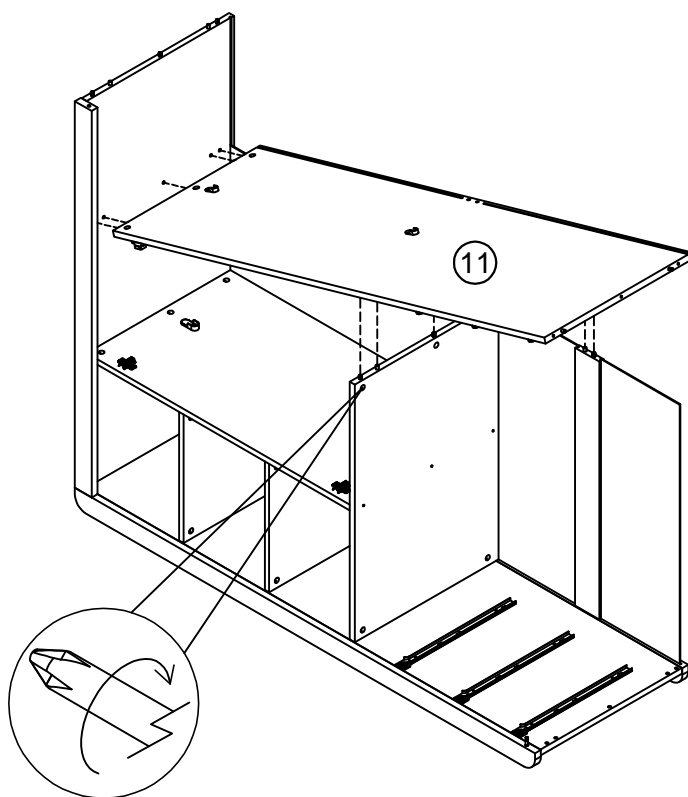 

12

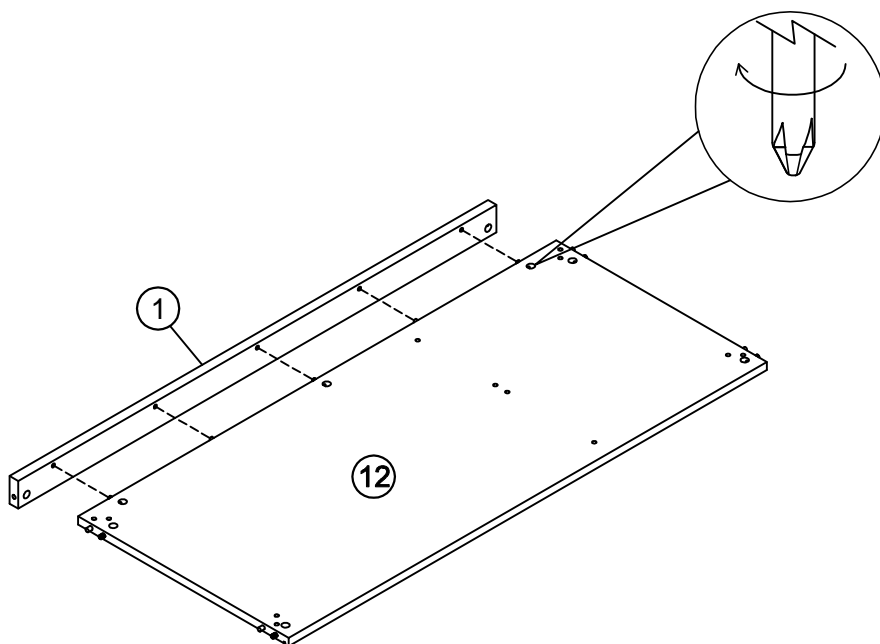 


13

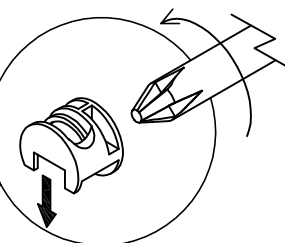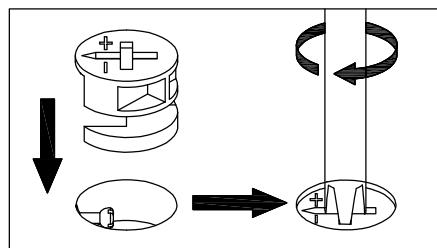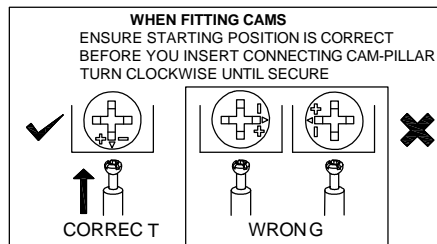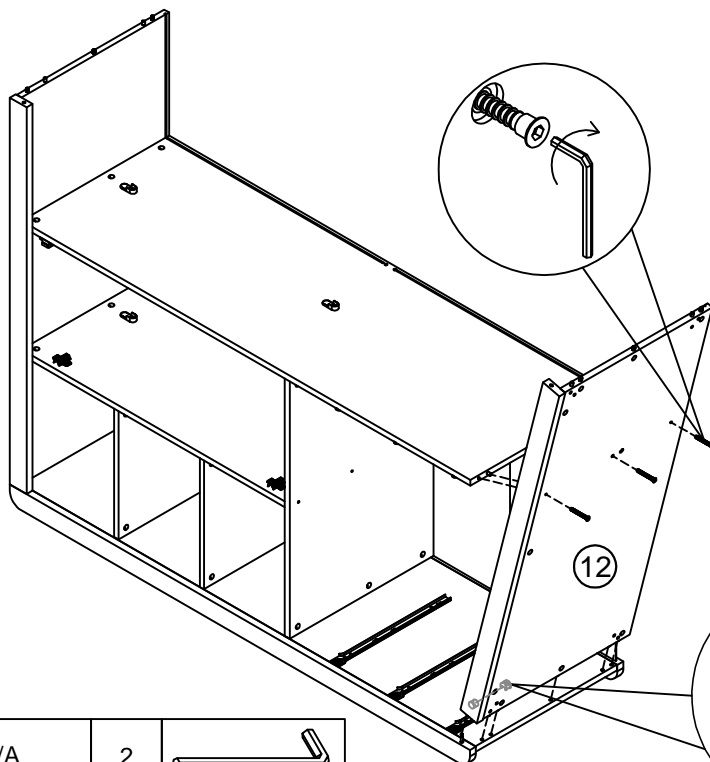    


T4	N/A	2	
Y8	Ø6 x 50mm	3	
B3	Ø15 x 12mm	1	 not supplied


 
14

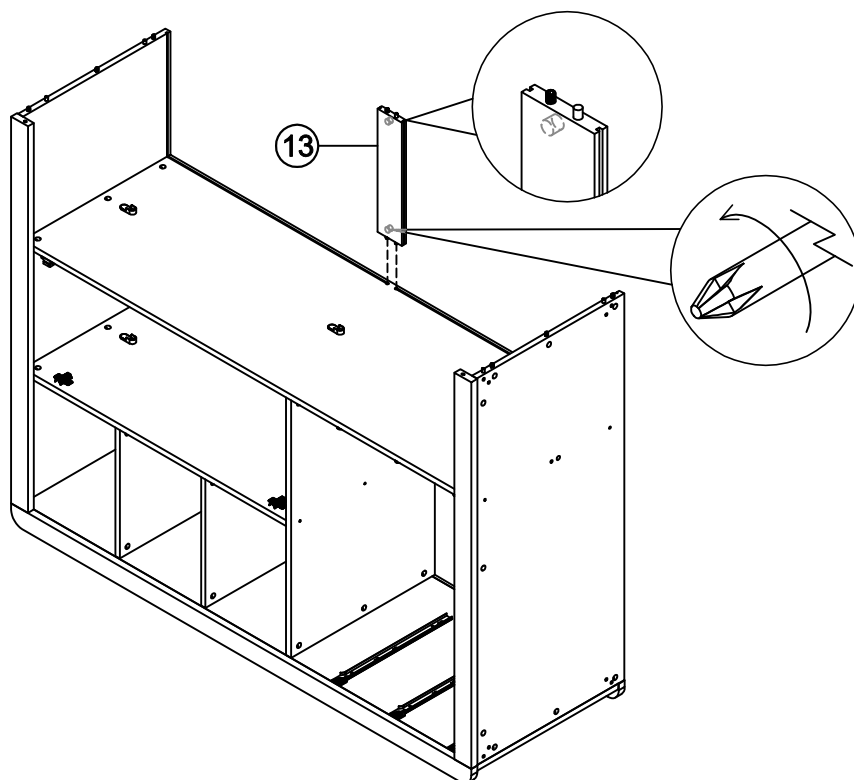

15

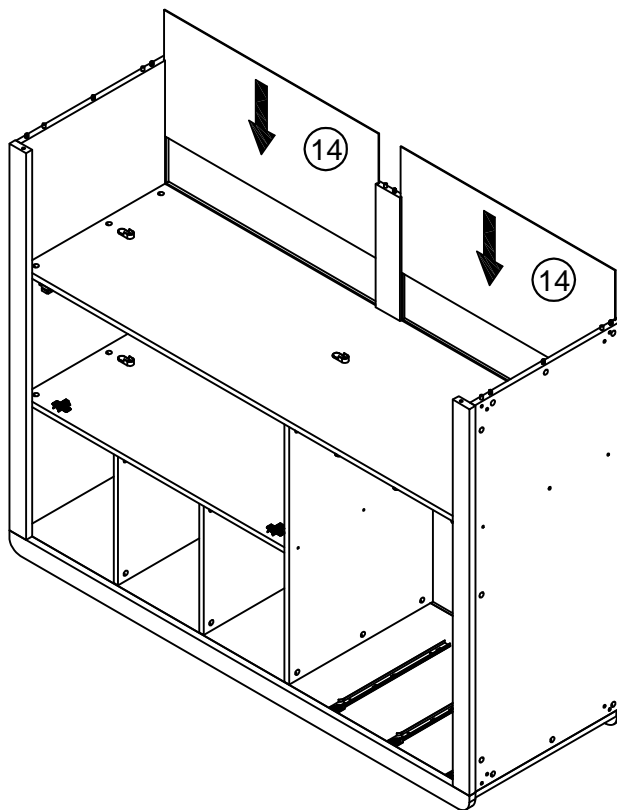 

16

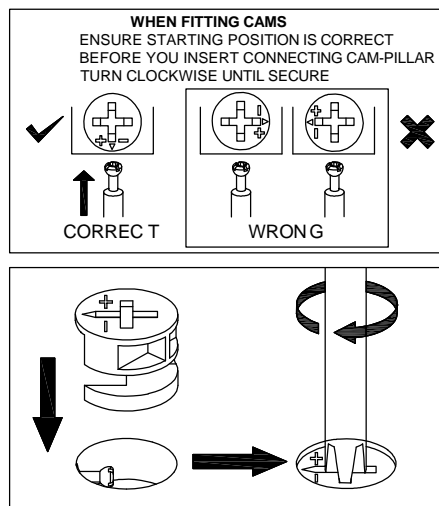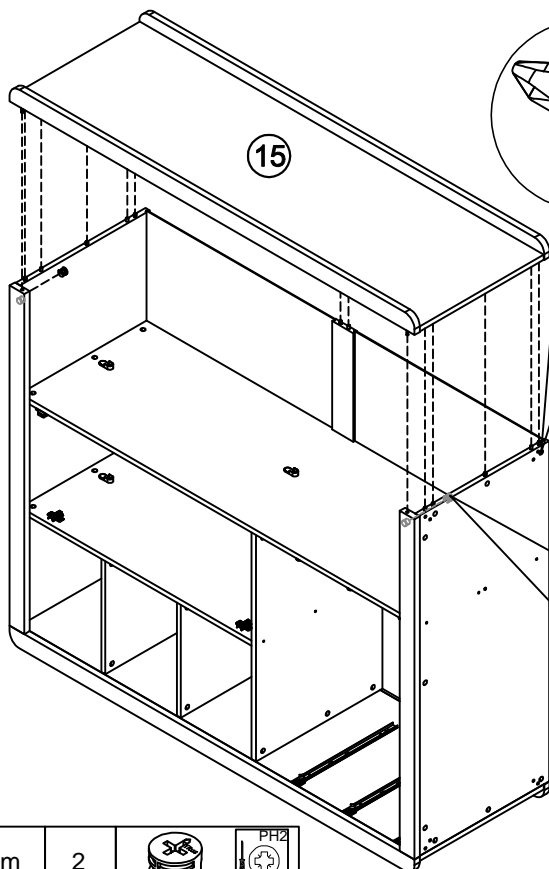  




B3 Ø15 x 12mm

2




not supplied

   17

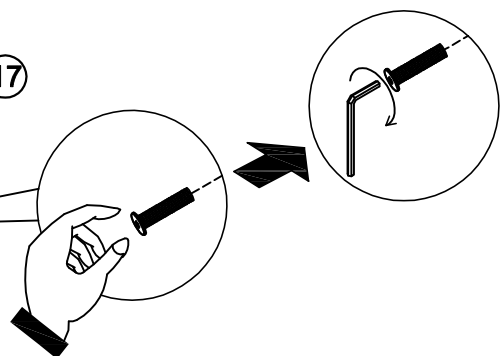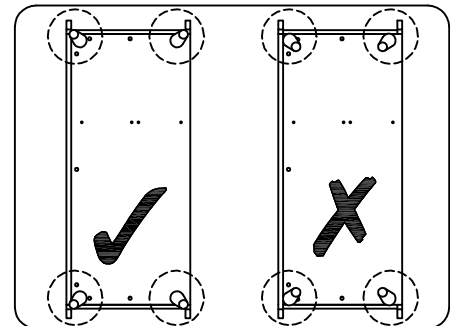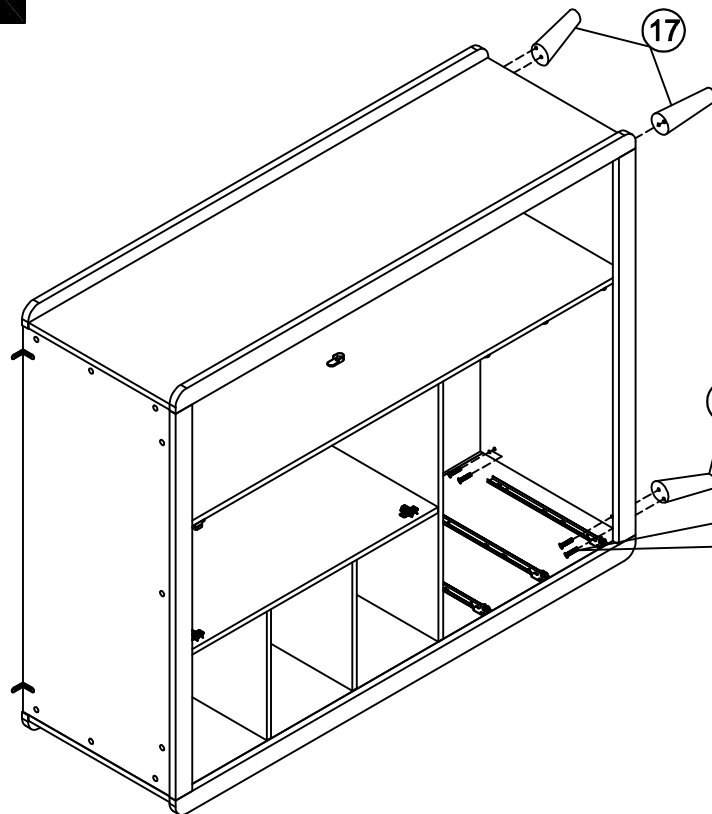


T4	N/A	2	
W17	Ø8 x 35mm	8	

 
18

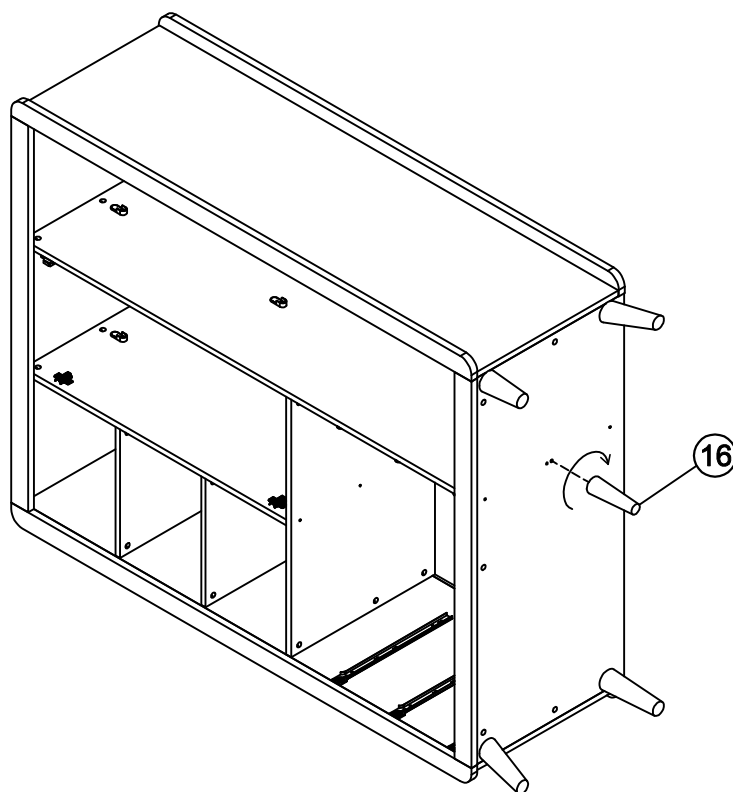

19

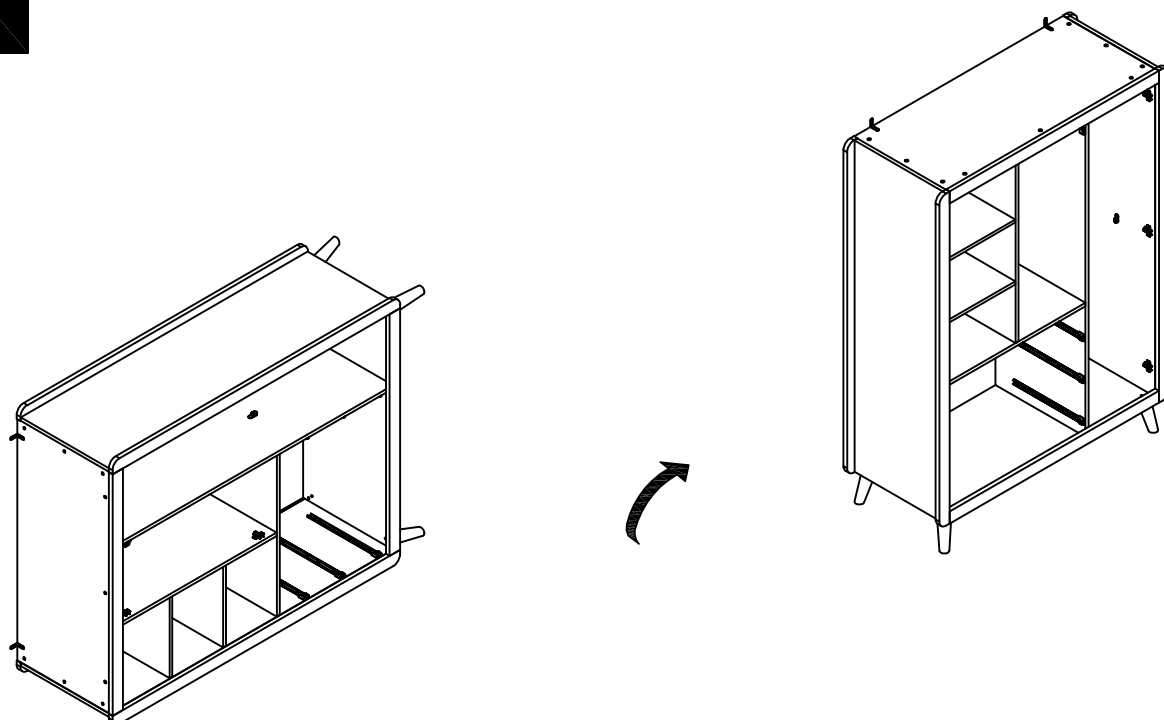 

20

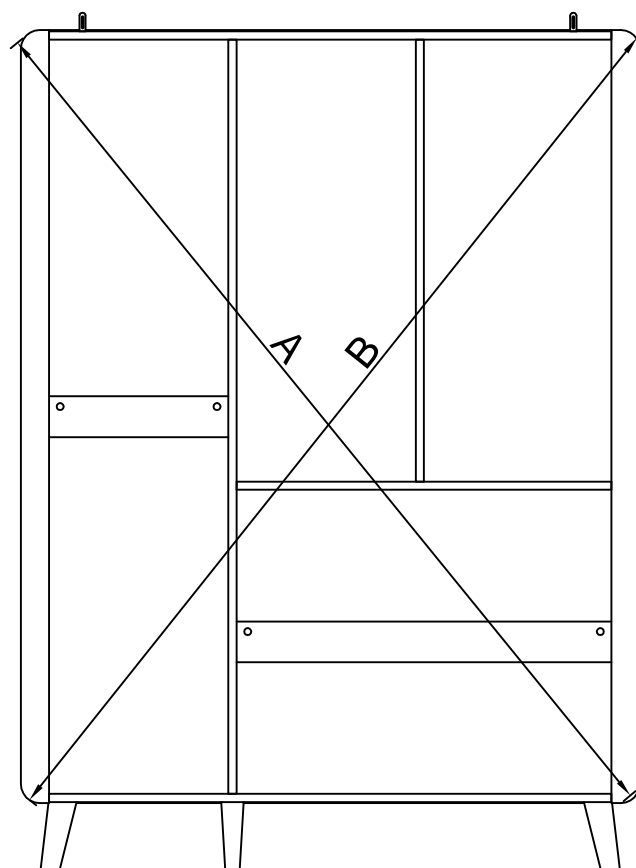 

$A=B$

 
 
 
 
 
21

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X"L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

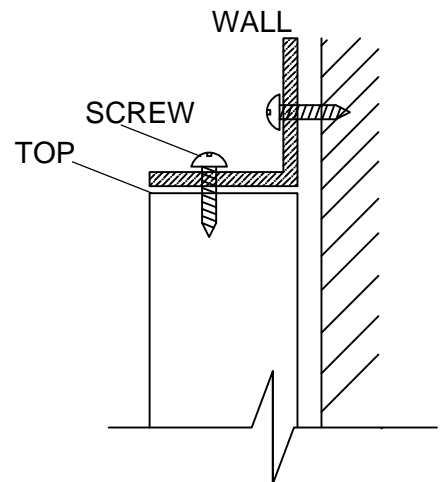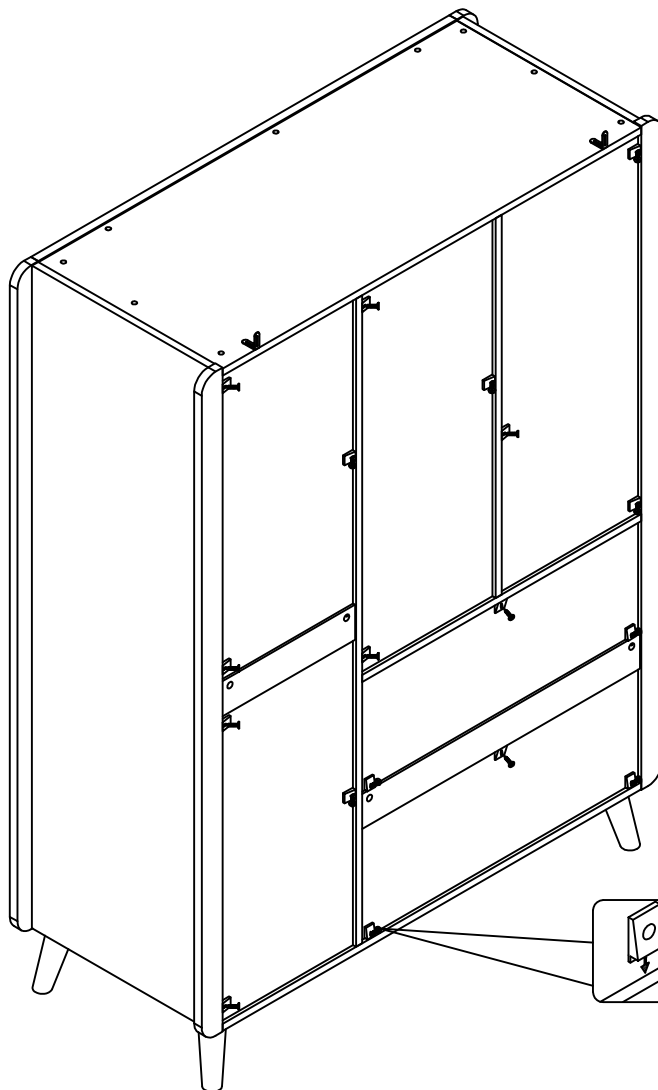

## WHEN LOOSENING THE CAM

TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



MAXIMUM  
LOCK



TURN  
TO UNLOCK



UNLOCKED

 
T38

N/A

 
 
18


 



22


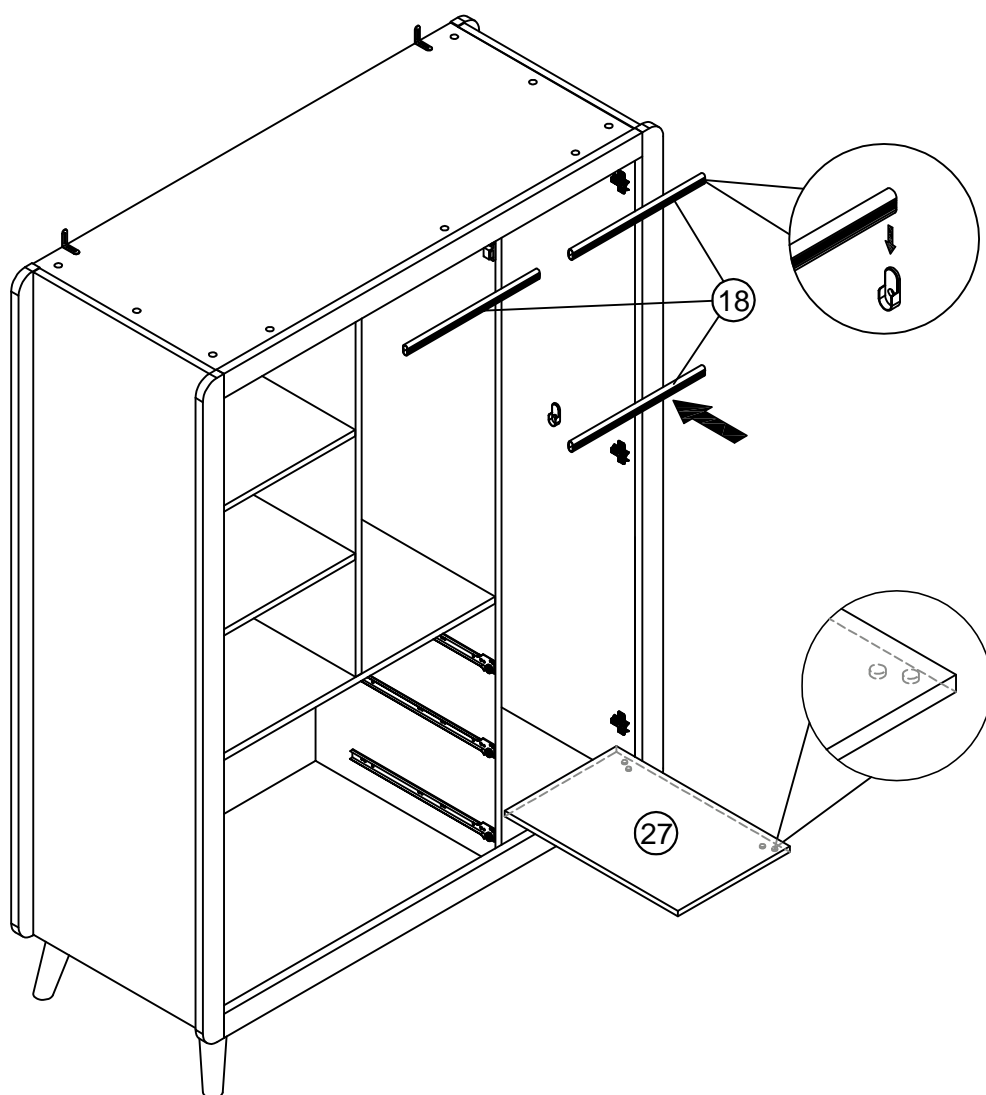


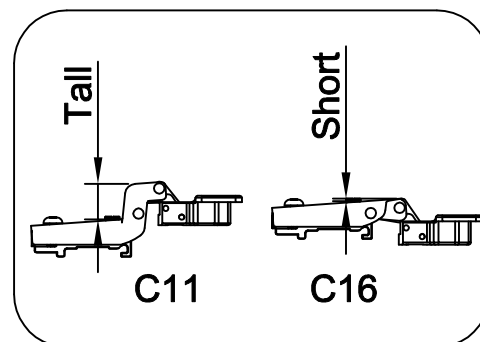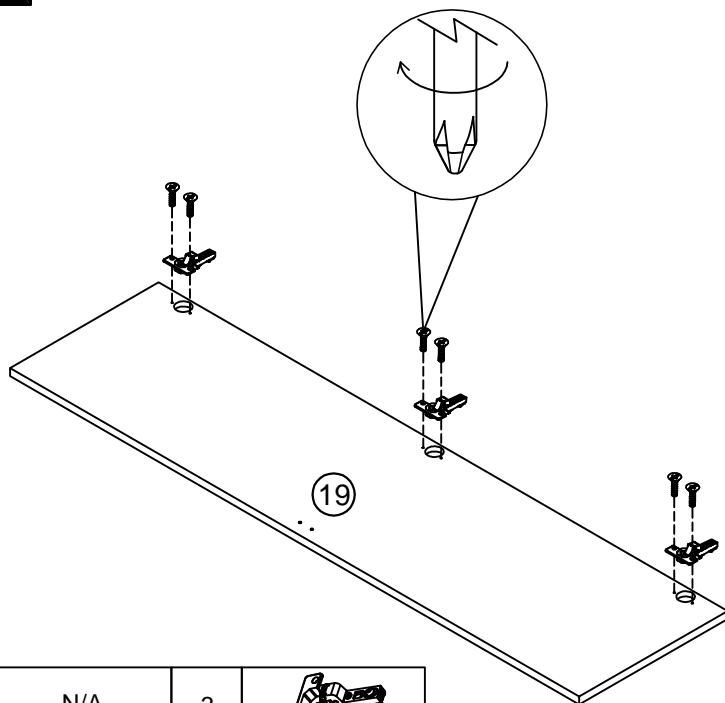

23



C11	N/A	3	
U139	Ø4.5 x 15mm	6	  not supplied

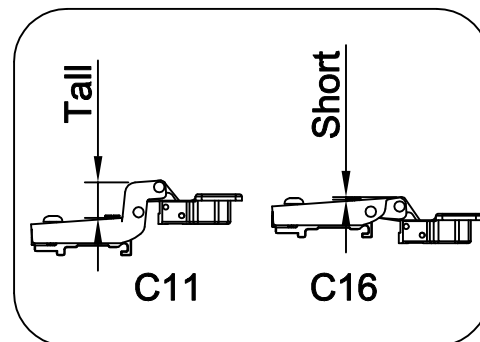 
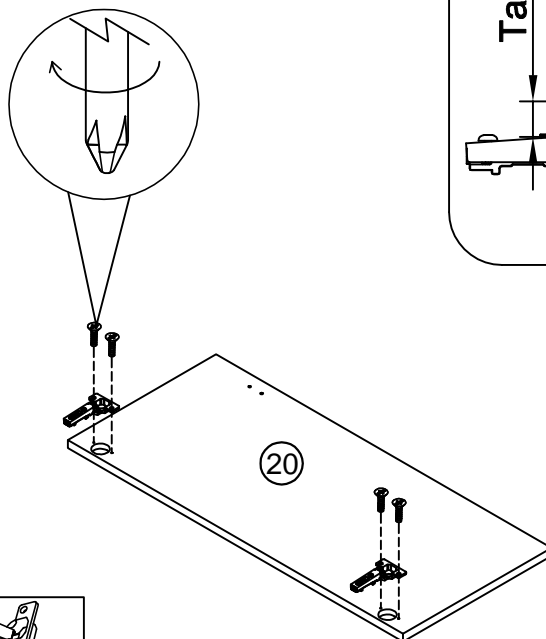 
24






C16	N/A	2	
U139	Ø4.5 x 15mm	4	  not supplied

25

## Install hinge

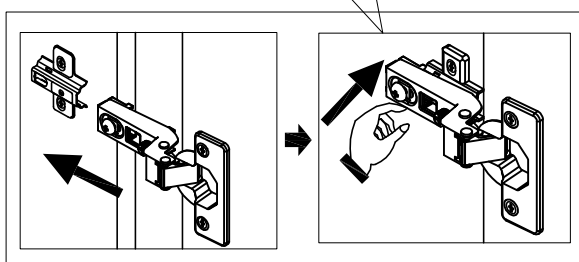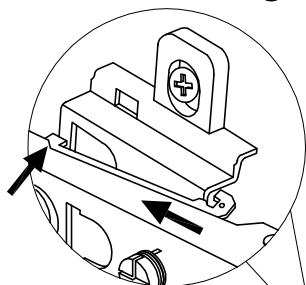  


## Remove hinge

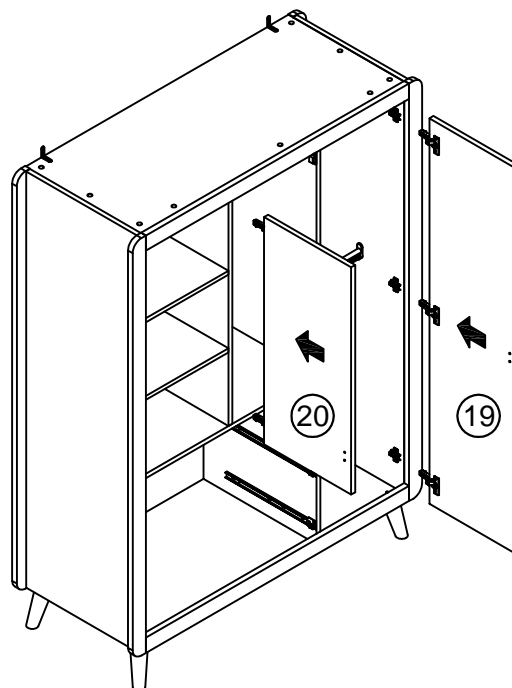 
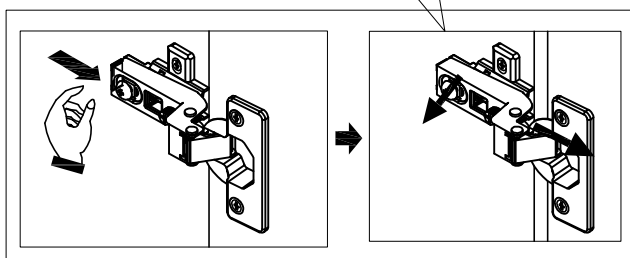 
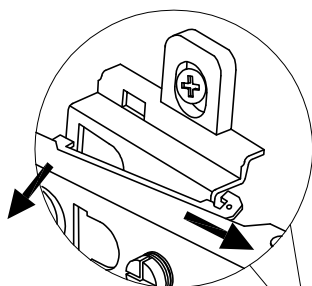 


## Adjust Hinge Position



 
### LATERAL

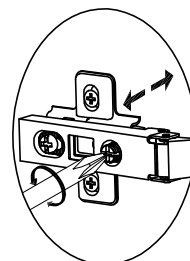


### VERTICAL

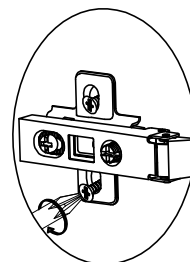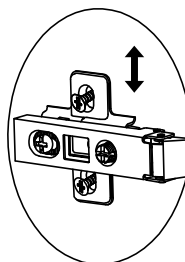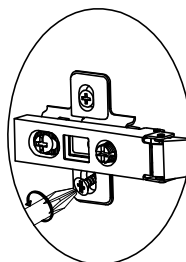   

### FRONT- TO-BACK

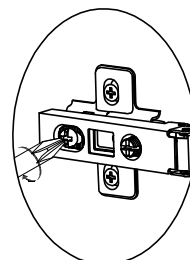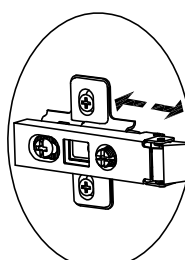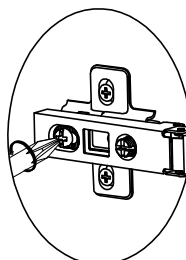   


26

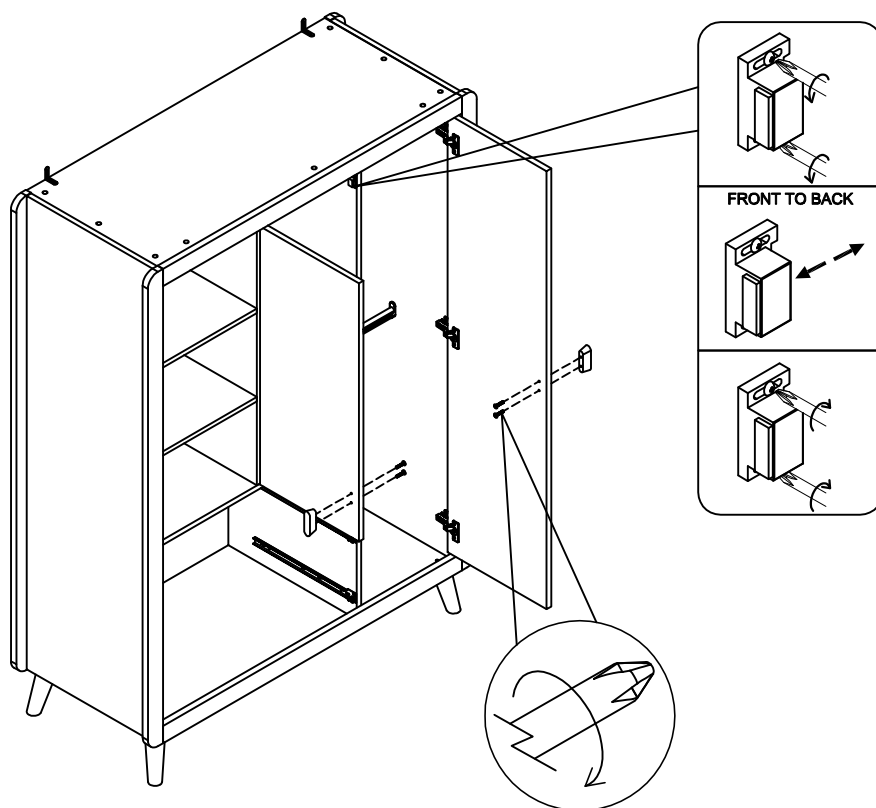 


E43	N/A	2	
Z23	Ø4 x 25mm	4	<small>PH2 not supplied</small>

 27

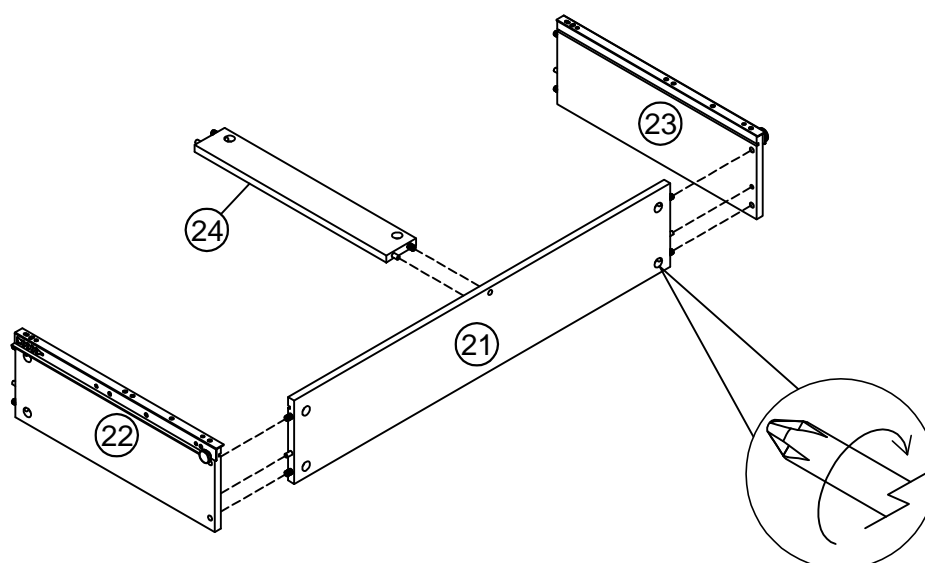


X3

 28

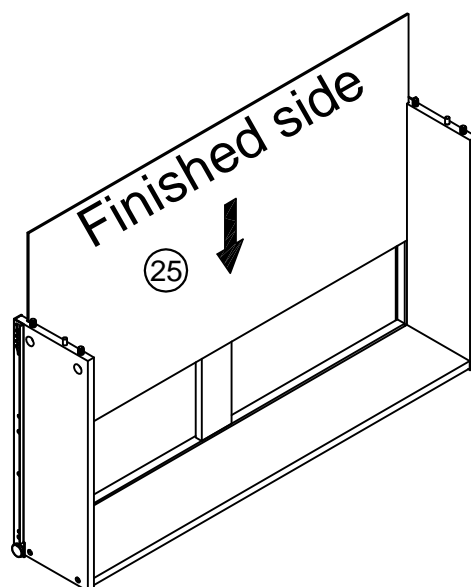


X3

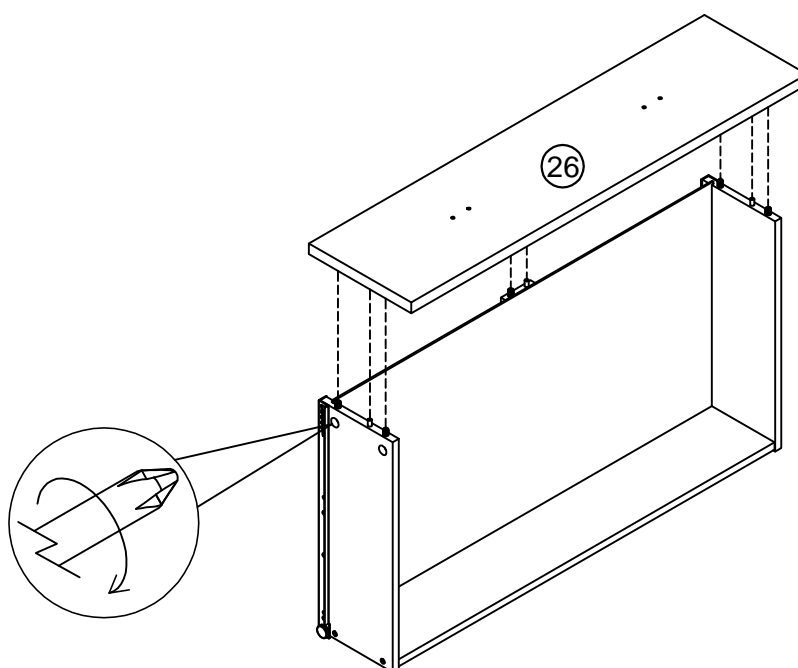 


29



 X3

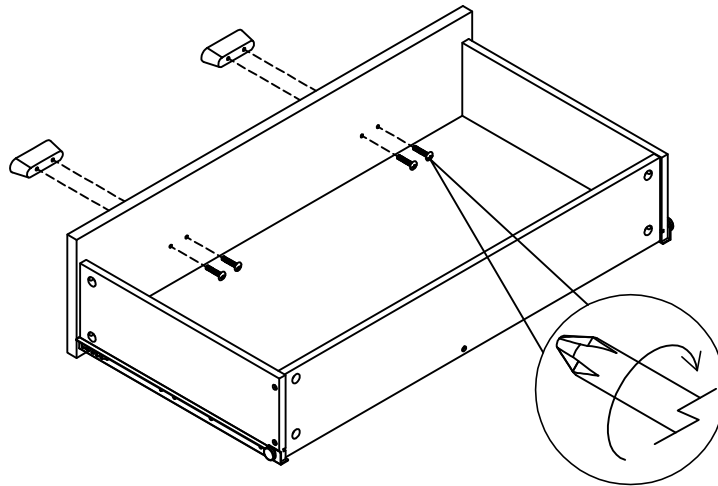
30




E43	N/A	6	
Z23	Ø4 x 25mm	12	  not supplied

X3

 31

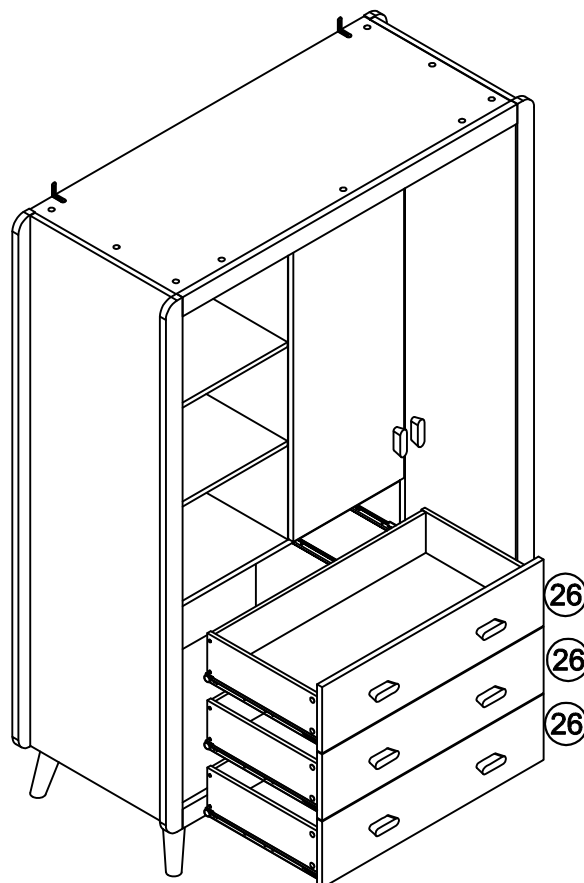

32


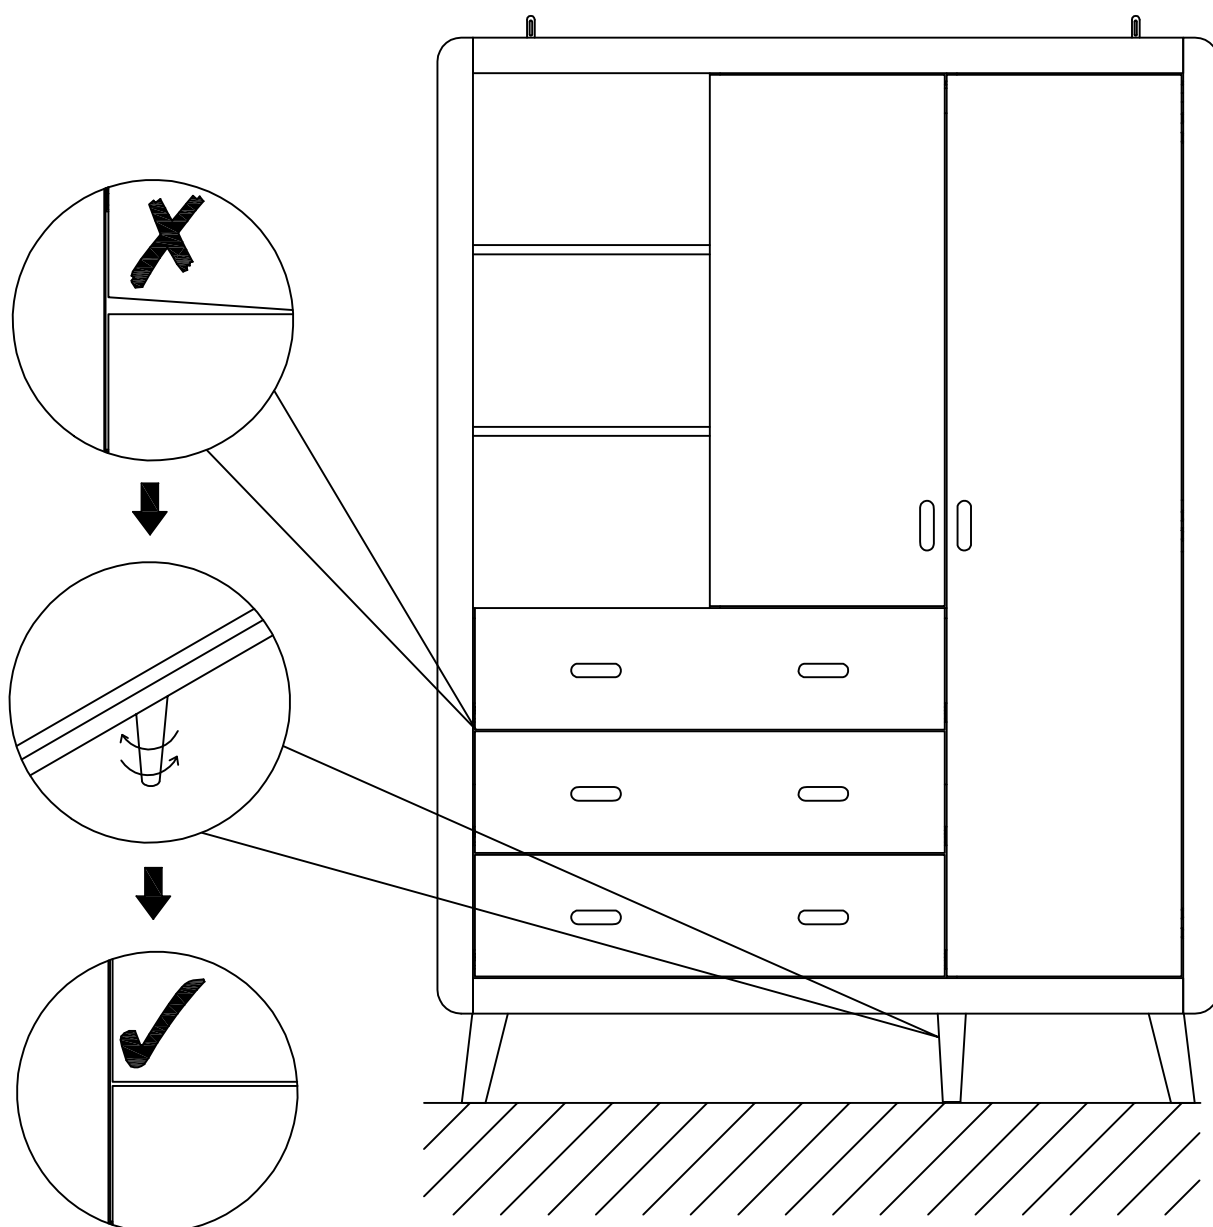 


next

# ALIX KIDS TRIPLE WARDROBE

  A19038

Actual product size  
H180 x W132 x D55cm

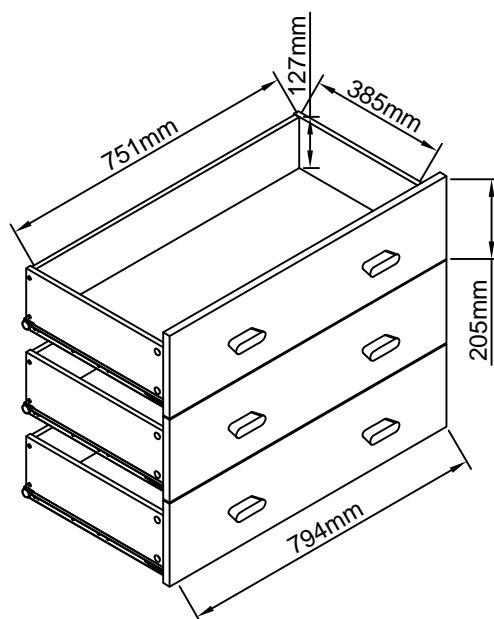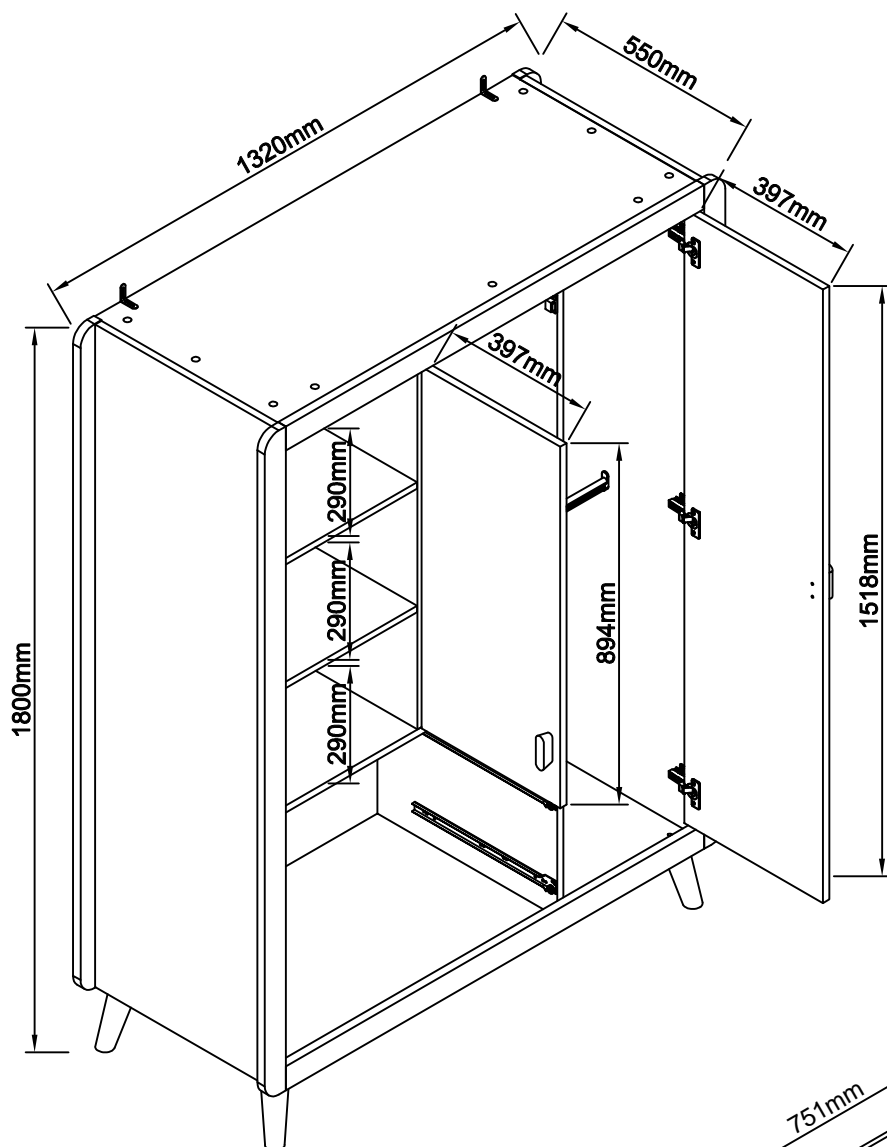

## Warnings

We suggest you retain these instructions for future reference

Keep fittings out of children's reach and keep children well away from the construction area

This product should only be used on firm, level ground

Please periodically check all fittings and re-tighten as necessary

Please do not sit or stand on your furniture

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

## Do's

We suggest you spend a short time reading through this leaflet before you start

When you are ready to start, make sure that you have the right tools and plenty of space

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly

Carefully check that you have all the parts before beginning assembly

Due to the size of the product we recommend that it is assembled in the room intended for use

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use

## Don'ts

Do not drag or pull your furniture

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish

## Missing parts

If you are missing any fixtures and fittings for your product.

Please contact our customer service team on 0333 777 8999

and they will be happy to arrange for a replacement to be sent to you free of charge.

## Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

## You can write to us at

Home Customer Services

Next Retail Ltd.

Desford Road,

Leicester,

LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)

## Testing

This product conforms to FRQG C001: 2016 and C004: 2016+A1: 2017

## PRODUCT SUPPLIED WITH WALL FIXING STRAPS