

NEXT

 
BRONX SHELving TV UNIT

A91704

Assembly instructions

Actual product size

H187 x W185 x D39cm

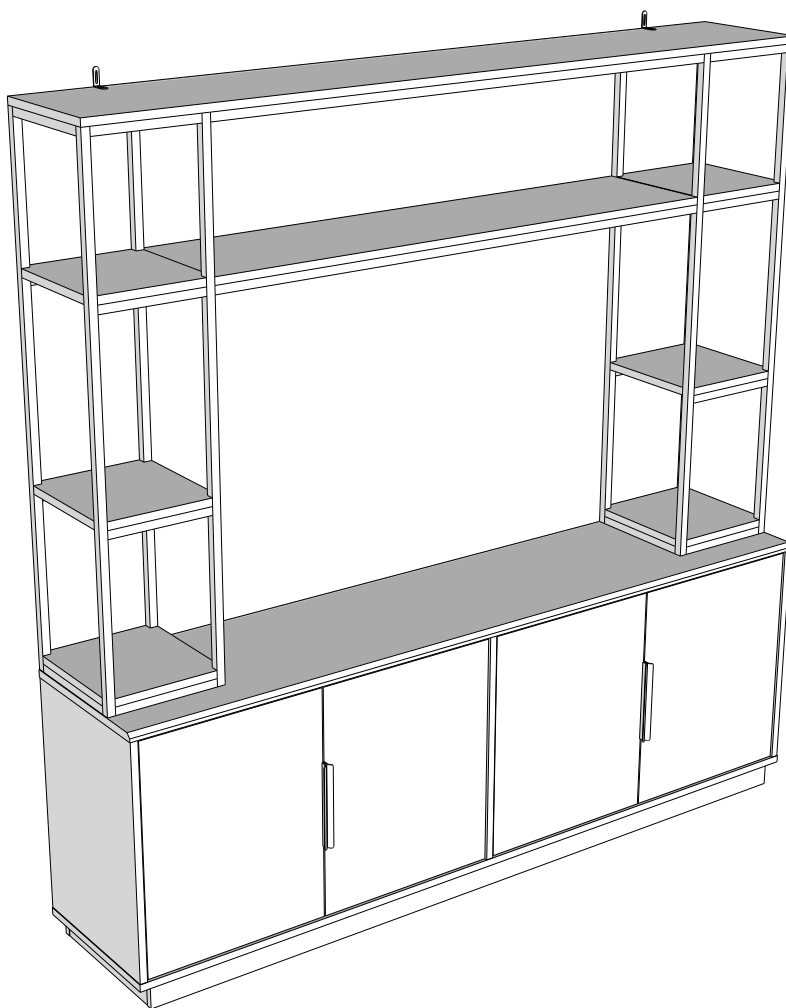

Need Help ?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

NEXT

BRONX SHELVING TV UNIT

A91704

Assembly instructions

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

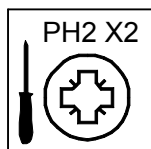

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

 
NEXT

BRONX SHELving TV UNIT

A91704

Assembly instructions

GETTING TO KNOW YOUR PRODUCT

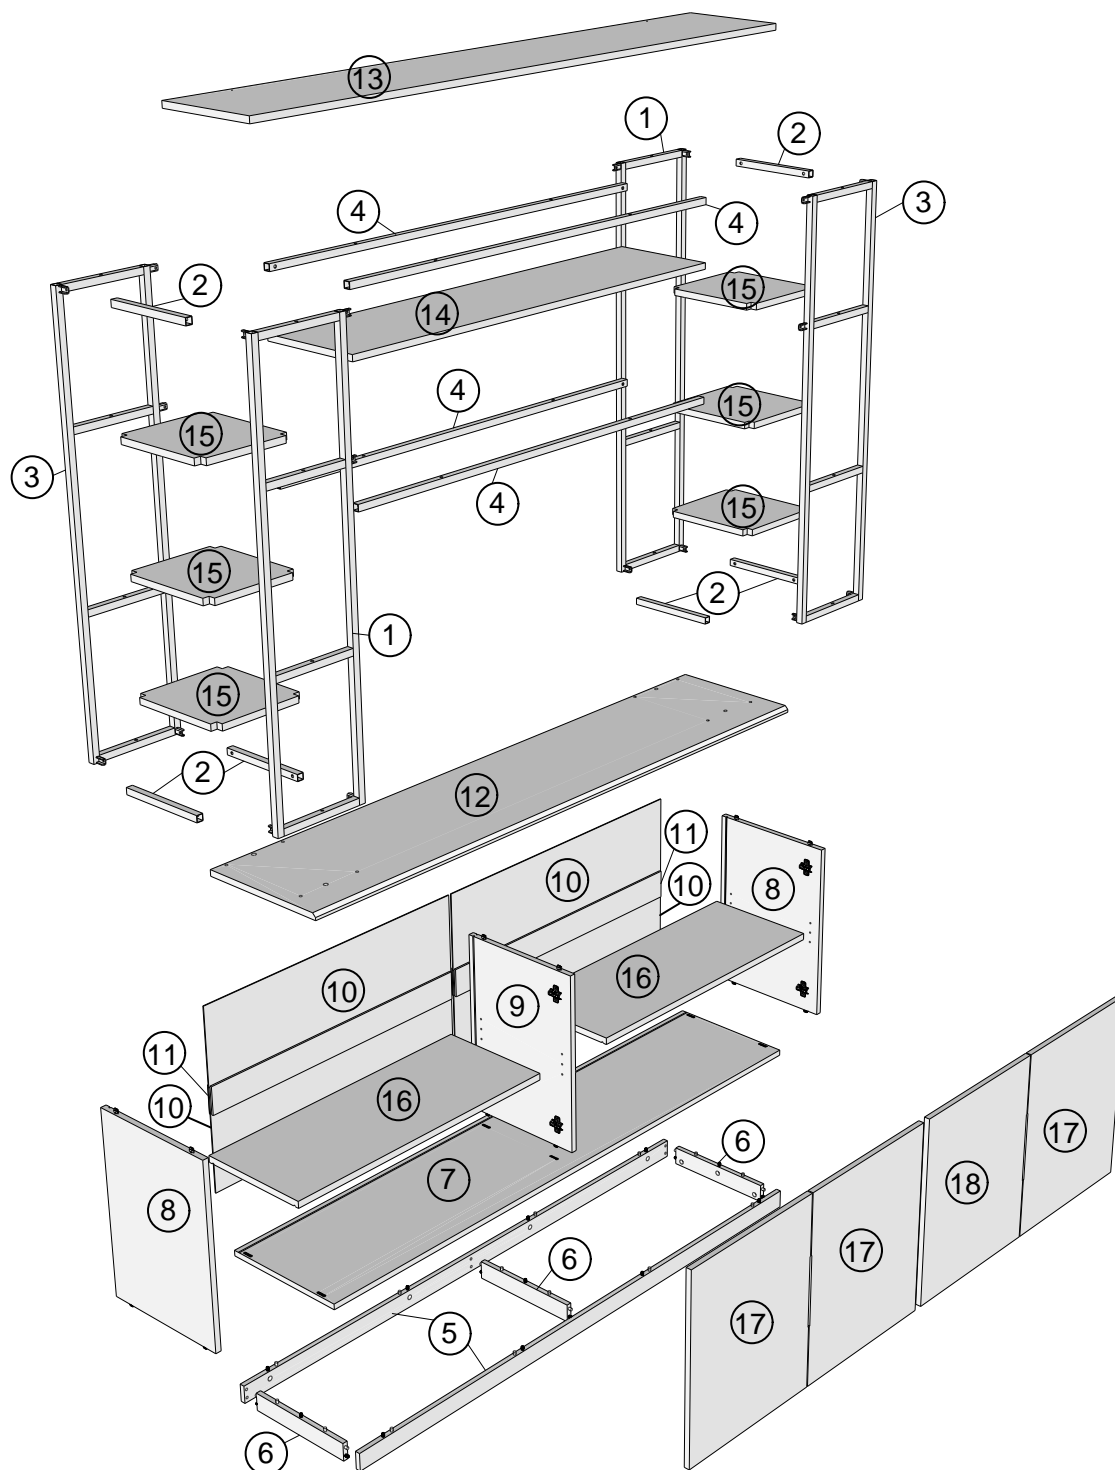

 
 
 

 
 
 
 
 
 
NEXT









BRONX SHELving TV UNIT

A91704



Assembly instructions

Components supplied. Please use this guide if you require replacement parts.


Ref	Dimensions	Visual	Qty	Ctn
1	28x120cm		2	1
2	2x26cm		6	2
3	28x120cm		2	1
4	2x128.5cm		4	1
5	5.5x179cm		2	1
6	5.5x34.5cm		3	1
7	39x185cm		1	1
8	39x55.5cm		2	2
9	39x55.5cm		1	2
10	24.5x90.5cm		4	1

        Ref	Dimensions	Visual	Qty	Ctn
11	8.5x90.5cm		2	1
12	39x185cm		1	1
13	29.5x184.5cm		1	1
14	29.5x128.5cm		1	1
15	28x29.5cm		6	2
16	34x89.5cm		2	1
17	44.5x55cm		3	2
18	44.5x55cm		1	2

  NEXT FITTINGS ASSEMBLE INSTRUCTIONS

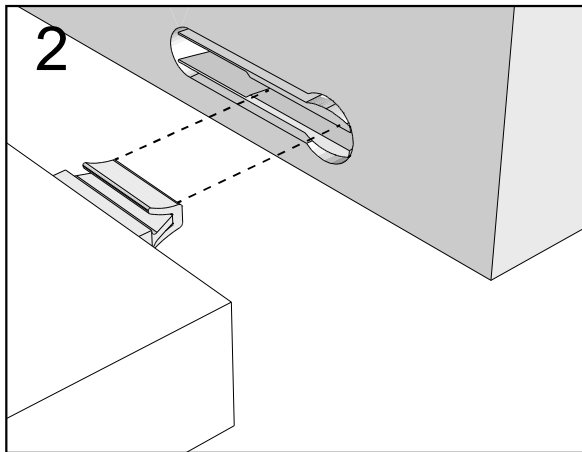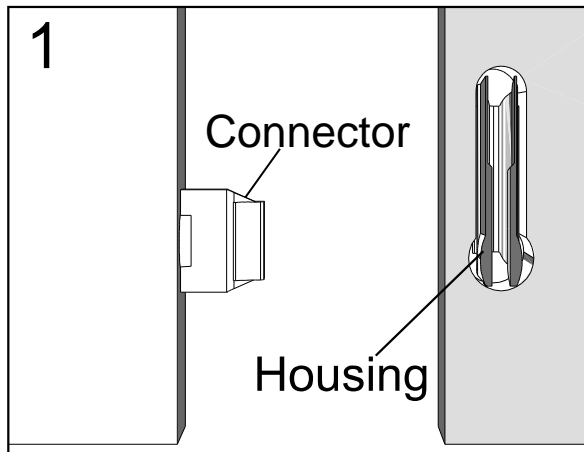

Push connector into housing to join.

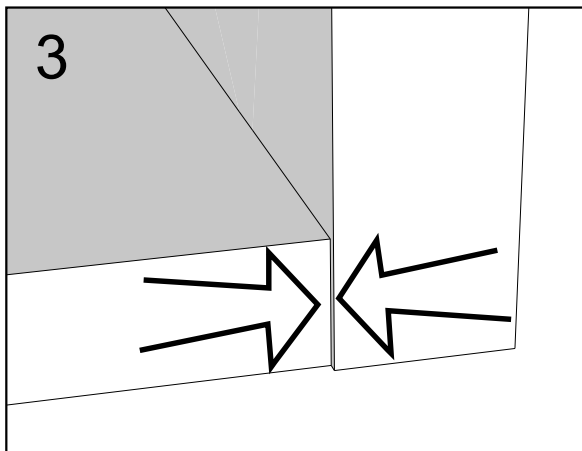 

Make sure there is no gap between the panels.

NEXT


BRONX SHELving TV UNIT

A91704

Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	N/A	2
B8	Ø8 x 38mm	N/A	2
D6	Ø8 x 30mm	N/A	2
U139	Ø4.5 x 15mm	16	2
S41	Ø4 x 16mm	2	1
V35	Ø6 x 12mm	20	2
V53	Ø6 x 30mm	8	1
P3	Ø5 x 16mm	8	1
V20	Ø4 x 30mm	24	2

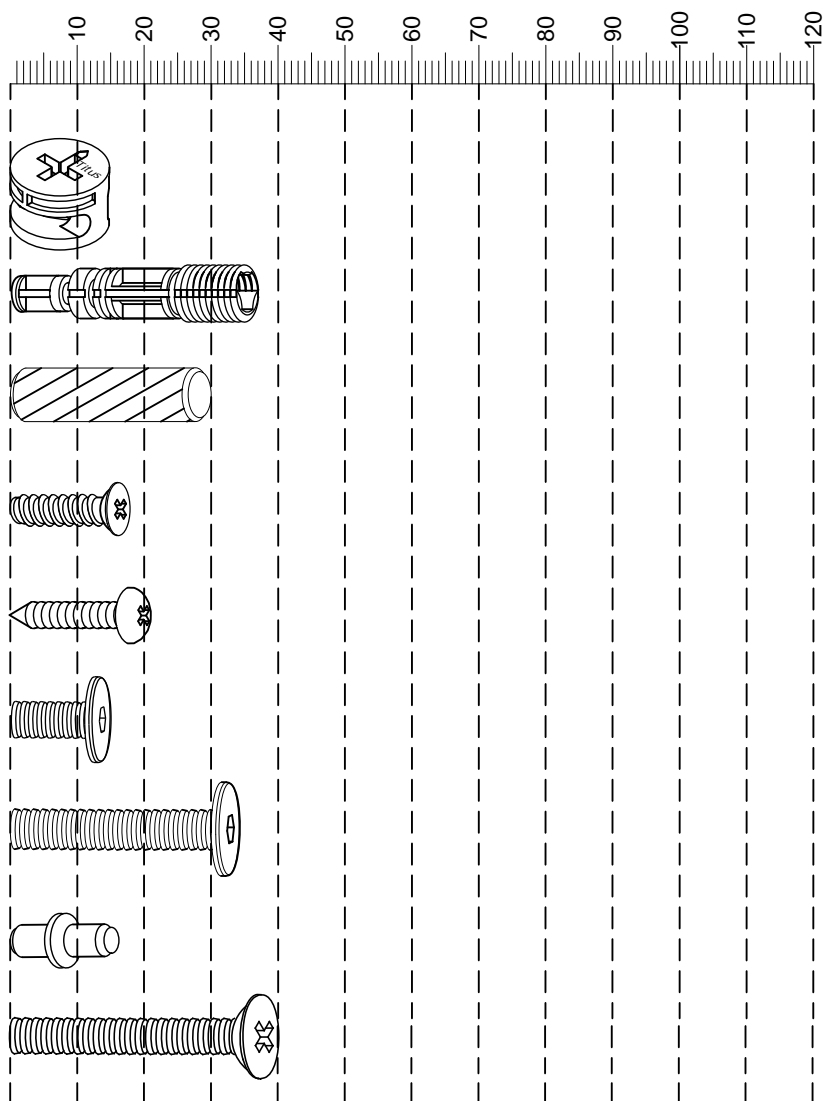 

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T4	N/A	2	N/A	
N1	N/A	2	N/A	
E39	N/A	4	N/A	
C11	N/A	8	N/A	
T38	N/A	12	2	

 
NEXT

BRONX SHELving TV UNIT

A91704


Assembly instructions

1

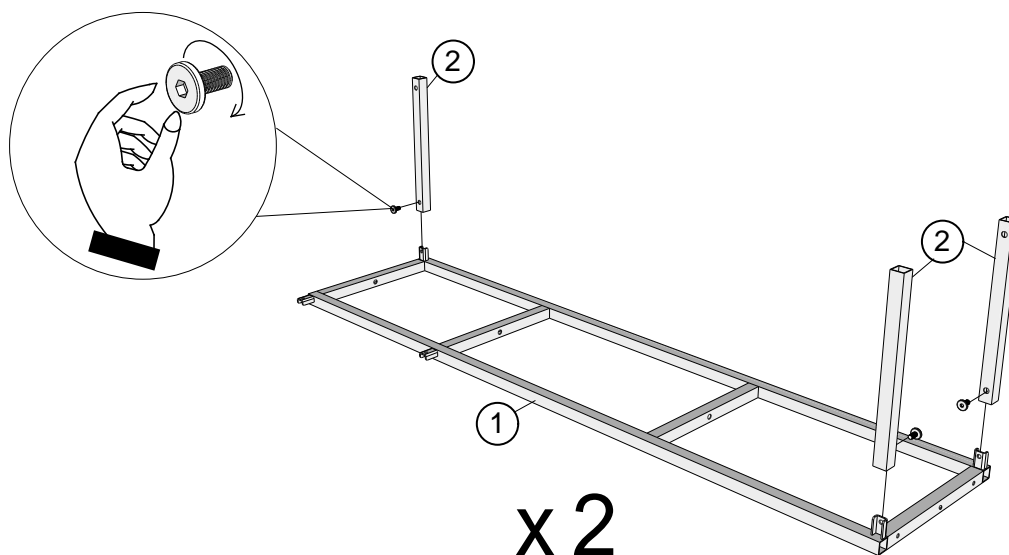

V35	Ø6 x 12mm	6	
-----	-----------	---	--

 2

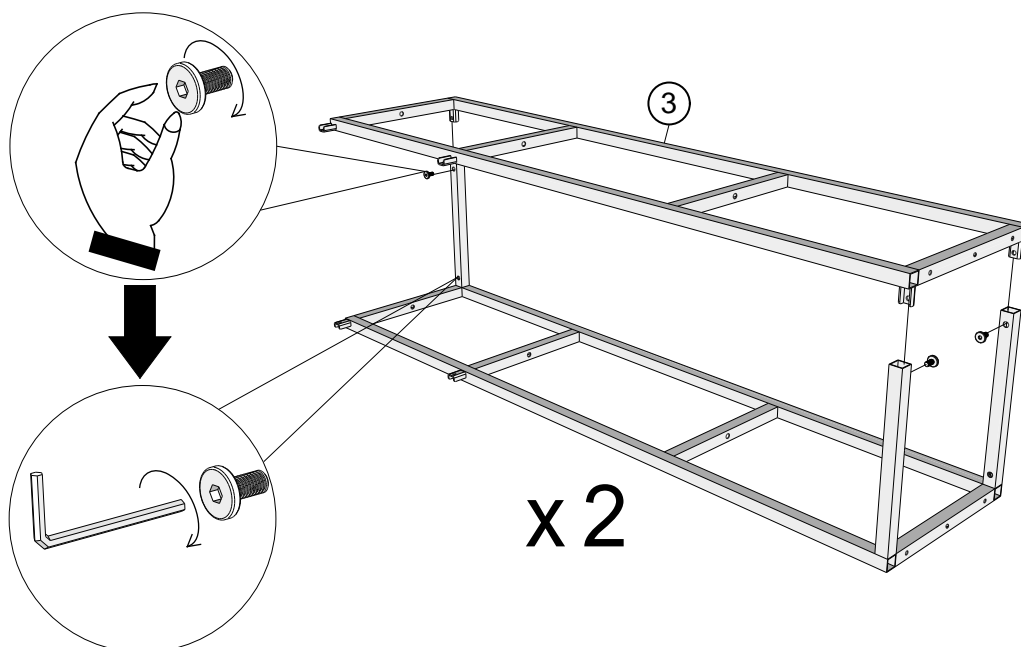

T4	N/A	2	
V35	Ø6 x 12mm	6	

 
NEXT

BRONX SHELving TV UNIT

A91704


Assembly instructions

3

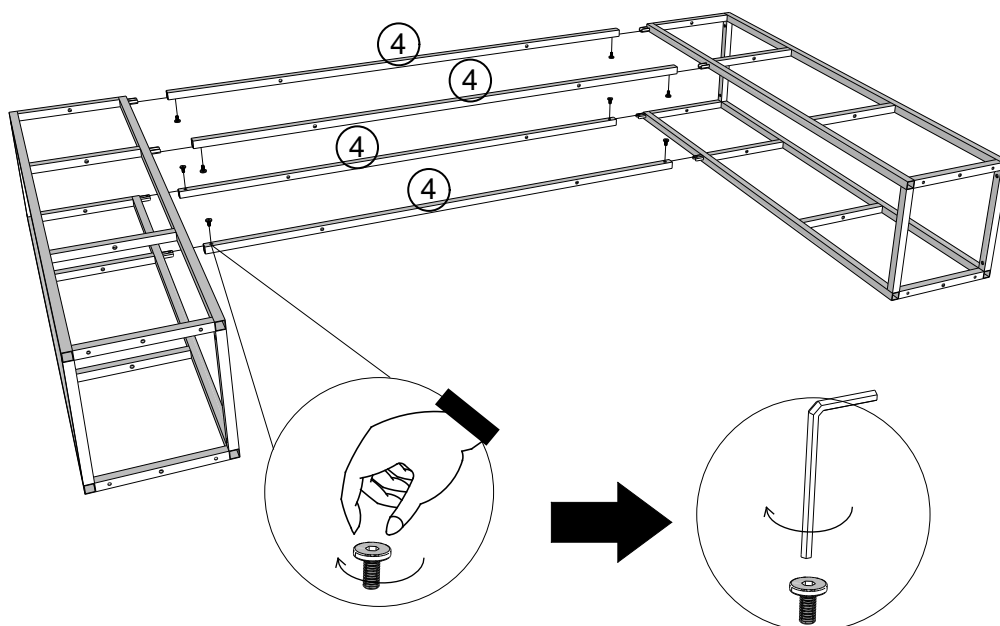

T4	N/A	2	
V35	Ø6 x 12mm	8	

 4

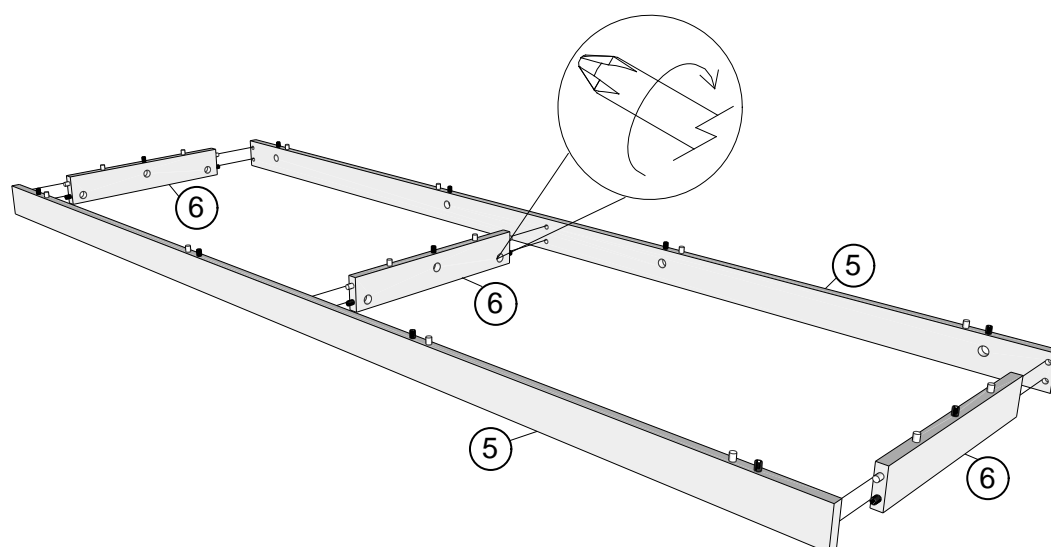


NEXT

BRONX SHELving TV UNIT


A91704

Assembly instructions

 5

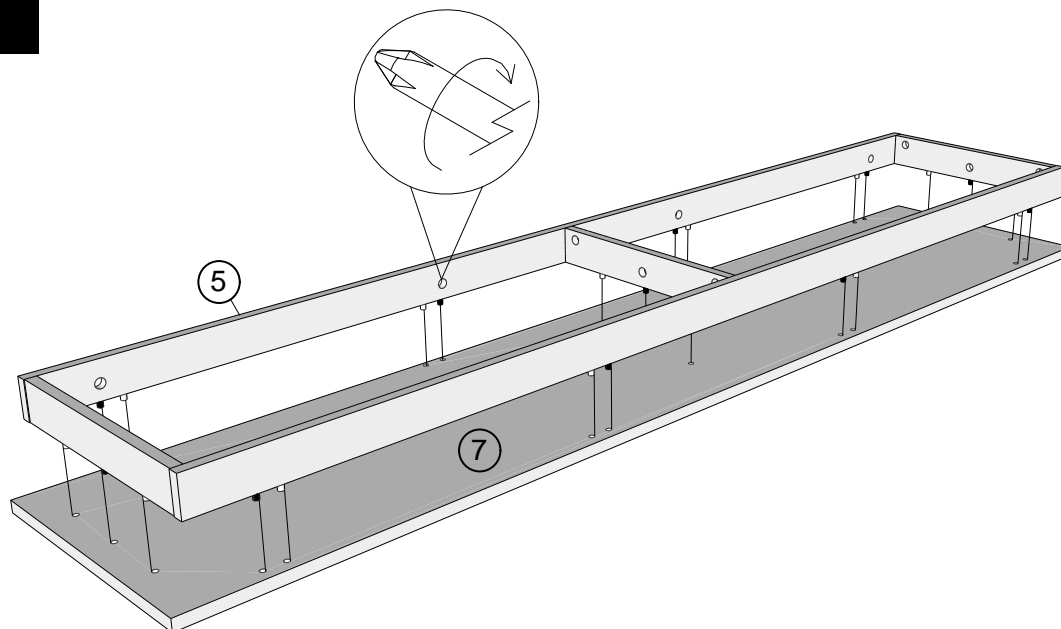

6

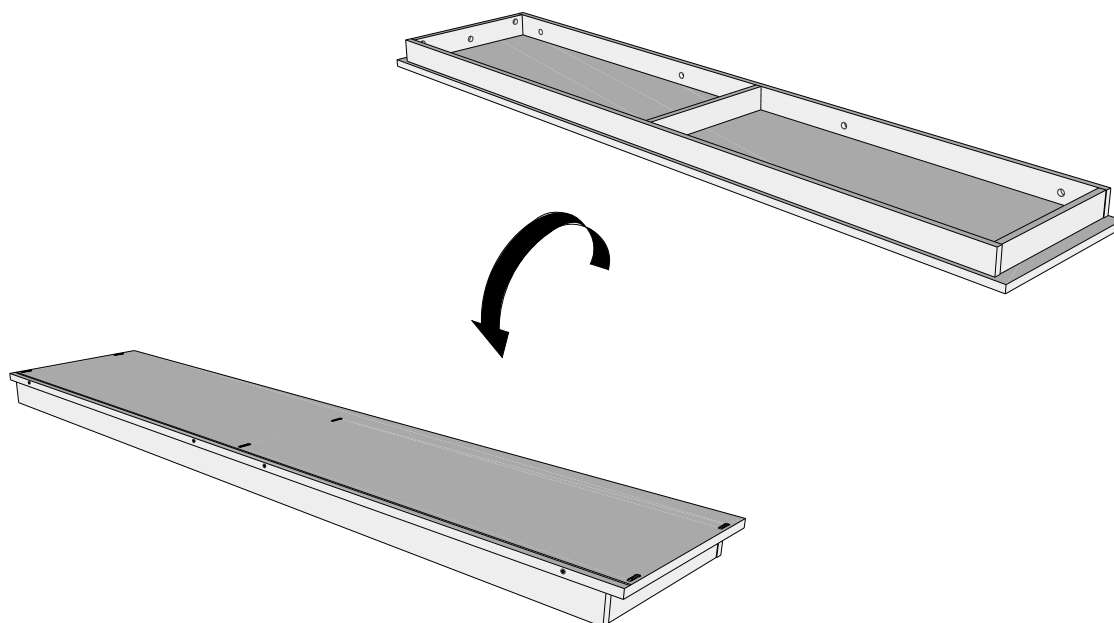 


NEXT

BRONX SHELving TV UNIT


A91704

Assembly instructions

 7

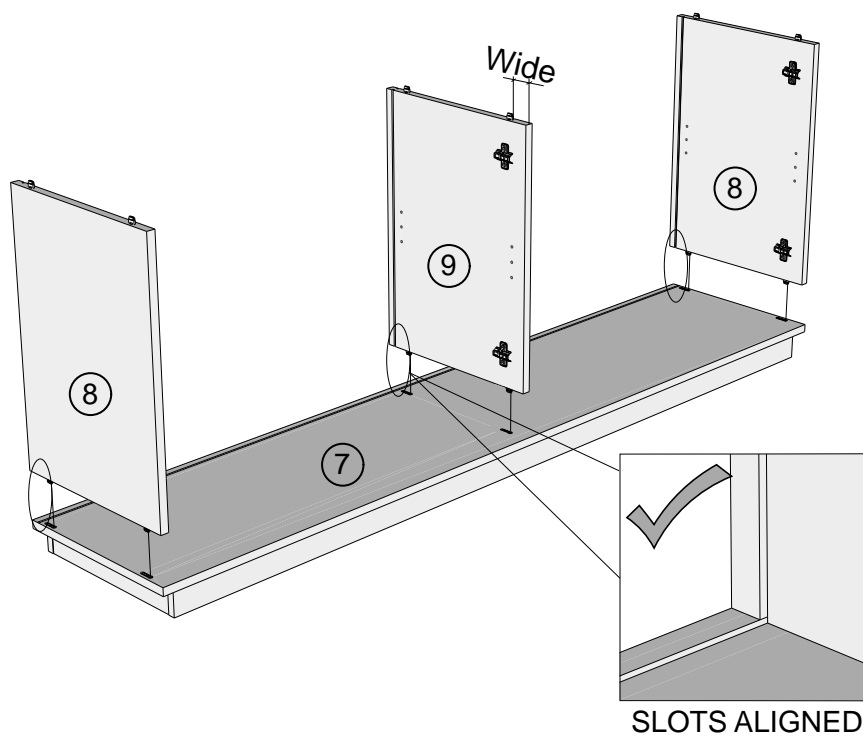

8

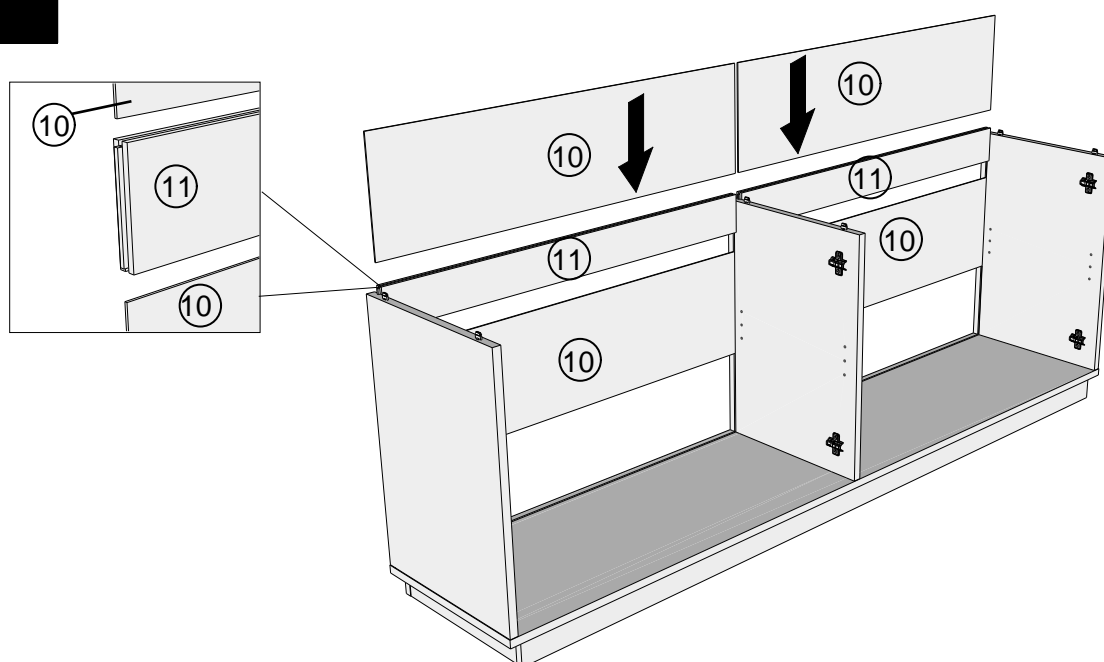 


NEXT

BRONX SHELving TV UNIT

A91704


Assembly instructions

 9

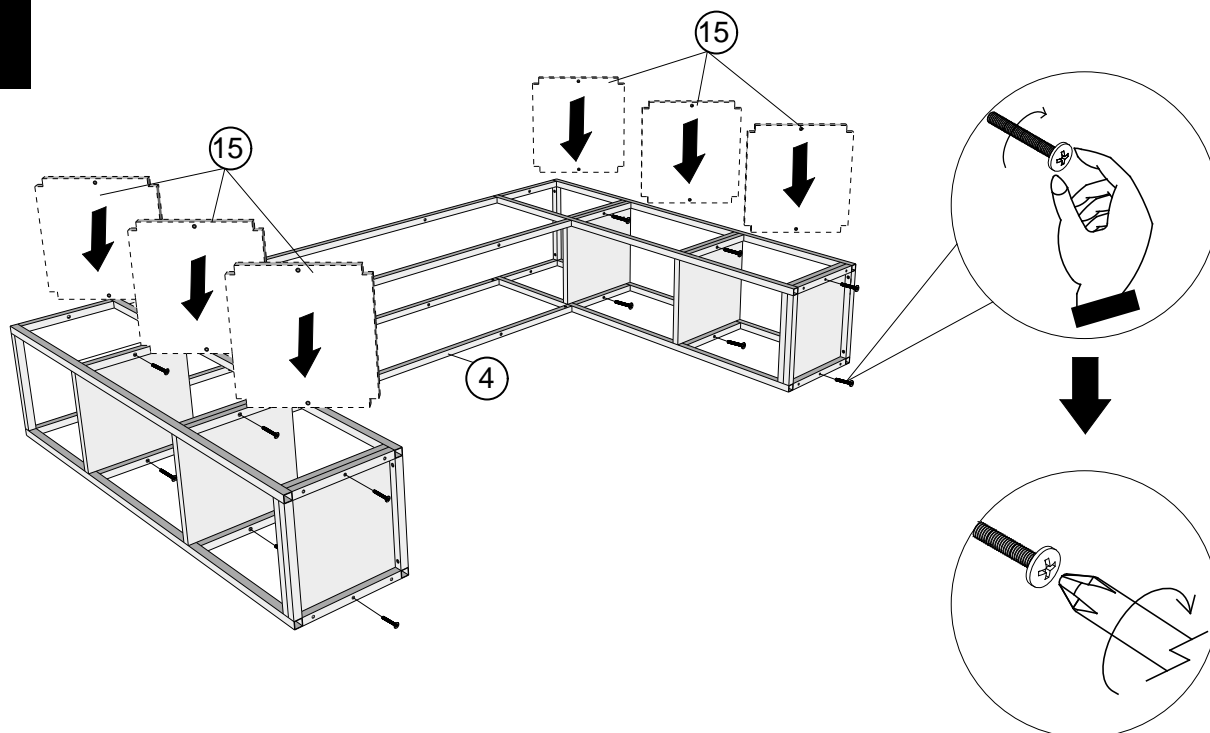


V20 Ø4 x 30mm

 12



10

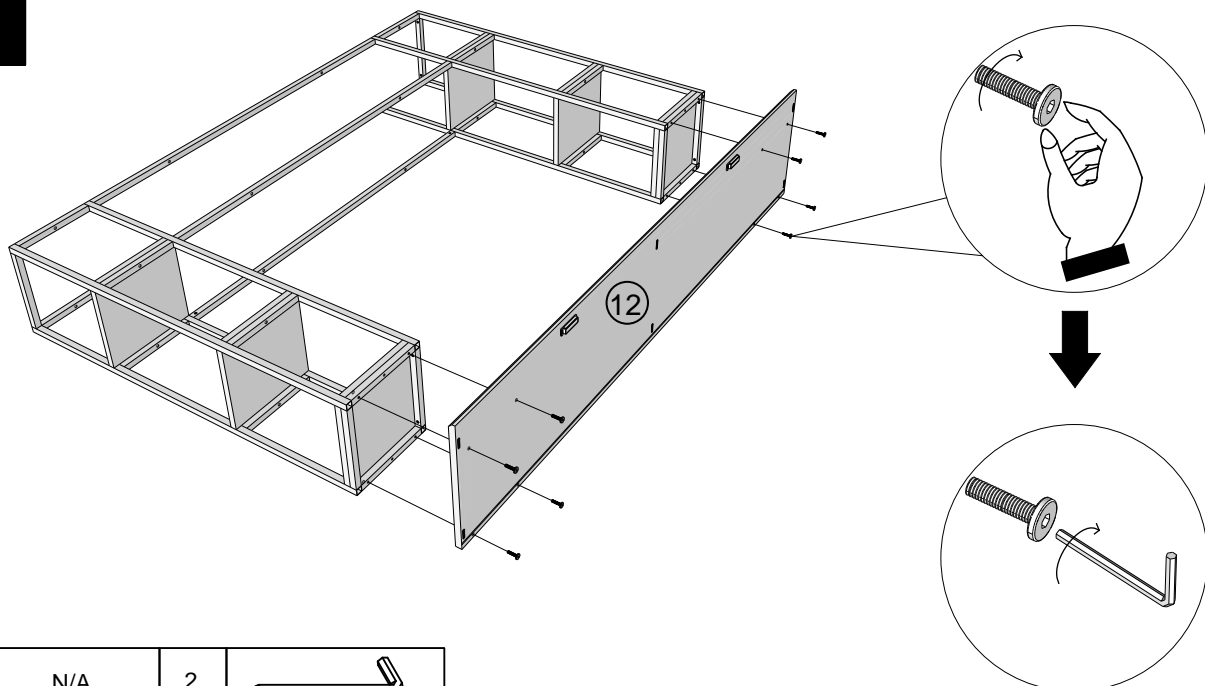 

T4

 
N/A

2



V53 Ø6 x 30mm

8




NEXT

BRONX SHELving TV UNIT

  
A91704


 

Assembly instructions

11

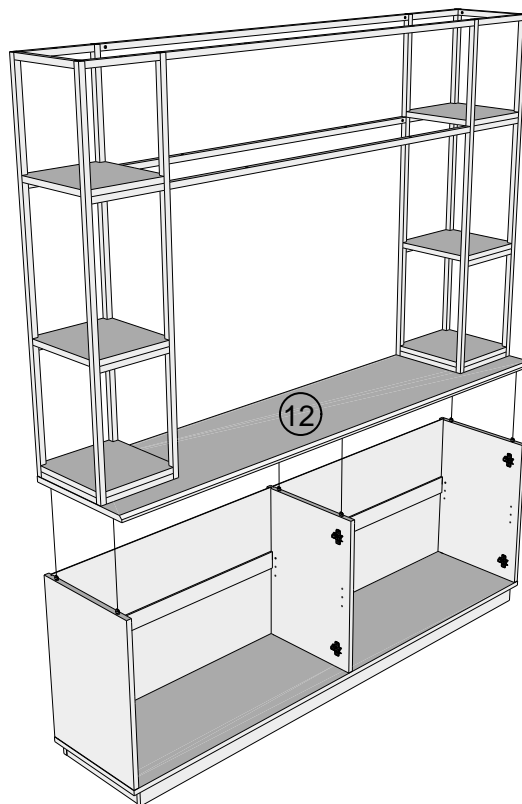

12

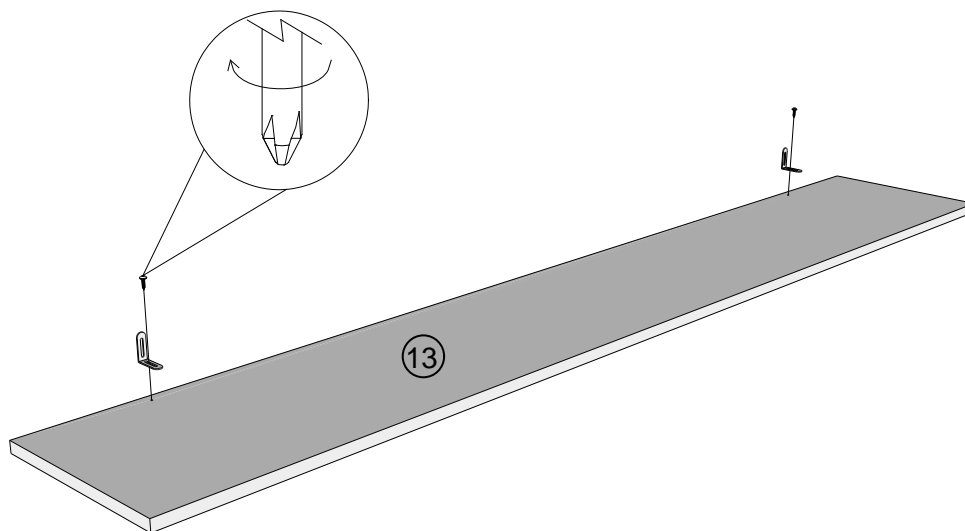

N1	N/A	2	
S41	Ø4 x 16mm	2	  not supplied

 
 
NEXT

BRONX SHELving TV UNIT

A91704

Assembly instructions

13

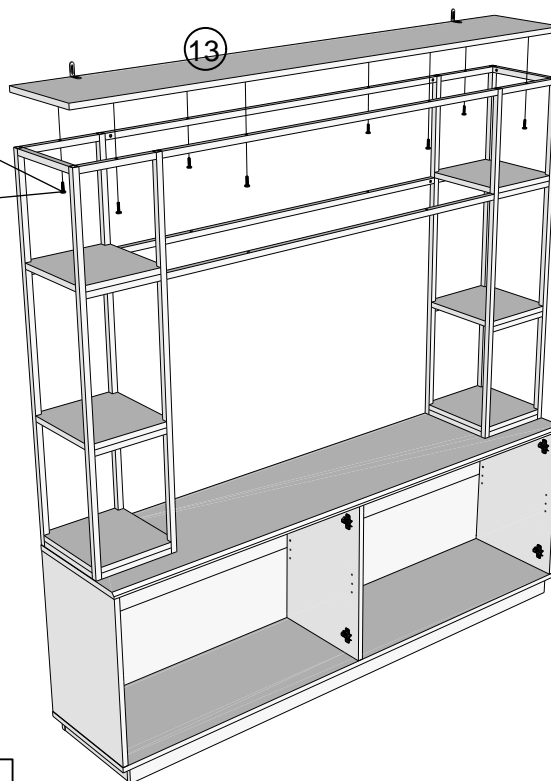
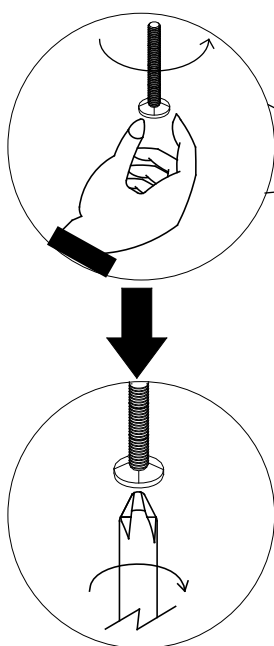


V20 Ø4 x 30mm

8



  14

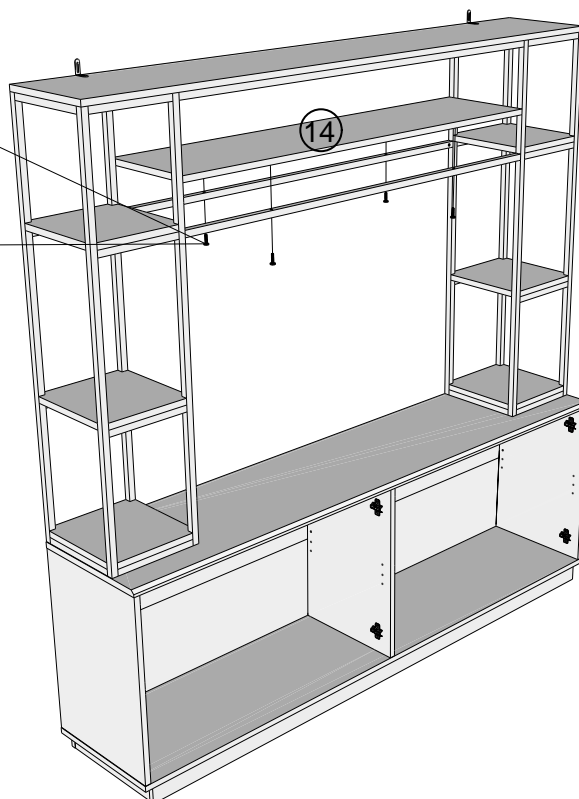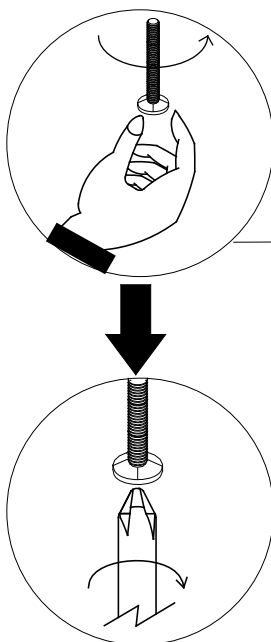

V20 Ø4 x 30mm

4



 
NEXT

BRONX SHELving TV UNIT

A91704


Assembly instructions

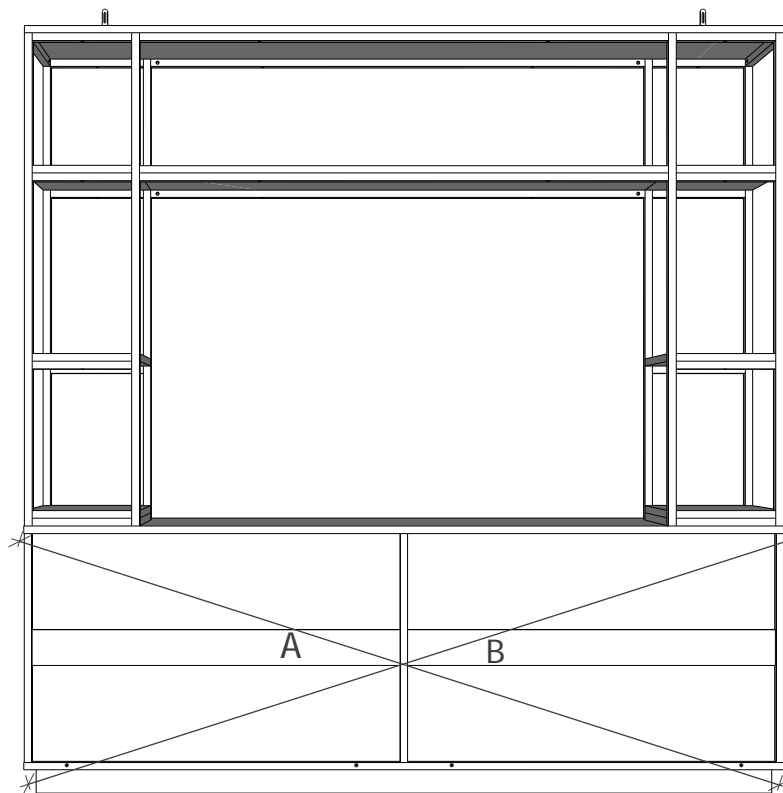

15



 A=B

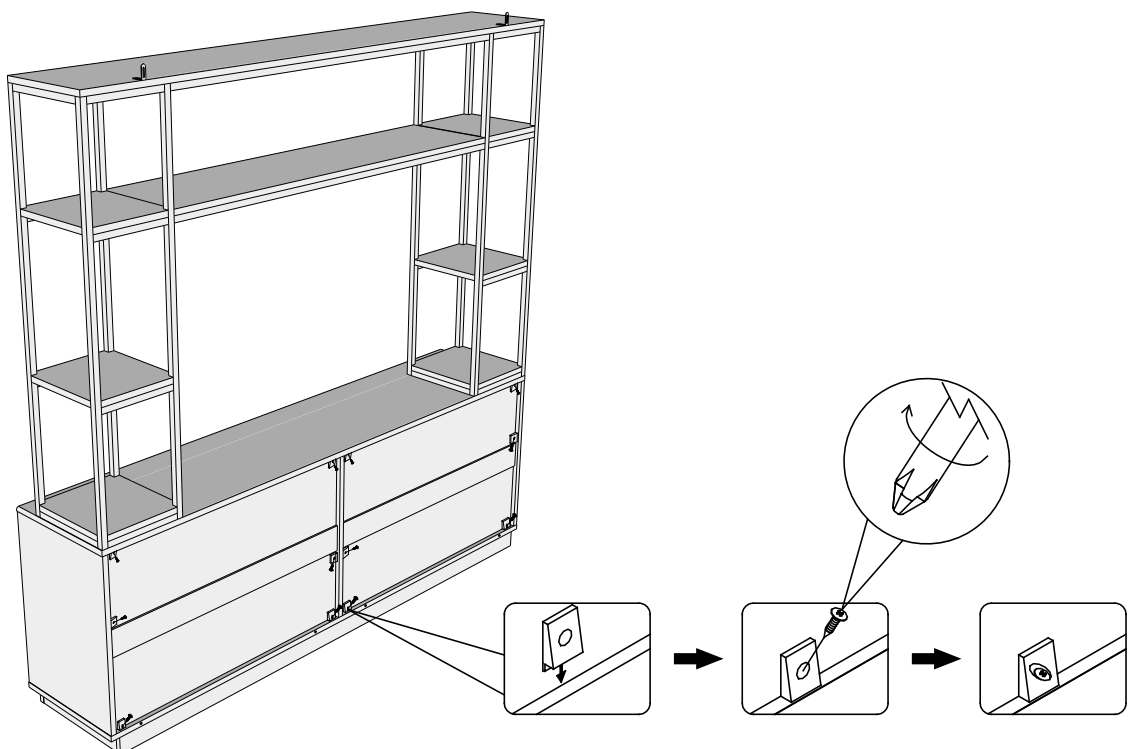16



T38	N/A	12		
not supplied				

 
 
17

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X"L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

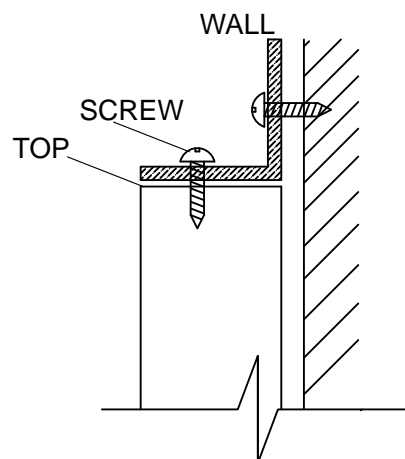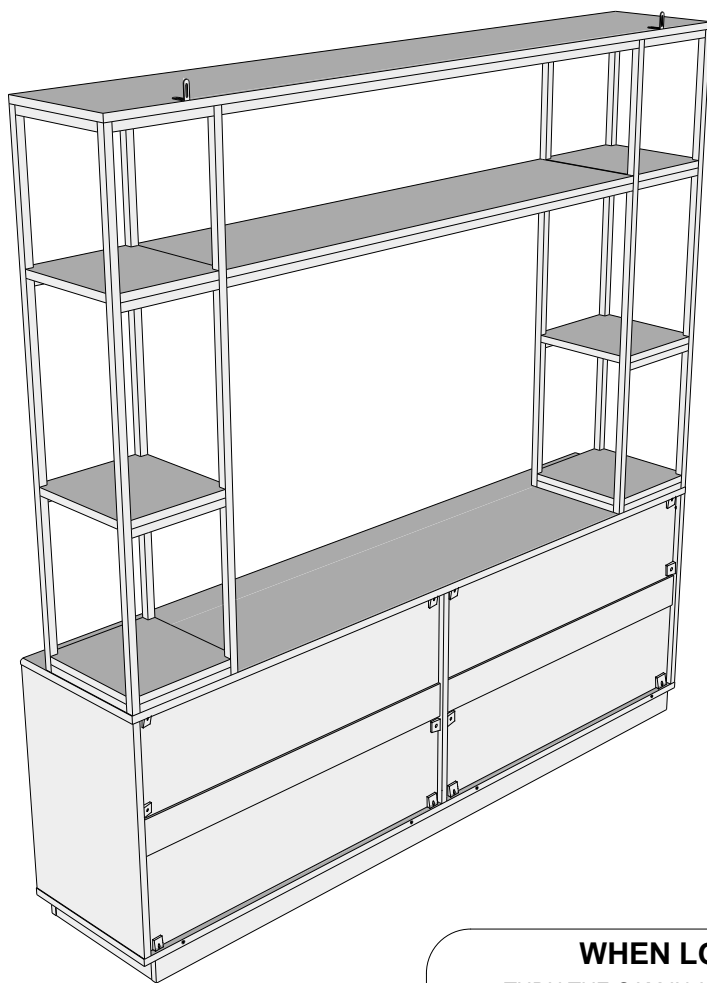


WHEN LOOSENING THE CAM


TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



 MAXIMUM
LOCK

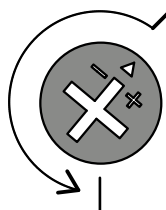

TURN
TO UNLOCK

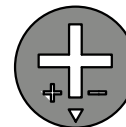 

UNLOCKED

 
NEXT

BRONX SHELving TV UNIT

A91704

Assembly instructions


18

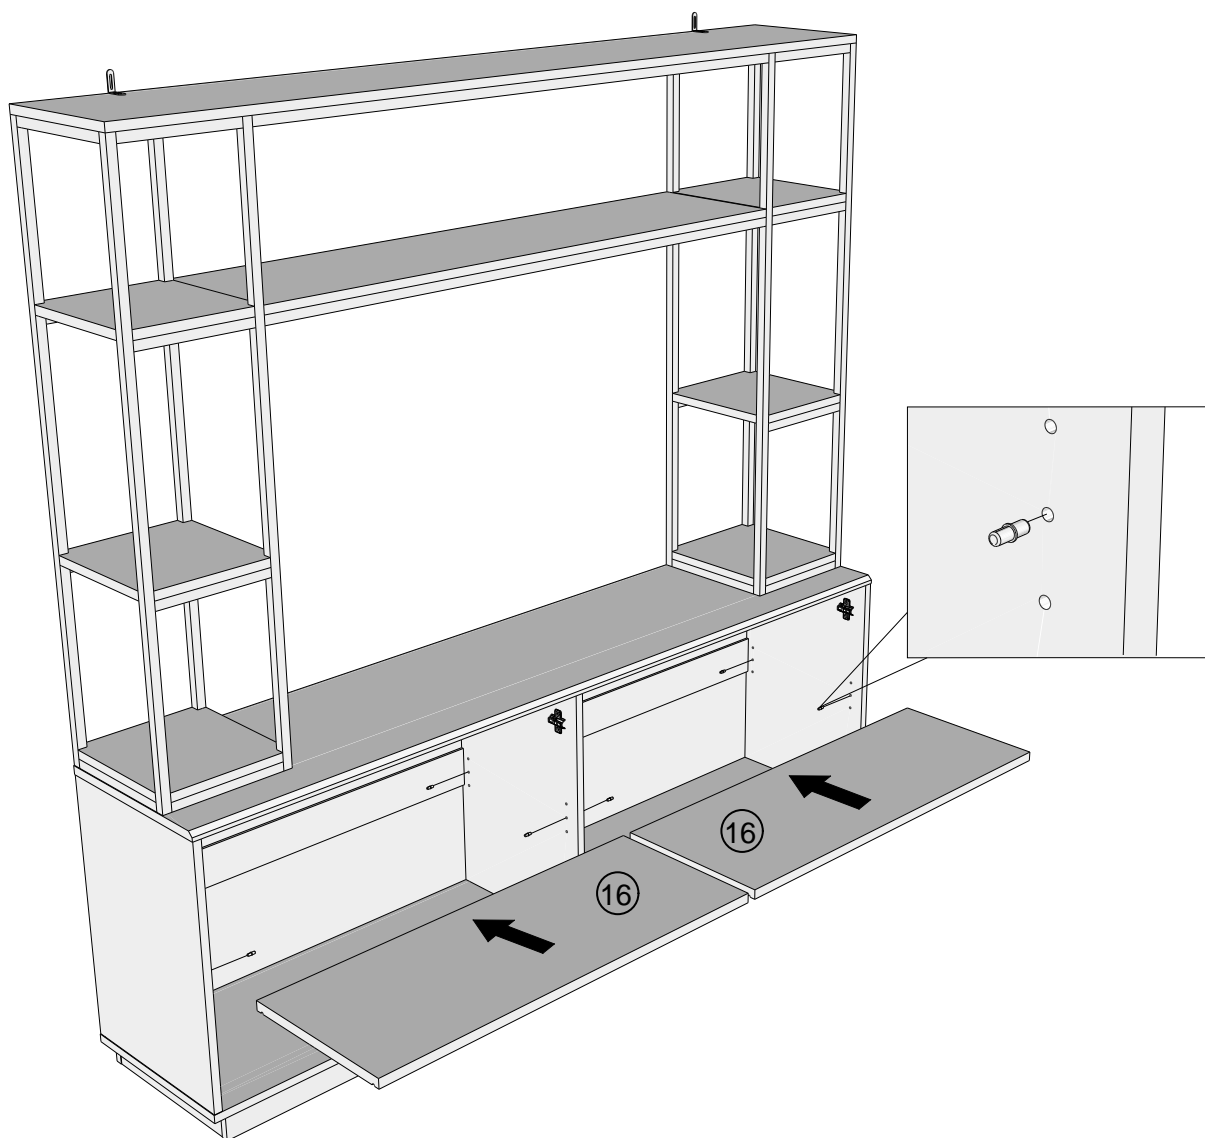

P3

Ø5 x 16mm

 8




NEXT

 
 

BRONX SHELving TV UNIT

A91704


Assembly instructions



19

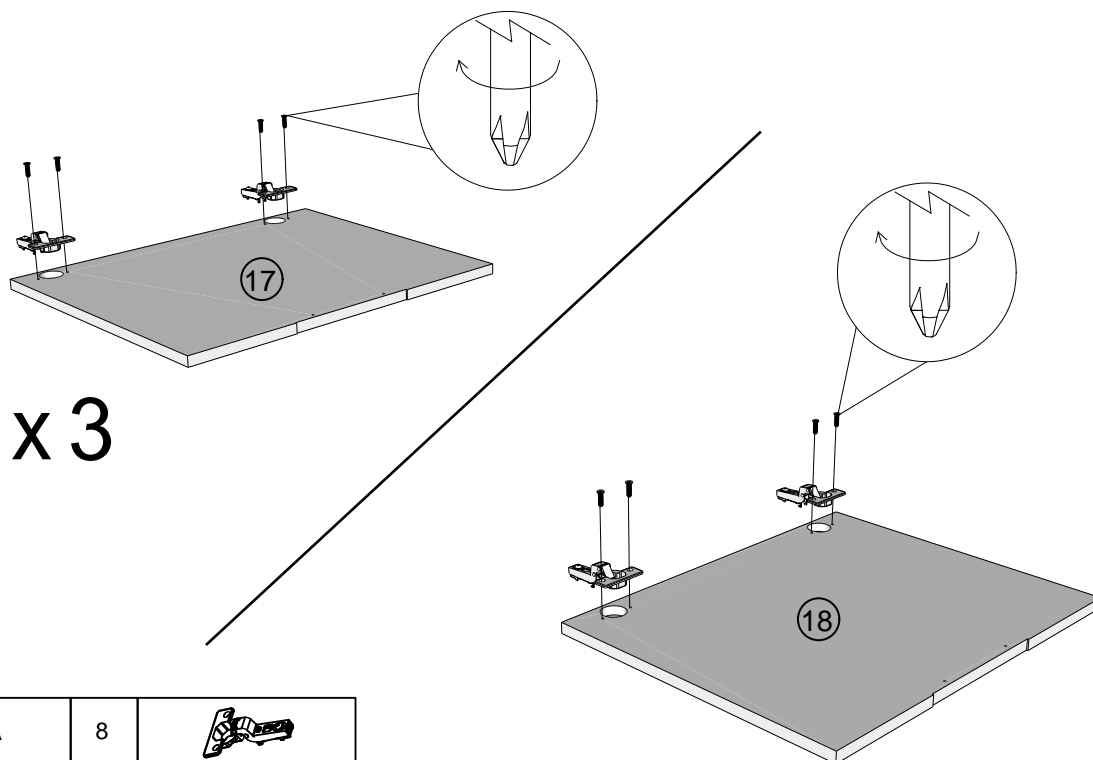

C11	N/A	8	
U139	Ø4.5 x 15mm	16	  not supplied

  20

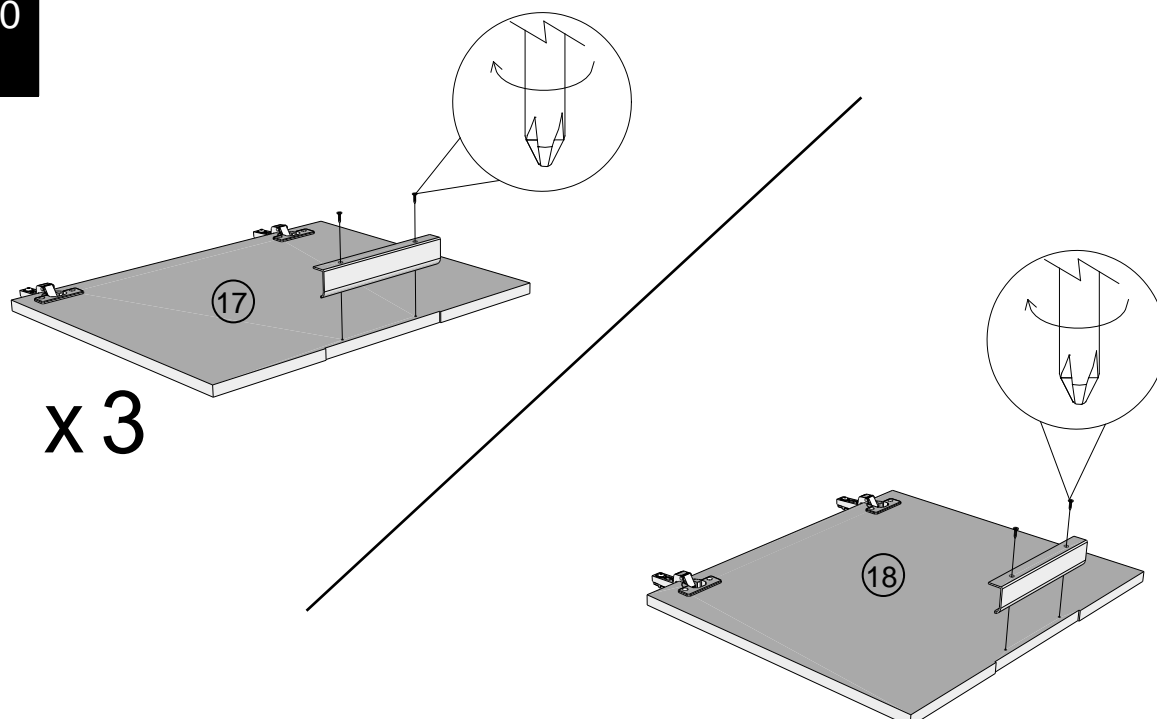

E39	N/A	4	  not supplied
-----	-----	---	---

NEXT

 
 
BRONX SHELving TV UNIT

A91704




Assembly instructions

21

Install hinge

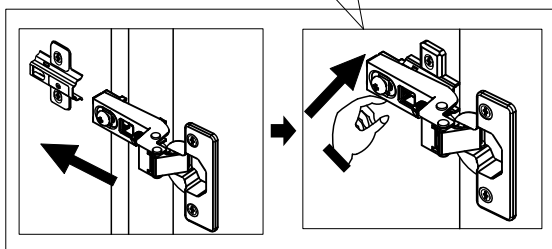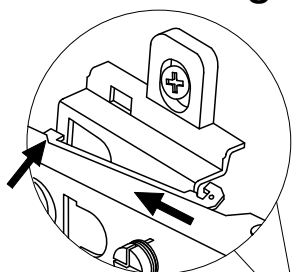


Remove hinge

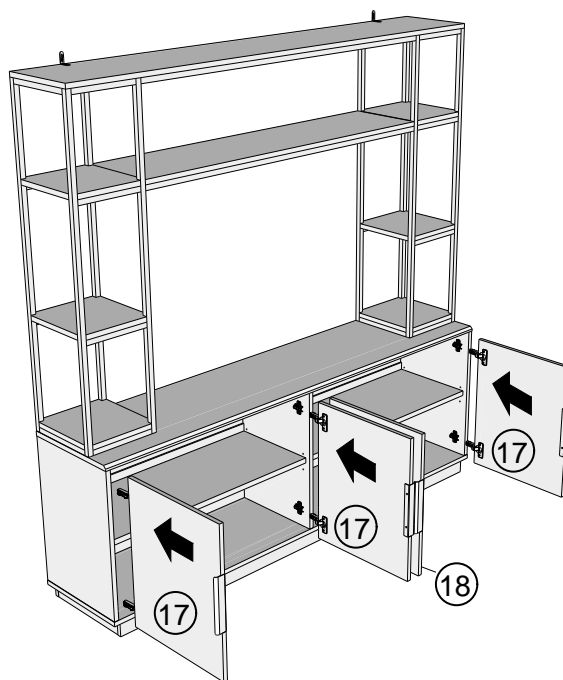 
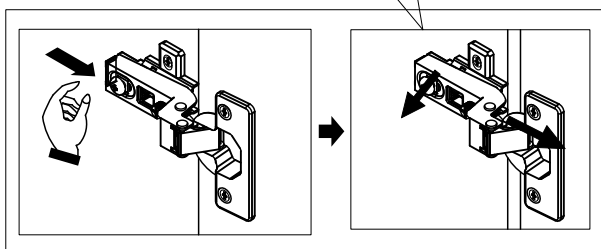 
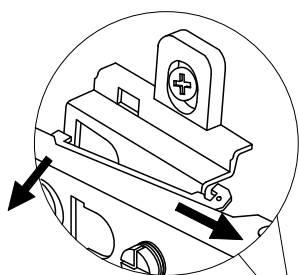 


Adjust Hinge Position



 
LATERAL

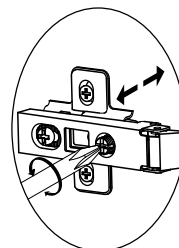

VERTICAL

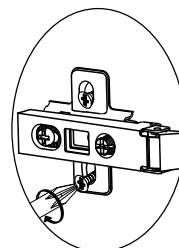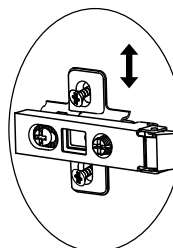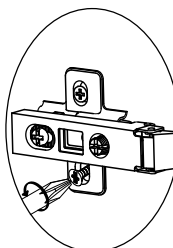   

FRONT- TO-BACK

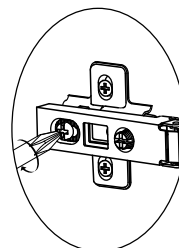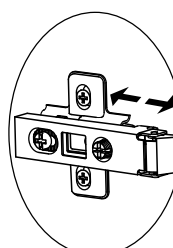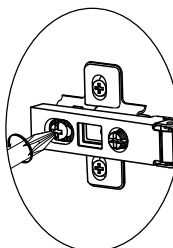   







NEXT

BRONX SHELving TV UNIT A91704

22

To disassemble:

    
 
 
Step1: Remove the plastic wedges (T38) from the back panels and screws from the rear of the base panel (7);

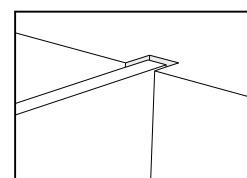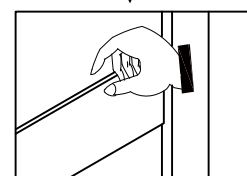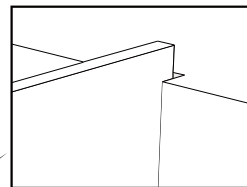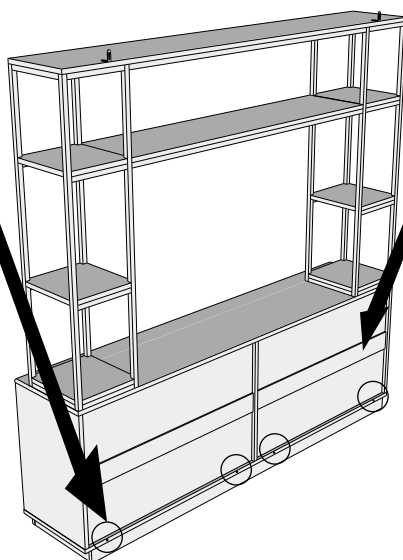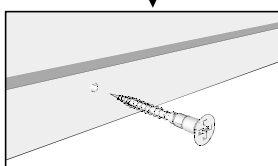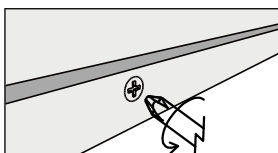

Step2: Press down crossbars(11)so all the back panels are clear of the top panel slot;

23

   Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels;

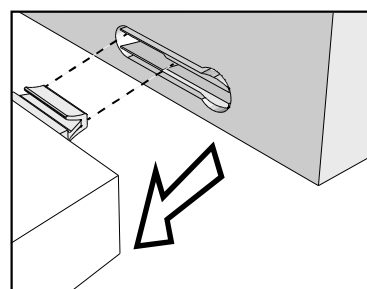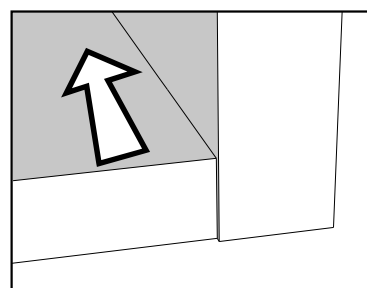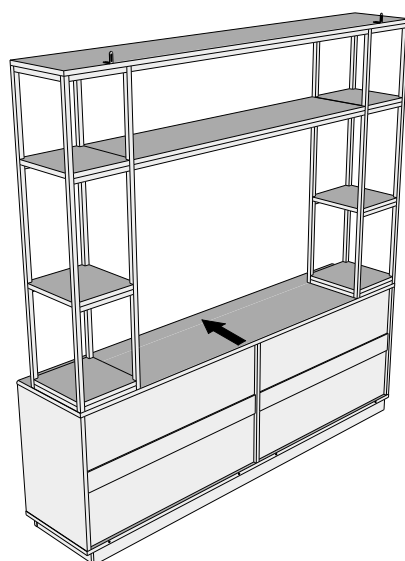


NEXT

BRONX SHELving TV UNIT A91704

Actual product size

 H187 x W185 x D39cm

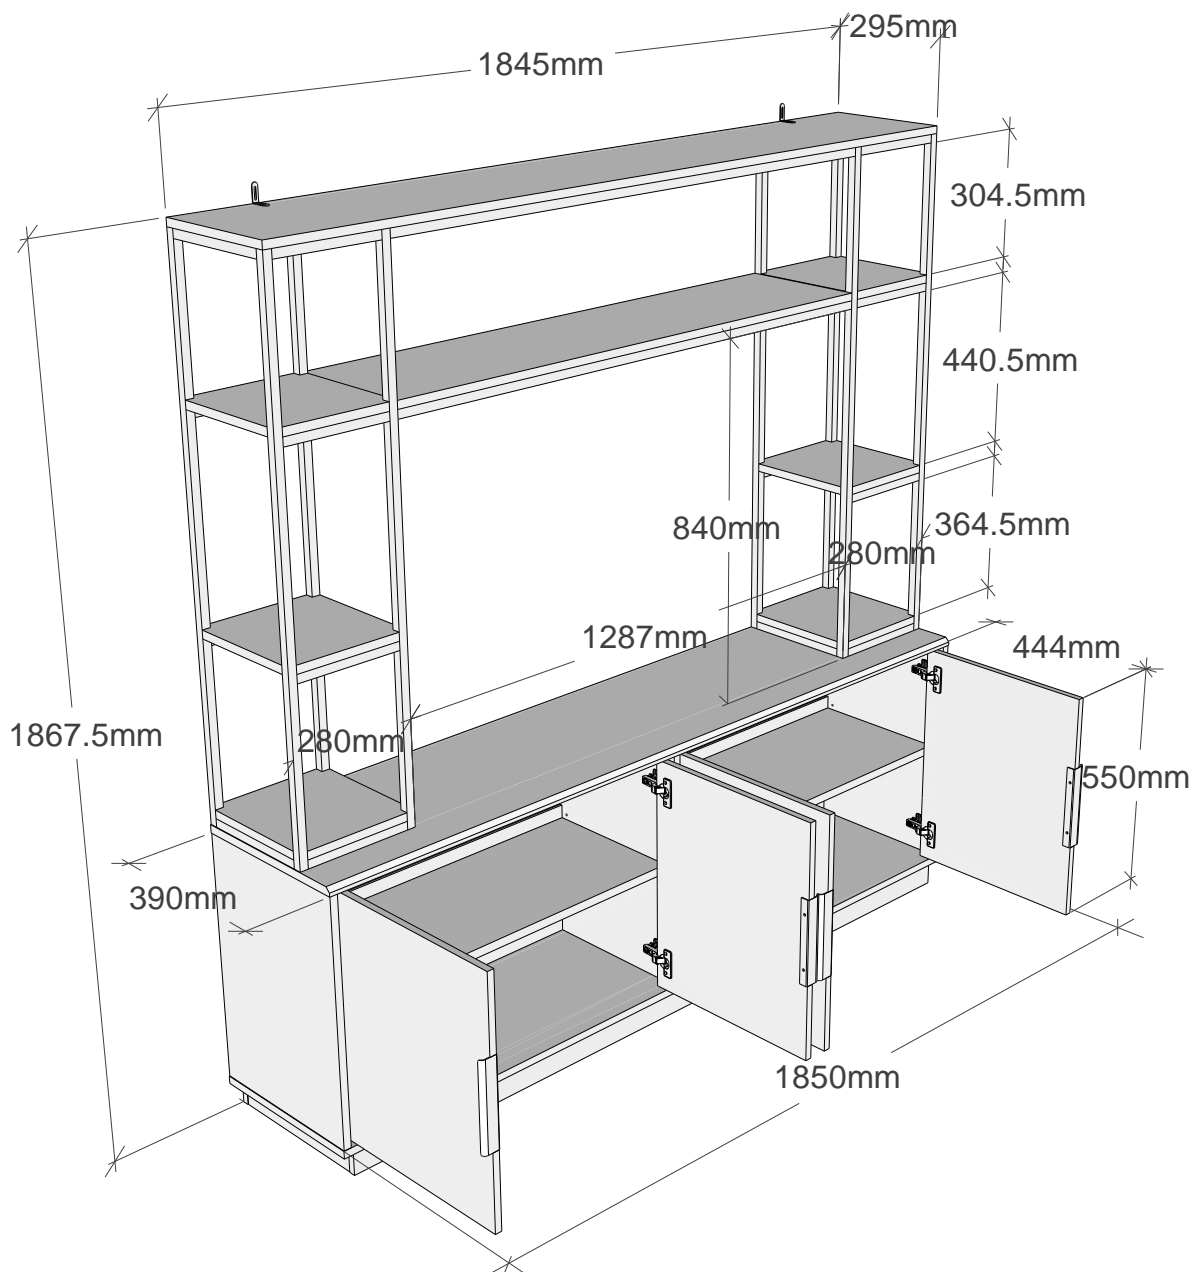

NEXT

BRONX SHELVING TV UNIT A91704

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk