


# NEXT

## CLARA DINING CHAIR-AH9315-AB7820-AB7821

Assembly instructions

Actual product size  
H82.5 x W52 x D58cm

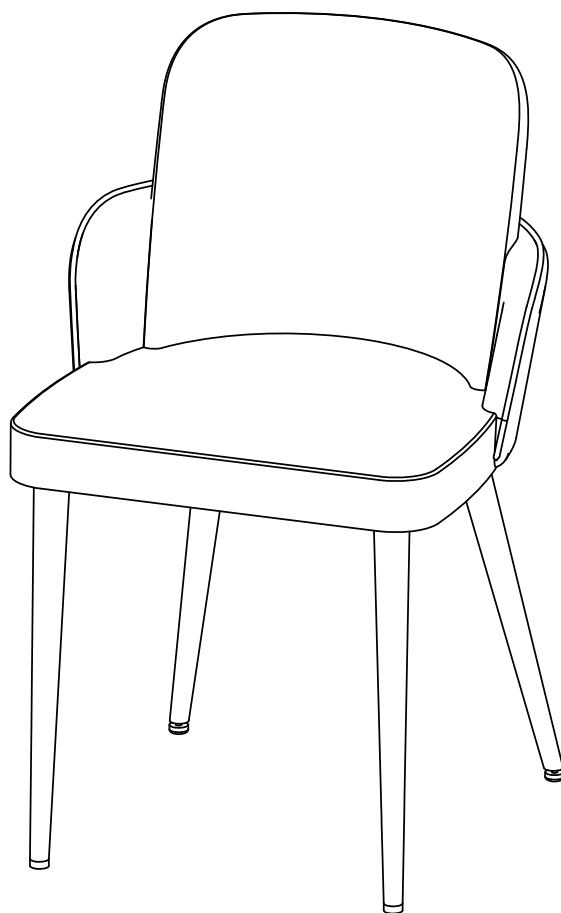

### Need Help ?

With: Assembly instruction

Missing or damaged parts

CALL: 0333 777 8999

**IMPORTANT-RETAIN FOR FUTURE REFERENCE**

# CLARA DINING CHAIR-AH9315-AB7820-AB7821

## BEFORE YOU START

Assembly instructions

Number of people required to assemble

Two people are required to assemble this item

**Time to assemble:** 30 minutes



| Item No. | Fabric name - leg                            | Fabric composition                                     |
|----------|----------------------------------------------|--------------------------------------------------------|
| AH9315   | MONZA DARK GREY<br>- BLACK PAINTED           | Face 100% Polyurethane, Base 65% Polyester, 35% Cotton |
| AB7820   | SOFT VELVET EMERALD GREEN<br>- BLACK PAINTED | 100% polyester                                         |
| AB7821   | RELAXED CHENILLE OYSTER<br>- BLACK PAINTED   | 100% polyester                                         |

### Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

### Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

### Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

### Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground. Please periodically check all fittings and re-tighten as necessary.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

### Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

### You can write to us at

Home Customer Services  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)

 
## Need Help ?


With: Assembly instruction  
Missing or damaged parts  
**CALL: 0333 777 8999**

# CLARA DINING CHAIR-AH9315-AB7820-AB7821


Components supplied. Please use this guide if you require replacement parts.

Assembly instructions

| Ref | Dimensions | Visual                                                                            | Qty | Ctn |
|-----|------------|-----------------------------------------------------------------------------------|-----|-----|
| 1   | 520x575mm  |  | 1   | 1   |
| 2   | 410x120mm  |  | 2   | 1   |
| 3   | 410x135mm  |  | 2   | 1   |

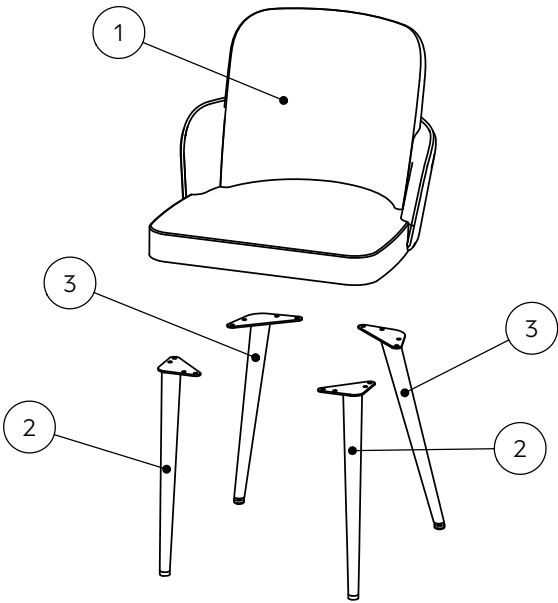

| Fixtures and fittings supplied (actual size) |            |     |           |
|----------------------------------------------|------------|-----|-----------|
| Ref                                          | Dimensions | Qty | Spare Qty |
| A                                            | M6x25mm    | 16  | 2         |


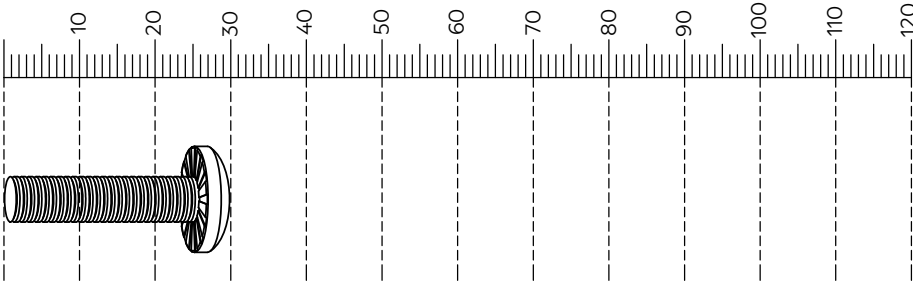


| Fixtures and fittings supplied (not to scale) |            |     |           |                                                                                     |
|-----------------------------------------------|------------|-----|-----------|-------------------------------------------------------------------------------------|
| Ref                                           | Dimensions | Qty | Spare Qty | Visual                                                                              |
| B                                             | 5mm        | 1   |           |  |
| C                                             | Ø14mm      | 16  | 2         |  |

CLARA DINING CHAIR-AH9315-AB7820-AB7821



Assembly instructions

1.

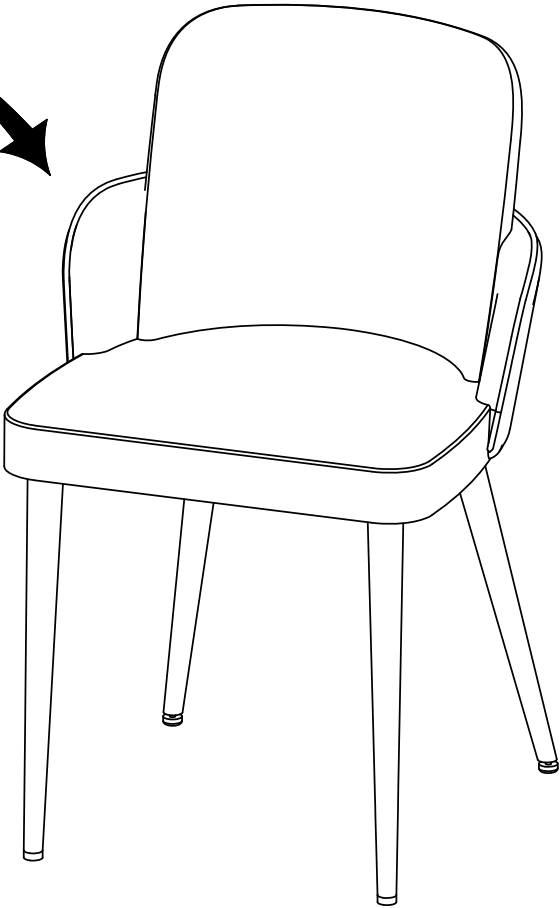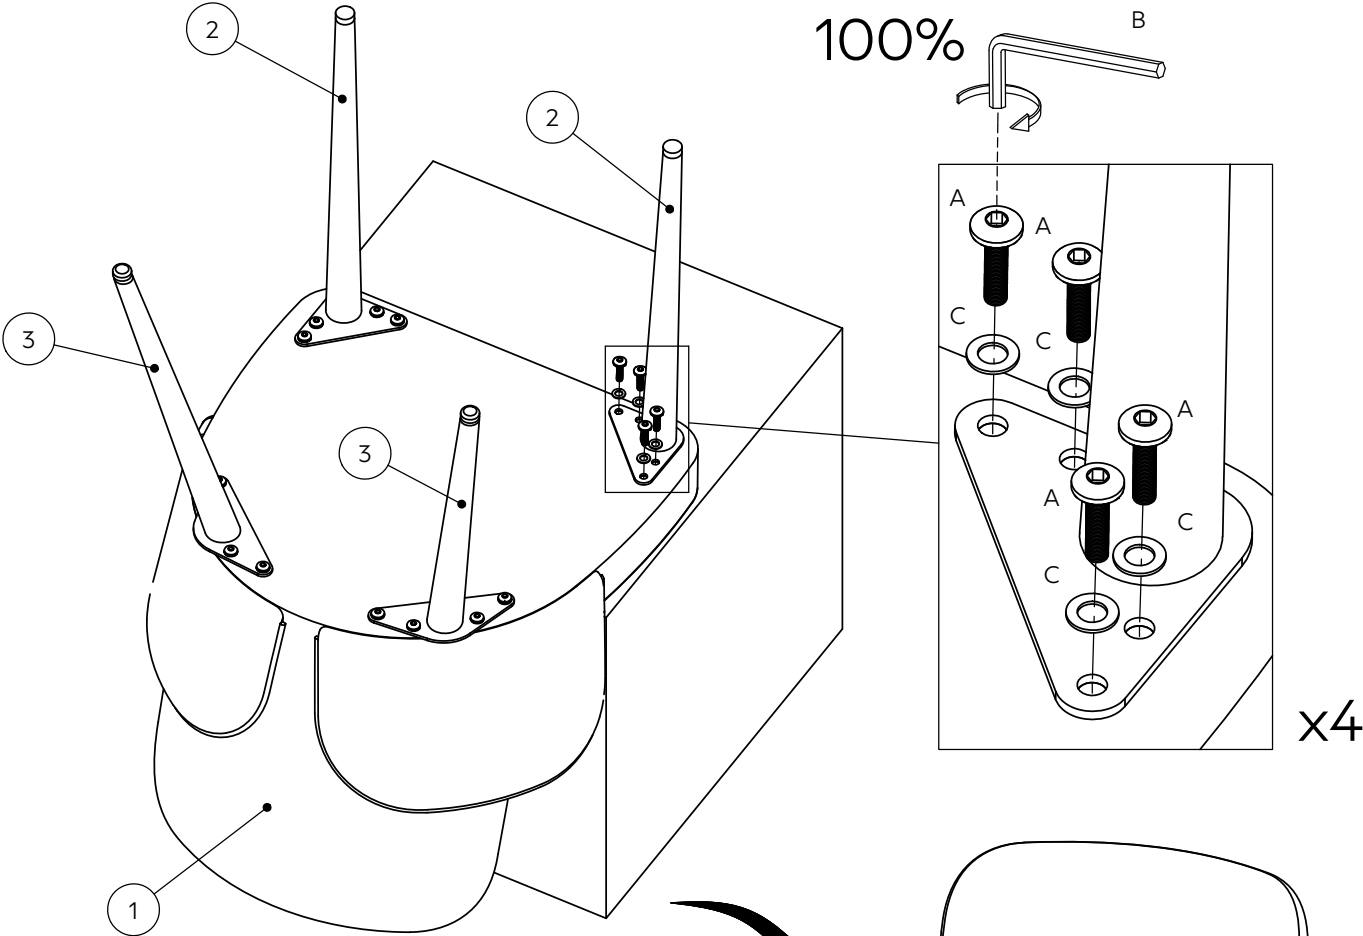

|   |         |    |  |
|---|---------|----|--|
| C | Ø14mm   | 16 |  |
| A | M6x25mm | 16 |  |
| B | 5mm     | 1  |  |

2.

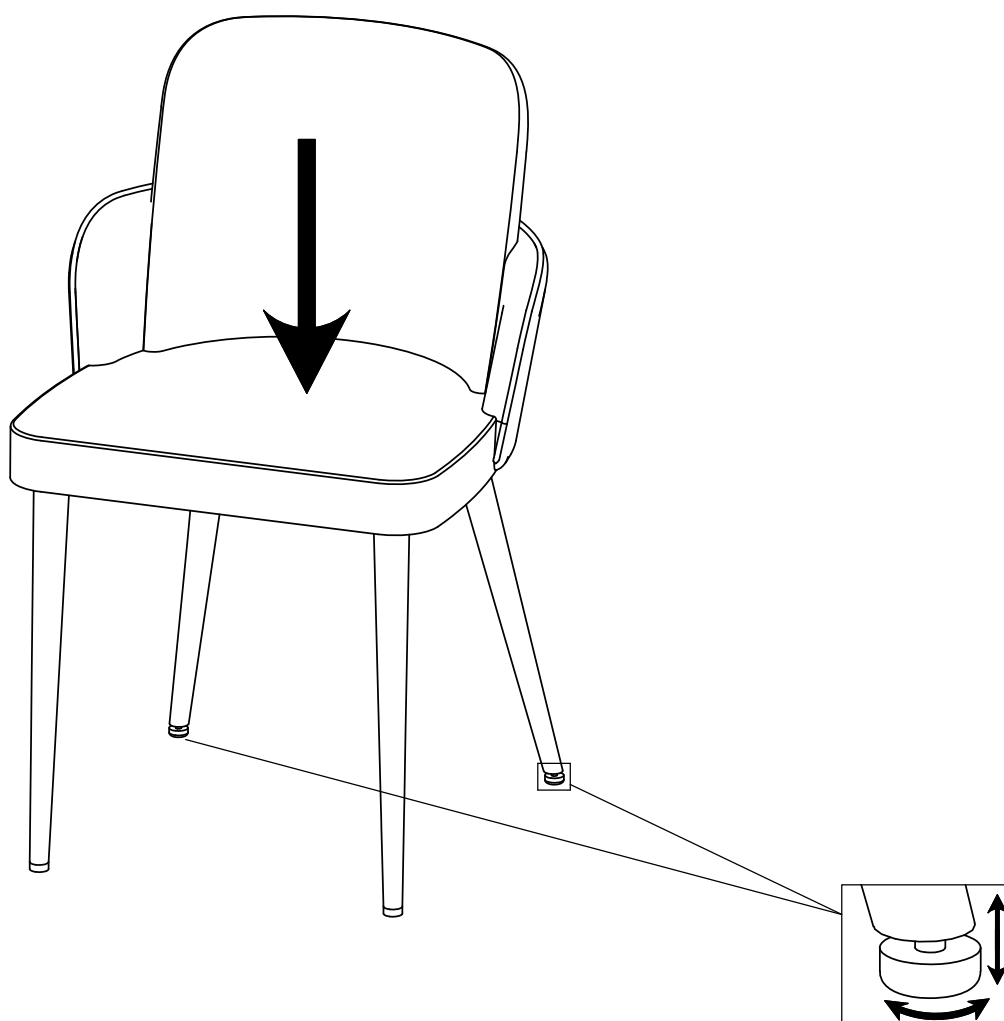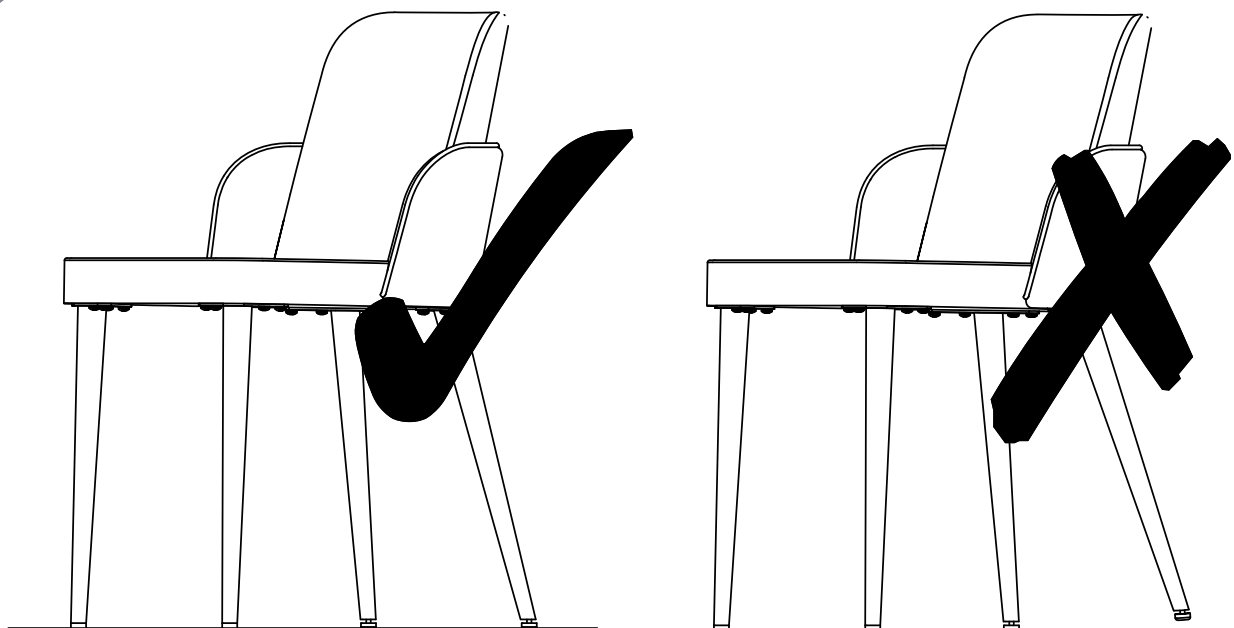

# NEXT

## CLARA DINING CHAIR-AH9315-AB7820-AB7821

Assembly instructions

Actual product size  
H82.5 x W52 x D58cm

