

NEXT


HENSLEY DINNING CHAIR

AH9310-AH9317

Assembly instructions

Actual product size

H87×W61×D67cm

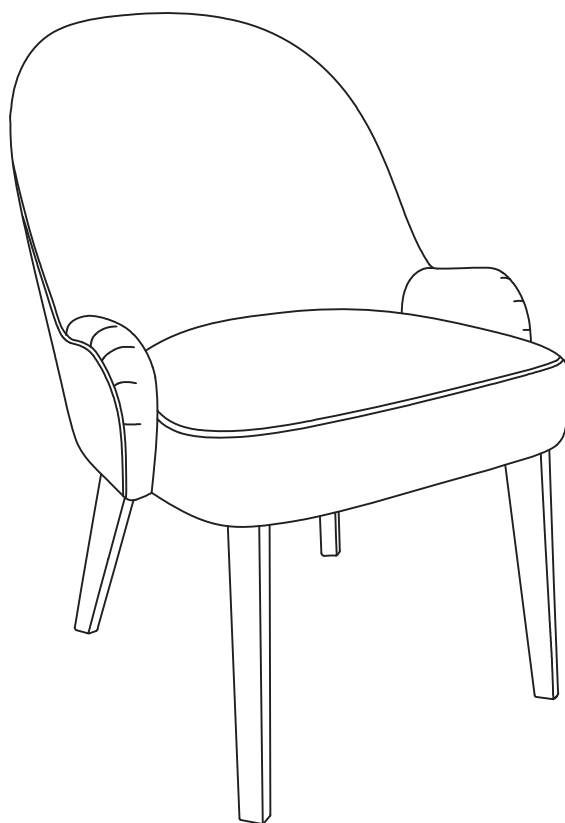

Need Help ?


With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

BEFORE YOU START

Number of people required to assemble
One people are required to assemble this item
Time to assemble: 30 minutes

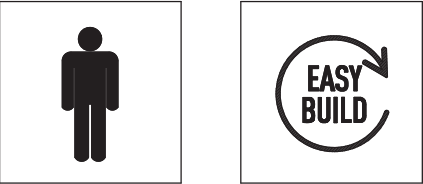

Item No.	Fabric name - leg	Fabric composition
AH9310	BRUSHED WEAVE LIGHT OLIVE GREEN - LIGHT OAK EFFECT	100% polyester
AH9317	COTSWOLD CHENILLE LIGHT NATURAL - LIGHT OAK EFFECT	100% polyester

Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.
Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.
Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.
Always wipe dry after cleaning.
To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
Do not stand or lean back on your chairs.
Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Warnings

We suggest you retain these instructions for future reference.
Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground
Please periodically check all fittings and re-tighten as necessary.
Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

You can write to us at


Home Customer Services
Next Retail Ltd
Desford Road,
Leicester,
LE19 4AT




To view our full furniture range
please visit www.next.co.uk

Need Help ?

With: Assembly instruction
Missing or damaged parts
CALL: 0333 777 8999

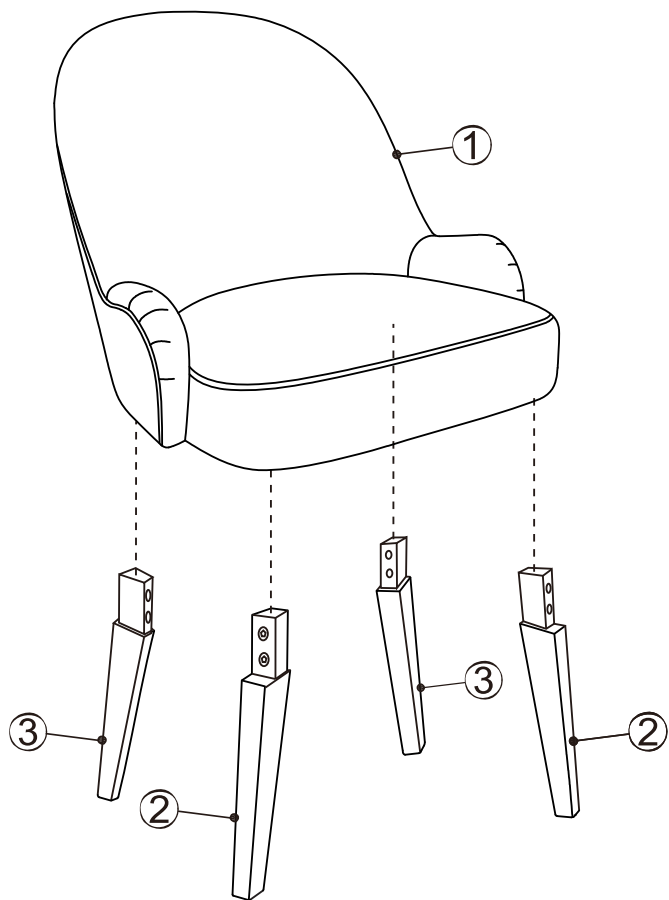GETTING TO KNOW YOUR PRODUCT

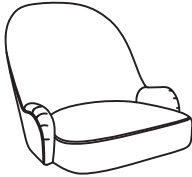


Ref	Dimension	Visual	Qty
1	Seat: H55xW61xD64CM		1
2	Front Legs: 41.5x5.5x3CM		2
3	Back Legs: 39.5x5.5x3CM		2

HENSLEY DINNING CHAIR
AH9310-AH9317
Assembly instructions

Fixtures and fittings
supplied (actual size)

Ref	Dimension	Qty	Spare
A	M8 x 65mm	8	1
B	12mm	8	1
C	22mm	8	1
D	8 x 85mm	1	0

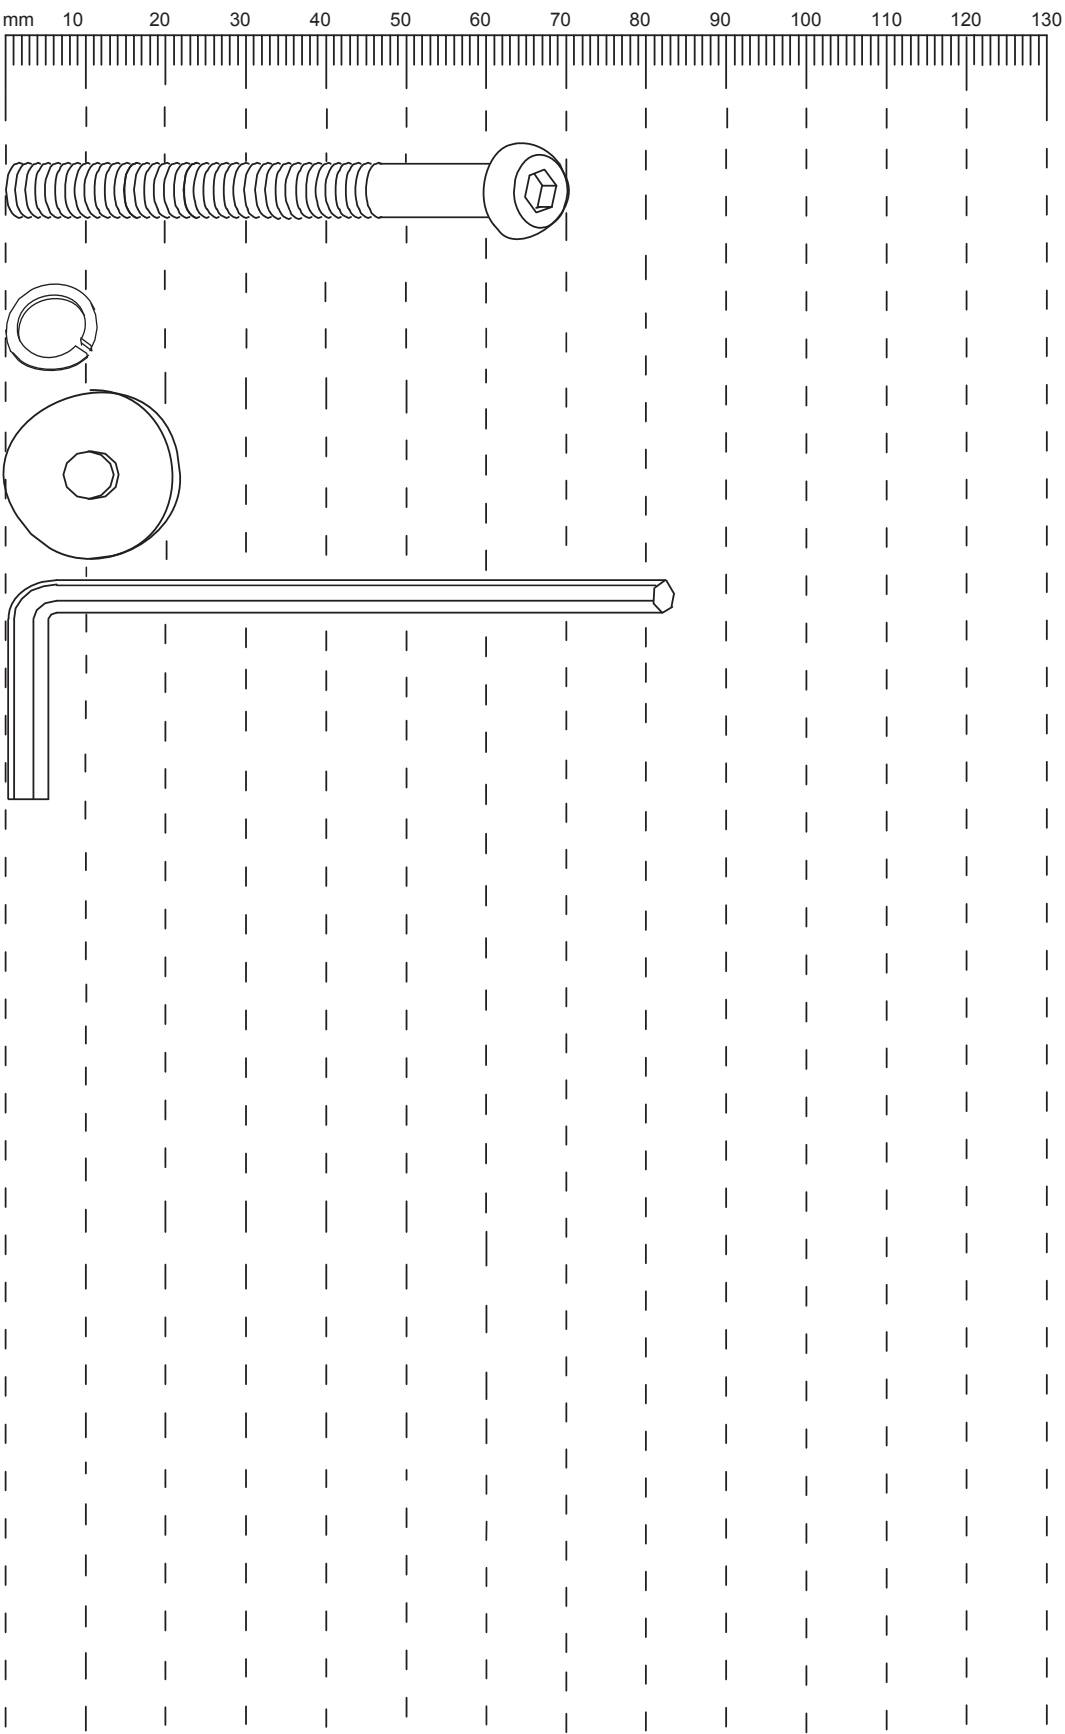


HENSLEY DINNING CHAIR

AH9310-AH9317

Assembly instructions

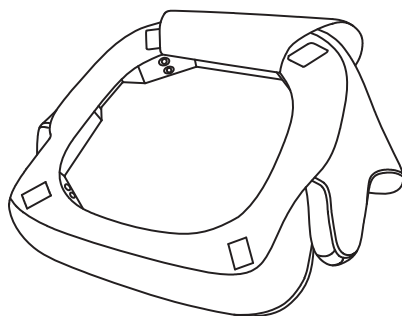


 
1.




WARNING!





Open the bottom of the chair and take the legs out.

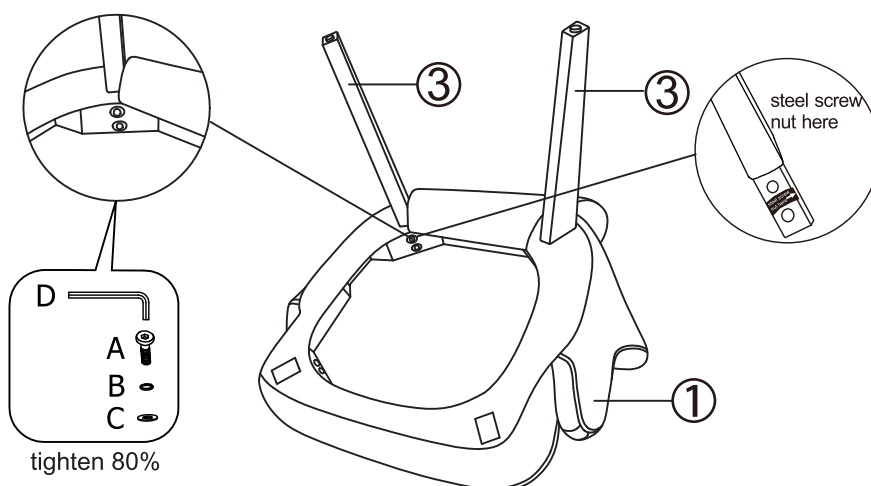
2.

A x 4	M8x65mm
	
B x 4	12mm
	
C x 4	22mm
	
D x 1	8x85mm
	




3.

A x 4	M8x65mm
	
B x 4	12mm
	
C x 4	22mm
	
D x 1	8x85mm
	

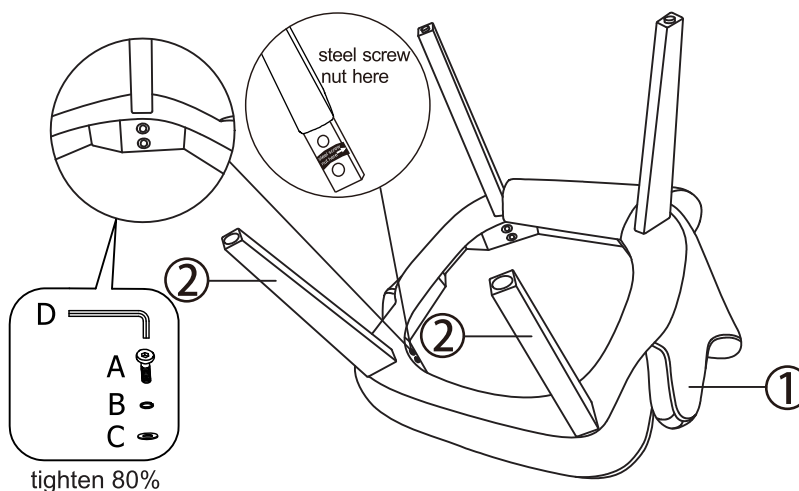


HENSLEY DINNING CHAIR
AH9310-AH9317
Assembly instructions

4.

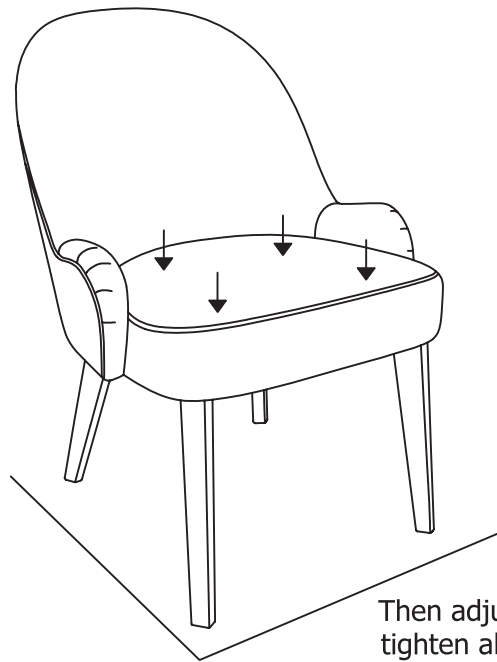

Then adjust balance of this chair
tighten all the screws to 100%.

5.

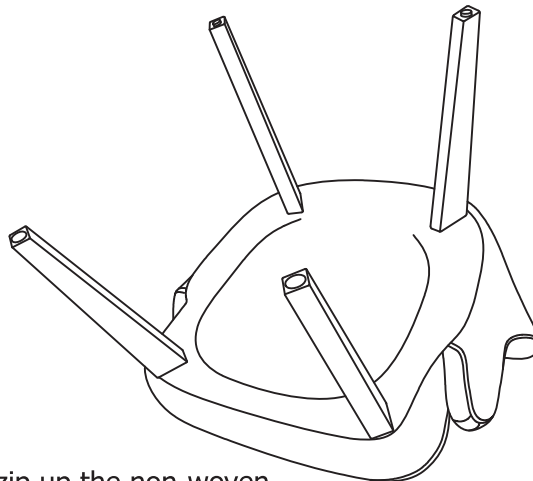

In the end , zip up the non-woven
cloth underneath the seat.

NEXT

HENSLEY DINNING CHAIR

AH9310-AH9317

Assembly instructions

HENSLEY DINNING CHAIR

AH9310-AH9317

Assembly instructions

Actual product size

H87×W61×D67cm

