
NEXT

IVY SWIVEL ACCENT CHAIR AM4995-F30467

Assembly instructions

Actual product size H75×W75.5×D75.5cm

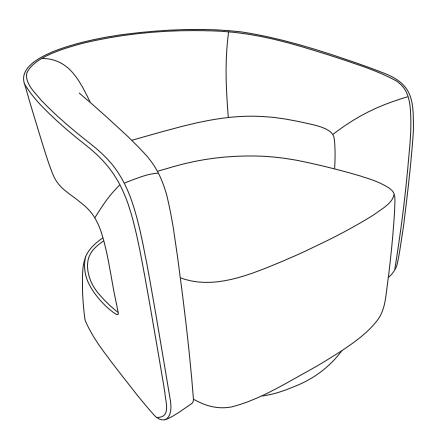

Need Help?

With: Assembly instruction Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

Assembly instructions

BEFORE YOU START

Number of people required to assemble
One people are required to assemble this item

Time to assemble: 30 minutes





Item No.	Fabric name - leg	Fabric composition
AM4995	SOFT VELVET PEBBLE-BLACK LEG	100% polyester
F30467	LINEN LOOK GEO BLUSH-BLACK LEG	100% polyester

Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

Warnings

We suggest you retain these instructions for future reference. Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground Please periodically check all fittings and re-tighten as necessary. Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour. Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999.** If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

You can write to us at

Home Customer Services Next Retail Ltd Desford Road, Leicester, LE19 4AT

To view our full furniture range please visit **www.next.co.uk**

Need Help?

With: Assembly instruction Missing or damaged parts

CALL: 0333 777 8999

NEXT

IVY SWIVEL ACCENT CHAIR AM4995-F30467

Assembly instructions

Actual product size H75×W75.5×D75.5cm

CAUTION: Maximum weight capacity of this chair is 130kg.

