

# NEXT


## INKA TRIPLE WARDROBE

AY7916

Assembly instructions

**Actual product size**

 H180 x W131x D55 cm

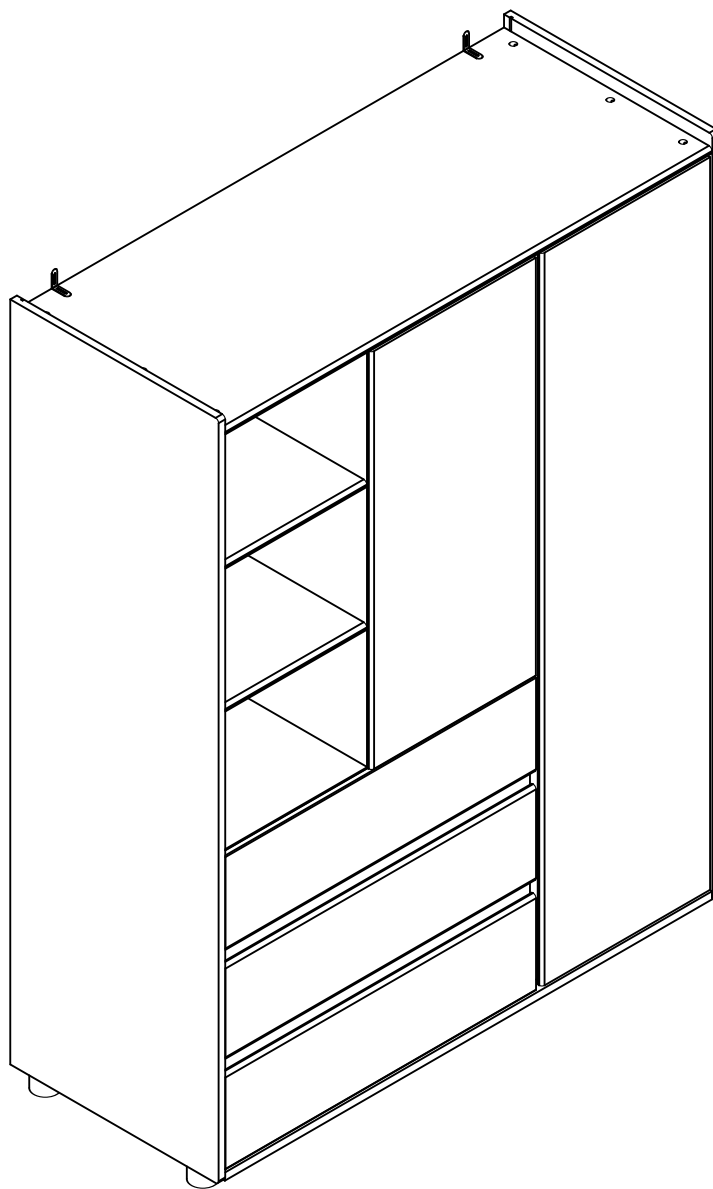

### Need Help ?

With: Assembly instruction

Missing or damaged parts

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

**CALL: 0333 777 8999**

# NEXT

## INKA TRIPLE WARDROBE

AY7916

Assembly instructions

### BEFORE YOU START

#### Number of people required to assemble

 
Two people are required to assemble this item



**Time to assemble : 60 minutes**



#### Tools required

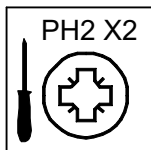

not supplied

#### Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

#### Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.  
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.


# NEXT

## INKA TRIPLE WARDROBE

AY7916

 Assembly instructions


 
 
 
 
 
 
 


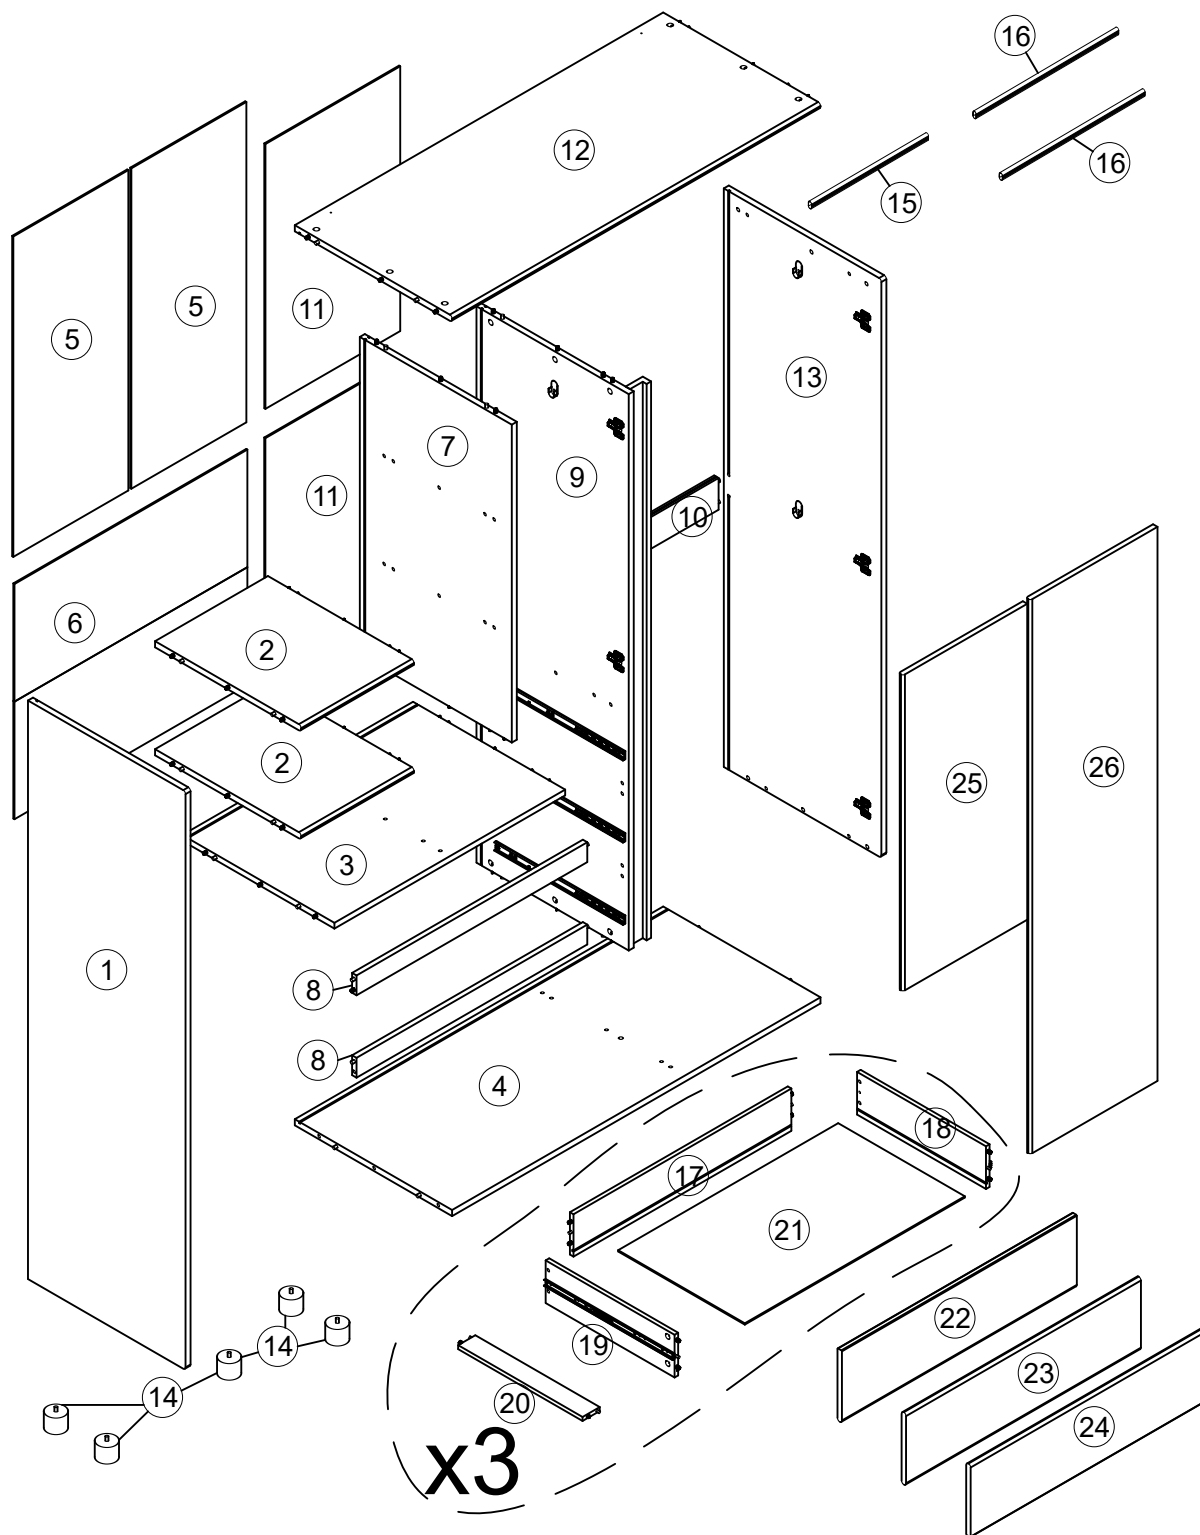
### GETTING TO KNOW YOUR PRODUCT








  
 





 


# NEXT

## INKA TRIPLE WARDROBE AY7916 Assembly instructions

 
Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	55x175cm		1	2
2	39.5x51cm		2	1
3	53x80.5cm		1	1
4	55x128.5cm		1	1
5	40x97cm		2	2
6	71x81.5cm		1	2
7	53x96cm		1	1
8	6x80.5cm		2	1
9	53x168cm		1	2
10	9.5x46.5cm		1	1
11	47x80cm		2	2


Ref	Dimensions	Visual	Qty	Ctn
12	55x128.5cm		1	1
13	55x175cm		1	2
14	5x6cm		5	1
15	3x38.5cm		1	1
16	3x45.5cm		2	1
17	13x76cm		3	1
18	13x45cm		3	1
19	13x45cm		3	1
20	6x43.5cm		3	1
21	44x77cm		3	1
22	22x82cm		1	1
23	22x82cm		1	1
24	22x82cm		1	1
25	44x95.5cm		1	2
26	43x167.5cm		1	2

# NEXT


## TITUS TIGHTENING INSTRUCTIONS

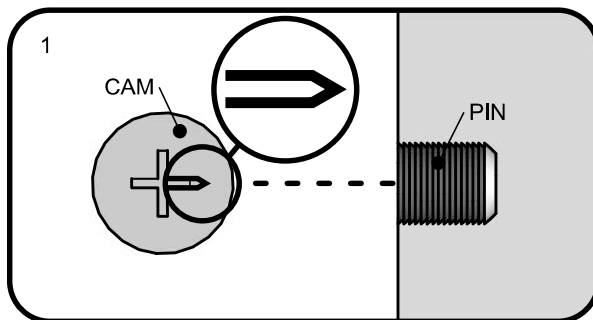

 
Line up the arrow on the CAM with the PIN.

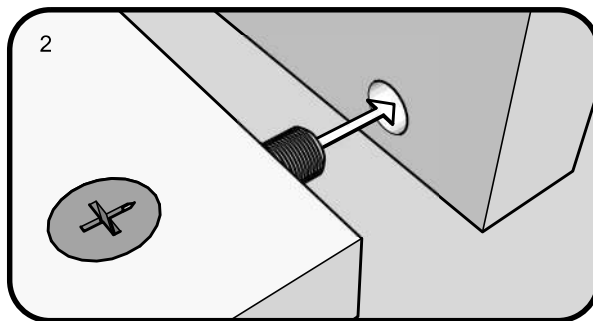

 
Push the pins into the holes in the panel to be joined.

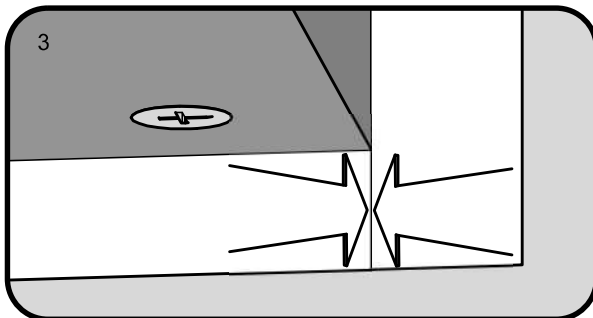

 Make sure there is no gap between the panels.

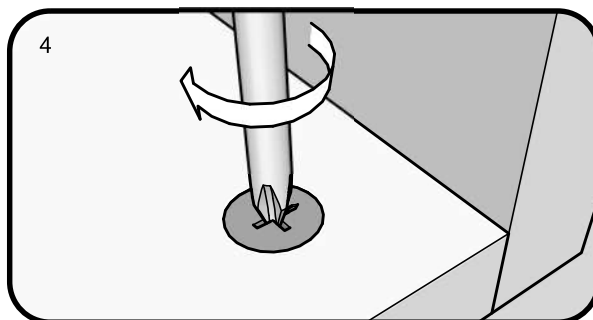

Use a cross-point screwdriver (PH2 or PZ2 is ideal) to tighten the cams and lock the panels together.

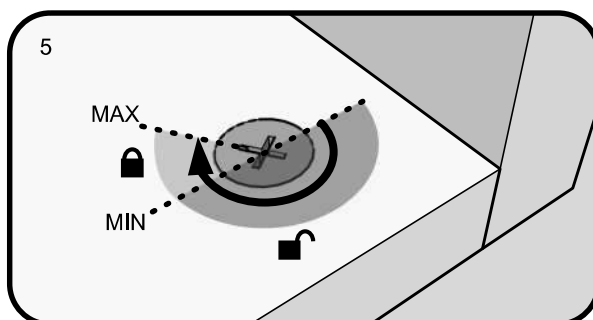

The panels are locked when each cam is turned to between 1/2 and 2/3 of a full turn (Maximum rotation)

# NEXT


## INKA TRIPLE WARDROBE

AY7916

Assembly instructions

### Fixtures and fittings supplied (actual size)

 Ref	Dimensions	Qty	Spare Qty
B6	Ø15 x 12mm	12	2
B12	Ø7.5 x 33mm	12	2
U139	Ø4.5 x 15mm	10	2
U123	Ø4 x 15mm	10	2
S41	Ø4 x 16mm	2	1
D6	Ø7.8 x 30mm	N/A	2
D3	Ø6 x 30mm	N/A	2
B8	Ø8 x 38mm	N/A	2
B2	Ø15 x 10mm	N/A	2
B3	Ø15 x 12mm	N/A	2

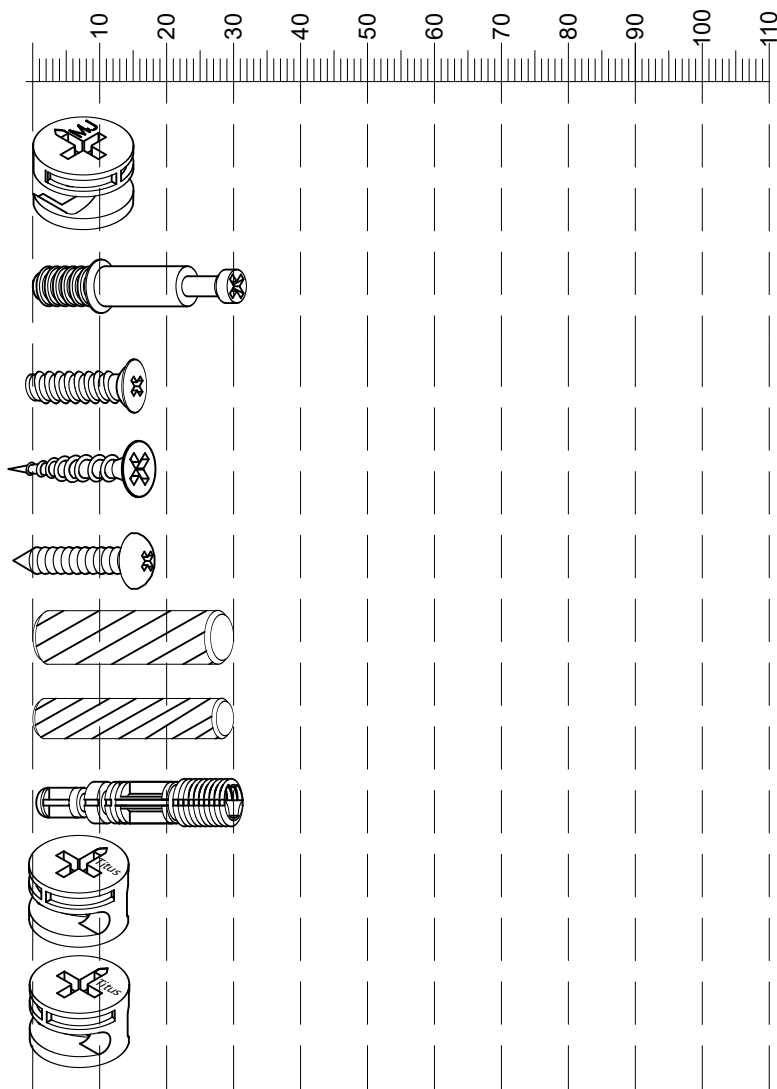


### Fixtures and fittings supplied ( not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
C11	N/A	3	N/A	
C16	N/A	2	N/A	
T38	N/A	20	2	
N1	N/A	2	N/A	

# NEXT

## INKA TRIPLE WARDROBE AY7916 Assembly instructions

 
1

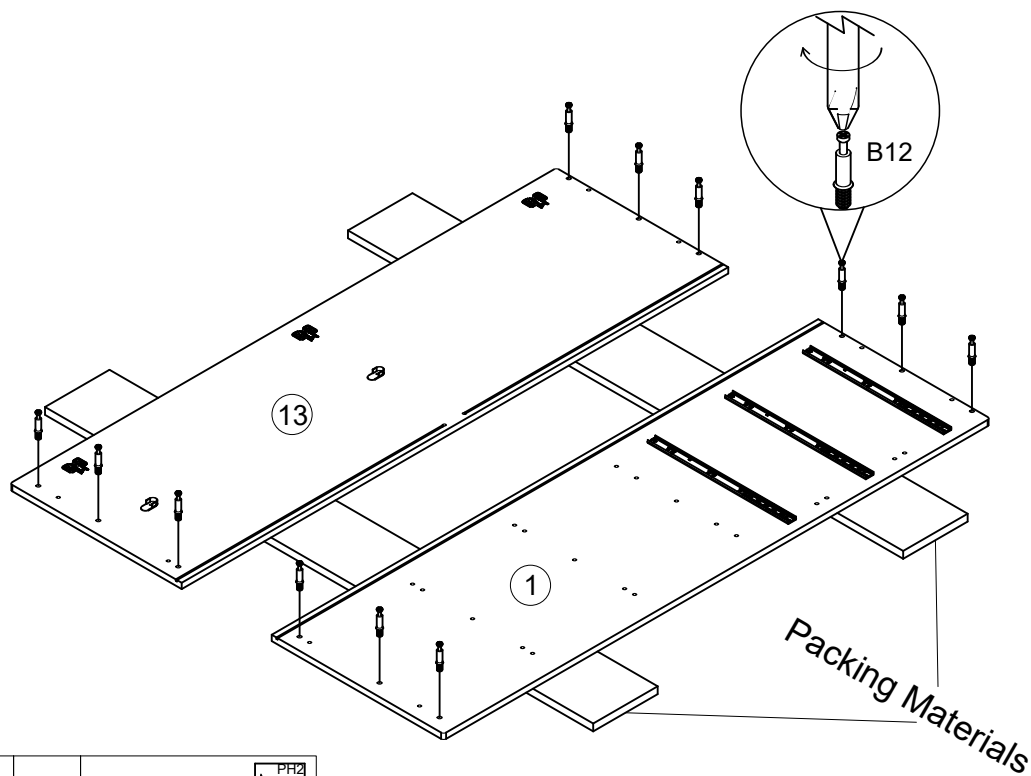


B12

Ø7.5 x 33mm

 12



2

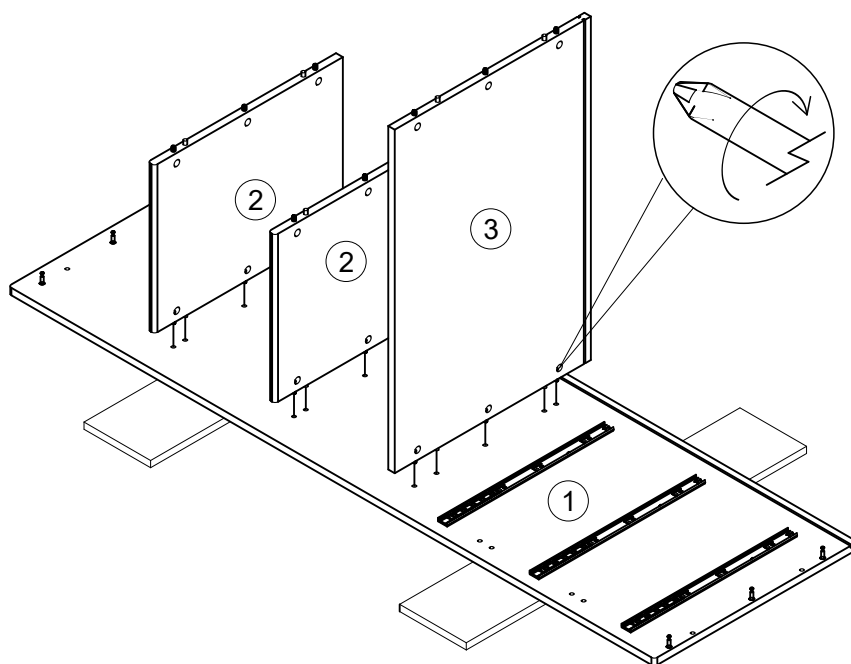 


# NEXT

## INKA TRIPLE WARDROBE


AY7916

Assembly instructions

 3

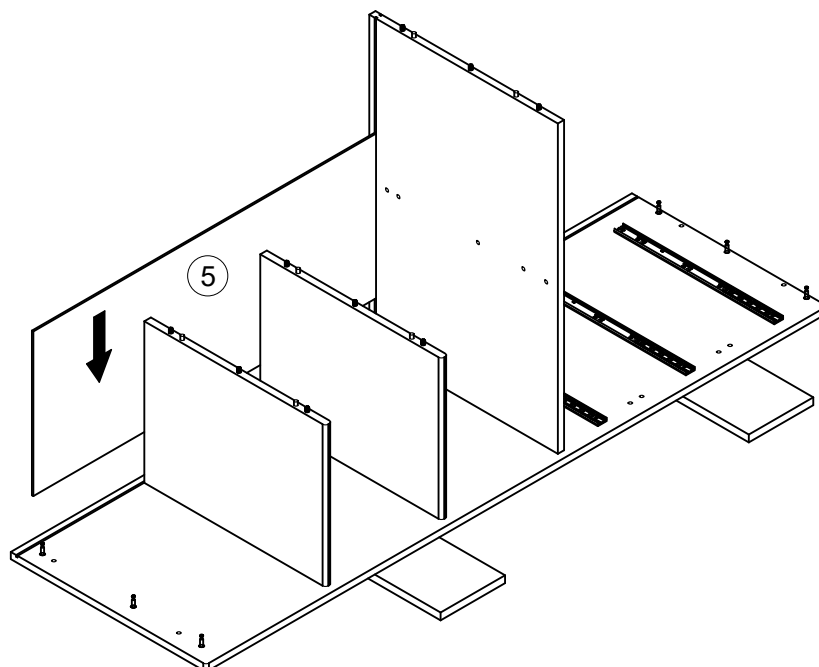

4

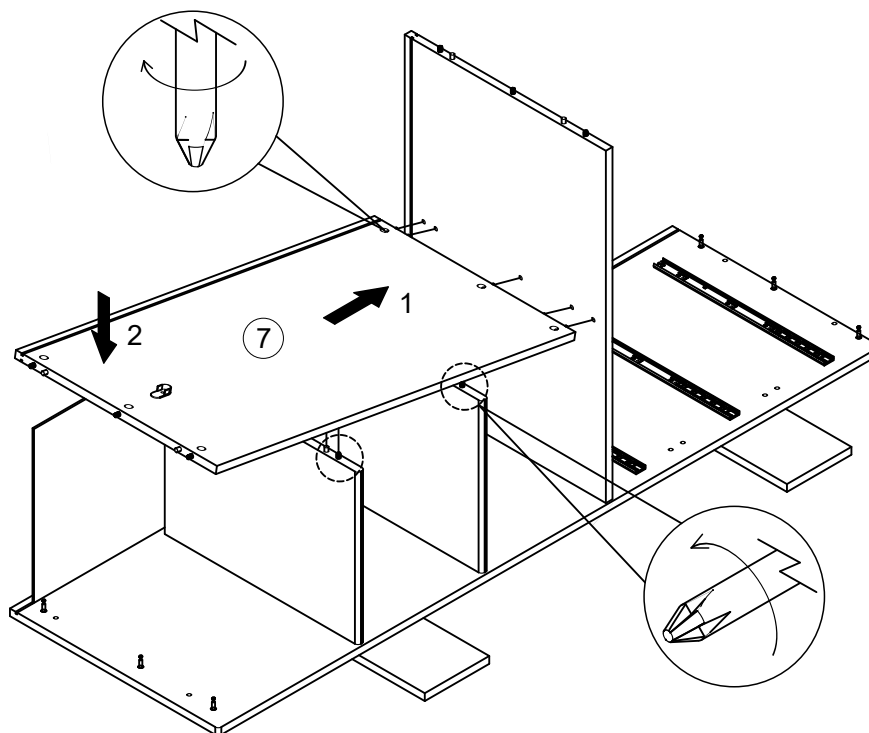 




# NEXT

## INKA TRIPLE WARDROBE

AY7916  
Assembly instructions

 5

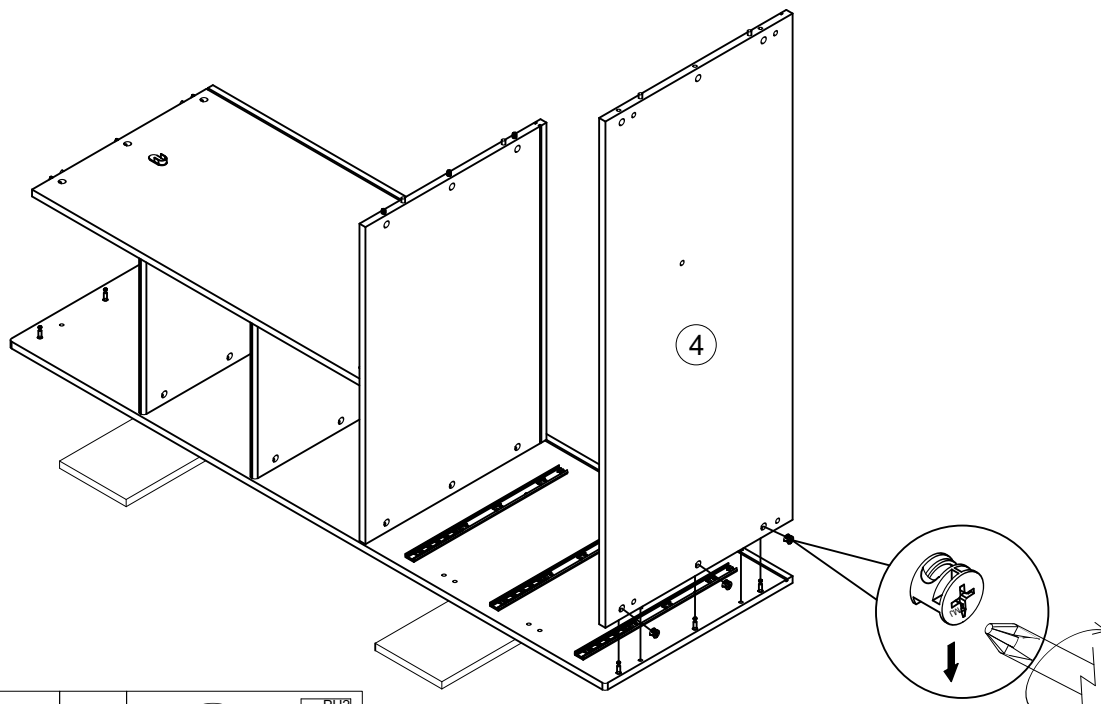


B6

Ø15 x 12mm

3



 6

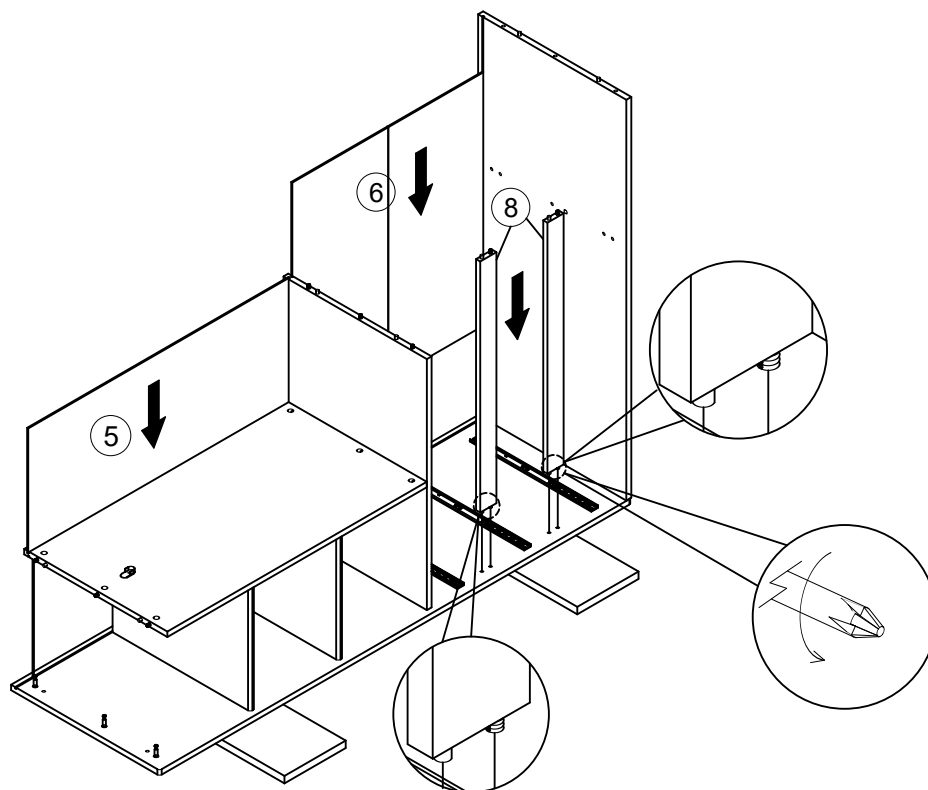


# NEXT

## INKA TRIPLE WARDROBE


AY7916

Assembly instructions

 7

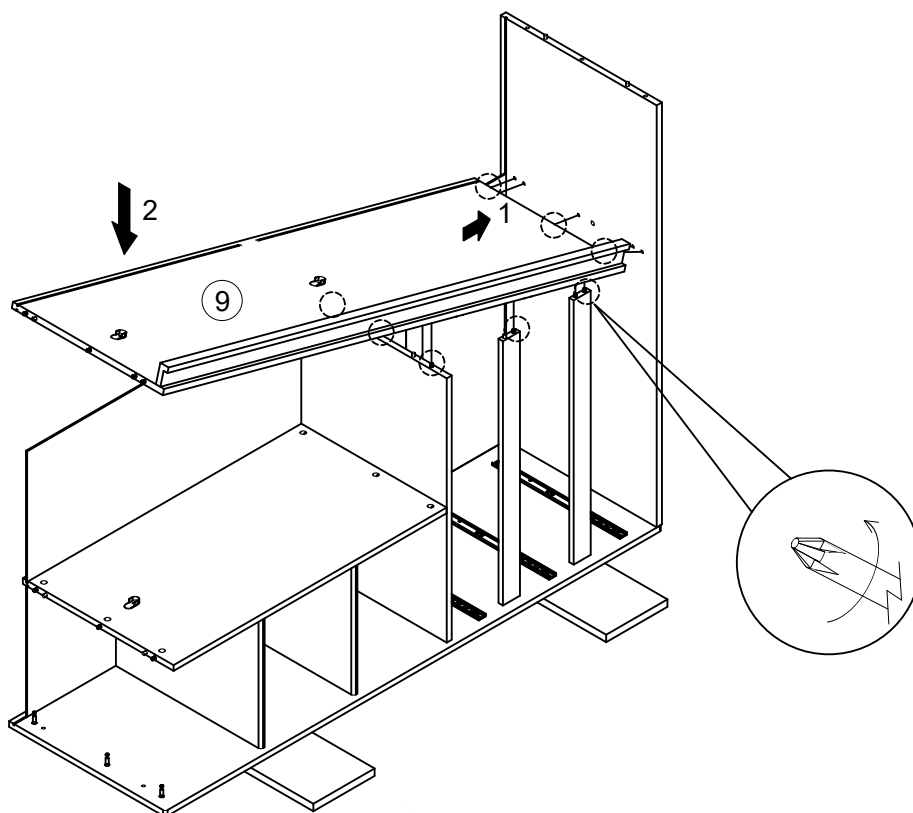


8

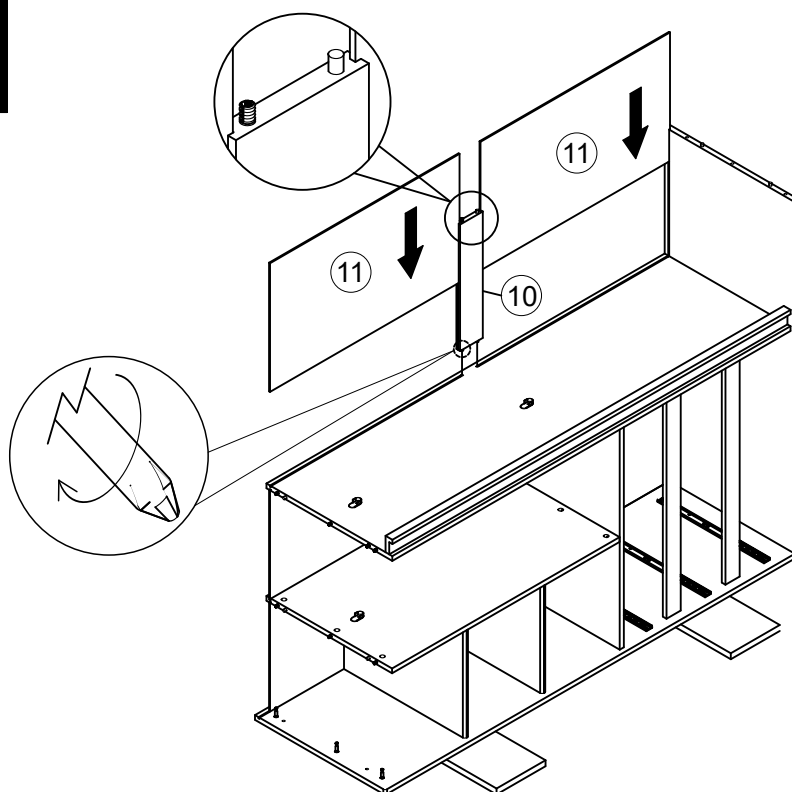 




# NEXT

 
## INKA TRIPLE WARDROBE AY7916 Assembly instructions

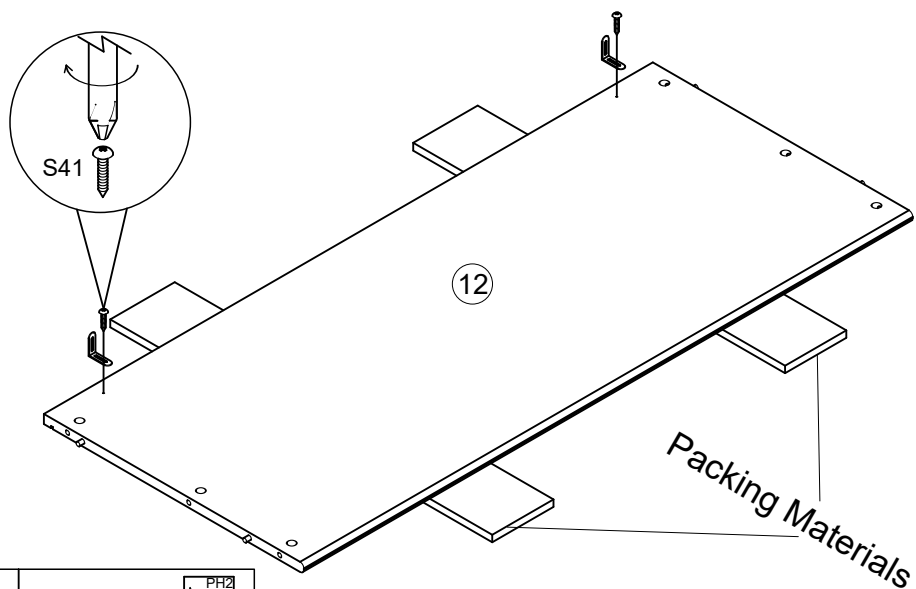9



S41	Ø4 x 16mm	2		 not supplied
N1	N/A	2		

 10

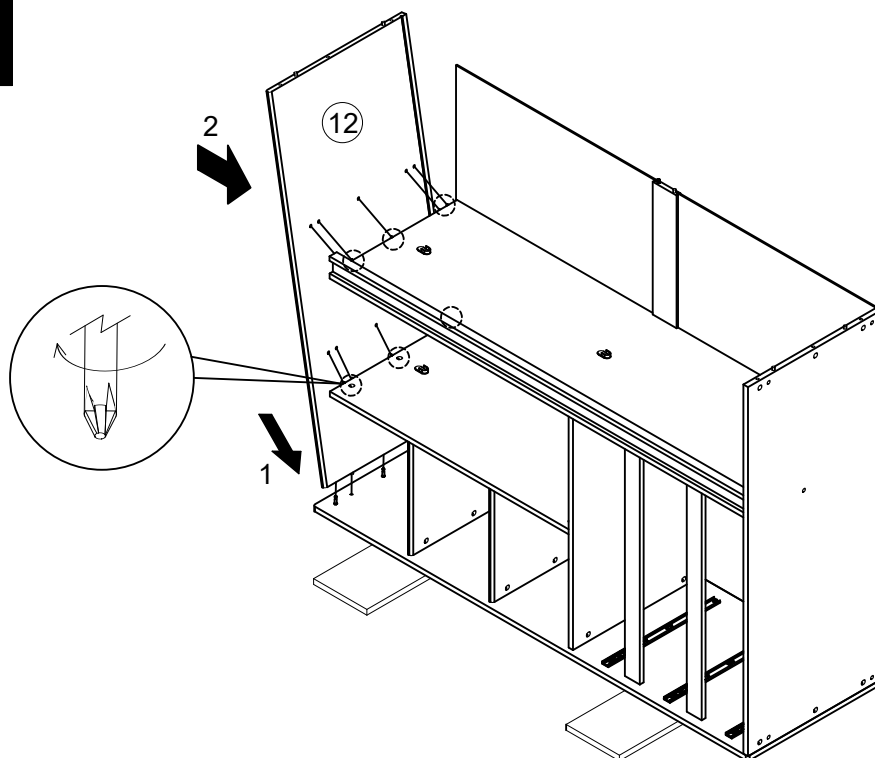


# NEXT

## INKA TRIPLE WARDROBE

AY7916

Assembly instructions

 11

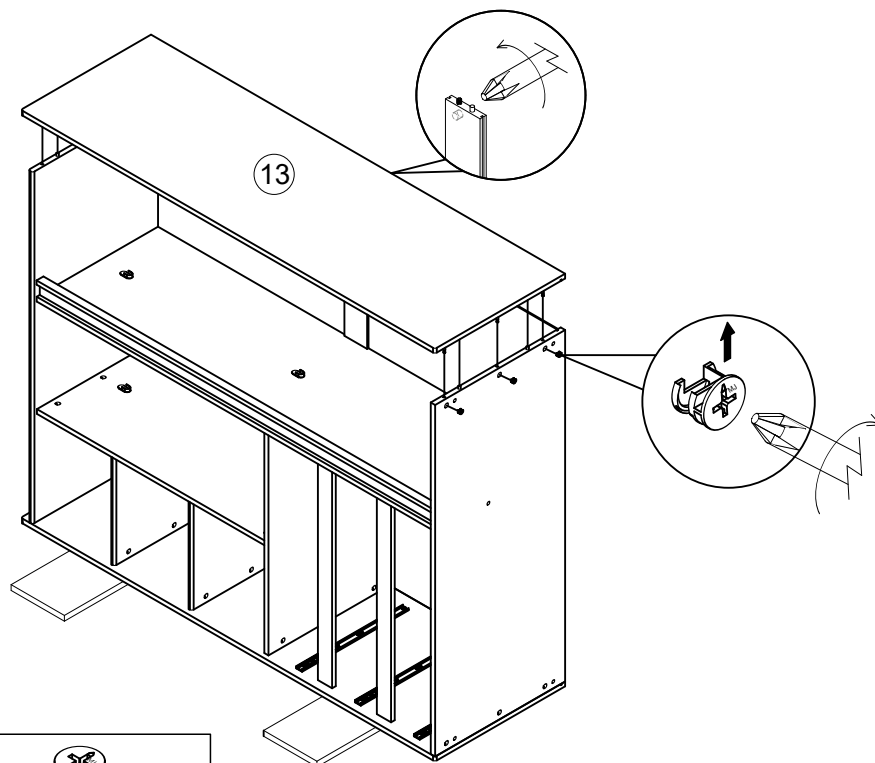


B6

Ø15 x 12mm

3



 12

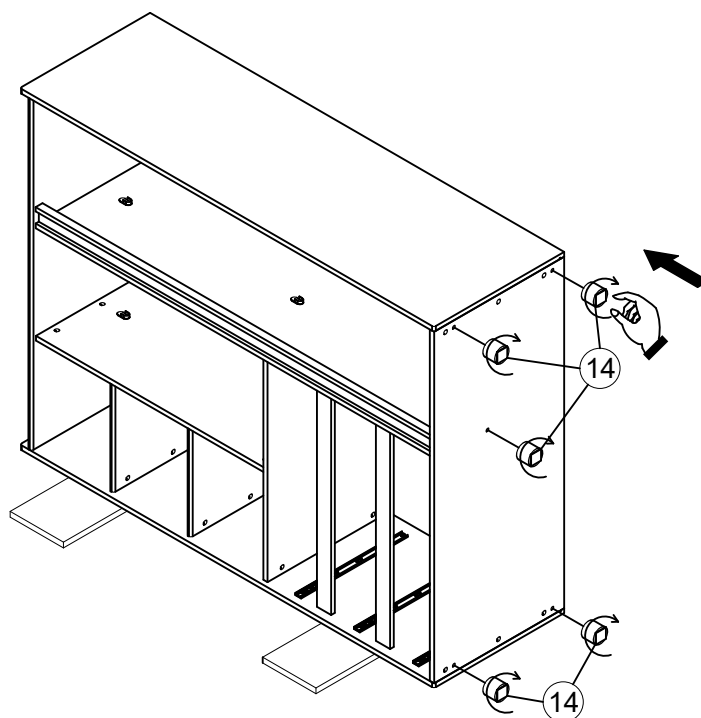


# NEXT

## INKA TRIPLE WARDROBE

AY7916

Assembly instructions

 13

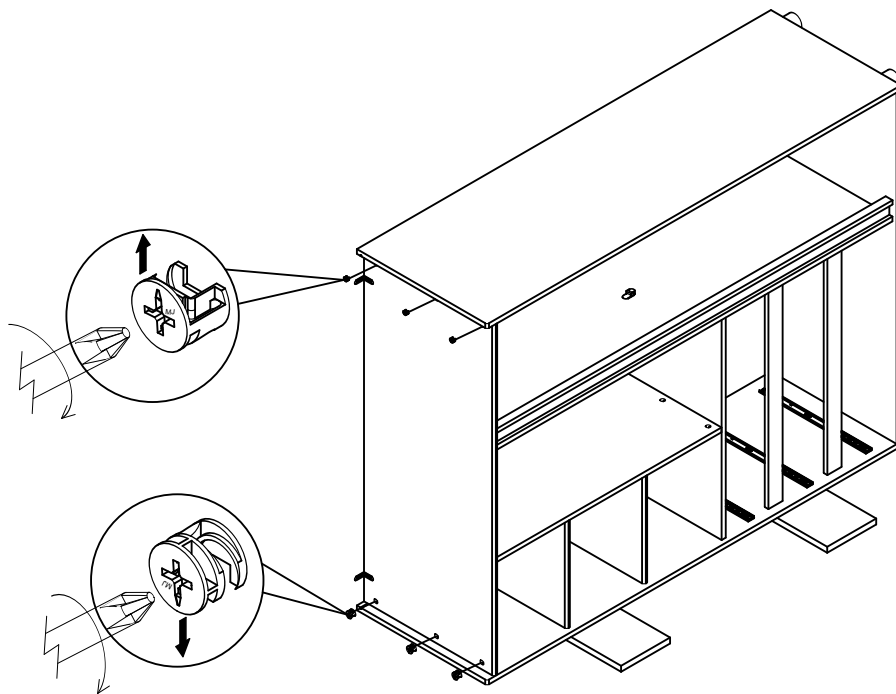


B6

Ø15 x 12mm

6



 14

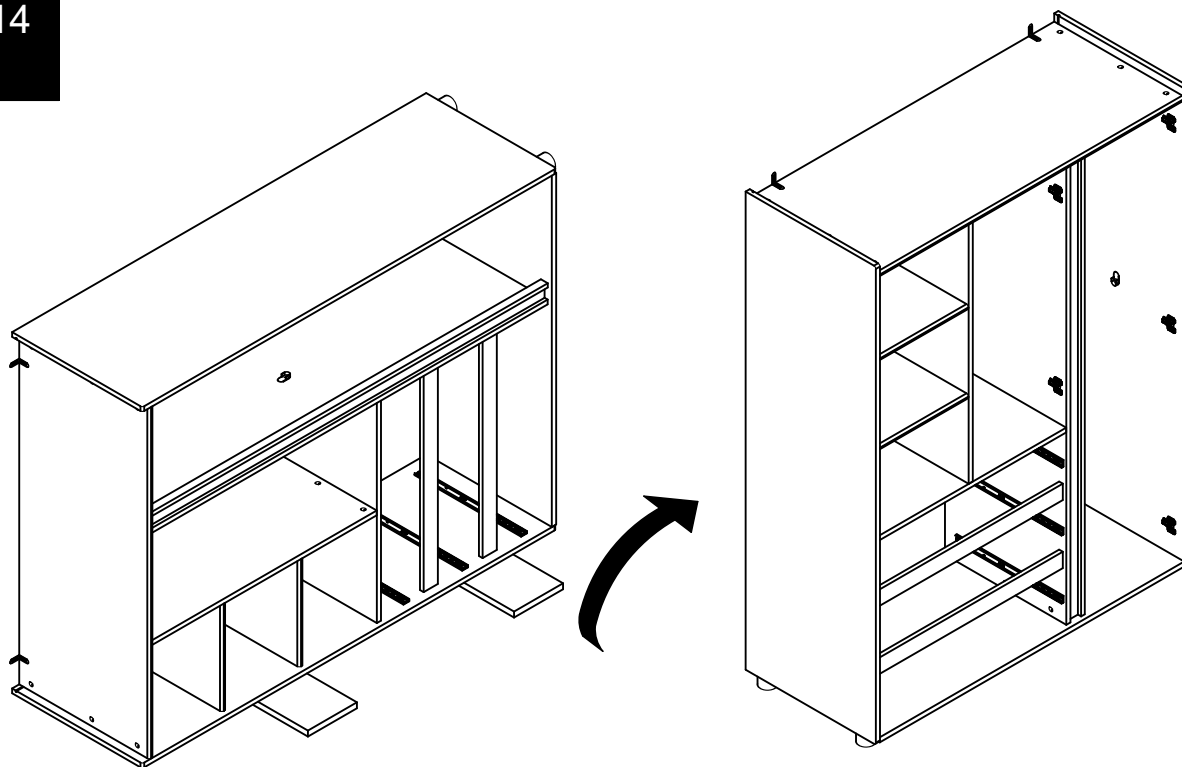


# NEXT

## INKA TRIPLE WARDROBE

AY7916

Assembly instructions

 15

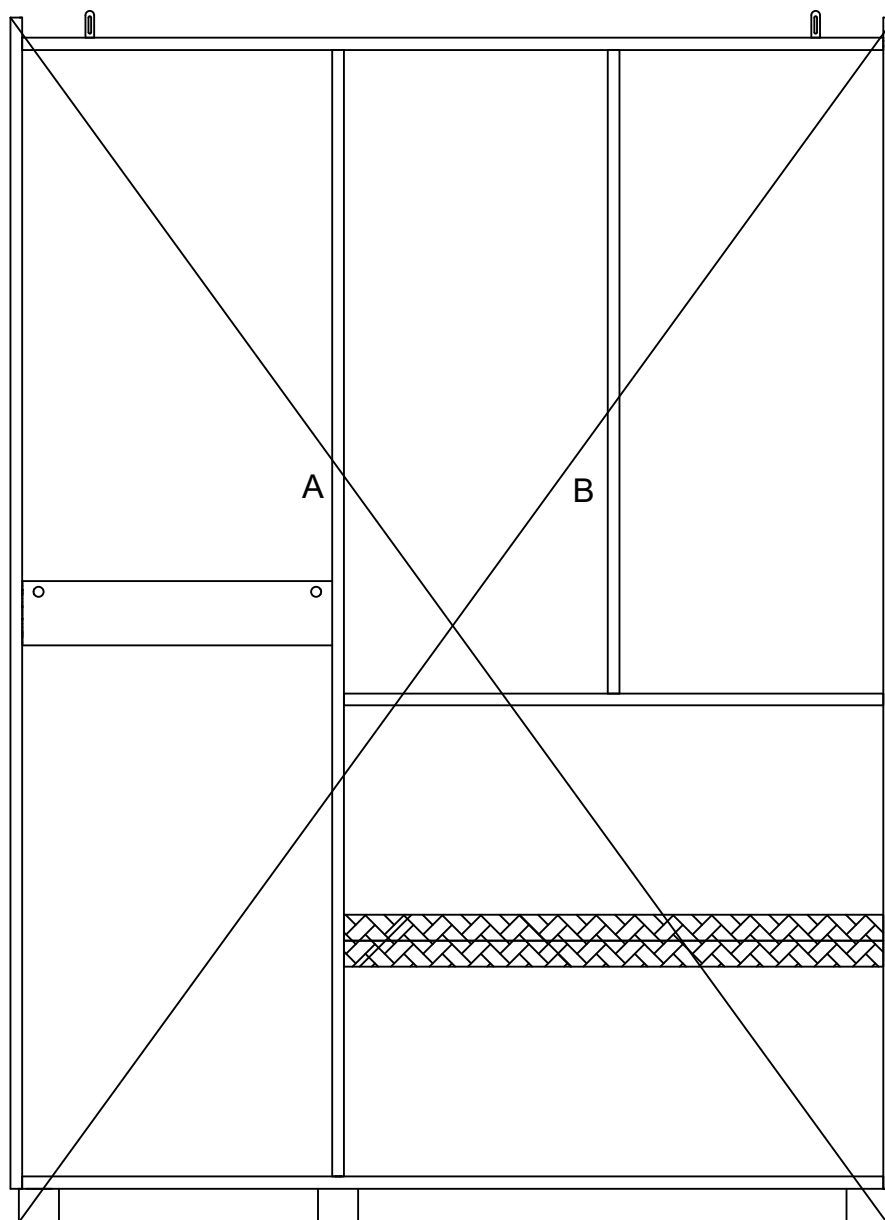

A=B


# NEXT



## INKA TRIPLE WARDROBE

AY7916

 Assembly instructions

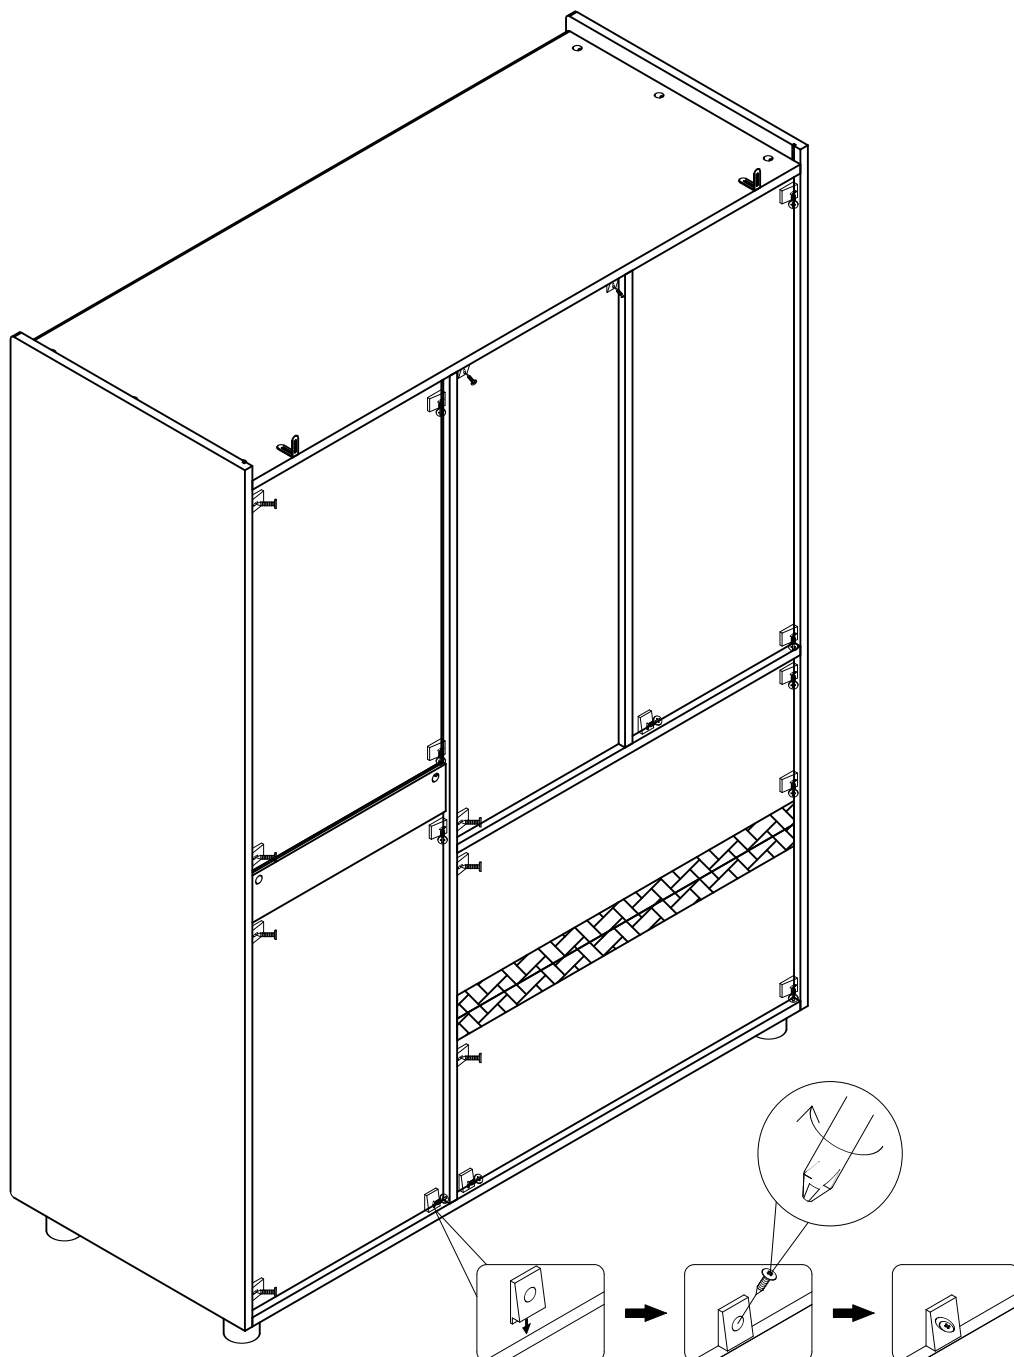16



T38	NA	20		 not supplied
-----	----	----	---	---

# NEXT

## INKA TRIPLE WARDROBE

AY7916

Assembly instructions

 
 
17

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X"L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

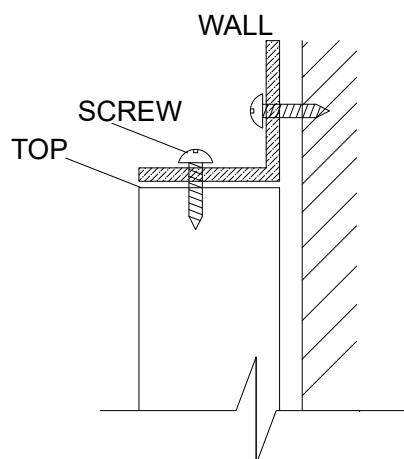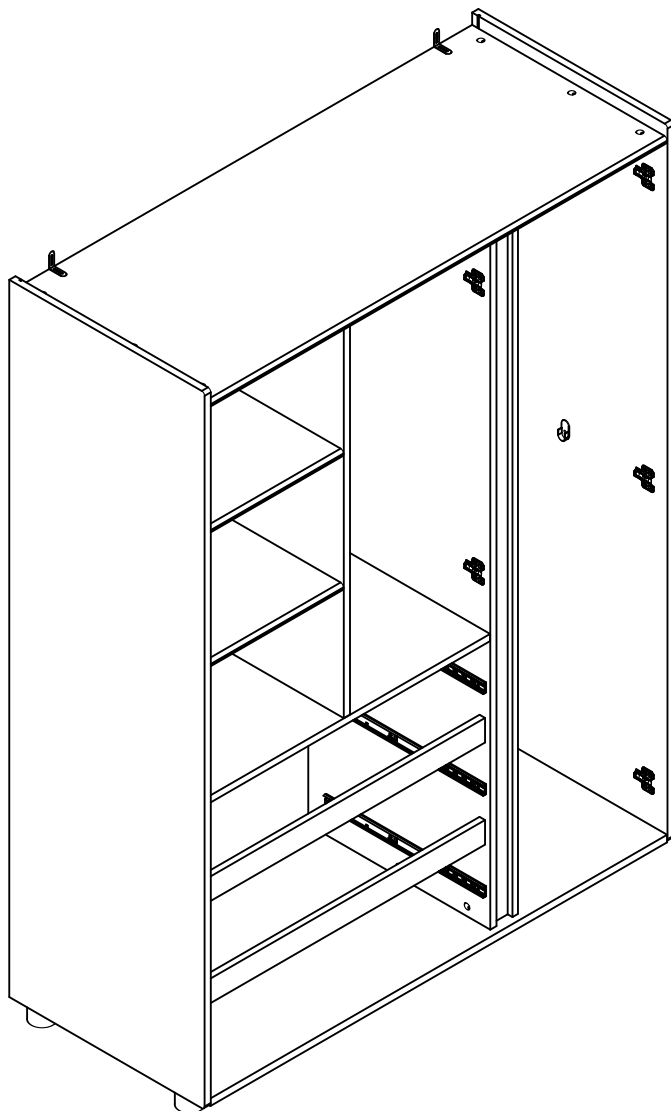

### WHEN LOOSENING THE CAM

TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



MAXIMUM  
LOCK



TURN  
TO UNLOCK



UNLOCKED




# NEXT

## INKA TRIPLE WARDROBE

 
AY7916



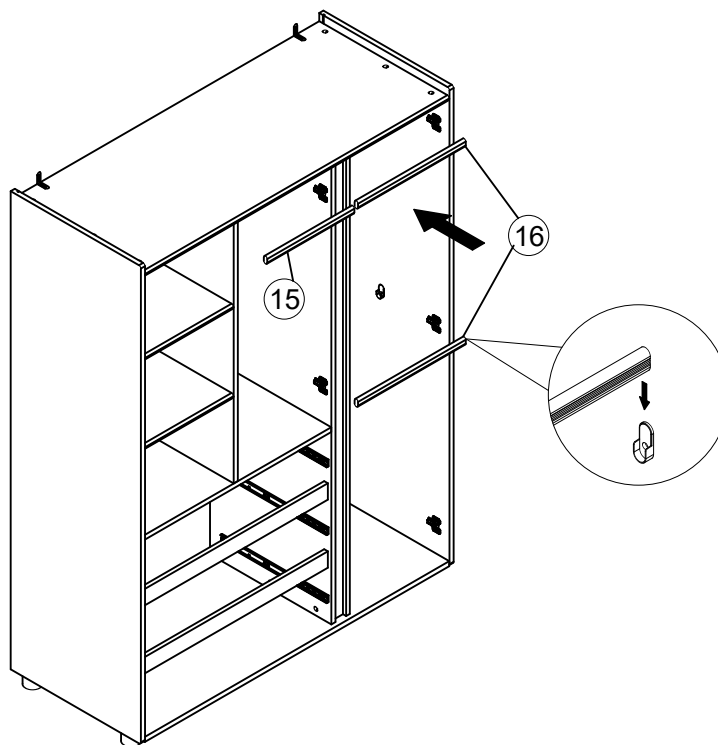

Assembly instructions

 18

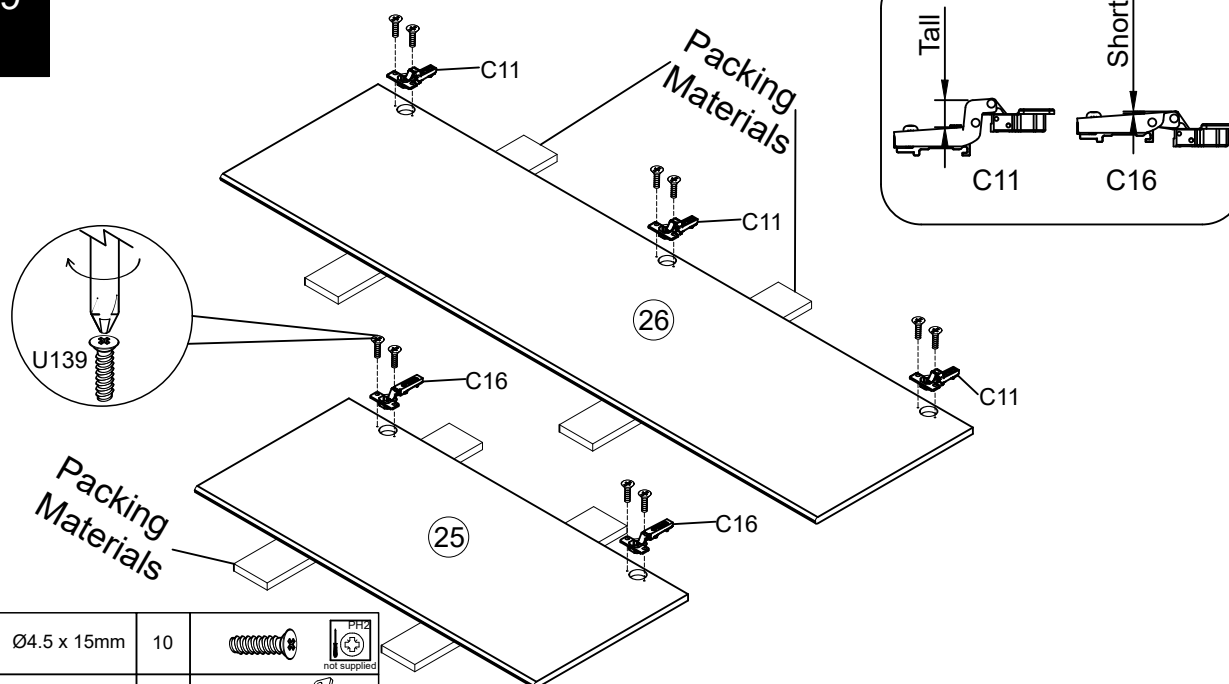

19






U139	Ø4.5 x 15mm	10		 not supplied
C16	N/A	2		
C11	N/A	3		

# NEXT

  
 
## INKA TRIPLE WARDROBE AY7916 Assembly instructions

20


### Install hinge

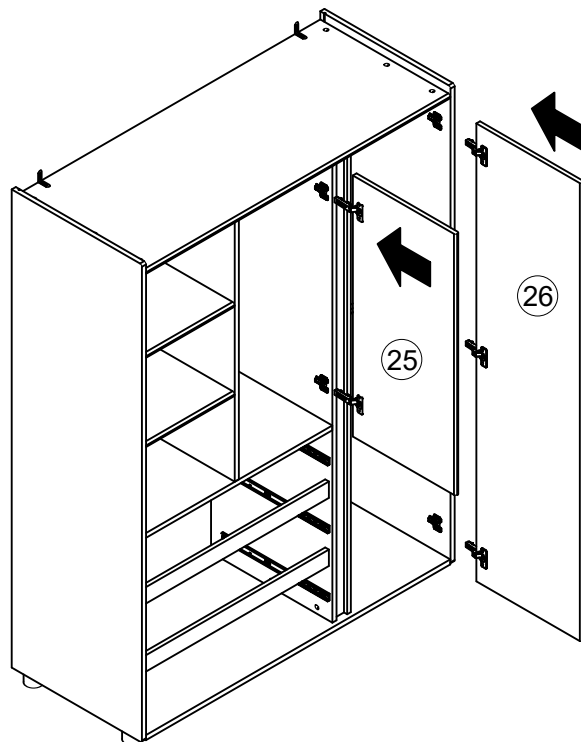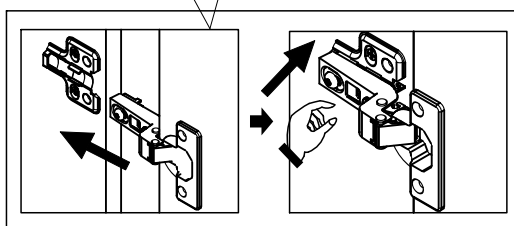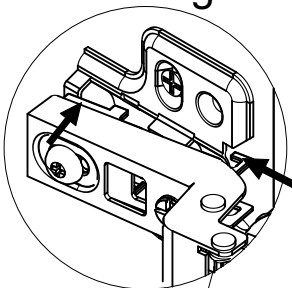

### Remove hinge

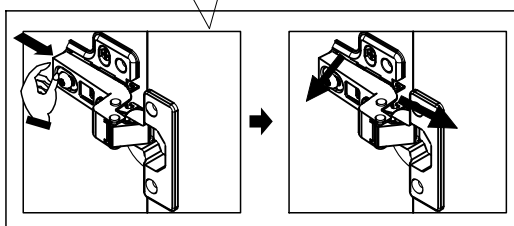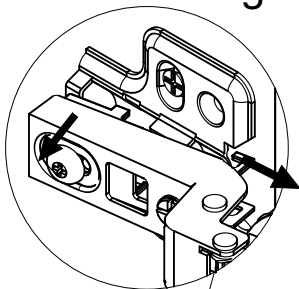  

### Adjust Hinge Position

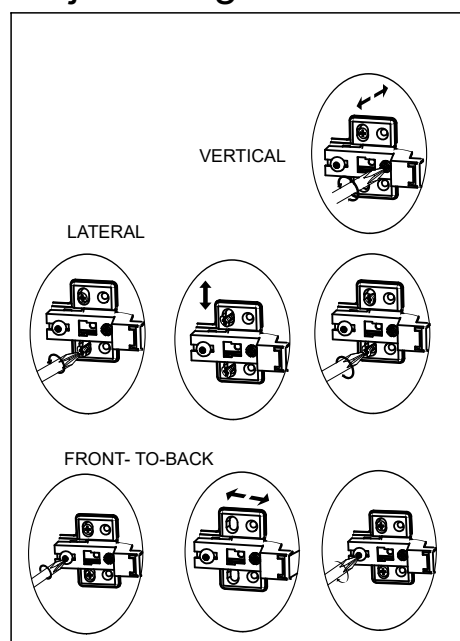 


# NEXT



## INKA TRIPLE WARDROBE

AY7916

 Assembly instructions

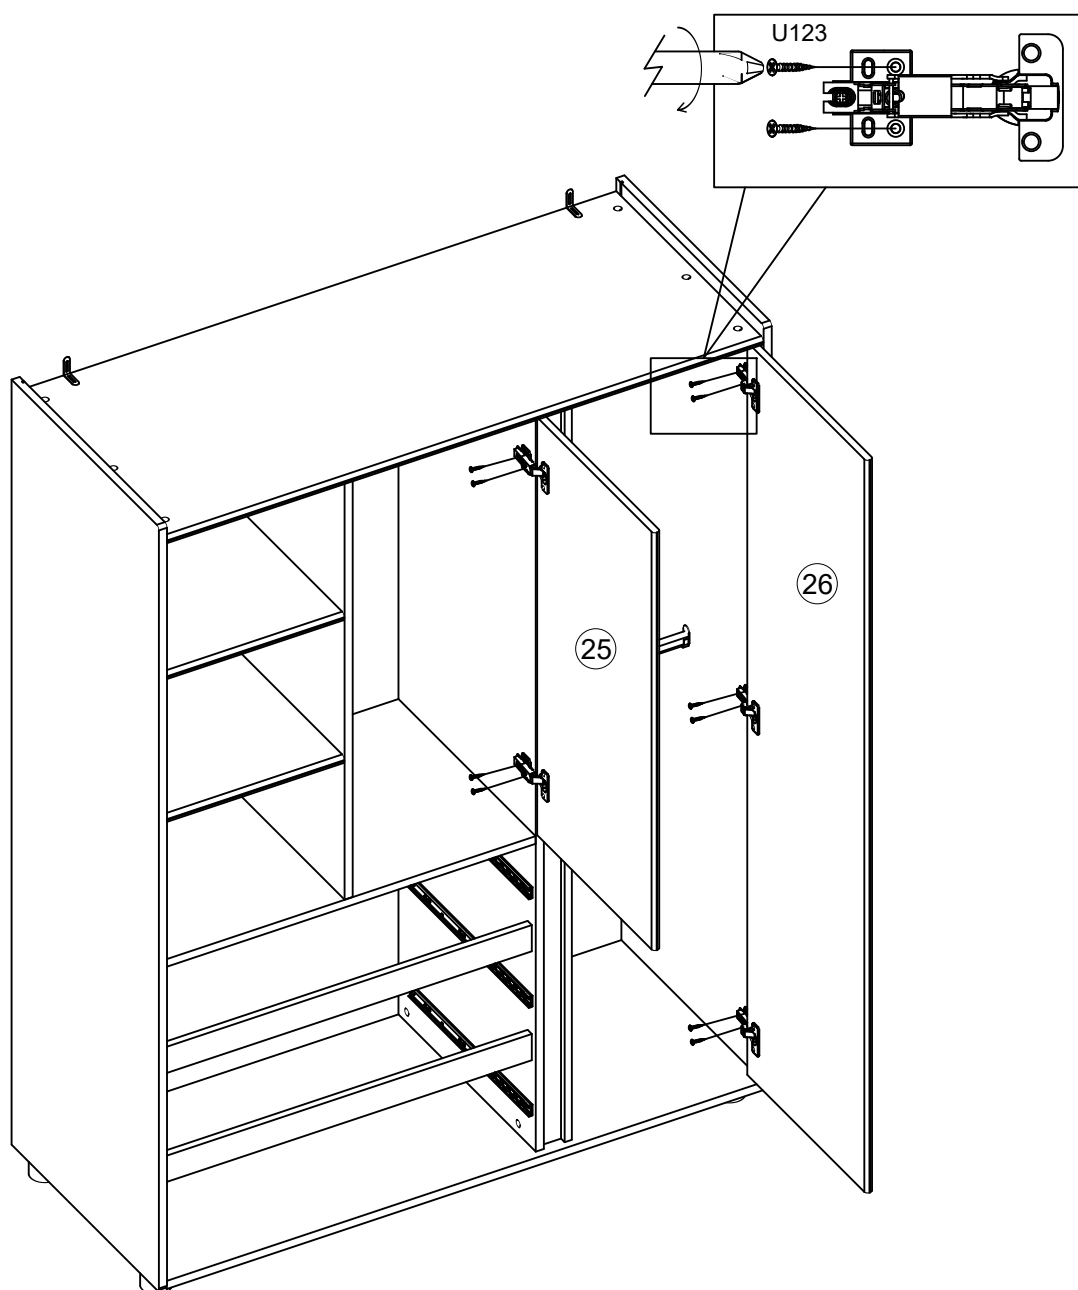21



U123	Ø4 x 15mm	10		 not supplied
------	-----------	----	---	---


# NEXT

## INKA TRIPLE WARDROBE

AY7916


Assembly instructions

 22

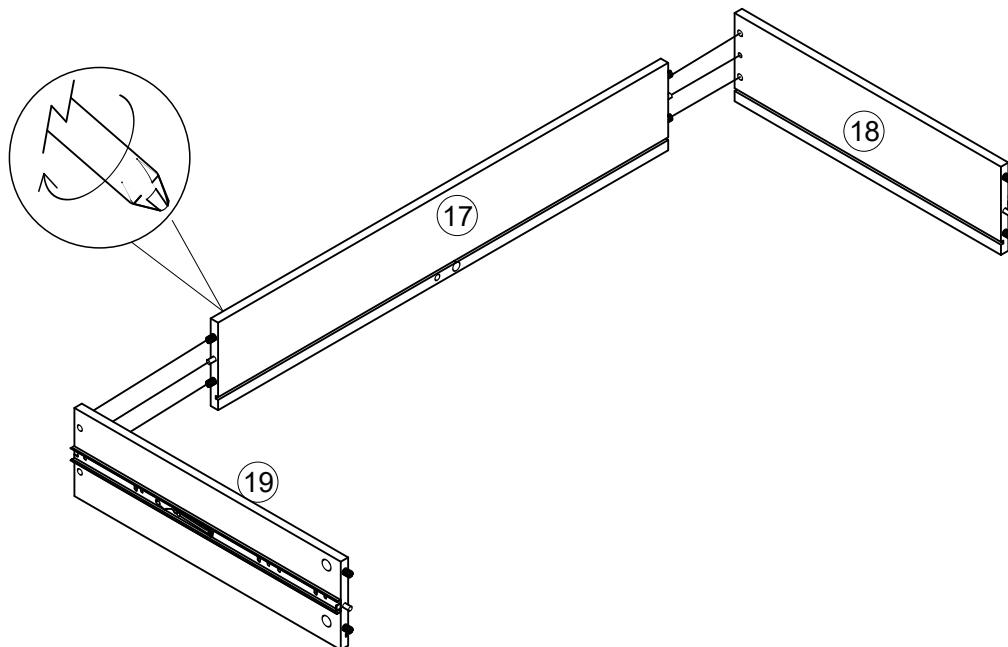

X3

 23

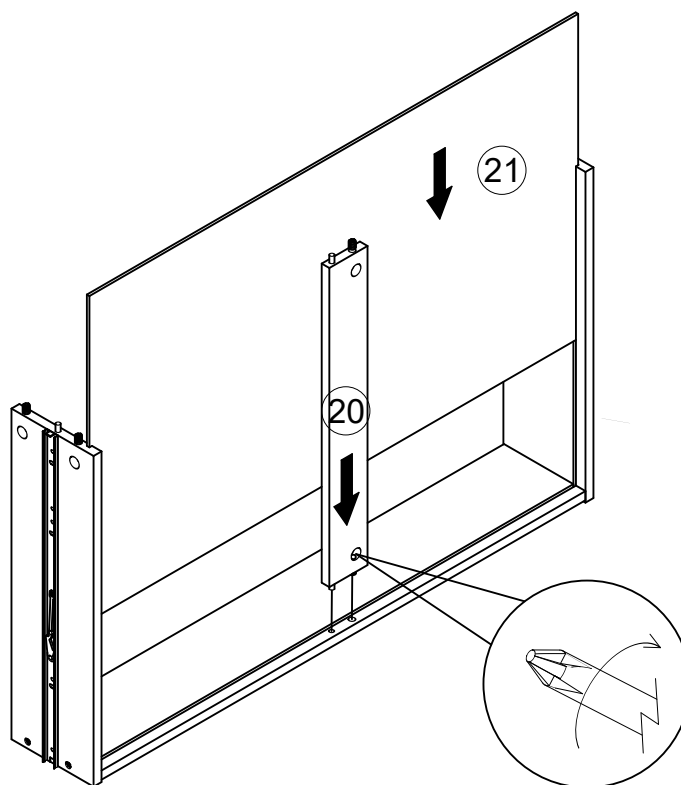

X3


# NEXT

## INKA TRIPLE WARDROBE

AY7916

Assembly instructions

 24

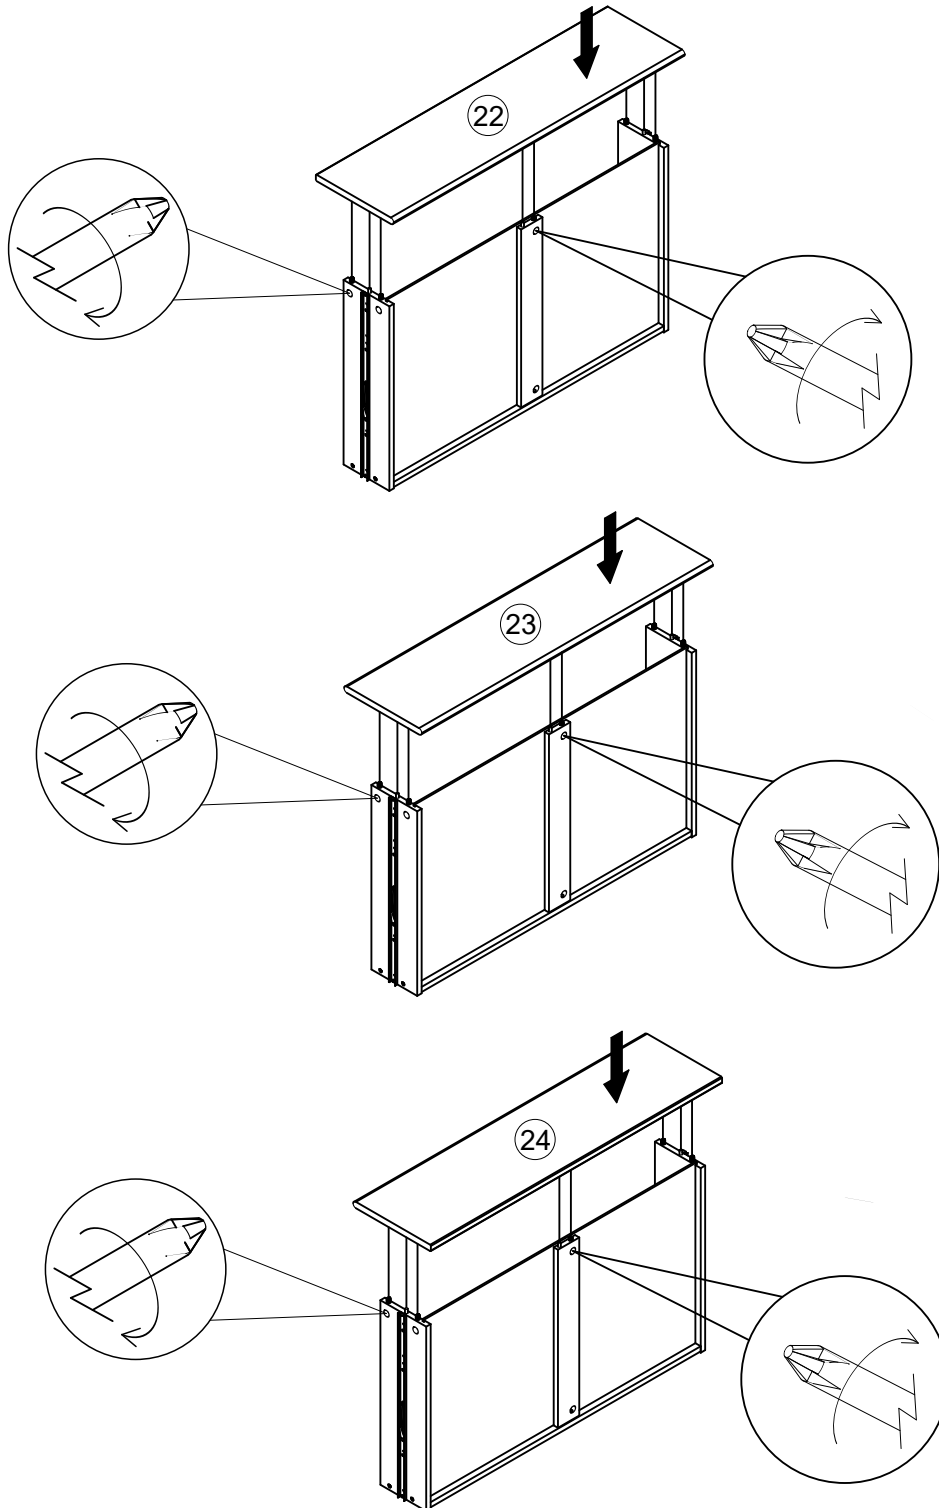



# NEXT

## INKA TRIPLE WARDROBE



AY7916

Assembly instructions

 
 
25

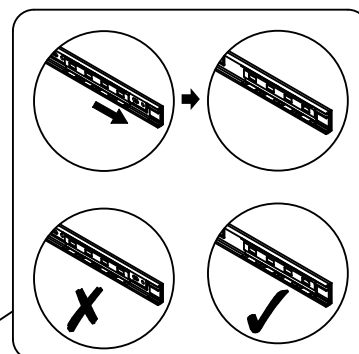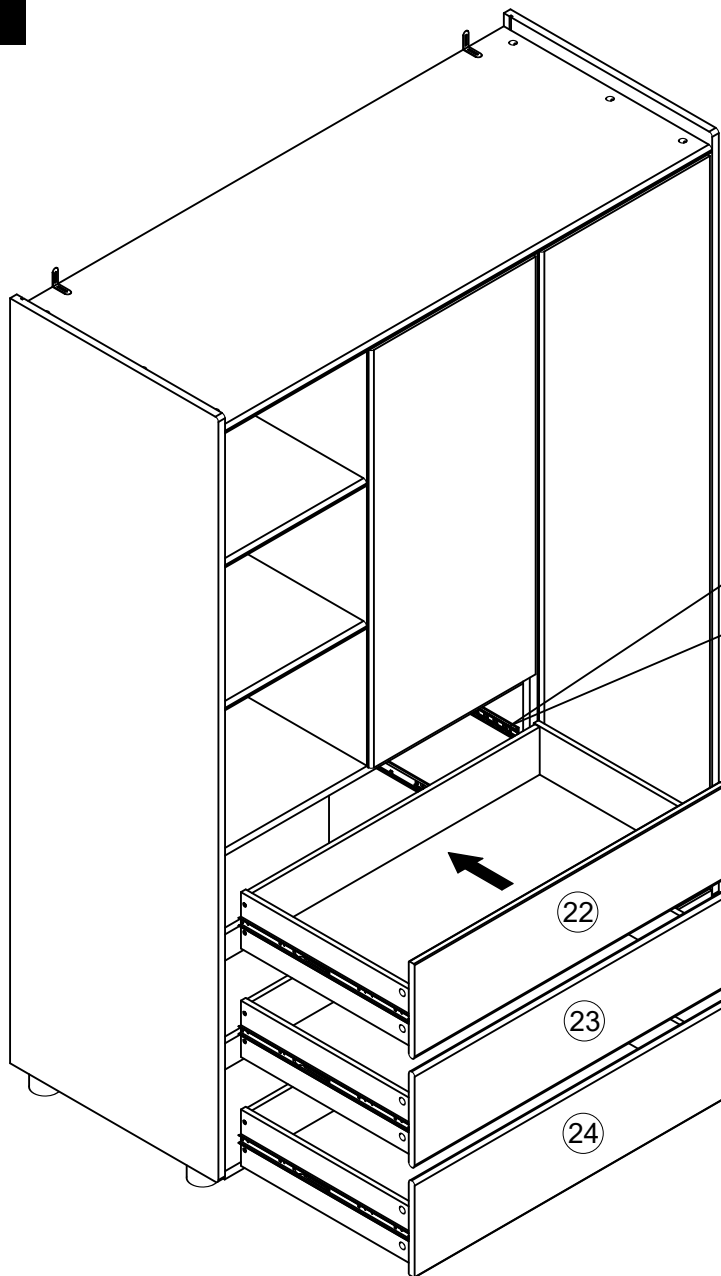

Left side

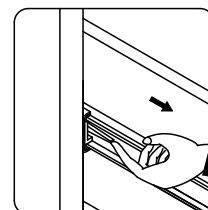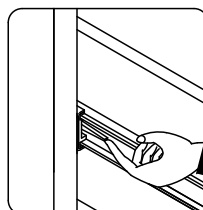  


Right side

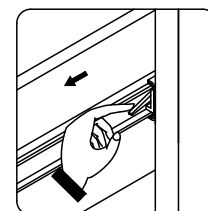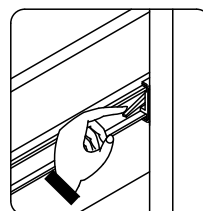  

# NEXT

## INKA TRIPLE WARDROBE AY7916

 Actual product size  
H180 x W131x D55 cm

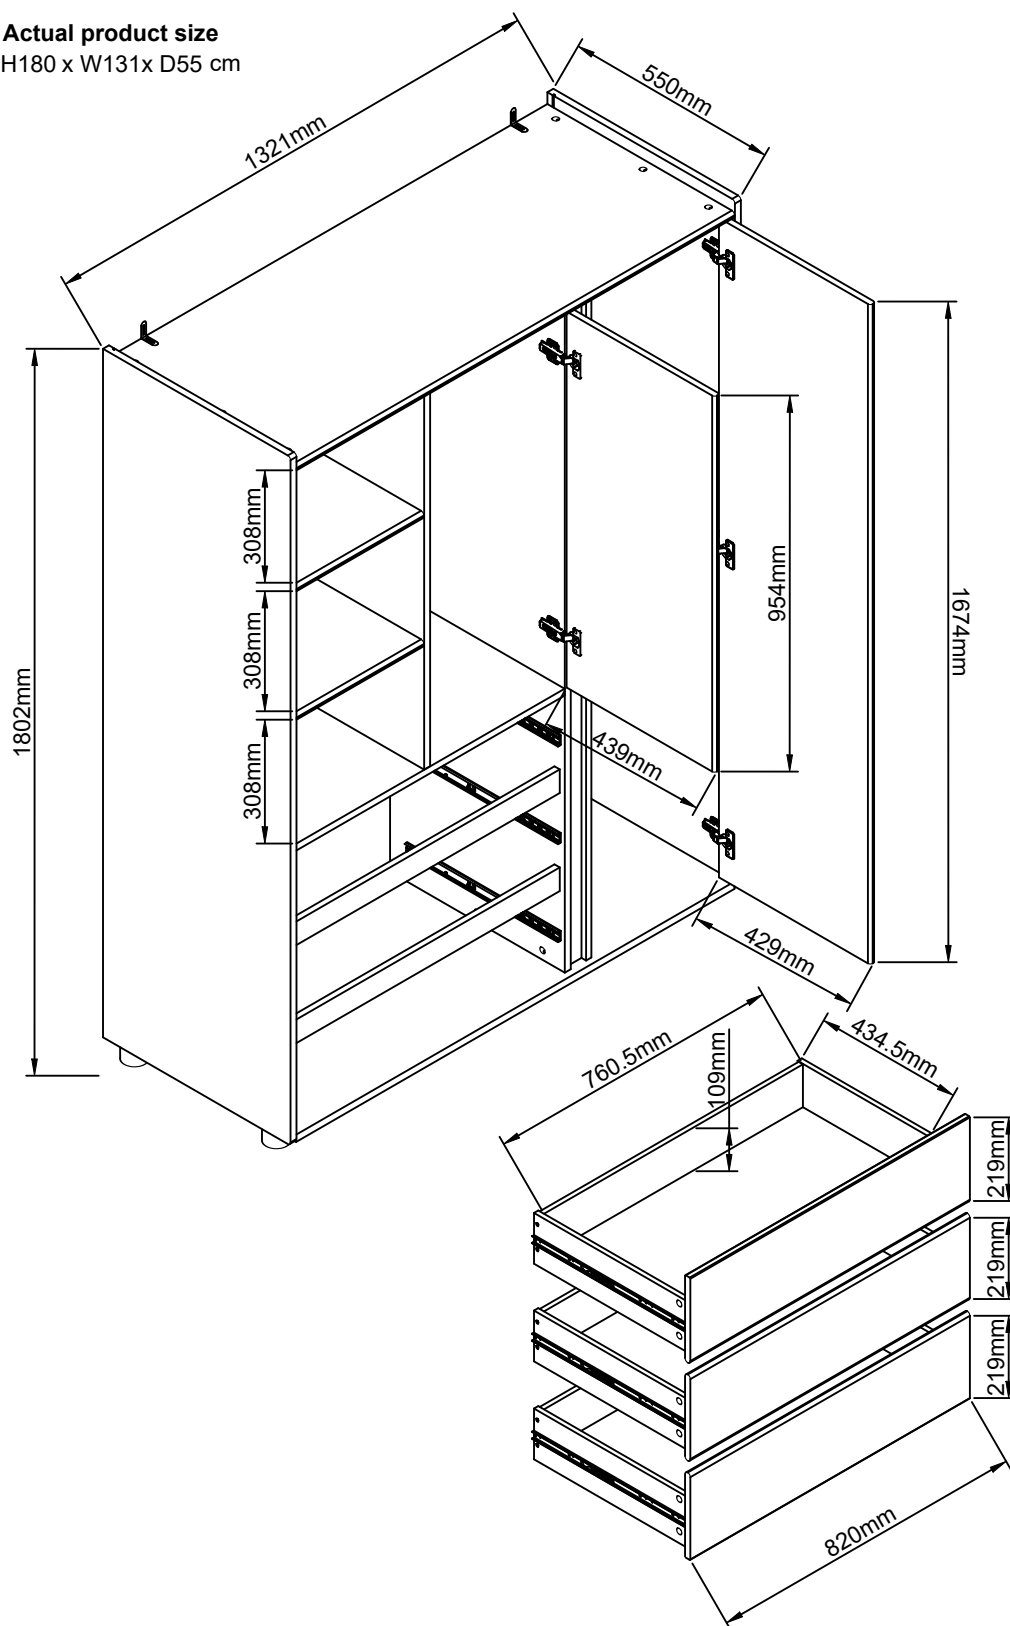

# NEXT

## INKA TRIPLE WARDROBE AY7916

### Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Assembly to be carried out by a competent adult only.

During assembly children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

### Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

### Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

### You can write to us at

Home Customer Services  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)