 


NEXT

ARCHES / ARCHES DARK SMALL SIDEBOARD C24228 / 550409 Assembly instructions

Actual product size

H75 x W81.5 x D40 cm

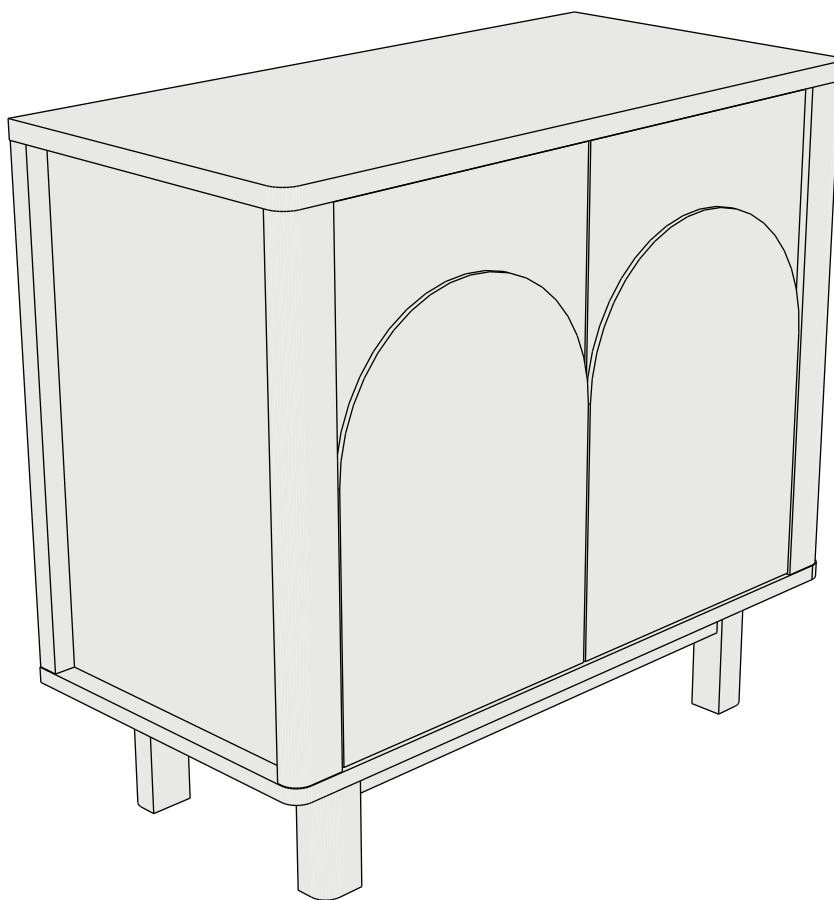

Need Help ?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

1. COLOUR

Make sure you're happy with the colour

No need to unpack everything, just check the first component.

2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

TIPS FOR RETURNS

Not completely happy with the product? No problem.

We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly - as it may get damaged.

NEXT
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

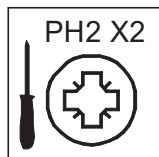

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.

 
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

 
 
 

 
 
NEXT






ARCHES / ARCHES DARK SMALL SIDEBOARD C24228 / 550409 Assembly instructions

GETTING TO KNOW YOUR PRODUCT


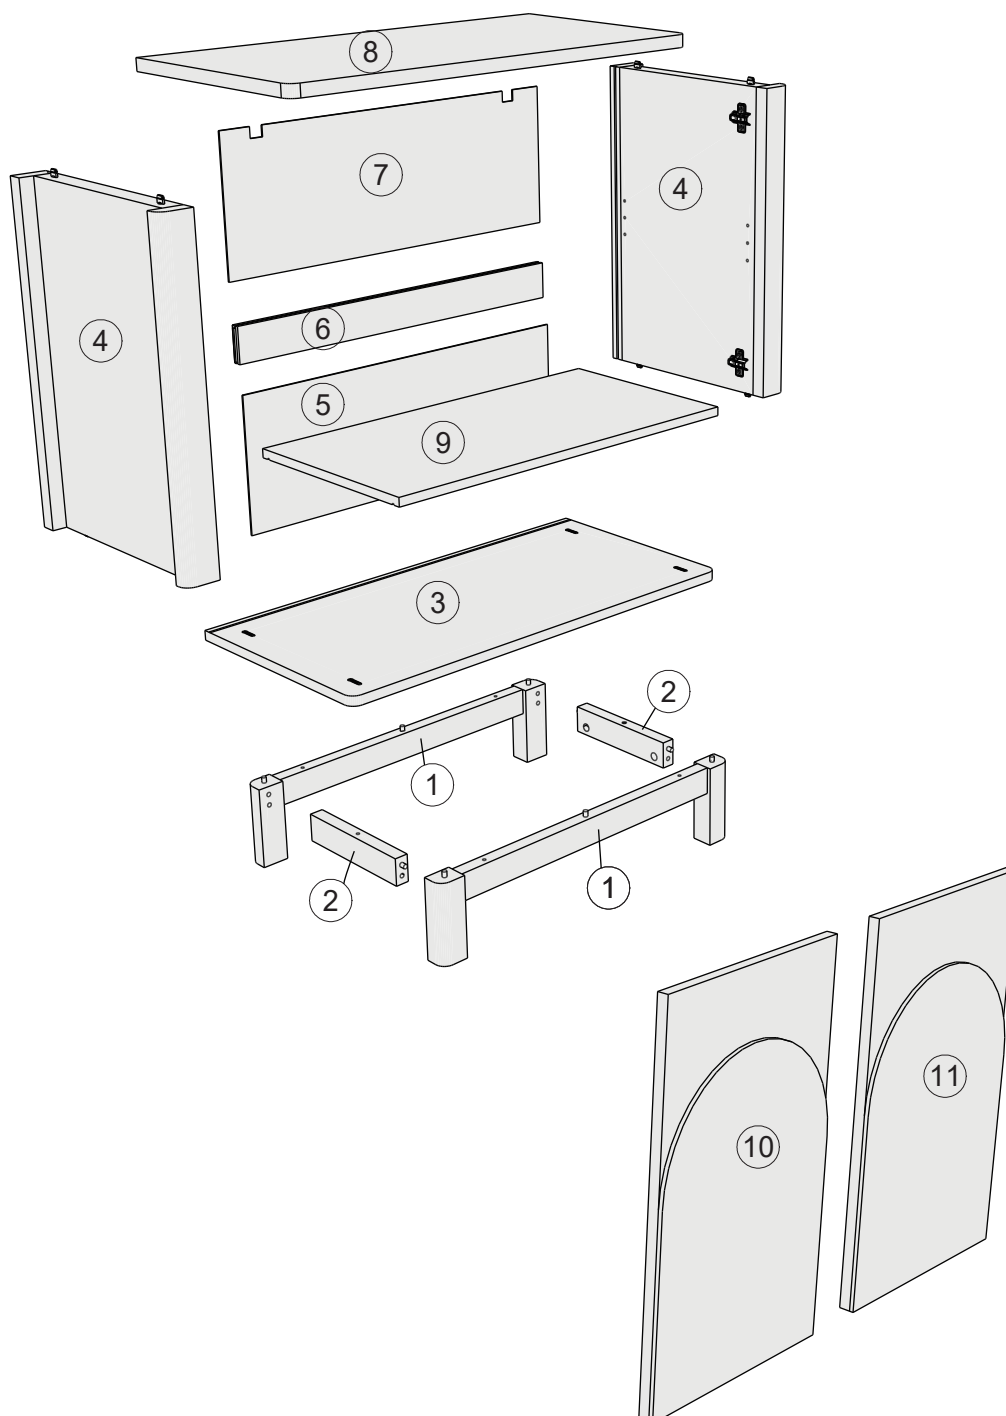


Components supplied. Please use this guide if you require replacement parts.


Ref	Dimensions	Visual	Qty	Ctn
1	15x66.5mm		2	1
2	5x26mm		2	1
3	40x81.5mm		1	1
4	40x56mm		2	1
5	25.5x70mm		1	1
6	6.5x69.5mm		1	1

     Ref	Dimensions	Visual	Qty	Ctn
7	25.5x70mm		1	1
8	40x81.5mm		1	1
9	34.5x69mm		1	1
10	34x55.5mm		1	1
11	34x55.5mm		1	1

  NEXT FITTINGS ASSEMBLE INSTRUCTIONS

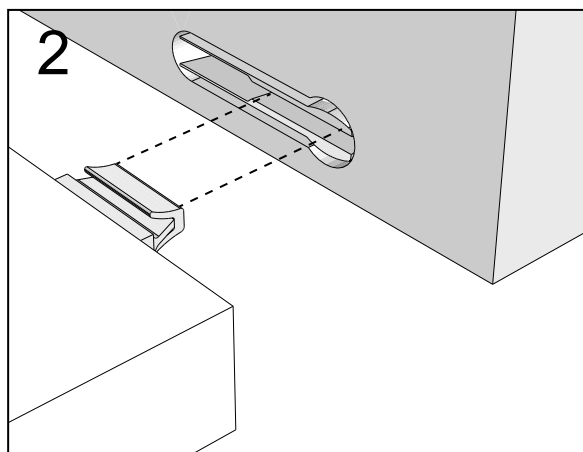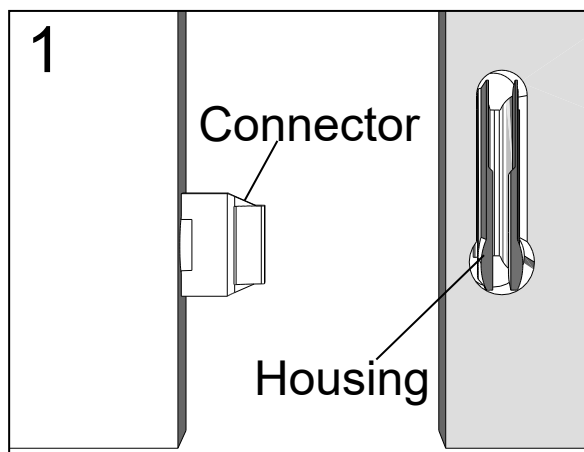

 
Push connector into housing to be jointed.

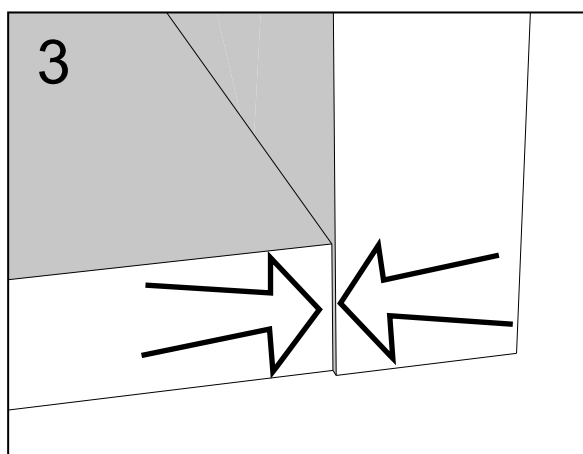

 Make sure there is no gap between the panels.



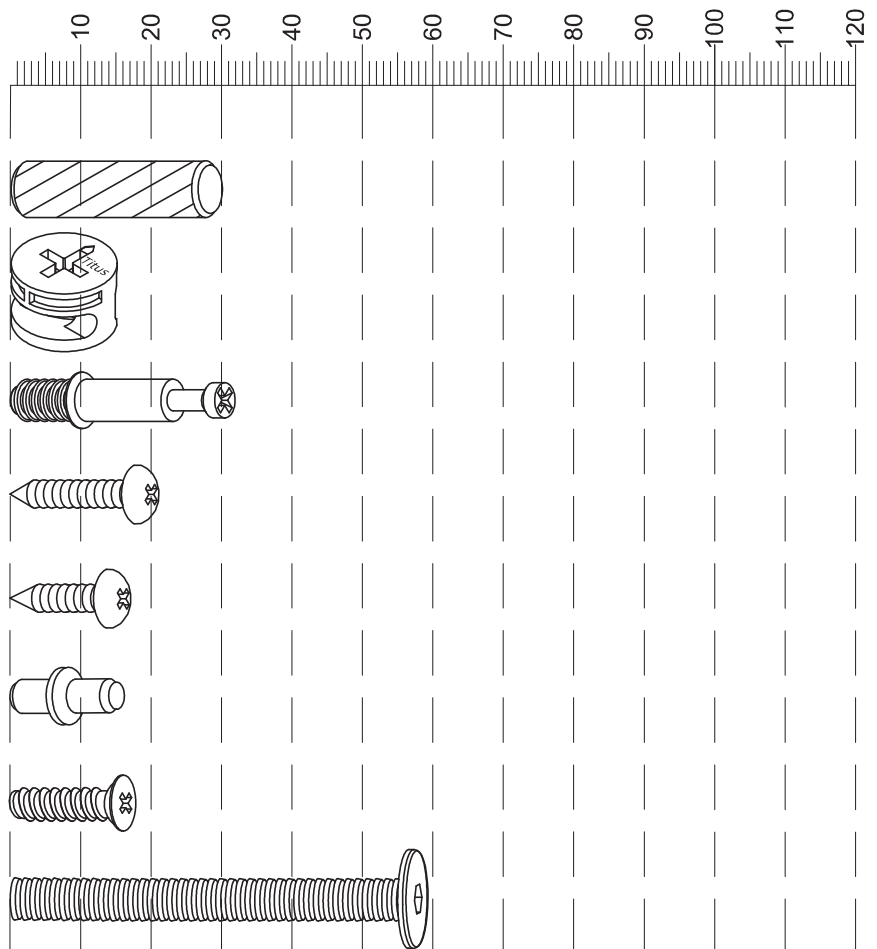


Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
D6	Ø8x 30mm	N/A	2
B3	Ø15x 12mm	4	1
B12	Ø7.5X33mm	4	1
S41	Ø4 x 16mm	2	1
S32	Ø4 x 12mm	4	1
P3	Ø5 x 16mm	4	1
U139	Ø4.5x15mm	8	1
V80	Ø6 x 55mm	6	1



Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T1	N/A	2	N/A	
M38	N/A	2	N/A	
C11	N/A	4	N/A	
T39	N/A	2	N/A	
T38	N/A	6	1	

C11	N/A	4	
B12	Ø7.5 x 33mm	4	 
U139	Ø4.5 x 15mm	8	 

 
1




2

Adjustable in length


3

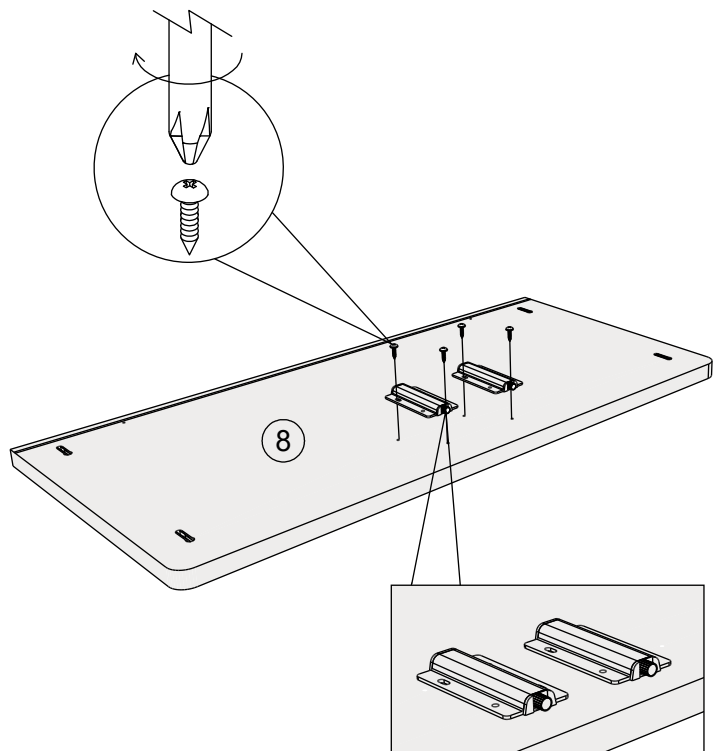4




M38	N/A	2	
S32	Ø4 x12mm	4	 

 
3

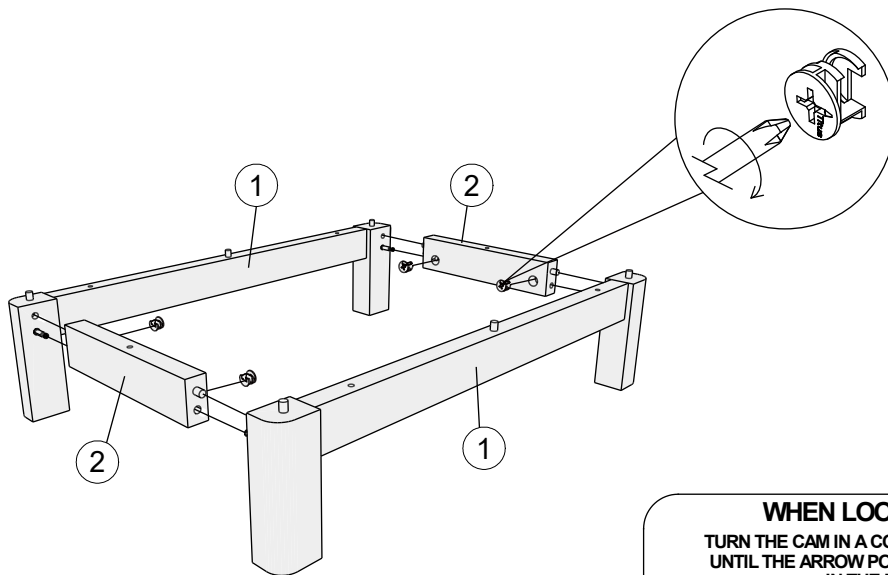

 WHEN LOOSENING THE CAM
TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION
UNTIL THE ARROW POINTS IN THE POSITION SHOWN
IN THE DIAGRAMS BELOW



**MAXIMUM
LOCK**

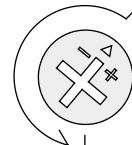 

**TURN
TO UNLOCK**



UNLOCKED

B3

 
 
 
Ø15 x12mm

4



not supplied

4

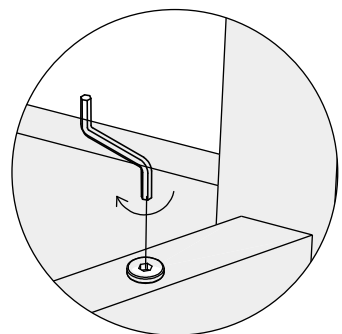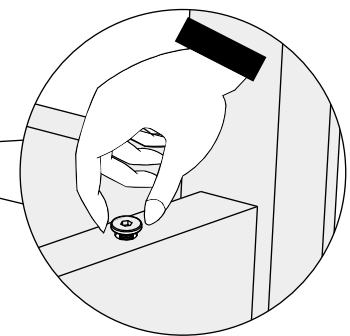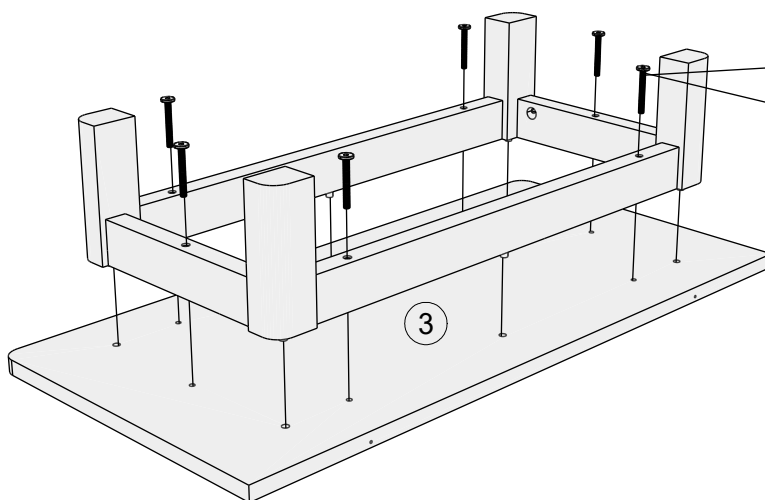

T1

N/A

2



V80

Ø6 x55mm

 
6




NEXT

ARCHES / ARCHES DARK SMALL SIDEBOARD C24228 / 550409 Assembly instructions


5

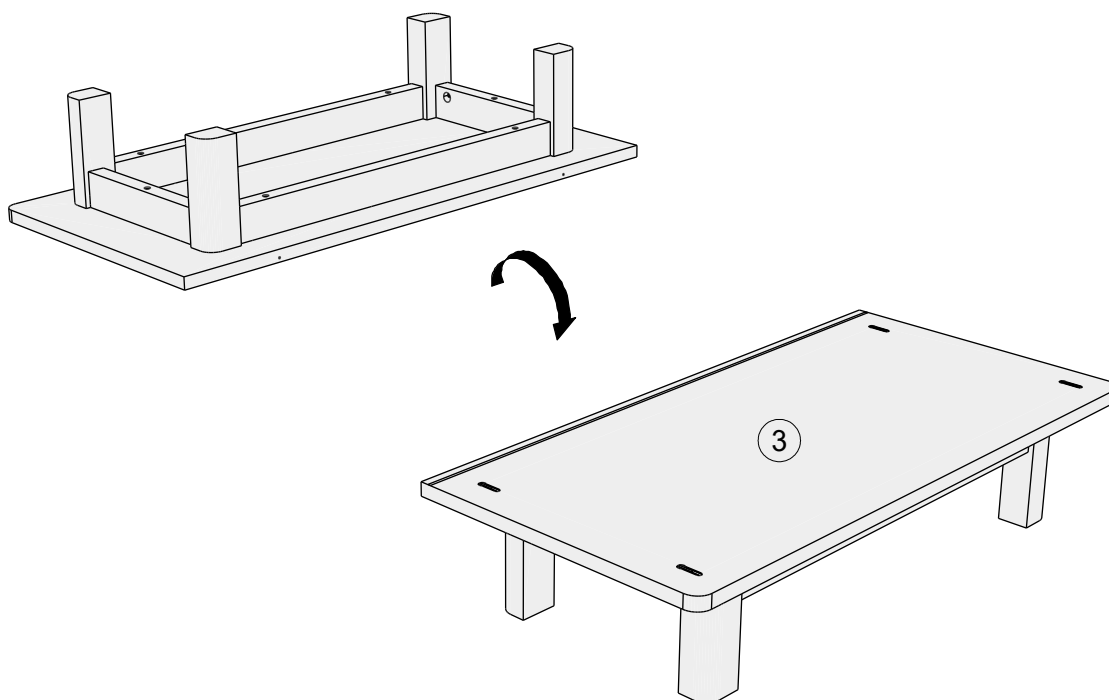


6

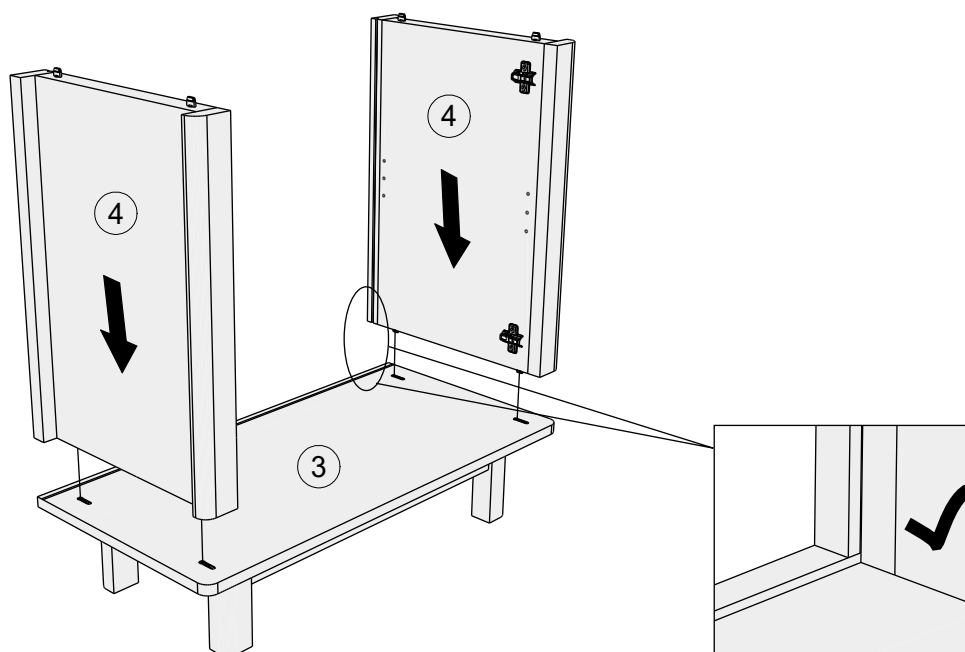 


7

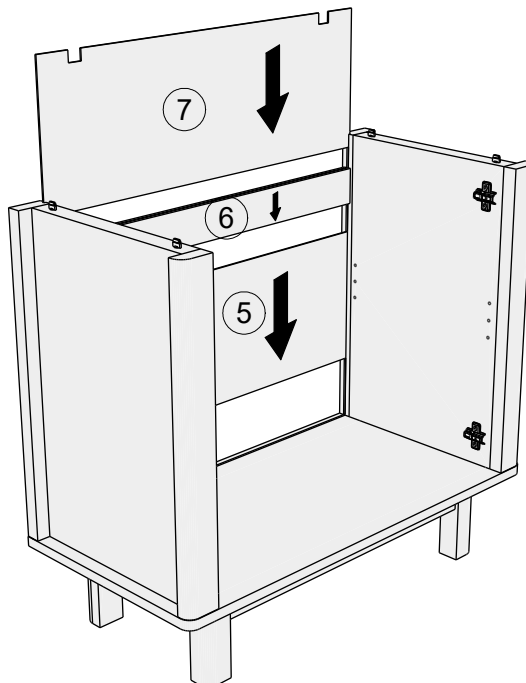 


8

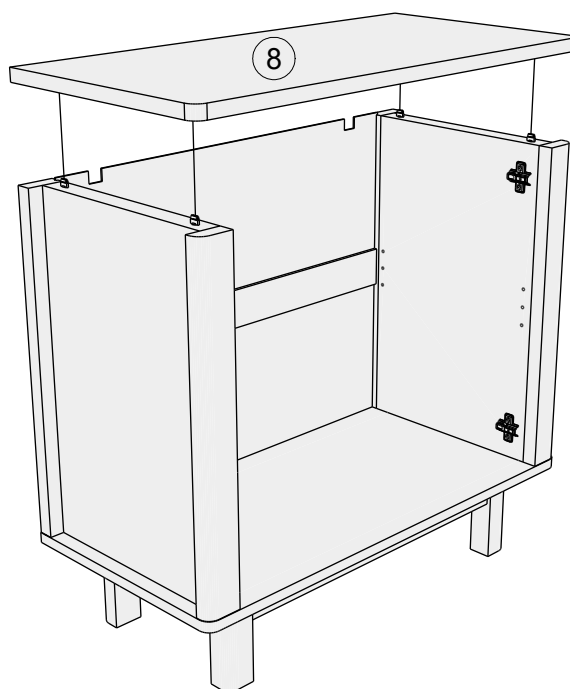 

9

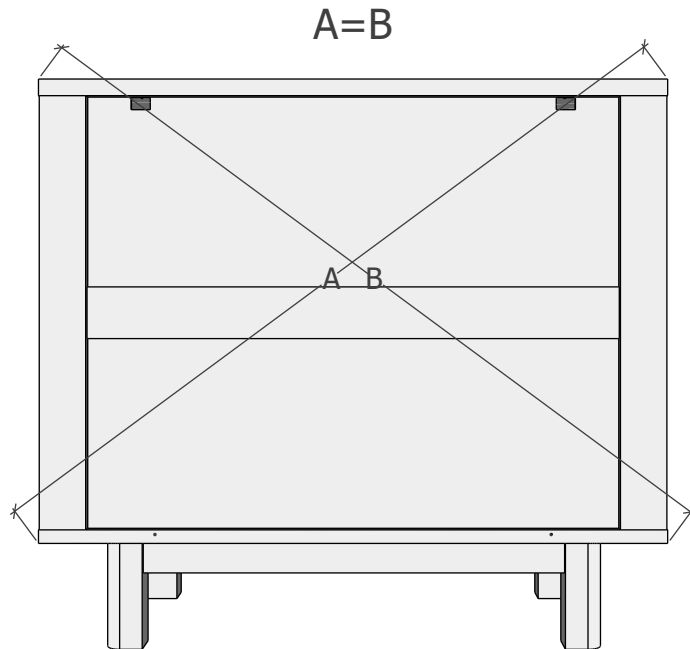 

10

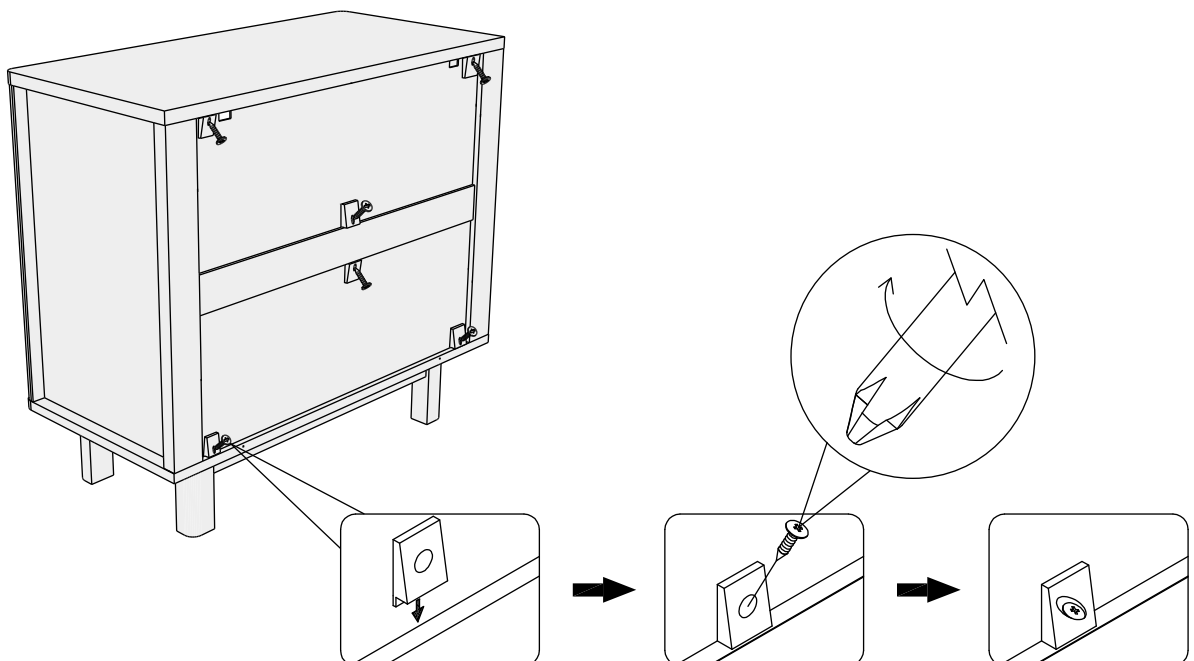 

T38

N/A

6



NEXT

 
ARCHES / ARCHES DARK SMALL SIDEBOARD
C24228 / 550409
Assembly instructions




11

We recommend the use of the wall attachment bracket/strap provided for safety reasons.
Secure the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).
To hide the strap behind the unit, drill the hole lower than the top of unit.


Attach the other end of the strap to the underside of the top panel with screw.
Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.
NB: Wall fixings are not included-Please source suitable fixing for your wall type.
If in doubt please consult a qualified trades person.

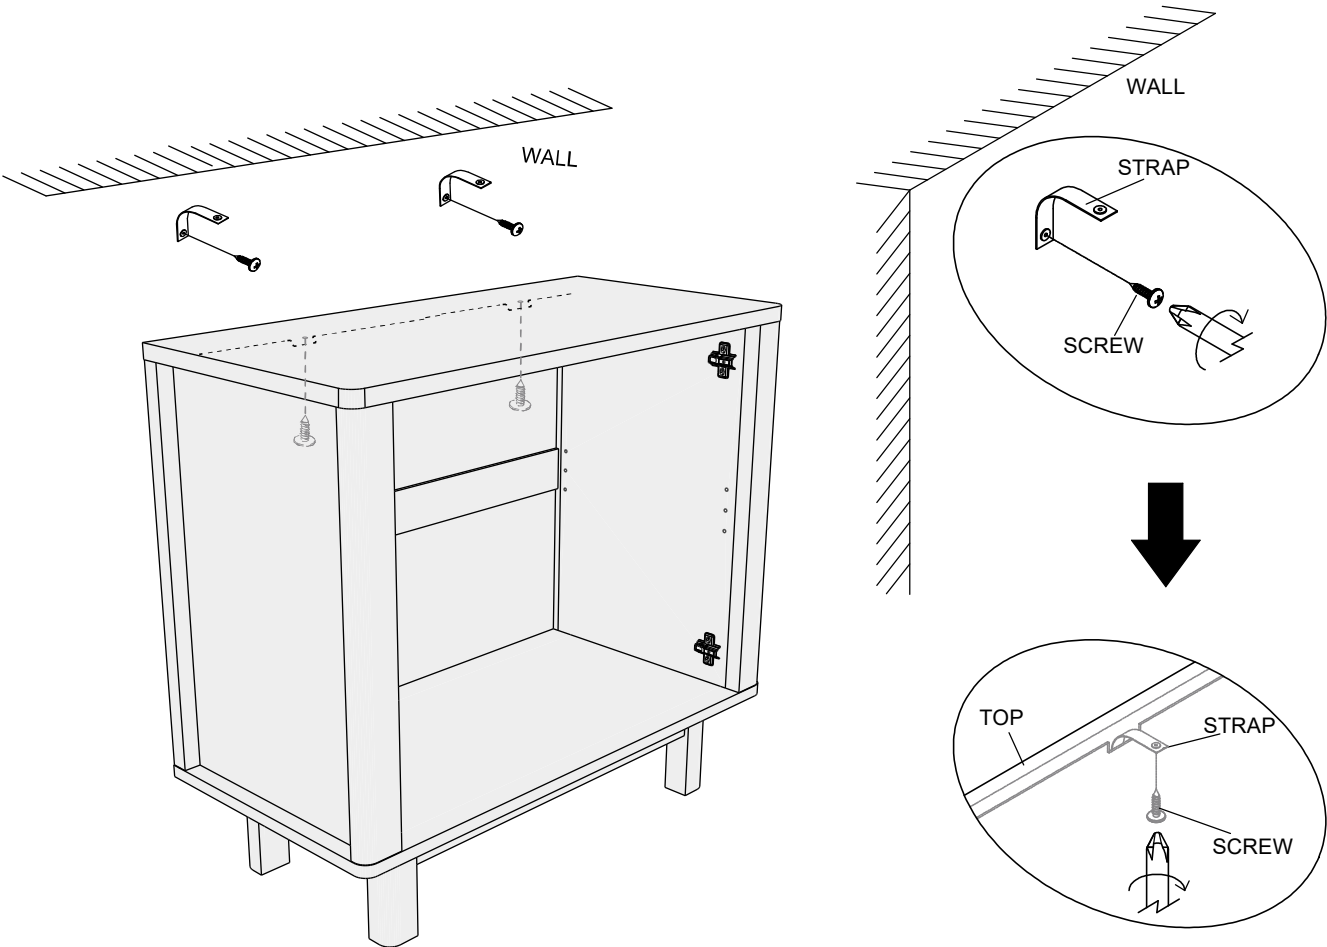Please ensure you secure your product to the wall for your and your family's safety before you use it.



T39	N/A	2	
S41	Ø4x 16mm	2	  not supplied

 
12

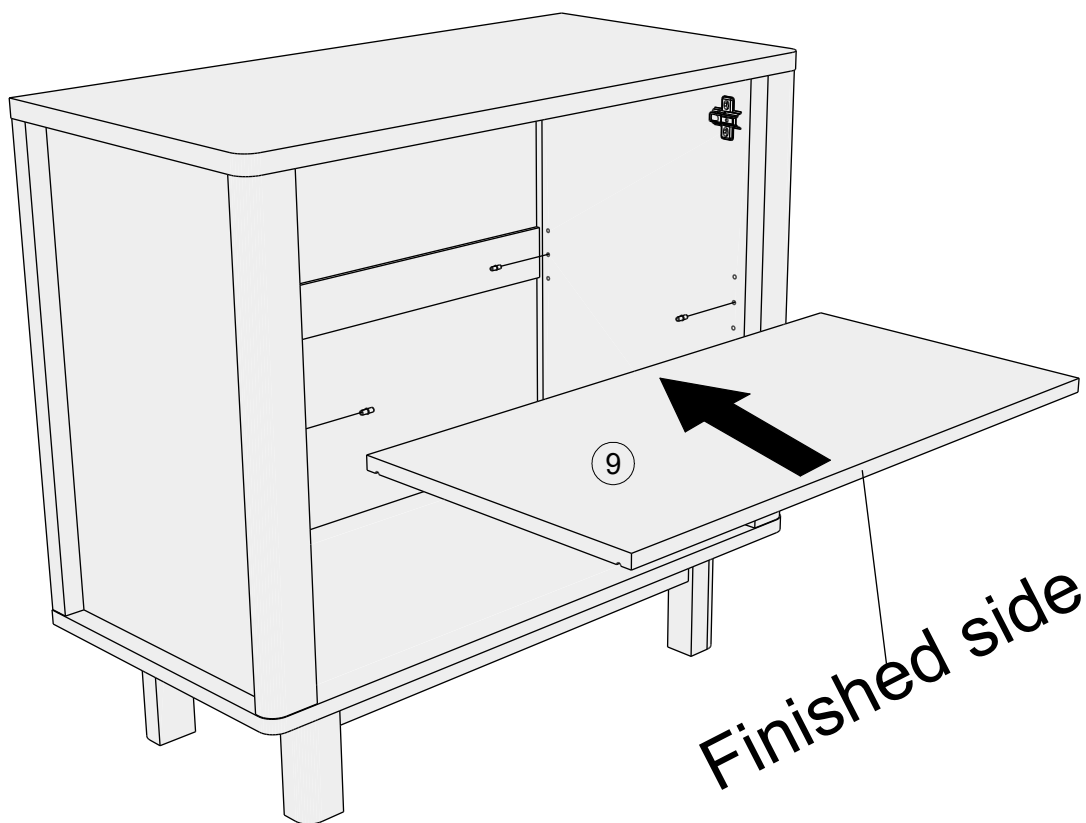


P3

Ø5x16mm

 
4




13

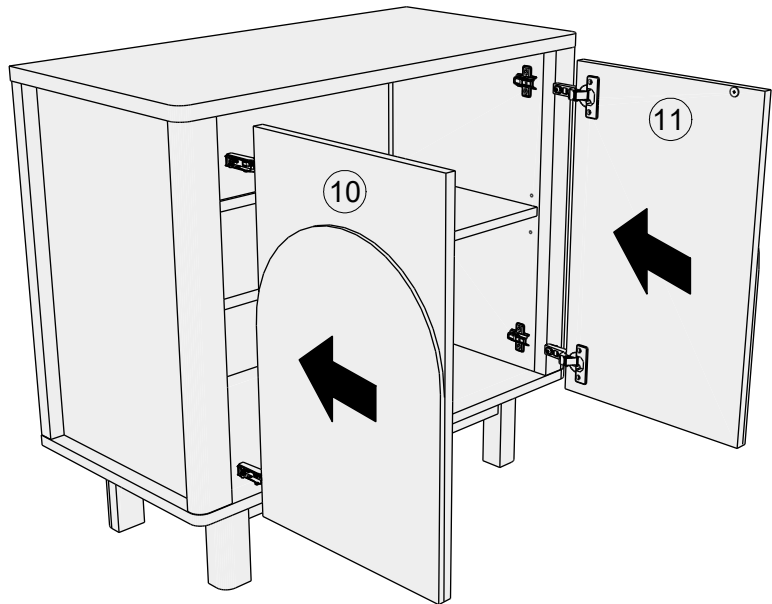 


Install hinge

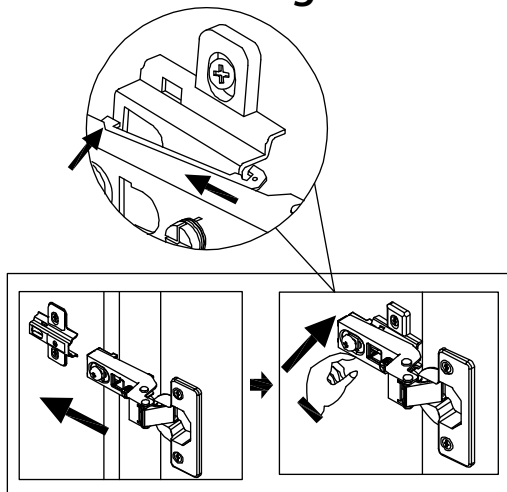 

Remove hinge

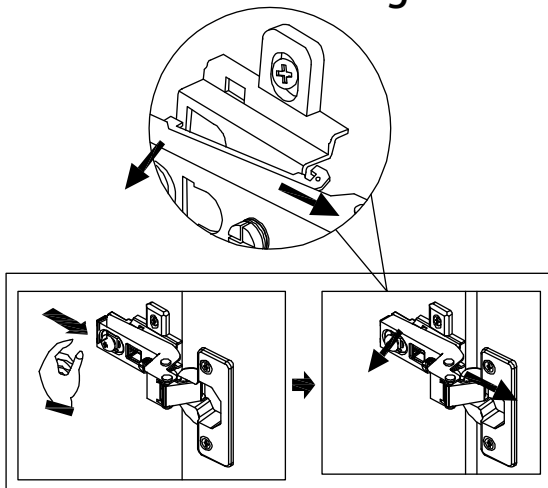 

Adjust Hinge Position

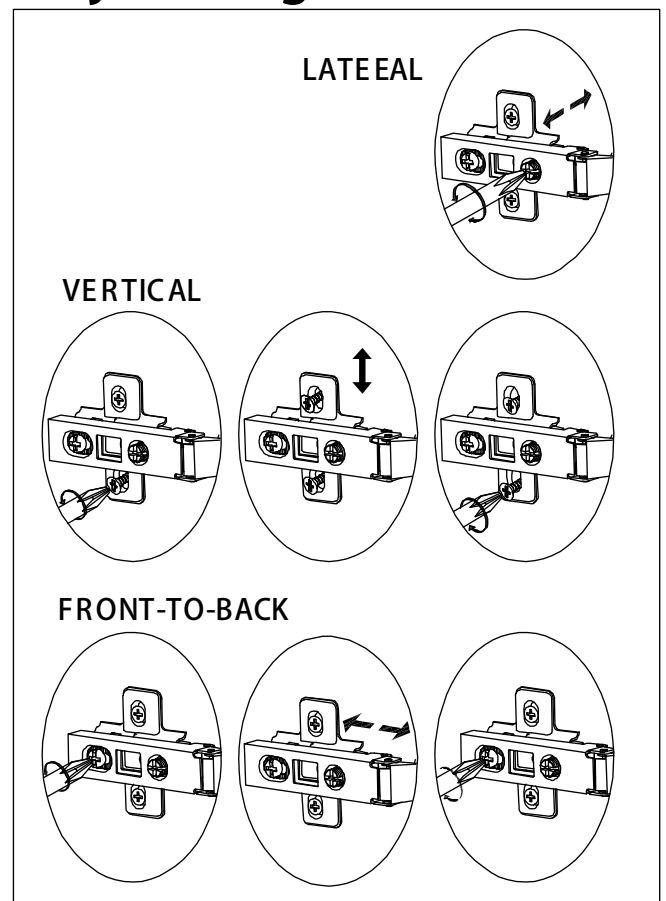 







NEXT

ARCHES / ARCHES DARK SMALL SIDEBORD C24228 / 550409

14

To disassemble:

    
 
 
Step1: Remove the plastic wedges (T38) from the back panels and screws from the rear of the base panel (3);

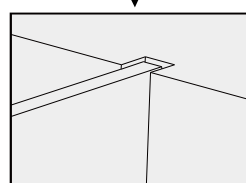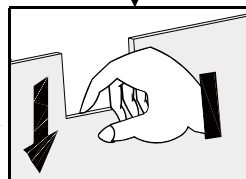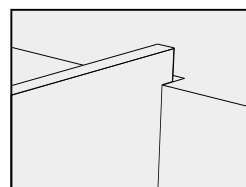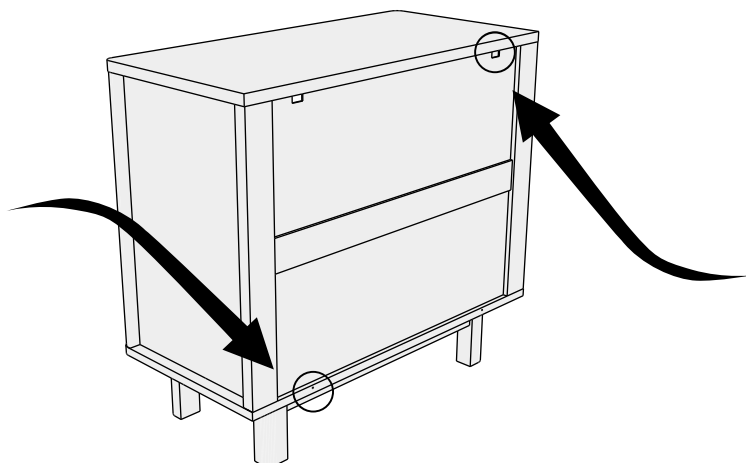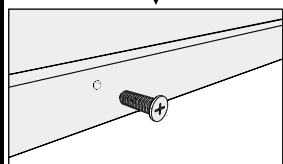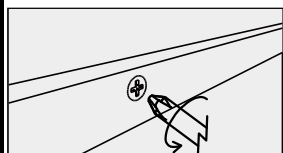

Step2: Press down all the back panels so they are clear of the top panel slot;

15

   
Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels;

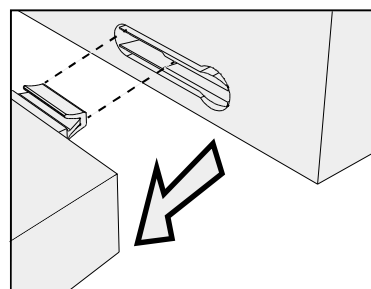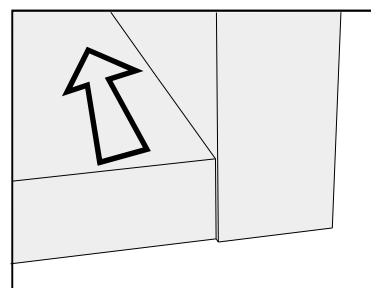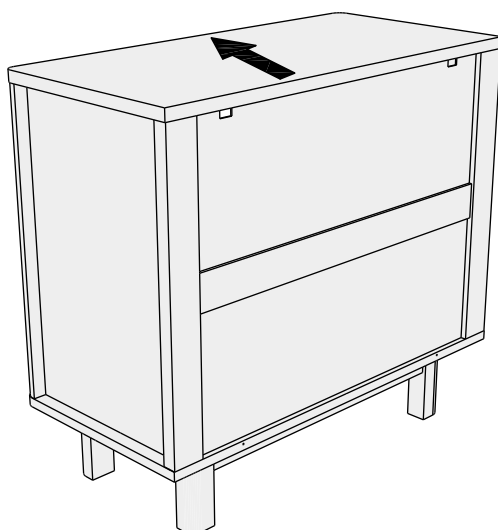

NEXT

ARCHES / ARCHES DARK SMALL SIDEBOARD C24228 / 550409

 Actual product size
H75 x W81.5 x D40 cm

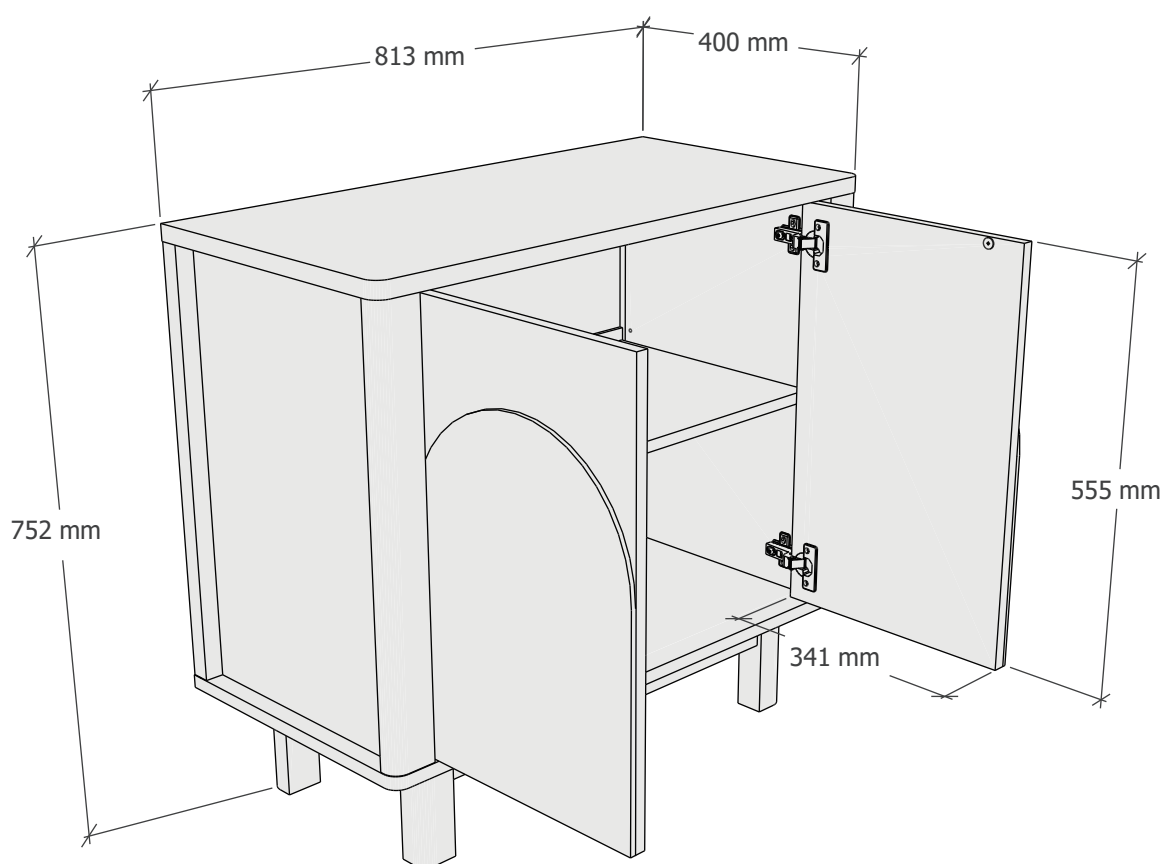

NEXT

ARCHES / ARCHES DARK SMALL SIDEBORD C24228 / 550409

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk