

BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

1. COLOUR

Make sure you're happy with the colour
No need to unpack everything, just check the first component.

2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

TIPS FOR RETURNS

Not completely happy with the product? No problem. We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly – as it may get damaged.


NEXT

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

NEXT

HENSLEY CHAIR E08619,E68178 Assembly instructions

Actual product size
Chair:H83xW69xD86.5cm

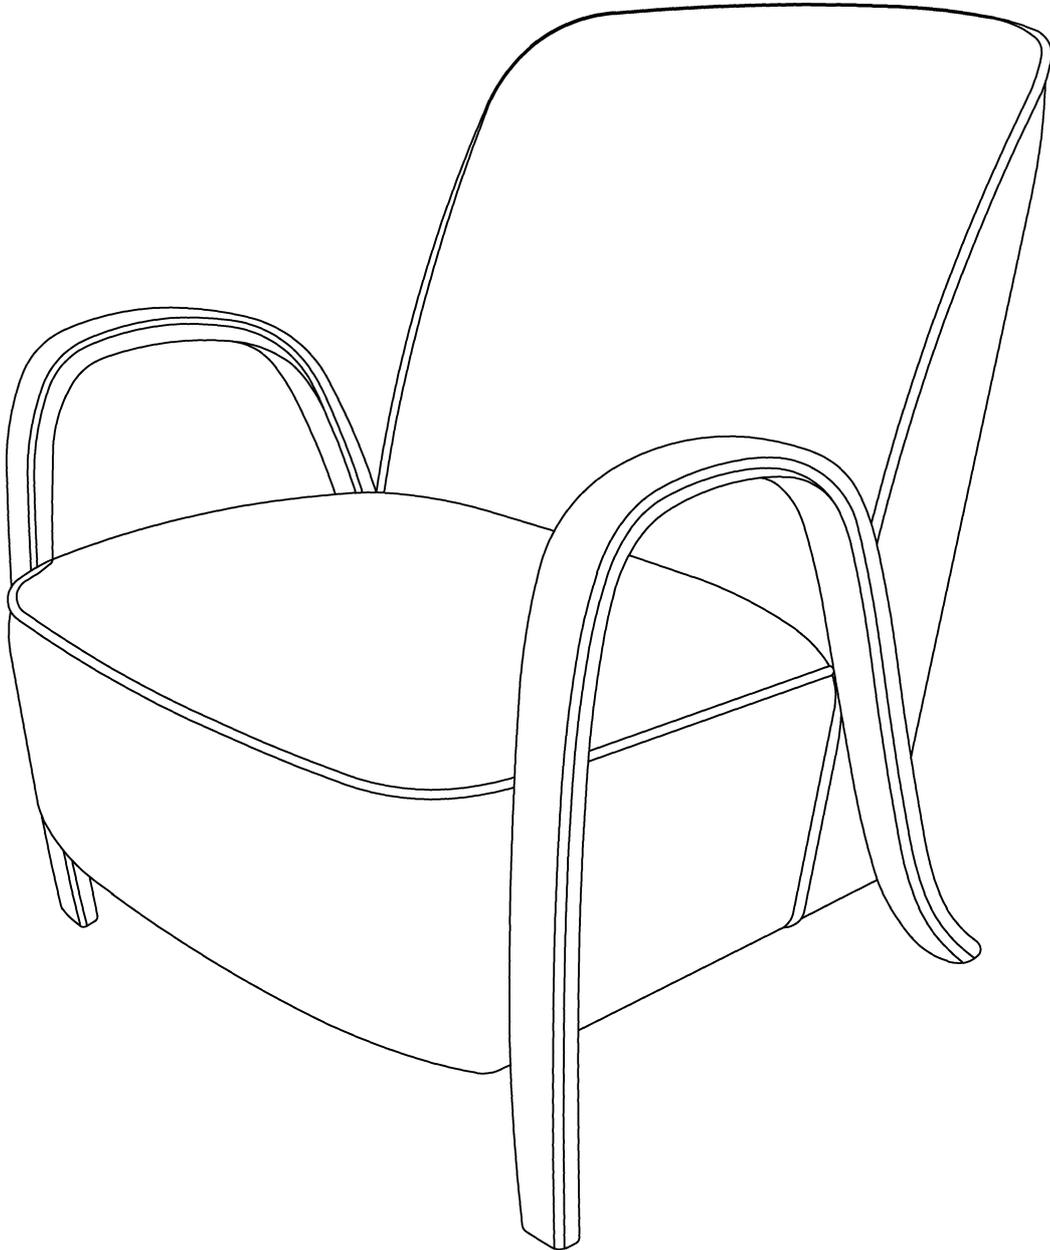

Item number	Fabric name-Leg	Fabric composition
E08619	Relaxed Chenille Forest Green -Dark oak	100% polyester
E68178	Tweedy Weave Dove-Dark oak	94% polyester + 6%Acrylic

Need Help?

With: Assembly instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT-RETAIN FOR FUTURE REFERENCE

BEFORE YOU START

Warnings

We suggest you retain these instructions for future reference

Keep fittings out of children's reach and keep children well away from construction area

This product should only be used on firm level ground

Please periodically check all fittings and re-tighten as necessary.

Please do not stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Do's

We suggest you spend a short time reading through this leaflet before you start

When you are ready to start, make sure that you have the right tools and plenty of space

We recommend that the packaging is used to protect the surfaces during assembly

Carefully check that you have all the parts before beginning assembly

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight

Always wipe dry after cleaning

For wooden or metal Chairs, please add the following

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth

For upholstered leather chairs;

Dust regularly with a soft cloth, preferably once a week, to keep the leather pores free from dust particles and follow standard cleaning method mentioned above.

Don'ts

Do not use this product if parts are missing, damaged or worn.

Do not stand or lean back on your chairs

Do not overtighten screws or bolts.

Do not drag or pull your furniture.

Do not use silicone based furniture polish.

Number of people required to assemble

One person is required to assemble this item.



Time to assemble: 10 minutes



Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians


If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at



Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT

**To view our full furniture range please visit
www.next.co.uk**

GETTING TO KNOW YOUR PRODUCT

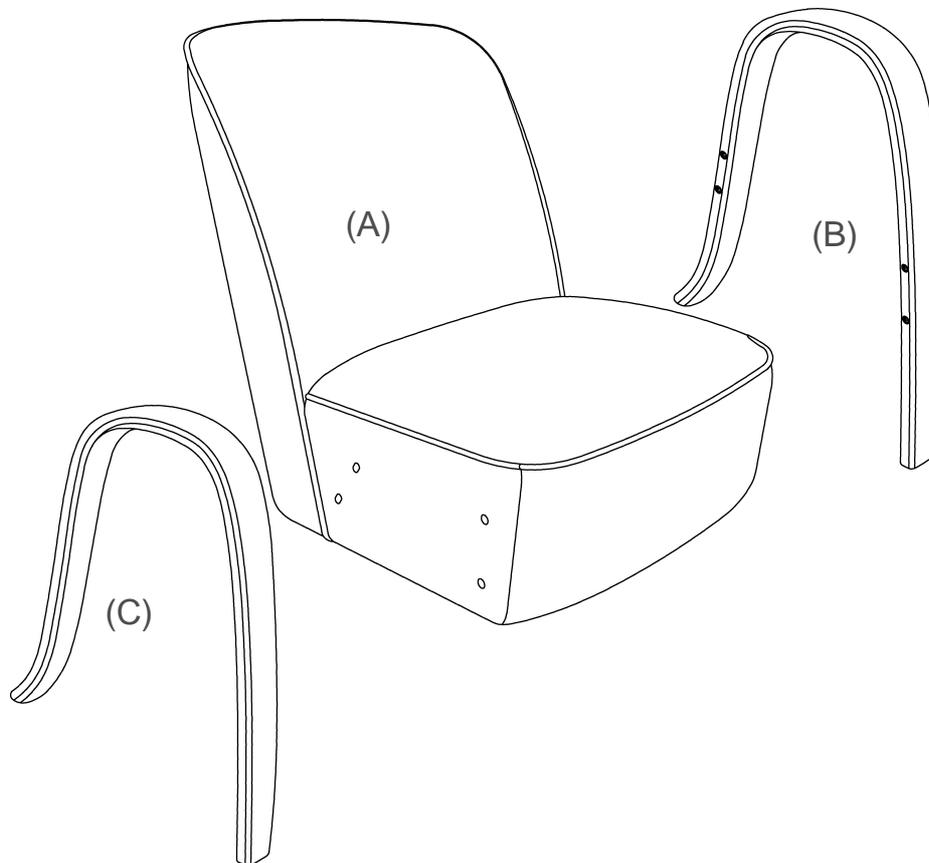

Components supplied. Please use this guide if you require replacement parts.

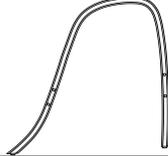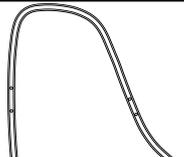Ref	Dimension	Visual	Qty
A	Seat W58.5*D86.5*H72.5cm		1
B	Left Rear Leg W59.5*D5.5*H59cm		1
C	Right Rear Leg W59.5*D5.5*H59cm		1

NEXT

HENSLEY CHAIR E08619,E68178 Assembly instructions

Fixtures and fittings supplied(actual size)

Ref	Dimension	Qty	Spare
H1	M8X45mm	8	1
H2	13mm	8	1
H3	19mm	8	1
H4	M5x40X 100mm	1	0



The technical drawing shows four parts: H1 is a screw with a length of 45mm; H2 is a 13mm diameter washer; H3 is a 19mm diameter washer; and H4 is an L-shaped metal bracket with a vertical leg of 40mm and a horizontal leg of 100mm. A millimeter scale at the top of the drawing area ranges from 0 to 140mm, with major markings every 10mm and minor markings every 1mm.

NEXT

HENSLEY CHAIR E08619,E68178 Assembly instructions



1

Note: make sure the holes of seat frame and legs are align by force

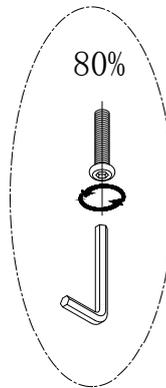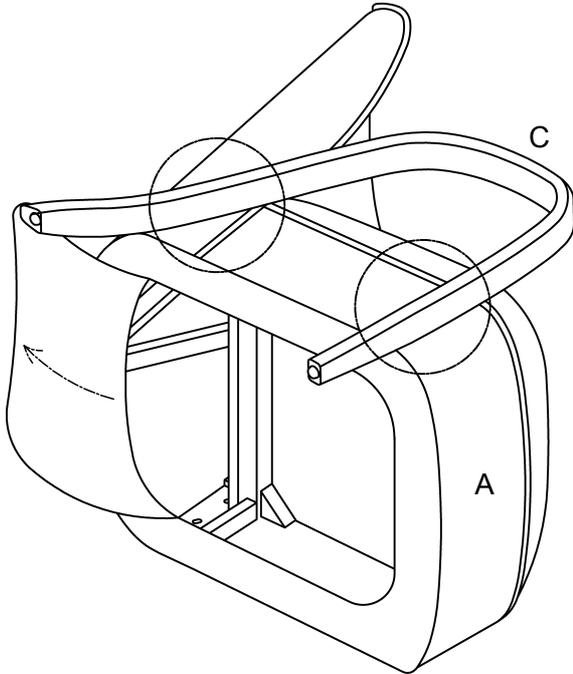

H1	M8x45mm	4	
H2	13mm	4	
H3	19mm	4	
H4	M5x40x100mm	1	

2

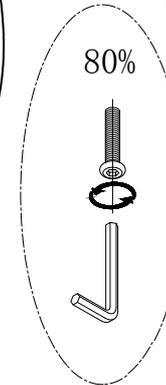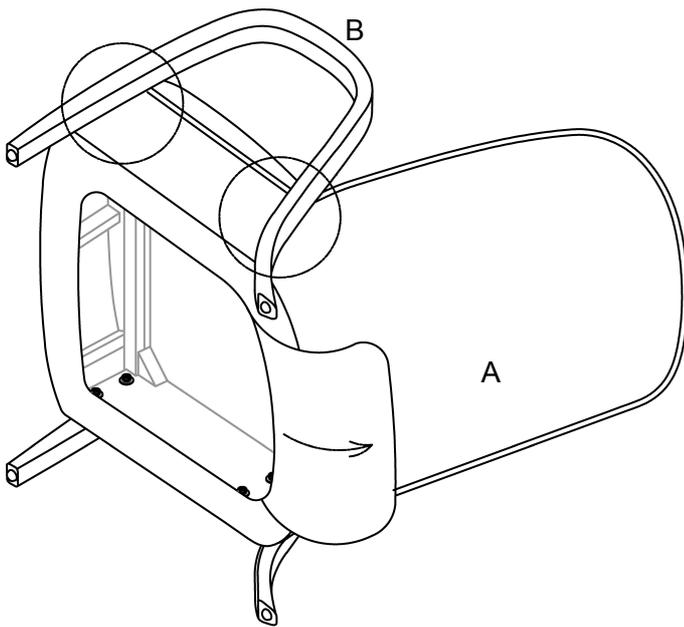


H1	M8x45mm	4	
H2	13mm	4	
H3	19mm	4	
H4	M5x40x100mm	1	


NEXT

HENSLEY CHAIR E08619,E68178 Assembly instructions

3

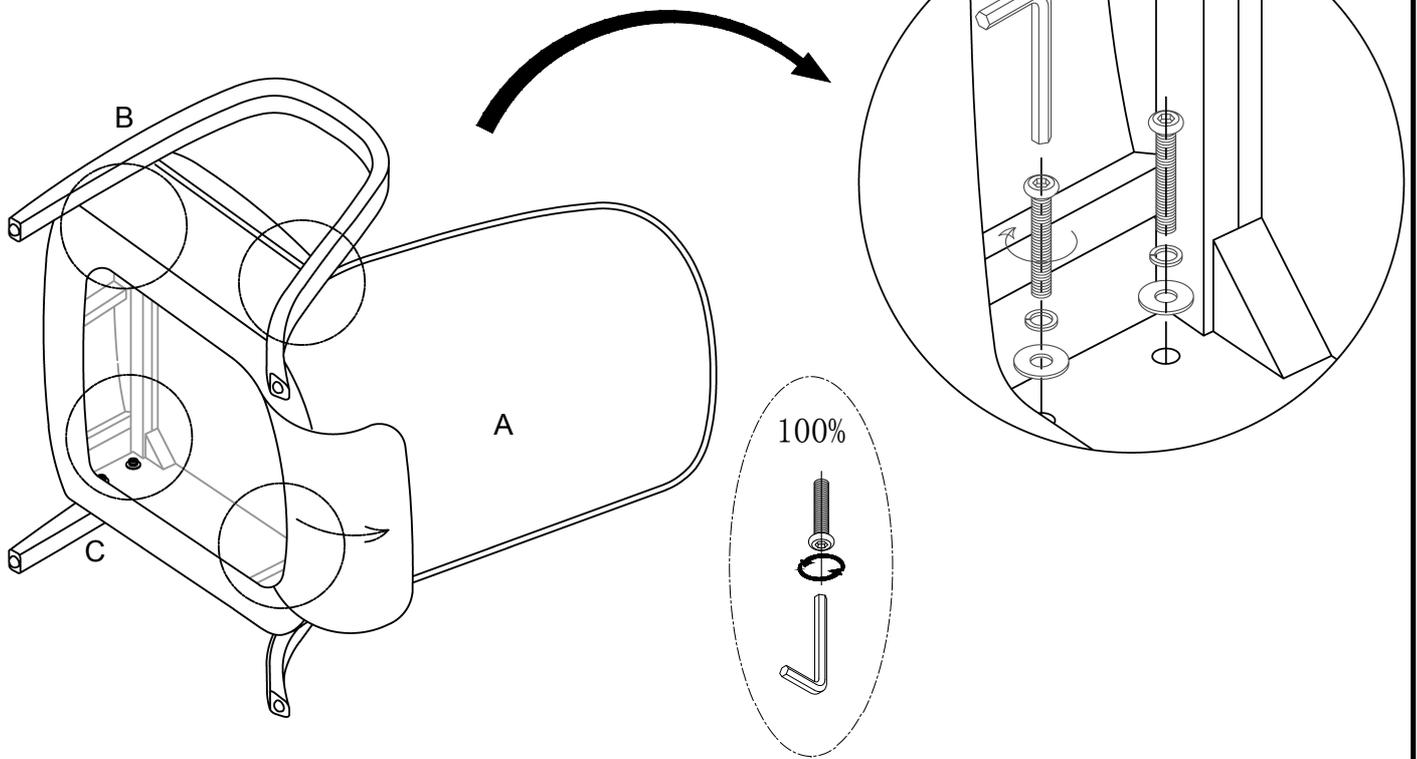

4

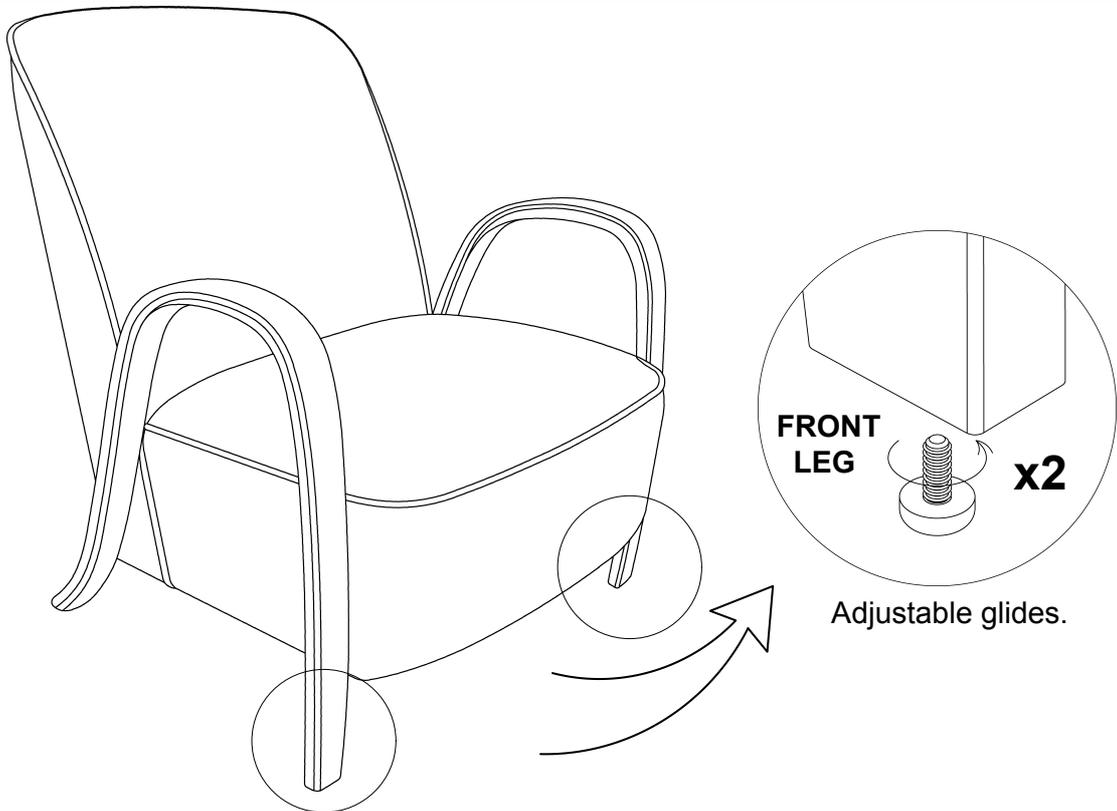

NEXT

HENSLEY CHAIR E08619,E68178 Assembly instructions

Actual product size
Chair:H83xW69xD86.5cm

