


NEXT

MIA HIDE AWAY DESK

F13517
Assembly instructions

Actual product size

H185 x W121 x D45mm

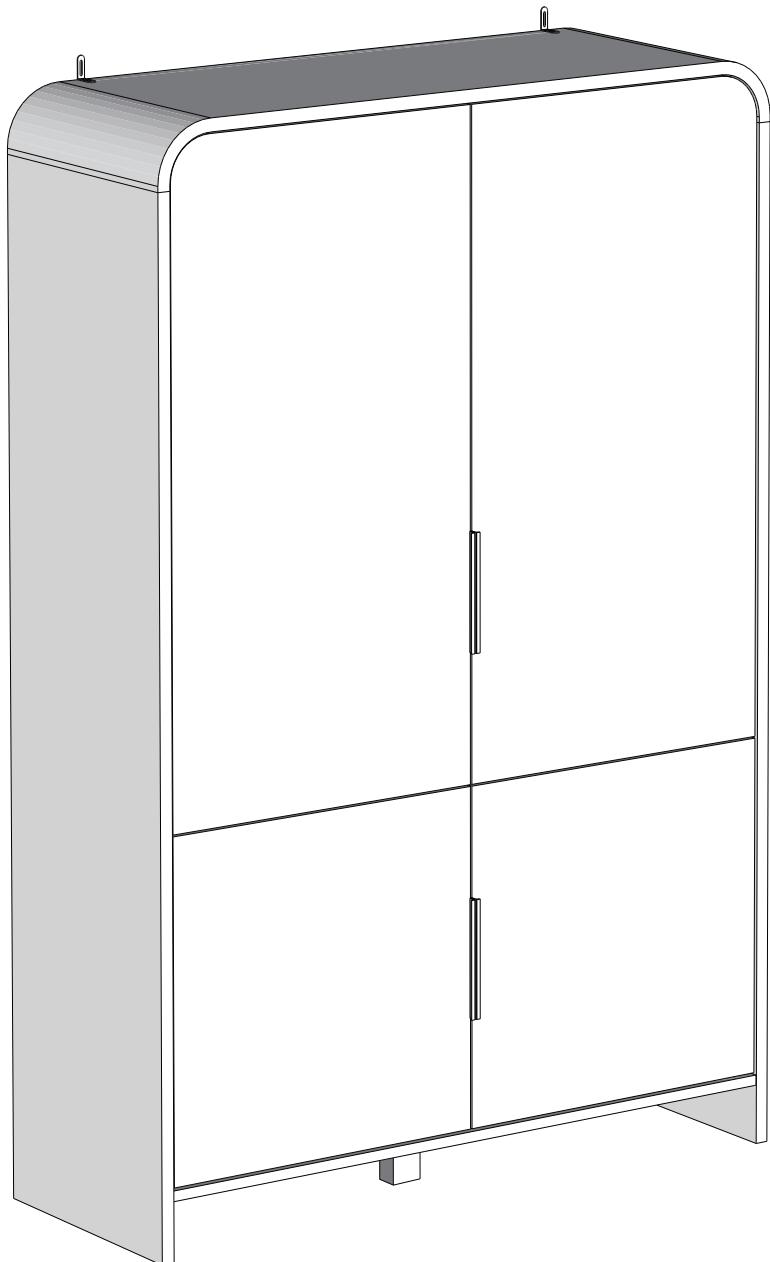

Need Help ?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

Number of people required to assemble


Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

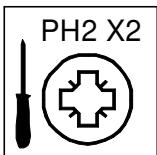

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage,
We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.
Absorption can cause wood to warp or finishes to de-laminate.


Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

NEXT

MIA HIDE AWAY DESK

F13517
Assembly instructions

GETTING TO KNOW YOUR PRODUCT

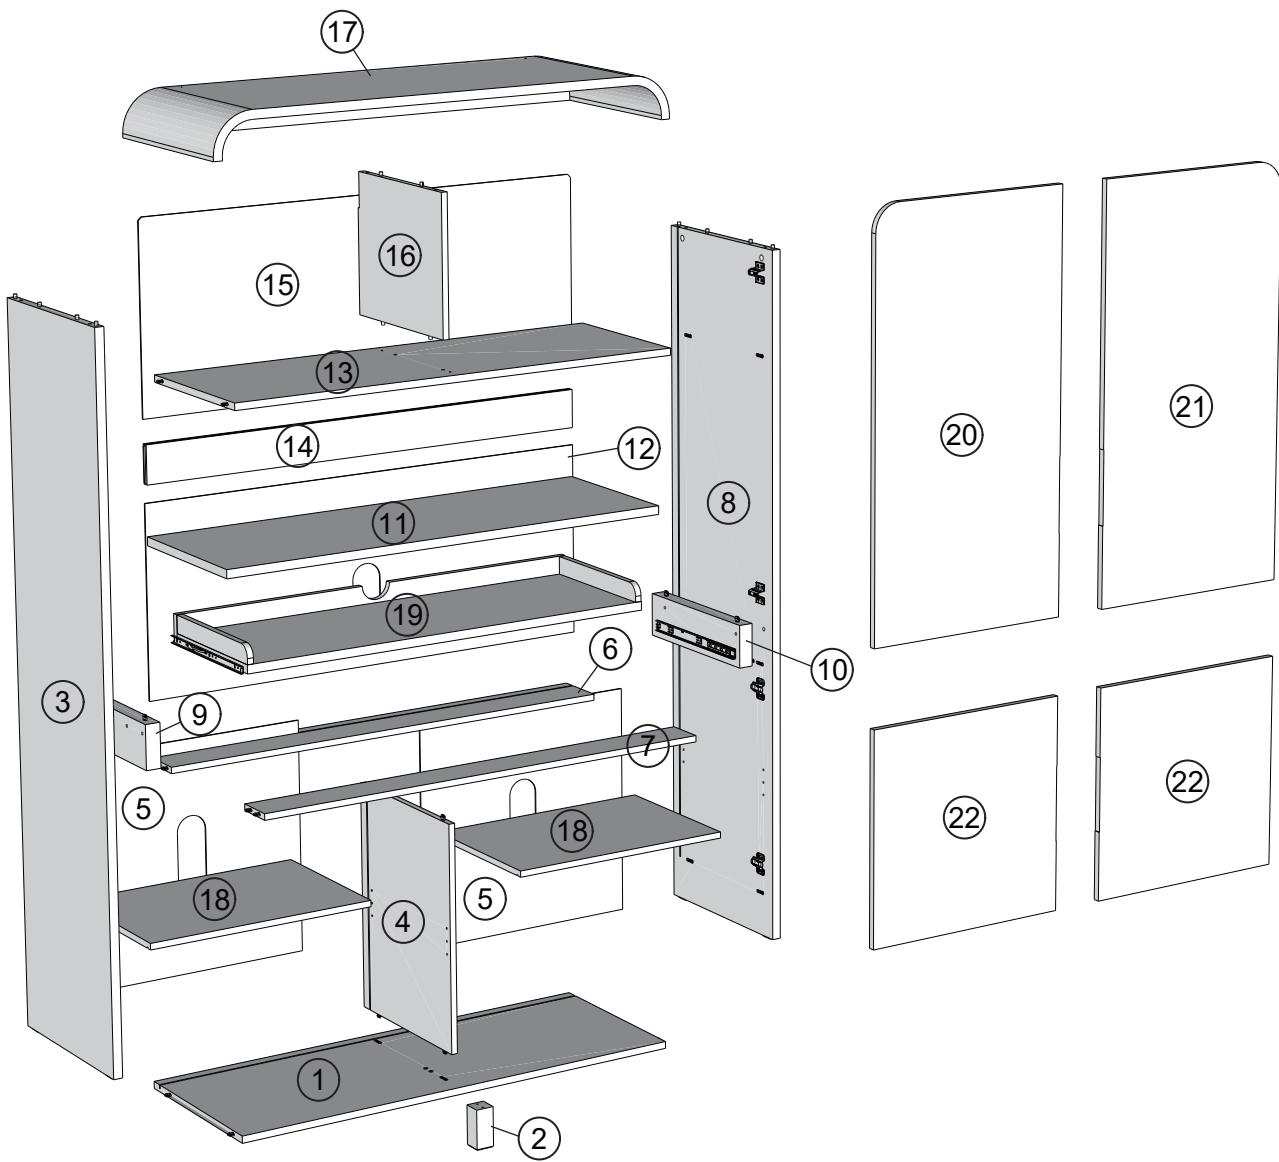

NEXT

MIA HIDE AWAY DESK

F13517




Assembly instructions

Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	45x116.5cm		1	1
2	4.5x10.5cm		1	1
3	45x174cm		1	1
4	43x57cm		1	1
5	57.5x58.5cm		2	2
6	13x116.5cm		1	1
7	9.5x116.5cm		1	1
8	45x174cm		1	1
9	11x39.5cm		1	1
10	11x39.5cm		1	1
11	39.5x116.5cm		1	1

Ref	Dimensions	Visual	Qty	Ctn
12	47.5x117.5cm		1	2
13	39.5x116.5cm		1	1
14	9.5x117cm		1	1
15	47.5x117.5cm		1	2
16	34.5x39.5cm		1	1
17	45x121cm		1	2
18	39x57.5cm		2	1
19	36.5x107cm		1	2
20	58x112cm		1	2
21	58x112cm		1	2
22	57x58cm		2	2

NEXT FITTINGS ASSEMBLE INSTRUCTIONS

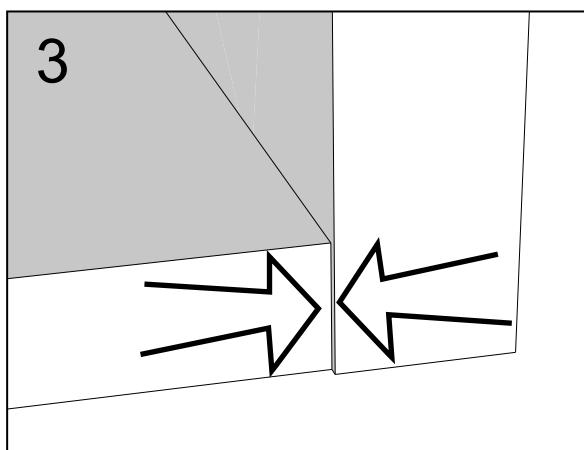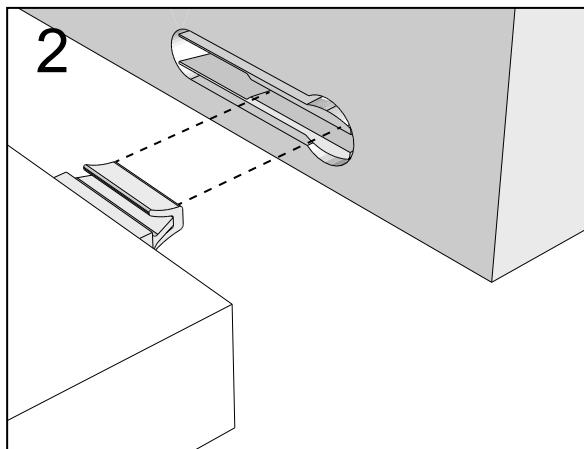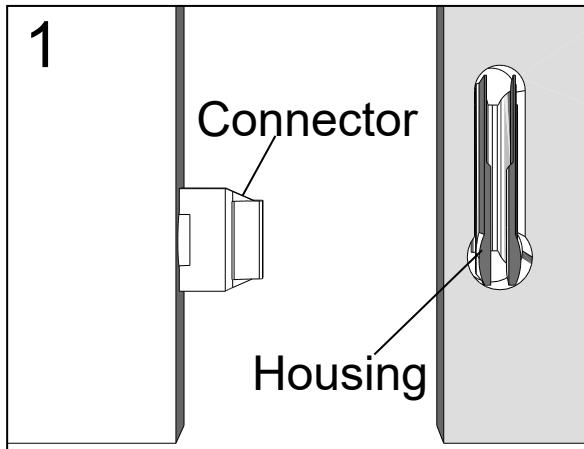


NEXT

MIA HIDE AWAY DESK

F13517
Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	8	1
B12	Ø7.5 x 33mm	8	1
D6	Ø8 x 30mm	6	1
P3	Ø5 x 16mm	8	1
S41	Ø4 x 16mm	2	1
V68	Ø6 x 50mm	4	1
U139	Ø4.5 x 15mm	16	2
U151	Ø4 x 15mm	16	2
Y8	Ø6 x 50mm	2	1

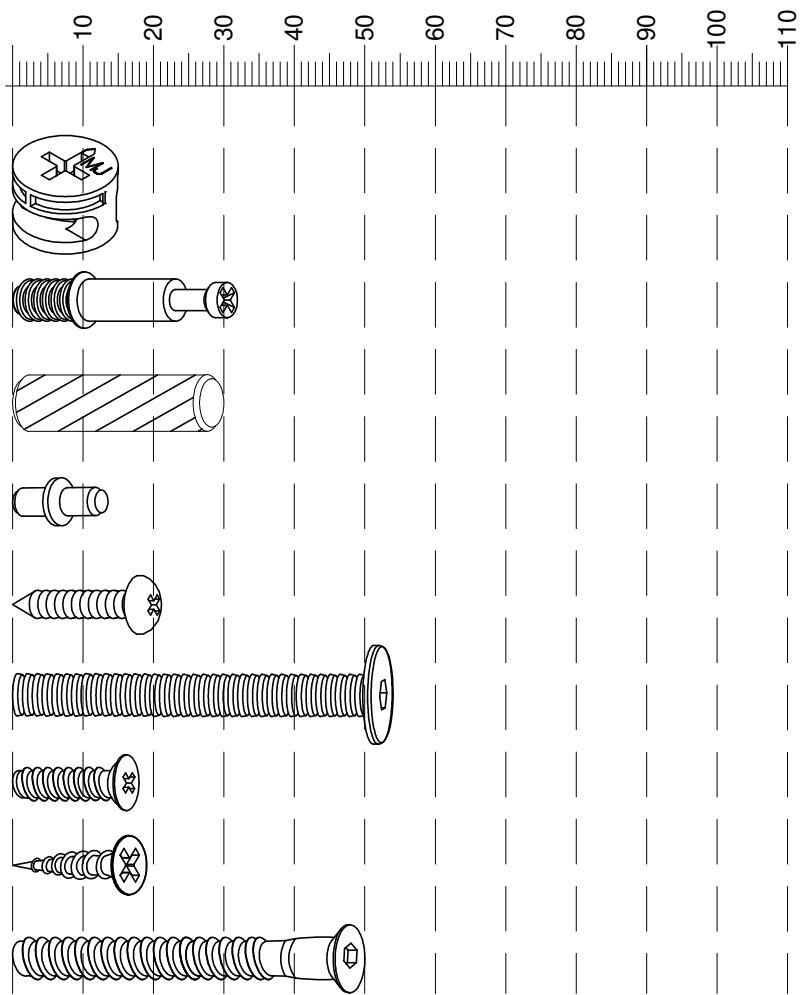


Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Qty	Spare Qty	Visual
T4	N/A	1	N/A	
C11	N/A	4	N/A	
T38	N/A	16	2	
N1	N/A	2	N/A	
C19	N/A	4	N/A	

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
O1	N/A	8	1	
E48	N/A	4	N/A	
N30	LED light	1	N/A	

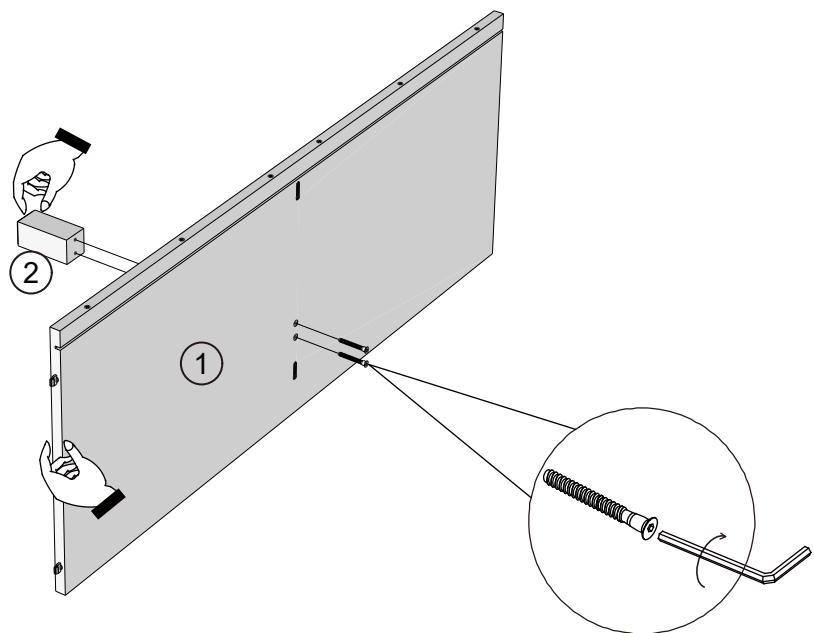NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions**1**

T4	N/A	1	
Y8	Ø6 x 50mm	2	

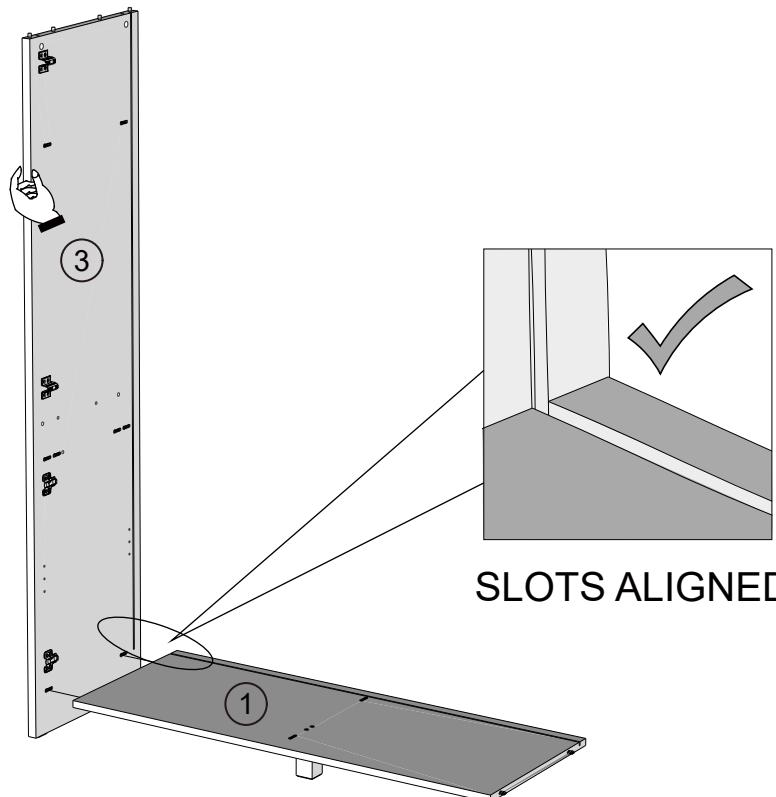
2

NEXT


MIA HIDE AWAY DESK

F13517
Assembly instructions


3

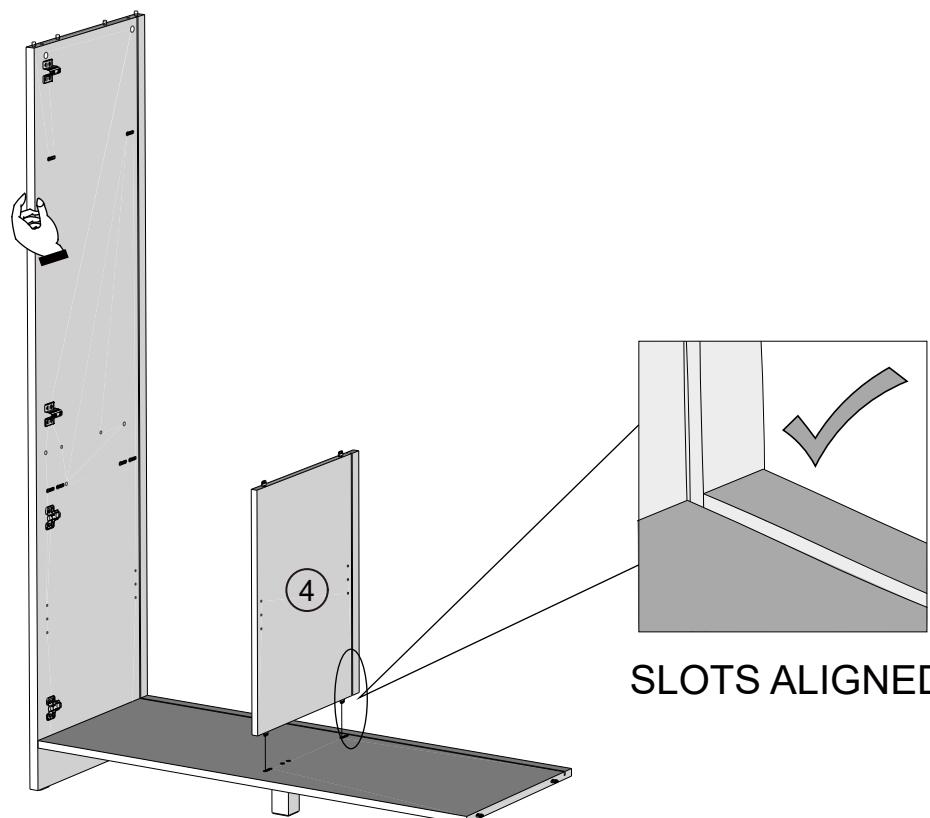


4



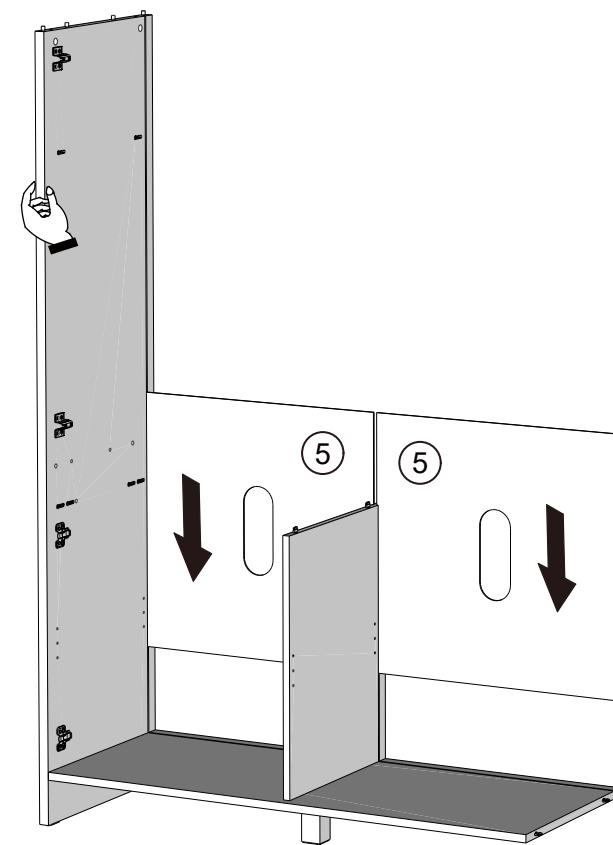


5

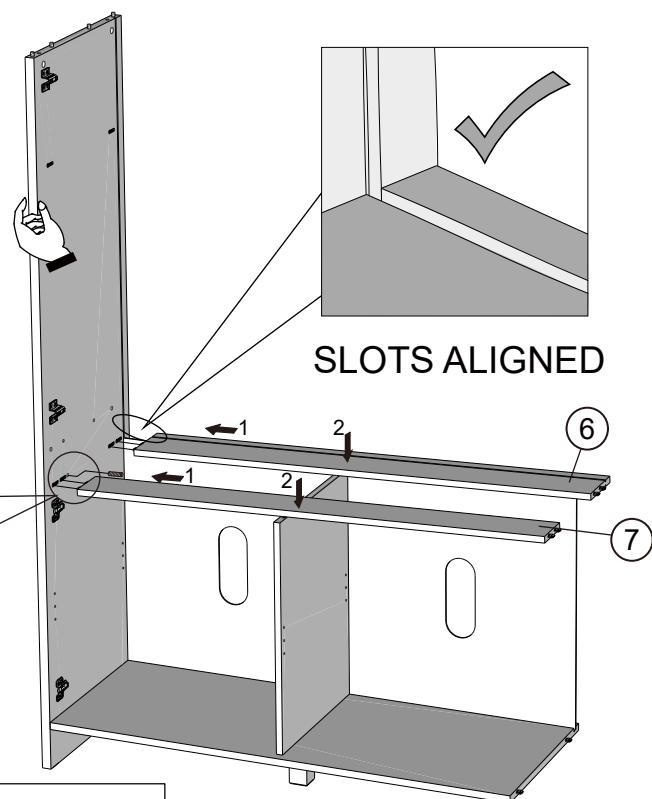


6

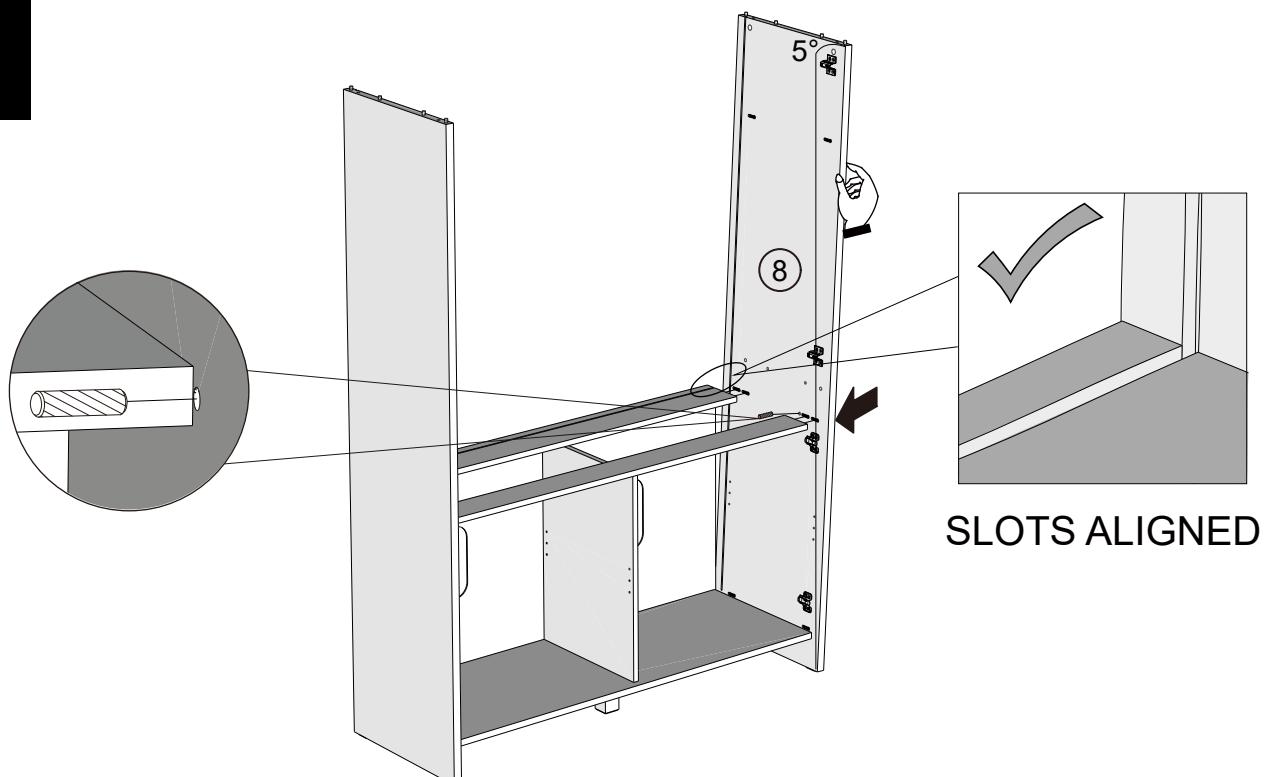

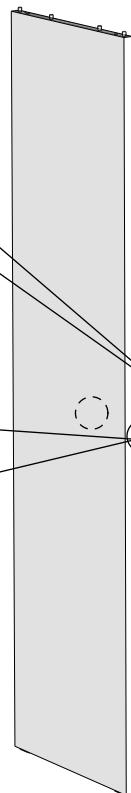
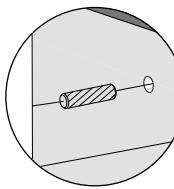
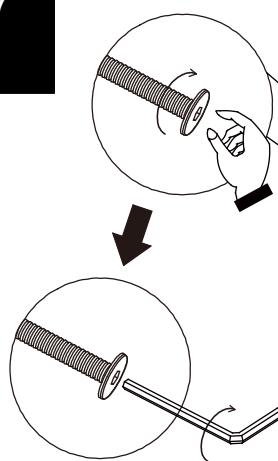
NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions**7**

Finished side

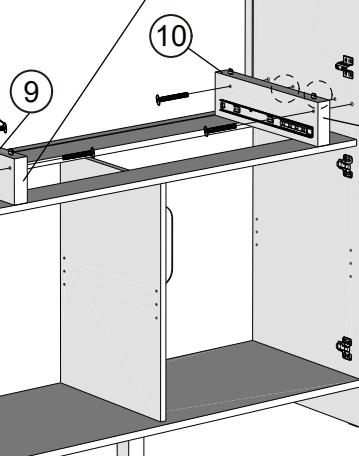9


Finished side

D6	Ø8 x 30mm	4	
T4	N/A	1	
V68	Ø6 x 50mm	4	

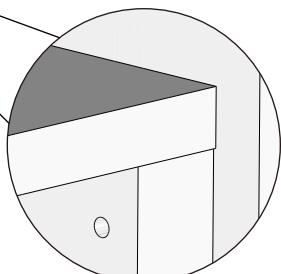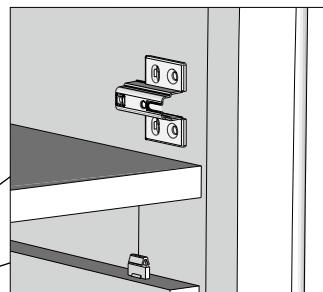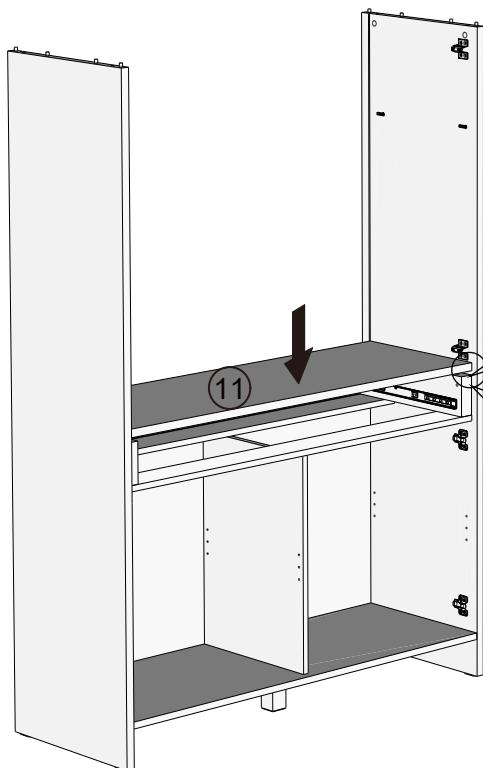
8

NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions

9

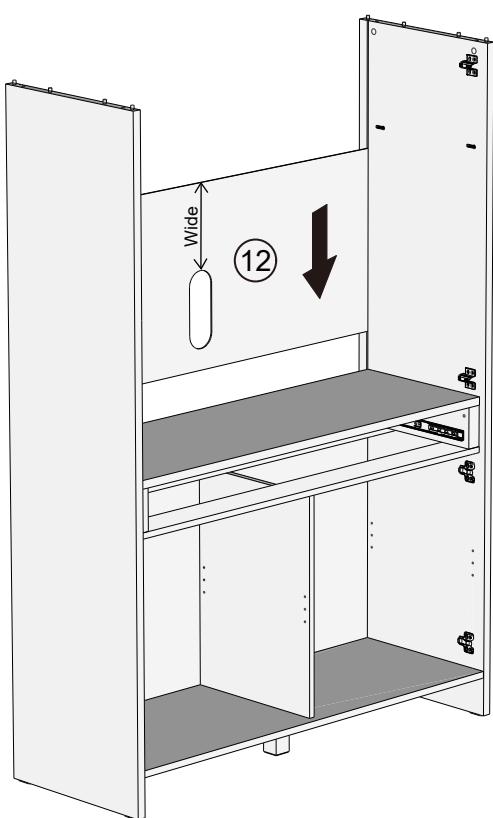


10

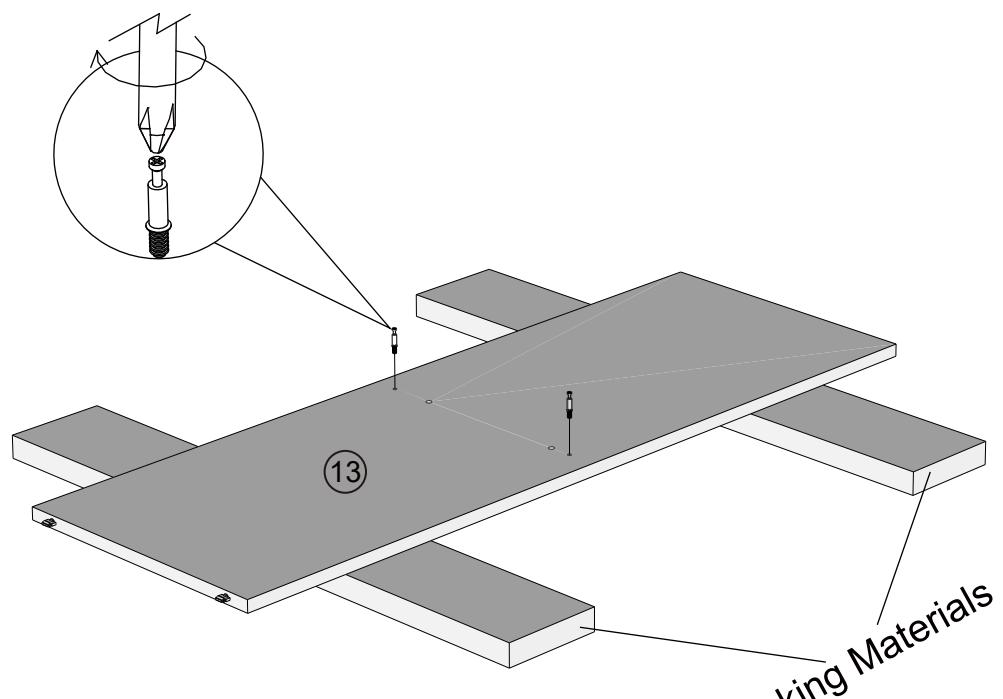


B12	Ø 7.5 x 33mm	2			not supplied
-----	--------------	---	--	--	--------------

NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions


11

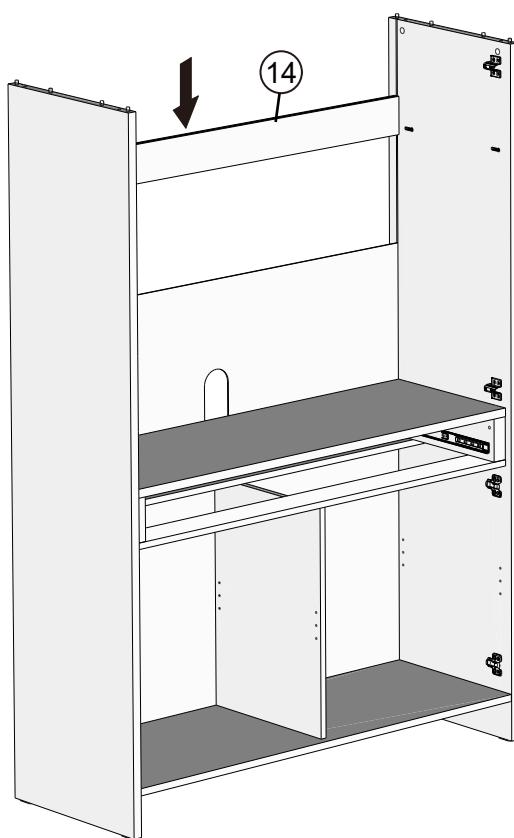


12

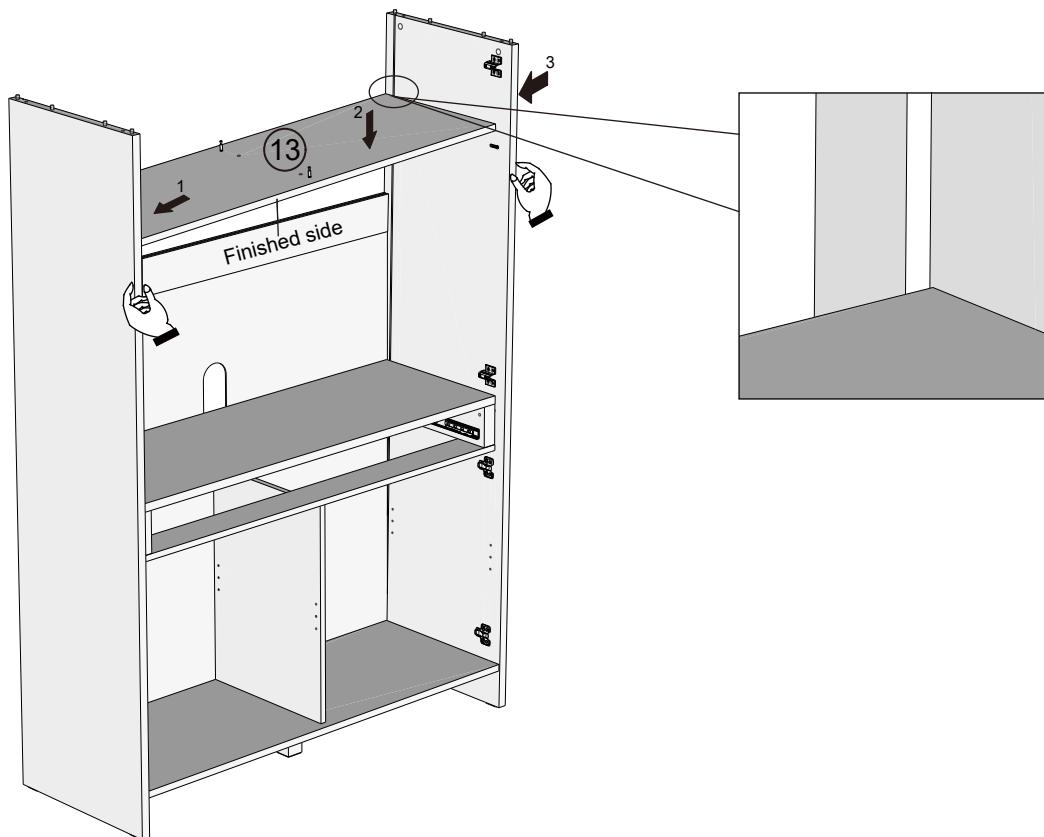


13

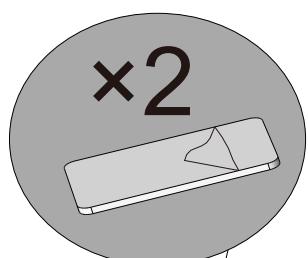

Remove the protective film from the magnetic attraction plate.

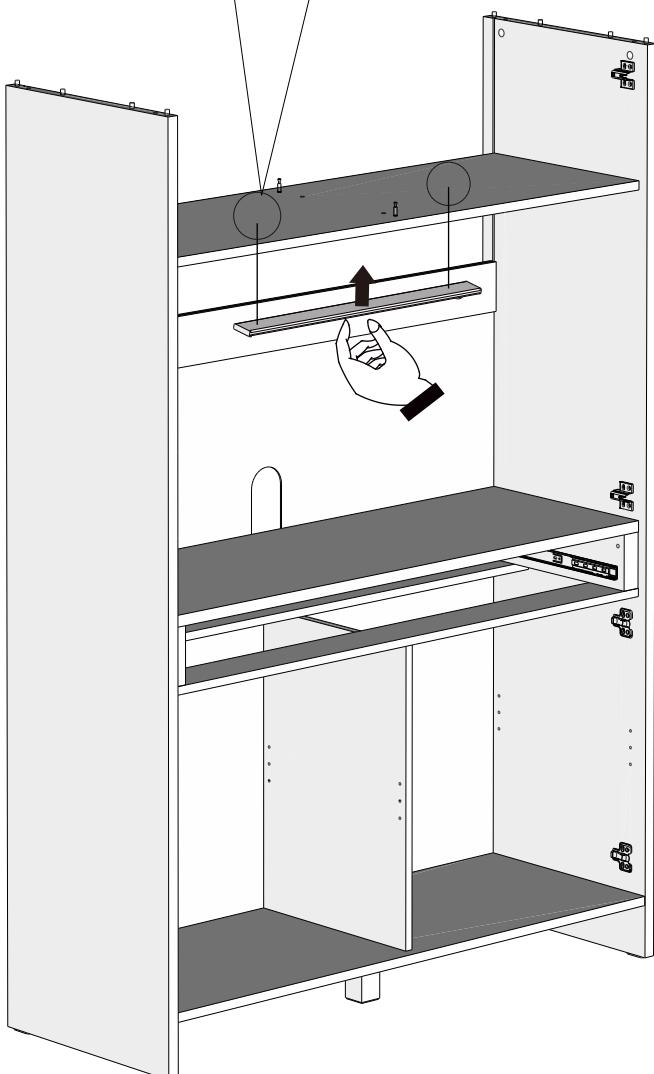

Set the LED lights to automatic sensing mode follow the last page.

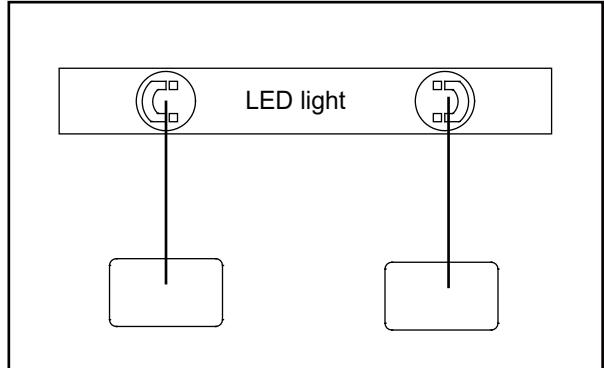


Place the lamp tube position as show in the picture.


N30	LED light	1	

NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions


14

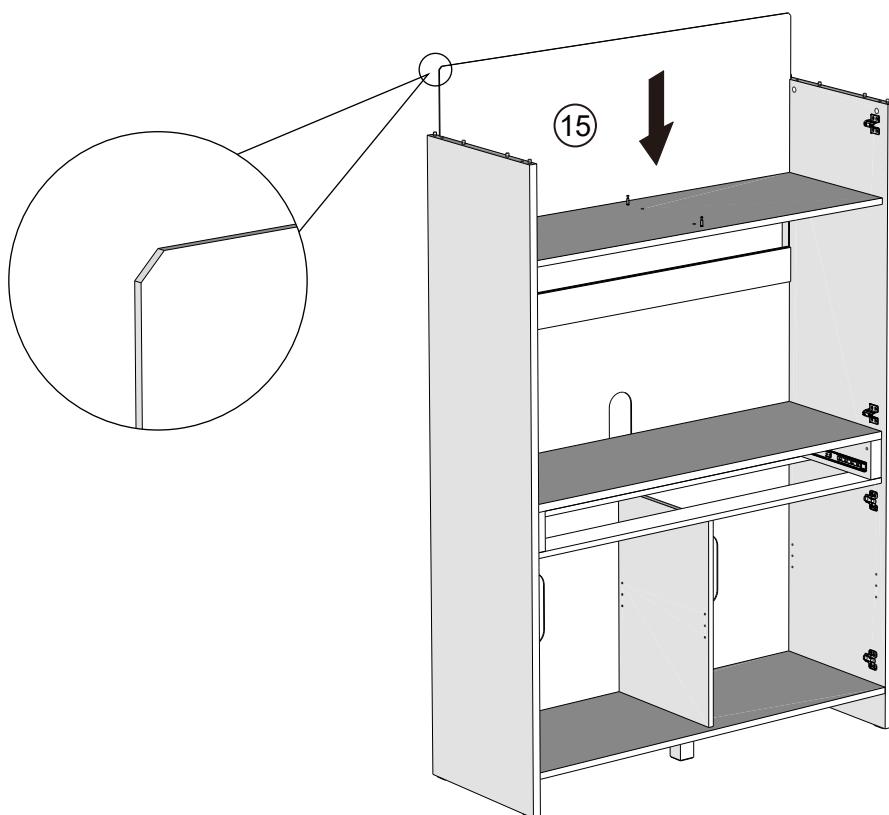


15

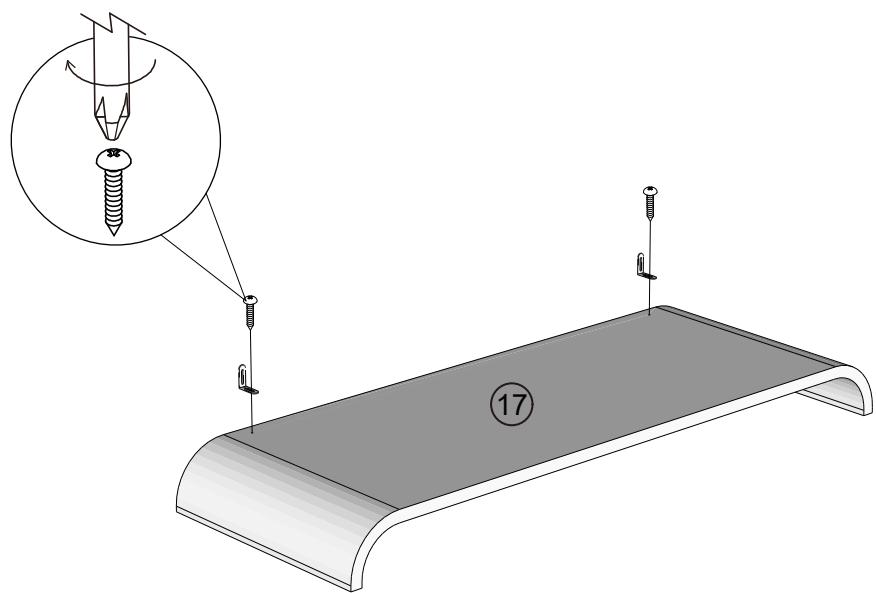

S41	Ø4 x 16mm	2	PH2 not supplied
N1	N/A	2	

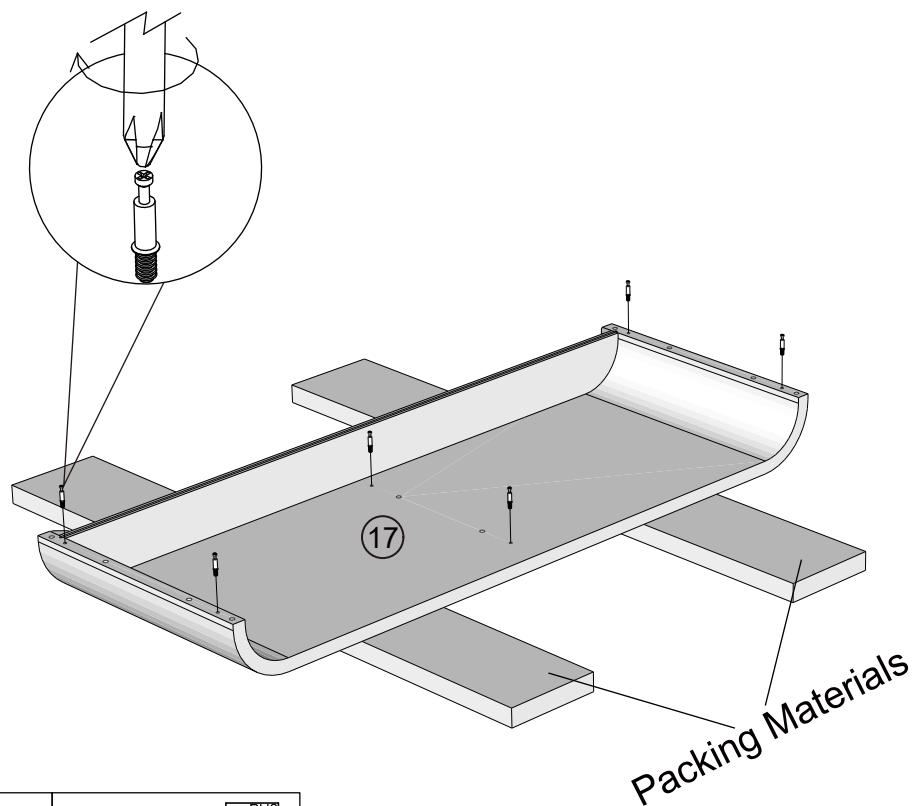NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions**16**


B12	Ø 7.5 x 33mm	6			not supplied
-----	--------------	---	--	--	--------------

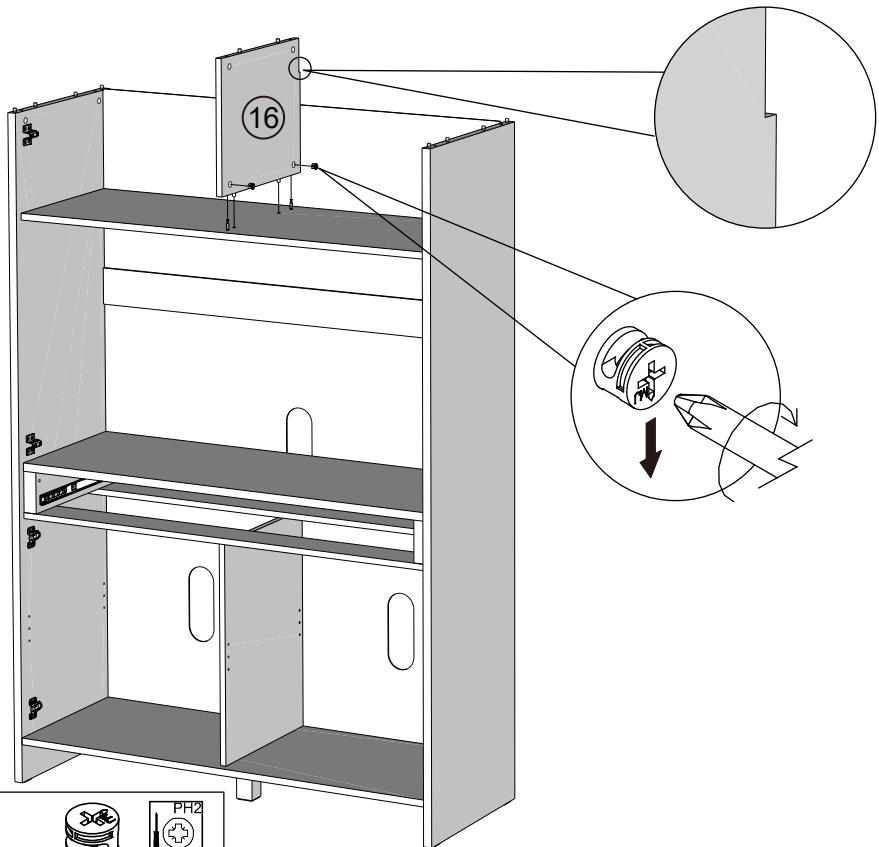17

B3	Ø 15 x 12mm	2			not supplied
----	-------------	---	--	--	--------------

NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions

18

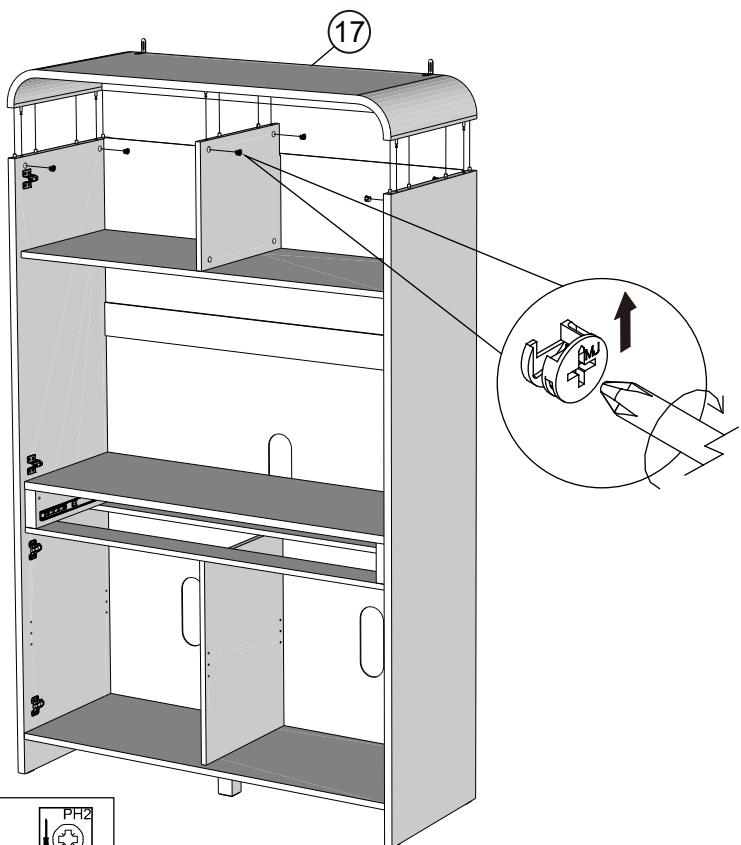


B3

Ø15 x 12mm

6




19

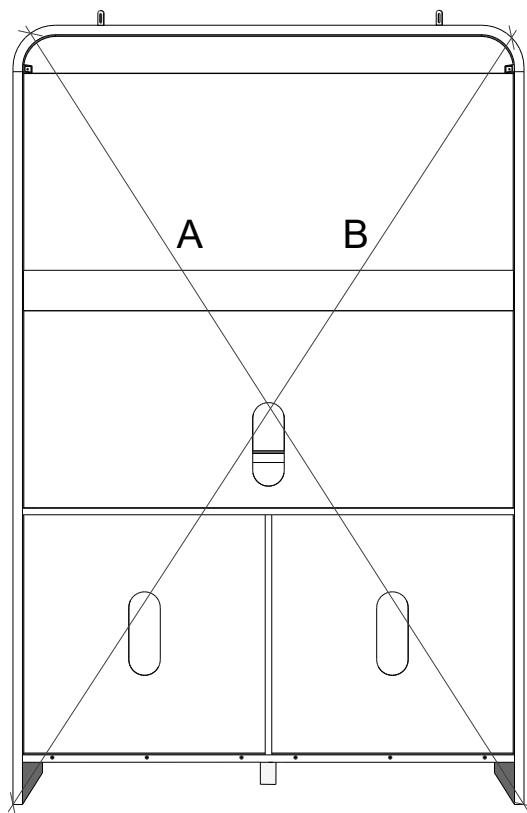

A=B

NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions

20

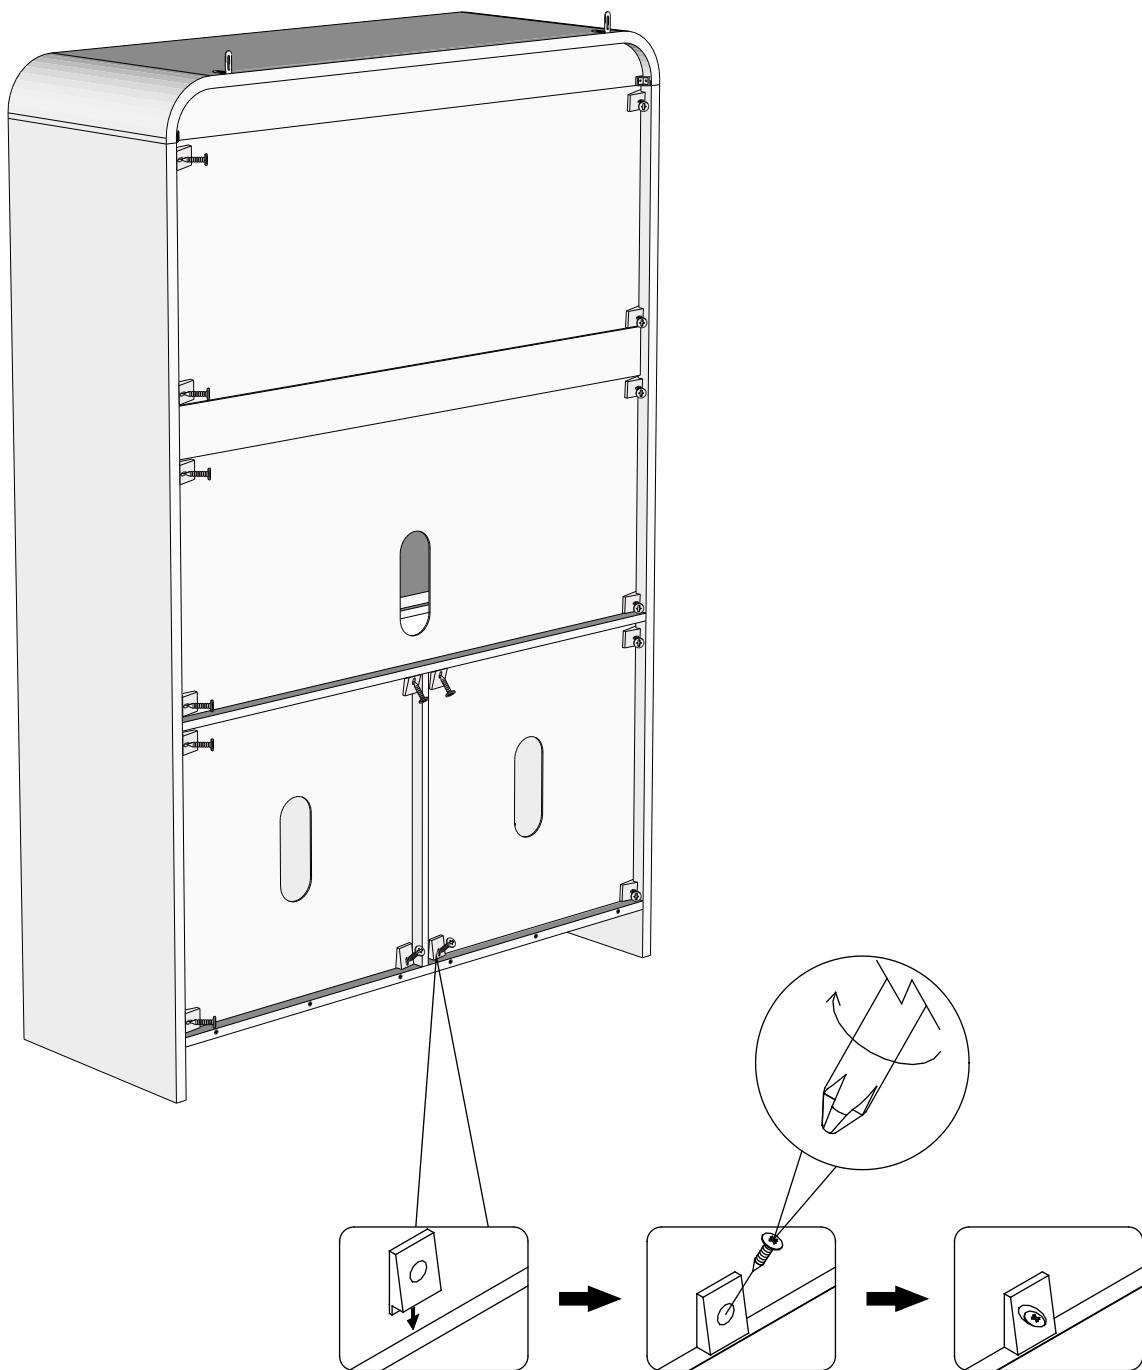


T38	N/A	16		 not supplied
-----	-----	----	---	---

21

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X "L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.


NB: Wall fixings are not included - Please source suitable fixing for your wall type. If in doubt please consult a qualified trades person.

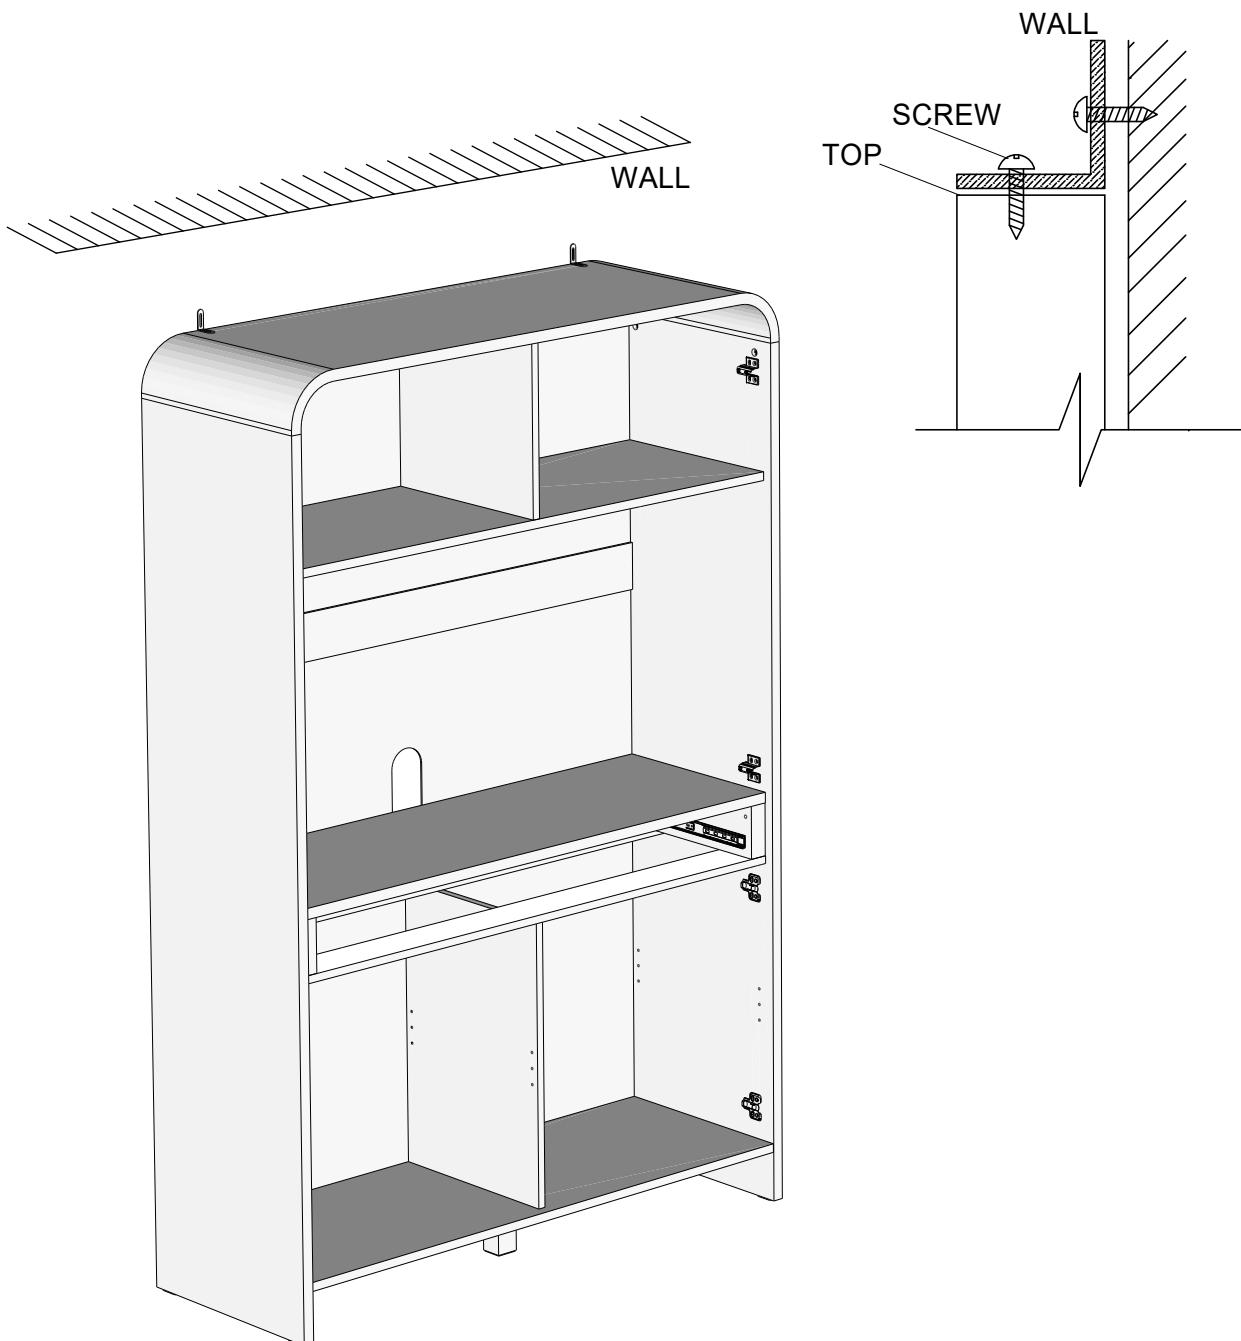


NEXT


MIA HIDE AWAY DESK
F13517
Assembly instructions

 22

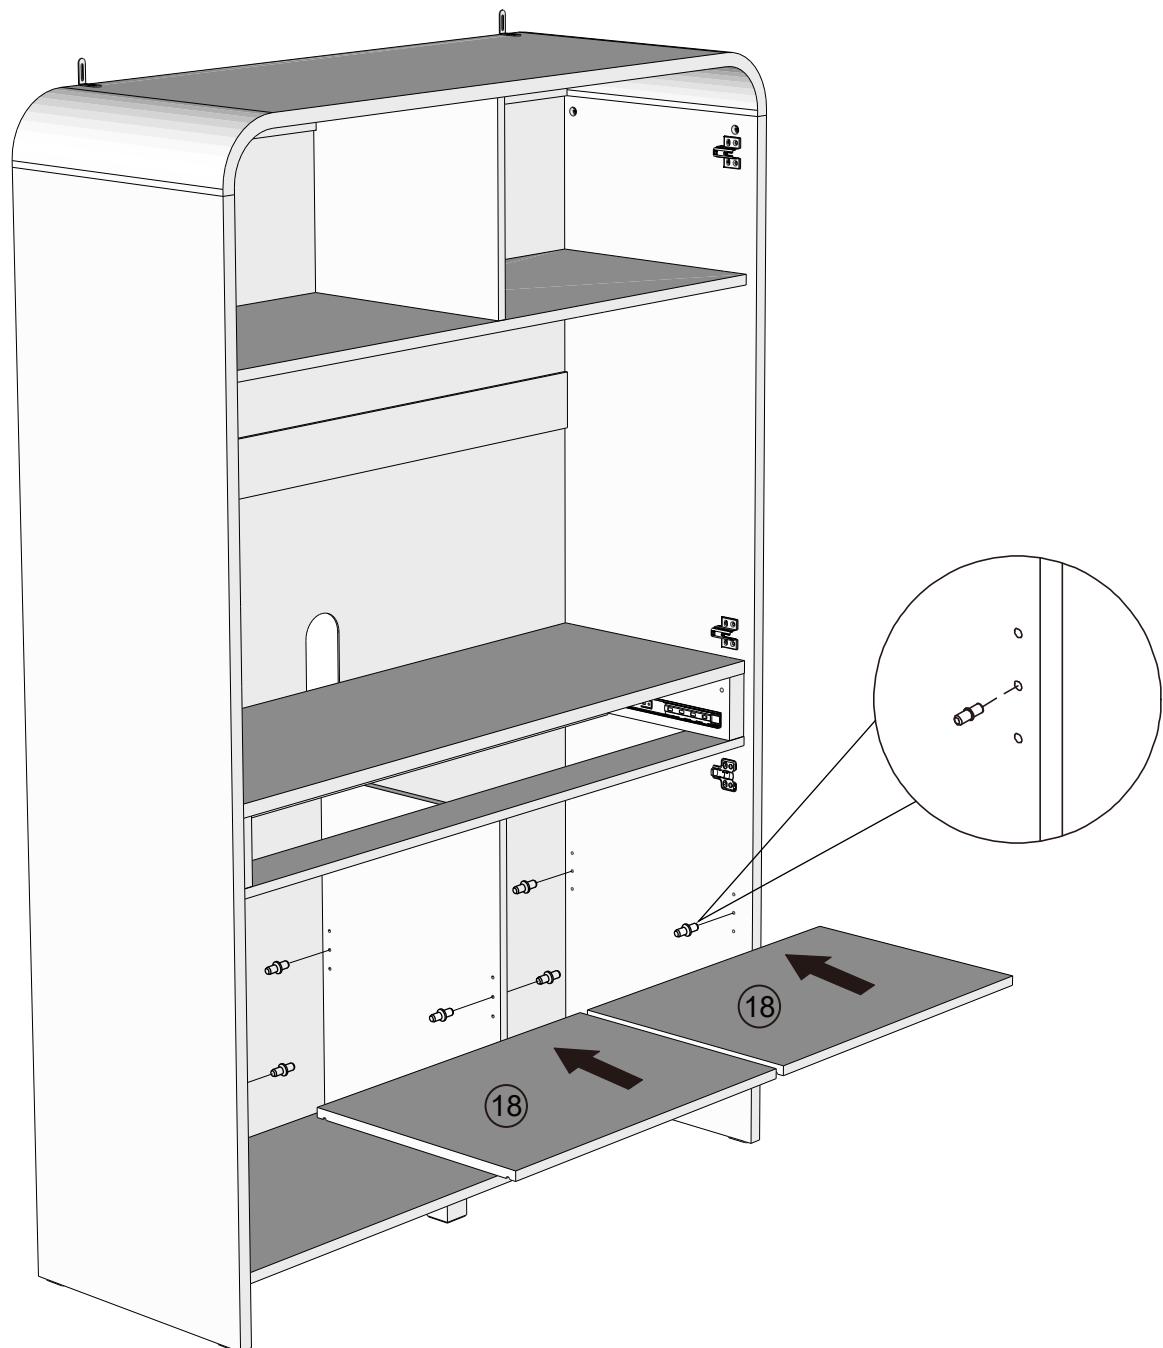


P3	Ø5 x 16mm	8	
----	-----------	---	---


23

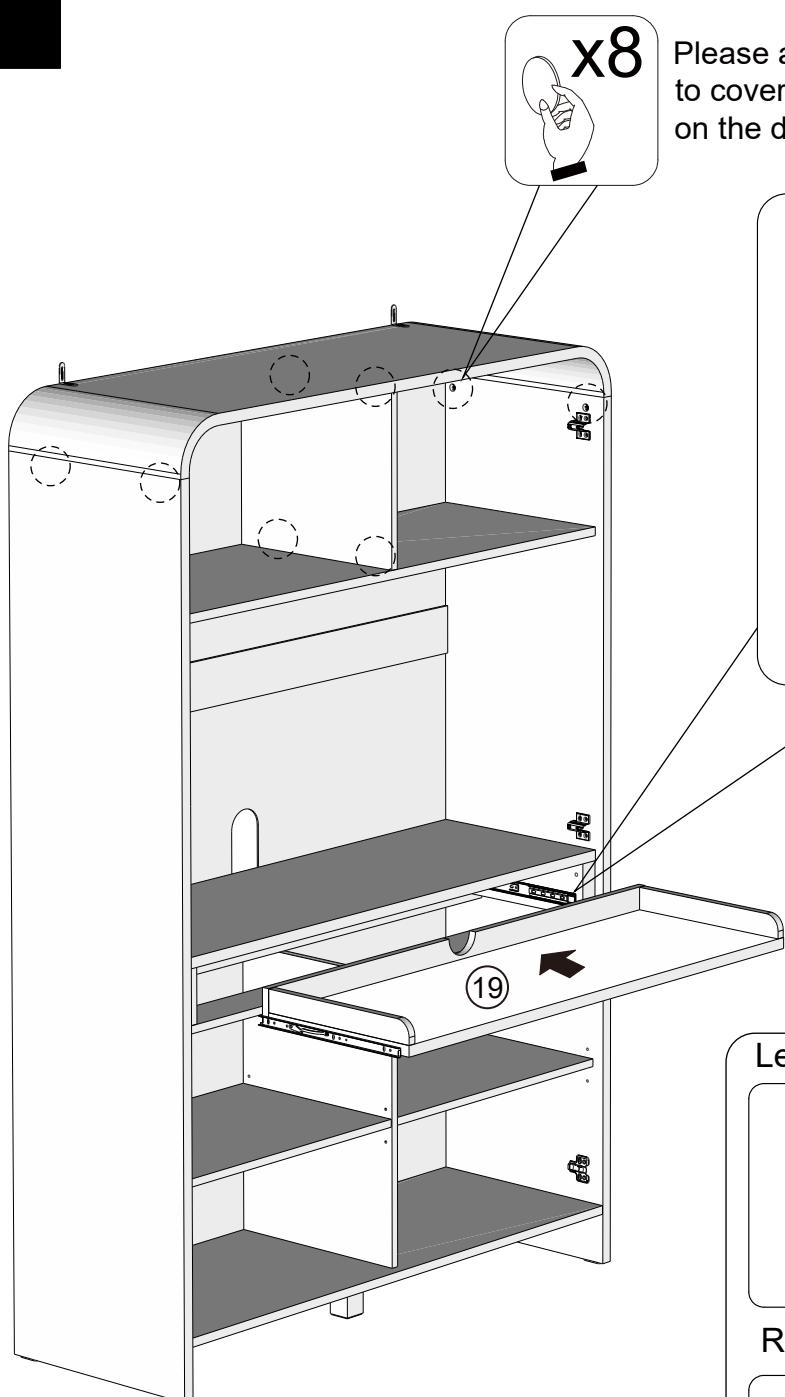


Please apply the stickers provided to cover the camlocks as shown on the diagram as an example.

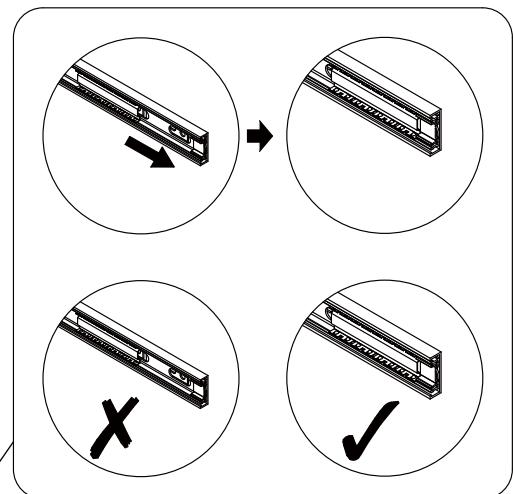

Left side


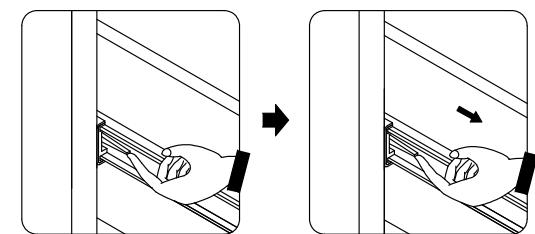


Right side

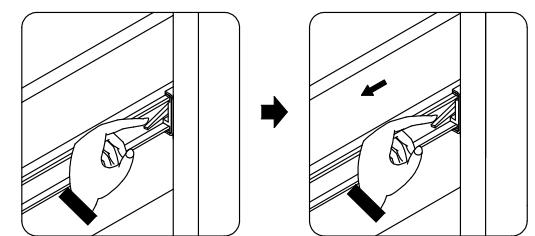


How to remove Keyboard Tray




O1	N/A	8	
----	-----	---	--

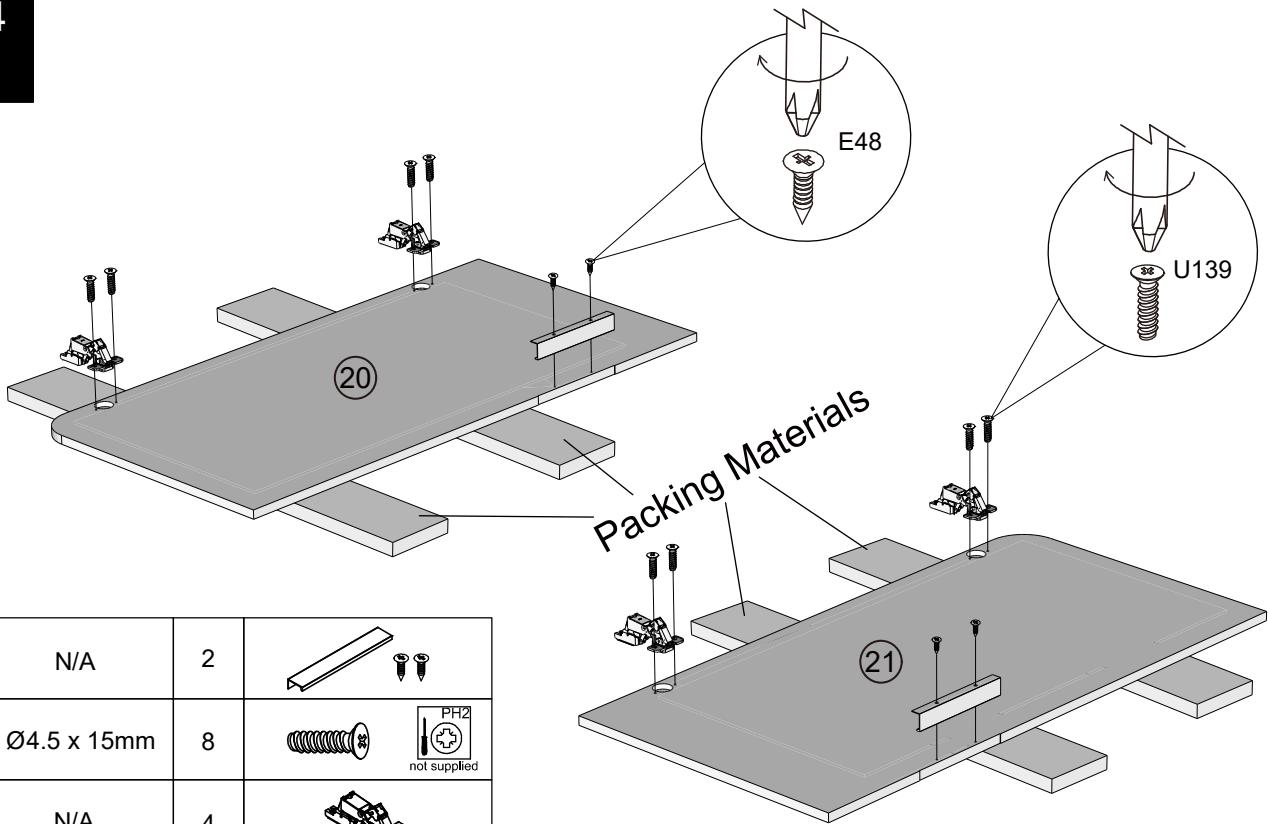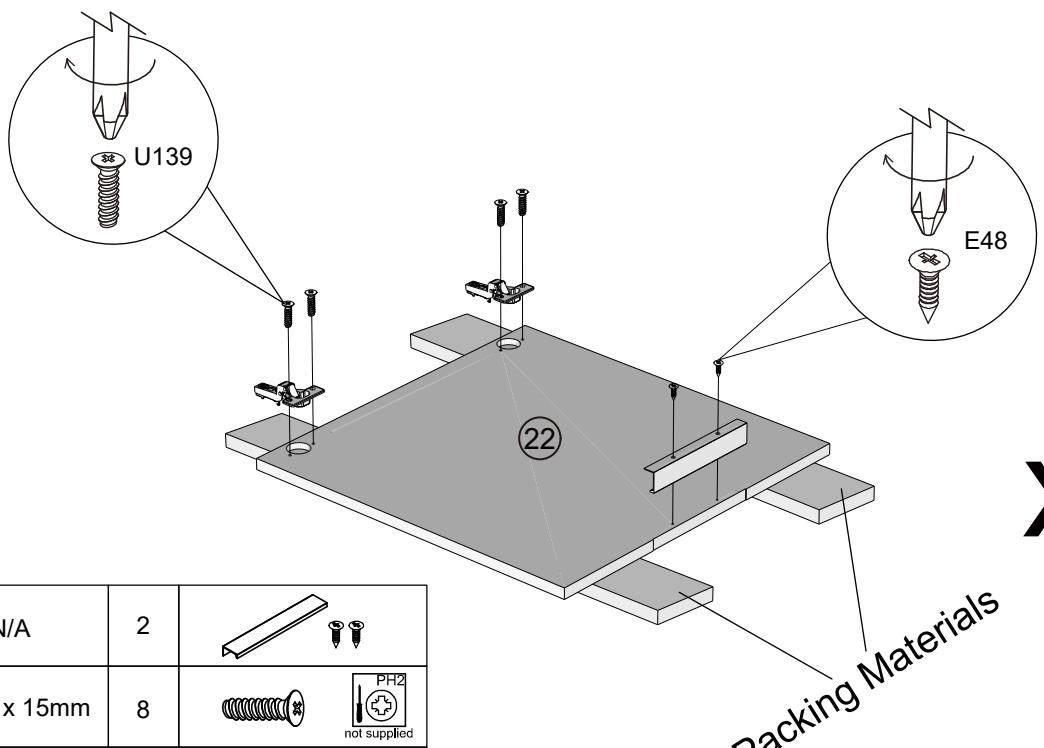NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions**24****25**


26

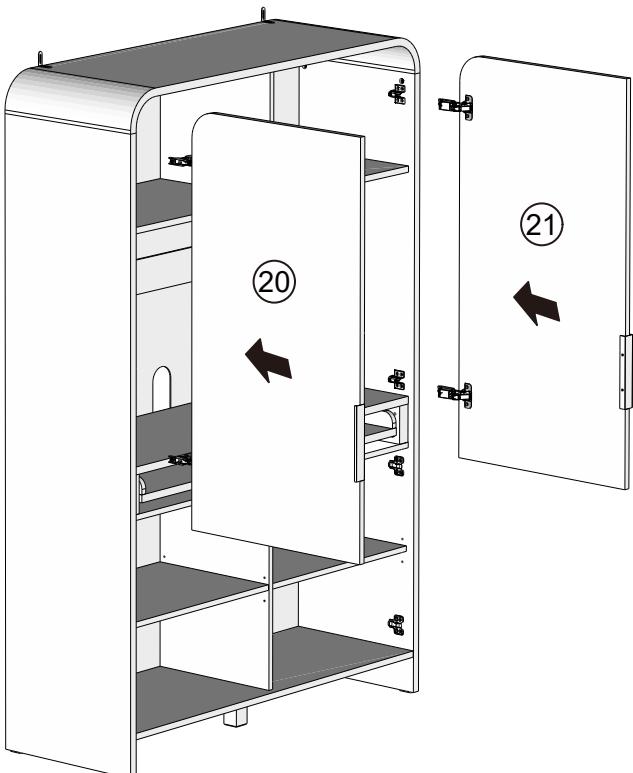**Install Hinge**


Step.1:Lift up the hook

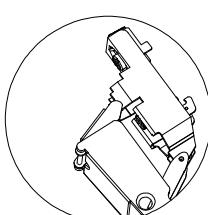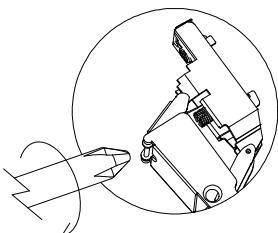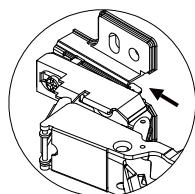Step.2:Hook the hinge
to the base




Step.3:Press inside

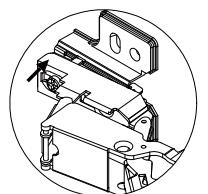**Adjust Hinge Position**





LATERAL

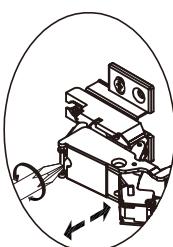

VERTICAL

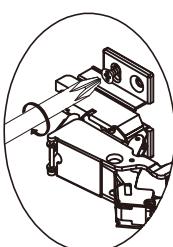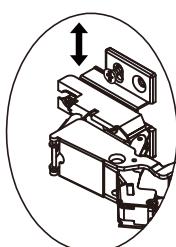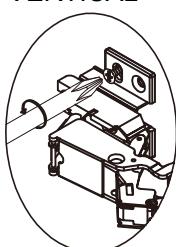


FRONT- TO-BACK

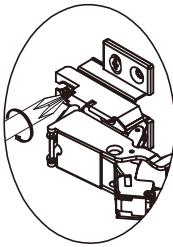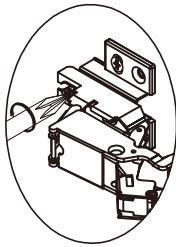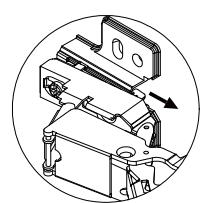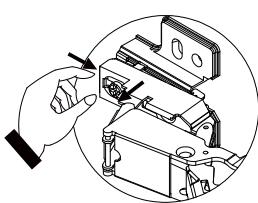**Remove Hinge**

NEXT**MIA HIDE AWAY DESK**
F13517
Assembly instructions




27

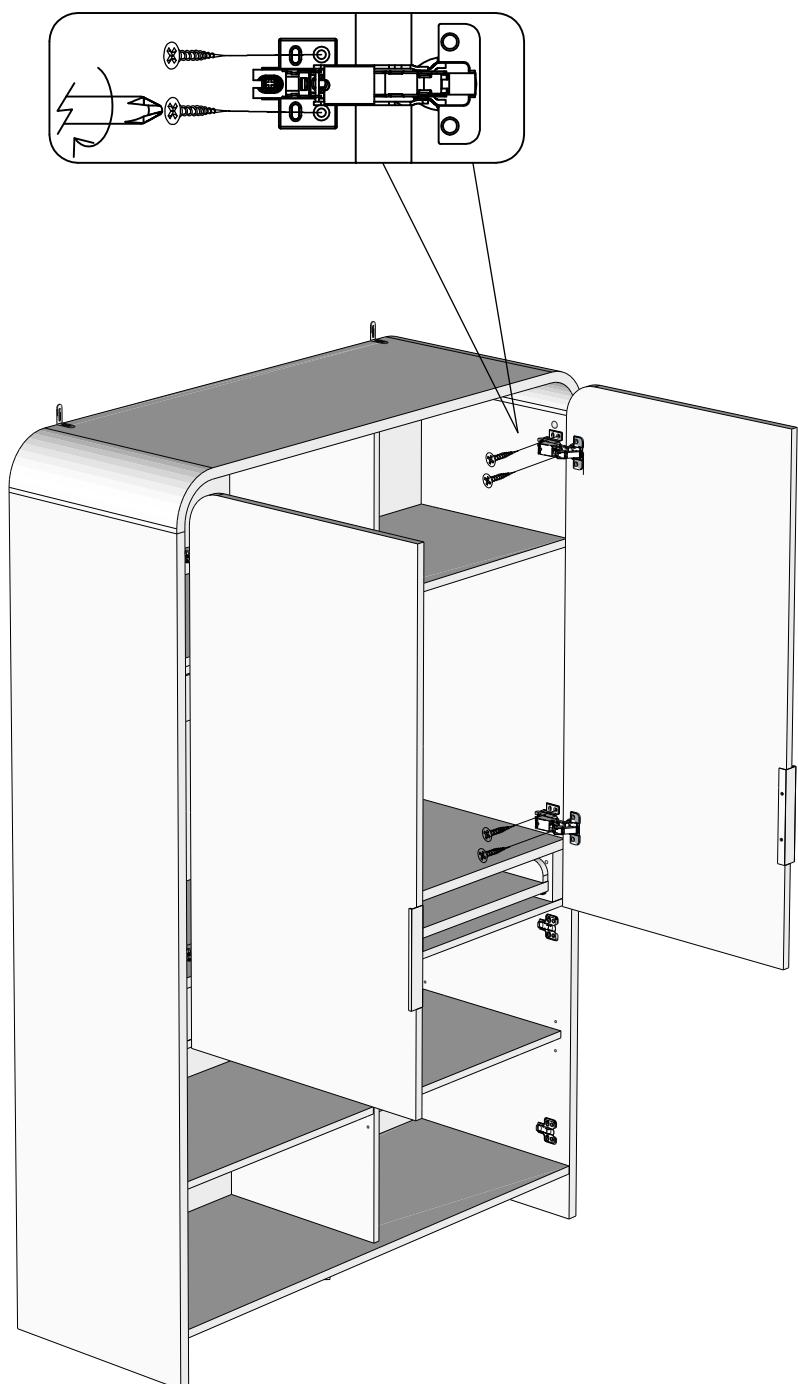



U151	Ø4 x 15mm	8	  not supplied
------	-----------	---	--

28


Install hinge

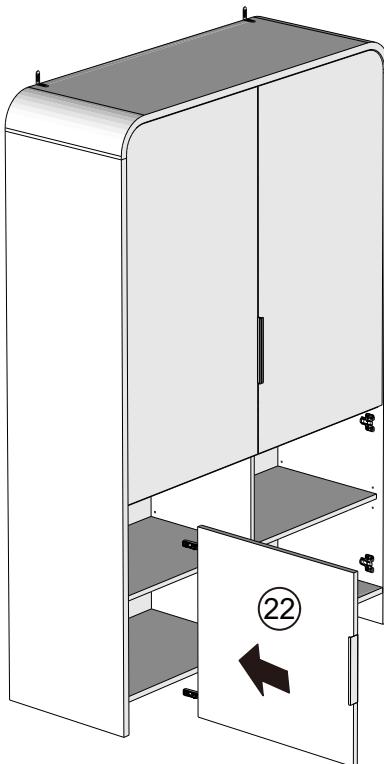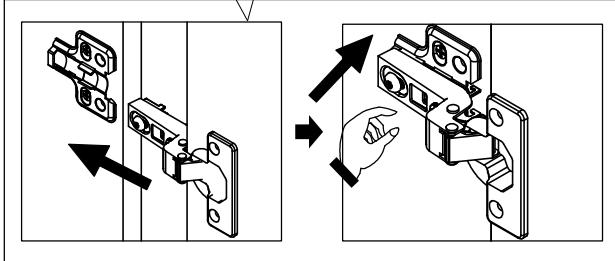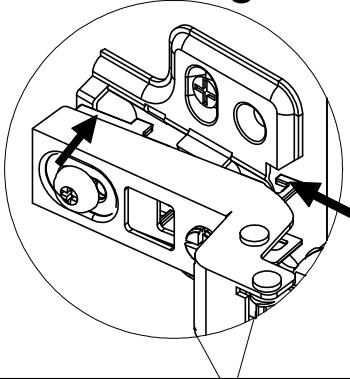

Remove hinge

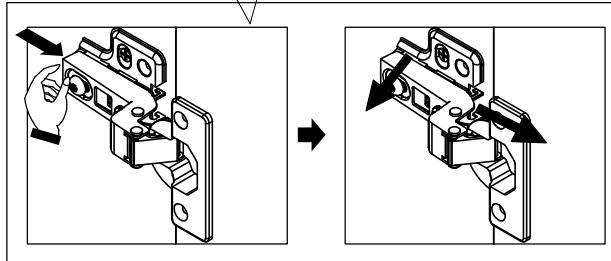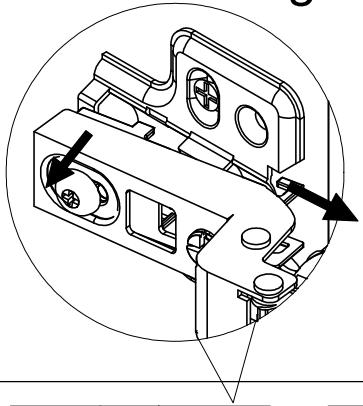

Adjust Hinge Position

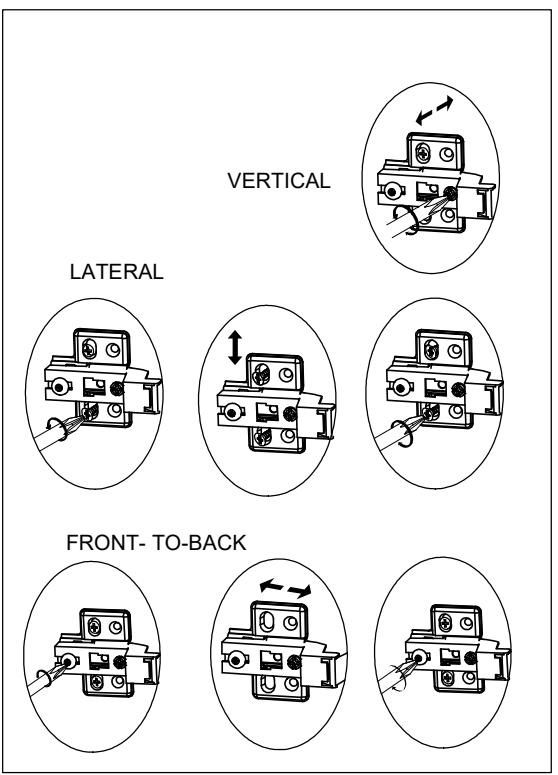


NEXT

MIA HIDE AWAY DESK

F13517
Assembly instructions

29

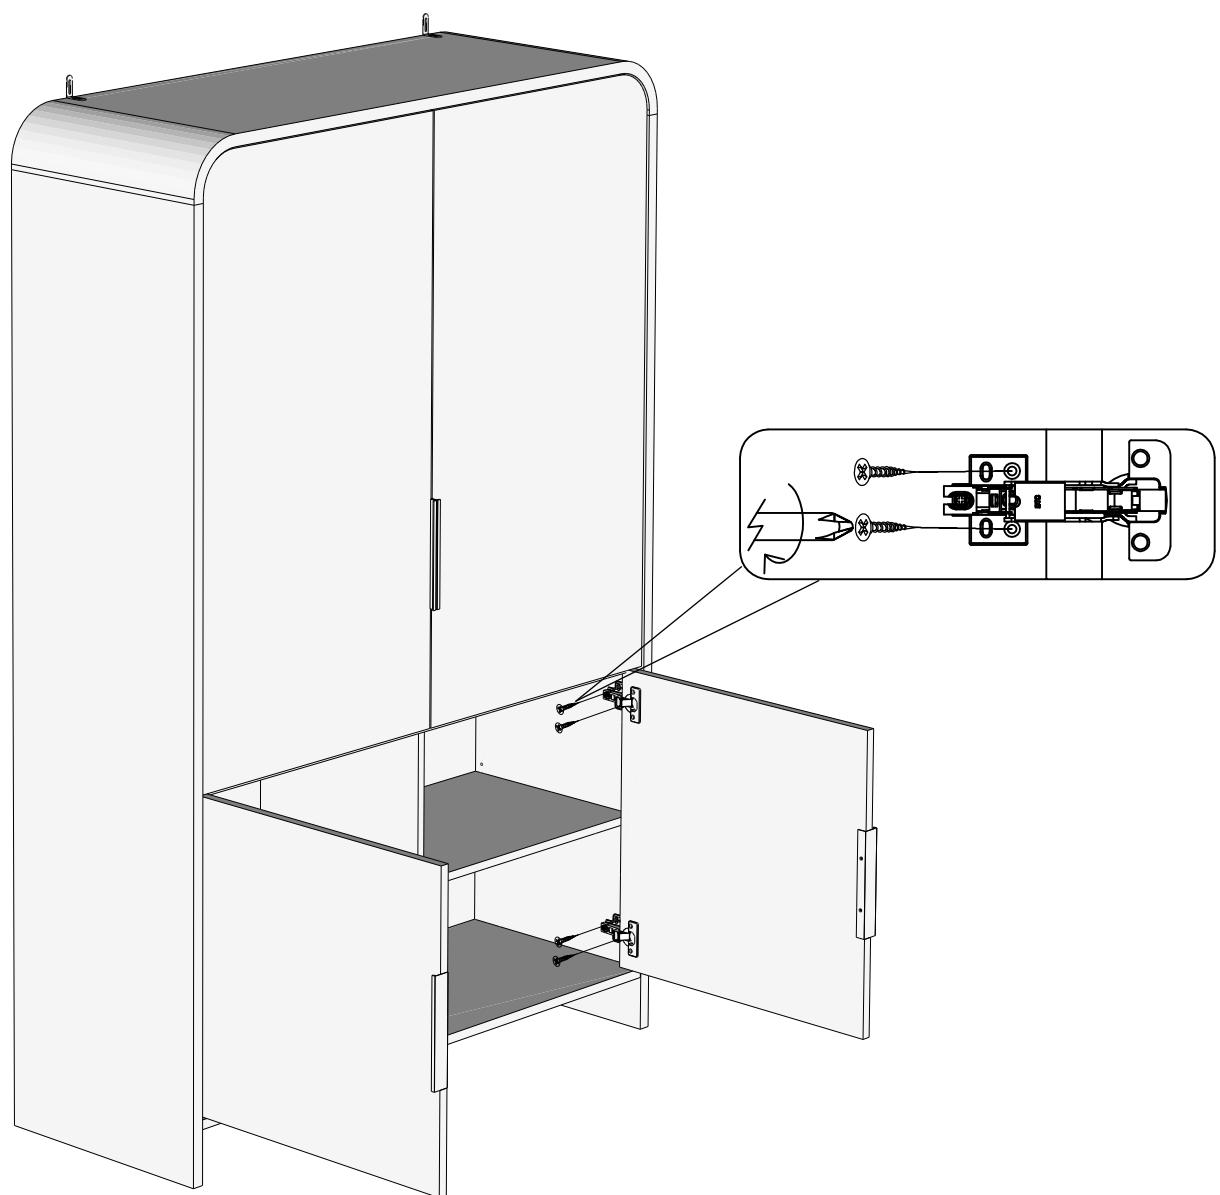

U151	Ø4 x 15mm	8		
			<small>not supplied</small>	


NEXT

MIA HIDE AWAY DESK

F13517

Actual product size

H185 x W121 x D45 cm

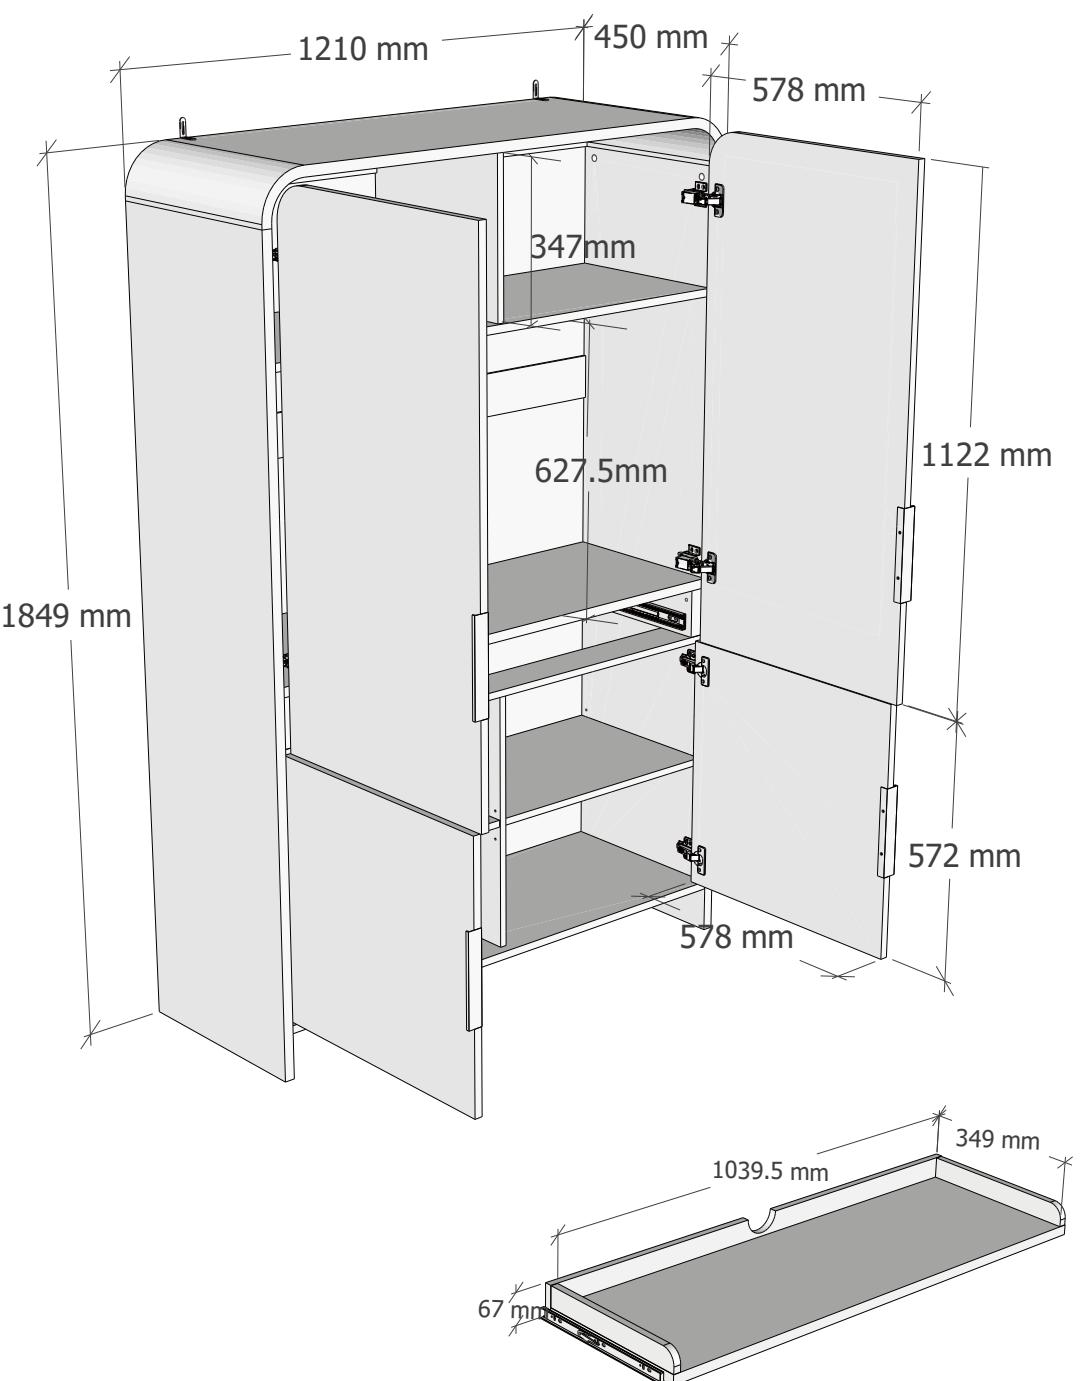

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk

NEXT

MIA HIDE AWAY DESK

F13517

Contents and specification:

- 1x sensor LED desk which doesn't need to be plugged in to function.
- This product contains 1x battery which are non-replaceable.
- Rechargeable by USB port 0.8m USB charging cable included (USB plug is needed to charge but not included)
- Integrated LED lamp/strip - bulbs not required.
- Average run time: 6 hours (keep lighting)
- Wattage: 1.63W
- Light output: 93.52 lumens
- Colour temperature: 3000K/4000K/6000K
- The light will only go through the 3 stage touch when in contact with the switch on the top of the LED
- This product has a charging indicator light. When charging the light will show red. Once charging is complete, the light will change to white. In order to maintain the longevity of the product, please do not overcharge or leave on the charge for 24 hours.
- Constant On Mode: The light stays on continuously, the sensing function does not work, and it does not turn off automatically.
- Night Sensing Mode: The light will automatically light up when both sensing human and in low lit environment, otherwise it won't automatically light up. The light will automatically turn off when human left the sensing range for after 25 seconds. The light will keep lighting if human stay in the sensing range.
- The sensing range of the light is 120° from the center point of the probe, within a 3 meter area. However, improper installation or obstructions near the sensing probe may affect the sensing effect.
- Ensure that all packaging is disposed of carefully and responsibly.
- Keep all plastic wrapping materials away from children to avoid danger of suffocation

NEXT

MODEL NUMBER: F13517

BULB TYPE: NOT REQUIRED

VOLTAGE: 2.6-5V. MAX 388 MA. 1.63W

BATCH NO: 05/2025



**UK
CA**



**LE19 4AT
D02 ED70**

Manual -LED

Please fully charge the battery before using it for the first time.


Description of Modes and Their Functions

 Constant On Mode	<ul style="list-style-type: none"> The light stays on continuously, the sensing function does not work, and it does not turn off automatically.
 Night Sensing Mode	<ul style="list-style-type: none"> The light will automatically light up when both sensing human and in low lit environment, otherwise it won't automatically light up. The light will automatically turn off when human left the sensing range for after 25 seconds. The light will keep on if human stay in the sensing range.

Instructions for buttons

Push button switch	<ul style="list-style-type: none"> Press button: Cycle through the light colors. (ON mode) Holding button: Adjusts the brightness. (ON mode)
Toggle switch	<ul style="list-style-type: none"> AUTO: Night Sensing mode. ON: Constant ON mode. OFF: Turn off the lamps.

Sensing range and its precautions

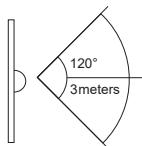

- The sensing range of the light is 120° from the center point of the probe, within a 3 meter area. However, improper installation or obstructions near the sensing probe may affect the sensing effect.

Charging instructions

- Charging voltage: DC5V/1A
- Charging port: Type-C
- Charging indication: Red light on- charging / Green light on- fully charged

Precautions

- Please fully charge the battery before using it for the first time.
- Please do not use charging devices with output voltage greater than 5V/1A to charge the lamp.
- Please use a safety-certified mobile phone charging adapter to charge the light.
- Do not use while charging.
- Keep away from fire. Do not use this light in a damp or high-temperature environment. Do not allow children to use or come into contact with this light. Do not attempt to repair or replace any parts by yourself.

If the contents of the manual can not solve the problem for you, please contact the merchant in time, thank you for your support and trust.

