


NEXT

LANGTON FIRE SURROUND

F13518
Assembly instructions

Actual product size

H99 x W116 x D33 cm

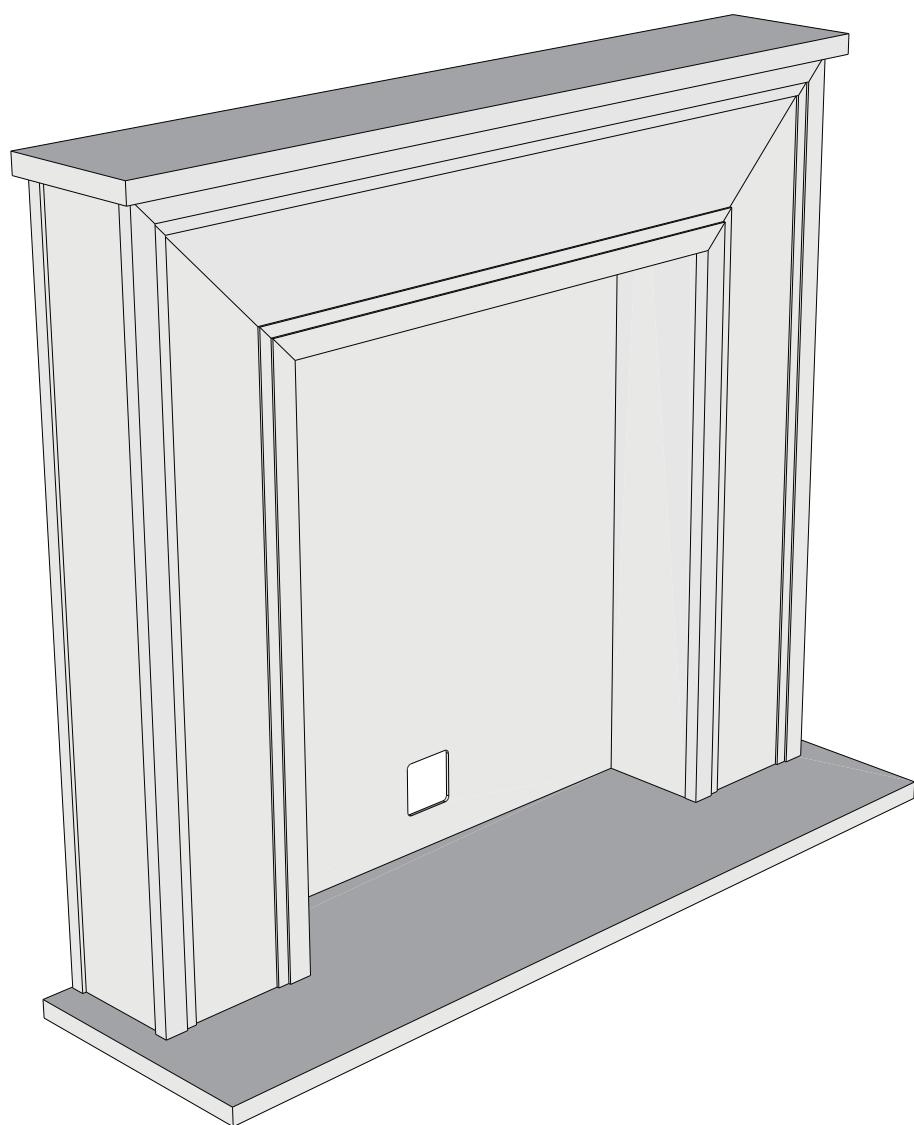

Need Help ?

With: Assembly instruction
Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

Number of people required to assemble


Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

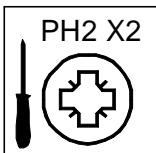

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage,
We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.


Never allow any kind of liquid to remain on your furniture.
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

NEXT

LANGTON FIRE SURROUND
F13518
Assembly instructions

GETTING TO KNOW YOUR PRODUCT


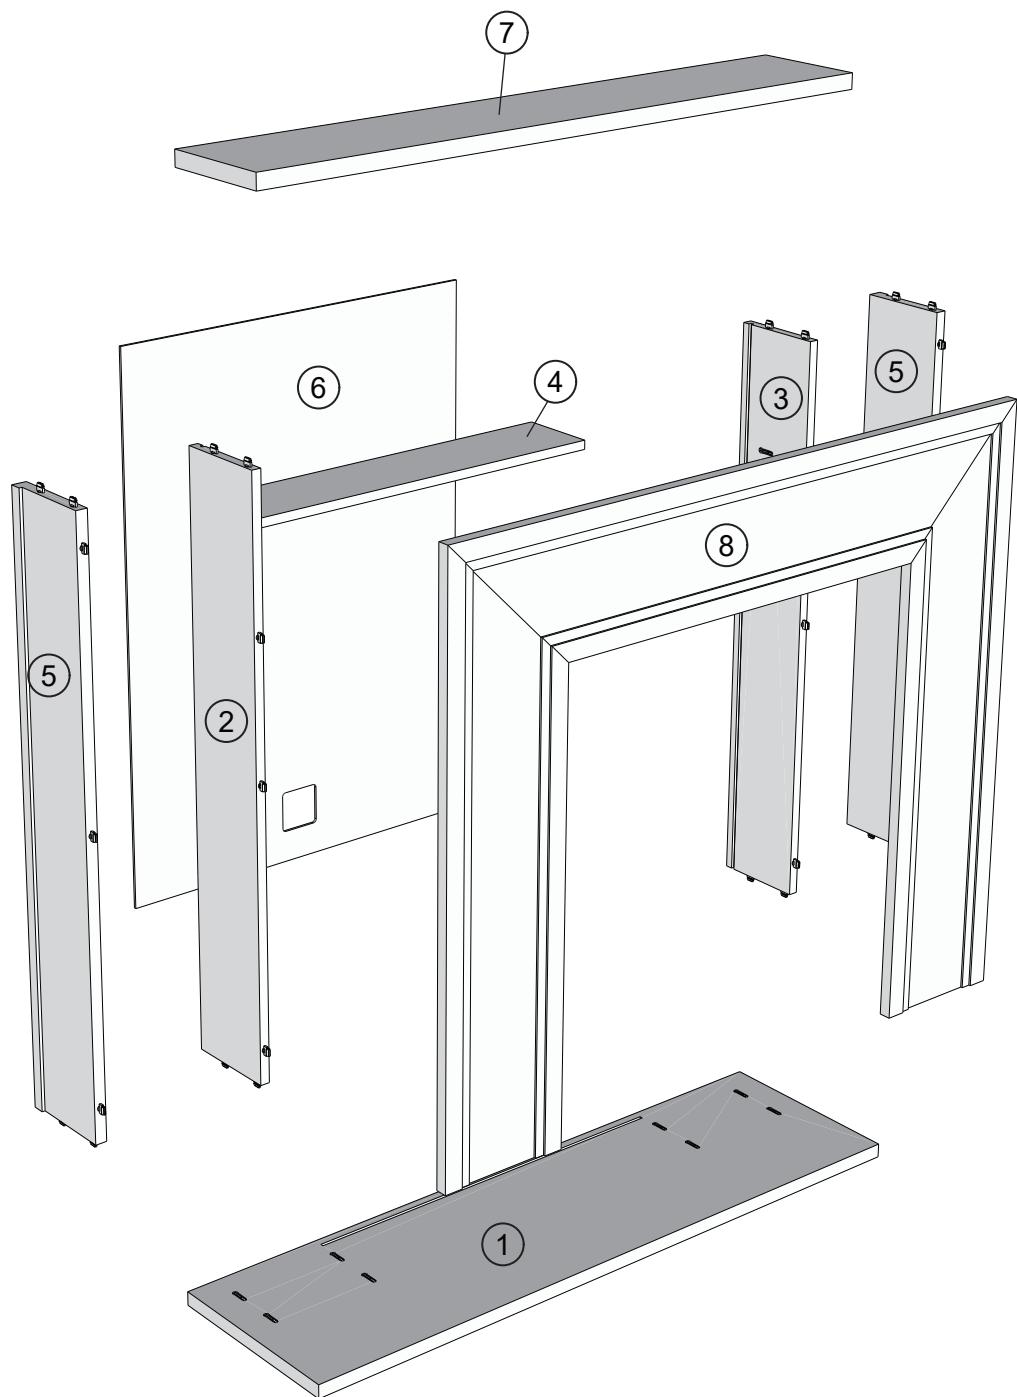


NEXT**LANGTON FIRE SURROUND**
F13518
Assembly instructions


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	33x116cm		1	1
2	15x94cm		1	1
3	15x94cm		1	1
4	13x66cm		1	1
5	15x94cm		2	1
6	67x95cm		1	1
7	19x112cm		1	1
8	94x108cm		1	1

NEXT FITTINGS ASSEMBLE INSTRUCTIONS

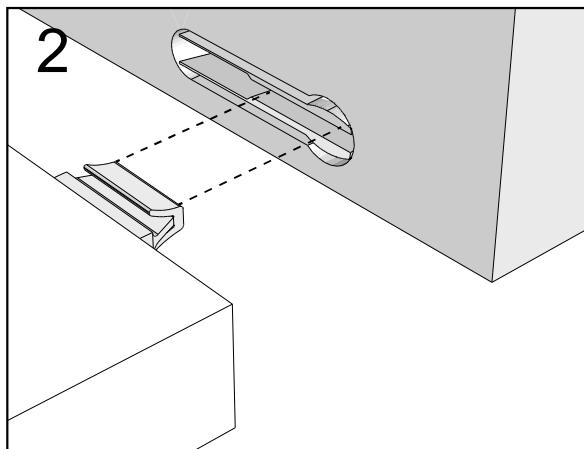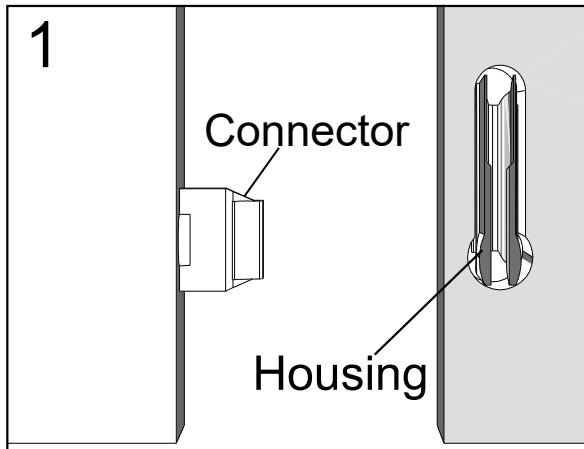

Push connector into housing to join.

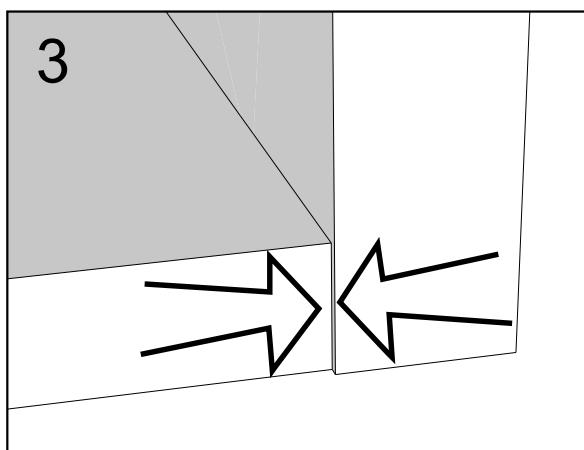

Make sure there is no gap between the panels.


NEXT

LANGTON FIRE SURROUND

F13518
Assembly instructions

Fixtures and fittings supplied (actual size)


Ref	Dimensions	Qty	Spare Qty
S41	Ø4 x 16mm	4	1

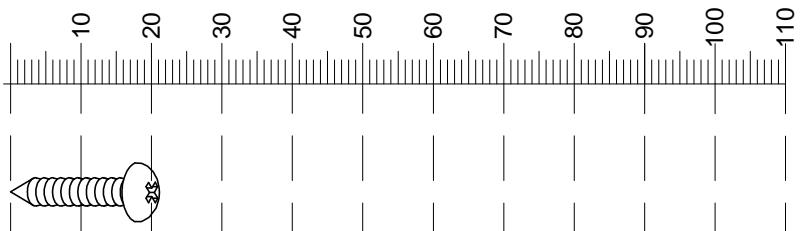


Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T38	N/A	4	1	
T41	N/A	2	N/A	
N17	N/A	2	N/A	
O6	Ø35mm	N/A	1	

1

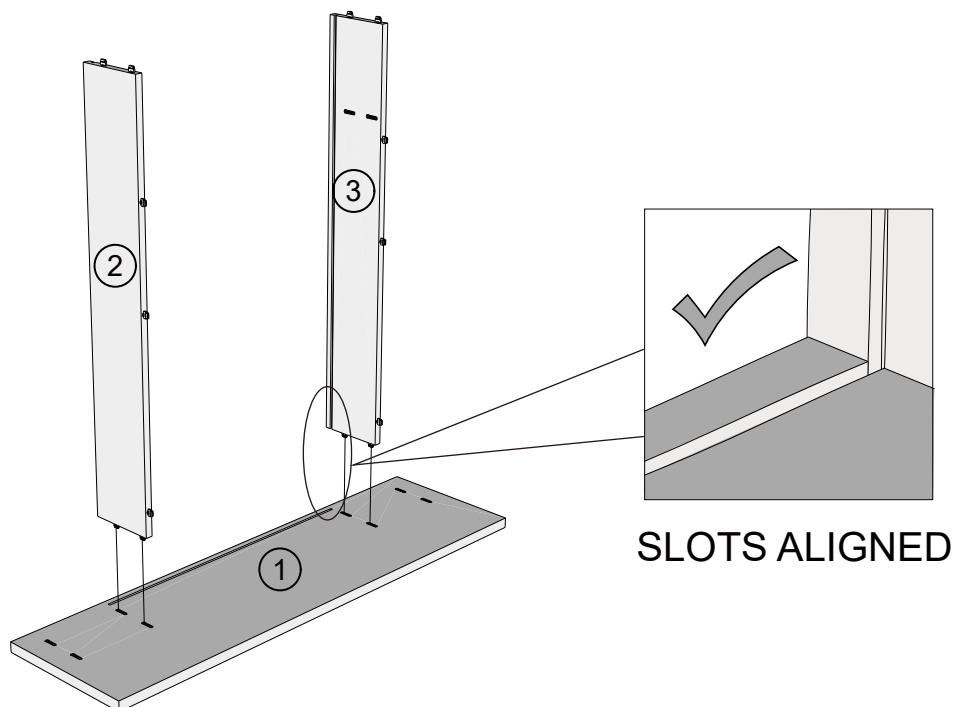

2

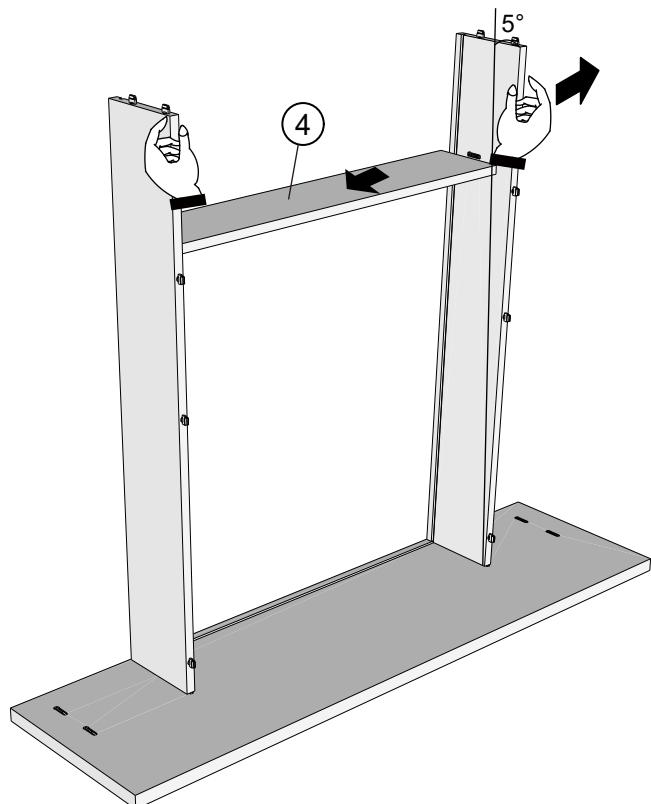


NEXT

LANGTON FIRE SURROUND


F13518
Assembly instructions

3

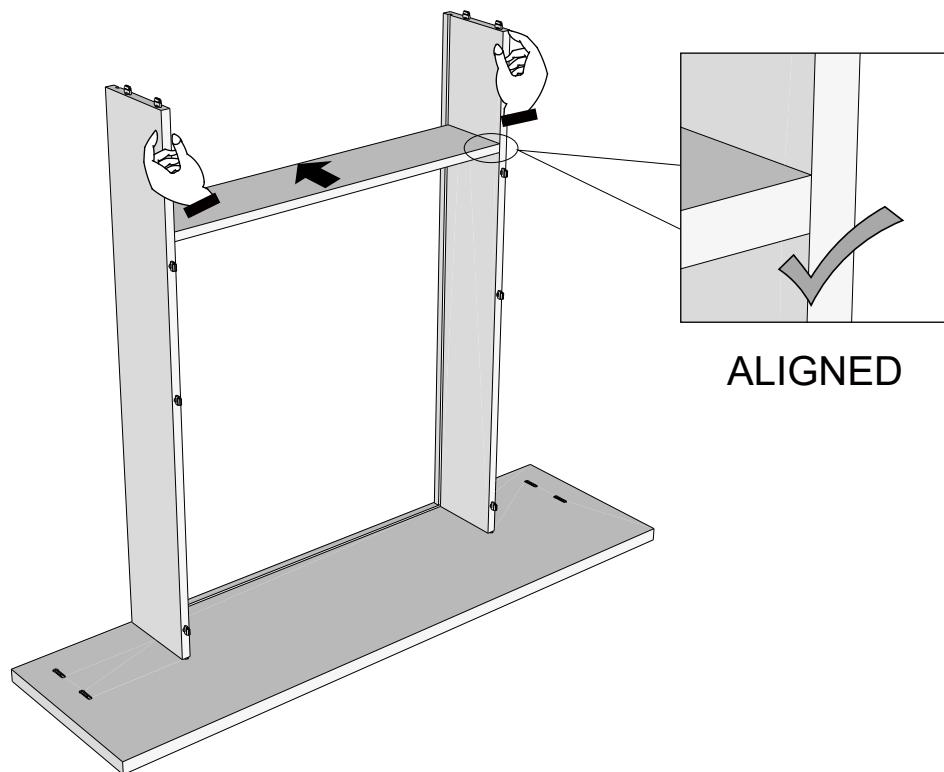

ALIGNED


4

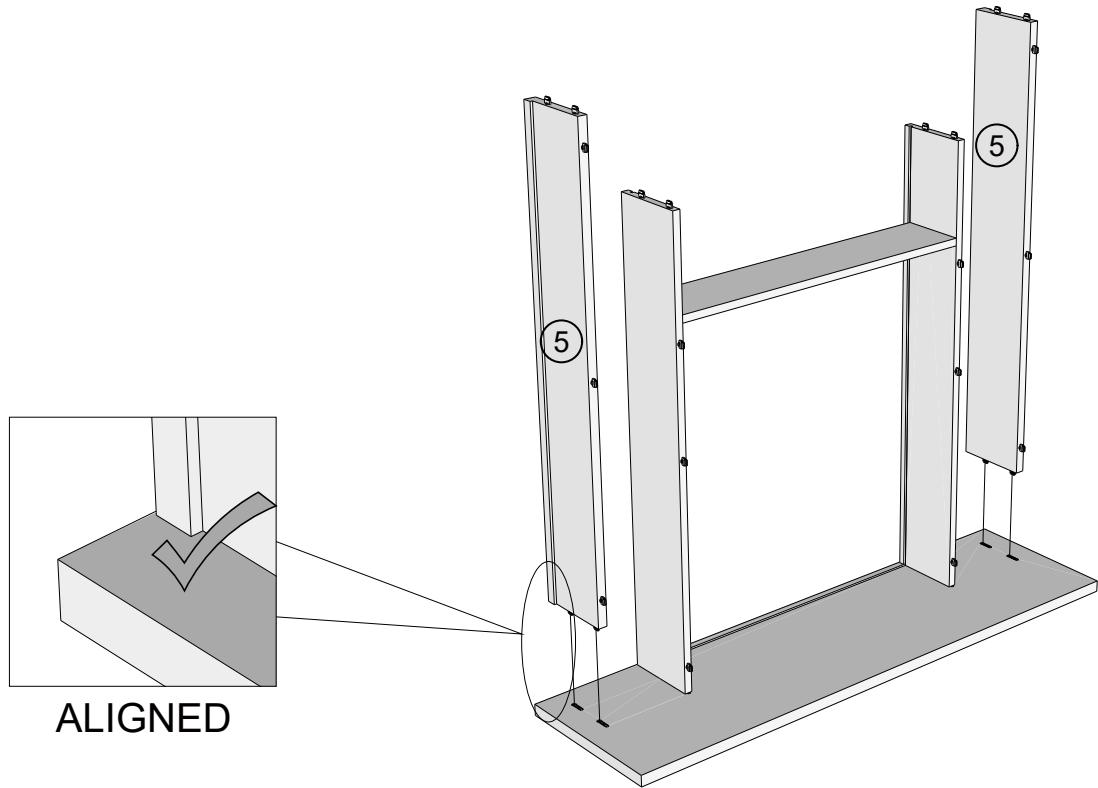


ALIGNED

NEXT**LANGTON FIRE SURROUND**
F13518
Assembly instructions

5

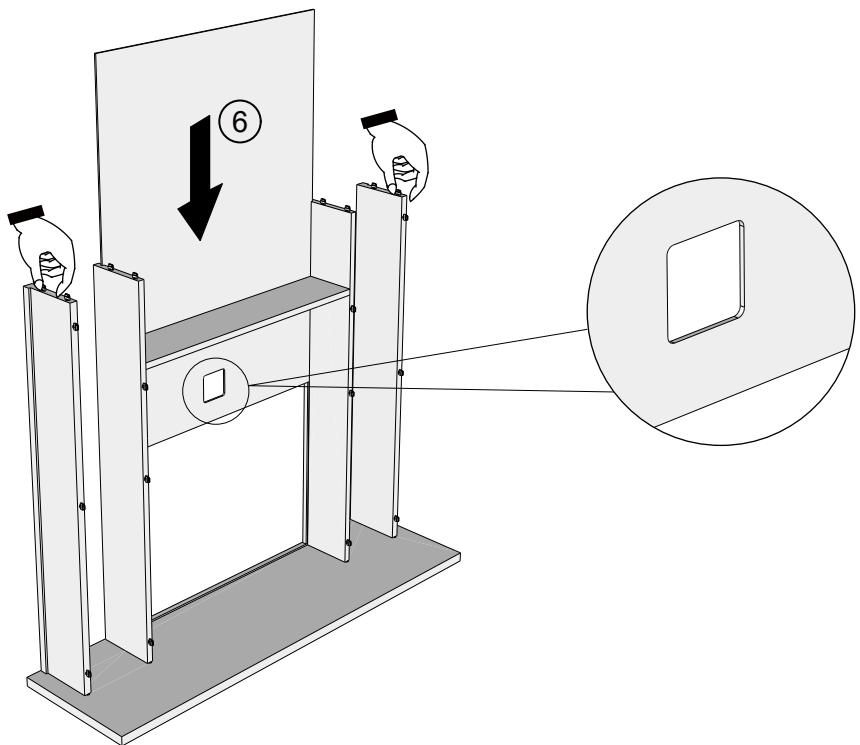

6

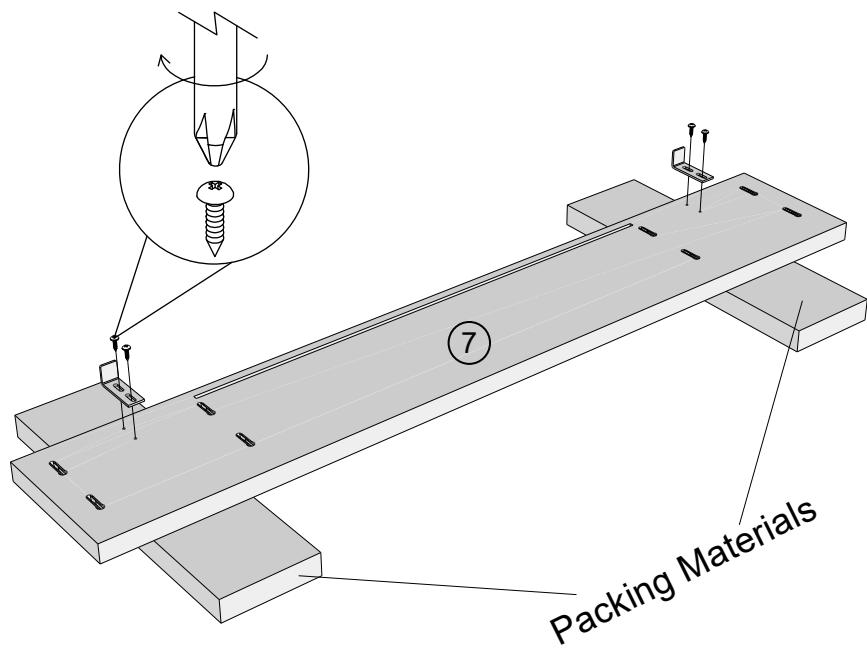


S41	Ø4 x 16mm	4	not supplied
N17	N/A	2	

NEXT


LANGTON FIRE SURROUND

F13518
Assembly instructions

7

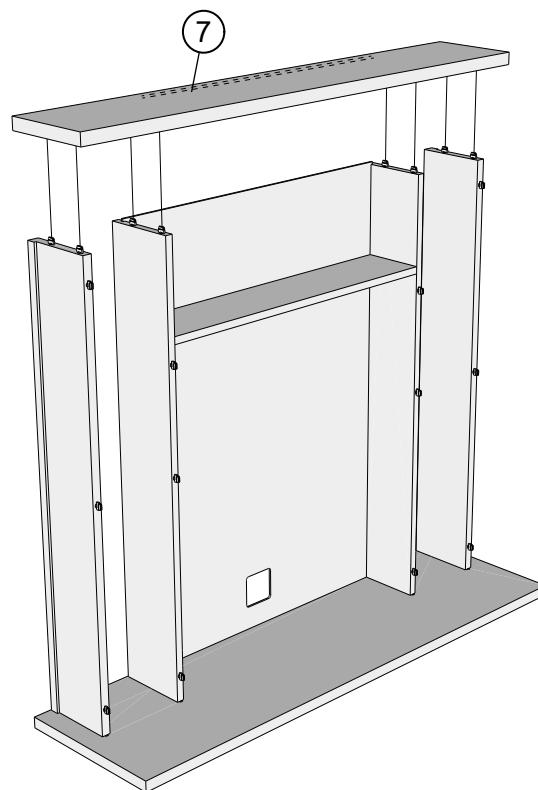


8

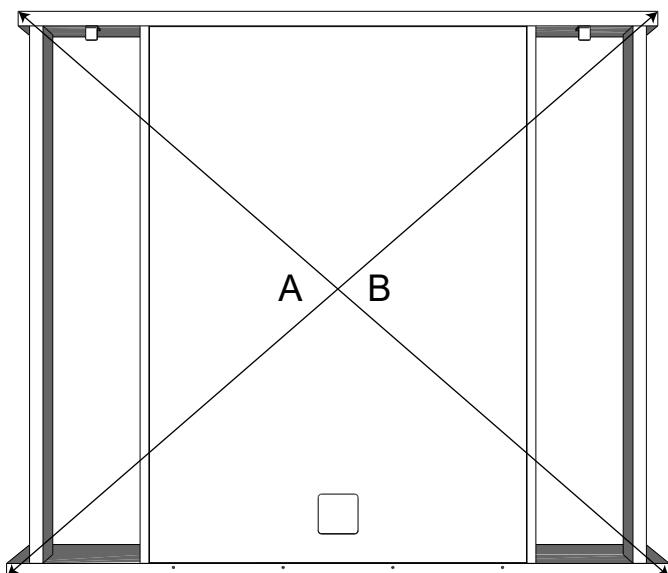

A=B

NEXT**LANGTON FIRE SURROUND**
F13518
Assembly instructions

9

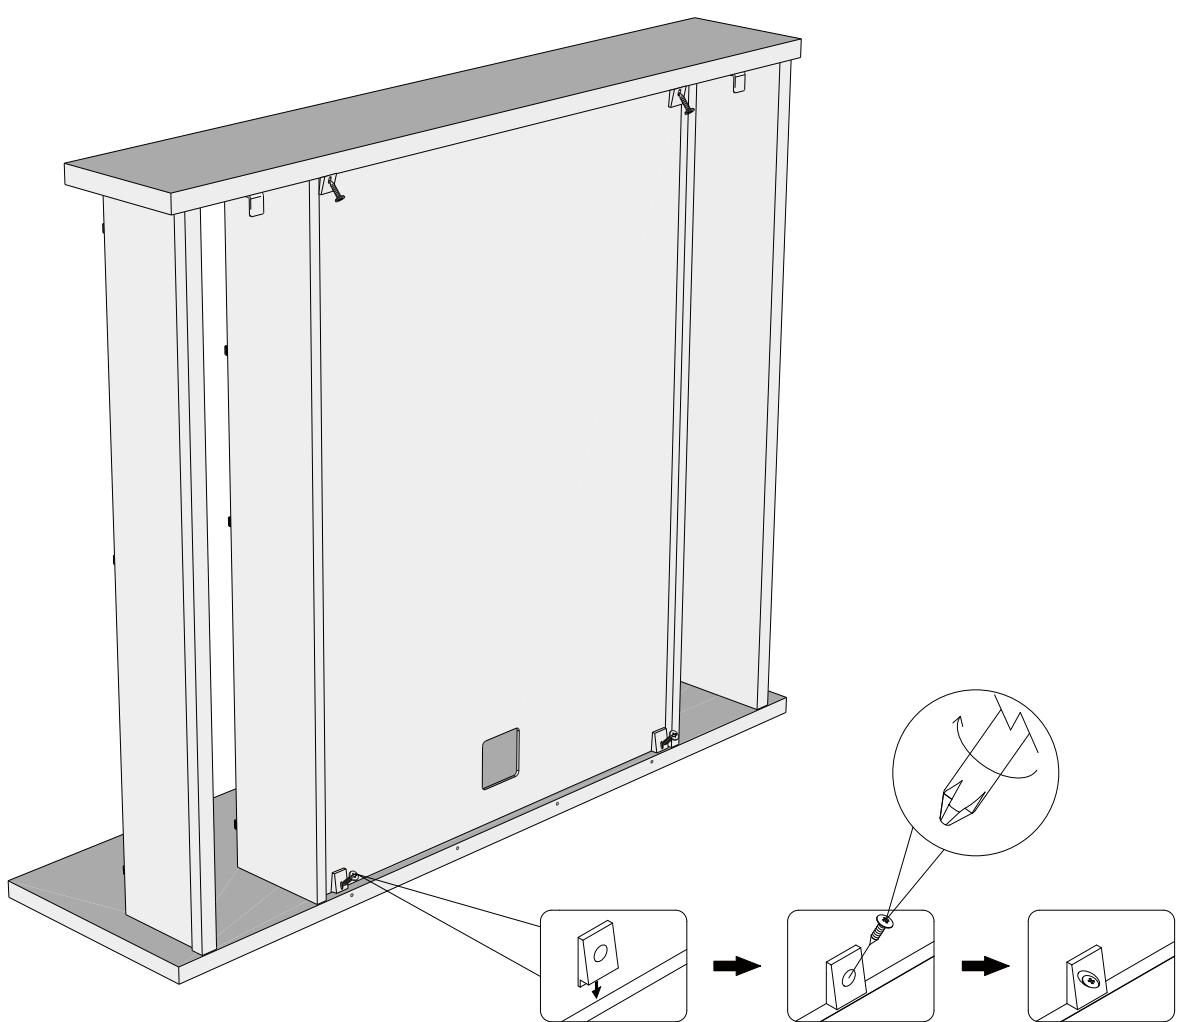


T38	N/A	4		 not supplied
-----	-----	---	---	---

10

1. Please check the height and distance of metal bracket as shown.
2. Drill four hole and insert wall plugs, then put the screw through the metal bracket into the wall


Warning:

Wall fixings are not included-please source suitable fixings for your wall type. If in doubt, please consult a qualified trades person.

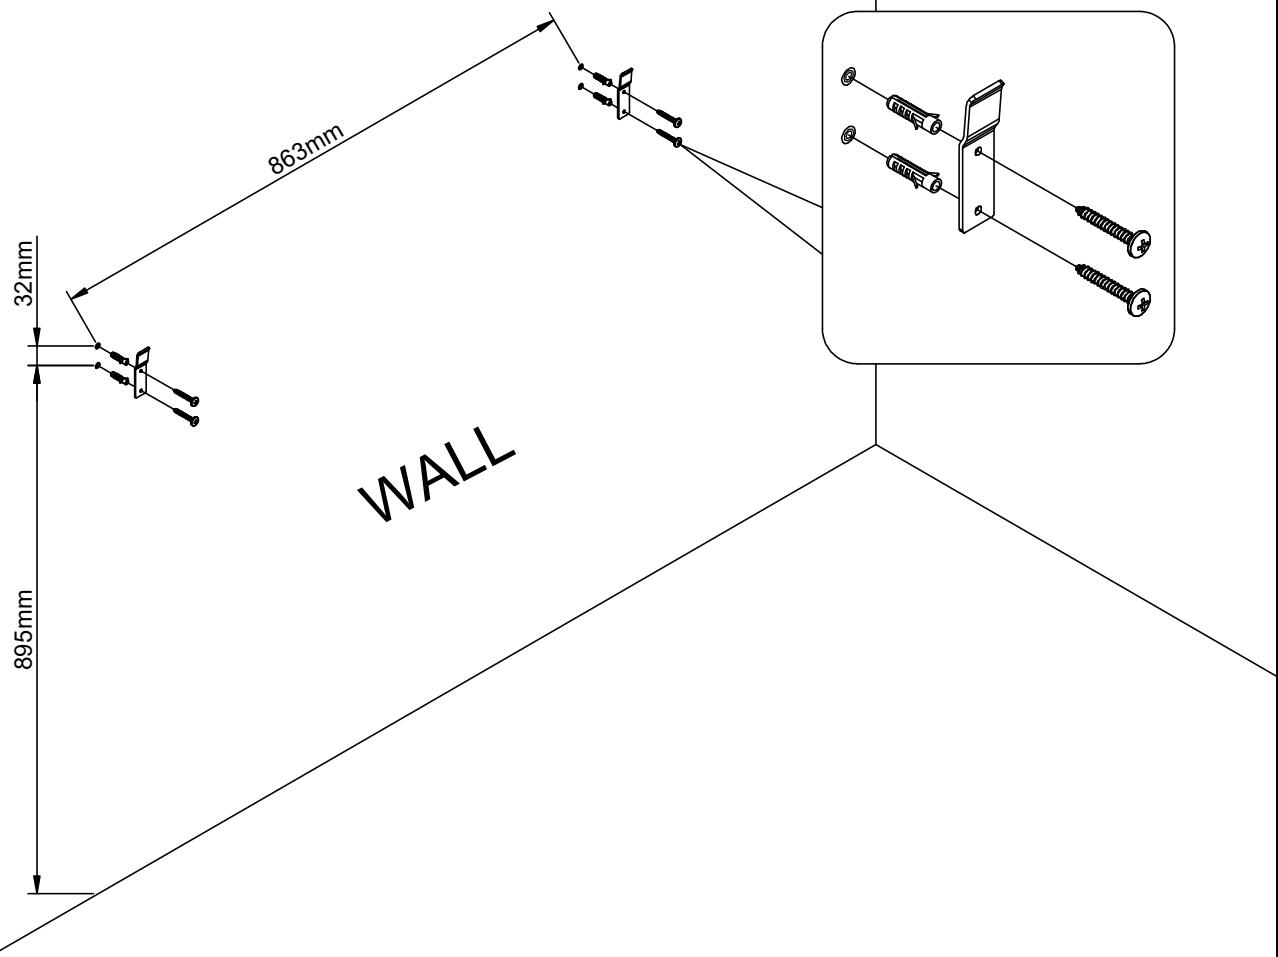

T41	N/A	2	
-----	-----	---	--


11

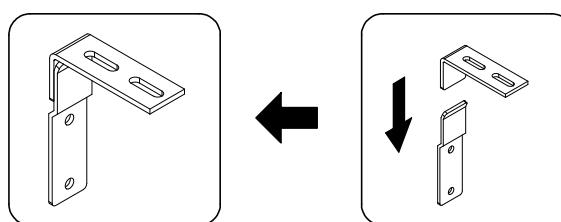

WALL




Hang the unit to the metal bracket as shown.

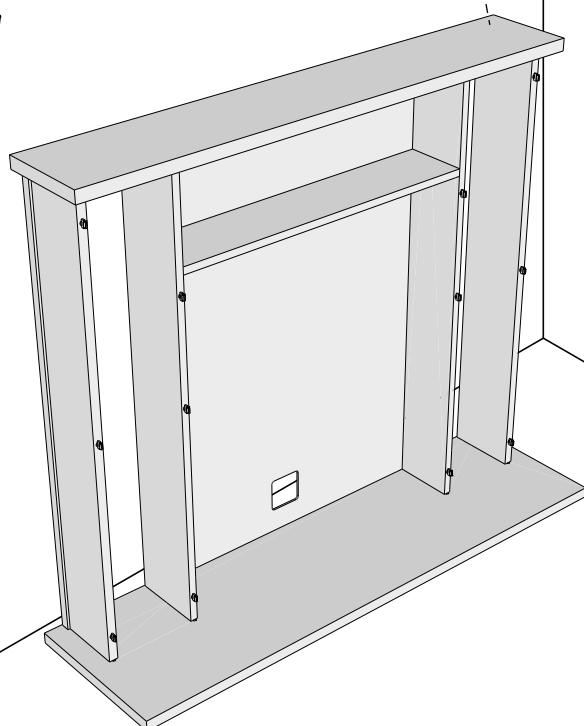

NEXT

LANGTON FIRE SURROUND
F13518
Assembly instructions






12

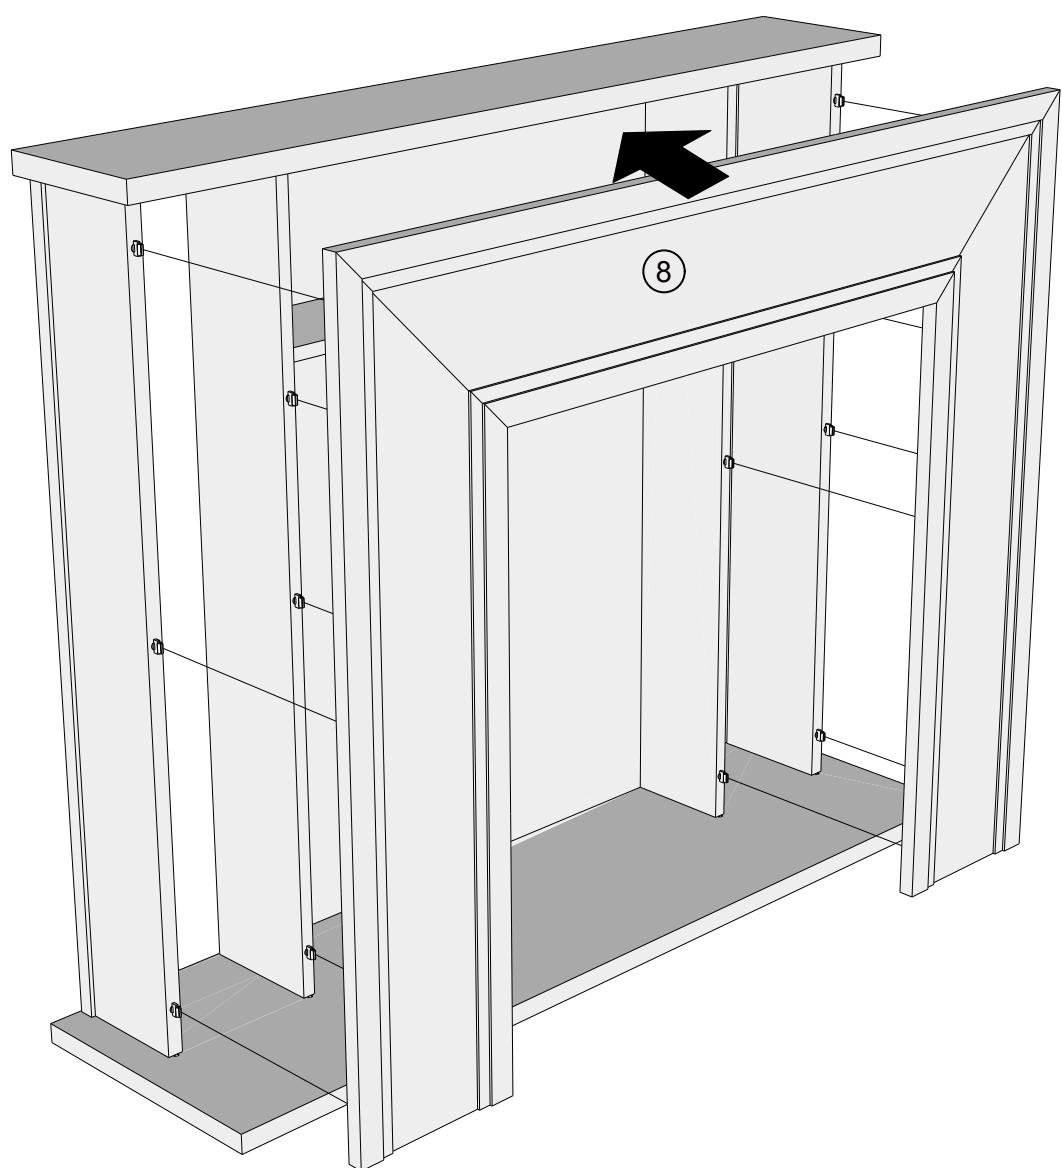

13

To disassemble:




Step1: Remove the plastic wedge (T38) from the back plate, and remove the screws from the rear of the panel(1);

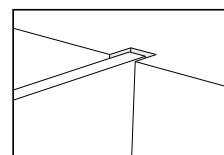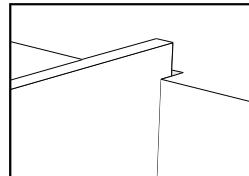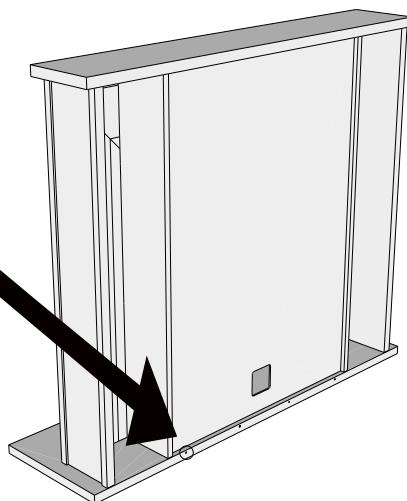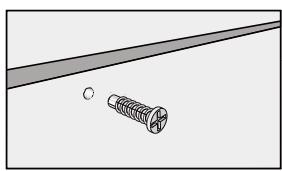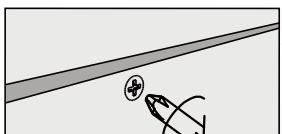

Step2: Press down the back panel so it is clear of the top panel slot;

14

Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels;

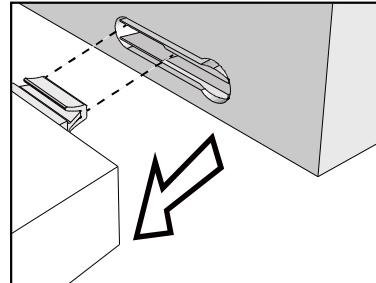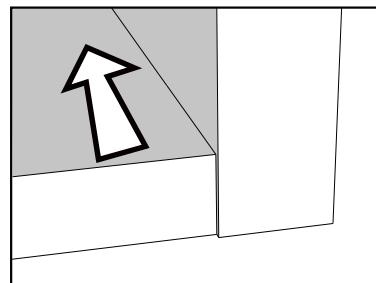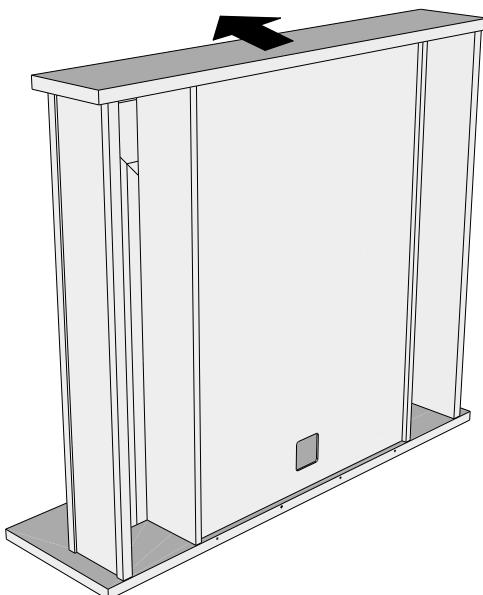


NEXT

LANGTON FIRE SURROUND
F13518

Actual product size

H99 x W116 x D33 cm

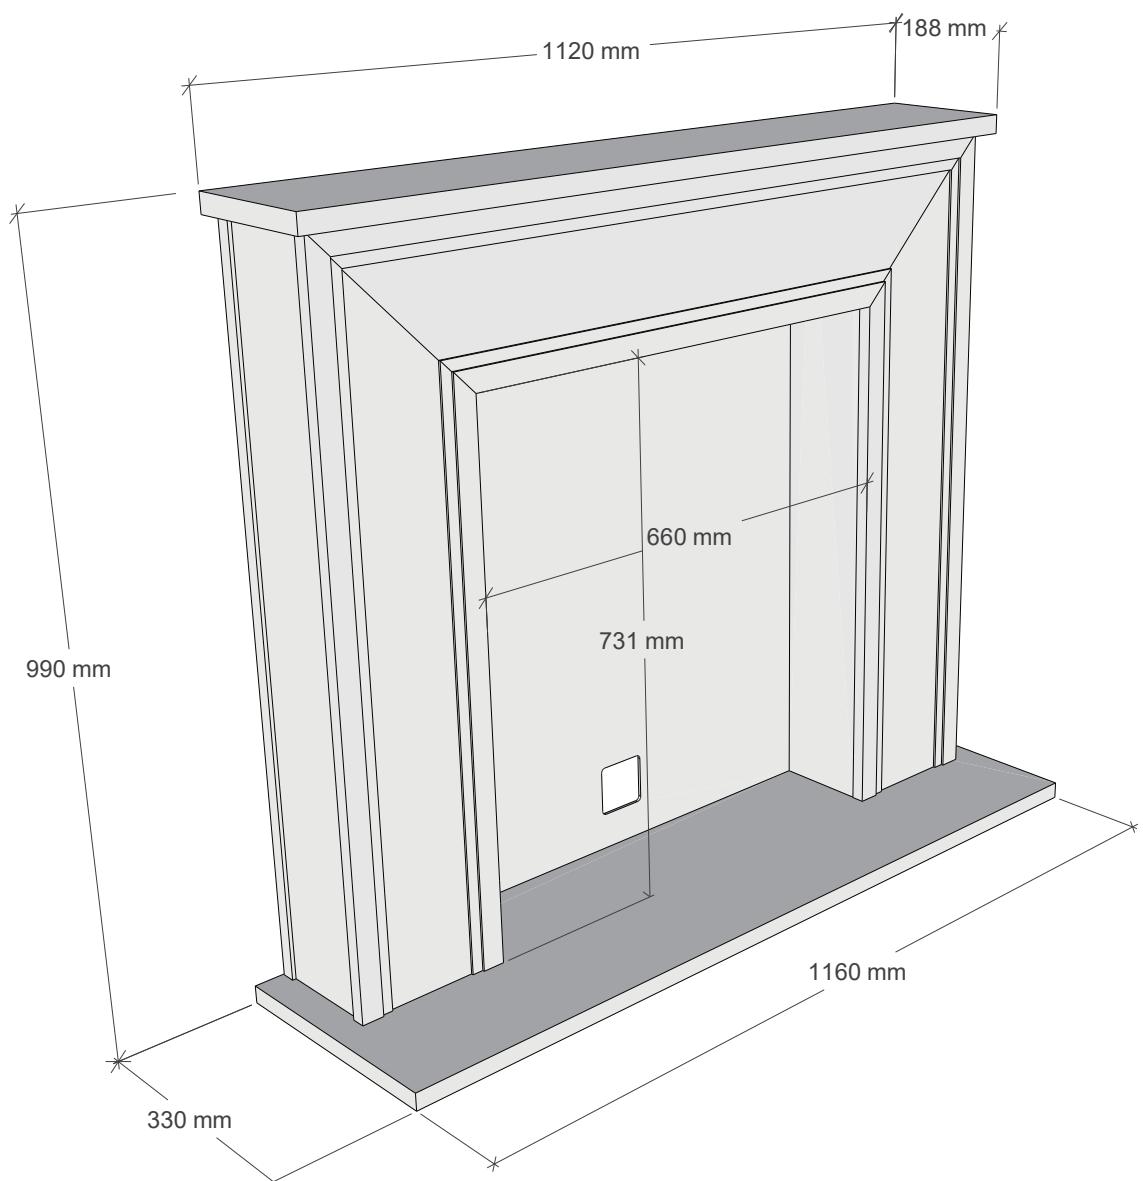

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services

Next Retail Ltd.

Desford Road,

Leicester,

LE19 4AT

To view our full furniture range please visit www.next.co.uk