
HOXTON / HOXTON LIGHT TEXTURE LONG JOHN COFFEE TABLE AL2048/F24930 Assembly instructions

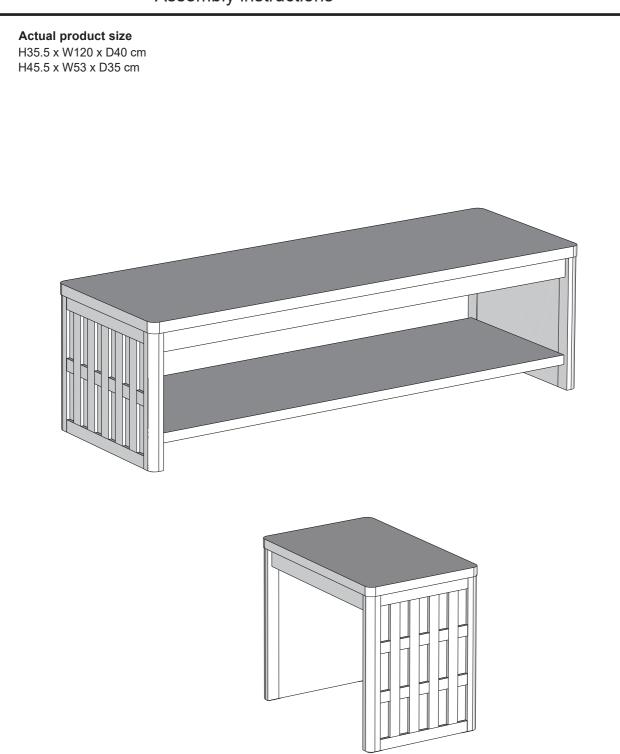

Need Help?

With: Assembly instruction

Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

HOXTON / HOXTON LIGHT TEXTURE LONG JOHN COFFEE TABLE **NEXT** AL2048/F24930 Assembly instructions

BEFORE YOU START

Number of people required to assemble

Two people are required to assemble this item



Time to assemble: 30 minutes



Tools required



not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recomement that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts


Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

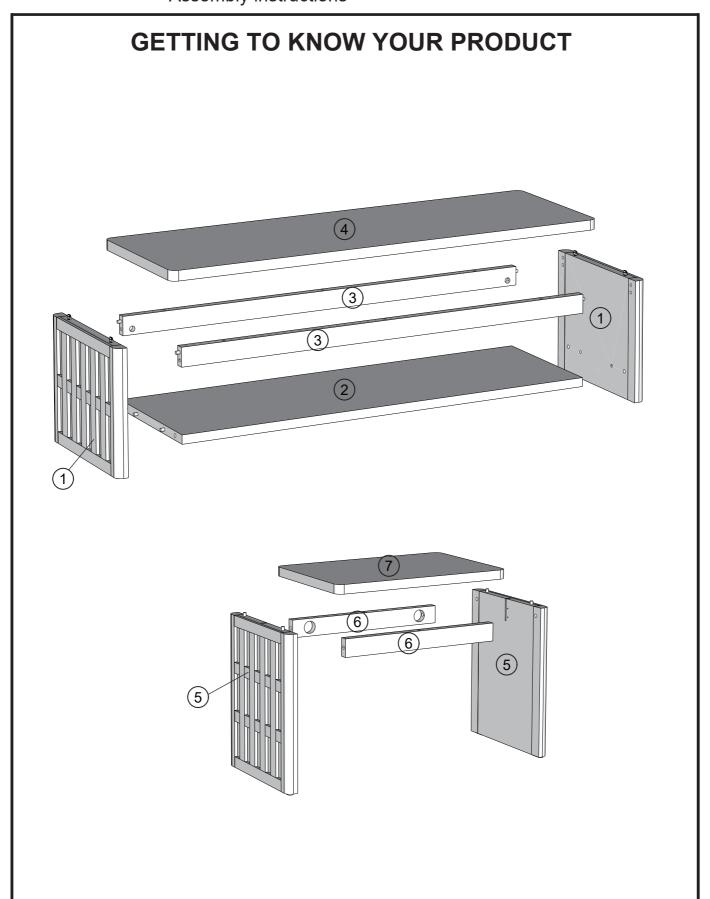



HOXTON / HOXTON LIGHT TEXTURE LONG JOHN COFFEE TABLE AL2048/F24930 Assembly instructions

Components supplied. Please use this guide if you require replacement parts.


Ref	Dimensions	Visual	Qty	Ctn
1	33 x39.5cm		2	1
2	37x113.5cm	0	1	1
3	5x113.5cm		2	1
4	40x120cm		1	1
5	34.5x43cm		2	1
6	5x46.5cm	9	2	1
7	35x53cm		1	1

NEXT FITTNGS ASSEMBLE INSTRUCTIONS

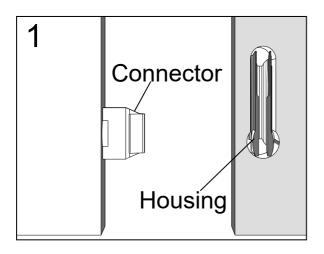

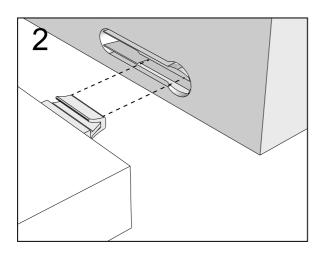

Push connector into housing to be jointed.

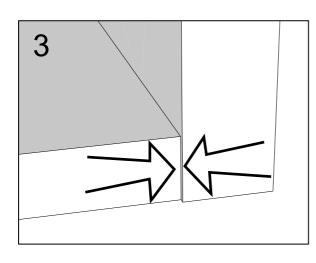


Make sure there is no gap between the panels.

HOXTON / HOXTON LIGHT TEXTURE LONG JOHN COFFEE TABLE AL2048/F24930 Assembly instructions


Fixtures and fittings supplied (actual size)


Ref	Ref Dimensions		Spare Qty
В3	Ø15 x 12mm	4	1
B12	Ø7.5 x 33mm	4	1
B24	324 Ø8.5 x 63mm		N/A
V83	Ø6 x 60mm	8	1
U93	Ø4 x 20mm	8	1
B25	Ø35 x 17mm	8	N/A

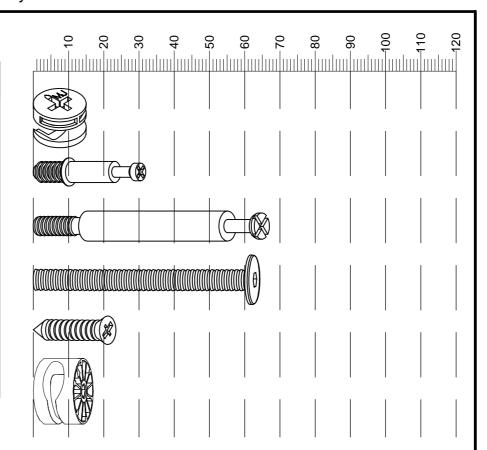



Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Qty	Spare Qty	Visual	
T1	N/A	1	N/A		
T7	N/A	1	N/A		
H29	N/A	2	N/A		

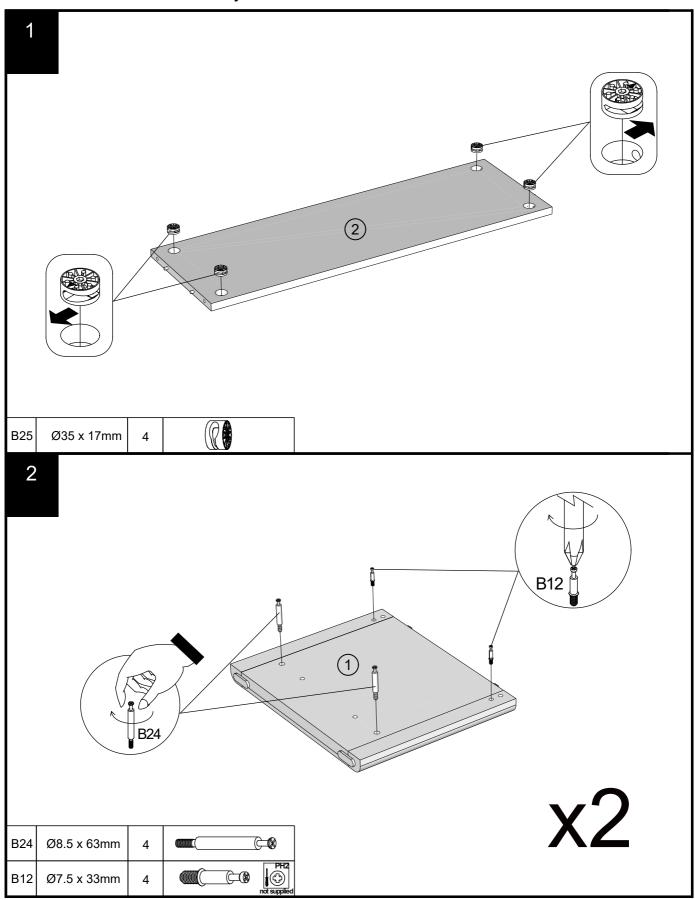


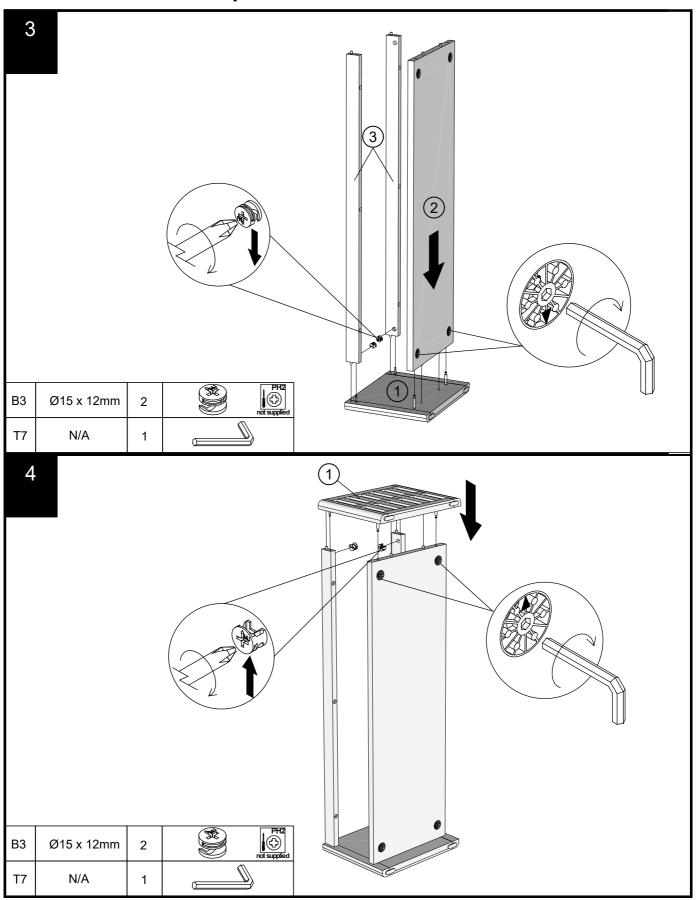


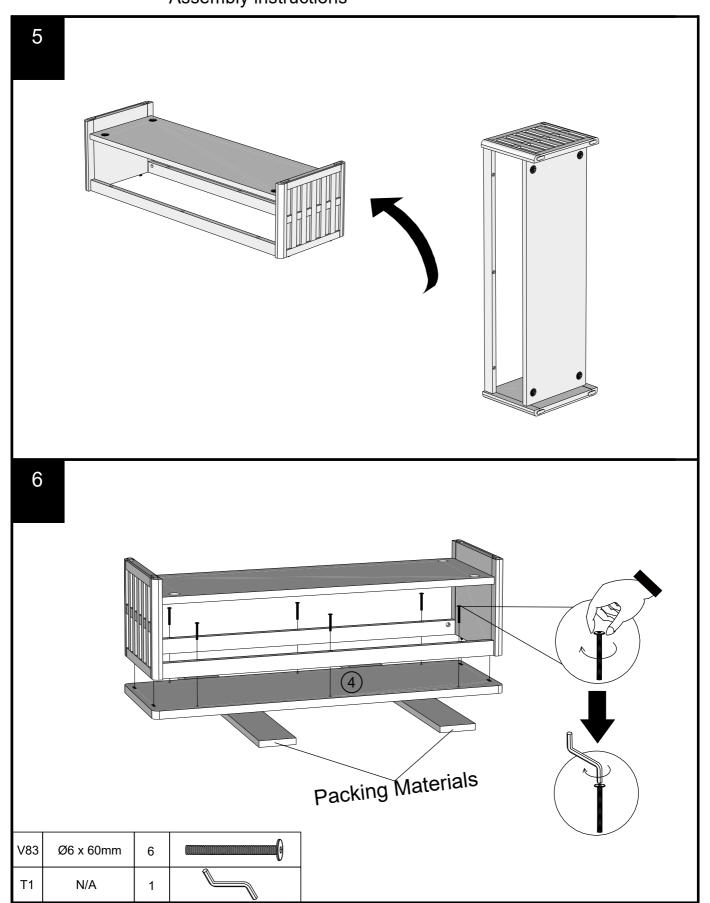


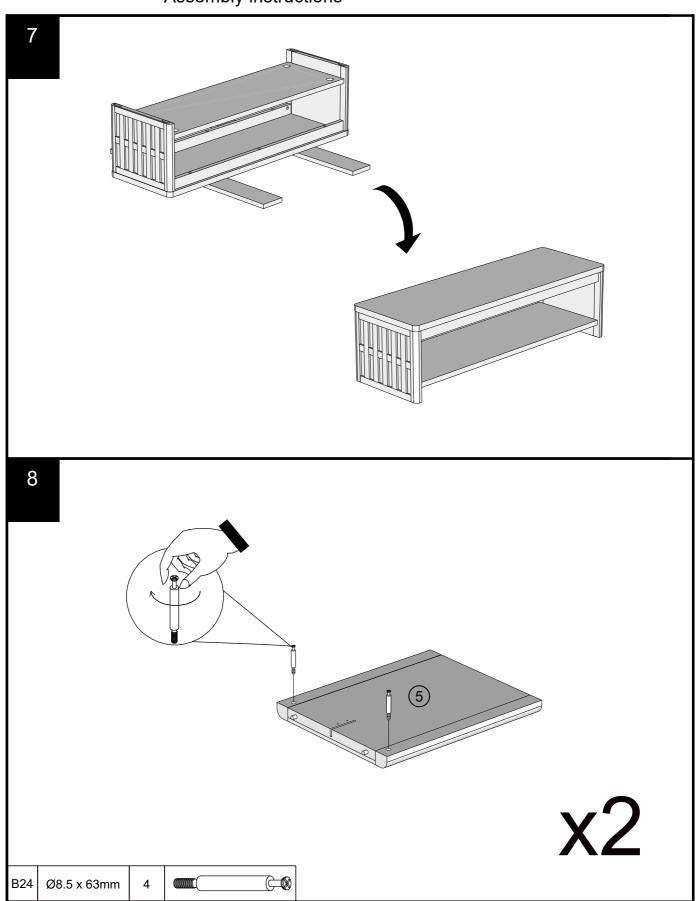

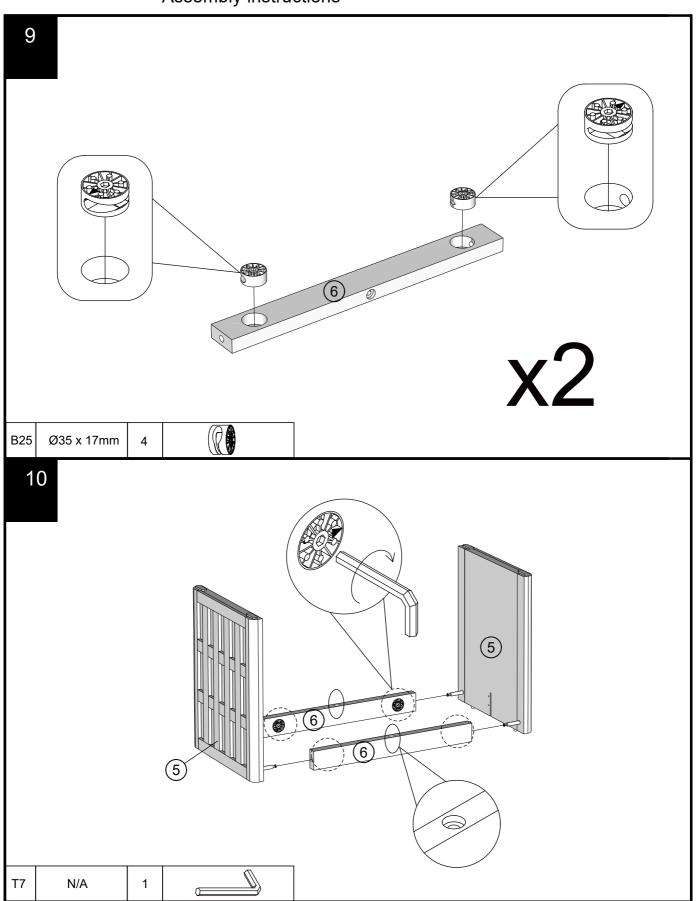

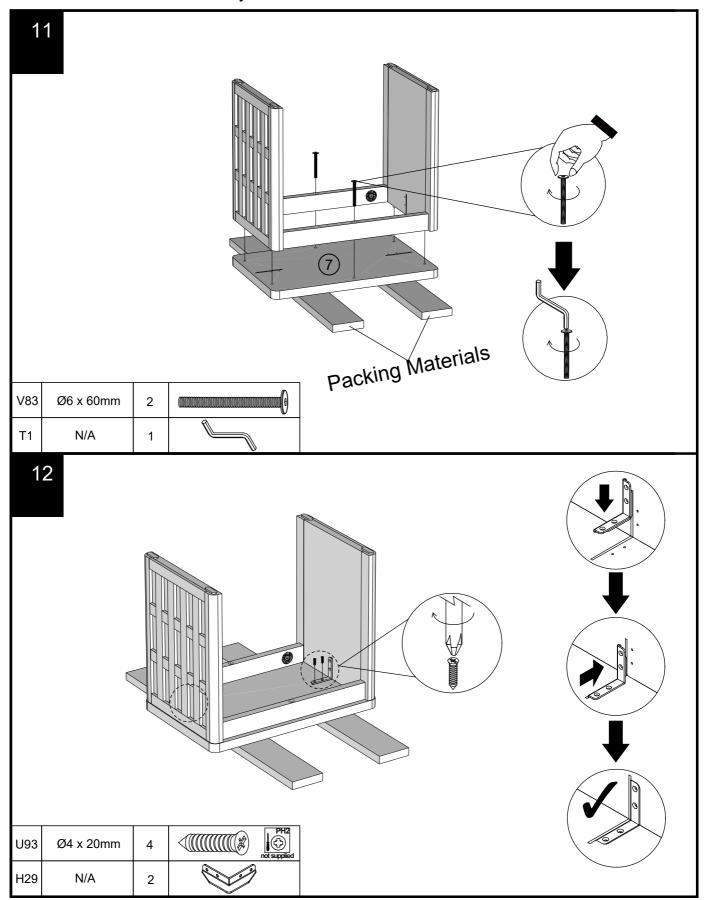

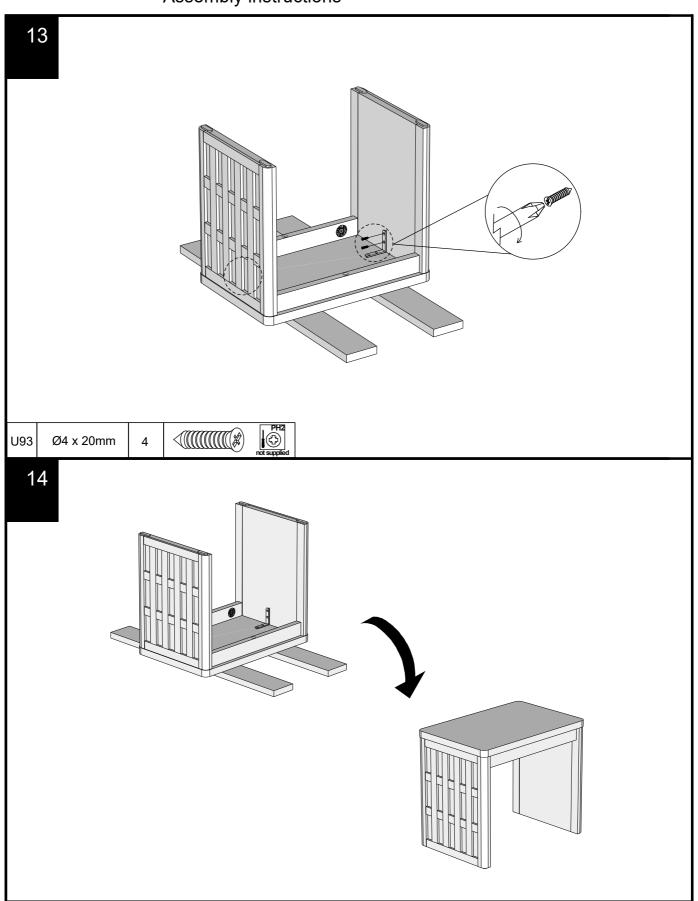

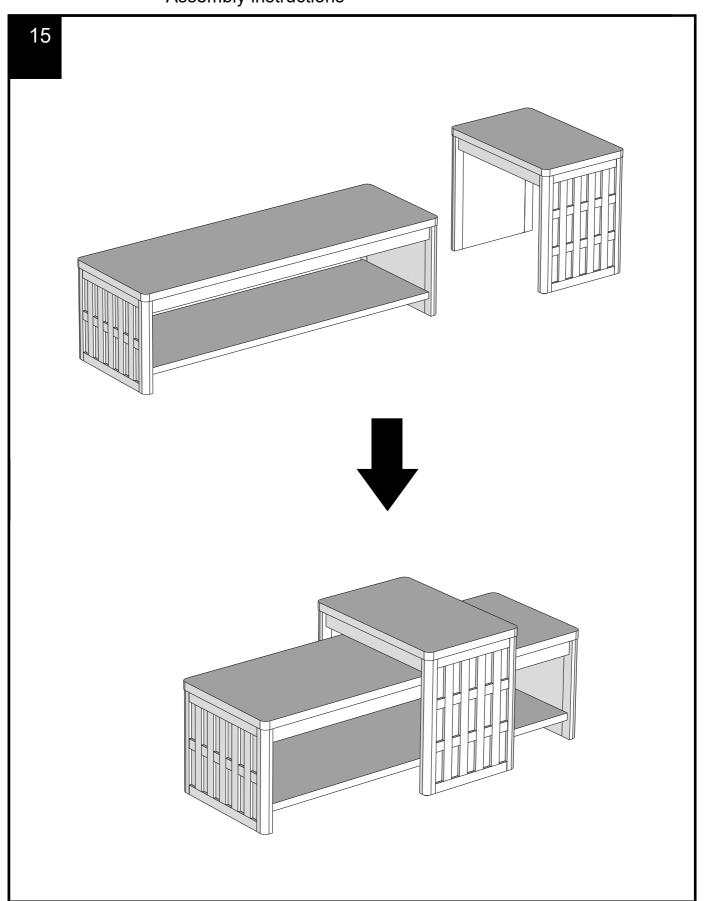


HOXTON / HOXTON LIGHT TEXTURE LONG JOHN COFFEE TABLE AL2048/F24930


16

To disassemble:

Step1: Remove the screws from the top panel

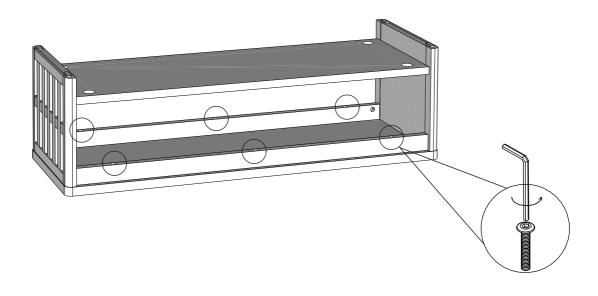


Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels;

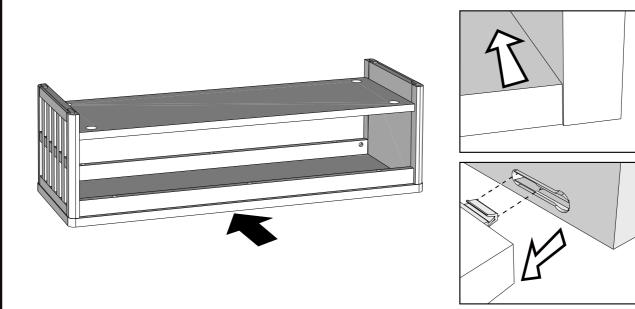

NEXT HOXTON / HOXTON

HOXTON / HOXTON LIGHT TEXTURE LONG JOHN COFFEE TABLE AL 2048/F24930

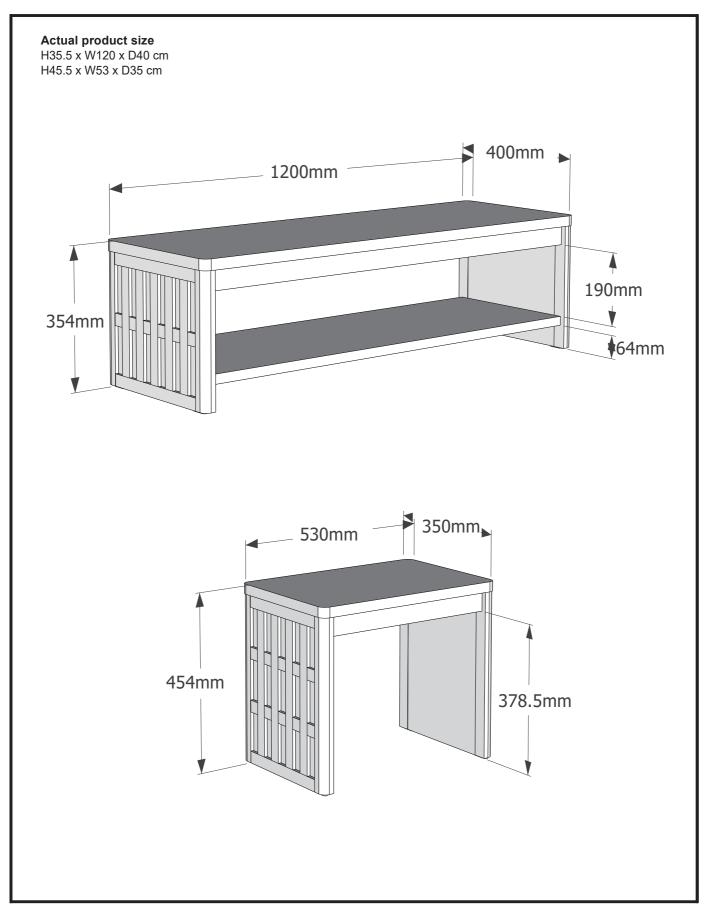

Produced in China for Next Retail Ltd. AL2048/F24930-2025-V1.

NEXT HOXTON / HOXTON LIGHT TEXTURE LONG JOHN COFFEE TABLE AL2048/F24930

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.


You can write to us at

Home Customer Services Next Retail Ltd. Desford Road, Leicester. LE19 4AT

To view our full furniture range please visit www.next.co.uk

HOXTON / HOXTON LIGHT TEXTURE LONG JOHN COFFEE TABLE REPACK INSTRUCTION



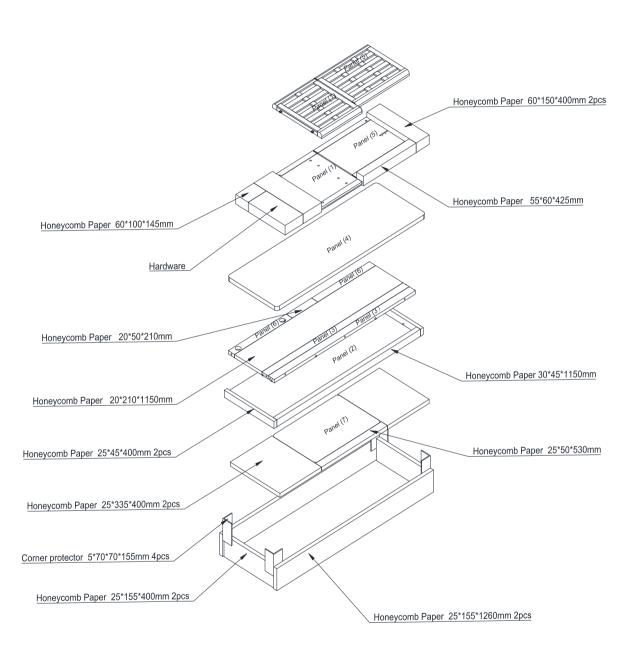

Next Retail Ltd, Desford Road, Leicester, LE19 4AT