
NEXT

FLINTON ACCENT CHAIR N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-F66264-H20238-H20239-F66222-H59775

Assembly instructions

Actual product size H86×W71×D85.5cm

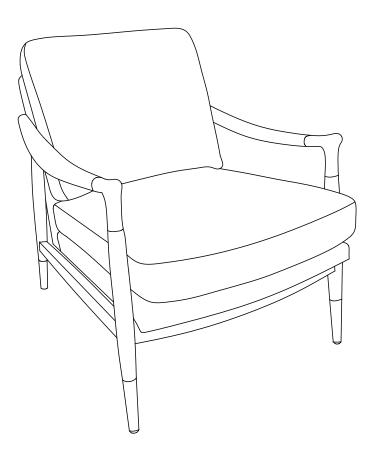

Need Help?

With: Assembly instruction Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

H59775-2025-V1.

N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-F66264-H20238-H20239-F66222-

N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-H59775-F66264-F66222-H20238-H20239

BEFORE YOU START

Assembly instructions

Number of people required to assemble One people are required to assemble this item

Time to assemble: 30 minutes





| Item No. | Fabric name - leg | Fabric composition |
|----------|------------------------------------------------|--------------------|
| F66222 | ALASKA LEOPARD FAUX FURWALNUT FRAME | 100% polyester |
| F66264 | TWEEDY BOUCLE MINK-WALNUT FRAME | 100% polyester |
| H20238 | PLUSH CHENILLE LIGHT NATURAL-OAK EFFECT FRAME | 100% polyester |
| H20239 | SOFT VELVET NAVY -WALNUT FRAME | 100% polyester |
| B70641 | DISTRESSED FAUX LEATHER BLACK-BLACK FRAME | 100% polyester |
| H59775 | MONZA FAUX LEATHER DARK GREY-WALNUT FRAME | 100% polyester |
| 4873T6 | SOFT VELVET RUST - WALNUT FRAME | 100% polyester |
| D91483 | VINTAGE FAUX LEATHER LIGHT BROWN -WALNUT FRAME | 100% polyester |
| M63147 | PLUSH CHENILLE MOSS - WALNUT FRAME | 100% polyester |
| N57554 | PLUSH CHENILLE SLATE BLUE -WALNUT FRAME | 100% polyester |
| U34237 | TWEEDY PLAIN LIGHT NATURAL - OAK EFFECT FRAME | 100% polyester |

Do's Warnings

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

We suggest you retain these instructions for future reference. Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground Please periodically check all fittings and re-tighten as necessary. surface to protect it from damage. We recommend that the packaging Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour. Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

You can write to us at

Home Customer Services Next Retail Ltd Desford Road. Leicester, LE19 4AT

To view our full furniture range please visit www.next.co.uk


Need Help?

With: Assembly instruction Missing or damaged parts

CALL: 0333 777 8999

N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-F66264-H59775-F66222-H20238-H20239 Assembly instructions

GETTING TO KNOW YOUR PRODUCT

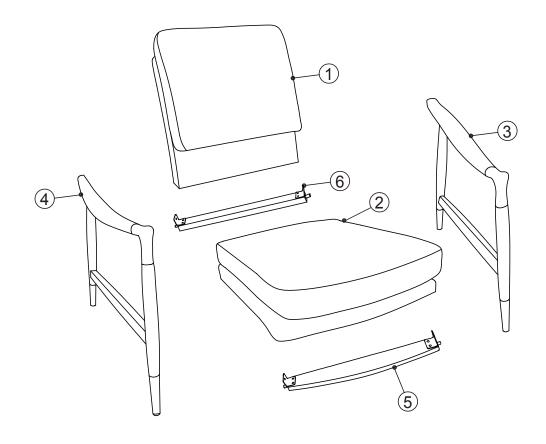

Components supplied. Please use this guide if you require replacement parts.

| Ref | Dimension | Visual | Qty | Ref | Dimension | Visual | Qty |
|-----|----------------------------|--------|-----|-----|-------------------------|---------------|-----|
| 1 | Back H64xW59xD23CM | | 1 | 5 | Front rail 61*8*6CM | | 1 |
| 2 | Seat H21xW59.5xD62CM | | 1 | 6 | Rear rail 61x4.5x7CM | (2 | 1 |
| 3 | Left Panel 78*63*7.5CM | | 1 | | | | |
| 4 | Right Panel 78*63*7.5CM | | 1 | | | | |


N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-F66264-H59775-F66222-H20238-H20239


Assembly instructions Fixtures and fittings 100 10 60 80 90 110 120 130 140 150 160 mm supplied (actual size) Ref Dimension Qty Spare Α M8 x 20mm 1 В 2 1 M8 x45mm C 4 M8 x60mm 1 10 D 1 12_{mm} E 10 1 22 mm F 6 x157mm 0 1

N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-F66264-H59775-F66222-H20238-H20239


Assembly instructions




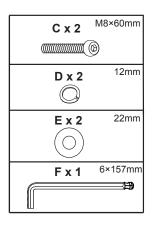

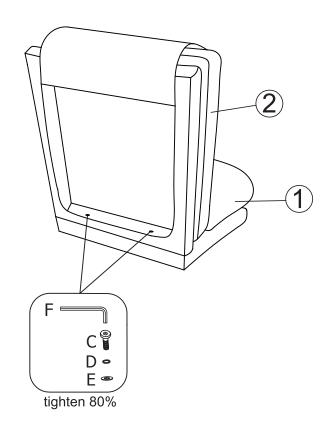

2.

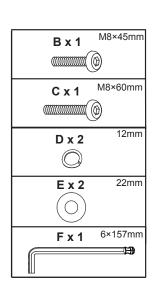


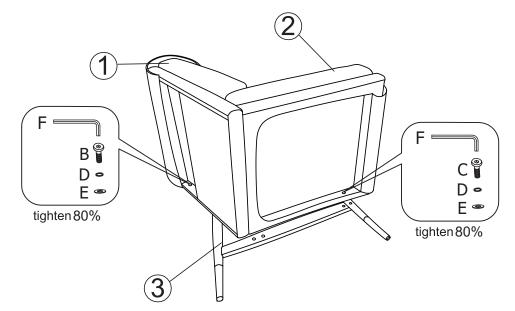


N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-F66264-H59775-F66222-H20238-H20239


Assembly instructions




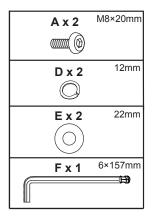

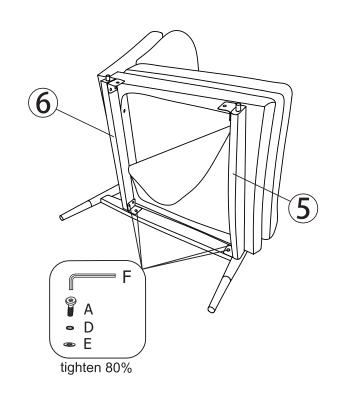




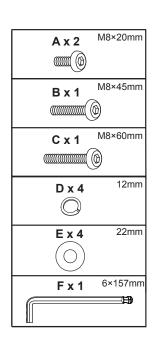

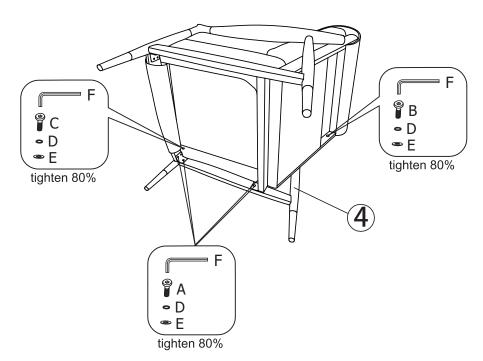


Assembly instructions



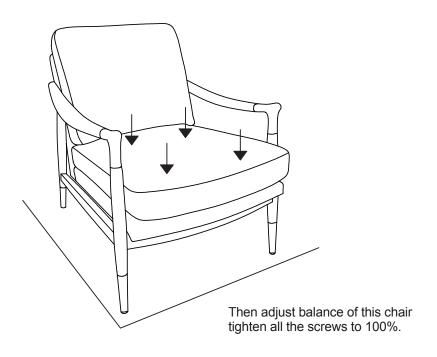



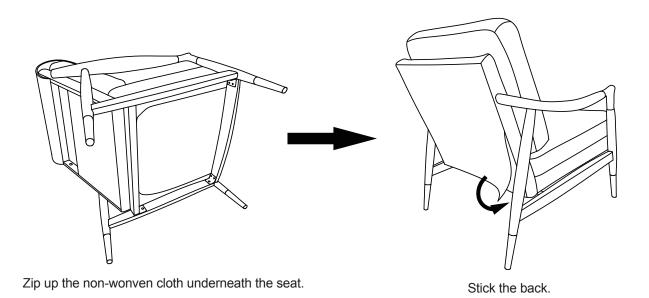

N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-F66264-H59775-F66222-H20238-H20239

NEXT

Assembly instructions

FLINTON ACCENT CHAIR N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6 -D91483-M63147-U34237-F66264-H20238-H20239-F66222-H59775

Assembly instructions

Actual product size H86×W71×D85.5cm

CAUTION: Maximum weight capacity of this chair is 130kg.

