


# NEXT

HEWITT DINING CHAIR-  
N52326-N52324-Q96151-B65170-AH9247-AB7800-AB9473-F83573-  
W61362-W63752-F83560

Assembly instructions

Actual product size  
H80 x W61 x D59.5cm

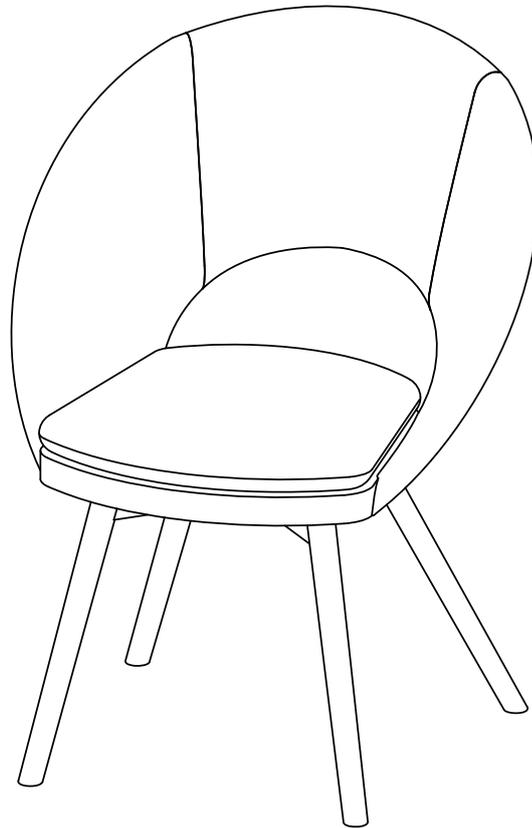

## Need Help ?

With: Assembly instruction  
Missing or damaged parts  
CALL: 0333 777 8999

**IMPORTANT-RETAIN FOR FUTURE REFERENCE**

## BEFORE YOU START

Number of people required to assemble

Two people are required to assemble this item

**Time to assemble:** 30 minutes



Item No.	Fabric name - leg	Composition
N52326	CASUAL BOUCLE LIGHT NATURAL - SMOKED OAK	95% polyester, 5% acrylic
N52324	TWEEDY PLAIN LIGHT NATURAL - SMOKED OAK	100% polyester
Q96151	PLUSH CHENILLE MOSS - SMOKED OAK	100% polyester
B65170	SOFT VELVET MARINE BLUE - SMOKED OAK	100% polyester
AB9473	SOFT WEAVE DOVE - OAK HAYFORD FINISH	100% polyester
AB7800	COTSWOLD CHENILLE RASBERRY - SMOKED OAK	100% polyester
AH9247	TWEEDY PLAIN NATURAL - HAYFORD FINISH	100% polyester
F83573	WOVEN CHECKERBOARD BLACK & WHITE - SMOKED OAK	95% polyester, 5% linen
W61362	TWEEDY BOUCLE MINK- SMOKED OAK	100% polyester
W63752	LINEN LOOK LEOPARD OYSTER - SMOKED OAK	95% polyester, 5% linen
F83560	DRY HANDLE BOUCLE RUST & CREAM - HAYFORD FINISH	100% polyester

### Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

### Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

### Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

### Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground. Please periodically check all fittings and re-tighten as necessary.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

### Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

### You can write to us at

Home Customer Services  
 Next Retail Ltd.  
 Desford Road,  
 Leicester,  
 LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)

## Need Help ?


With: Assembly instruction  
 Missing or damaged parts  
**CALL: 0333 777 8999**

# HEWITT DINING CHAIR- N52326-N52324-Q96151-B65170-AH9247-AB7800-AB9473-F83573- W61362-W63752-F83560

Assembly instructions


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	610x570mm		1	1
2	730x405mm		1	1
3	730x405mm		1	1
4	480x470mm		1	1

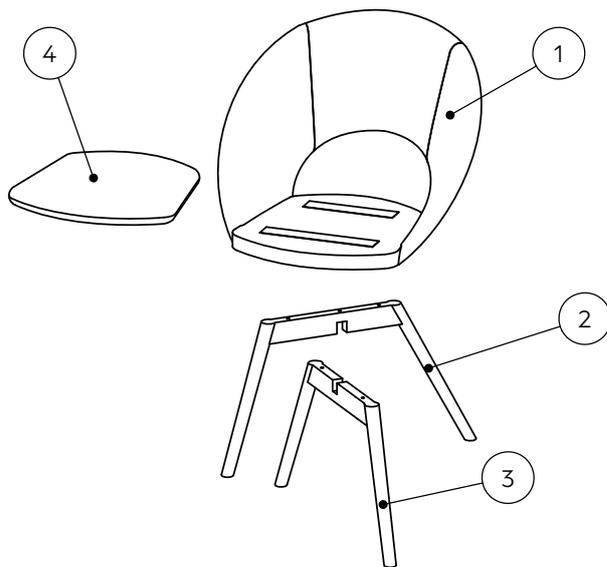

### Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
A	M6x18mm	4	1
B	M6x60mm	5	1

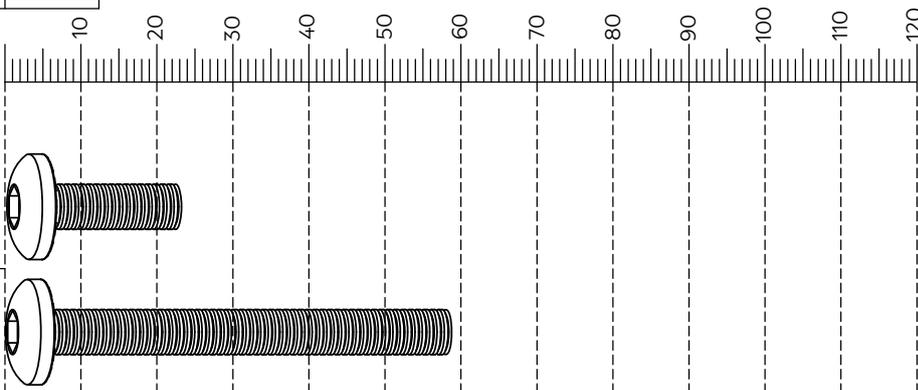


Fixtures and fittings supplied (not to scale)				
Ref	Dimensions	Qty	Spare Qty	Visual
C	5mm	1		
D	Ø14mm	4	1	
E	Ø18mm	5	1	


Fixtures and fittings supplied (not to scale)				
Ref	Dimensions	Qty	Spare Qty	Visual
F	150x150x3mm	1		
G	Ø25mm	4	2	
H	Ø10mm	4	1	

HEWITT DINING CHAIR-  
 N52326-N52324-Q96151-B65170-AH9247-AB7800-AB9473-F83573-  
 W61362-W63752-F83560  
 Assembly instructions

1.

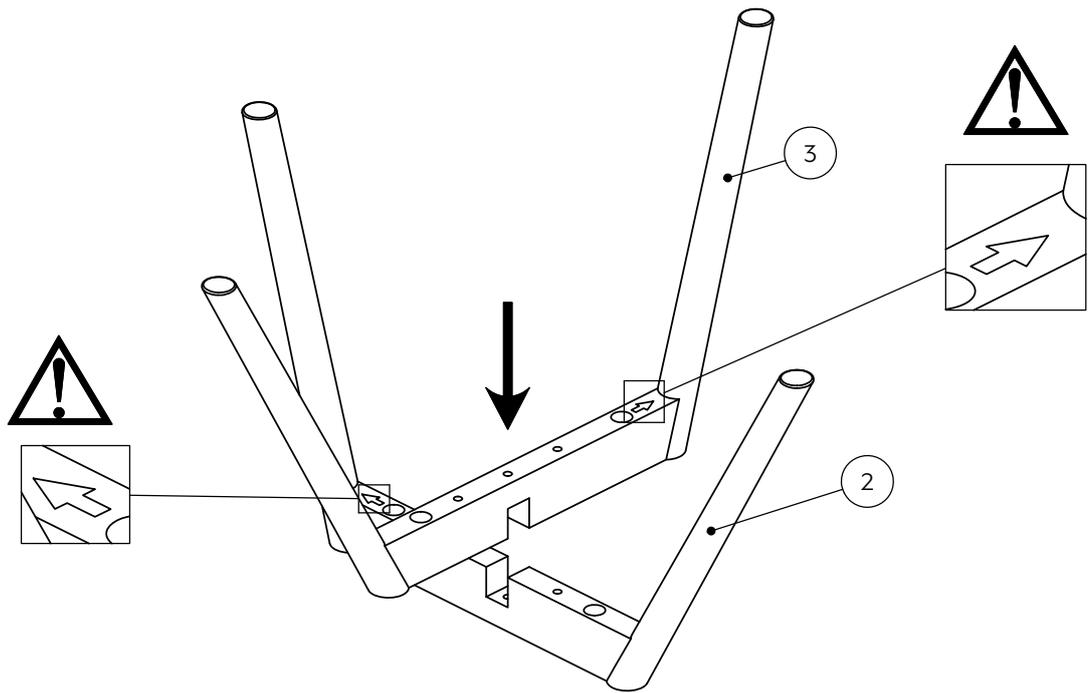


2.

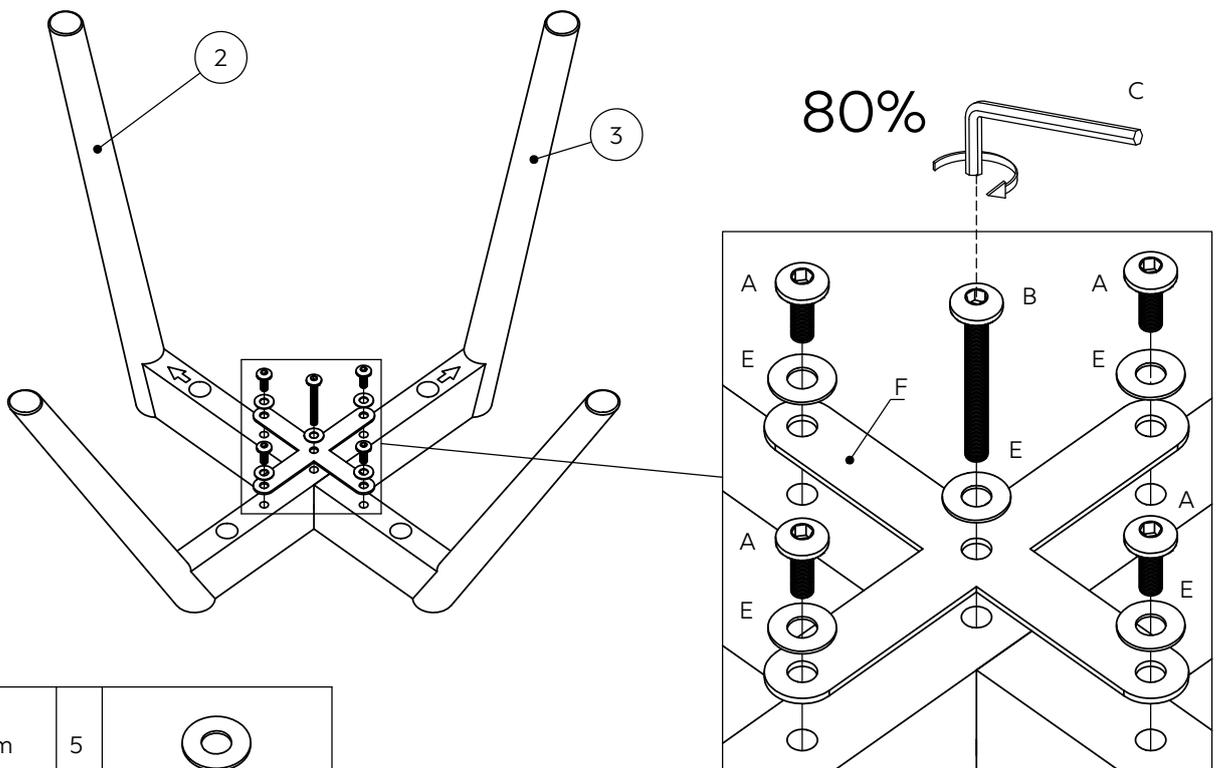

E	Ø18mm	5					
C	5mm	1		F	150x150x3mm	1	
A	M6x18mm	4		B	M6x60mm	1	



HEWITT DINING CHAIR-  
 N52326-N52324-Q96151-B65170-AH9247-AB7800-AB9473-F83573-  
 W61362-W63752-F83560  
 Assembly instructions


3.

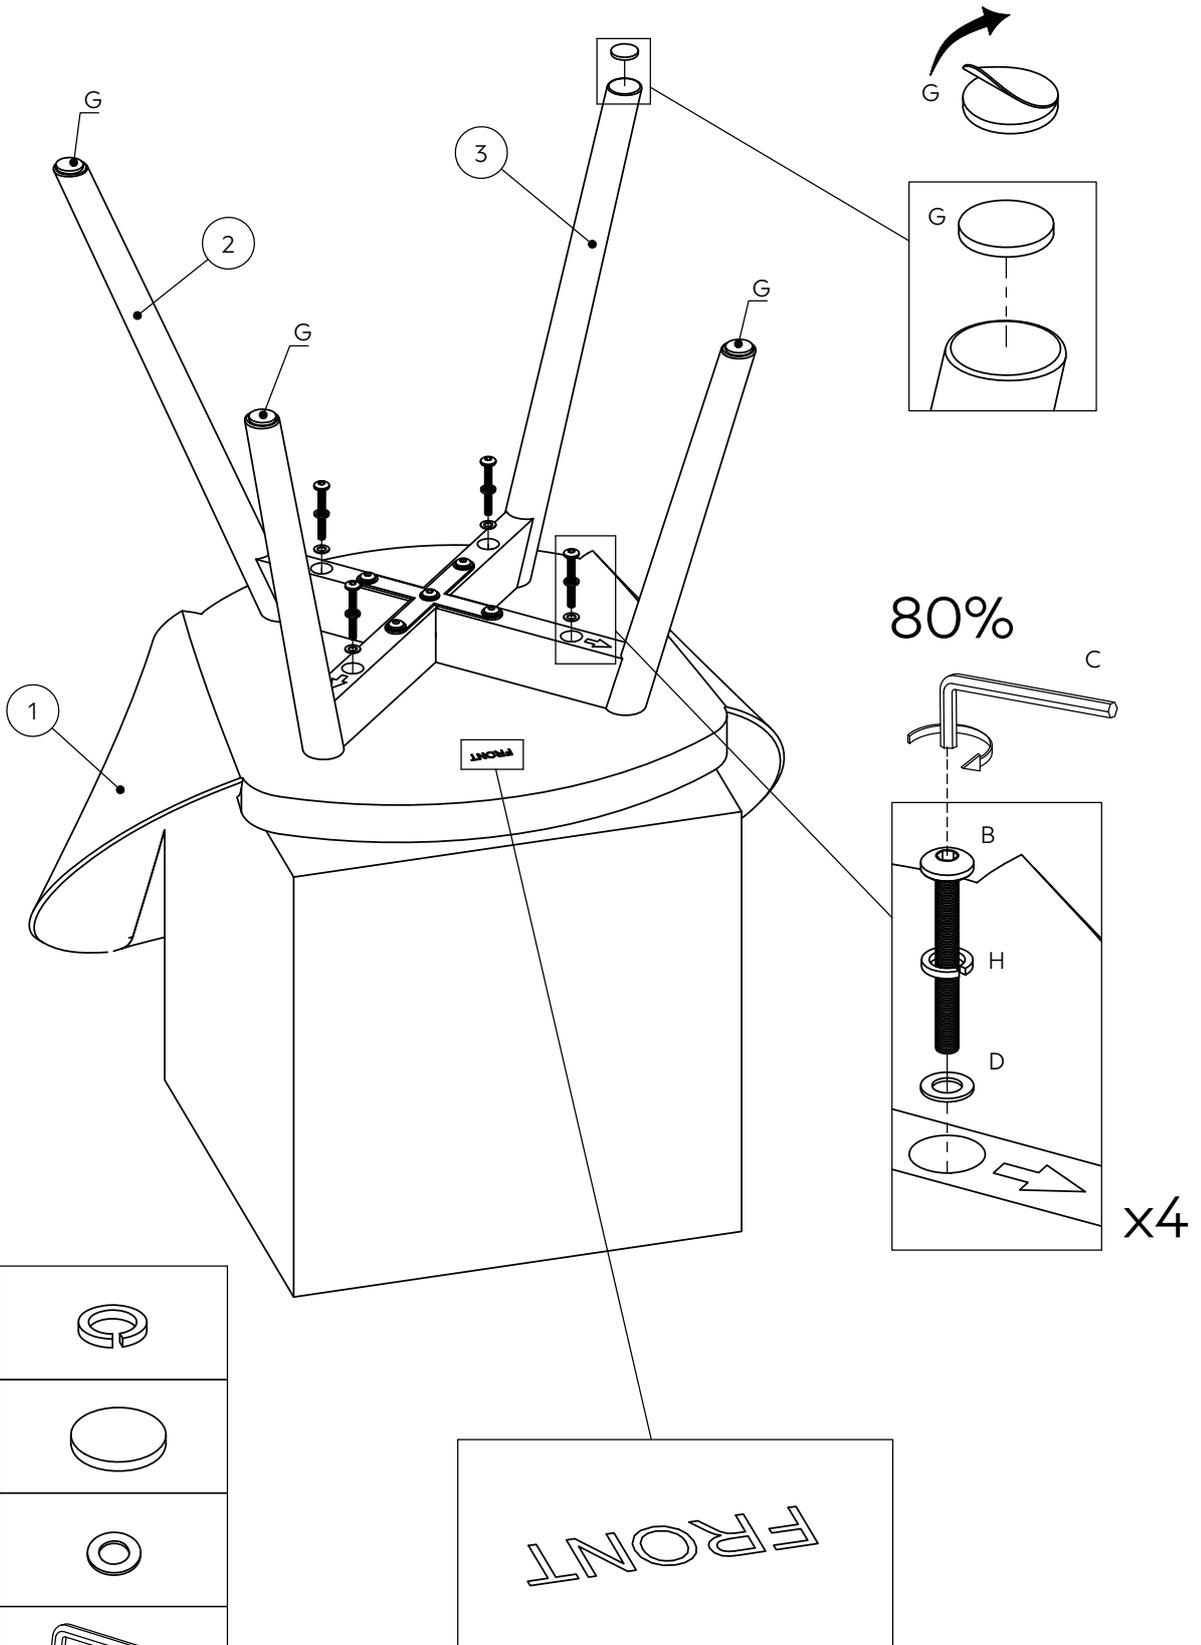

H	Ø10mm	4	
G	Ø25mm	4	
D	Ø14mm	4	
C	5mm	1	
B	M6x60mm	4	

 4.

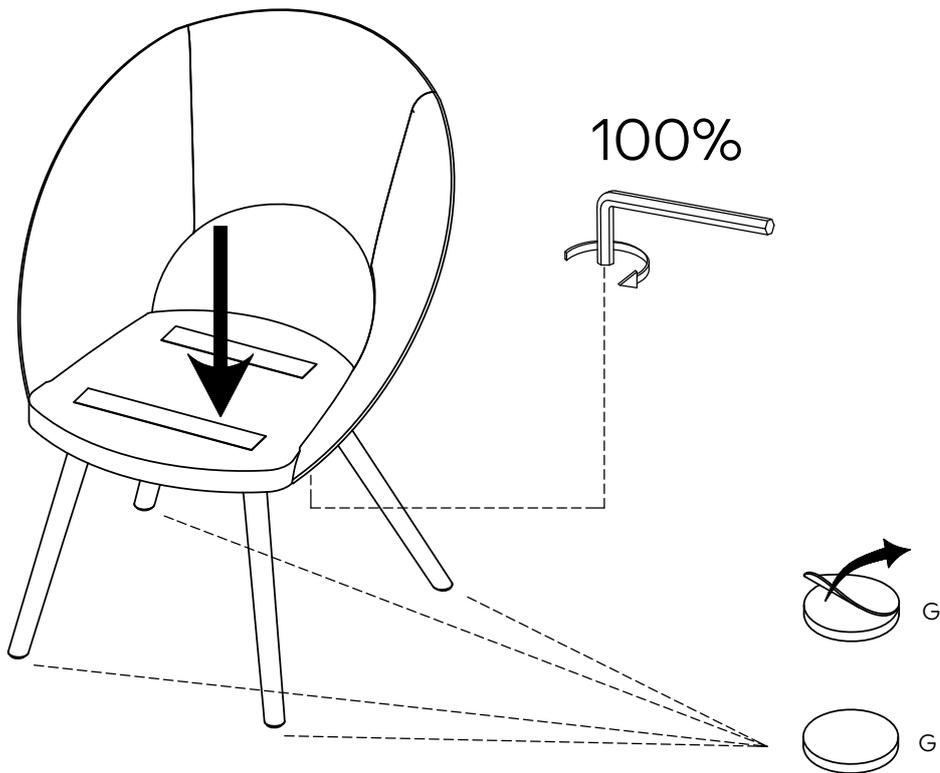
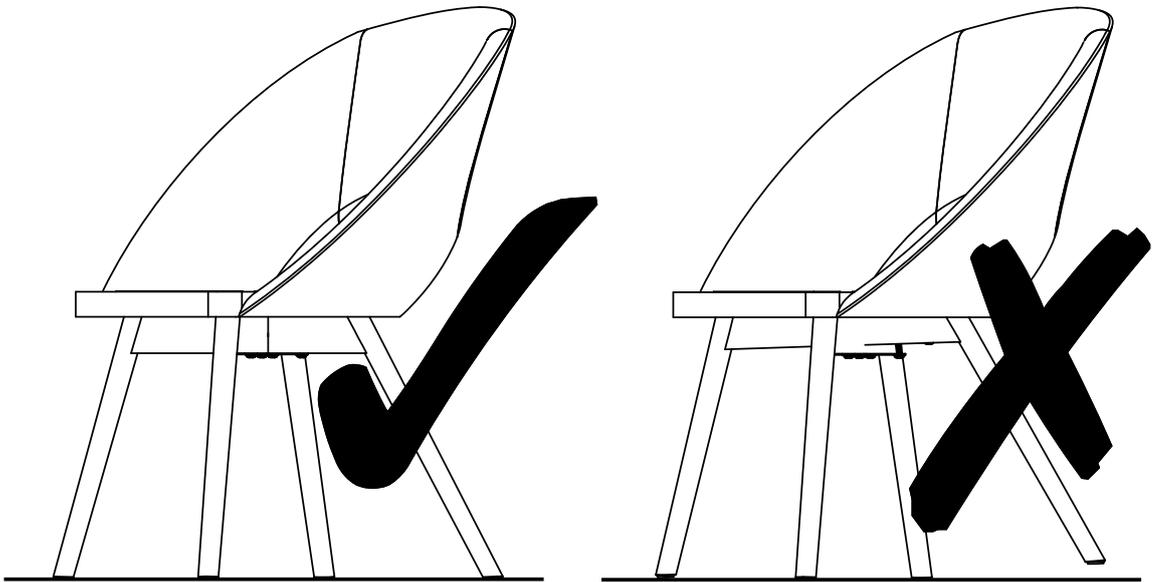


G	Ø25mm	2	
C	5mm	1	



Use extra 2 pcs G to level the chair if necessary.

5.

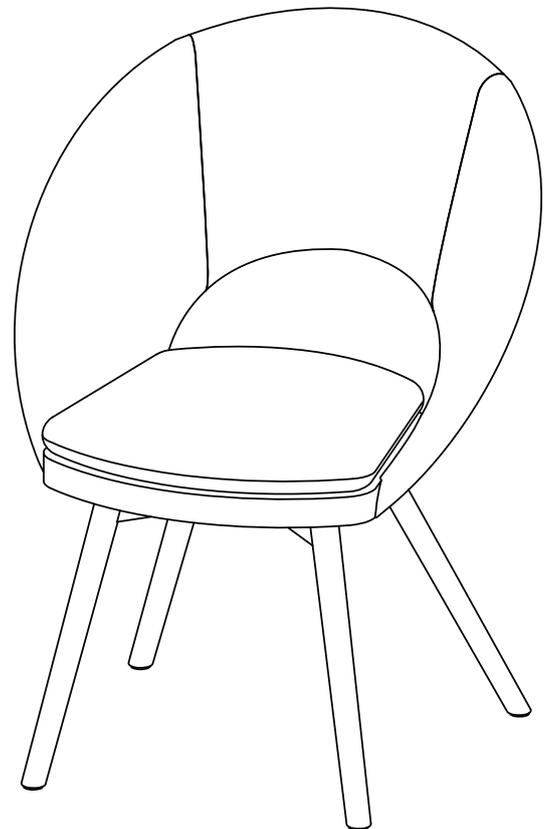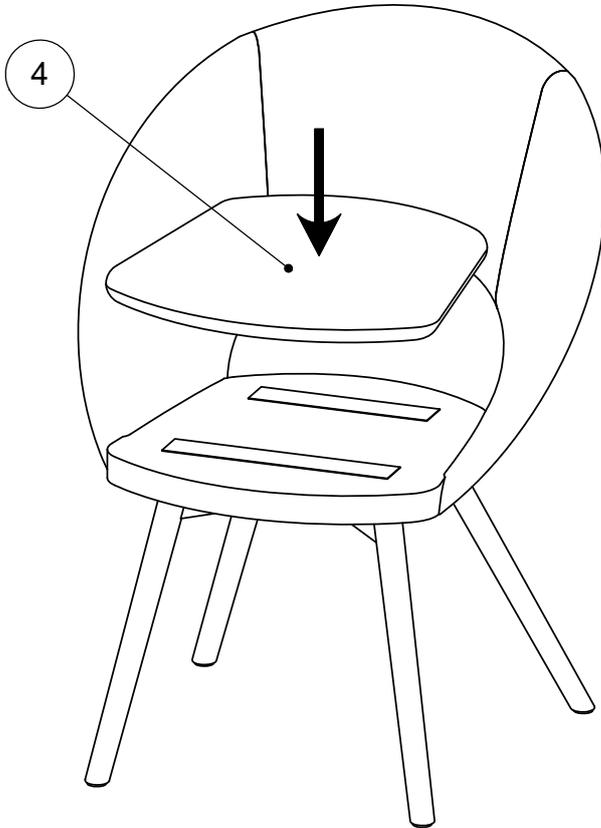

# NEXT

HEWITT DINING CHAIR-  
N52326-N52324-Q96151-B65170-AH9247-AB7800-AB9473-F83573-  
W61362-W63752-F83560

Assembly instructions

Actual product size  
H80 x W61 x D59.5cm

