

CARMEN®
— STYLE AND WELL-BEING SINCE 1965 —

HEATED FOOT WARMER

MODEL **C81285**

Applicable to all colour variants

YOUR SAFETY &
INSTRUCTION MANUAL
PLEASE READ CAREFULLY

Need help?

For advice, spares and returns.

Call: +44 (0)333 220 6060

8.30am to 6.00pm Monday-Friday

Visit: www.carmen-products.co.uk



www.carmen-products.co.uk

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:


- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT leave the appliance unattended while it is plugged in or operating.
- Close supervision is necessary when any appliance is used by or near children or pets.
- Very young children (0-3 years old) must NOT use this appliance.
- Young children (3-8 years old) may use this appliance if the controller has been set by a parent or responsible adult and the child has been given adequate instructions regarding safe use of the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or a similarly qualified person. Check the appliance regularly for signs of wear and tear.
- DO NOT use the appliance to keep animals warm.
- This appliance is intended only for the heating of human feet.
- DO NOT use whilst drowsy or sleeping.
- DO NOT let the cord come into contact with any hot surfaces.
- DO NOT place on or near heat sources.
- Keep the power cord free from knots and kinks.

- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT carry the appliance by the power cord.
- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- DO NOT use the appliance outdoors.
- DO NOT insert any objects into the appliance.
- DO NOT expose the appliance to rain or moisture and DO NOT operate the appliance outdoors or with wet hands.
- DO NOT cover the item in any way when in use as this may cause overheating.
- DO NOT cover the controller or place on the foot warmer whilst the foot warmer is in operation.
- DO NOT attempt to repair, disassemble or modify the appliance. The unit has no user-serviceable parts contained within.
- In case of technical problems, switch off the product and DO NOT attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system.
- DO NOT use the unit with an extension lead.
- DO NOT use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.

- In the event where the appliance is dropped into the water, turn off the power at the power outlet and remove the plug immediately. **DO NOT REACH INTO THE WATER TO RETRIEVE IT.** It is important to note that the appliance will have to be inspected by a qualified technician before using it again.
- **DO NOT** use the appliance if it is wet.
- **DO NOT** use this unit as a substitute for medical attention.
- This foot warmer must **NOT** be used by people who are sensitive to heat or by vulnerable people who may not be able to react to overheating (e.g. after taking pain relieving medication, after drinking alcohol, diabetics, persons with skin changes related to illness or persons with scarred skin where the heat is applied).
- **DO NOT** use the foot warmer with shoes.
- **DO NOT** use whilst folded or bunched up.
- **WARNING:** If the foot warmer is being used over several hours, it is recommended to select the lowest temperature setting to avoid over-heating the feet, which may lead to burns to the skin.
- This foot warmer is equipped with an automatic switch-off function, which turns off the heat supply after approximately 90 minutes of operation.
- This foot warmer is fitted with a safety system which provides protection against overheating across the entire surface of the foot warmer. The foot warmer will automatically switch off in the event of a fault.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from Customer Services.



WIRING SAFETY FOR UK USE ONLY

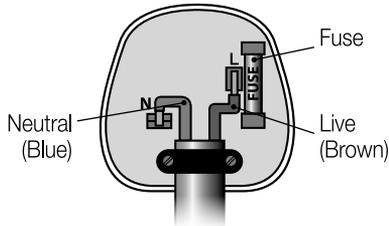

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.

On no account must either the brown or the blue wire be connected to the [EARTH] terminal .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – disconnect it from the mains – and then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance is double insulated.
Do not connect any wire to the earth terminal.

TECHNICAL DATA

Description:	Electric Foot Warmer
Model:	C81285 applicable to all colour variants
Rated Voltage:	220-240V
Frequency:	50Hz
Power:	110W

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RK Wholesale LTD has limited liability for incidental or consequential loss or damage.
- This guarantee is only valid in the UK and Eire.

An extended warranty is available for this appliance.

See back page for details.

WHAT'S IN THE BOX

Instruction Manual

Heated Foot Warmer with Remote Control

1. Removable Fleece Lining
2. Remote Control
3. LED Temperature Setting Indicators - 1-2-3-4
4. Temperature Setting Button
5. ON/ OFF Power Button



BEFORE YOUR FIRST USE:

1. Remove your appliance from the packaging.
2. Check that there is no damage to the cord or any visible damage to the body.
3. Read the Instruction Manual and retain for future reference.
4. Your appliance is now ready for normal use.

Dispose of the packaging in a responsible manner.

USING YOUR APPLIANCE

Turning the Appliance ON/ OFF:

1. Plug the foot warmer into a mains electrical outlet. The 4 indicator lights will flash in turn.
2. Press the ON/OFF power button to turn the foot warmer ON, the heat setting indicator light will flash on the display. The appliance will not heat until a temperature setting is chosen as described below.

Note: The foot warmer will automatically shut off after 90 minutes."

Temperature Selection:

Once powered ON, press the temperature setting button to cycle through the options:

- 1 Low Heat
- 2 Medium Heat
- 3 High Heat
- 4 Maximum Heat

The temperature setting selected will illuminate.

Note: The fastest way to warm up the foot warmer is to initially select the highest temperature setting.

WARNING! If the foot warmer is being used over several hours, it is recommended to select the lowest temperature setting to avoid over-heating the feet, which may lead to burns to the skin.

1. Press the ON/OFF power button to turn the foot warmer OFF. The temperature setting indicators will go off.
2. Unplug the foot warmer from the mains socket.

Over Heating Protection:

- The foot warmer is fitted with a safety system which provides protection against overheating across its entire surface. The foot warmer will automatically switch off in the event of a fault.
- If the safety system has switched off the foot warmer, the temperature settings will no longer illuminate when the foot warmer is switched on.
- For safety reasons, the foot warmer cannot be operated again after a fault has occurred. Seek advice from the manufacturer or its service agent or a similarly qualified person.

Automatic Switch OFF:

- This foot warmer is equipped with an automatic switch-off function, which turns off the heat supply after approximately 90 minutes of operation.
- If you wish to continue use, after a few seconds, press the ON/OFF power button to turn it back on.

CLEANING AND CARE

1. Unplug the foot warmer and allow it to cool before cleaning.
2. Remove the inner fleece lining for washing. The inner fleece lining is machine washable at 30°C on an extra-delicate cycle. Use delicate laundry detergent. DO NOT wash any of the electrical components.
3. Remove small marks on the foot warmer with a damp cloth and, if necessary, a little delicate laundry detergent.

CAUTION! The foot warmer must NOT be washed, chemically cleaned, wrung out, tumble dried or ironed.

4. DO NOT allow the controller to come into contact with water or any other liquid.
5. Clean the controller only with a soft, dry cloth.
6. DO NOT immerse the unit or plug in any liquid to clean.
7. DO NOT use chemicals or abrasive cleaners to clean any part of the foot warmer.

WARNING! Only use the foot warmer again once the foot warmer and fleece insert are fully dried.

Storage

- Ensure that the foot warmer is fully cooled down before storing.
- If the foot warmer is not to be used for a long period it is recommended to place it in its original packaging in a safe, dry, cool place out of reach of children.
- DO NOT place objects on top of the foot warmer whilst storing.
- DO NOT wrap the cord around the foot warmer.

NOTES

WARNING:

DO NOT IMMERSE ANY ELECTRICAL PART OF THE APPLIANCE IN WATER SUCH AS MOTOR UNITS OR PLUGS.

PLEASE SEE CLEANING SECTION FOR FURTHER INSTRUCTIONS.



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

NOTES

NOTES

We hope you enjoy your appliance for many years.

As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind when you register, for a total 3 years guarantee.

*To receive your extra guarantee period, register your appliance online within 28 days of purchase by visiting:

www.carmen-products.co.uk

Make sure to retain your original receipt.



Need help?

For advice, spares and returns.

Call: +44 (0)333 220 6060

8.30am to 6.00pm Monday-Friday

Visit: www.carmen-products.co.uk

Distributed throughout the UK by RK Wholesale LTD

CARMEN®

— STYLE AND WELL-BEING SINCE 1965 —