

HADEN



Dorchester Kettle Instruction Manual



PRODUCT CODE: 201270, 201300, 204851

HADEN

How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us
01909 544 570




Email us
info@haden.com



Write to us
Team Haden, Sabichi Homewares Ltd
Priorswell Rd, Worksop, S80 2BY

Visit us
www.haden.com

Components

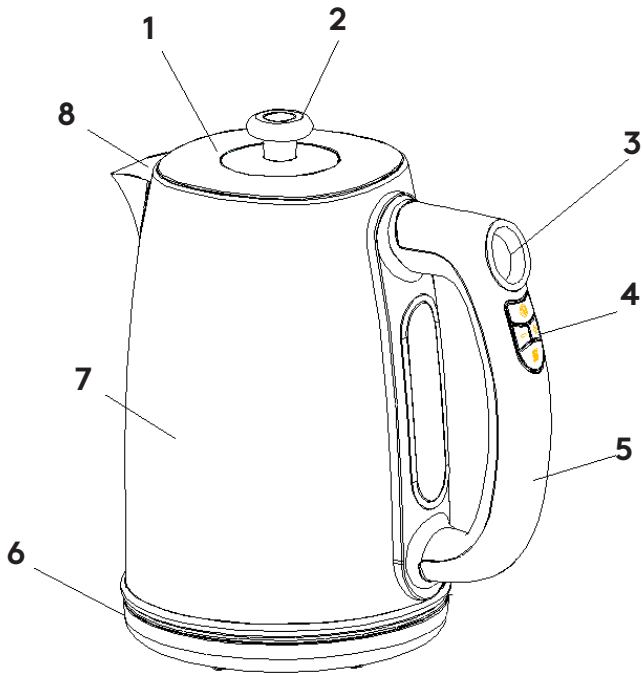

- | | |
|-------------------------|-----------------------|
| 1. Lid | 5. Handle |
| 2. Lid Knob | 6. Power Base |
| 3. Display | 7. Main Body |
| 4. Control Panel | 8. Water Spout |

Please Read and Save this Use and Care Book.

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all Instructions prior to first use.
- Do not touch hot surfaces.
- Use handles or knobs when holding the appliance.
- This Kettle can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the Kettle in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the Kettle.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the Kettle and its mains cord out of the reach of children younger than 8 when the Kettle is switched on or is cooling down.
- While the water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the jug kettle matches the mains voltage in your home. If it does not, contact your dealer and do not use the kettle.
- To protect against electric shock, do not immerse the cord, plug, or any part of the kettle in water or other liquid.

- Before switching the kettle on, ensure the water level is between the Min and Max lines and that the lid is completely closed.
- If the kettle boils dry, allow 15 minutes to cool before refilling with cold water. The safety cut out will automatically reset during this time.
- The kettle will switch off automatically when the water has boiled. You may switch the kettle off before the boiling process is complete by using the on/off switch.
- After the kettle has switched off automatically, (or has been switched off manually) it may need time to cool down. After 15-20 seconds, the kettle can be switched on again.
- Always take care when pouring boiling water and never tip the kettle excessively.
- Should you need to refill the kettle after it has boiled, allow the kettle to cool sufficiently before opening the lid.
- Place the kettle on a stable flat heat resistant surface.
- Ensure that the kettle is switched off before removing it from its stand.
- Prevent children from pulling on the mains cord or knocking the kettle
- Ensure that the mains lead does not overhang the worktop or come into contact with hot surfaces and gas rings.
- Before cleaning the kettle disconnect from the power supply and wait until it has cooled down.
- Only use the cord supplied with this kettle.
- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill the water over the maximum water level. Doing so may cause the kettle to splash during the boiling cycle.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person.
- Never leave the Kettle unattended when in use.
- This Kettle is intended for household use only
- Please ensure the wall outlet in your house is well earthed.

- Please note that the metal housing on this kettle can get “HOT” during use. Always pick up the kettle using the handle.
- This kettle is intended for household use only.
- The length of the cord used on this kettle was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. If the kettle is of the grounding type, the extension cord must also be a grounding-type, 3-wire cord. Care must be taken to arrange the extension cord so that it will not drape over the counter top or tabletop where it can be pulled on by children or accidentally tripped over.

Save These Instructions

How To Use Your Kettle

This Kettle is for household use only.

Before Using Your Kettle

- Remove all packing materials, any stickers and the plastic band around the power plug.
- Wash all parts as instructed in the CARE AND MAINTENANCE section.
- Select a level surface where this kettle is to be used allowing enough space for steam to escape without damage to counters, cabinets and walls.
- Fill kettle to maximum fill line with cold water. Bring to boil, discard and repeat. Kettle is now ready for use.

Important

- DO NOT fill the kettle with any substance other than water.
- DO NOT operate the kettle without water.
- DO NOT operate the kettle without the filter in place.
- DO NOT overfill the kettle. (Keep water level below the max fill line on the water window.)

Heating Controls

 - Press to turn the kettle **ON / OFF**

 - Press to activate or cancel the **KEEP WARM** function

 - Press to **decrease** the temperature

 - Press to **increase** the temperature

Filling The Kettle






1. Remove the kettle from the base.
2. Pull lid knob up to remove the lid.
3. Make sure the removable filter is in place.
4. To install: put filter in kettle, aligning the filter with the inside/back of the pour spout.
5. Fill with desired amount of cold tap water. Use the water window on the outside of the kettle as a guide for 4 cups up to 1.7 liters (7 cups).
6. Put the lid back on the kettle.
7. Unwind cord from base.
8. Place the kettle securely on the base.

Boiling Water

- Place the filled kettle onto the power base.
- Plug the power base into the mains supply; the kettle enters the standby mode and the display shows the current temperature of water.
- To start boiling water, press the **0** button, the kettle will start to boil to 100°C by default.
- At this time, you can change this temperature by pressing the **-** or **+** buttons. The display will show the chosen temperature and the heating icon will flash on the display during this time.
- Once you have selected the temperature, leave the controls for 5 seconds, the heating icon will stop flashing.
- The kettle will start heating the water to the desired temperature. The display will show the current & rising water temperature of the water inside the kettle.
- Once the kettle has reached the temperature, the kettle will automatically switch off. The heating icon will turn off, returning the kettle to standby mode.
- To cancel the boiling at anytime, press the **0** button, the kettle will return to standby mode and the heating icon will go out.

Keep Warm Mode

Keep warm mode allows you to keep the water warm at a desired temperature between 40 - 95 °C.

- Follow steps for **'BOILING WATER'** to warm the water.
- Once finished boiling, press the  button and use the  or  button to select the **'KEEP WARM'** temperature.
- Once the water temperature is below the desired temperature of the **'KEEP WARM'**, the kettle will boil back up to that temperature.
- If the kettle has not been interrupted the kettle will stay in **'KEEP WARM'** for 40 minutes. After this time it will return to standby mode.
- To cancel the **'KEEP WARM'** at any time, press the button  or 

Built-In Scale Protection

Note: Lime scale forms over time in the kettle when water is heated. Though harmless, it may be bothersome. The kettle has a removable filter behind the pour spout to prevent particles from pouring into your beverage.

Always have the removable filter in place just behind the spout when using the kettle.

Brewing The Perfect Tea

Different teas require different temperatures. That is, if you want the perfect flavour. This is why we've developed the Dorchester kettle, the must-have kettle for tea lovers. With temperature controls on the handle and a keep warm function that maintains the temperature for 40 minutes, this kettle is ideal for any hot drink and ensures perfect results every time. See our infographic below for advice on temperature and steeping time for various teas.



WHITE
70-80°C / 1-3 min



GREEN
70-85°C / 1-3 min



YELLOW
70-85°C / 1-2 min



OOLONG
70-80°C / 2-3 min



ROOIBOS
90-100°C / 5-6 min



HERBAL
85-100°C / 4-5 min



BLACK
85-100°C / 3-5 min



PU-ERH
85-100°C / 2-5 min

Cleaning & Maintenance

This kettle contains no user serviceable parts.

Cleaning

1. Before cleaning, be sure the base is unplugged and the kettle has cooled completely. Empty any remaining water from the kettle.
2. Pull out the removable filter for cleaning. Wash the filter in hot, soapy water and rinse or place it in the utensil holder of the dishwasher.
3. Wash the inside of the kettle with hot, soapy water and rinse.
4. Important: Never immerse the kettle in water or other liquids or place in a dishwasher.
5. Wipe exterior of the kettle and base with a damp cloth or sponge and dry.

Note: The heating element at the bottom of the interior may discolor over time. This will not affect performance. Do not use abrasive soaps, cleansers, or scouring pads on the kettle.

Note: Over time, the kettle may heat up but will not boil. When this happens, it is time for descaling.

To Descale

1. Fill kettle with 4 cups cold tap water and bring to a boil. Add 2 cups white vinegar, let stand for at least 1 hour or overnight and discard.
2. Fill kettle to maximum fill line with cold water. Bring to boil, discard and repeat. Kettle is now ready for use.

Technical Specification

Product Code:	201270, 201300, 204851
Rated Voltage:	220-240V~50-60Hz
Rated Power:	2550-3000W

Please note these figures are for reference and may differ slightly on the actual product.



Sabichi Homewares Ltd, 5 Wadsworth Road,
Perivale, Middlesex UB6 7JD
Sabichi NI , Unit 01 Strangford Park Ards Business
Centre, Jubilee Rd Newtownards BT23 4YH

Waste Electrical Recycling



This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste. The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- to recycle waste electrical products using the best available recovery and recycling techniques.
- to minimize the impact to on the environment
- to treat any hazardous substances
- to avoid increasing landfill

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where to drop off your waste product for recycling please contact you local authority.

Warranty

This product is guaranteed for 2 years from the date of original purchase. If the product fails within this period due to faulty materials or workmanship, it will be repaired, replaced or refunded at our discretion. Proof of purchase will be required.

This warranty applies only to:

- Product installed and used in accordance with the instructions contained in this manual.
- Product used for domestic purposes only.
- Product purchased in the UK and Ireland.

This warranty does not cover:

- Cosmetic damage.
- Normal wear and tear or consumable parts.
- Incorrect voltage supply or power surges.
- Customer misuse, modifications or adjustments.
- Products with unreadable or removed serial numbers.

Haden disclaims any liability for incidental or consequential loss or damages.

In the event of a problem:

- Please refer to the troubleshooting tips section within your user guide for help and guidance.
- If you are still unable to resolve the problem, please contact our technical support team for assistance.

When contacting Haden please provide:

- Product model number and serial number. Model & serial numbers can be found on the product rating label.
- Date of purchase.
- Complete description of the problem.

This information will help our team assist you more quickly.

Help Line: 01909 544 570
Opening Hours: Monday - Friday 9.30am – 5pm
Email: info@haden.com

HADEN