

Specifications:

Model: SL-6699

Functions: Dry/Steam/Spray/Burst/Vertical Steam/Self-Cleaning/anti calc/anti drip

Rated parameter: AC220-240V, 50-60Hz,2600W


Safety Instructions:

1. Before using for the first time, please check if the voltage rating on the type plate corresponds to the mains voltage in your home.
2. Make sure to unplug the appliance from the socket when leaving the iron even for a short while, and stand the iron on its end. Please leave the iron away from the touch of children..
3. The iron will be of high temperature when used, never touch it with hand or close to the flammable product in order to avoid the accident.
4. Caution: Unplug the appliance from the socket before filling the iron with water.
5. Never immerse the iron in water or other liquid.
6. Please send the iron to our special repair agent for repair if any damage on cord.
7. Deposit or Mineral in the water will lead to generate the scales and block the seam hole, therefore it is advisable to use distilled water.
8. Do not use chemically descaled water
9. The ejected steam is hot and therefore hazardous. Never direct the steam towards people.
10. The iron must be used and rested on a stable surface
11. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
12. Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners, Keep cord away from heated surfaces
13. The iron is not to be used if it has been dropped ,if there are visible signs of damage or if it is leaking

Cautions of the first use:

1. The iron has been greased, and as a result, the iron may slightly smoke when switched on for the first time. After a short while, this will cease.
2. Before using for the first time, remove any sticker or protective foil from the soleplate. Clean the soleplate with a soft cloth.
3. Keep the soleplate smooth: avoid hard contact with metal objects.

Component Name:

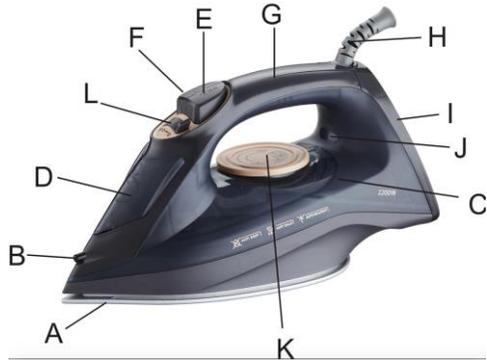

A---Sole plate B---Spray Nozzle C--- Water tank D--- Water filling cover

E--- Spray button F--- Burst button G--- Handle H--- Cord protector I---Back Cover

J--- Indicator light K---Thermostat Dial L---Steam adjuster,self-clean

Filling with Water:

Make sure iron is unplugged and the thermostat dial is in the **MIN** position. Place iron on the heel rest, tilt forward approximately 45 angle and pour water into the water-filling opening to the MAX position of

the water tank.

Vertical Steam

“ **Burst of Steam**” can also be applied when holding the iron in vertical position, this is useful for removing creases from hanging clothes, curtains, et.

Dry Ironing:

1. Set the steam selector to position O(=No Steam)
2. As per washing label of various clothes, set the correct ironing temperature to begin a ironing.

Steam Ironing:

1. Fill water in the iron as per the water-filling methods.
2. Plug the appliance in the socket.
3. If only set thermostat knob to MAX position as per the temperature indicator, steam iron will be available, otherwise water may leak from the soleplate.
4. It indicates that the temperature has been ready until the indicator light goes off.
5. Set the steam selector correctly, increase steam output by pushing the steam selector back and decrease steam output by forward.

Caution: Synthetic Fabric, Nylon, Synthetic Silk and Silk cannot use the steam iron, otherwise it will damage the finish of surface.

Burst of Steam

This function works well for tough wrinkles and heavy fabrics. By pressing “Burst of Steam” button,an intense burst of steam is emitted from the soleplate, this can be very useful when removing stubborn creases. The shot of steam facility can be used only while ironing with high ironing temperature. For optimal result, there should be 5 seconds rest between presses of the steam button. To prevent leaking water from the soleplate does not press the steam button continuously for more than 5 seconds.. Also allow at least one minute interval before applying this burst of steam function.

Spraying Methods:

At any temperature by pressing the spray button a couple of times, the laundry can be damped down. Ensure that there is enough water in the water tank.

Self-Cleaning

Use the self-cleaning function once every two weeks. If the water in your area is very hard(i.e, when flakes come out of the soleplate during ironing),the self-cleaning function should be used more frequently.). Make sure the appliance is unplugged, set the steam selector to position “O”, fill the water tank to the MAX position, do not put vinegar or other dealing agents in the water tank., select the maximum ironing temperature, put the plug in the wall socket, unplug the iron when the power indicator lighter has gone out, hold the iron over the sink, press and hold the self-cleaning button and gently shake the iron to and fro. Steam and boiling water will come out of the soleplate, impurities and flakes(if any),will be flushed out. Release the self-cleaning button as soon as all the water in the tank has been used up. Repeat the self-cleaning process if the iron still contains a lot of impurities. After the self-cleaning process, put the plug in the wall socket and let the iron heat up to allow the soleplate to dry, unplug the iron when it has reached the set ironing temperature, move the hot iron gently over a piece of used cloth to remove any water stains that may have formed on the soleplate, let the iron cool down before you store it.

ANTI DRIP

1. Anti-drip system, which is designed to prevent water escaping from the soleplate when the iron is too

cold automatically.

2. During use, the anti drip system may emit a loud clicking sound, particularly during heat-up or whilst cooling down. This is perfectly normal and indicates that the system is functioning correctly.

BUILD IN ANTI SCALE SYSTEM

The build-in anti-scale cartridge is designed to reduce the build-up of limescale which occurs during steam ironing. This will prolong the working life of your iron. However, please note that the anti-scale cartridge will not completely stop the natural process of limescale build-up.

Type of Fabric and Thermostat knob Dial Form:

Caution: 	Please note that  on the label means that this article may not ironed.	
Instructions on Label	Type of Fabric	Thermostat Dial
	Nylon Silk	
	Wool	
	Cotton	
	Linen	

Cleaning and Maintenance:

Before cleaning, remove the plug from the socket and allow the iron to cool down sufficiently.

1. Wipe off the soleplate with a damp cloth and a non-abrasive (liquid) cleaner.
2. If the fiber is adhered to the soleplate, use a damp cloth with vinegar to wipe off the soleplate.
3. Never use strong acid or alkali in order to avoid damaging the soleplate.
4. If the scale blocks the steam hole, please remove the scale with toothpick; do not damage the surface of soleplate.
5. Stand the iron on its end and let it cool down sufficiently, and meantime pour any remaining water out of the box, set the steam knob to position “O”.

Simple Repair Methods:

Problem	Possible Reasons	Measurement
Not enough heat or Too heat	Rotate thermostat dial improperly or unplugging	Correct Thermostat dial in position and check if the iron is plugged.
No steam or Leakage	The thermostat dial has been set to MIN	Set the thermostat dial to the required position.
No burst of steam or no vertical steam	The(vertical) burst of steam function has been used too often within a very short period. The iron is not hot enough	Continue ironing in horizontal position and wait a while before using the (vertical) burst of steam function again
Leaking water from Soleplate	Set the thermostat dial out of steam range.	Set the thermostat dial as per steam range.
	The heat is still not enough.	Open steam button only after the indicator light goes off.
	The water is over than max position	Pour out the remaining water
Little Steam	Check if the steam selector is in proper location.	Set the steam selector to the proper location.
	Steam hole is blocked.	Clean hole with distilled water.
	Too little water in the water tank	Fill water into the box
No Spraying	No enough pressure or air inside	Press the spray nozzle by hand, and push the spray button several times continuously.

Steam Iron Instructions



4. When placing the iron on its stand, ensure that the surface on which the stand is placed stable
5. The iron is not to be used if it has been dropped, if there are visible signs of damage or it is leaking.
6. The plug must be removed from the socket-outlet before the water reservoir is filled with water(for steam irons and irons incorporating means for spray water)

(Read the instructions carefully before use and keep it)

1. The appliance is intended for use by persons with disposing capacity, experiences and common sense. For those persons who are lack of guarantee in safety, they must be supervised by their custodians to use the appliance. Children should be supervised to ensure that they do not play with the appliance.
2. The iron must not be left unattended while it is connected to the supply mains
3. The iron must be used and rested on a stable surface