

# beurer

## Indulgence Heated Bedding



Single



Double



EN Heated underblanket  
Instruction for Use

CE

# ENGLISH



Read these instructions for use carefully. Observe the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.






## Table of contents

1. Items included in the package .....	3	4.5 Automatic switch-off .....	6
1.1 Description .....	3	4.6 Switching off .....	6
2. Important instructions		5. Cleaning and maintenance .....	6
Retain for future use .....	3	6. Storage .....	7
3. Intended use .....	5	7. Disposal .....	7
4. Operation .....	5	8. What if there are problems? .....	7
4.1 Safety .....	5	9. Technical data .....	7
4.2 Initial use .....	5	10. Guarantee .....	8
4.3 Switching on .....	6	11. Helpline .....	8
4.4 Setting the temperature .....	6		

## EXPLANATION OF SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

	<b>WARNING:</b> Warning of risks of injury or health hazards		
	<b>CAUTION:</b> Safety information about possible damage to appliance/accessories		
	<b>NOTE:</b> Important information		
	Read the instructions		Do not insert pins
	Do not use folded or rucked		Not to be used by very young children (0 - 3 years)
	Manufacturer		
	The device has double protective insulation and therefore complies with protection class 2.		
	Please dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).		
	Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard		
	This product satisfies the requirements of the applicable European and national directives.		
	United Kingdom Conformity Assessed Mark		
	The BEAB certification mark proves that this device meets the specifications stipulated in the Low Voltage Directive (LVD)		
	Manufacturer code for production data		
	The textiles used for this device meet the stringent human ecological requirements of Oeko Tex Standard 100, as verified by Hohenstein Research Institute.		

	Wash at a maximum temperature of 30 °C, Very gentle wash		Do not iron
			Do not bleach
	Do not dry-clean		Use tumble dryer on the lowest heat only


## 1. ITEMS INCLUDED IN THE PACKAGE

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.

- 1 Heated underblanket
- 1 Control
- 1 Operating instructions

### 1.1 Description

- 1. Supply cord
- 2. Supply plug
- 3. Slider for ON/OFF and switch-off times
- 4. Illuminated temperature settings
- 5. ▲-Button to increase the temperature
- 6. ▼-Button to decrease the temperature
- 7. Control
- 8. Plug-in coupling

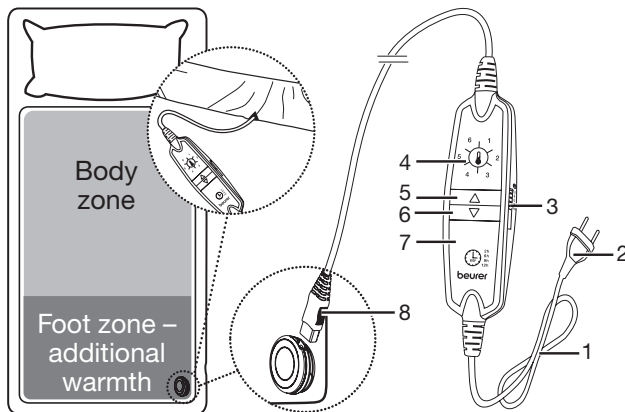

## 2. IMPORTANT INSTRUCTIONS RETAIN FOR FUTURE USE

### WARNING

- Non-observance of the following notes may result in personal injury or material damage (electric shock, skin burns, fire). The following safety and hazard information is not only intended to protect your health and the health of others, it should also protect the product. For this reason, pay attention to these safety notes and include these instructions when handing over the product to others.
- This heated underblanket must not be used by persons who are not sensitive to heat or by other vulnerable persons who may not be able to react to overheating (e.g. diabetics, people with skin alterations due to illness or scarred tissue in the application area, after taking pain relief medication or alcohol).
- This heated underblanket must not be used by very young children (0-3 years old) as they are unable to respond to overheating.
- This heated underblanket can be used by children older than 3 and younger than 8 years of age provided they are supervised. For this, the control must always be set to the minimum temperature.

- This heated underblanket may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the heated underblanket safely, and are fully aware of the consequent risks of use.
- Children must not play with the heated underblanket.
- Cleaning and user maintenance must not be performed by children unless supervised.
- This heated underblanket is not designed for use in hospitals.
- This heated underblanket is only intended for domestic/private use, not for commercial use.
- Do not insert pins.
- Do not use folded or rucked.
- Do not use if wet.
- Before using it on an adjustable bed, check that the heated underblanket and the cables are not, for example, trapped in a hinge or bunched up.
- This heated underblanket may only be used in conjunction with the control specified on the label.
- This heated underblanket must only be connected to the mains voltage that is specified on the label.
- If the heated underblanket is being used over several hours, we recommend that you set the lowest temperature setting on the control to avoid the body overheating and thereby any potential burns to the skin or heat stroke.
- The electrical and magnetic fields emitted by this heated underblanket may interfere with the function of a pacemaker. However, they are still well below the limits: electrical field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. Please therefore consult your doctor and the manufacturer of your pacemaker before using this heated underblanket.
- Do not pull, twist or make sharp bends in the cables.
- If the cable and control of the heated underblanket are not positioned properly, there may be a risk of becoming entangled in, being strangled by, tripping over, or stepping on the cable and control. The user must ensure that excess lengths of cable, and cables in general, are safely routed.
- Please check this heated underblanket frequently for signs of wear and tear or damage. If any such signs are evident, if the heated underblanket has been used incorrectly or if it no longer heats up, it must be checked by the manufacturer before being switched on again.

- Under no circumstances should you open or repair the heated underblanket (including the accessories) yourself because faultless functionality can no longer be guaranteed thereafter. Failure to observe this will invalidate the manufacturers guarantee.
- If the mains connection cable of this heated underblanket is damaged, it must be disposed of. If it cannot be removed, the heated underblanket must be disposed of.
- Do not expose control and cables to direct sunlight.
- When this heated underblanket is switched on:
  - Do not place any sharp objects on it
  - Do not place any heat sources, such as hot water bottles, heat pads or similar, on it
- The electronic components in the control warm up when the heated underblanket is in use. For this reason, the control must never be covered or placed on the heated underblanket when it is in use.
- Allow the heated underblanket to cool down before storing it away. Otherwise the heated underblanket may get damaged.
- To avoid severe creasing in the heated underblanket, do not place any objects on top of it while it is being stored. Otherwise material damage may occur.
- It is essential to observe the information relating to the following chapters: Operation, Cleaning and maintenance, Storage.
- If you should have any questions about using our devices, please contact our Customer Services department.

### 3. INTENDED USE



#### CAUTION

This heated underblanket is designed for warming beds, only.  
Heated underblankets are not suitable to be used with memory foam mattresses.

### 4. OPERATION

#### 4.1 Safety



#### CAUTION

- Your heated underblanket has been designed and fully tested to the European Safety Standards. It has been certified by the Intertek Testing and Certification Ltd. UK and shows the safety mark "BEAB Approved".
- This heated underblanket is equipped with a SAFETY SYSTEM. This sensor technology prevents the entire surface of the heated underblanket from overheating by automatically switching off the heated underblanket in the event of a fault. If the safety system has switched off the heated underblanket, the temperature setting is not illuminated any more even when the heated underblanket is switched on.
- Please note that the heated underblanket is not operable any more due to safety reasons in this case and has to be sent to the service address indicated.
- Do not connect the defective heated underblanket with another control of the same type. This would trigger a permanent switch-off via the control safety system.

#### 4.2 Initial use

We recommend that you vacuum off your mattress before using the heated underblanket for the first time. Then spread out the heated underblanket flat on your mattress so that the cable entrance is located approximately at foot end (see illustration). The

 
head area of the heated underblanket is not heated. Then pull the side section over the sides of your mattress like a contour sheet. Then secure your contour sheet as accustomed so that the heated underblanket is between your mattress and the contour sheet. Make sure that the heated underblanket is always spread out flat and does not push together or wrinkle during use. Check its position when making the bed. The heated underblanket may only be switched on when it is spread out flat. We recommend switching on the heated underblanket approx. 15 minutes before going to bed and covering it with the duvet in order to prevent heat loss. First select the highest temperature setting (level 6). This produces the fastest warming.

## CAUTION

The electronic components in the control will normally warm up slightly when the product is being used. The control should not lie on or be covered by blankets, pillows etc.

Make sure that the heated underblanket is spread out entirely flat and that it will not rumple up or crease when in use.

- To operate the heated underblanket connect the control to the heated underblanket by plugging in the connector.
- Then plug in the supply plug into the mains outlet.



### 4.3 Switching on

Slide the side switch to the desired time to switch on the heated underblanket (see Fig. controller). The temperature settings will then light up.

### 4.4 Setting the temperature

To increase the temperature, press the  $\Delta$  button (5). To decrease the temperature, press the  $\nabla$  button (6).

After switching on the temperature setting is illuminated.

Setting 1: minimum heat

Setting 2-5: Individual heat

Setting 6: maximum heat

## NOTE:

- This heated underblanket has a rapid heating function and should reach temperature within 15 minutes.
- The quickest way to heat up the heated underblanket is to select the highest temperature setting of the control, first.
- We strongly recommend switching on the heated underblanket approx. 15 minutes before going to bed and covering it with the quilt to prevent the warmth from escaping.
- The foot zone provides additional warmth for cold feet.

## WARNING

If the heated underblanket is used continuously (for several hours), it is recommended to use the lowest setting of the control to avoid the user overheating.

### 4.5 Automatic switch-off

You can use the side switch to set the automatic switch-off time to 2, 6, 9 or 12 hours. The heated underblanket is automatically switched off once the set switch-off time has elapsed. This is indicated by a slow flashing of temperature 1 light (1 time/sec.).

To re-heat the electric underblanket, first set the switch to the position "0" (off) for approx. 5 seconds, and then select the desired switch-off time.

You can change the switch-off time at any time. The set switch-off time begins following a change.

If the electric underblanket will not be used after timed switch-off, it should be switched off (position "0") or the mains plug should be removed from the mains socket.

### 4.6 Switching off

Set the side switch to "0" to switch off the heated underblanket (see Fig. controller).

## NOTE:

If the heated underblanket is not being used for several days, set the side switch to "0" and remove the mains plug from the socket.

## 5. CLEANING AND MAINTENANCE

### WARNING

Always remove the plug from the mains outlet and disconnect the control from the heated underblanket. Otherwise there is a risk of an electric shock.

### CAUTION

The control must never come into contact with water or other liquids, as this may cause damage.

- To clean the control, use a dry, lint-free cloth. Do not use cleaning agents containing solvent or scouring agents.
- To remove stains from the heated underblanket use a damp cloth and, if necessary, a mild cleaning agent.

## CAUTION

Note that the heated underblanket must not be dry-cleaned, wrung out or ironed. Otherwise the heated underblanket may be damaged.

- The heated underblanket is machine washable.
- Set the washing machine to a particularly gentle, 30 °C cycle (woolens programme). Use a mild detergent with dosage according to the manufacturer's instructions.
- The heated underblanket can be dried in a tumble dryer on the lowest heat setting.
- While the heated underblanket is still damp after washing, shape it to its original form and size and place it flat over a clothes drying rack to dry.

## CAUTION

- Do not attach the heated underblanket to washing lines with washing pegs as this can cause damage.
- Only reconnect the control to the heated underblanket after the connector and the heated underblanket are completely dry. Otherwise the heated underblanket may be damaged.

## WARNING

Under no circumstances switch on the heated underblanket to dry it. Otherwise there is a risk of an electric shock.

## 6. STORAGE

When not in use, we recommend to store the heated underblanket in its original packaging. For this purpose, disconnect the control from the electric underblanket.

## 7. DISPOSAL

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the unit at a suitable local collection or recycling point. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.



## 8. WHAT IF THERE ARE PROBLEMS?

Problem	Cause	Remedy
The temperature settings are not illuminated while <ul style="list-style-type: none"> <li>- the control is fully connected to the heated underblanket</li> <li>- the supply plug is connected to the mains outlet with correct function</li> <li>- The side switch is positioned to the desired switch off time</li> </ul>	The Safety System switched off the heated underblanket.	Contact customer services to arrange to return the heated underblanket together with the control.
The first setting light on the control panel is flashing fast (4 times/sec.)	The heating circuit is interrupted	<ol style="list-style-type: none"> <li>1. Check if the connector on the bed is properly connected</li> <li>2. Contact Beurer Customer Service for further advice.</li> </ol>
The first setting light on the control panel is flashing slowly (1 time/sec.)	The device is automatically switched off by preselected timer.	To restart the heating, first set the switch to the position "0" (off) for approx. 5 seconds and then select the desired switch of time.
The second setting light on the control panel is flashing	The control has overheated.	<ol style="list-style-type: none"> <li>1. Set the slider (3) to Off position and allow the control to cool down for about 15 minutes (it's not allowed to cover the control when switched on)</li> <li>2. Restart the device by selecting the desired switch-off time.</li> </ol>

## 9. TECHNICAL DATA

For technical data, see the rating plate label on the electric underblanket.

	Type	Supply Voltage	Input	Preheat
Indulgence Single	B11E23(S1-UB13A)6VT	220–240 V / 50–60 Hz	55–65 W	70–80 W
Indulgence Double	B12E23(S1-UB13A)6VT	220–240 V / 50–60 Hz	75–85 W	90–110 W
Indulgence Double Dual Control	B13E232(S1-UB13A)6VT	220–240 V / 50–60 Hz	2 x 40–50 W	2 x 50–60 W

	Type	Supply Voltage	Input	Preheat
Indulgence King Size	B11E232(S1-UB13A)6VT	220–240 V / 50–60 Hz	2 x 55–65 W	2 x 70–80 W
Indulgence Super King Size	B11E232(S1-UB13A)6VT	220–240 V / 50–60 Hz	2 x 55–65 W	2 x 70–80 W

## 10. GUARANTEE

Beurer UK Ltd. (hereinafter referred to as “Beurer”) provides a guarantee for this product, subject to the requirements below and to the extent described as follows.

Claiming the guarantee shall not affect the Purchaser’s statutory guarantee rights arising from the purchase agreement with the Seller in the event of defects. The Purchaser may exercise these statutory guarantee rights free of charge. The guarantee shall apply without prejudice to any mandatory statutory provisions on liability.

Beurer guarantees the perfect functionality and completeness of this product.

The worldwide guarantee period is 3 years, commencing from the purchase of the new, unused product from the seller.

The guarantee only applies to products purchased by the buyer as a consumer and used exclusively for personal purposes in the context of domestic use.

German law shall apply.

During the guarantee period, should this product develop a manufacturing fault in accordance with the following provisions, Beurer shall carry out a repair or a replacement delivery free of charge, in accordance with these guarantee conditions.

If the buyer wishes to make a guarantee claim, they should approach their retailer at first instance.

For further assistance, they can revert to the Helpline information below.

The buyer will then receive further information about the processing of the guarantee claim, e.g. where they can send the product and what documentation is required.

A guarantee claim shall only be considered if the buyer can provide Beurer, or an authorised Beurer partner, with

- a copy of the invoice/purchase receipt, and
- the original device, available for physical inspection.

The following are explicitly excluded from this guarantee:

- deterioration due to normal use or consumption of the product;
- accessories supplied with this product which are worn out or used up through proper use (e.g. batteries, rechargeable batteries, cuffs, seals, electrodes, light sources, attachments and nebuliser accessories);
- products that are used, cleaned, stored or maintained improperly and/or contrary to the provisions of the instructions for use, as well as products that have been opened, repaired or modified by the buyer or by a service centre not authorised by Beurer;
- damage that arises during transport between manufacturer and customer, or between service centre and customer;
- products purchased as seconds or as used goods;
- consequential damage arising from a fault in this product (however, in this case, claims may exist arising from product liability or other compulsory statutory liability provisions).

Repairs or an exchange in full do not extend the guarantee period under any circumstances.

## 11. HELPLINE

### Distributors:

EN Beurer UK Ltd, Suite 16, Stonecross Place, Stonecross Lane North,  
WA3 2SH Lowton, Phone +44 (0)330 818 1047, Fax 0844 488 9101

IE Charlie Shields Ltd., 3 & 4 Goldenbridge Industrial Est.,  
Dublin 8, Phone + 353 1 454 5844

### Manufacturer:

Beurer GmbH  
Soeflinger Strasse 218  
89077 Ulm/Germany  
Website: www.beurer.com

We have a policy of continuously improving product design and quality.

We have the right to improve our heated underblanket models at any time.



UK-Importer: Beurer UK Ltd.  
Suite 16, Stonecross Place • Stonecross Lane North • WA3 2SH Lowton • United Kingdom



BEURER GmbH • Soeflinger Str. 218 • 89077 Ulm (Germany)  
www.beurer-healthguide.com • www.beurer.com



Subject to errors and changes  
07.101.647\_Indulgence\_2025-09-12\_01\_IM\_BEU-UK