


NEXT

ARCHES GLAZED CABINET H44133 Assembly instructions

Actual product size
H180.5x W90 x D40 cm

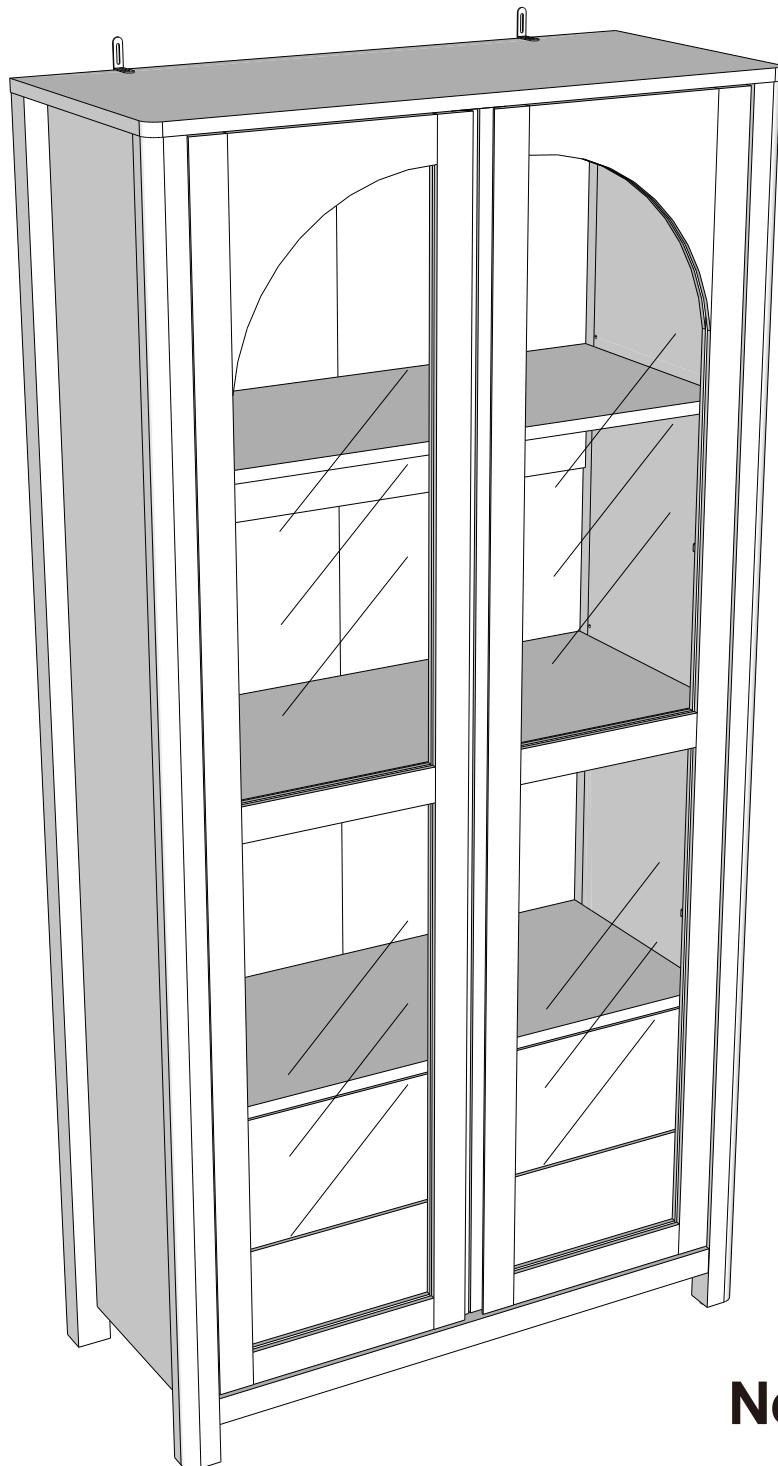

Need Help ?

With: Assembly instruction
Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

Number of people required to assemble


Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

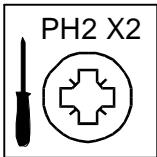

PH2 X2



not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage,

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

If the glass is chipped or broken, stop using the product and consult the supplier.

When cleaning glass panels use a damp cloth with washing up liquid or soft soap if necessary. Do not use washing powders or any other substances containing abrasives since these substances scratch glass panel.

The glass used in this product is toughened and complies with BS EN 12150-1:2000, clauses 8.3 & 8.4.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polish can break down the finish.

Never allow any kind of liquid to remain on your furniture.

Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.



Do not place very hot or very cold items on the glass surface, unless adequately thick table mats or coasters are used to prevent such items from coming into contact with the glass.

Do not use glass as a chopping surface. Do not strike the glass with hard or pointed items.

NEXT

ARCHES GLAZED CABINET
H44133
Assembly instructions

GETTING TO KNOW YOUR PRODUCT

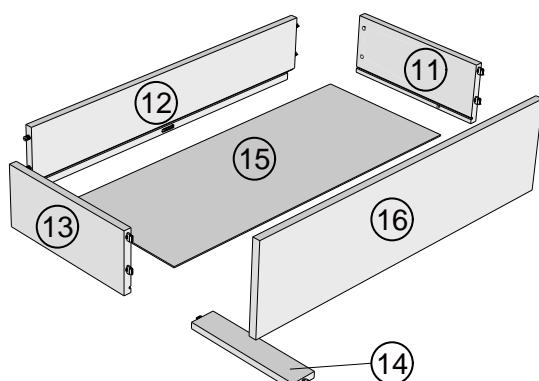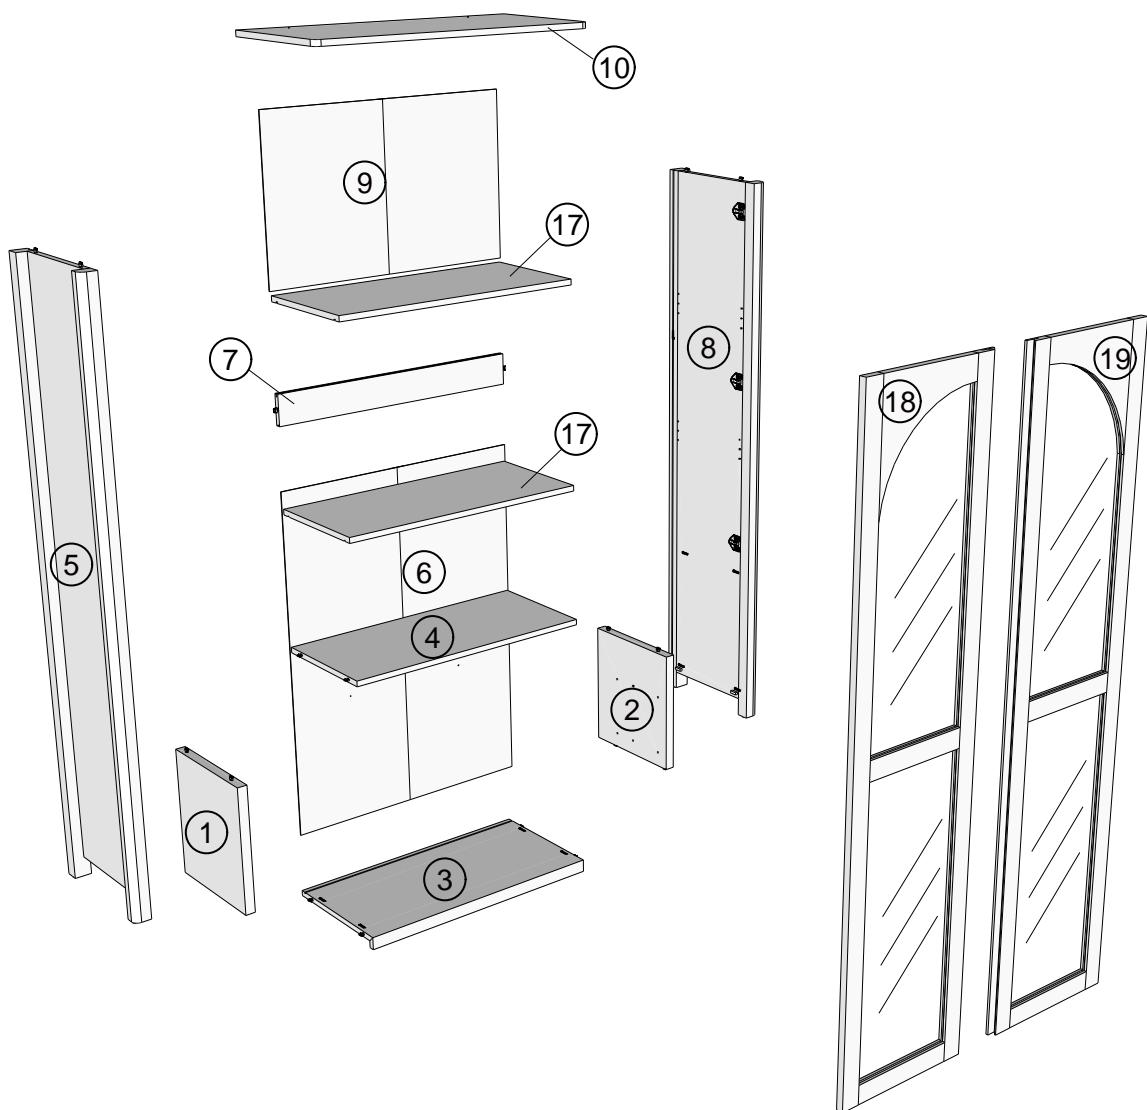

X2

NEXT

ARCHES GLAZED CABINET

H44133

Assembly instructions

Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	35.5x39.5cm		1	1
2	35.5x39.5cm		1	1
3	40x80cm		1	1
4	35.5x80cm		1	1
5	40x178.5cm		1	2
6	80.5x110cm		1	2
7	9.5x80cm		1	1
8	40x178.5cm		1	2
9	50.5x80.5cm		1	2
10	40x90cm		1	1
11	13x30cm		2	1
12	13.5x69.5cm		2	1
13	13x30cm		2	1
14	6x28cm		2	1

Ref	Dimensions	Visual	Qty	Ctn
15	28.5x70.5cm		2	1
16	19x73cm		2	1
17	35.5x79.5cm		2	1
18	39.5x167.5cm		1	2
19	39.5x167.5cm		1	2

NEXT


ARCHES GLAZED CABINET

H44133

Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
U139	Ø4.5 x 15mm	24	2
P3	Ø5 x 16mm	8	1
S41	Ø4x15mm	4	1
U143	Ø4 x 15mm	12	2
S42	Ø4 x 15mm	2	1

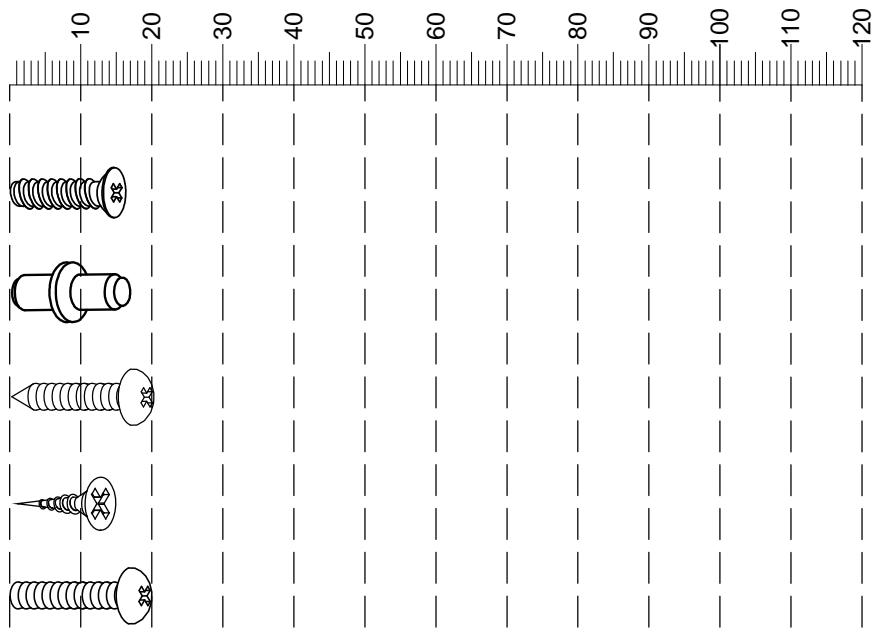


Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
L	N/A	2	N/A	
R	N/A	2	N/A	
N7	N/A	2	N/A	
T38	N/A	12	2	


Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
M11	N/A	1	N/A	
C11	N/A	6	N/A	


1

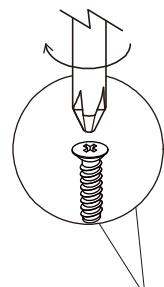

Finished side

 

TOP

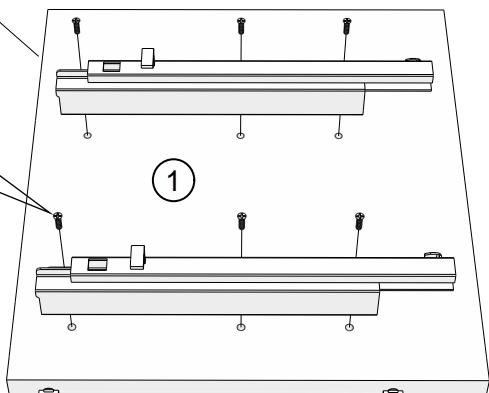


BOTTOM


U139	Ø4.5 x 15mm	6		PH2
L	N/A	2		not supplied

2


TOP

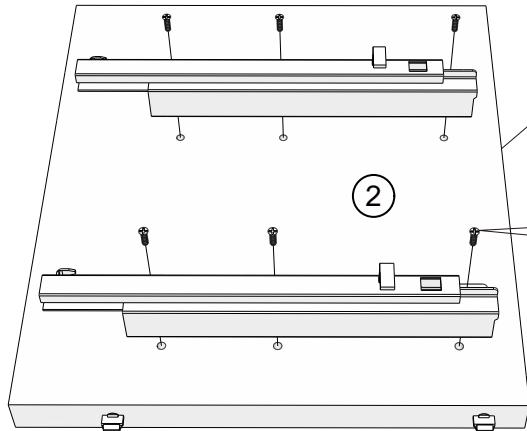

Finished side

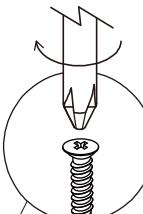


BOTTOM

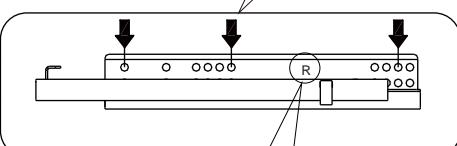


R

U139	Ø4.5 x 15mm	6		PH2
R	N/A	2		not supplied


3

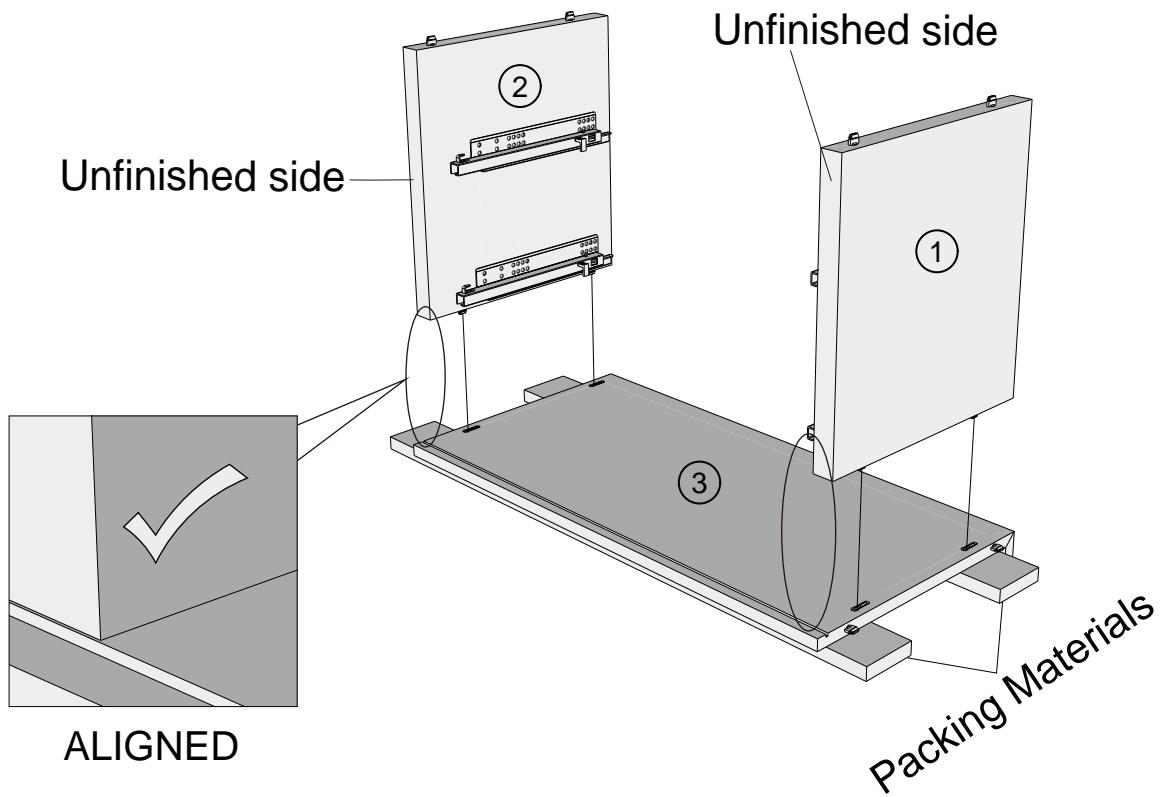


4

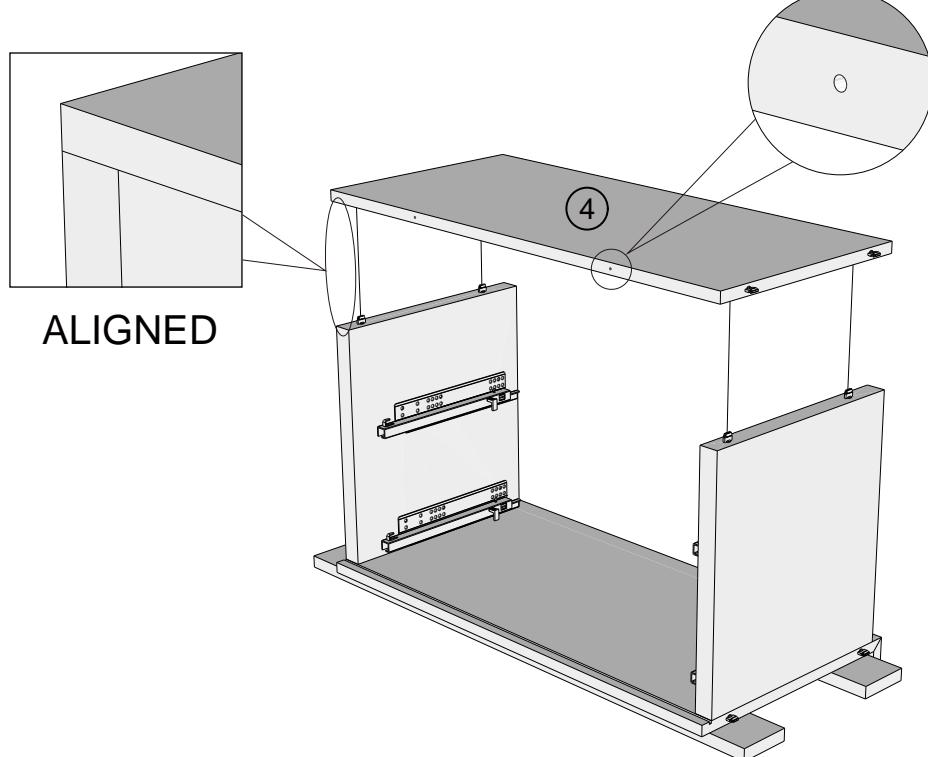

5

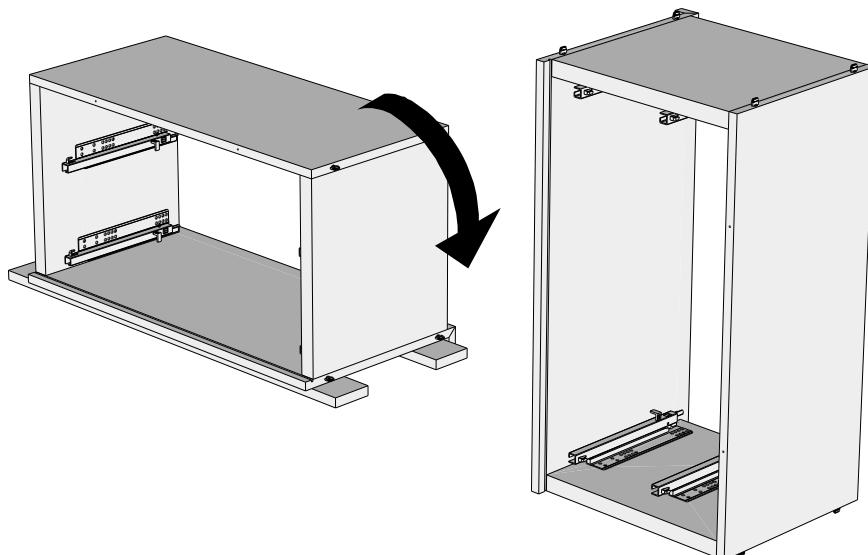


6

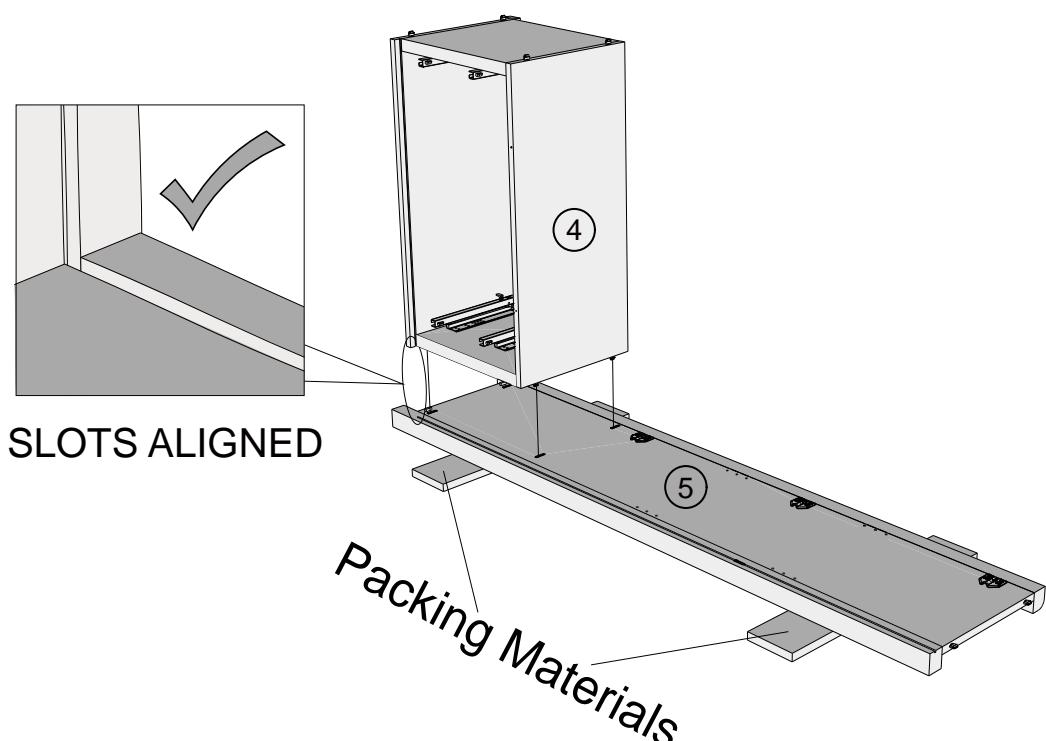


NEXT

ARCHES GLAZED CABINET H44133 Assembly instructions

7

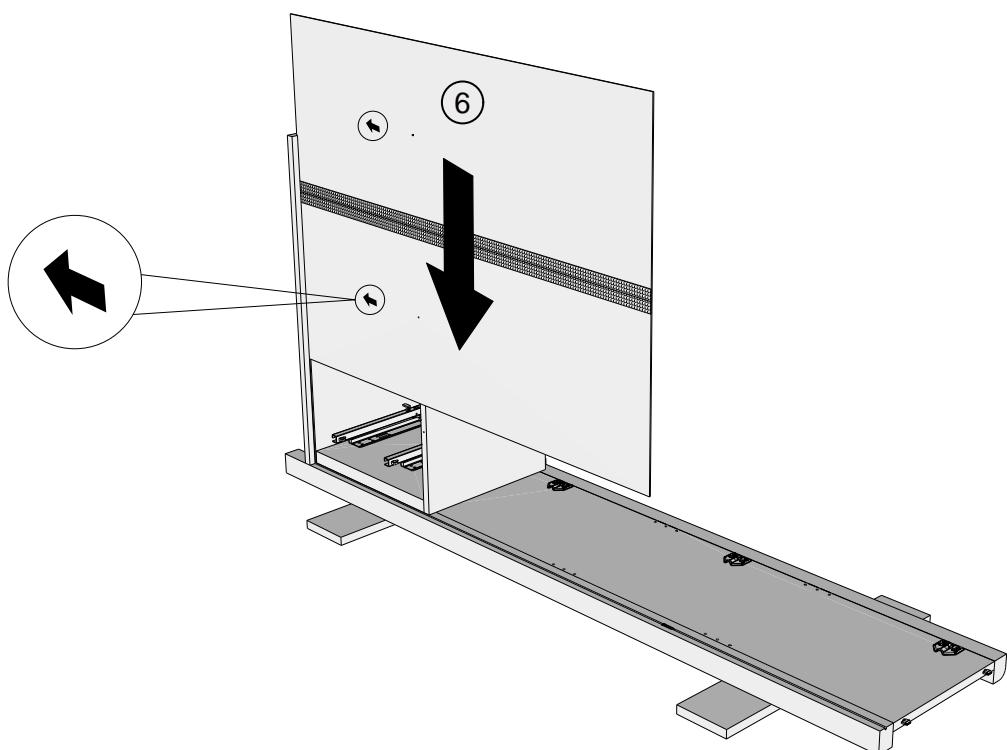


8

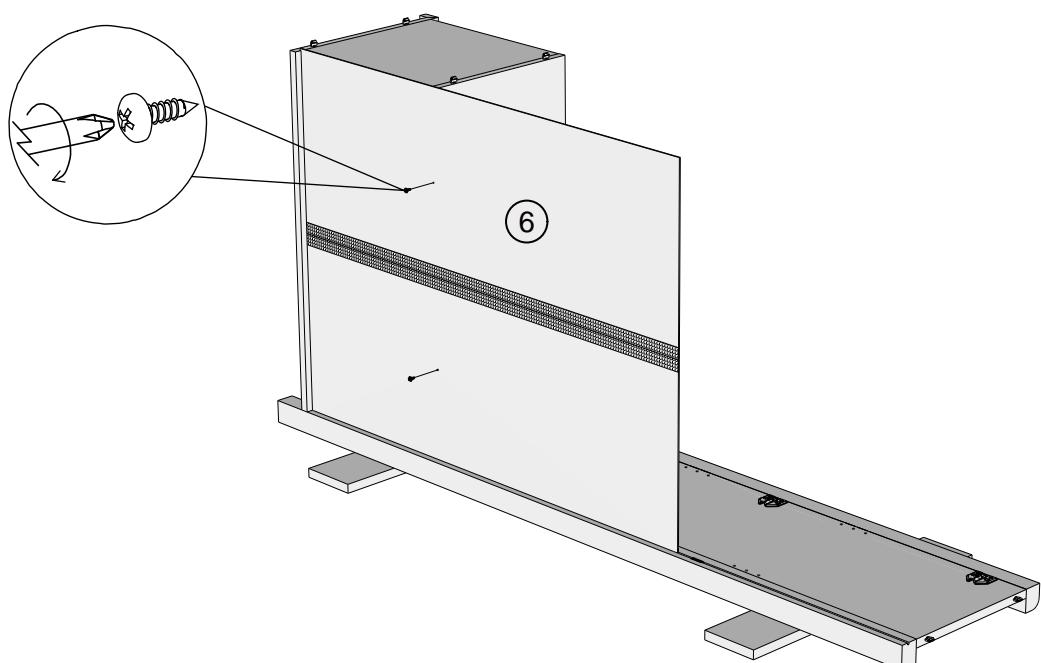


S41	Ø4 x 15mm	2			not supplied
-----	-----------	---	--	--	--------------

9

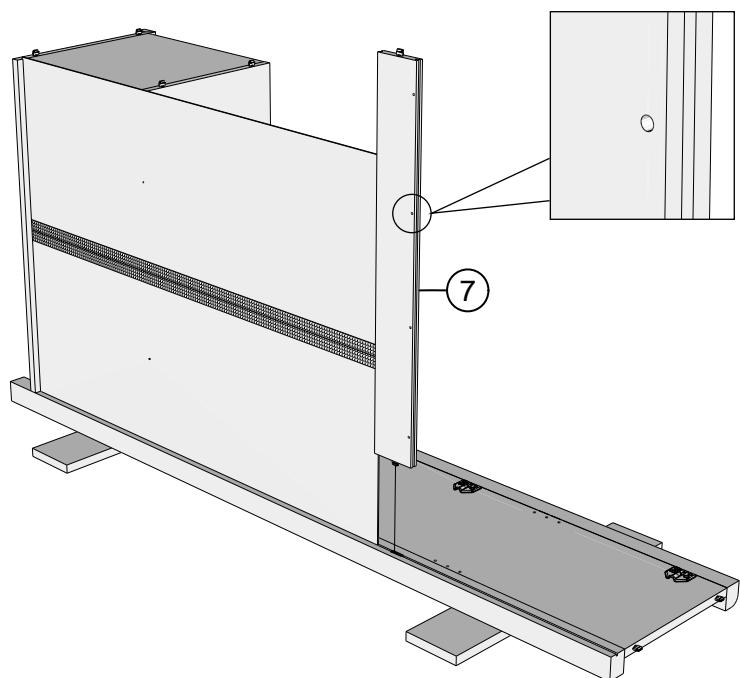


10

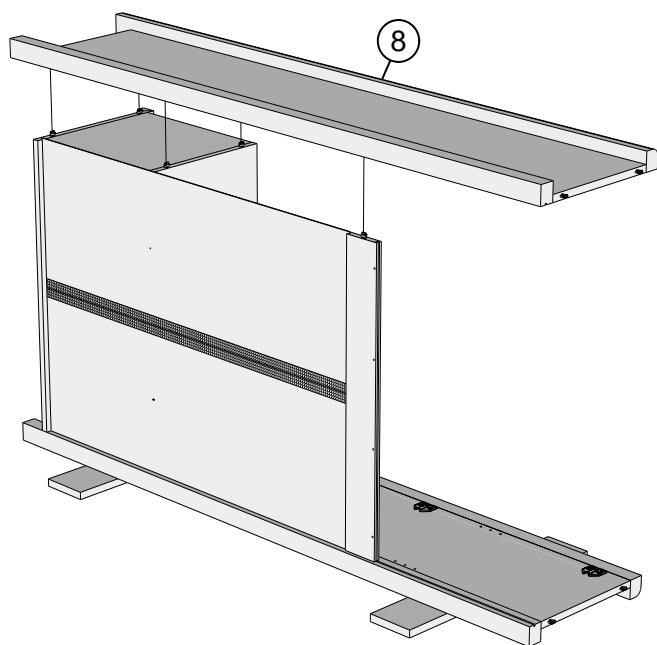


NEXT

ARCHES GLAZED CABINET H44133 Assembly instructions


11

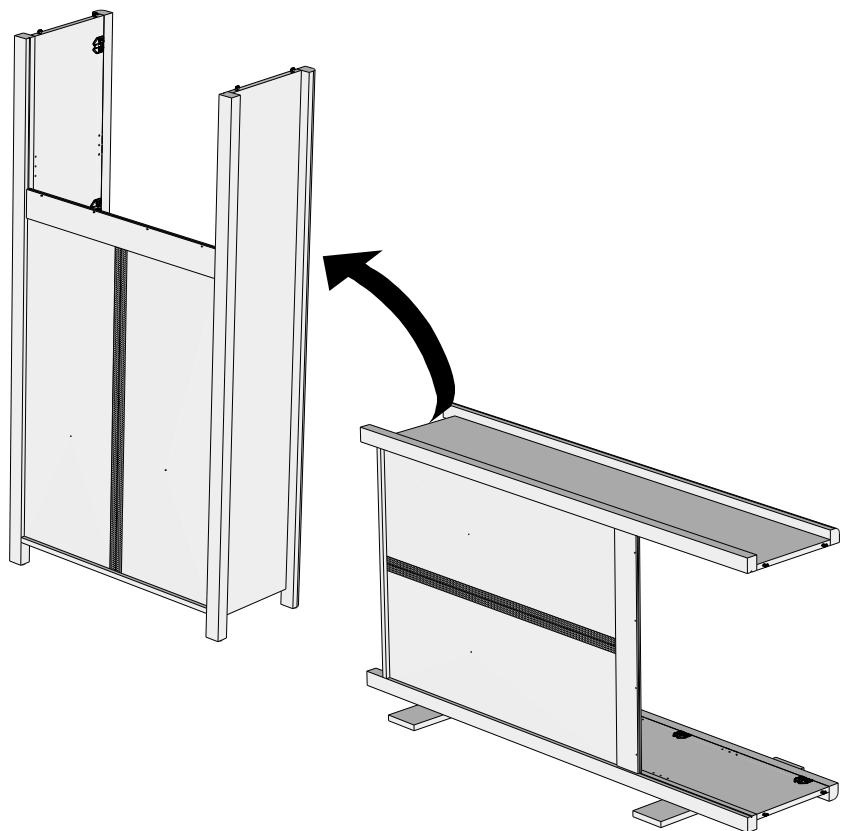


12

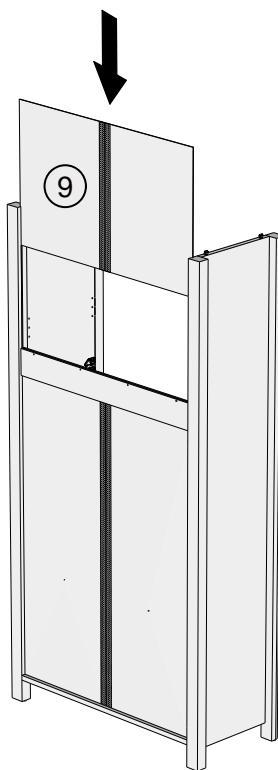


13

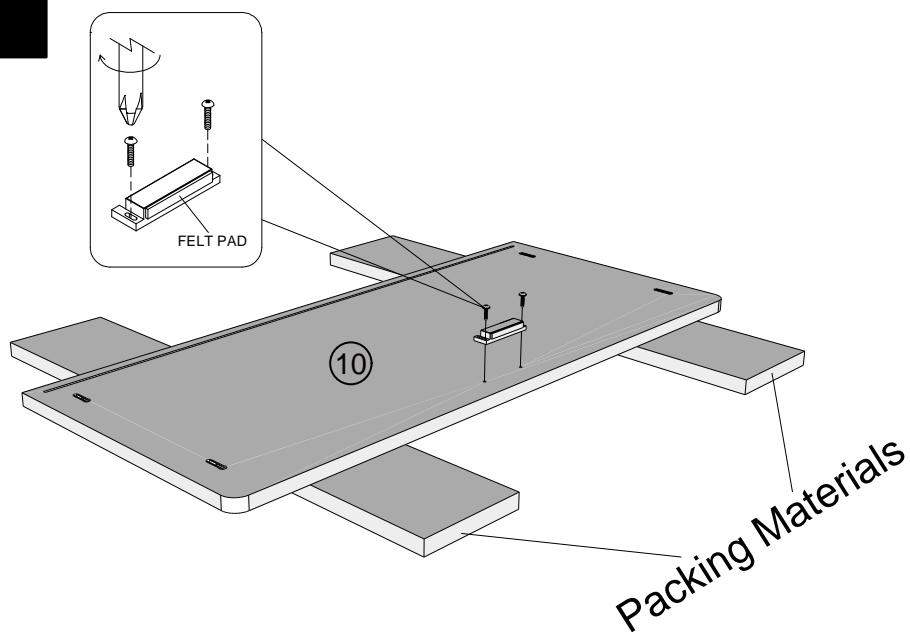

S42	Ø4 x 15mm	2		
M11	N/A	1		

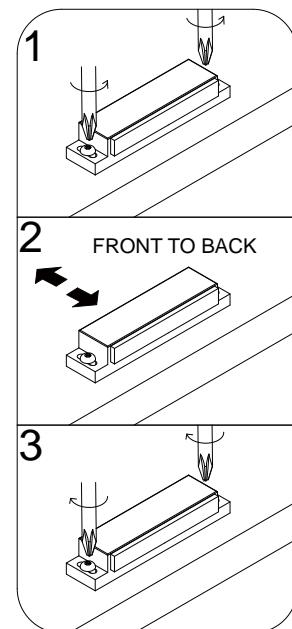


14

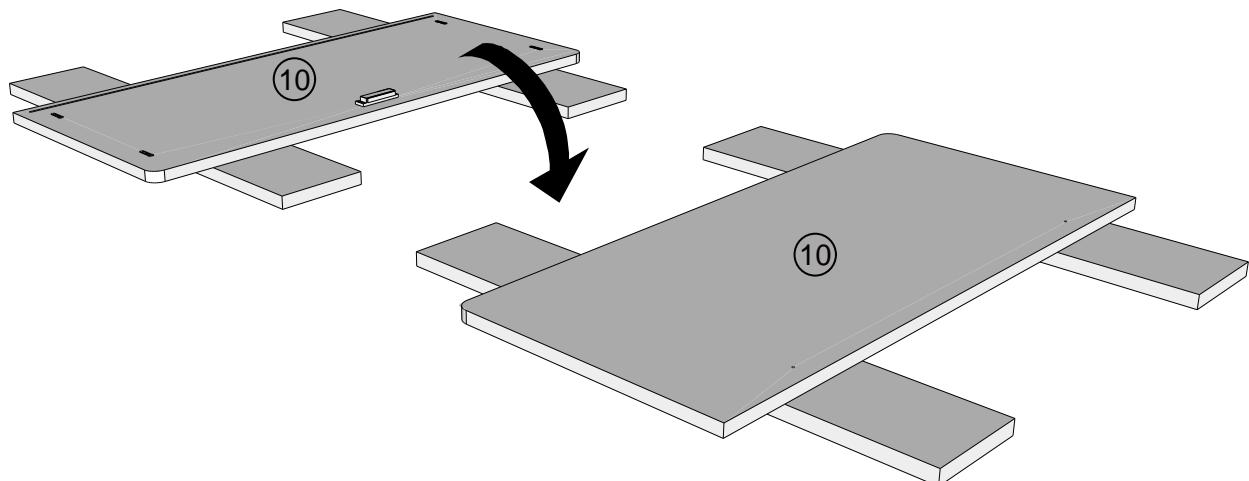


15

There are two options, please check the step 19.

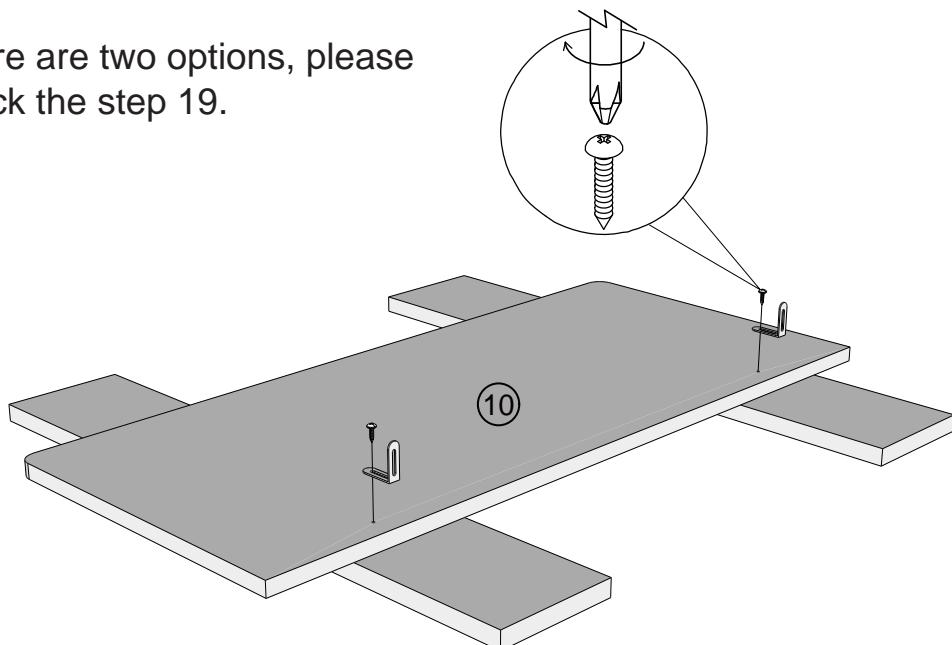


N7	N/A	2	
S41	Ø4 x 15mm	2	 not supplied

16


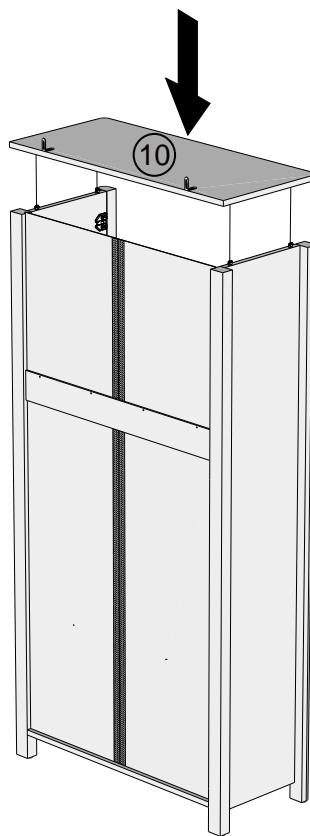


17

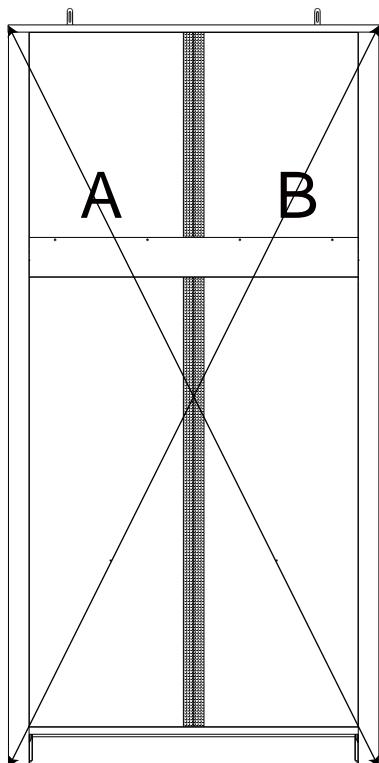

A=B

18

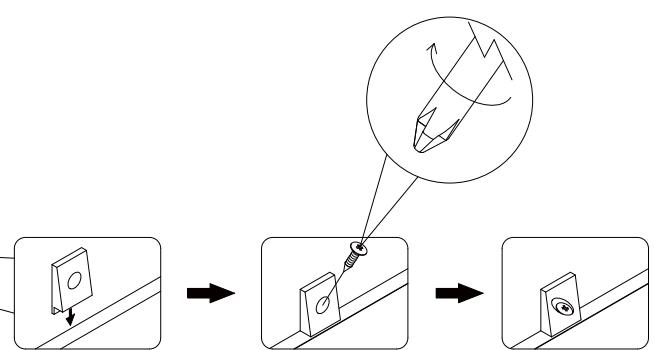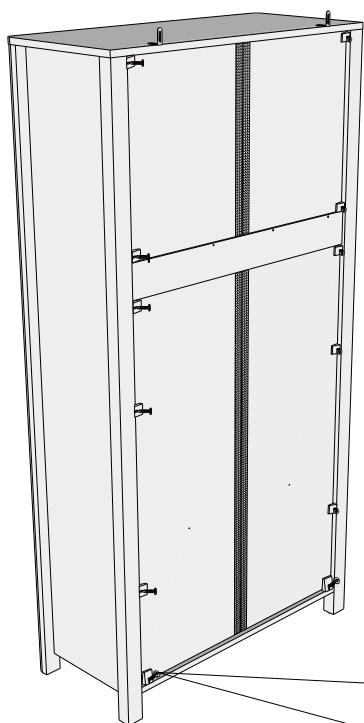

T38

N/A

12




19


We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X "L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included - Please source suitable fixing for your wall type. If in doubt please consult a qualified trades person.

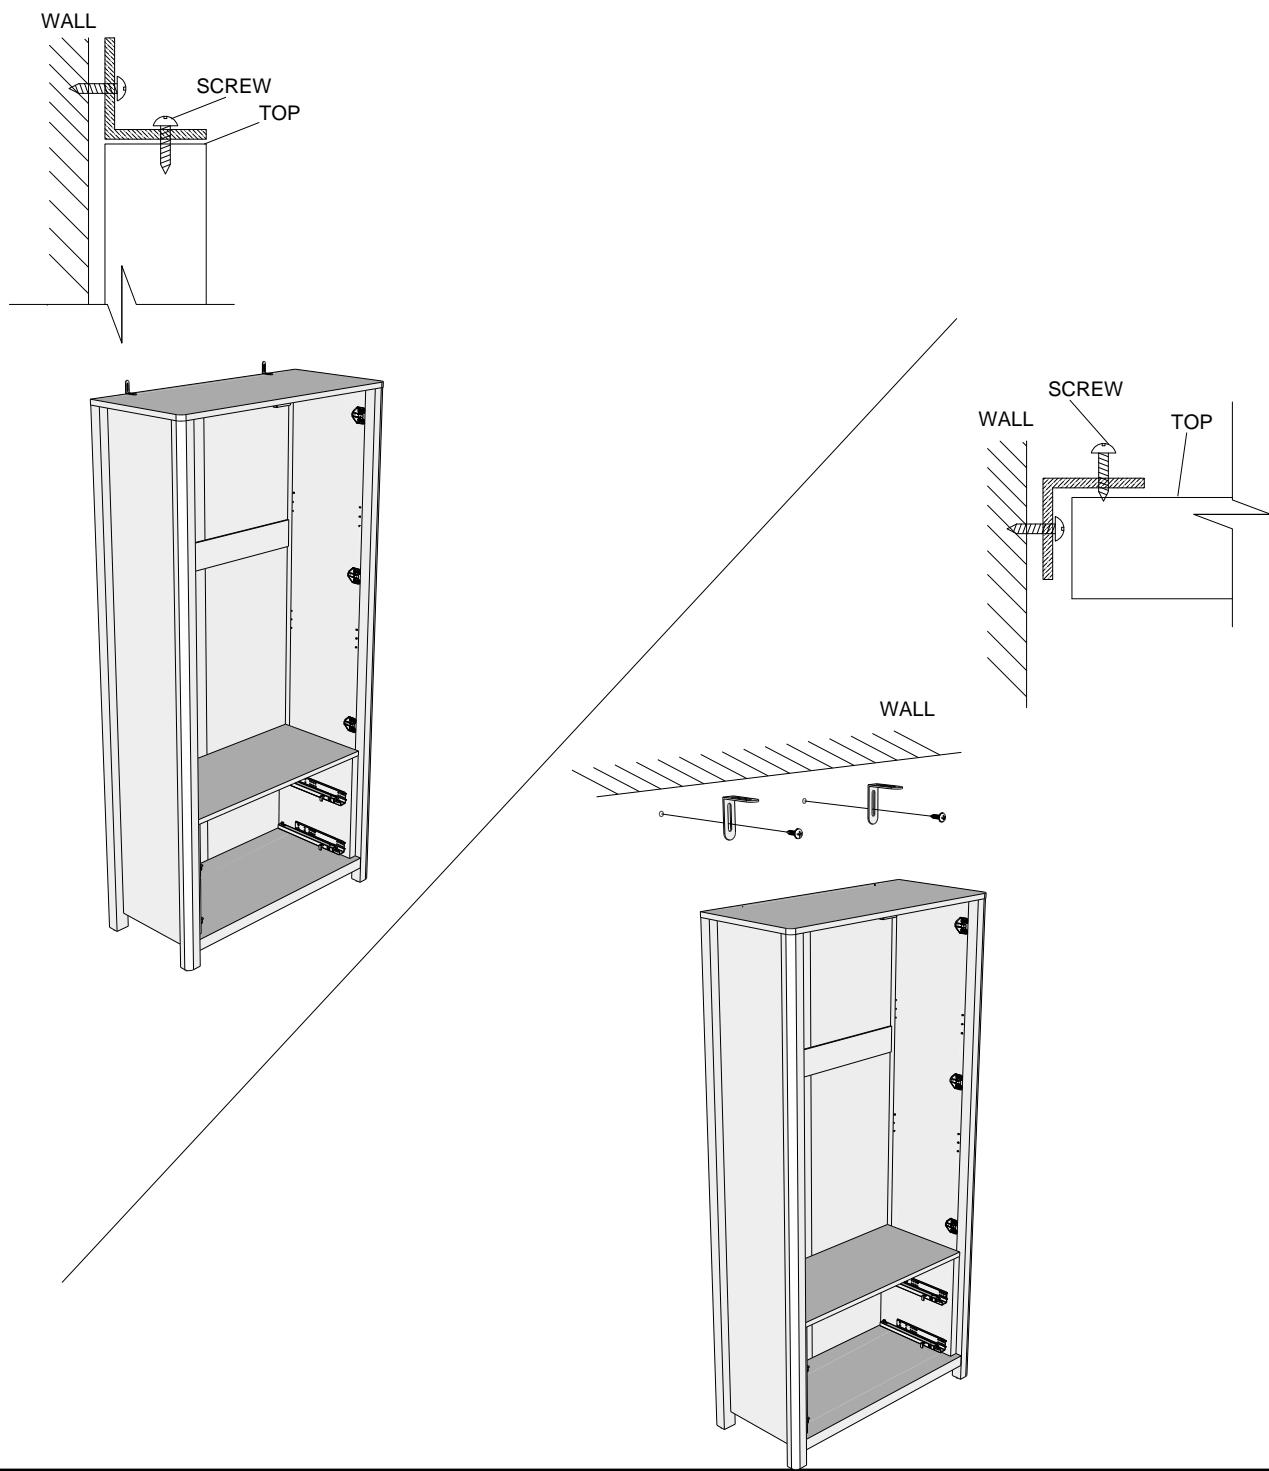


20

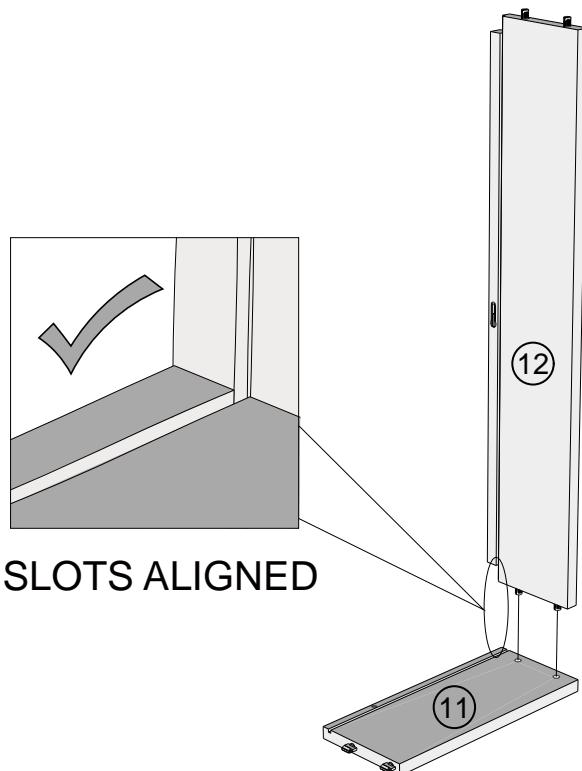


X2

21

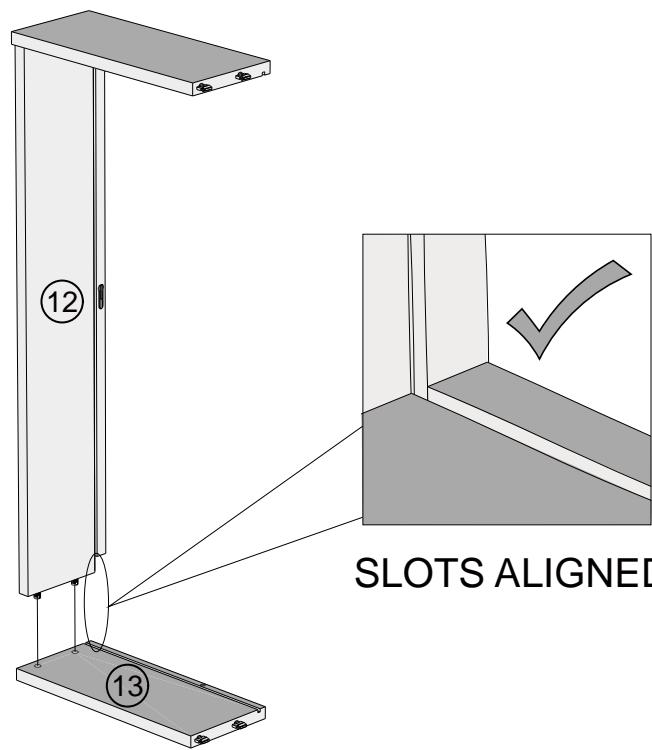


X2

22

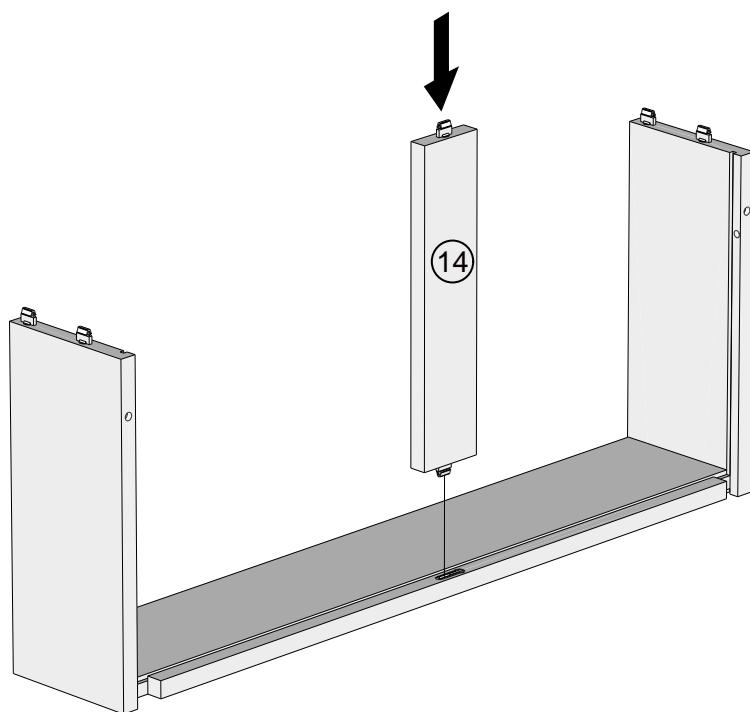


X2

23

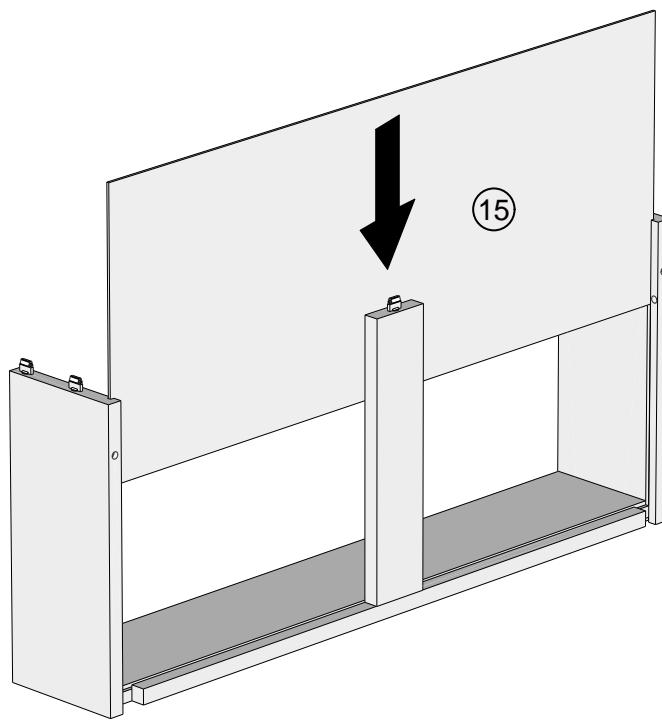


X2

24

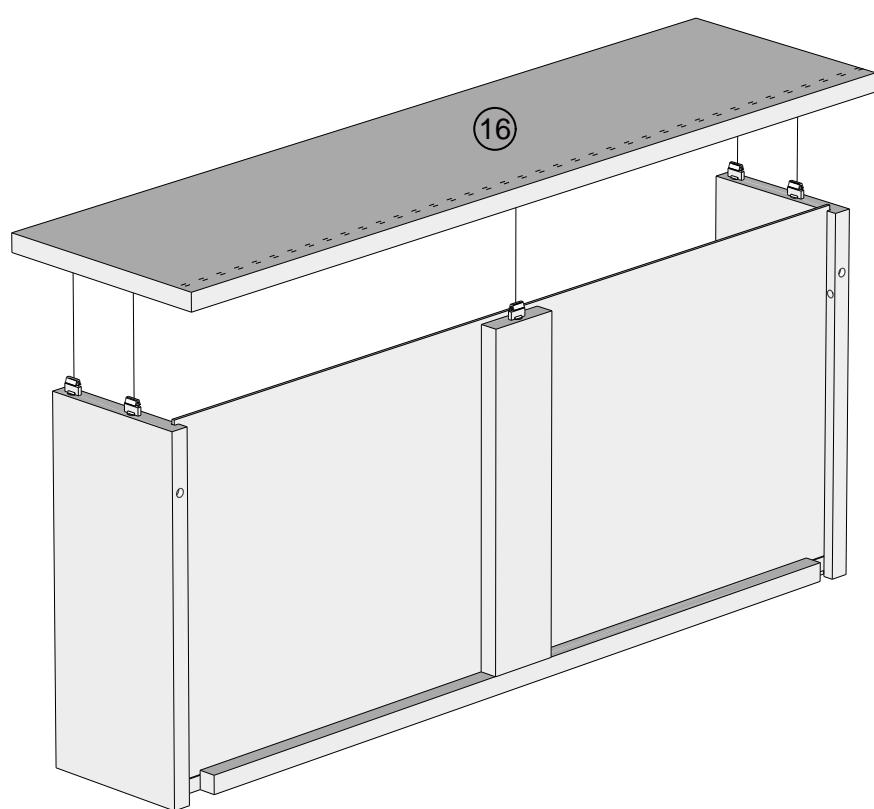


X2


25

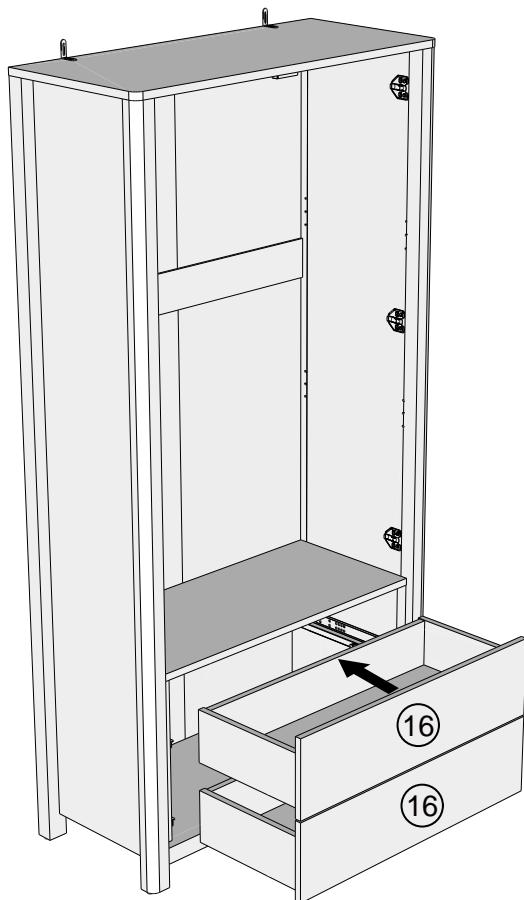

1. Pull runners out.
2. Pull plastic tabs inwards.

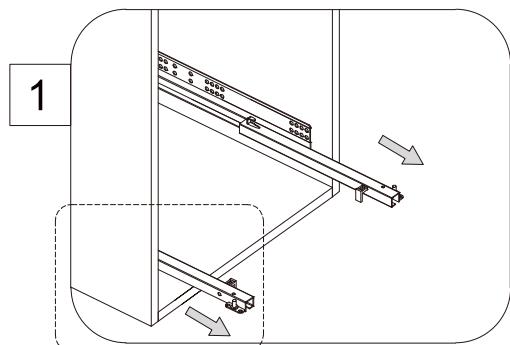

step:1.pull out runner

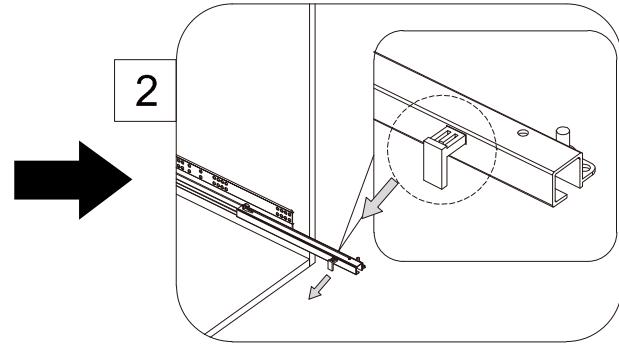


step:2.unlock

26



3 .Place drawers on runner making sure hooks at back of runners.

4.Locate pin under drawer.


5.Lock drawer in position.

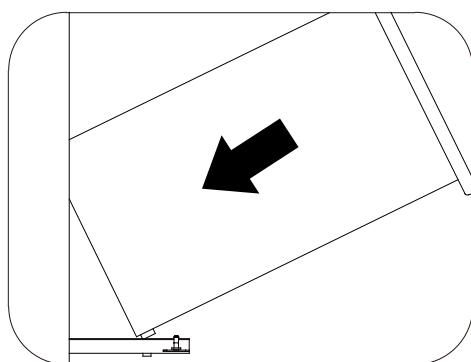


step:3.Locate

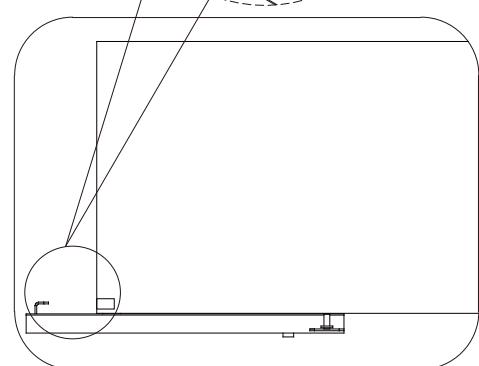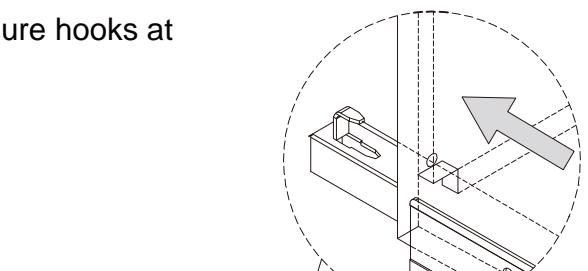



step:4.All the way

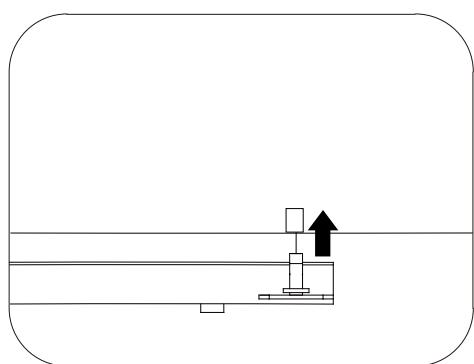

step:6.Locate adjustment pin in hole

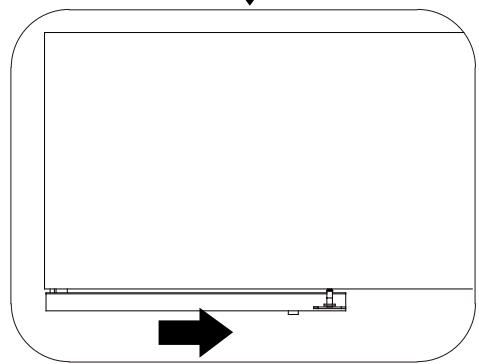


step:5.Pull runner forward

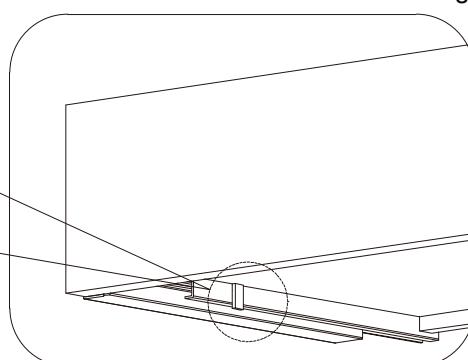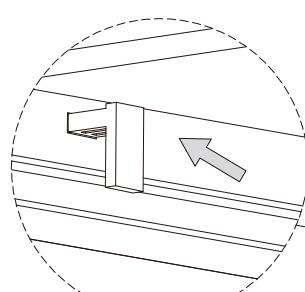


step:7.Lock

27


6. Adjust drawer height if needed.

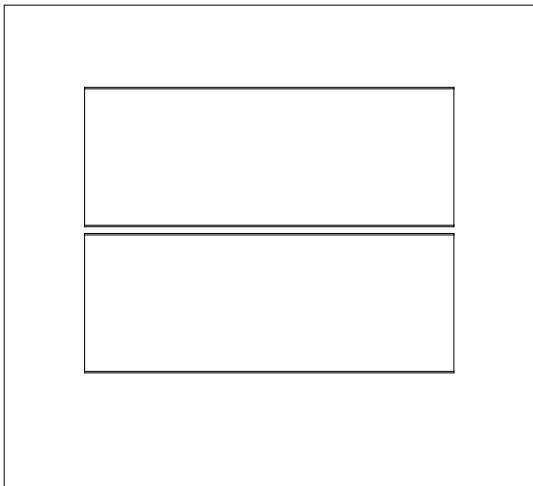


OK

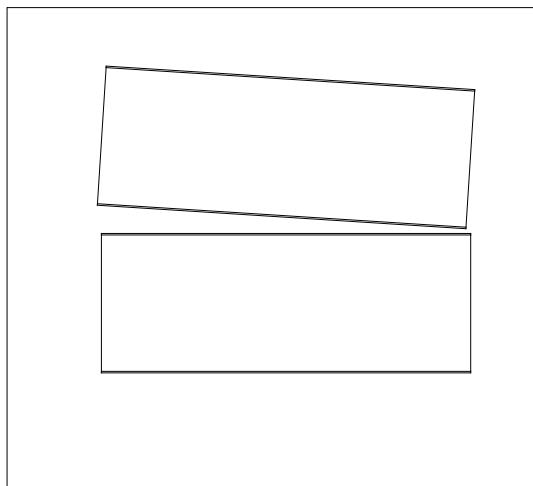

Need to adjust as below

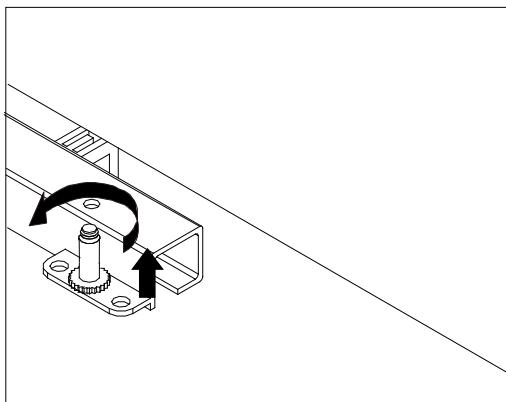


Anti-clockwise is up

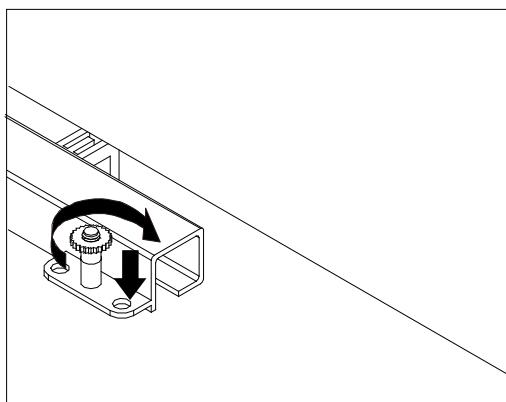


Clockwise is down

28

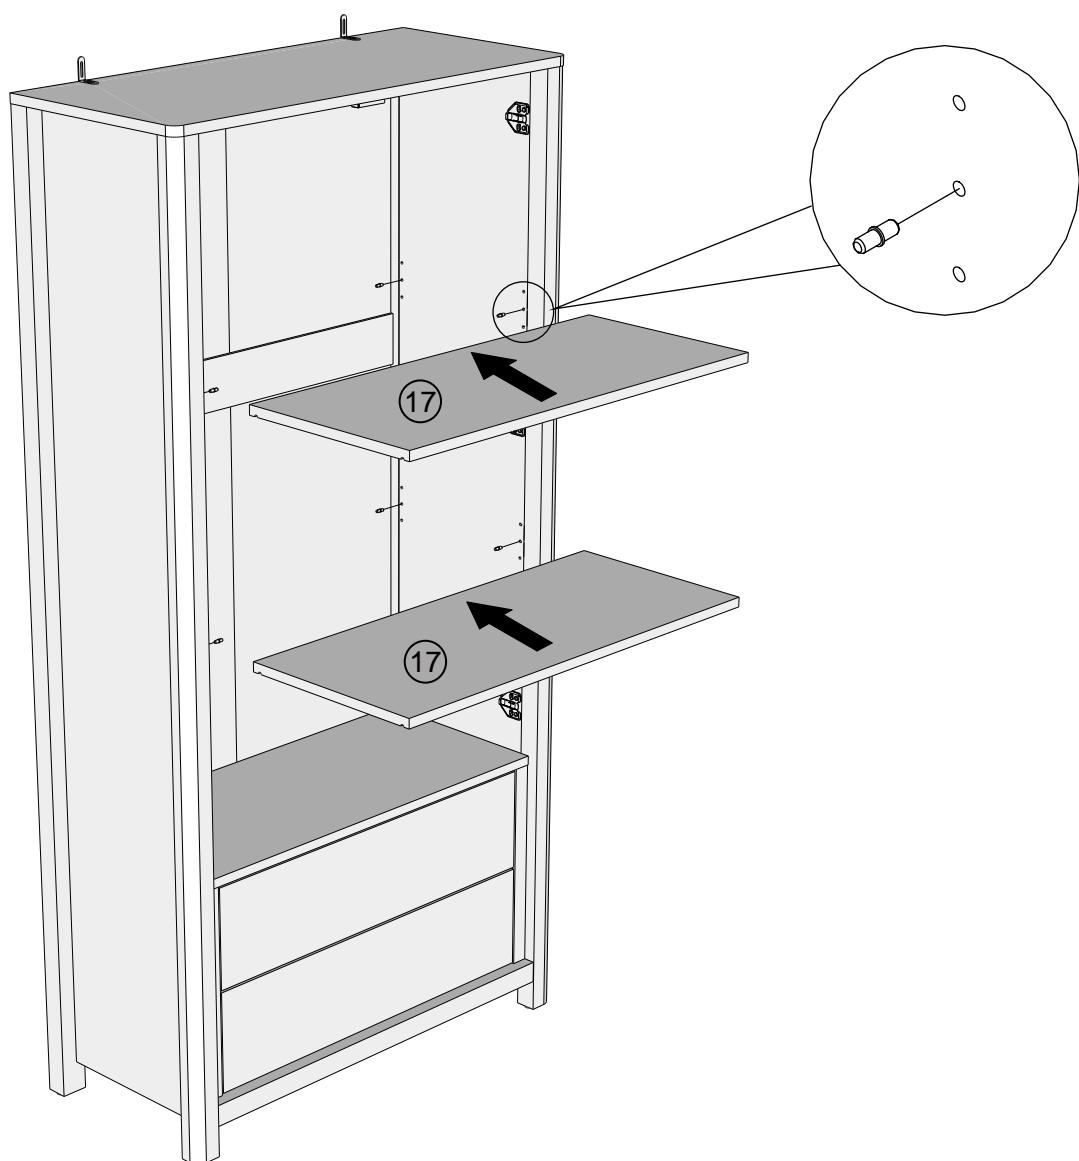


P3	Ø5 x 16mm	8	
----	-----------	---	--

29

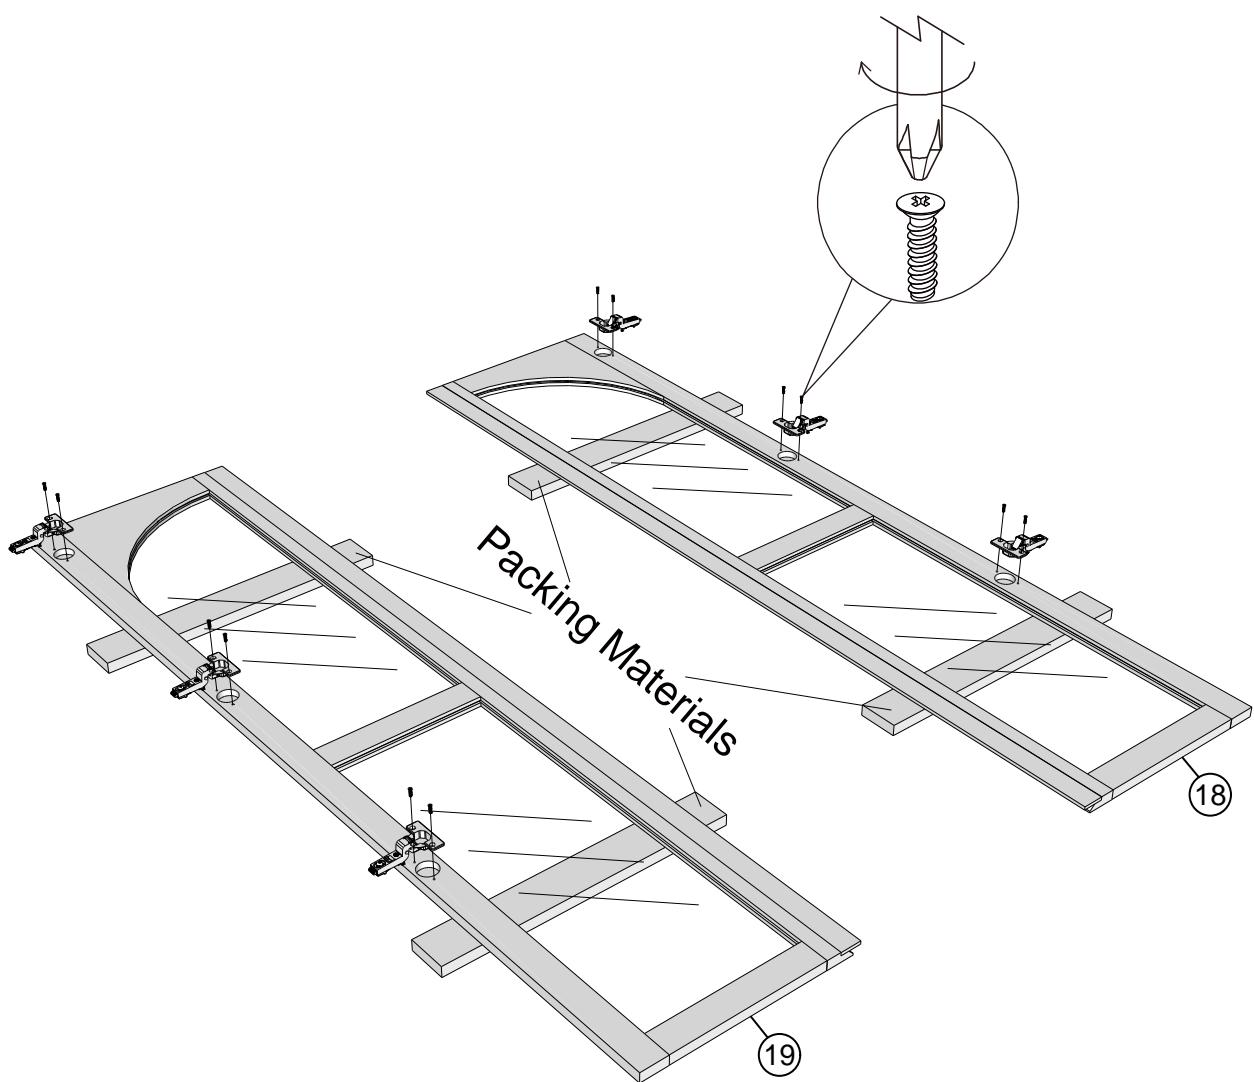


U139	Ø4.5 x 15mm	12		
C11	N/A	6		not supplied

30

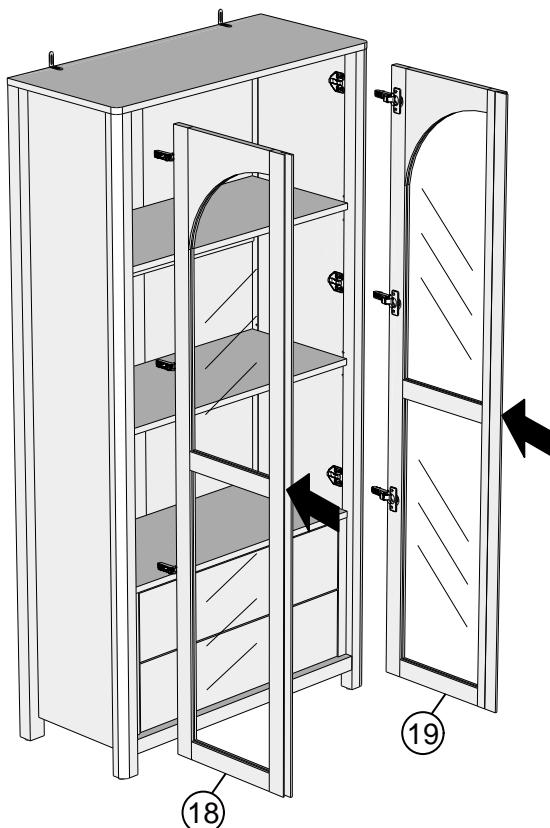


Install Hinge


Step.1:Lift up the hook

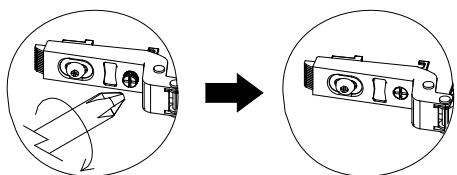

Step.2:Hook the hinge to the base Step.3:Press inside

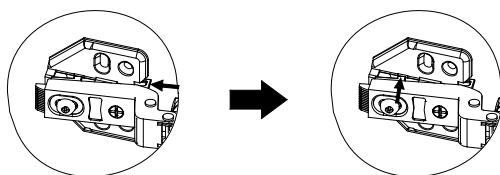


Remove Hinge

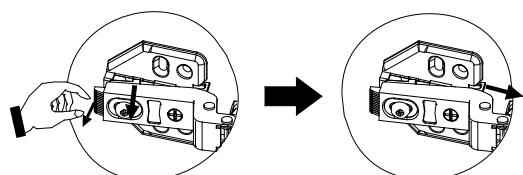


Adjust Hinge Position


VERTICAL

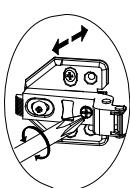

LATERAL

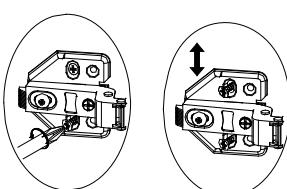


FRONT- TO-BACK

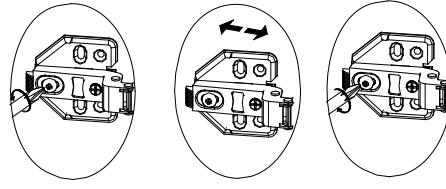

NEXT

ARCHES GLAZED CABINET H44133 Assembly instructions

31

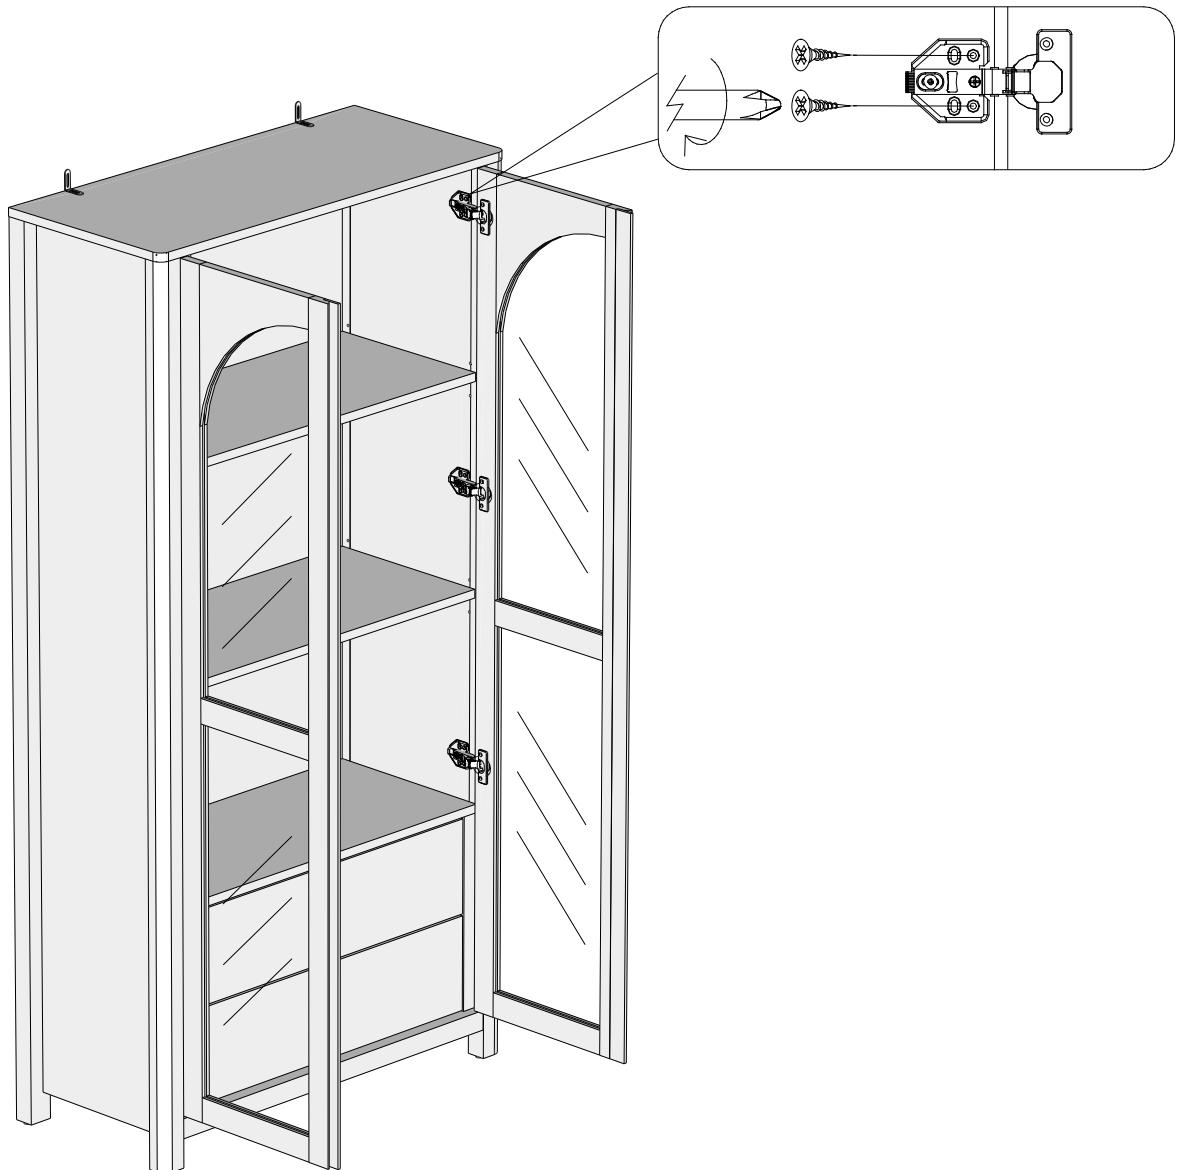


U143	Ø4 x 15mm	12		 not supplied
------	-----------	----	---	---

32

To disassemble:


Step 1: Remove the plastic wedge (T38) from the back plates, and remove the screws from the rear of the panel (7) and the panel (6);

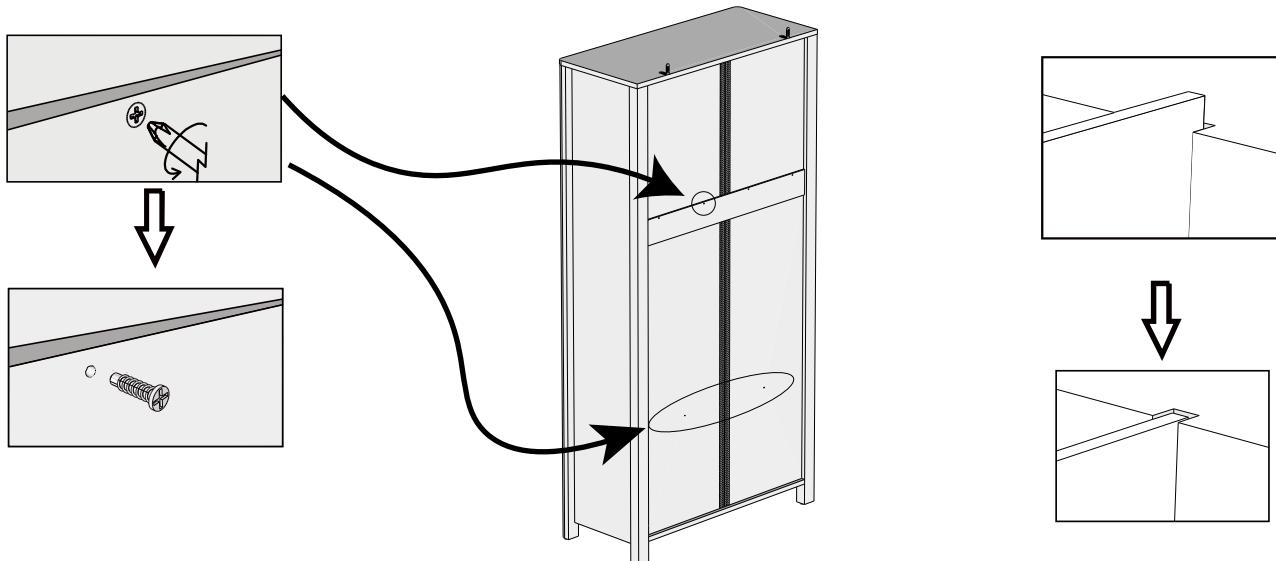

Step 2: Press down the back panel so it is clear of the top panel slot;

33

Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels;

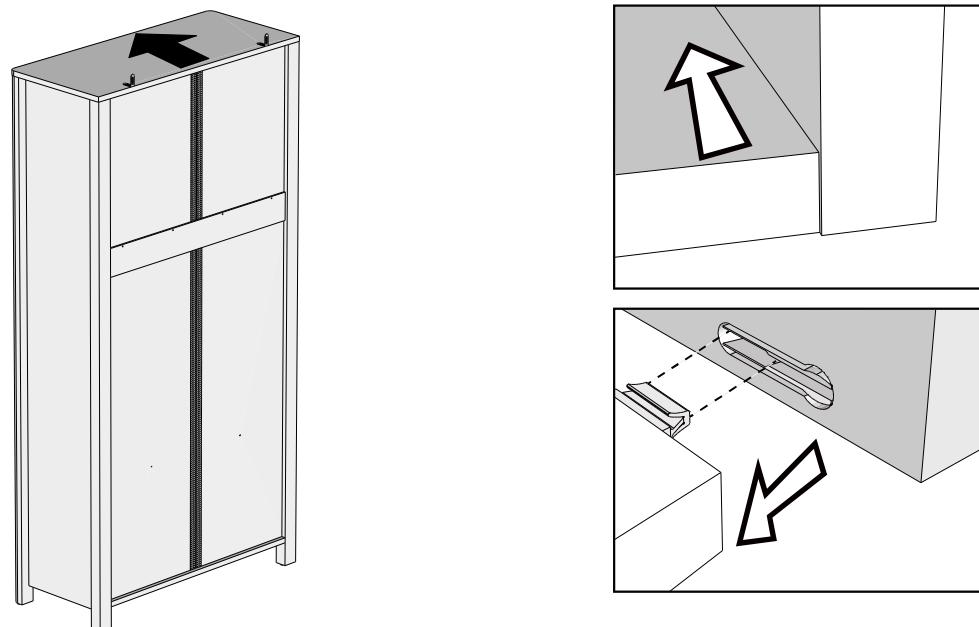


NEXT

ARCHES GLAZED CABINET

H44133

Actual product size

H180.5 x W90 x D40 cm

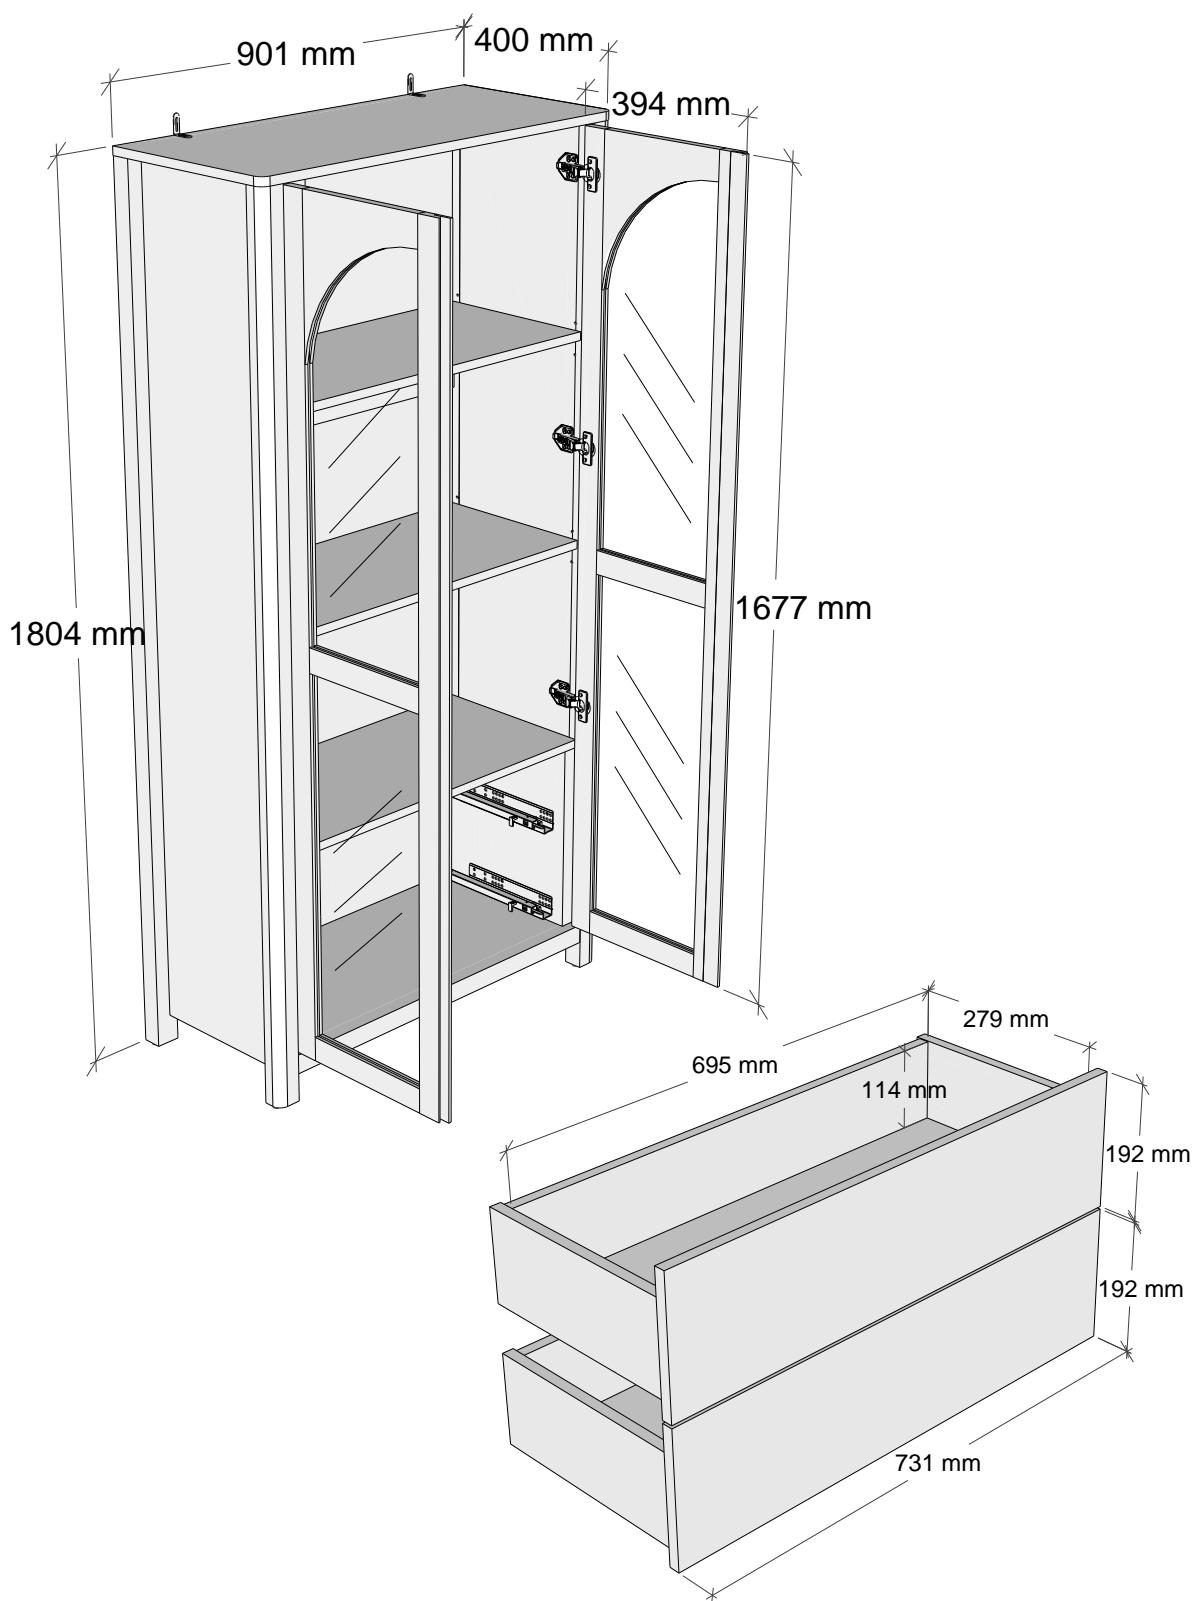

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Name and Address:NEXT RETAIL LTD.LE19 4AT
identification and model Number:H44133 ARCHES GLAZED CABINET

Date of Manufacture:

Contract number:

Nominal thickness of Glass:4mm,Annealed glass

Country of Origin:China

If a glass component is chipped or broken replace with glass of the type described on this label.Consult with the retailer with regard to obtaining a manufacturing specification and shape for replacement glass quoting the model number,batch number and date of manufacture.

Missing parts

If you are missing any fixtures and fittings for your product.
Please contact our customer service team on 0333 777 8999
and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement,refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk