

---


**NEXT**

## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

H46497 / W53277  
Assembly instructions

**Actual product size**

H85 x W140 x D40 cm

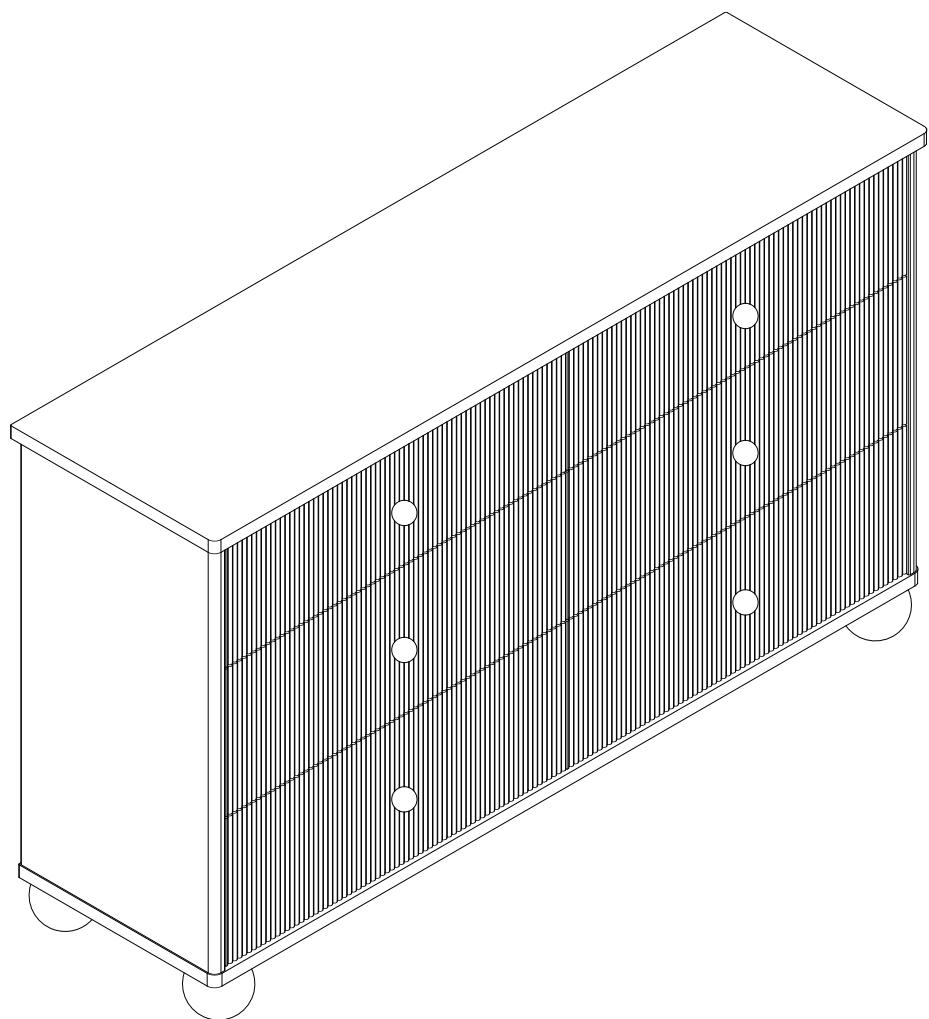

### Need Help ?

With: Assembly instruction

Missing or damaged parts

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

**CALL: 0333 777 8999**

### BEFORE YOU START

#### Number of people required to assemble


Two people are required to assemble this item



Time to assemble : 1 hour



#### Tools required

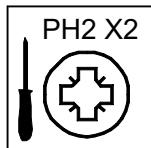

#### Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage,  
We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

#### Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.



Never allow any kind of liquid to remain on your furniture.  
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

# NEXT

HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS  
H46497 / W53277  
Assembly instructions

## GETTING TO KNOW YOUR PRODUCT

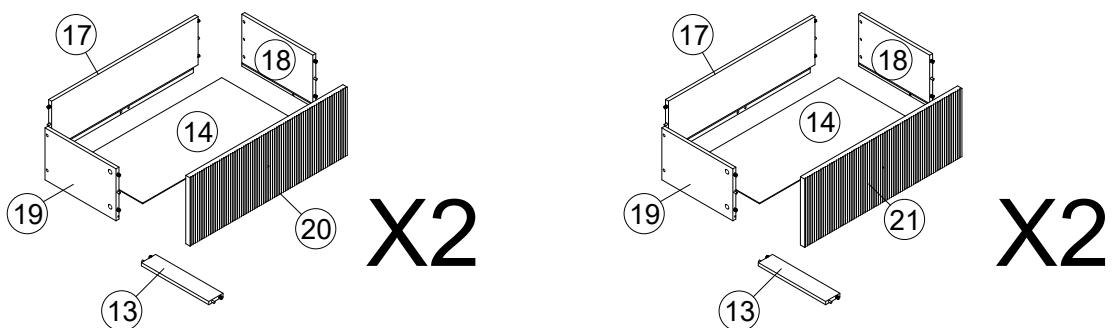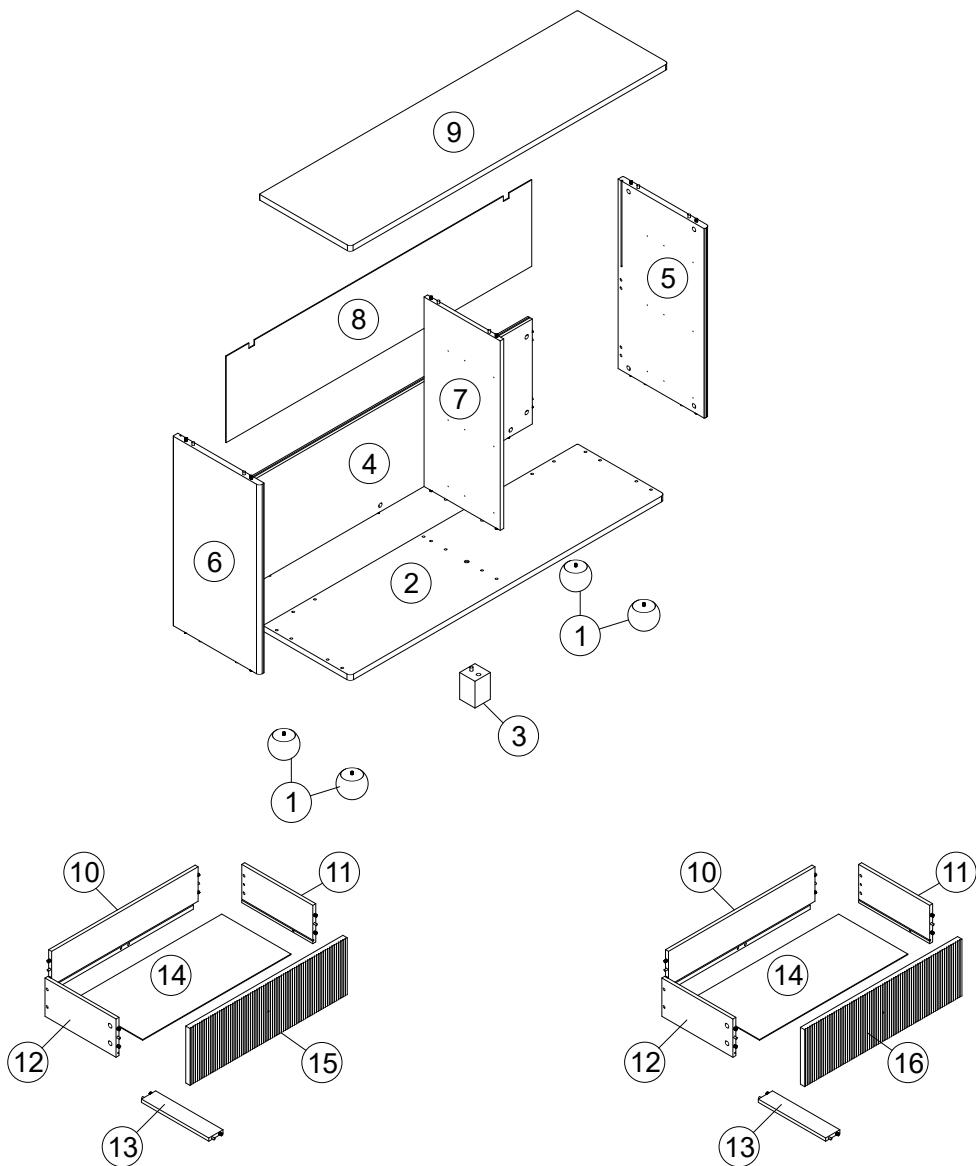





**NEXT**



# HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

## H46497 / W53277

### Assembly instructions

    Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	8.5x10cm		4	2
2	38.5x138.5cm		1	1
3	5.5x8.5cm		1	2
4	39.5x133.5cm		1	1
5	38x72cm		1	2
6	38x72cm		1	2
7	33.5x72cm		1	2
8	33.5x134.5cm		1	1
9	40x140cm		1	1
10	14.5x62cm		2	1
11	14x30cm		2	1
12	14x30cm		2	1
13	6x28.5cm		6	1
14	29x62.5cm		6	1

  Ref	Dimensions	Visual	Qty	Ctn
15	21x66.5cm		1	2
16	21x66.5cm		1	2
17	19.5x62cm		4	1
18	19x30cm		4	1
19	19x30cm		4	1
20	25x66.5cm		2	2
21	25x66.5cm		2	2

# NEXT


## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

### H46497 / W53277

### Assembly instructions

#### Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
S41	Ø4 x 15mm	2	1
W14	Ø8 x 30mm	1	1
U139	Ø4.5 x 15mm	36	2
Z25	Ø4 x 27mm	6	1
B2	Ø15 x 10mm	N/A	2
B3	Ø15 x 12mm	N/A	2
B8	Ø8 x 38mm	N/A	2
D3	Ø6 x 30mm	N/A	2
D6	Ø8 x 30mm	N/A	2

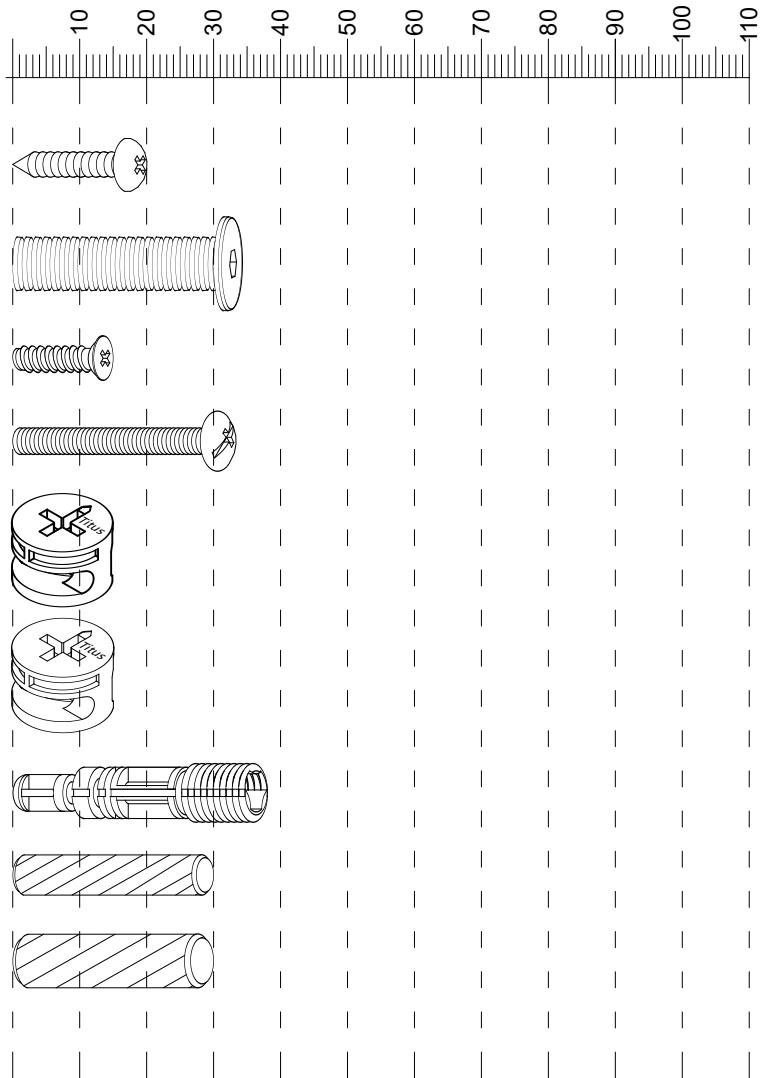

#### Fixtures and fittings supplied ( not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T5	N/A	1	N/A	
T38	N/A	6	1	
T39	N/A	2	N/A	
L	N/A	6	N/A	

#### Fixtures and fittings supplied ( not to scale)



Ref	Dimensions	Qty	Spare Qty	Visual
R	N/A	6	N/A	
E47	N/A	6	N/A	
O1	Ø21mm	24	2	

# NEXT


## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

H46497 / W53277  
Assembly instructions

1

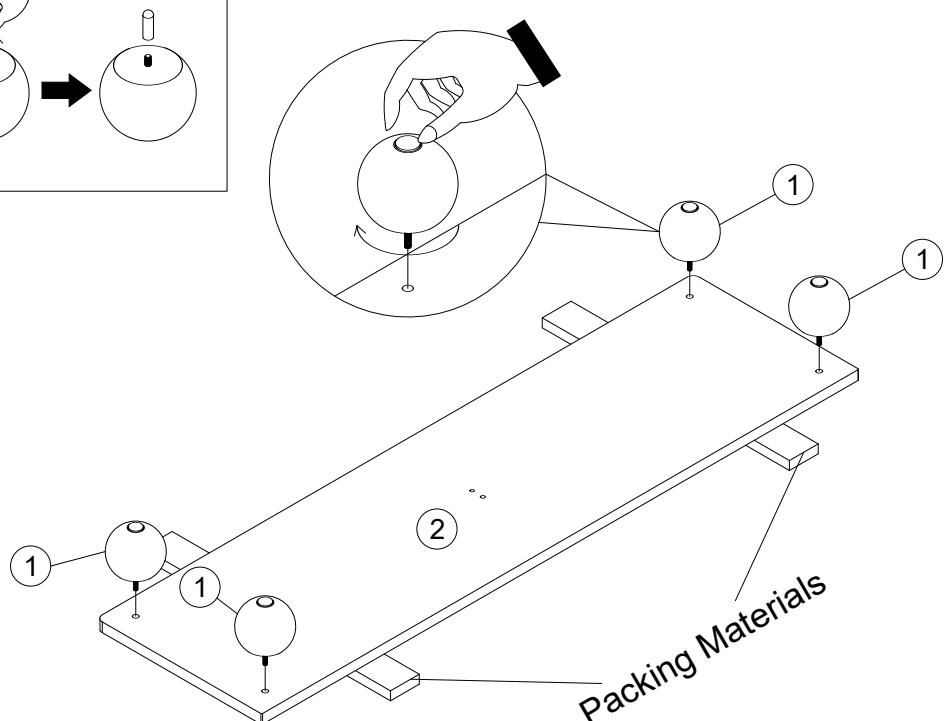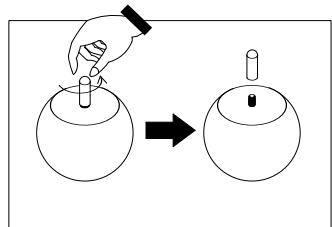

2

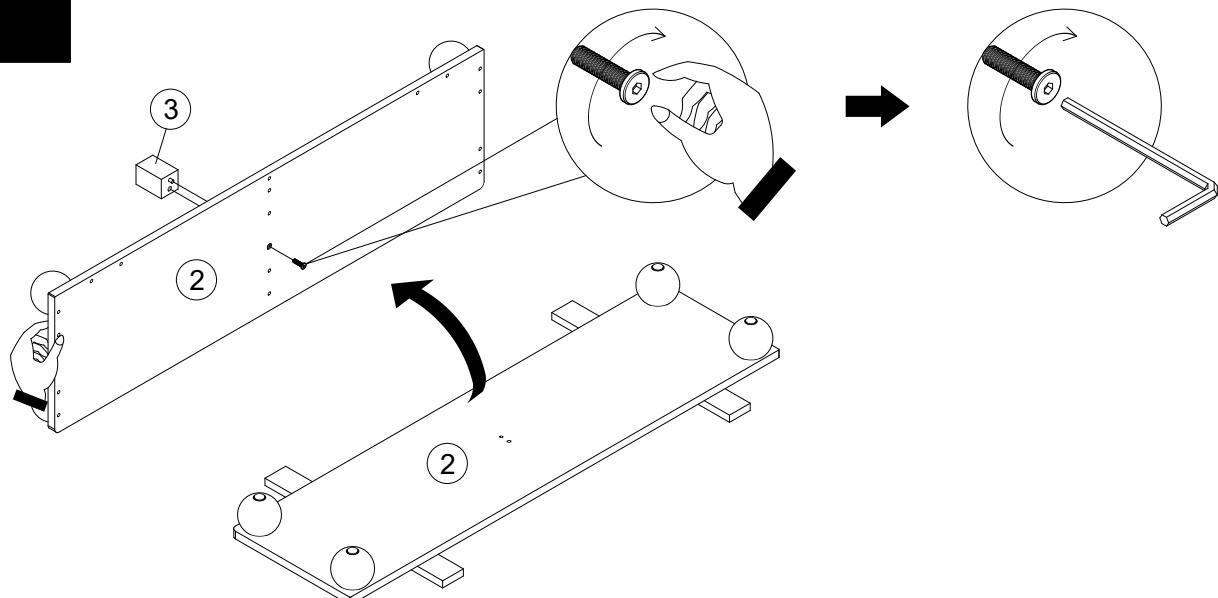


W14	Ø8 x 30mm	1	
T5	N/A	1	

# NEXT


## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

H46497 / W53277  
Assembly instructions

3

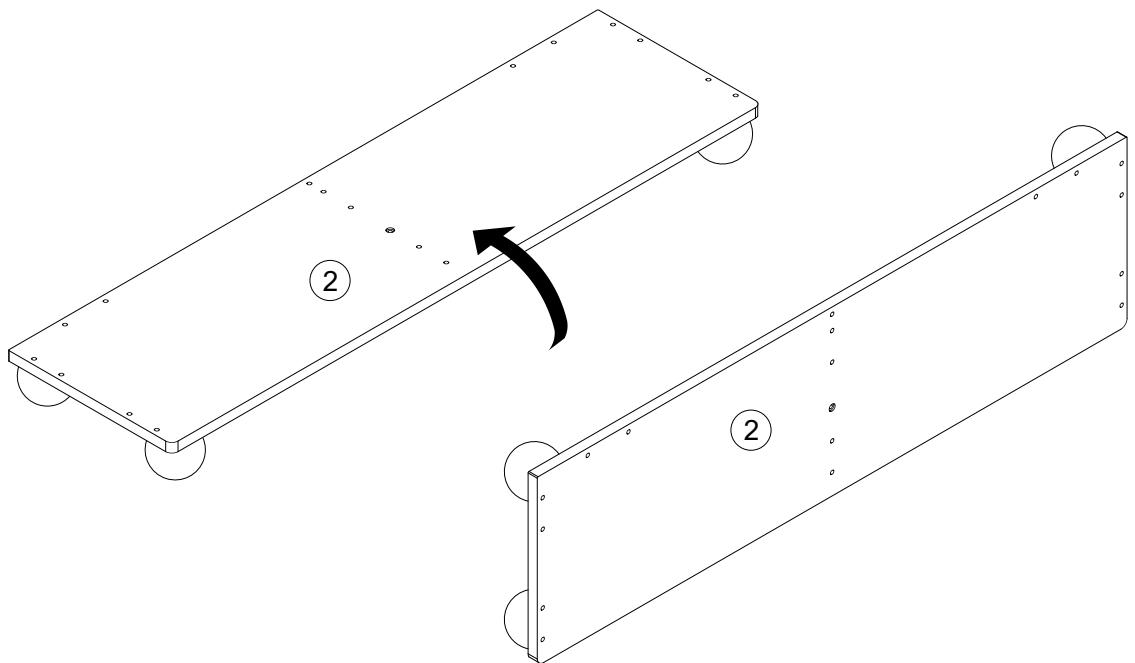

4

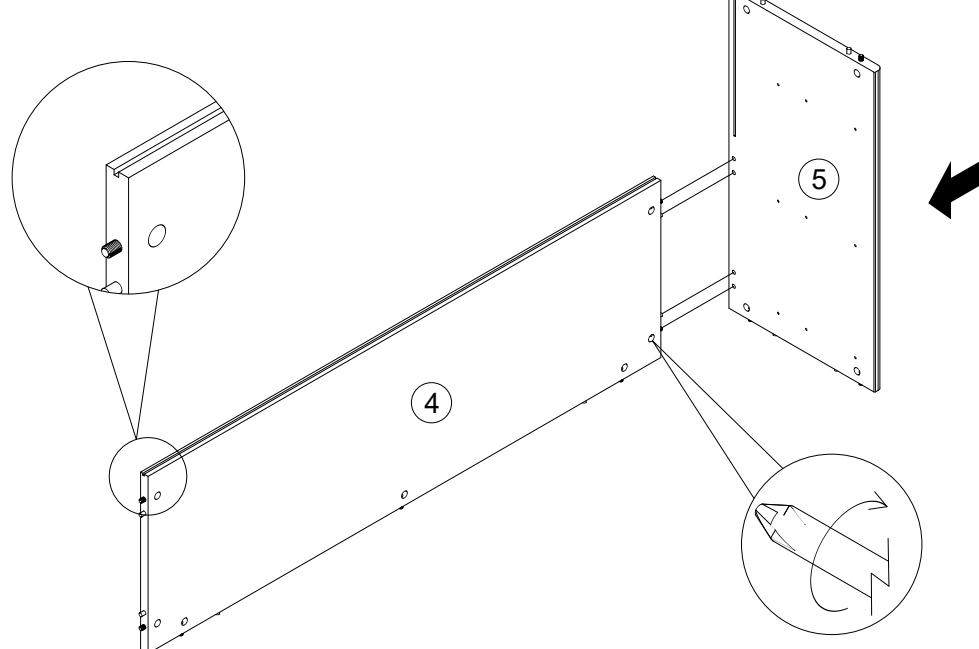


# NEXT


## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

H46497 / W53277  
Assembly instructions

5

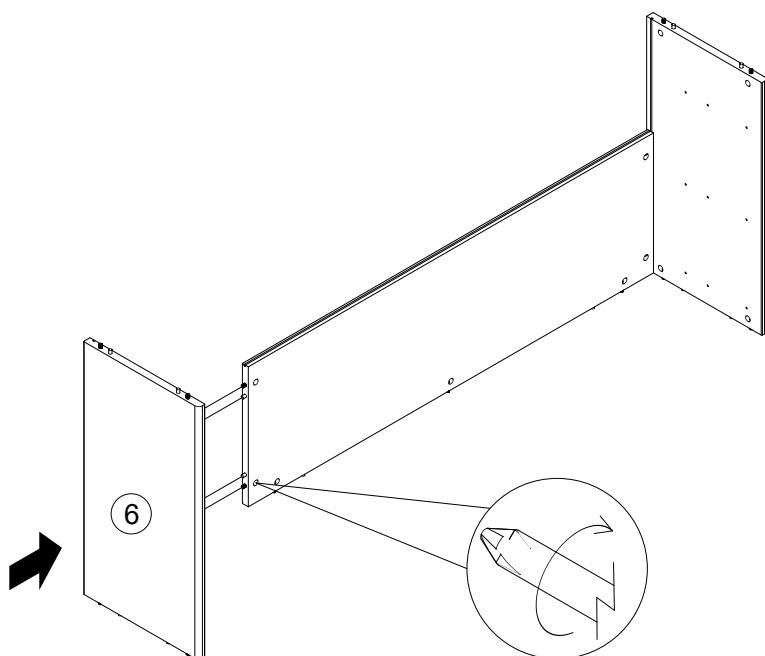

6

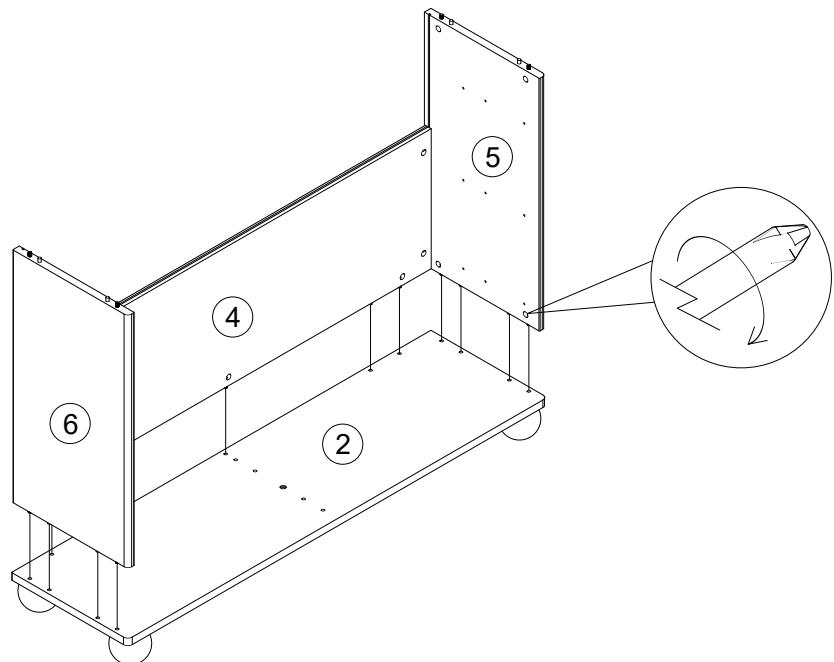


# NEXT


## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

H46497 / W53277  
Assembly instructions

7

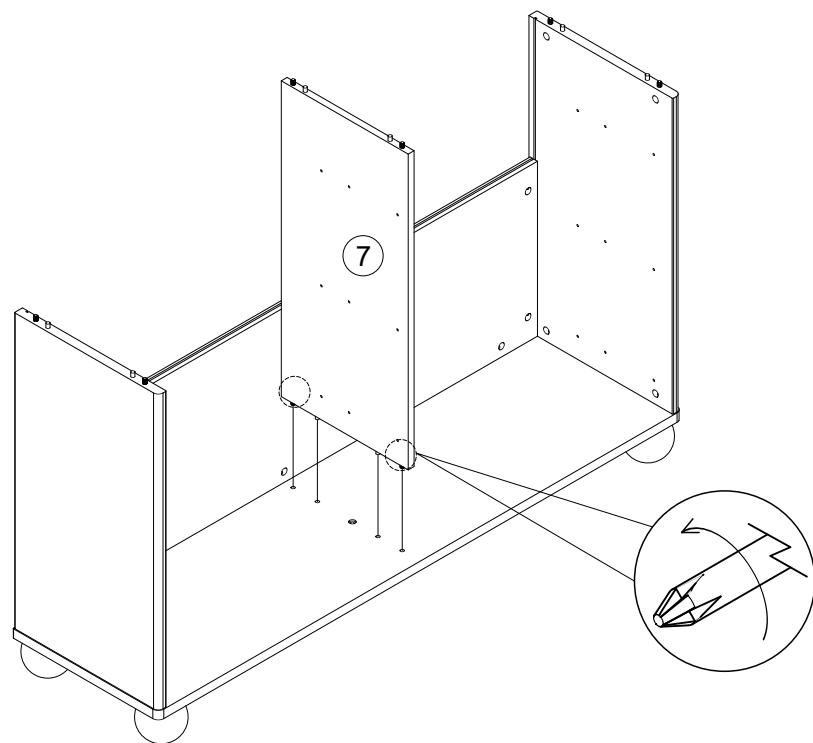


8

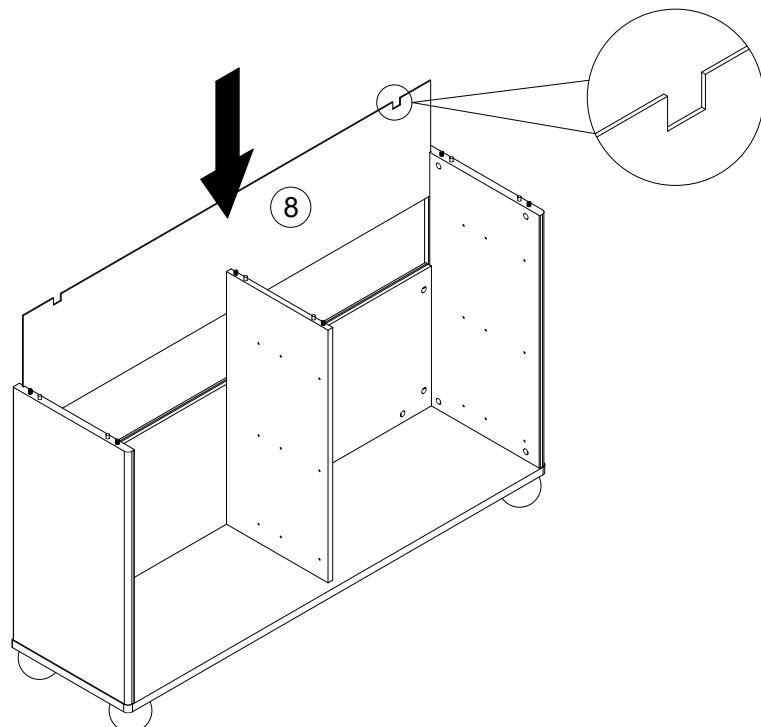


---

**NEXT****HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS**  
H46497 / W53277  
Assembly instructions

9

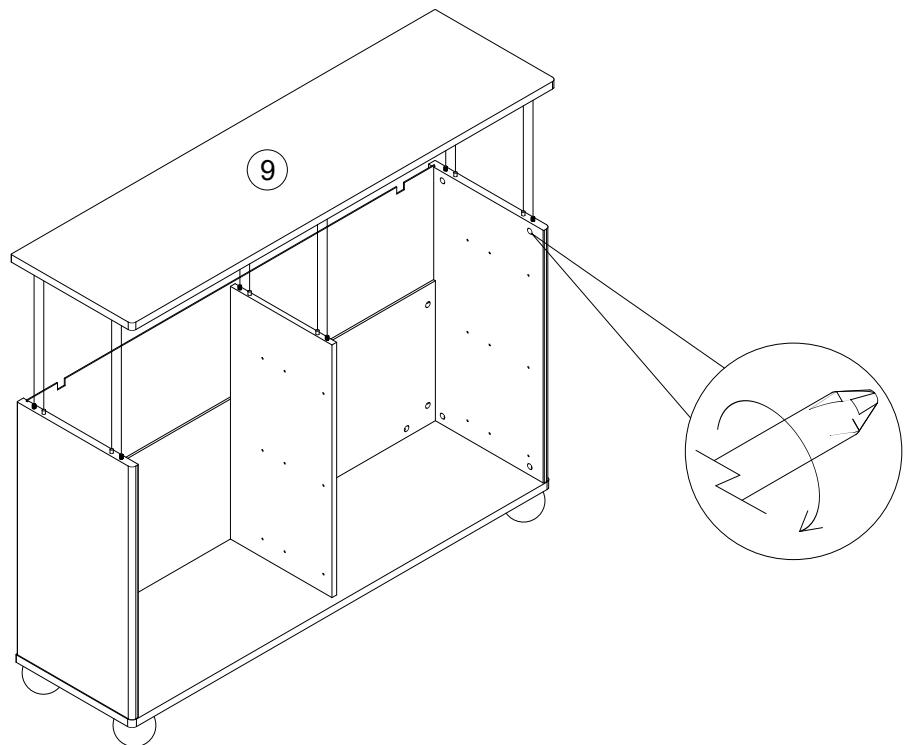

10

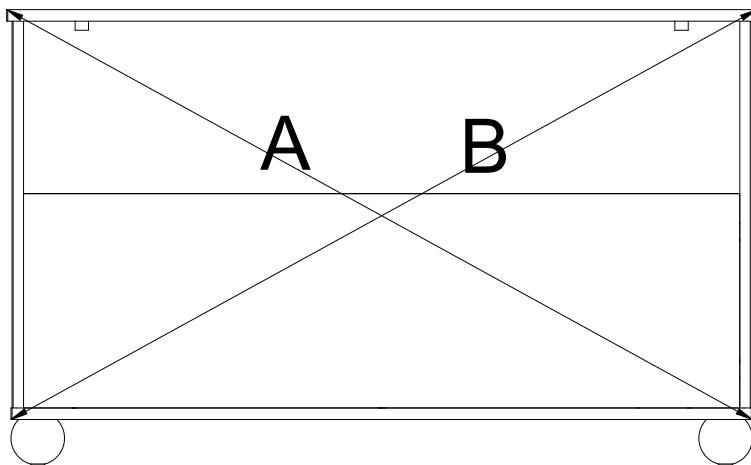
**A=B**

# NEXT

## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

H46497 / W53277  
Assembly instructions

11

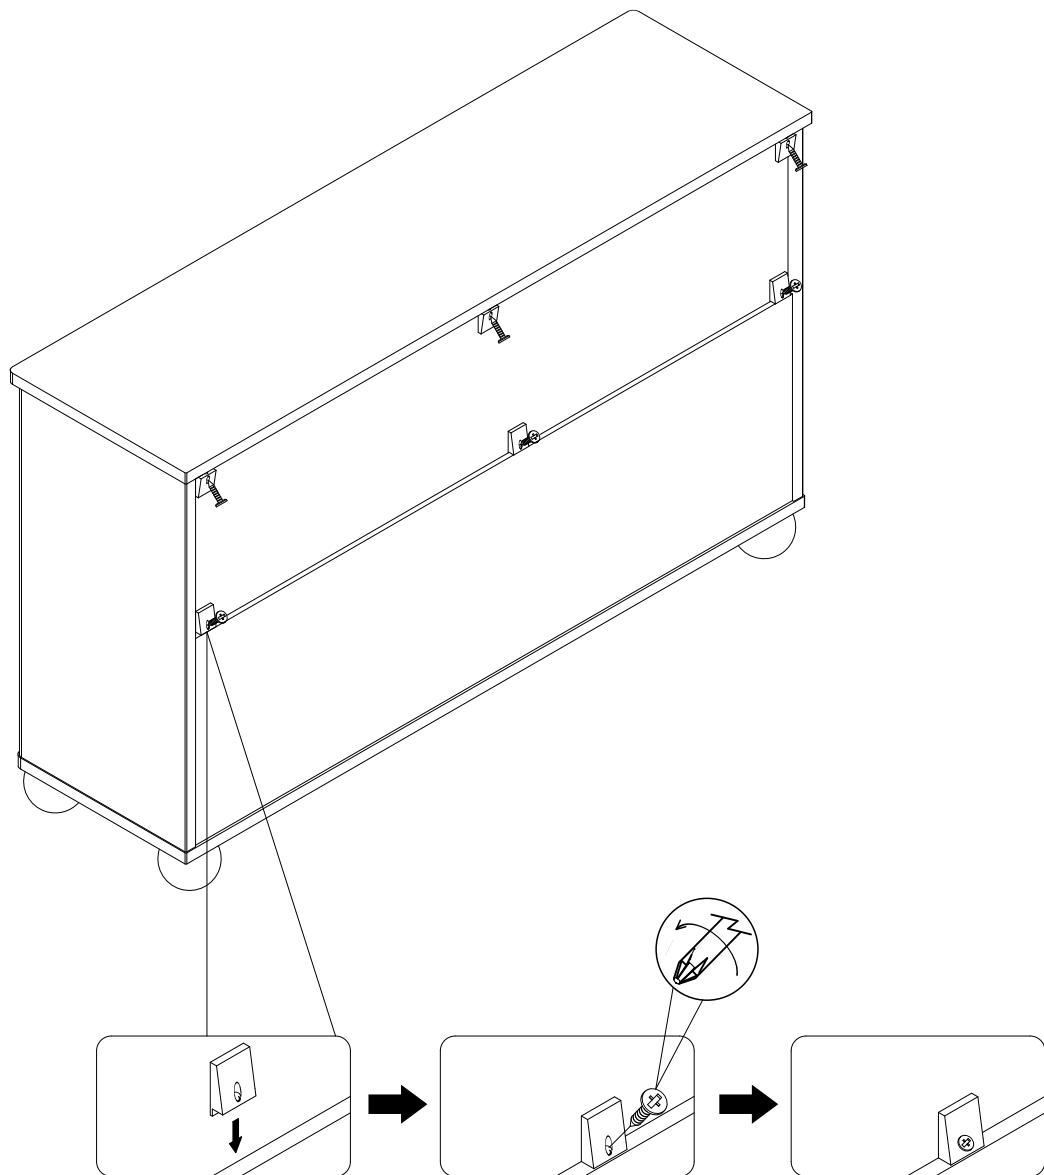

T38	N/A	6		
-----	-----	---	---	---

**NEXT**

# HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS


## H46497 / W53277

### Assembly instructions

**12**

We recommend the use of the wall attachment bracket/strap provided for safety reasons.  
Secure the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).  
To hide the strap behind the unit, drill the hole lower than the top of unit.

Attach the other end of the strap to the underside of the top panel with screw.  
Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.  
NB: Wall fixings are not included - Please source suitable fixing for your wall type.  
If in doubt please consult a qualified trades person.

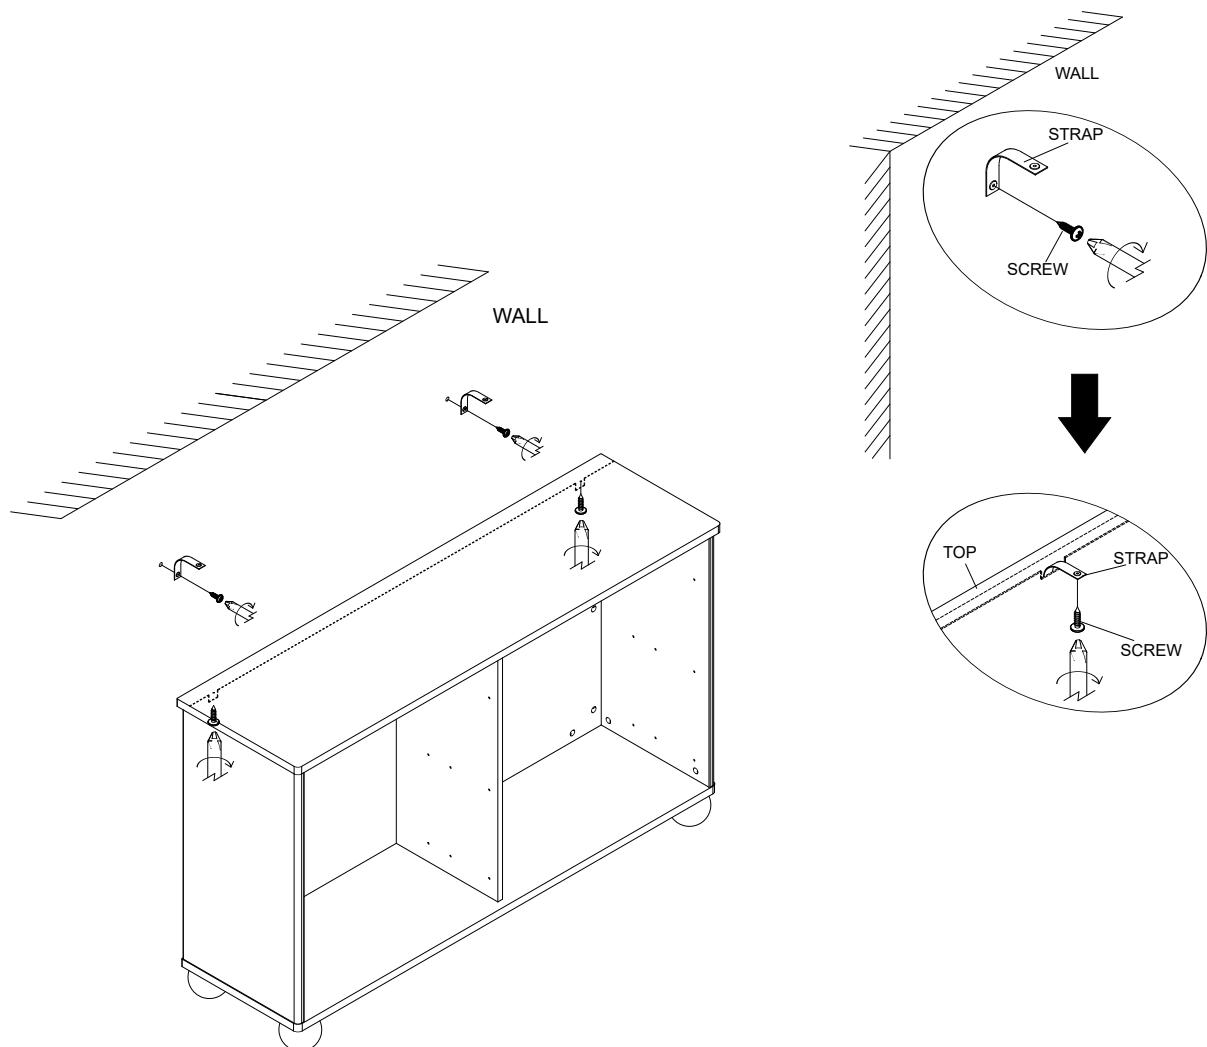

S41	Ø4 x 15mm	2	  not supplied
T39	N/A	2	


**NEXT**

# HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

## H46497 / W53277

### Assembly instructions

13

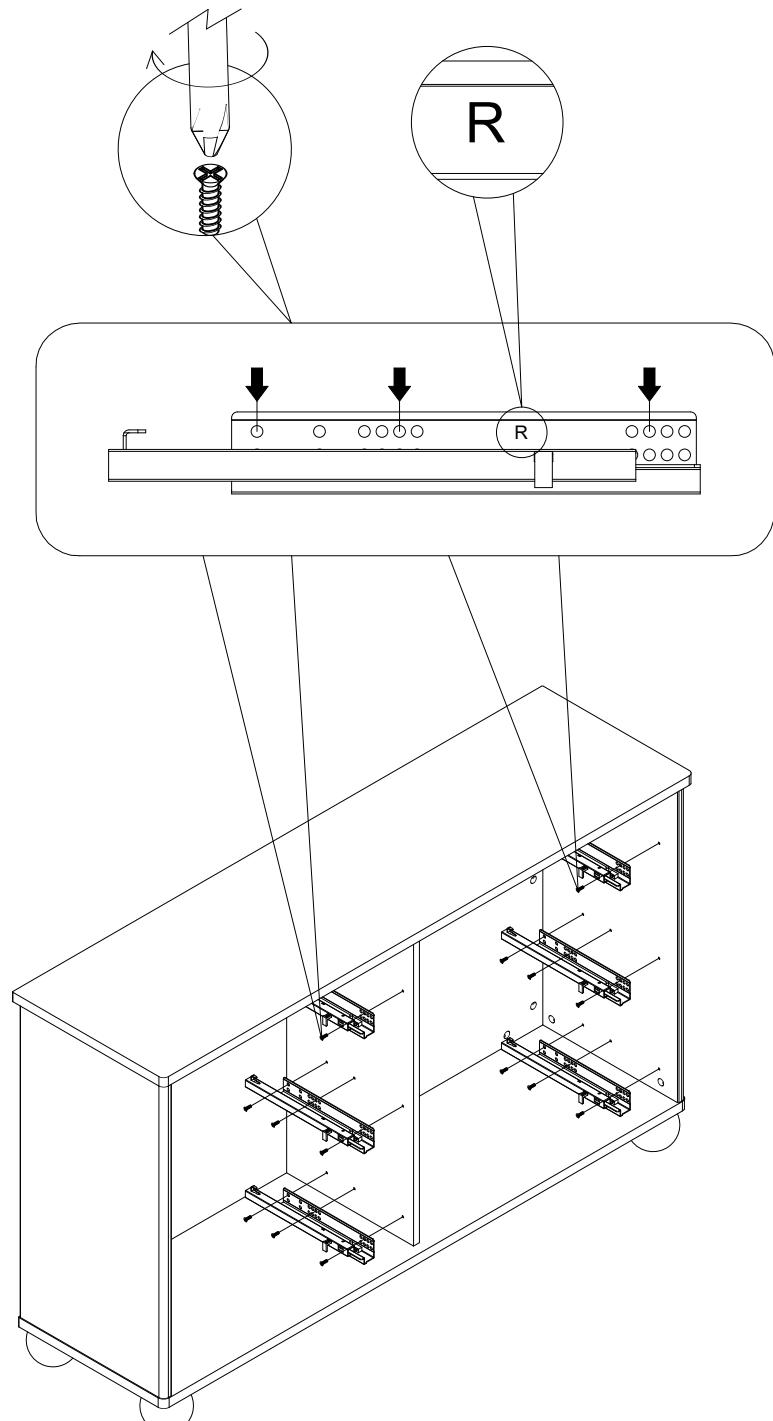

R	N/A	6	
U139	Ø4.5 x 15mm	18	 not supplied


**NEXT**

# HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

## H46497 / W53277

### Assembly instructions

14

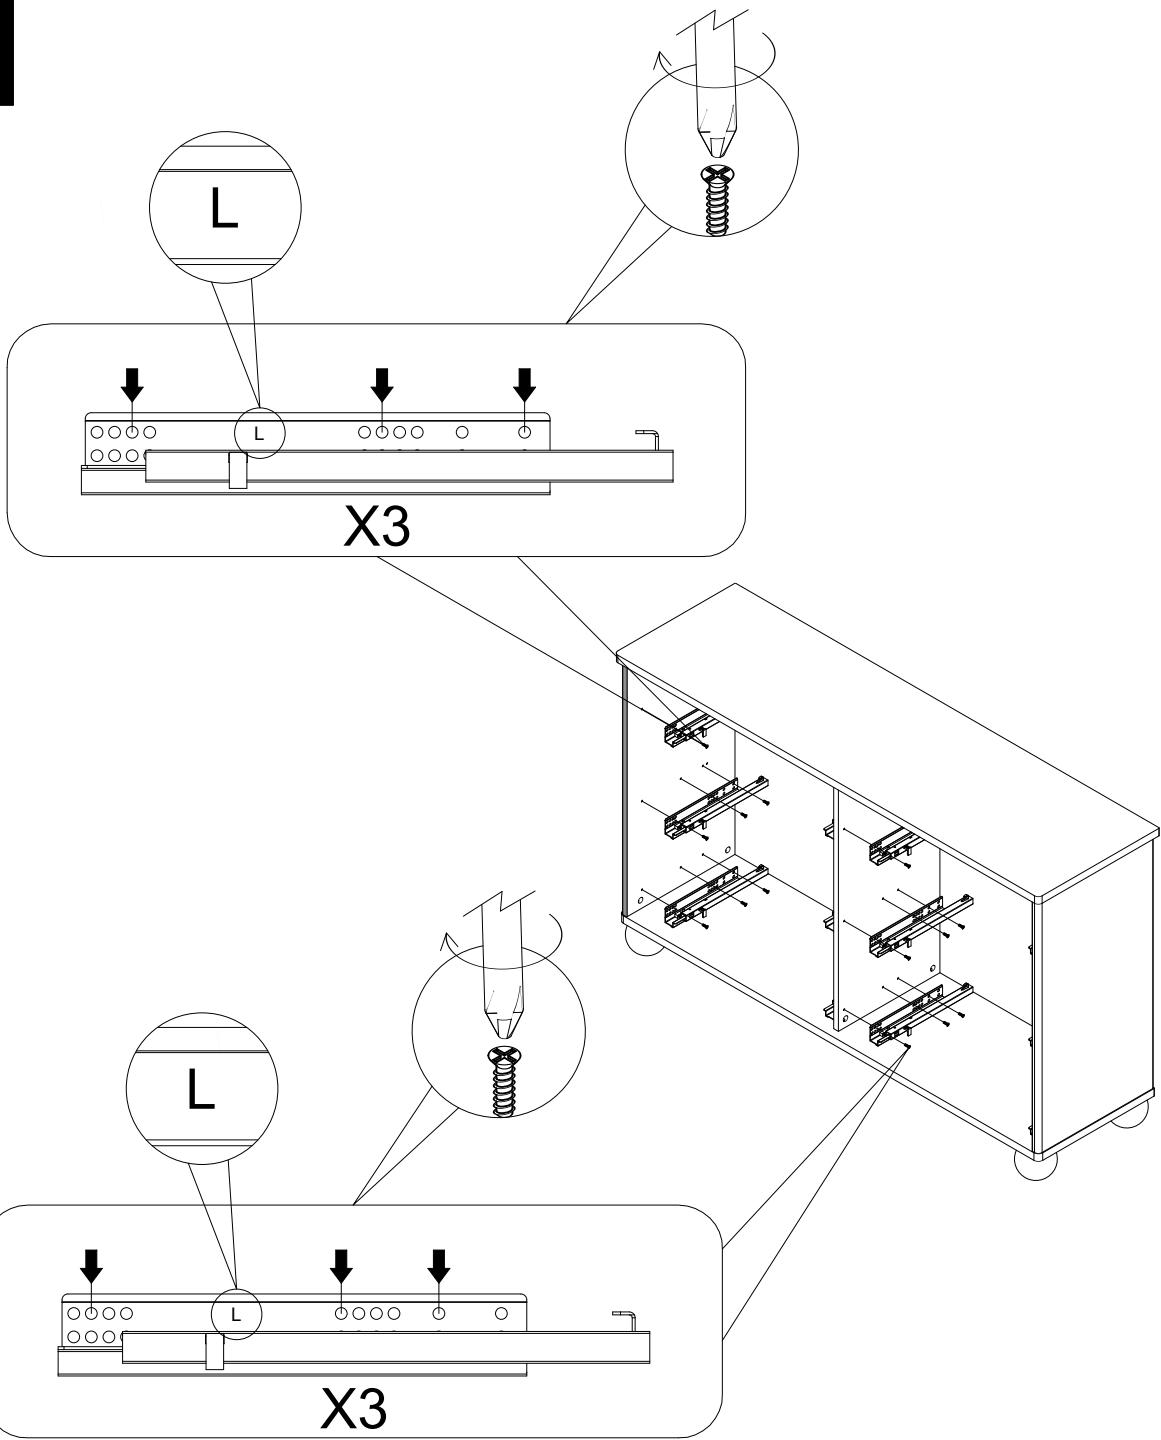


L	N/A	6	
U139	Ø4.5 x 15mm	18	 not supplied

# NEXT


## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS H46497 / W53277 Assembly instructions

15

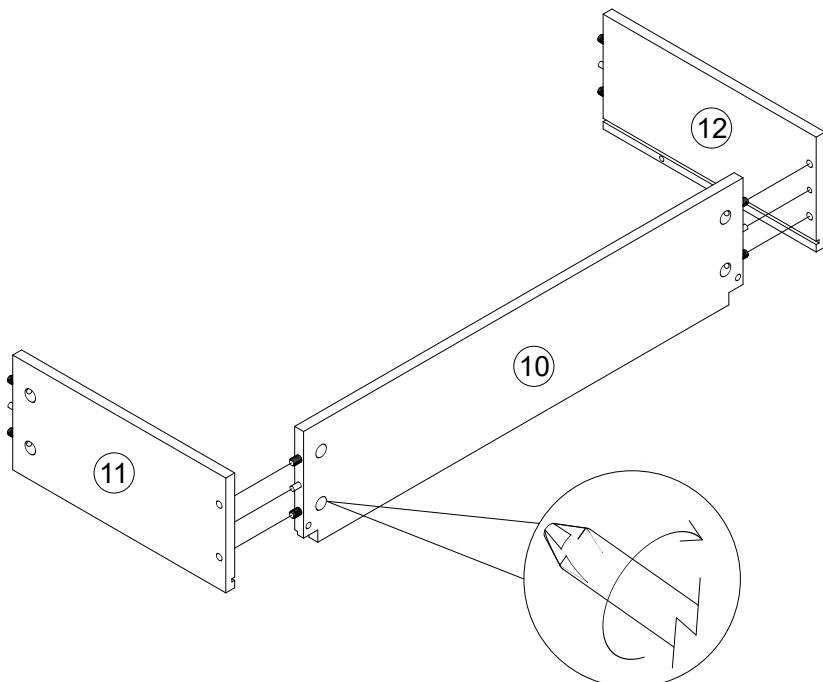

X2

16

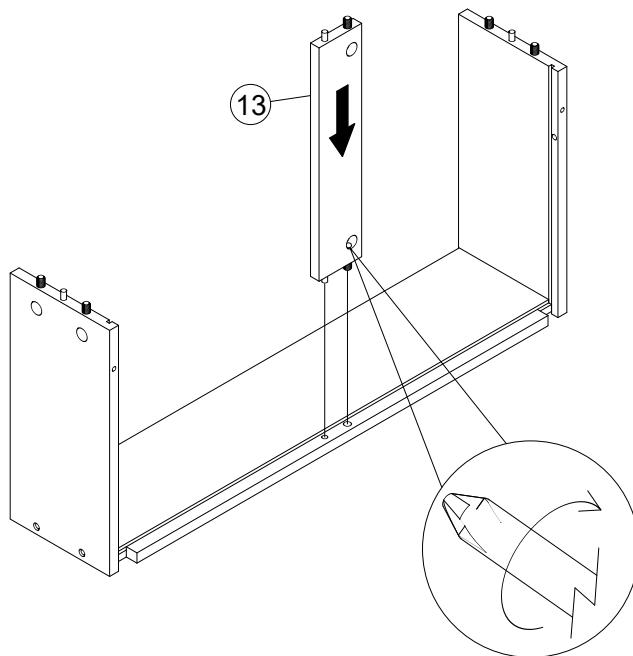


X2

# NEXT

## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS


H46497 / W53277  
Assembly instructions

17

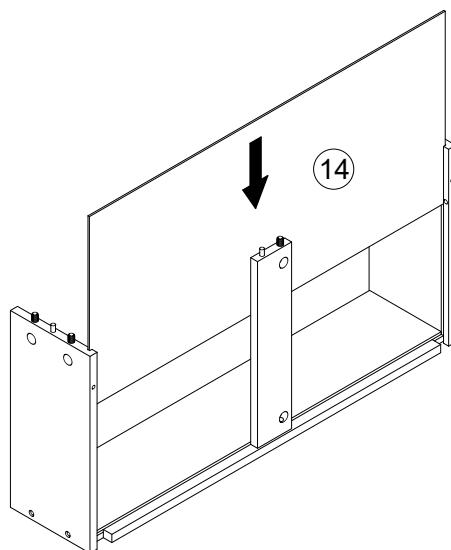

X2

18

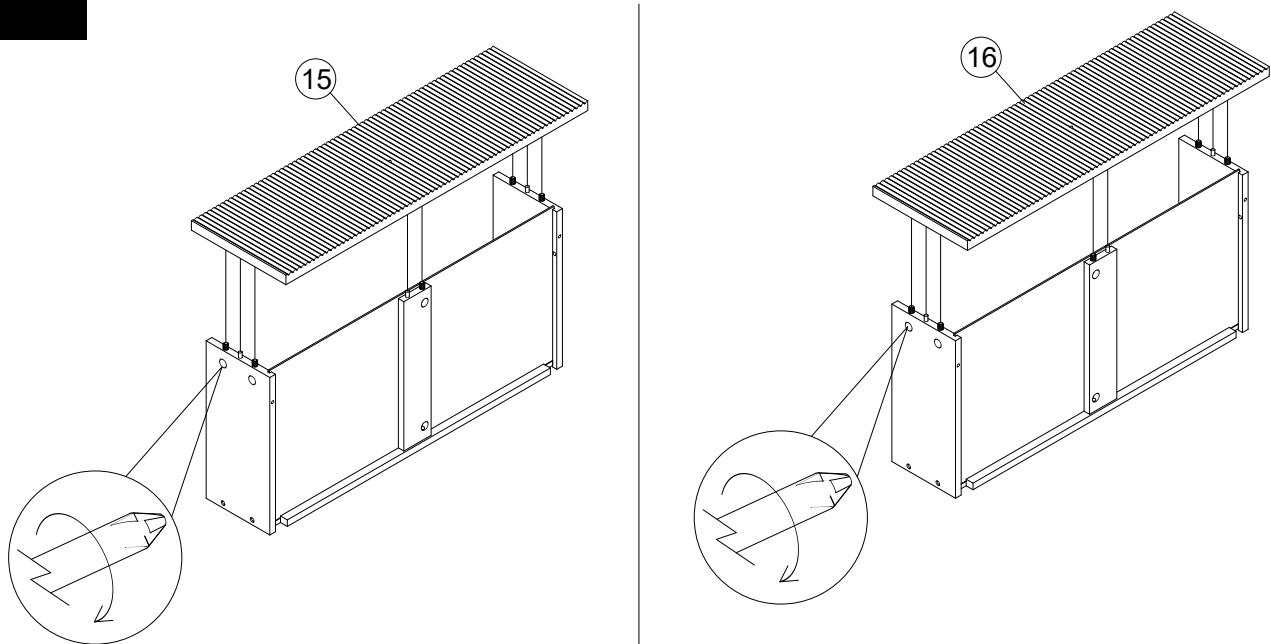


# NEXT


## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

H46497 / W53277  
Assembly instructions

19

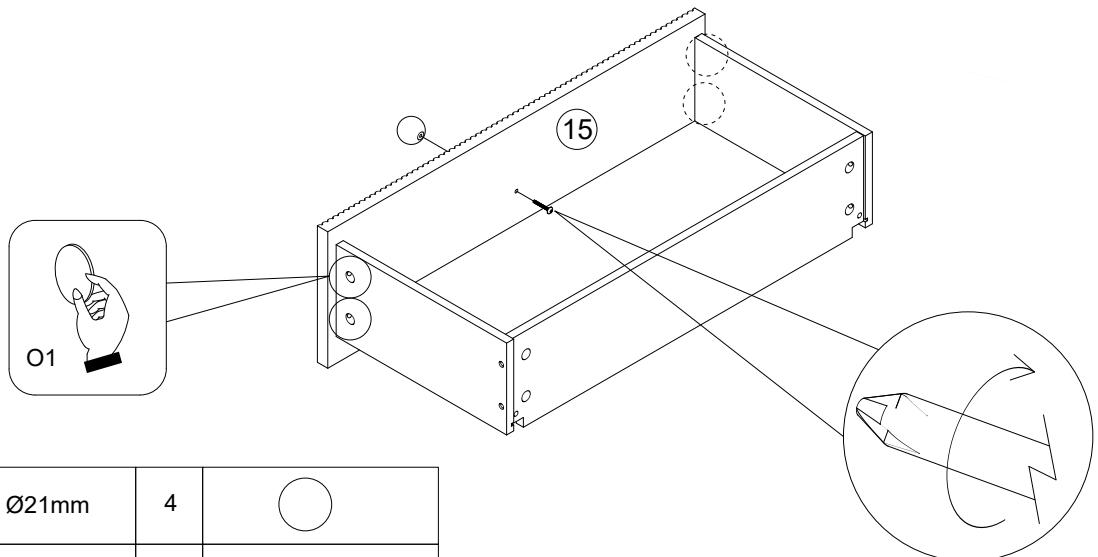


20

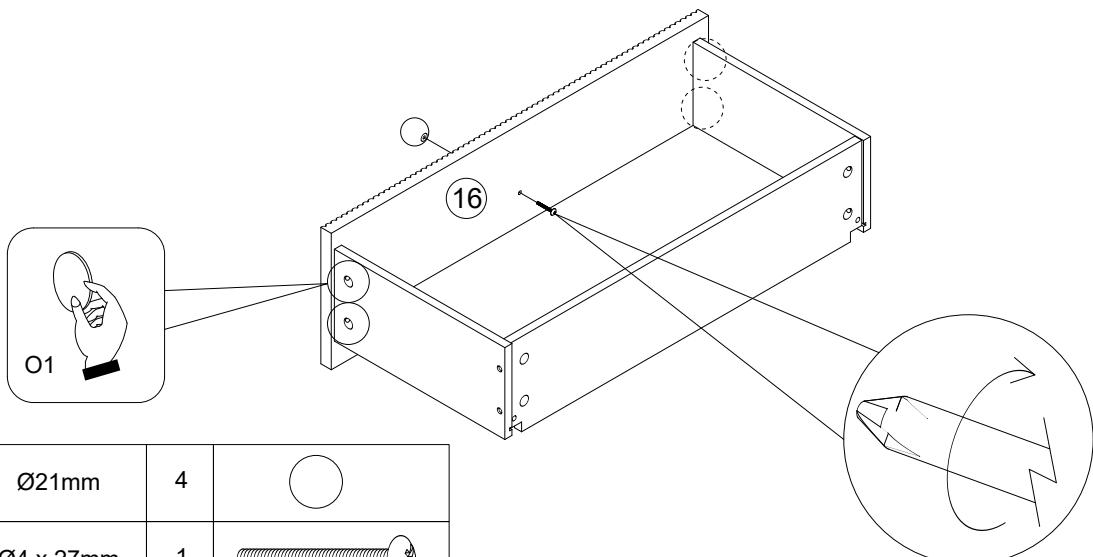

# NEXT


## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS H46497 / W53277 Assembly instructions

21

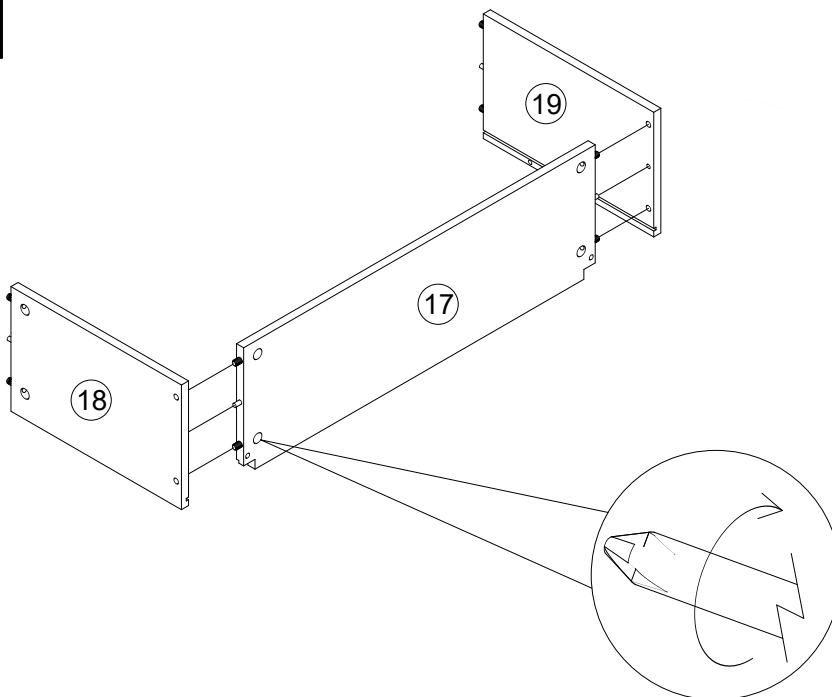

X4

22

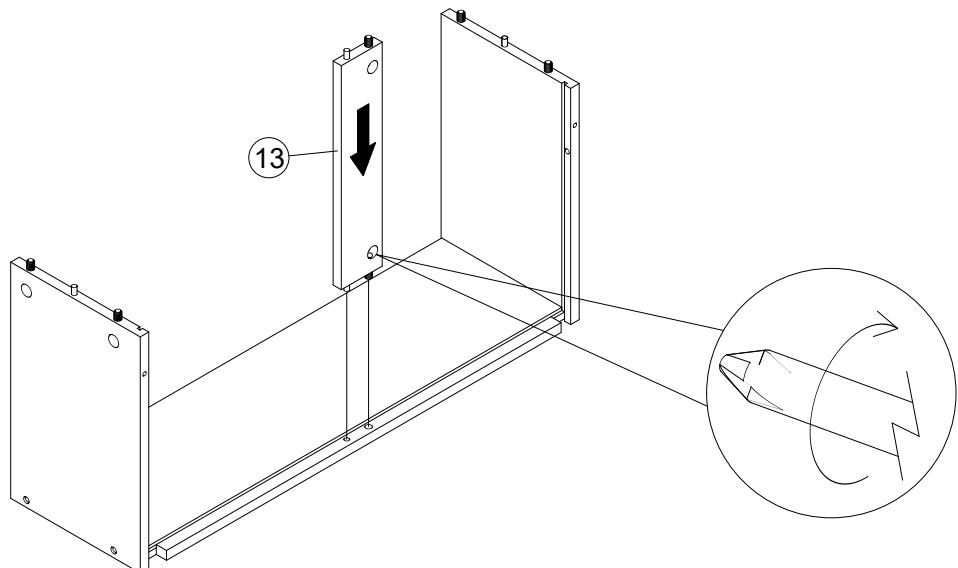


X4

# NEXT

## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS


H46497 / W53277  
Assembly instructions

23

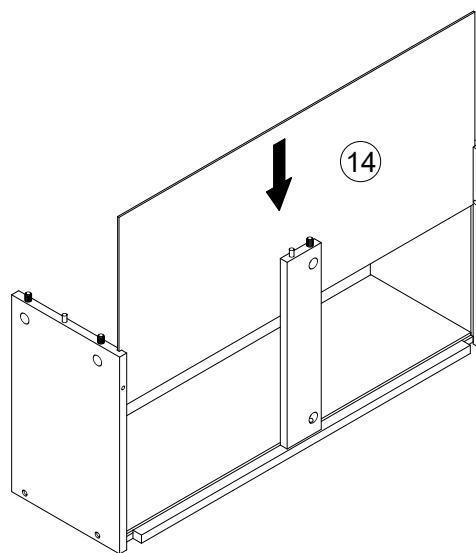


X4

24

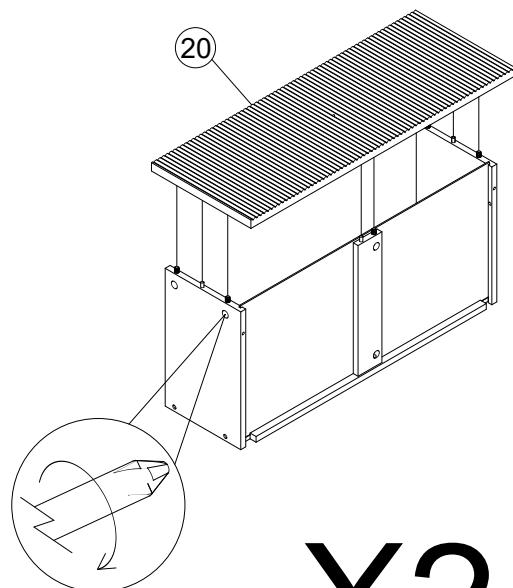

X2

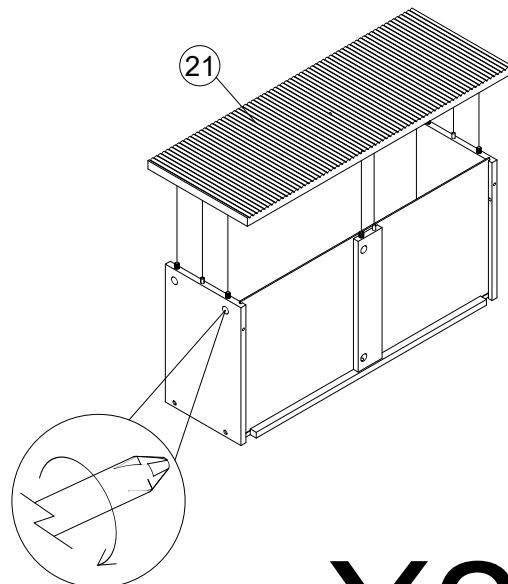


X2

# NEXT

## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS

H46497 / W53277  
Assembly instructions


25

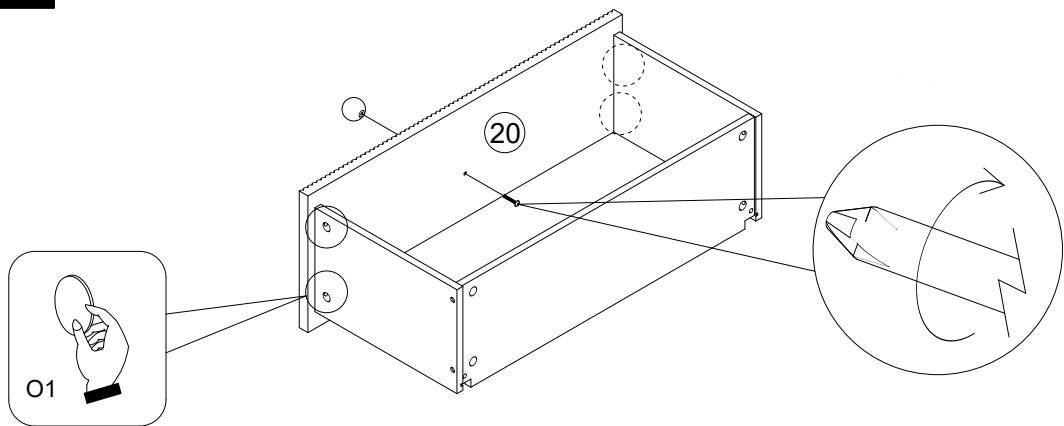

O1	Ø21mm	8	
Z25	Ø4 x 27mm	2	
E47	N/A	2	

X2


26

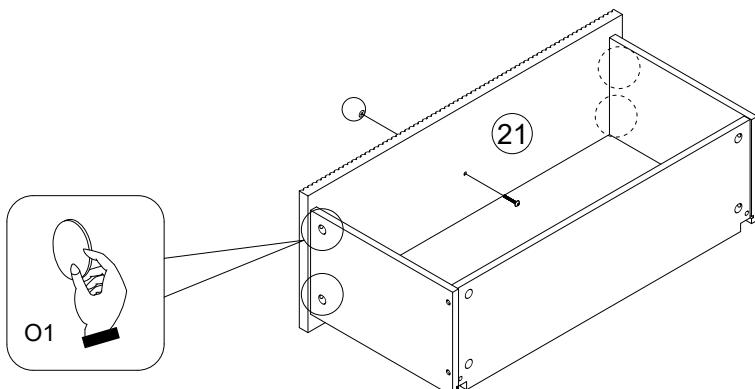


O1	Ø21mm	8	
Z25	Ø4 x 27mm	2	
E47	N/A	2	

X2


27

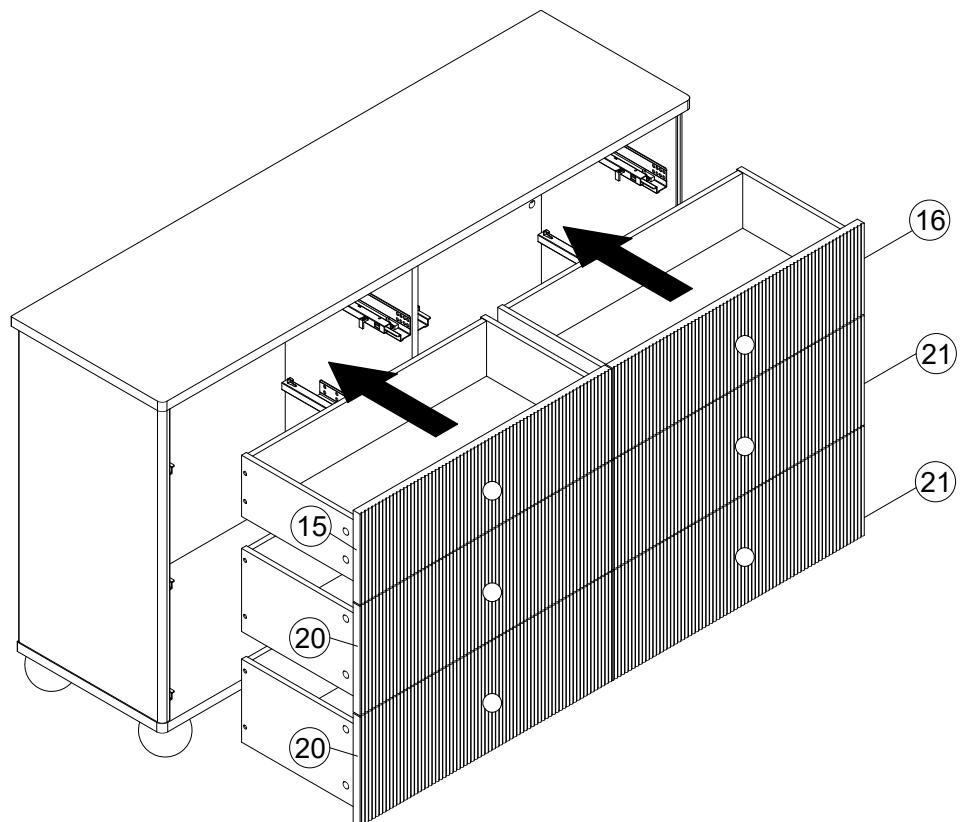

1. Pull runners out.
2. Pull plastic tabs inwards.

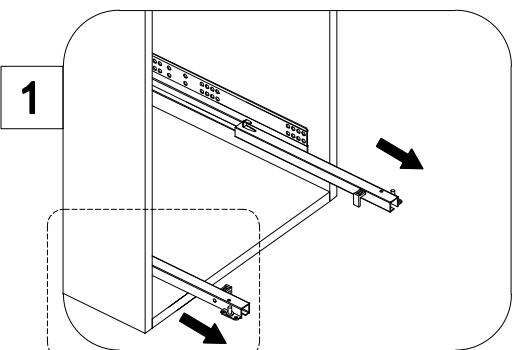

step:1.pull out runner

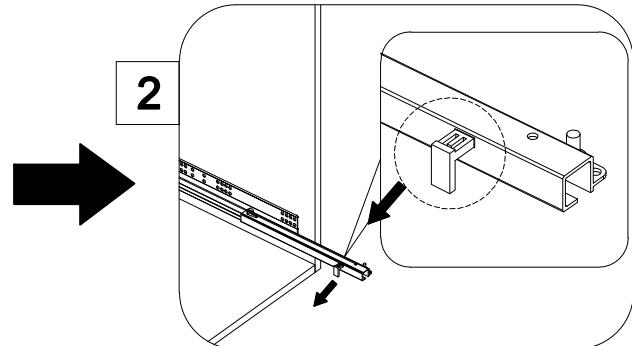

step:2.unlock


# NEXT

## HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS


H46497 / W53277  
Assembly instructions

28


- 3 .Place drawers on runner making sure hooks at back of runners.
- 4.Locate pin under drawer.
- 5.Lock drawer in position.

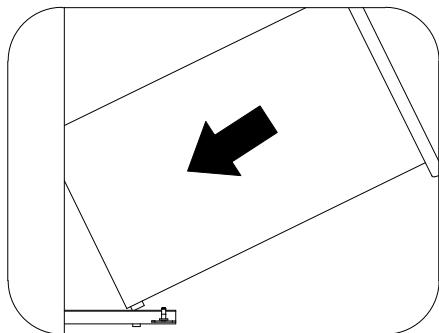


step:3.Locate

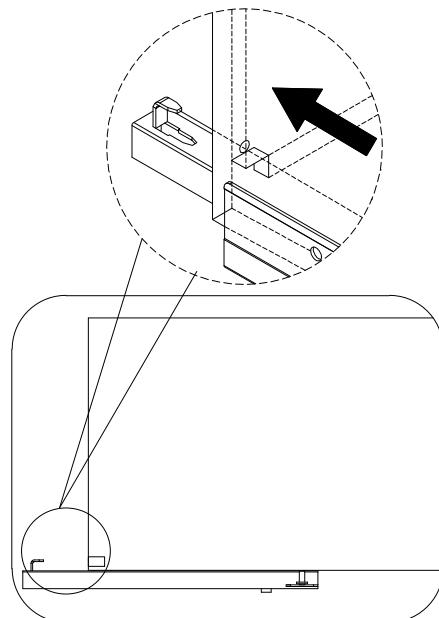


step:4.All the way

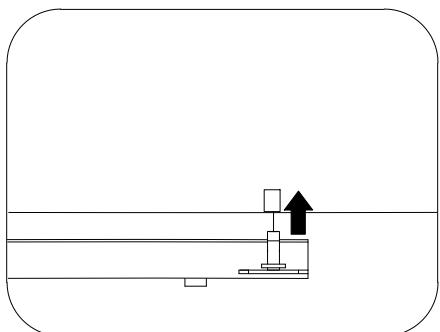

step:6.Locate adjustment pin in hole

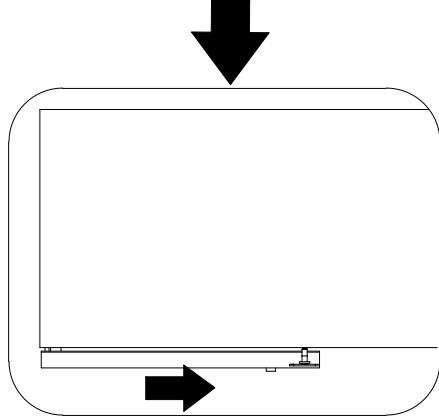


step:5.Pull runner forward

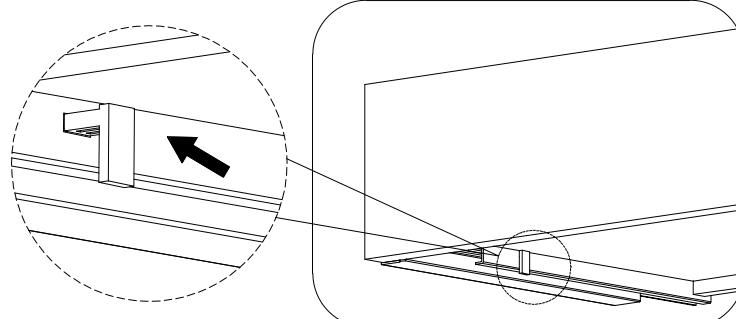


step:7.Lock

29


6. Adjust drawer height if needed.

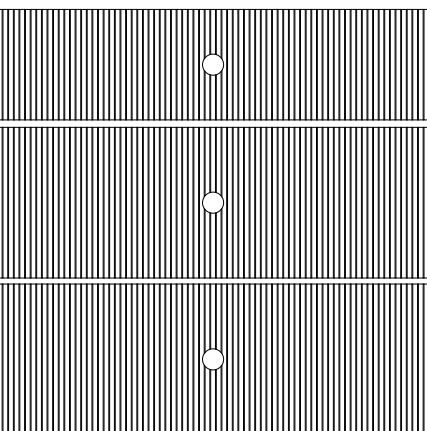


OK

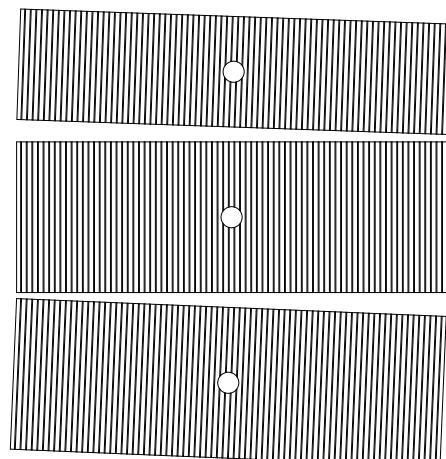

Need to adjust as below

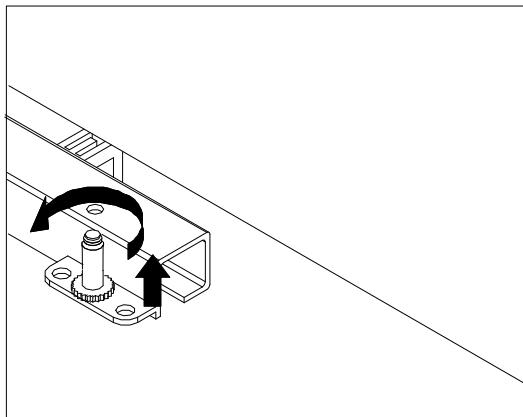


Anti-clockwise is up

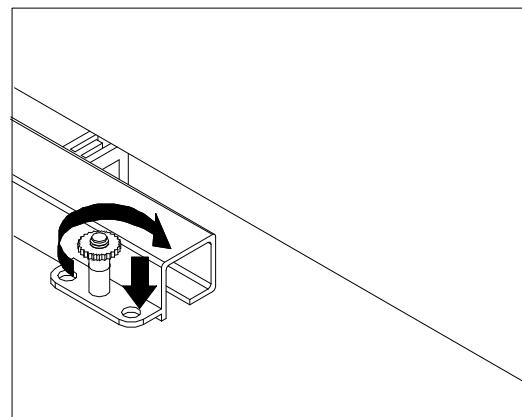

Clockwise is down

**NEXT****HUTTON NATURAL/SAGE WIDE CHEST OF DRAWERS**  
**H46497 / W53277****Actual product size**

H85 x W140 x D40 cm

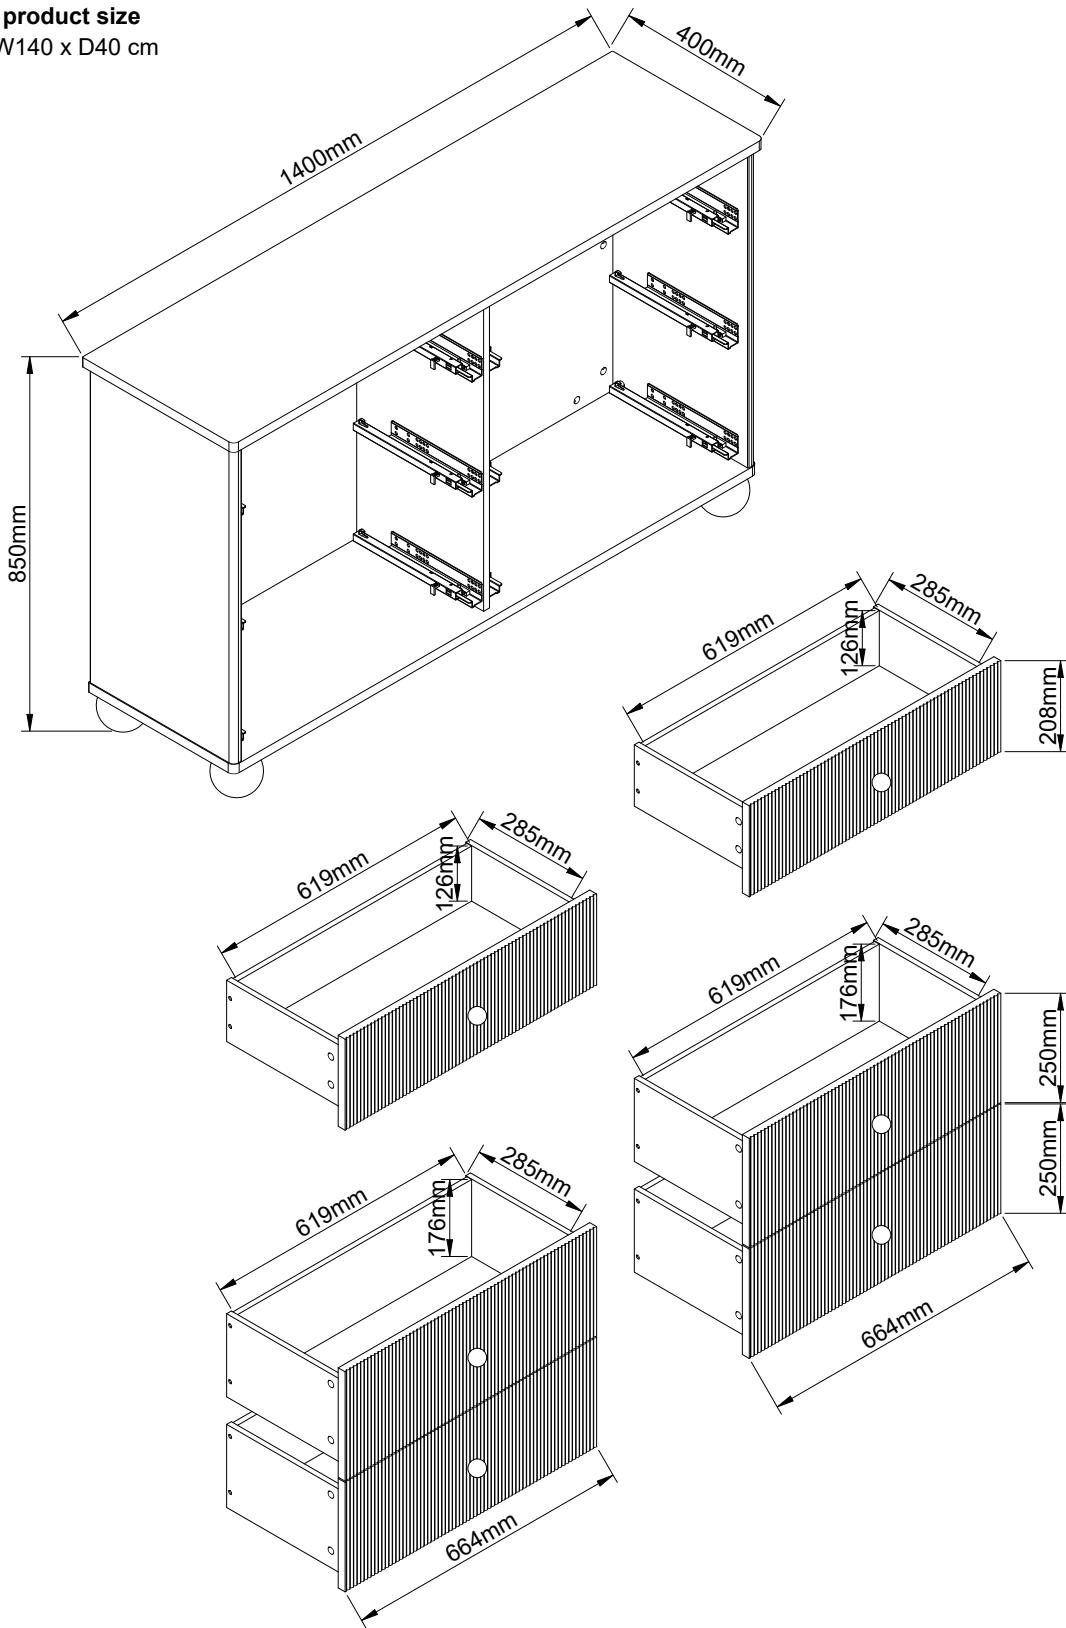

## **Warnings**

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

## **Missing parts**

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

## **Home service technicians**

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

## **You can write to us at**

Home Customer Services  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)