


# NEXT

ELTON DINING  
CHAIR (PAIR)  
H53443-H53438

Assembly instructions

Actual product size

H84×W50.8×D59.1cm

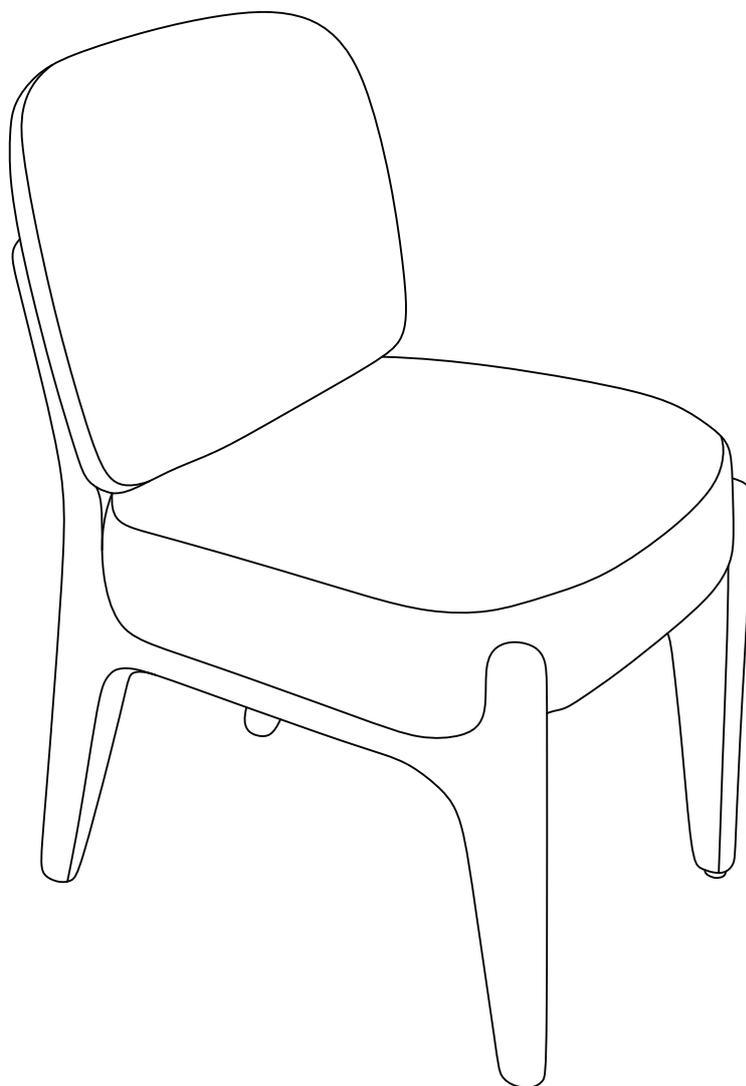

## Need Help ?

With: Assembly instruction  
Missing or damaged parts

CALL: 0333 777 8999


IMPORTANT - RETAIN FOR FUTURE REFERENCE

# BEFORE YOU START

Number of people required to assemble

Two people are required to assemble this item

**Time to assemble:** 30 minutes

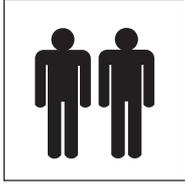

Item No.	Fabric name	Fabric composition
H53443	CASUAL BOUCLE LIGHT NATURAL	100% polyester
H53438	CASUAL BOUCLE OYSTER	100% polyester

## Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

## Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

## Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

## Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground. Please periodically check all fittings and re-tighten as necessary.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

## Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

## You can write to us at

Home Customer Services  
Next Retail Ltd  
Desford Road,  
Leicester,  
LE19 4AT


To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)

## Need Help ?



With: Assembly instruction  
Missing or damaged parts

CALL: 0333 777 8999

## GETTING TO KNOW YOUR PRODUCT

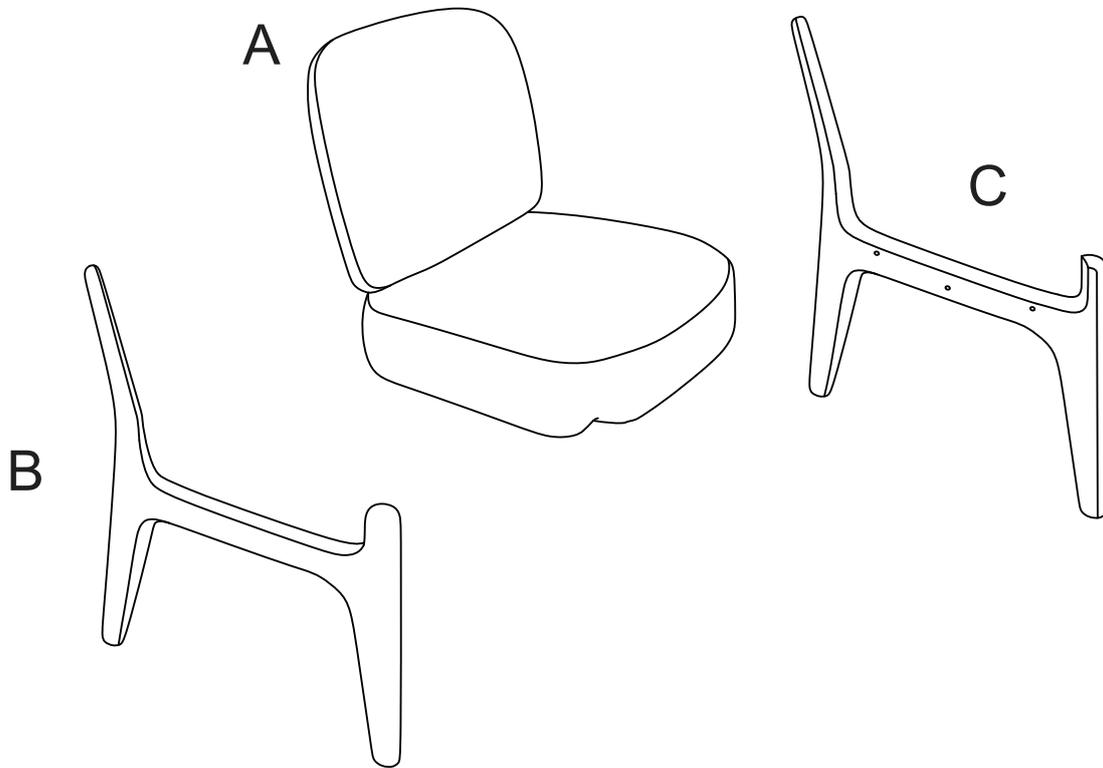


Components supplied. Please use this guide if you require replacement parts.

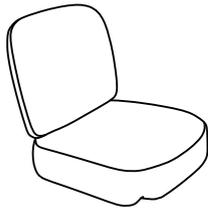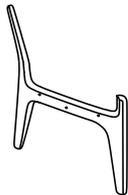
Ref	Visual	Qty
A		1
B		1
C		1

Fixtures and fittings supplied (actual size)			
Ref	Dimension	Qty	Spare
H1	M8x40mm	6	2
H2	( $\varphi 8 + \varphi 10$ )mm	6	2
H3	( $\varphi 8 + \varphi 18$ )mm	6	2
H4	M8* 80 mm	1	0

1.

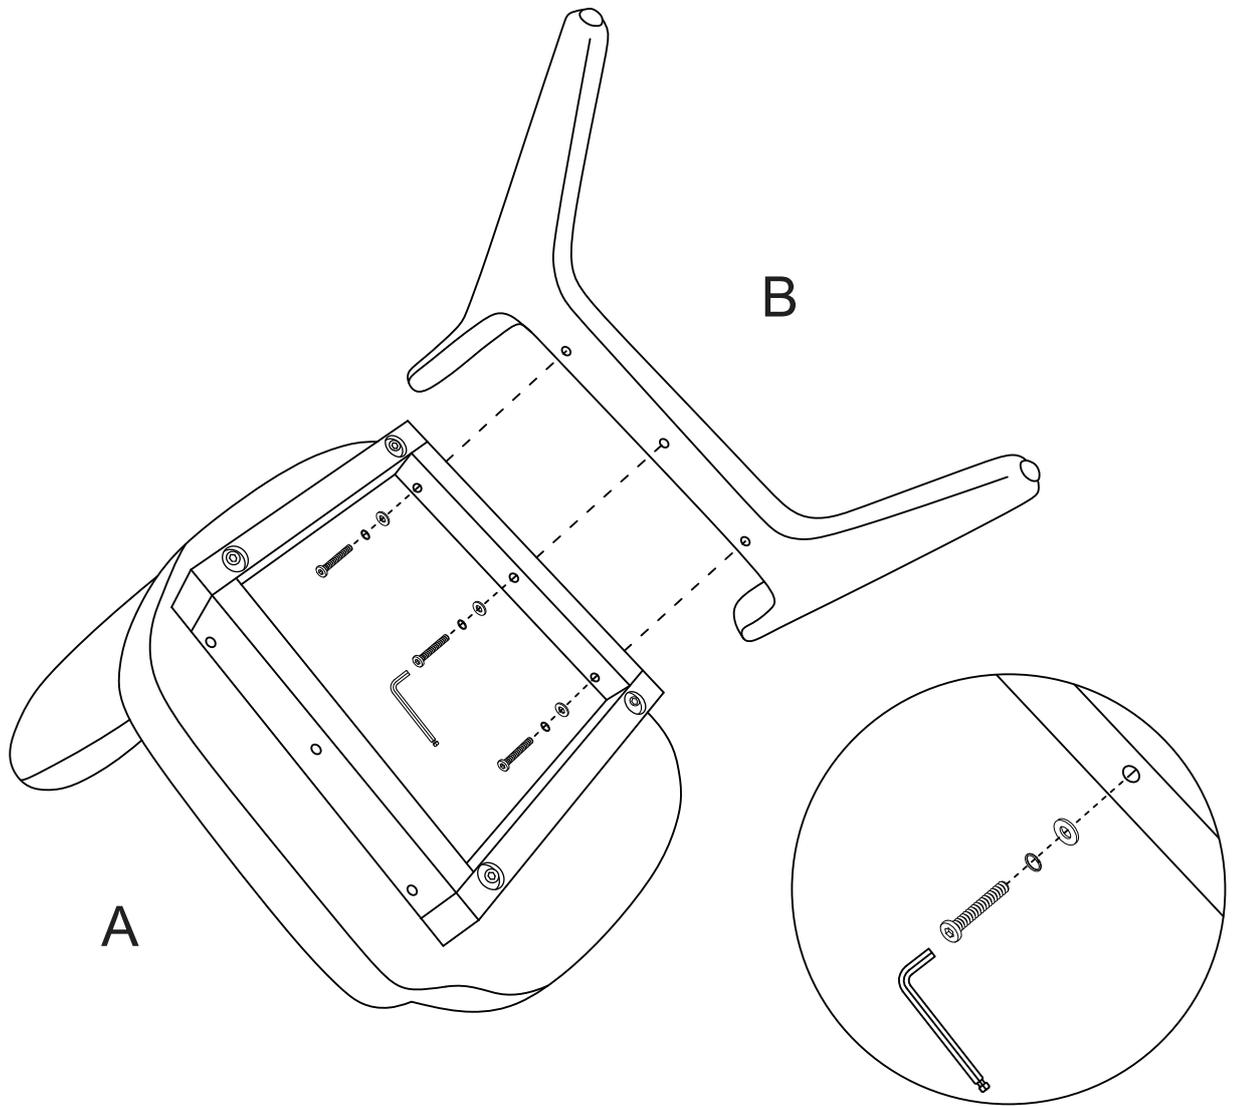


2.

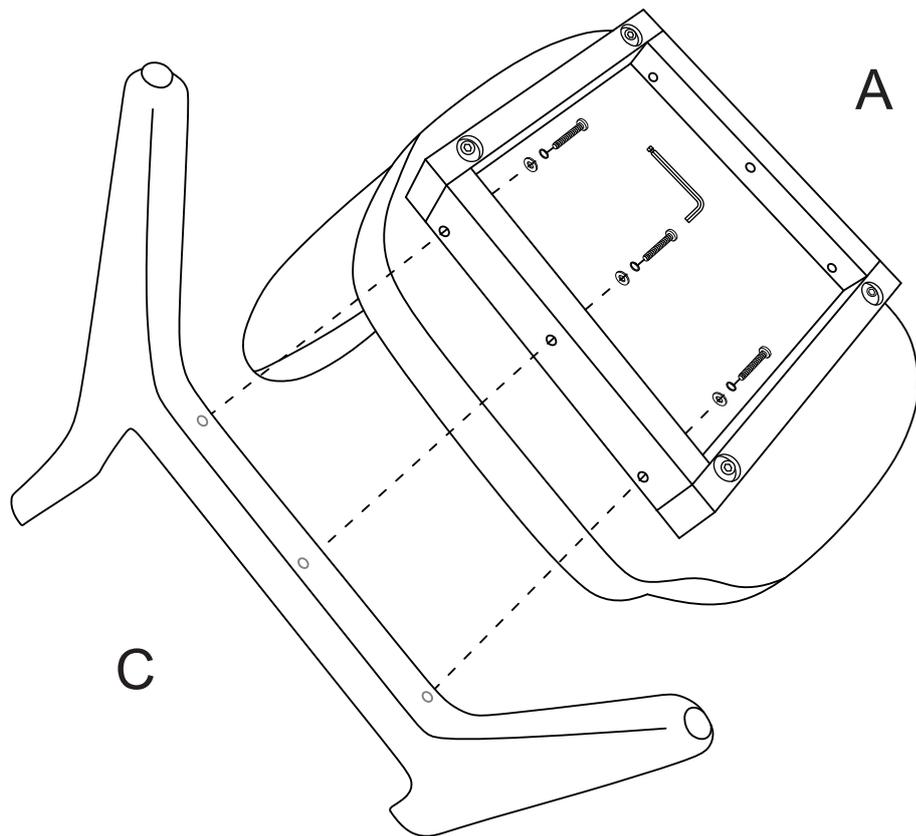

3.

**Actual product size**

H84×W50.8×D59.1cm

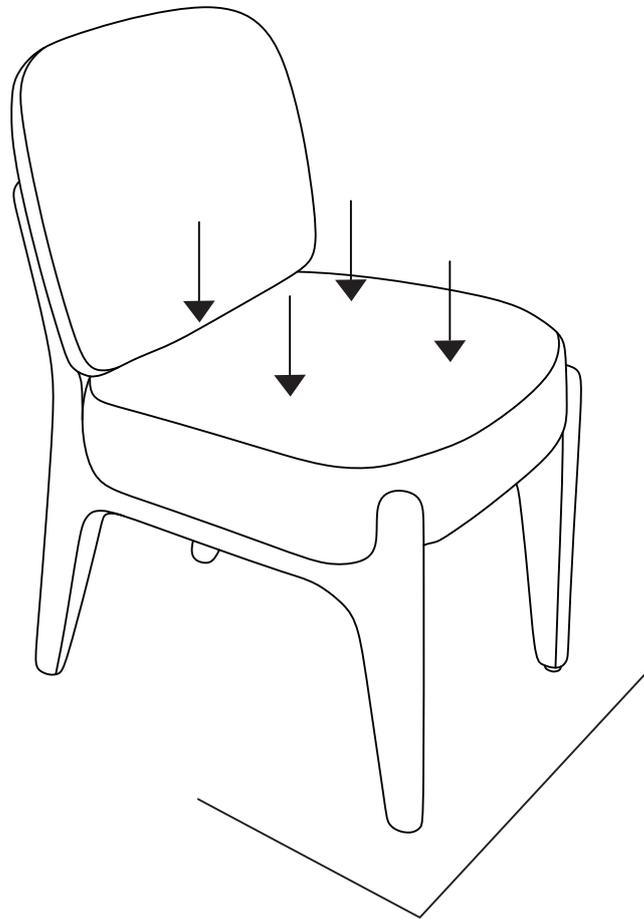

Then adjust balance of this chair  
tighten all the screws to 100%.

# NEXT

ELTON DINING  
CHAIR (PAIR)  
H53443-H53438  
Assembly instructions

ELTON DINING  
CHAIR (PAIR)  
H53443-H53438  
Assembly instructions

Actual product size  
H84×W50.8×D59.1cm

CAUTION: Maximum weight capacity of this chair is 130kg.

