

NEXT

 
HAYFORD TV UNIT

K75871

Assembly instructions

Actual product size

H40x W145x D35cm

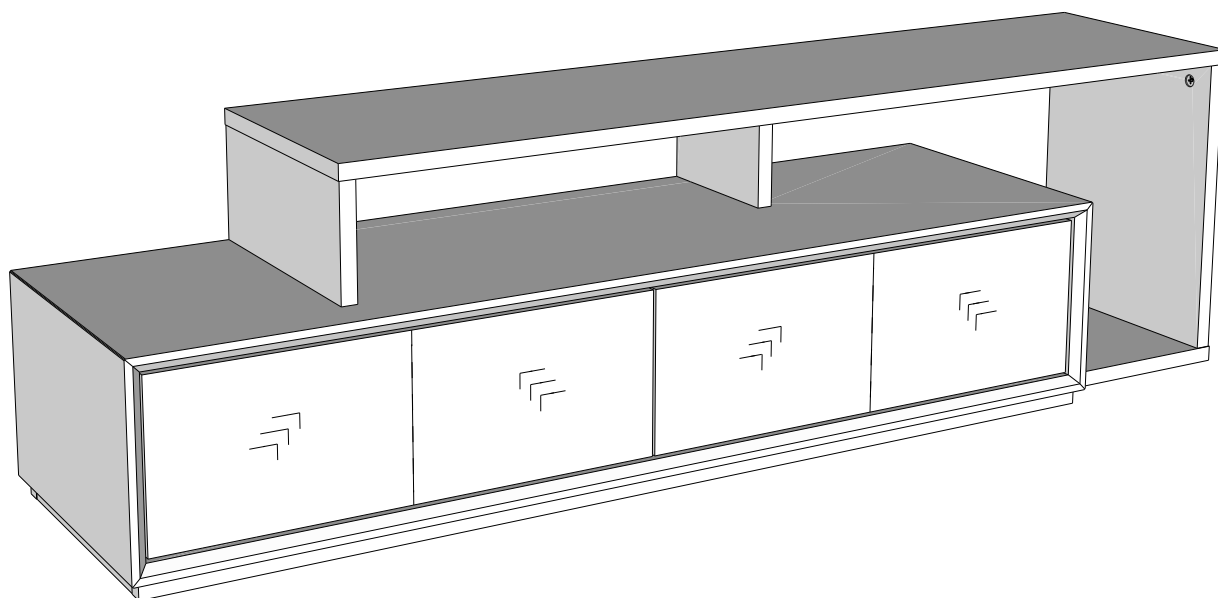

Need Help ?

With: Assembly instruction

 
Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE


CALL: 0333 777 8999

NEXT


TITUS TIGHTENING INSTRUCTIONS

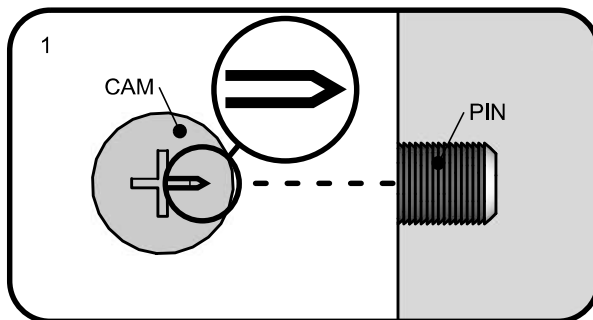

 
Line up the arrow on the CAM with the PIN.

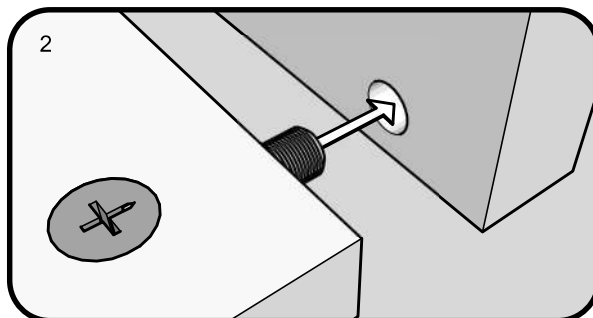

 
Push the pins into the holes in the panel to be joined.

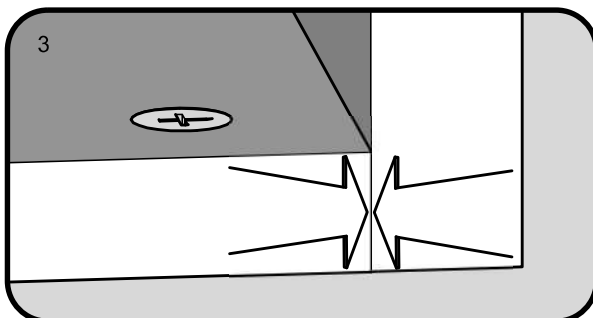

 Make sure there is no gap between the panels.

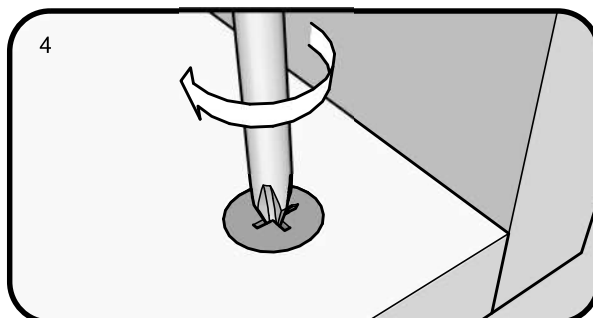

 Use a cross-point screwdriver (PH2 or PZ2 is ideal) to tighten the cams and lock the panels together.

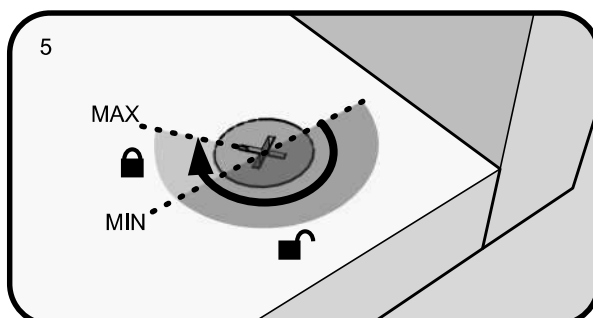

The panels are locked when each cam is turned to between 1/2 and 2/3 of a full turn (Maximum rotation)

NEXT

HAYFORD TV UNIT

K75871

Assembly instructions

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

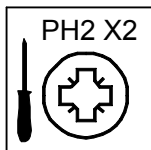

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

 
NEXT

HAYFORD TV UNIT

K75871

Assembly instructions

 
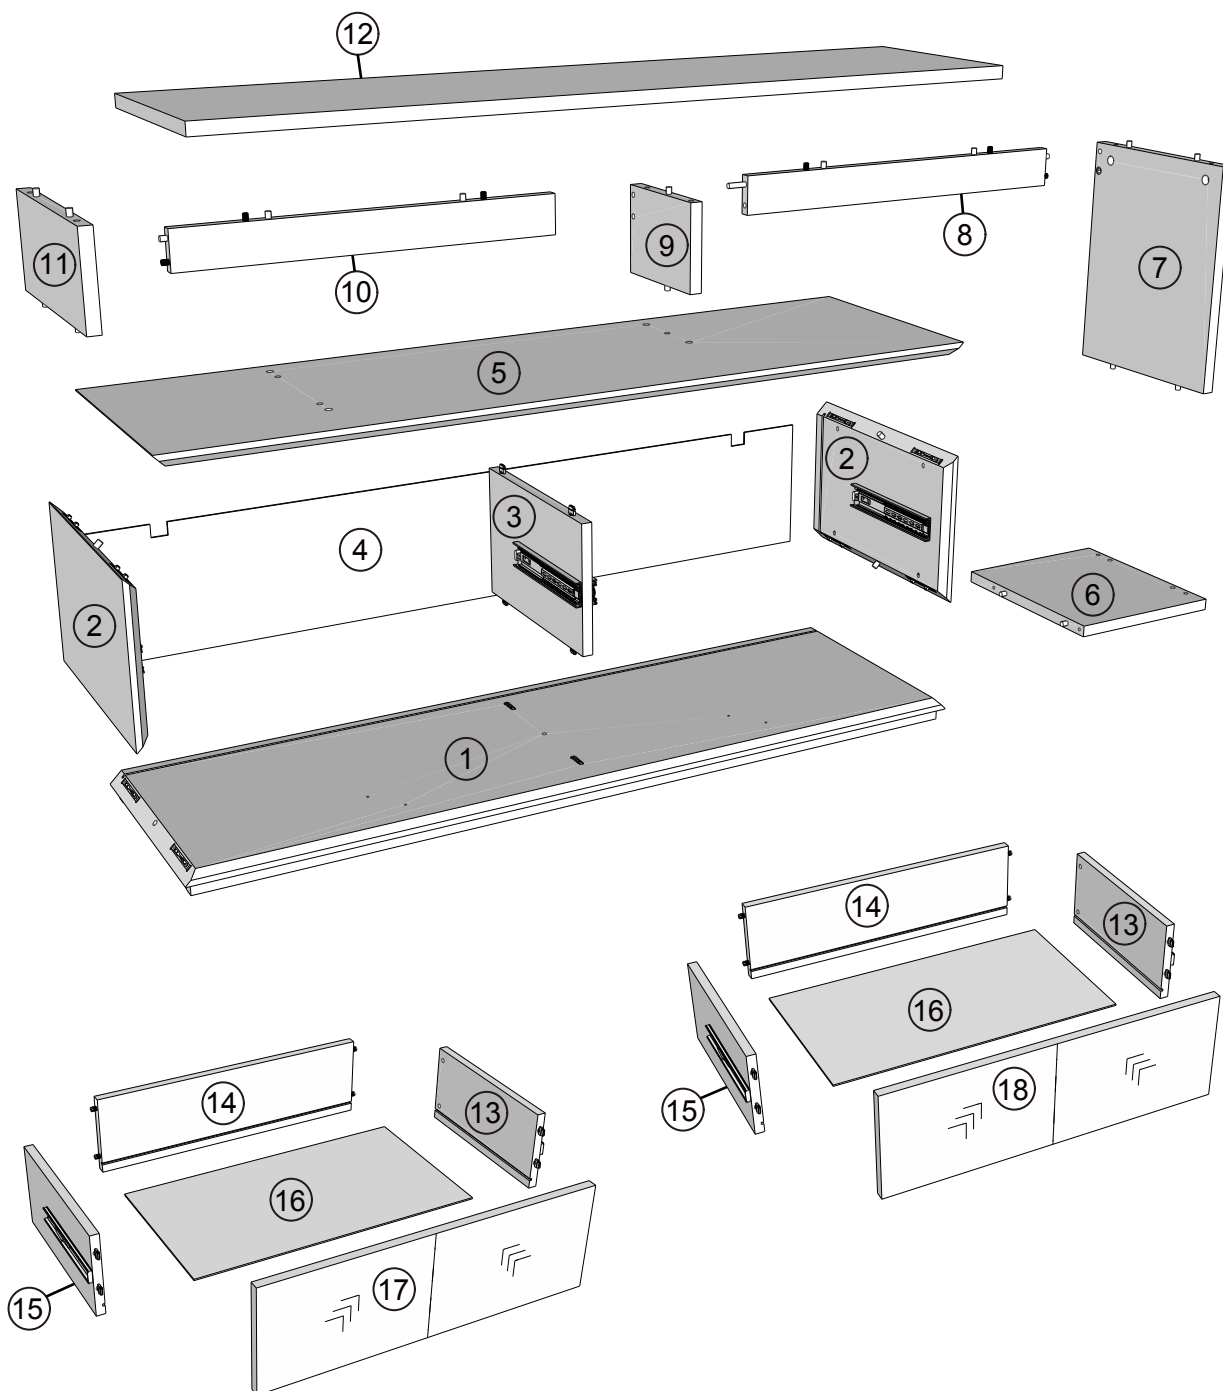 



 







GETTING TO KNOW YOUR PRODUCT





 


NEXT



HAYFORD TV UNIT K75871 Assembly instructions

Components supplied. Please use this guide if you require replacement parts.


Ref	Dimensions	Visual	Qty	Ctn
1	35x120cm		1	1
2	23x35cm		2	1
3	19.5x30cm		1	1
4	20x117cm		1	1
5	35x120cm		1	1
6	26x30cm		1	1
7	29.5x36.5cm		1	1
8	6x57cm		1	1
9	13x18cm		1	1
10	6x57cm		1	1
11	13x29.5cm		1	1
12	30x120cm		1	1
13	14.5x30cm		2	1

Ref	Dimensions	Visual	Qty	Ctn
14	14.5x52cm		2	1
15	14.5x30cm		2	1
16	28.5x52.5cm		2	1
17	19x57.5cm		1	1
18	19x57.5cm		1	1

  NEXT FITTINGS ASSEMBLE INSTRUCTIONS

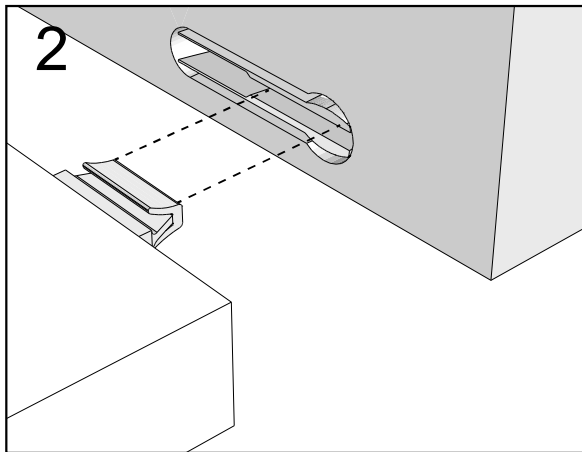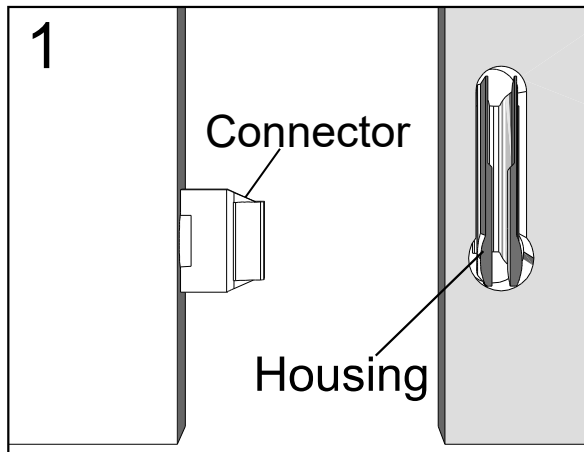

Push connector into housing to join.

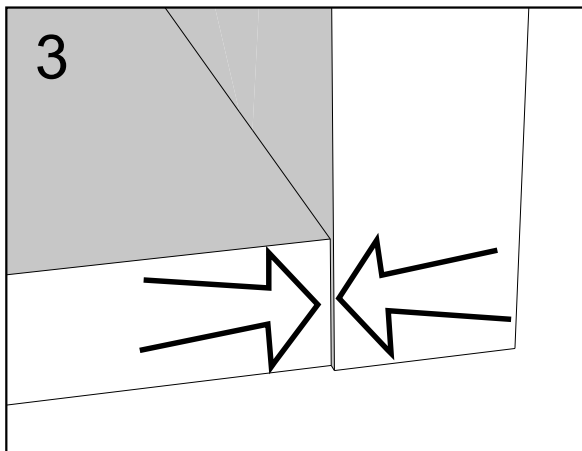 


Make sure there is no gap between the panels.

NEXT

HAYFORD TV UNIT K75871 Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	12	2
B8	Ø8 x 38mm	N/A	1
B12	Ø7.5 x 33mm	10	2
B17	Ø6 x 68mm	1	N/A
Y8	Ø6 x 50mm	5	1
S41	Ø4 x 16mm	2	1
D16	Ø8 x15mm	N/A	1
D6	Ø8 x 30mm	N/A	2
D8	Ø8 x 55mm	N/A	1

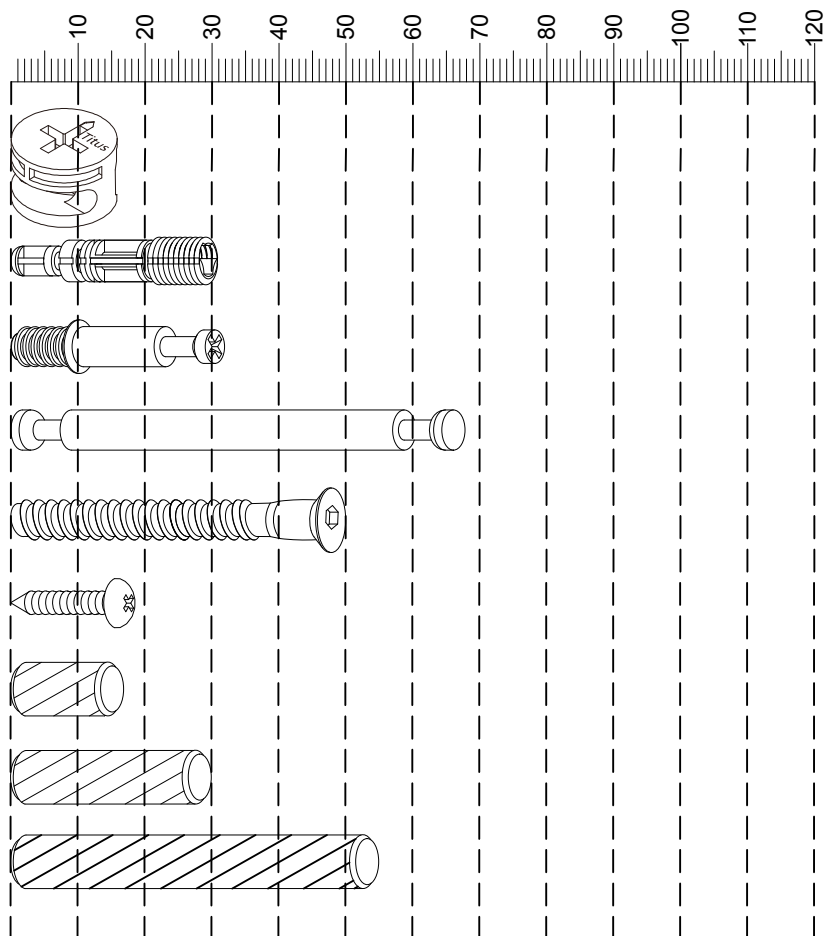 






Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T6	N/A	1	N/A	
M38	N/A	2	N/A	
T38	N/A	4	1	
T39	N/A	2	N/A	
O1	21mm	10	2	

NEXT

HAYFORD TV UNIT K75871 Assembly instructions

     1

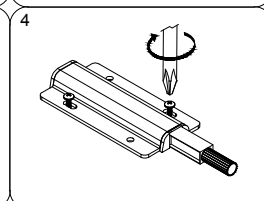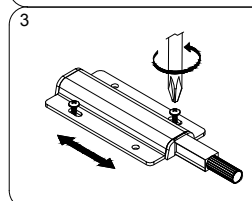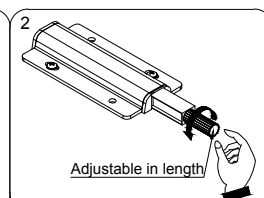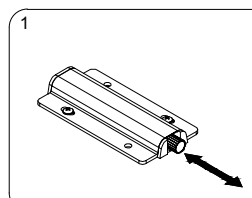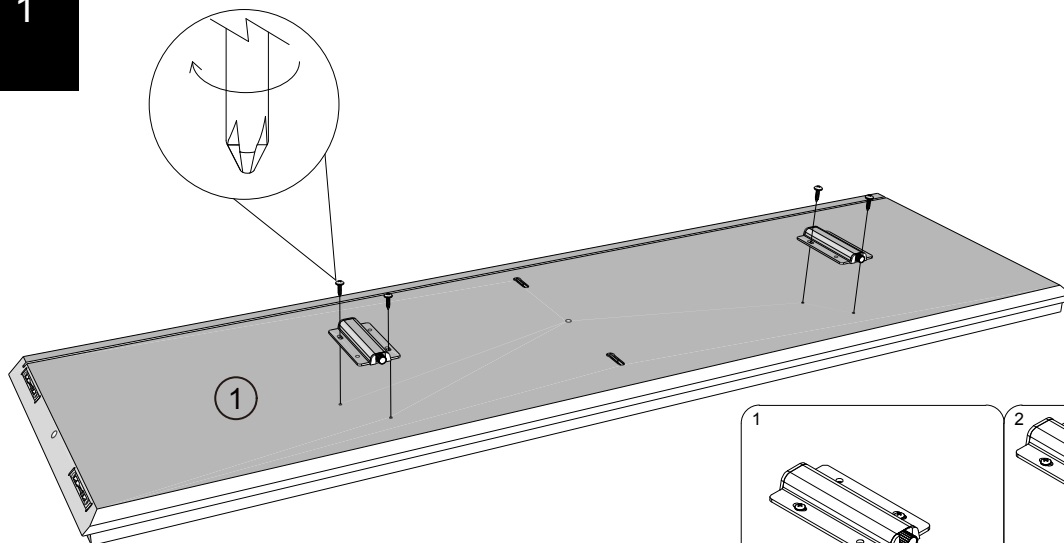






M38

N/A

2



     2

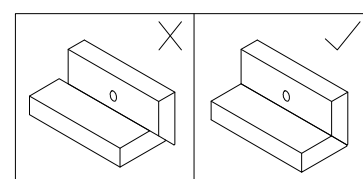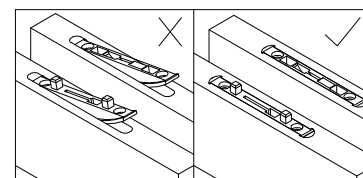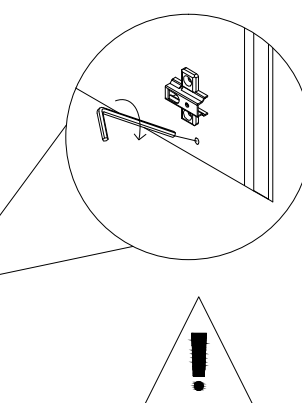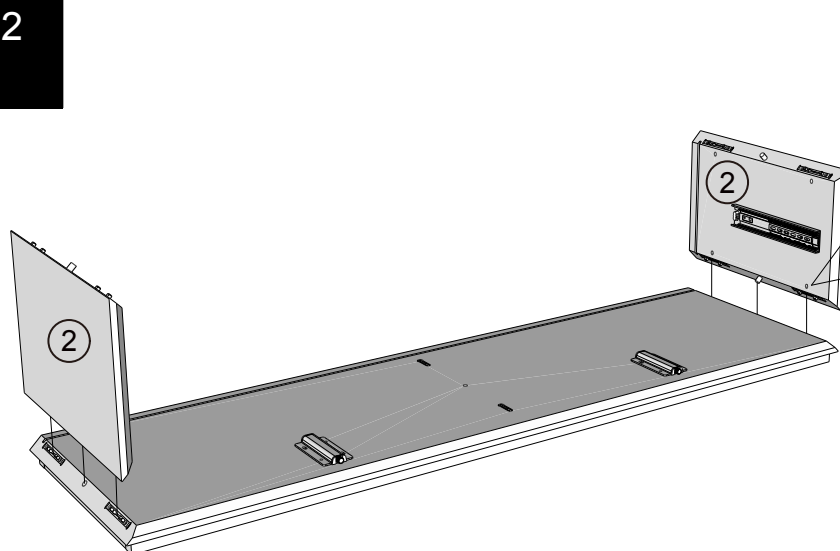

T6

N/A

 
1




NEXT

HAYFORD TV UNIT K75871 Assembly instructions

3

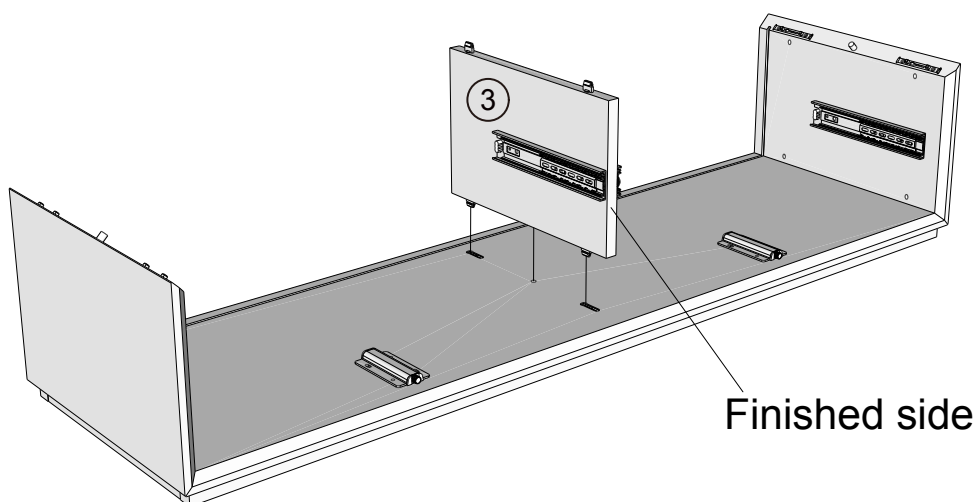




4

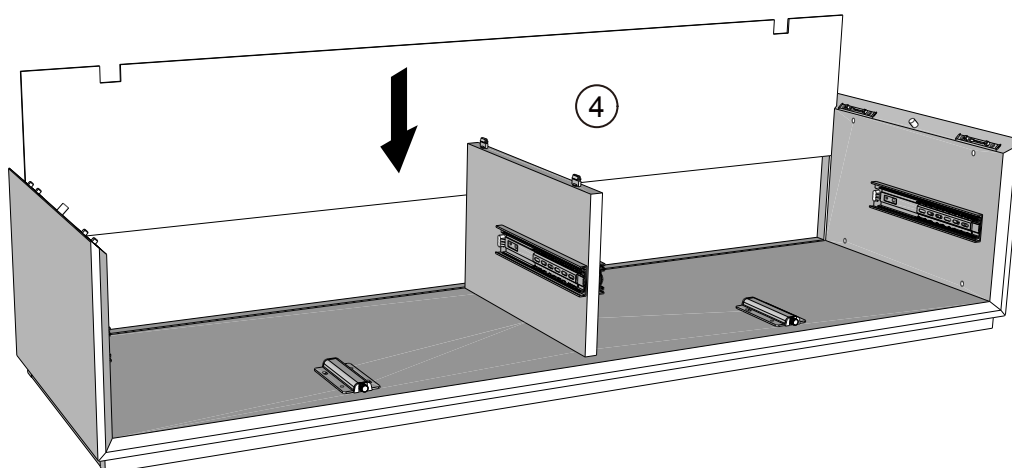 

NEXT

HAYFORD TV UNIT K75871 Assembly instructions

   5

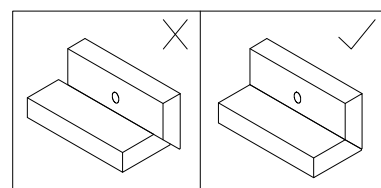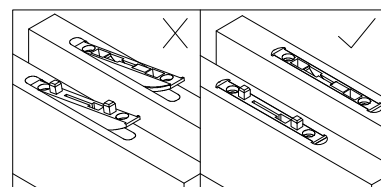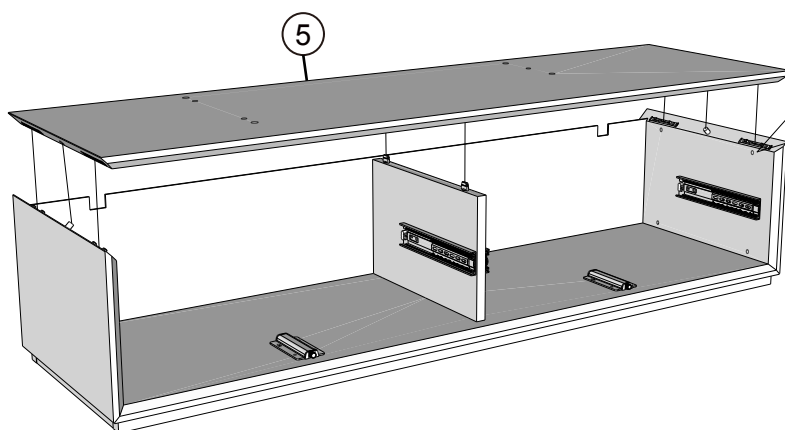


T6

N/A

1



 
6

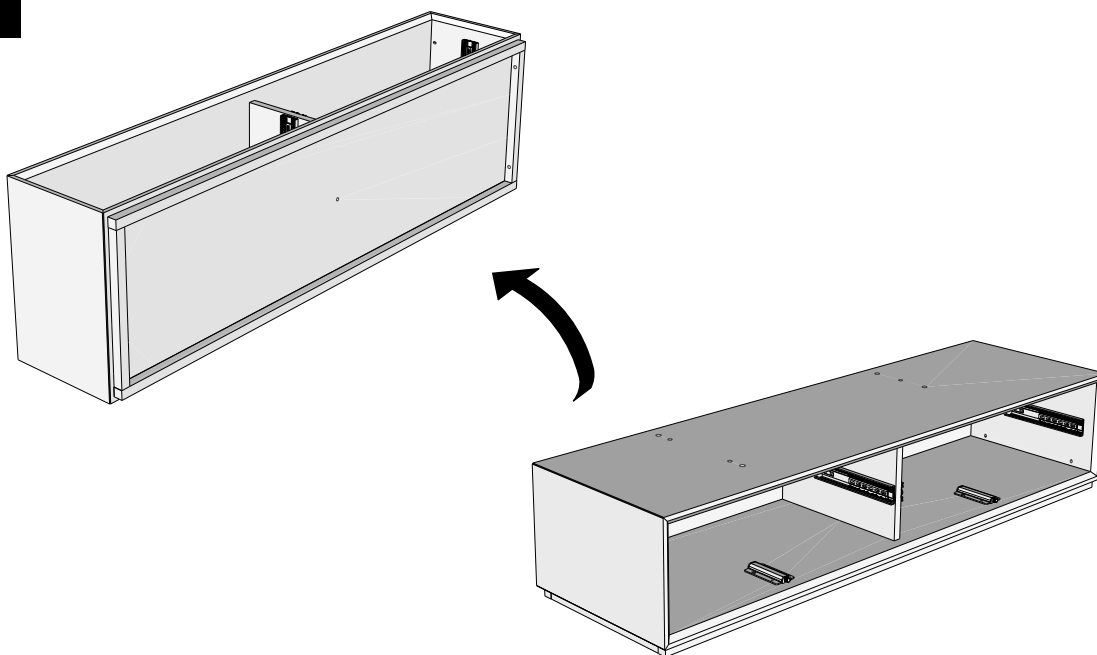



NEXT

 
HAYFORD TV UNIT
K75871
Assembly instructions

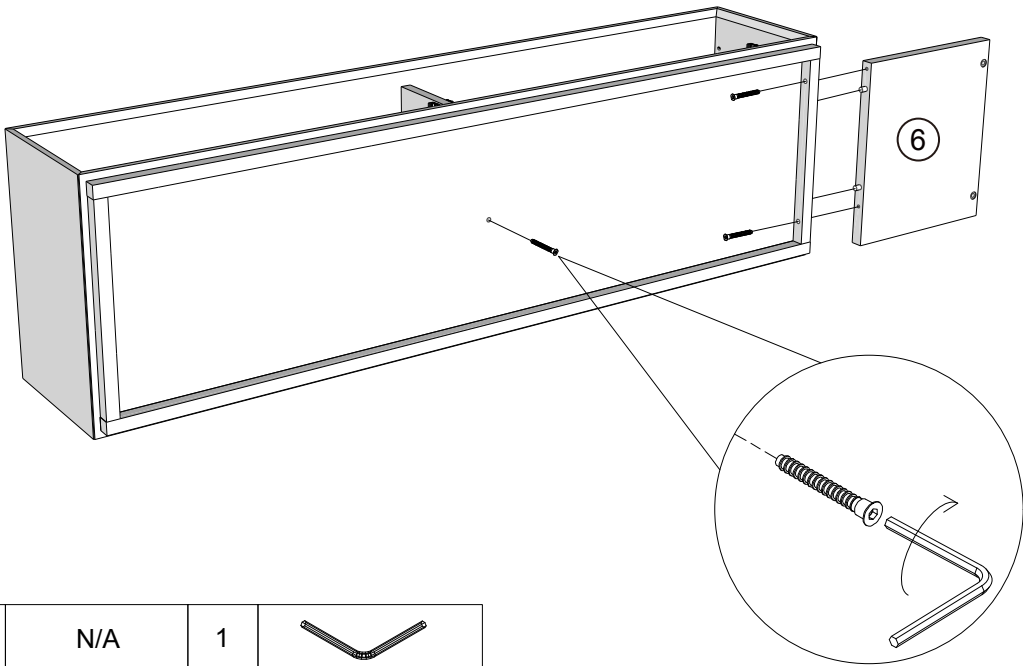

7



T6	N/A	1	
Y8	Ø6 x 50mm	3	

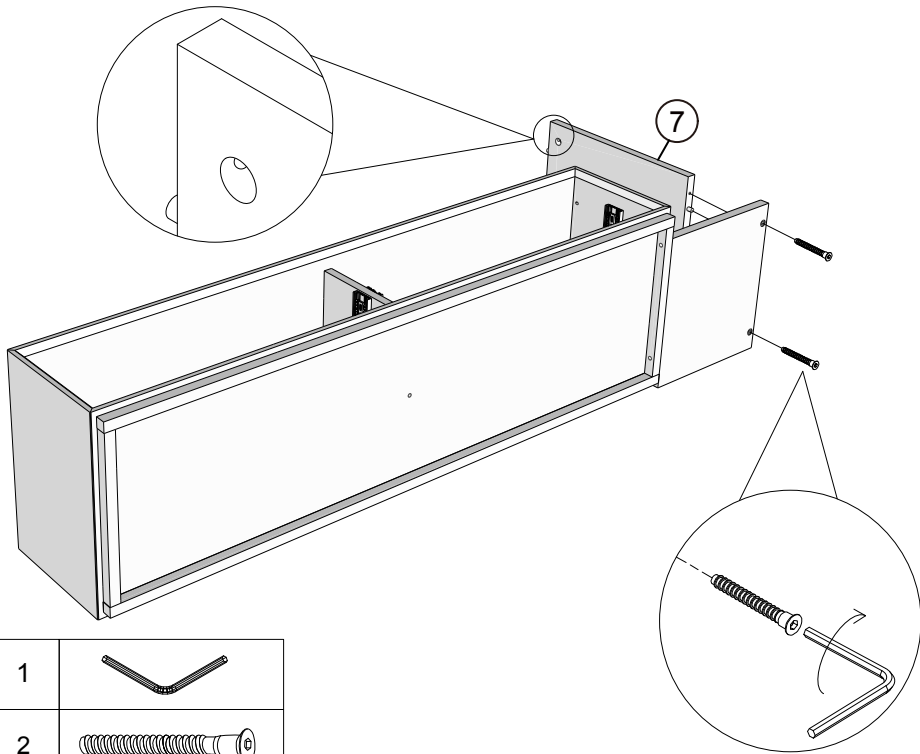 8




T6	N/A	1	
Y8	Ø6 x 50mm	2	


NEXT

HAYFORD TV UNIT K75871 Assembly instructions

 9

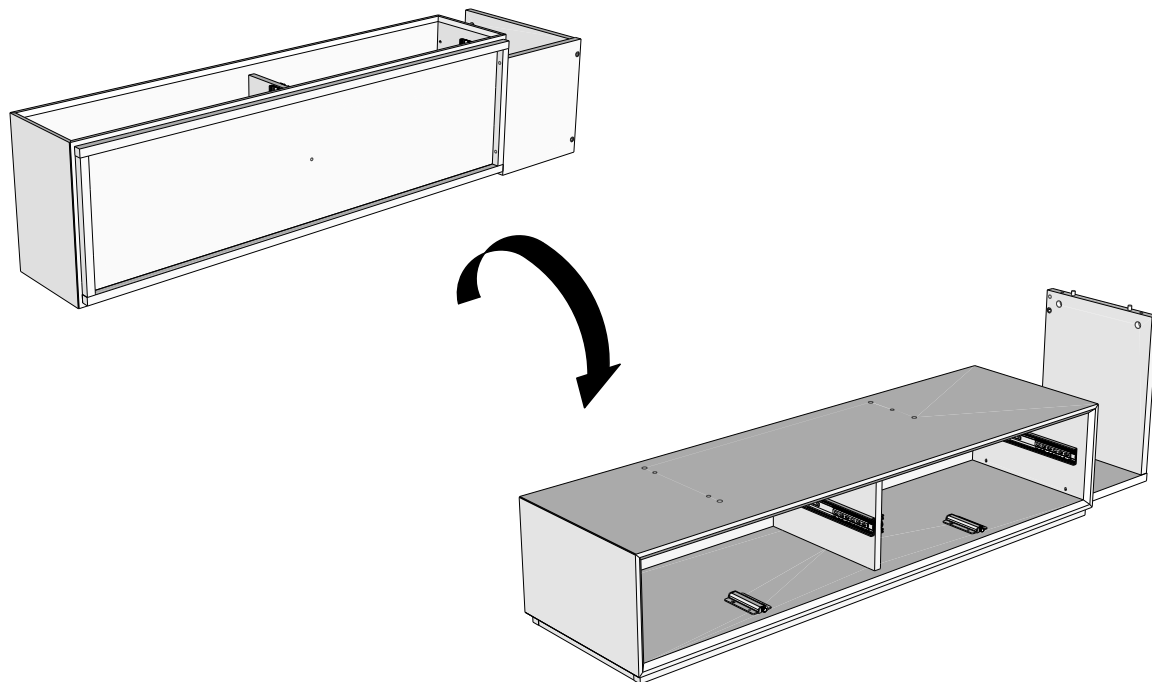


10

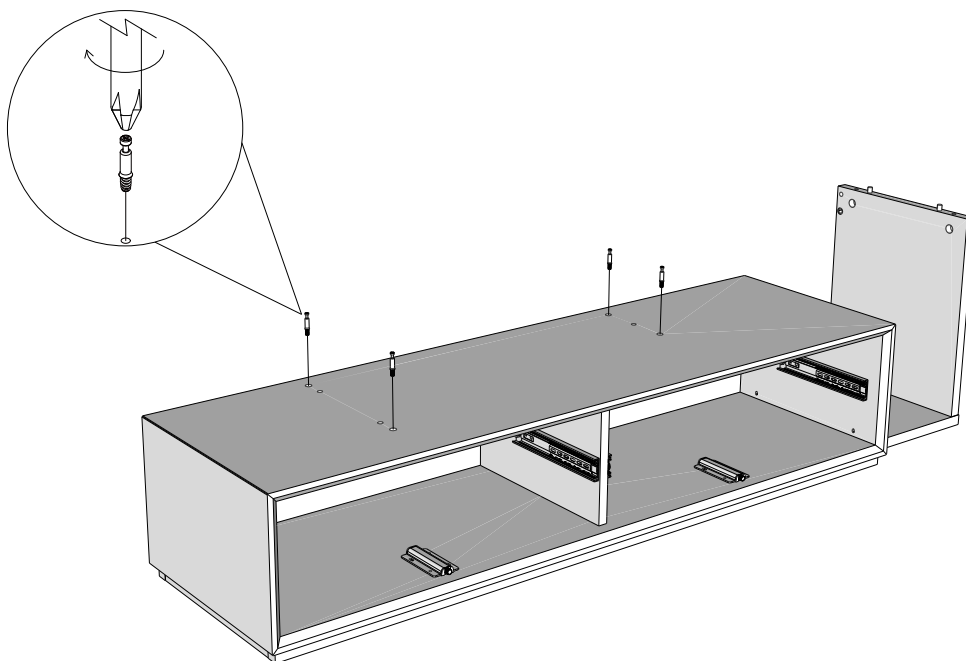 

B12

Ø7.5 x 33mm

 
4




NEXT HAYFORD TV UNIT

K75871
Assembly instructions

 11

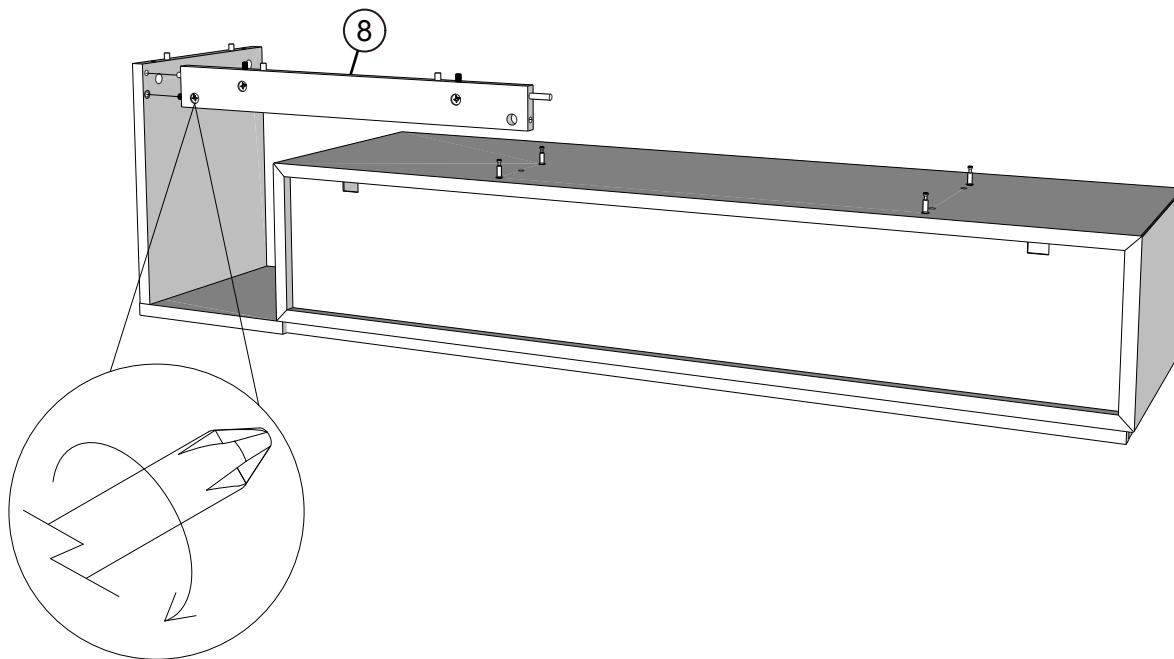

12

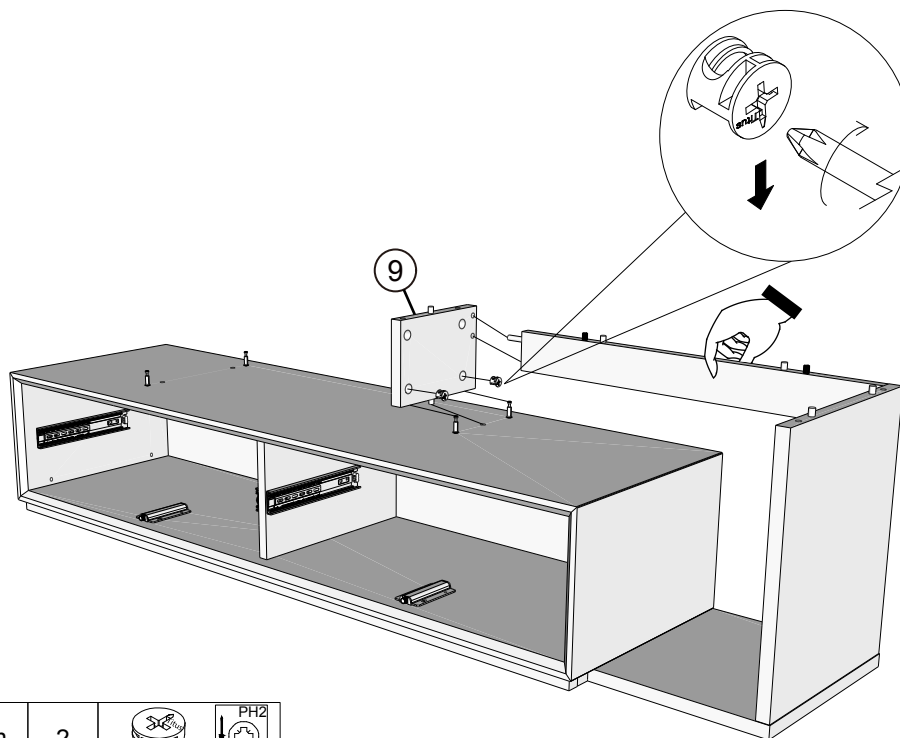 

B3

Ø15 x 12mm

2

 
 


not supplied

NEXT

HAYFORD TV UNIT K75871 Assembly instructions

13

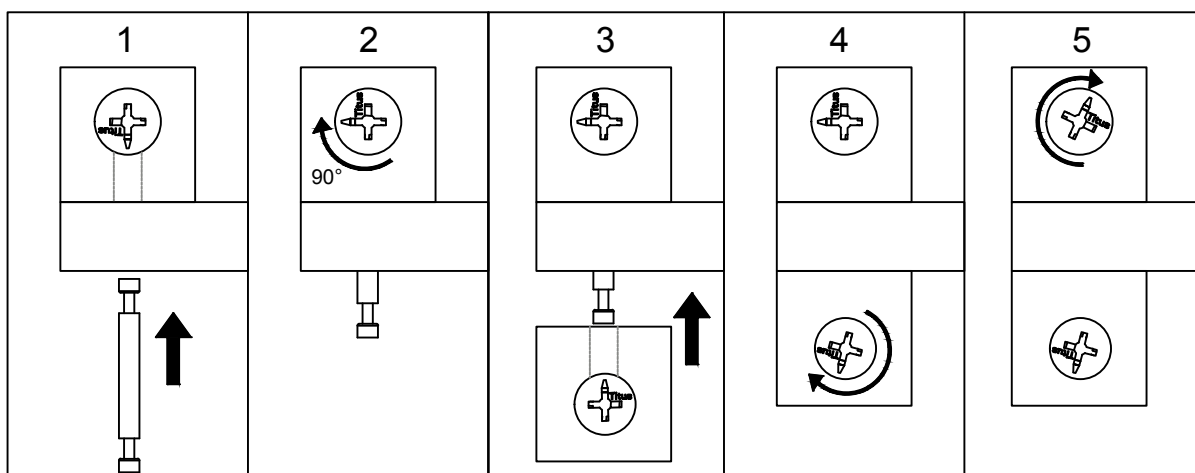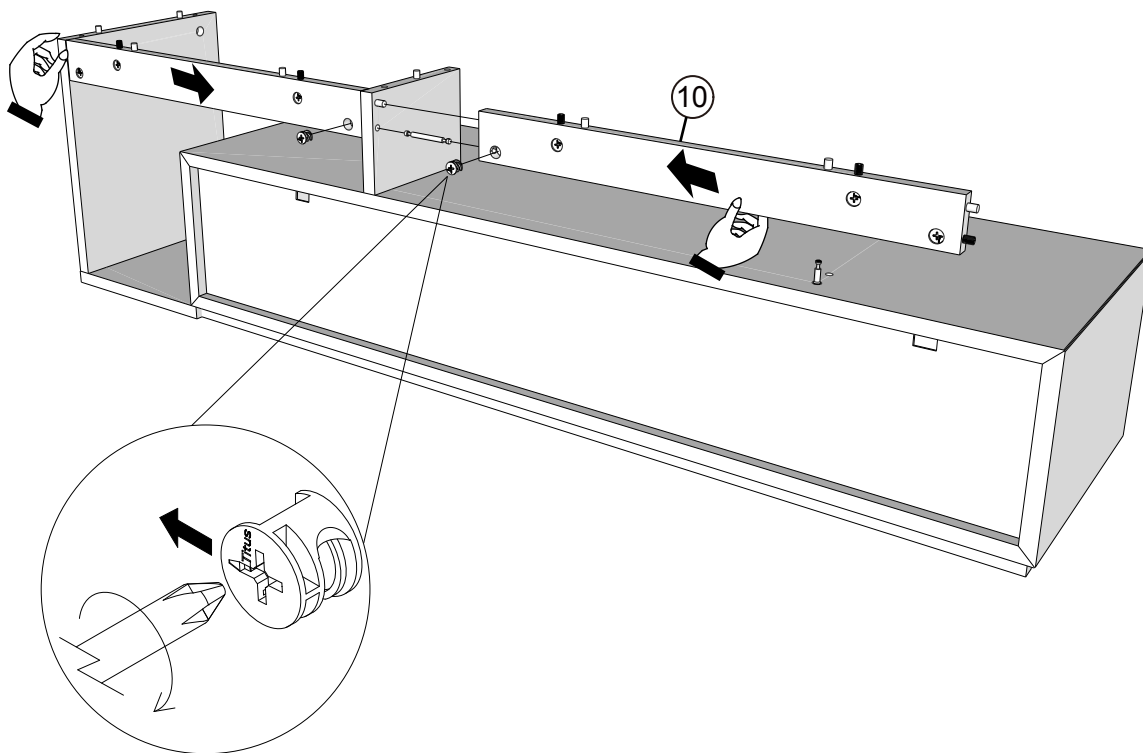


B17	Ø6 x 68mm	1	
B3	Ø15 x 12mm	2	PH2 not supplied

NEXT

HAYFORD TV UNIT K75871 Assembly instructions

 14

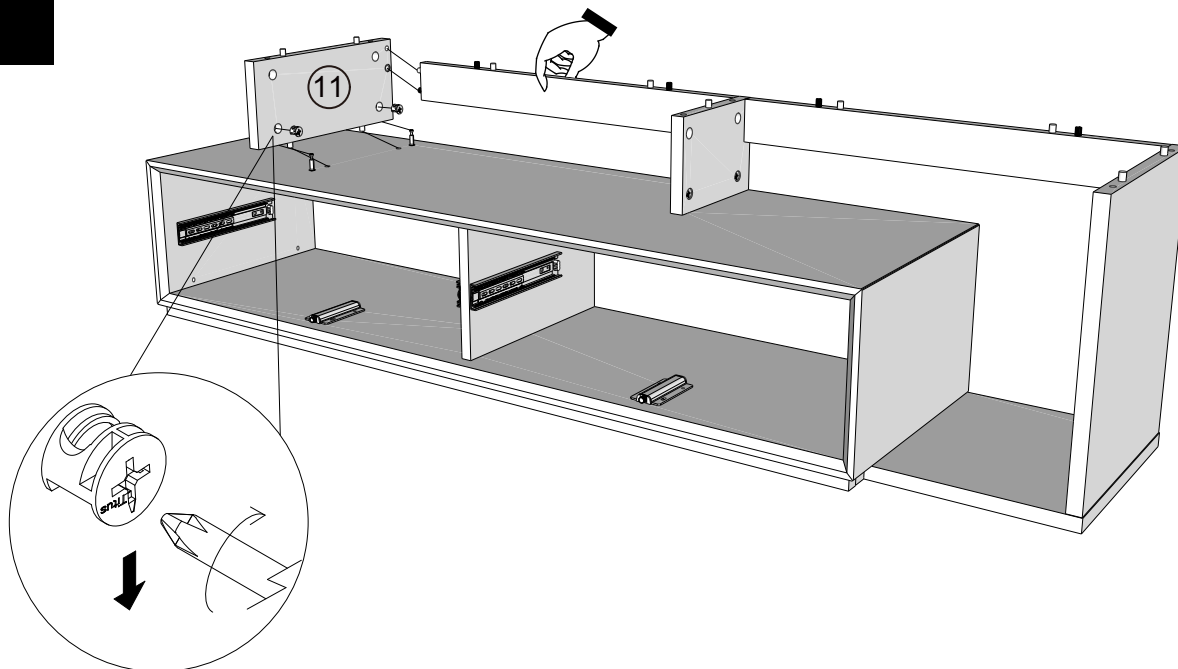

B3


Ø15 x 12mm

2



PH2
not supplied

 
15

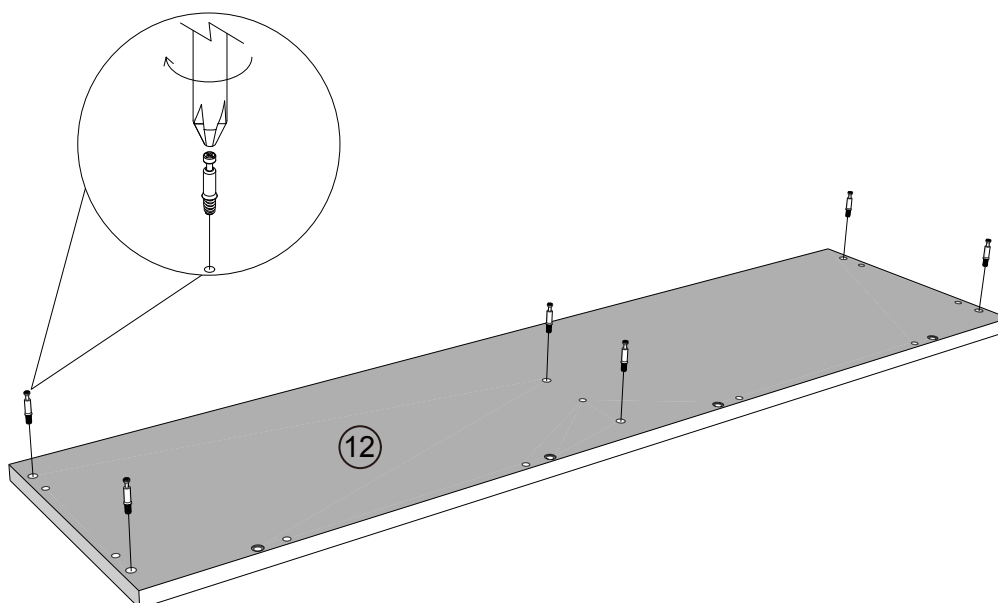

B12

Ø7.5 x 33mm

 6




PH2
not supplied

NEXT HAYFORD TV UNIT

K75871


Assembly instructions

 16

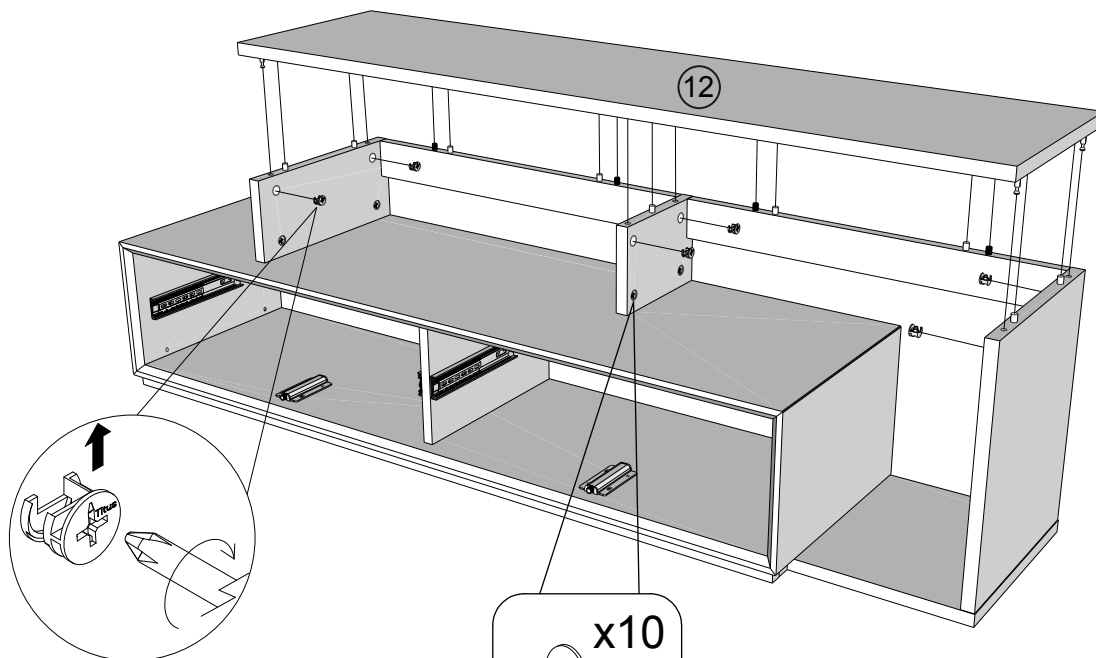

O1	Ø21mm	10	
B3	Ø15 x 12mm	6	PH2 not supplied

 17

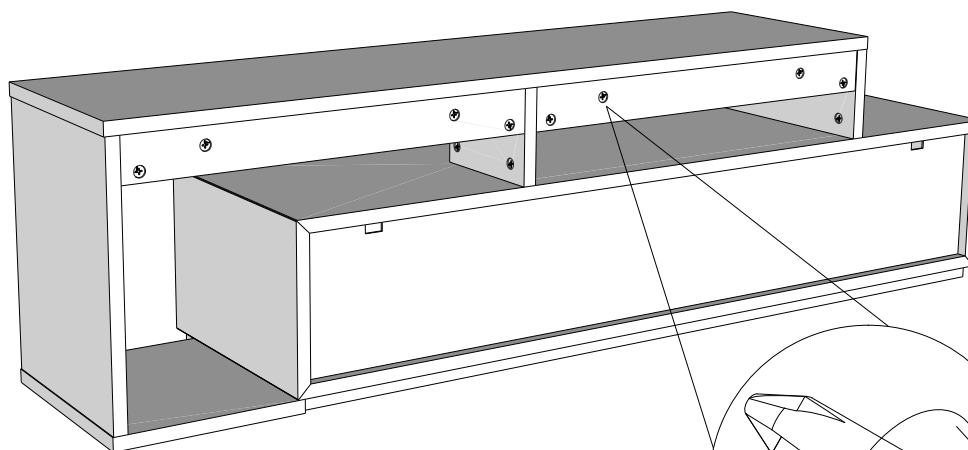

WHEN LOOSENING THE CAM

TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



MAXIMUM
LOCK



TURN
TO UNLOCK

 


UNLOCKED

NEXT


HAYFORD TV UNIT K75871 Assembly instructions

18

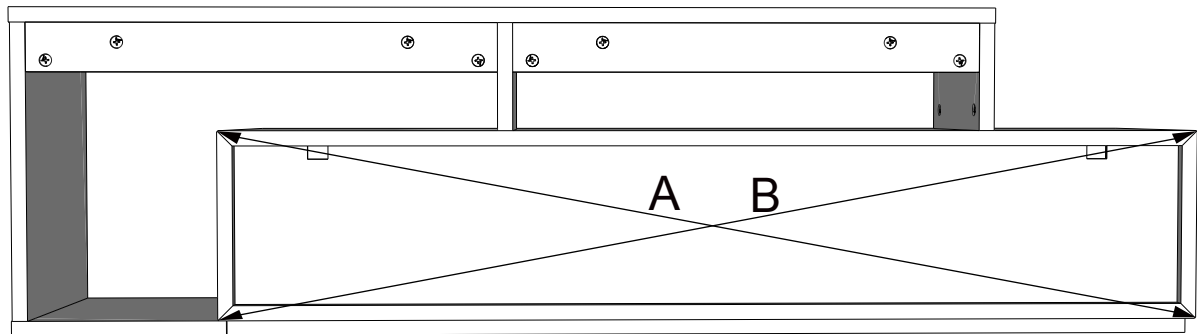

$$A=B$$

 19

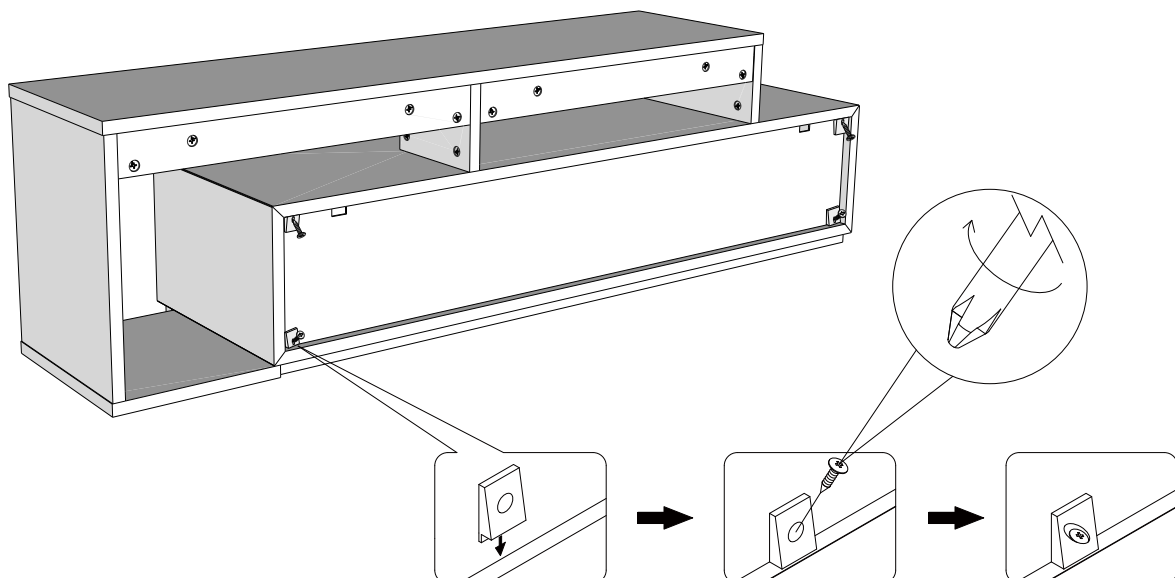

N/A

4



NEXT HAYFORD TV UNIT

K75871

Assembly instructions

20

We recommend the use of the wall attachment bracket/strap provided for safety reasons.
Secure the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).
To hide the strap behind the unit, drill the hole lower than the top of unit.

 
 
Attach the other end of the strap to the underside of the top panel with screw.




Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

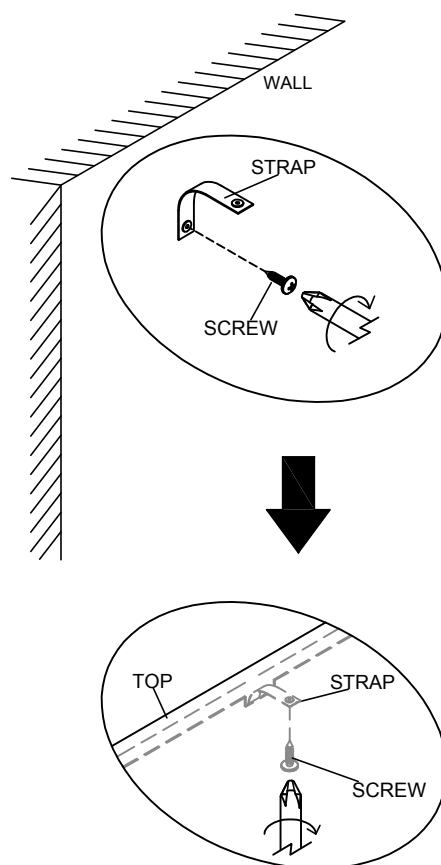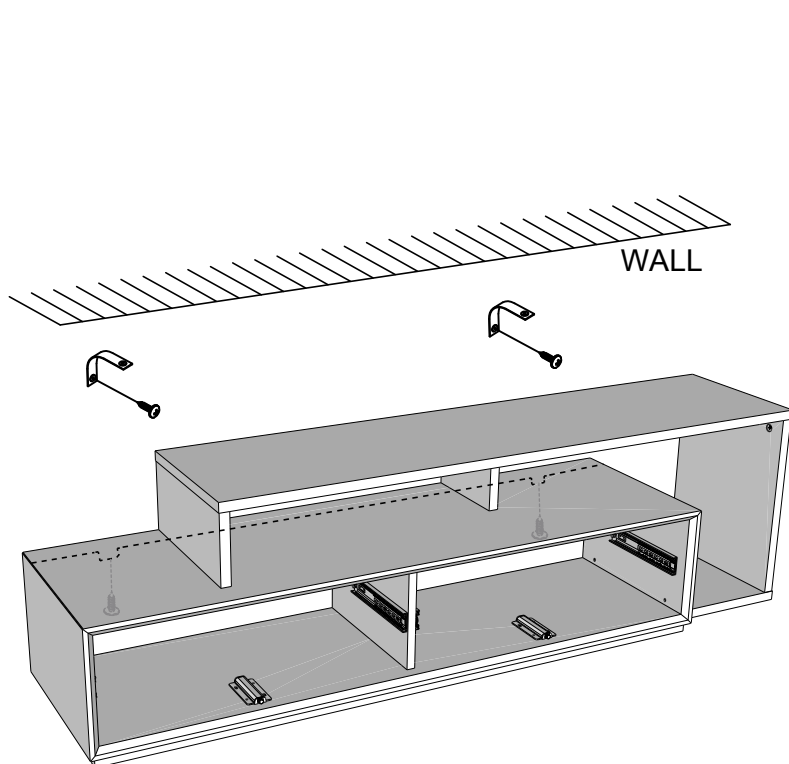 Please ensure you secure your product to the wall for your and your family's safety before you use it.




S41	Ø4 x 16mm	2	  not supplied
T39	N/A	2	

NEXT


HAYFORD TV UNIT K75871 Assembly instructions

 21

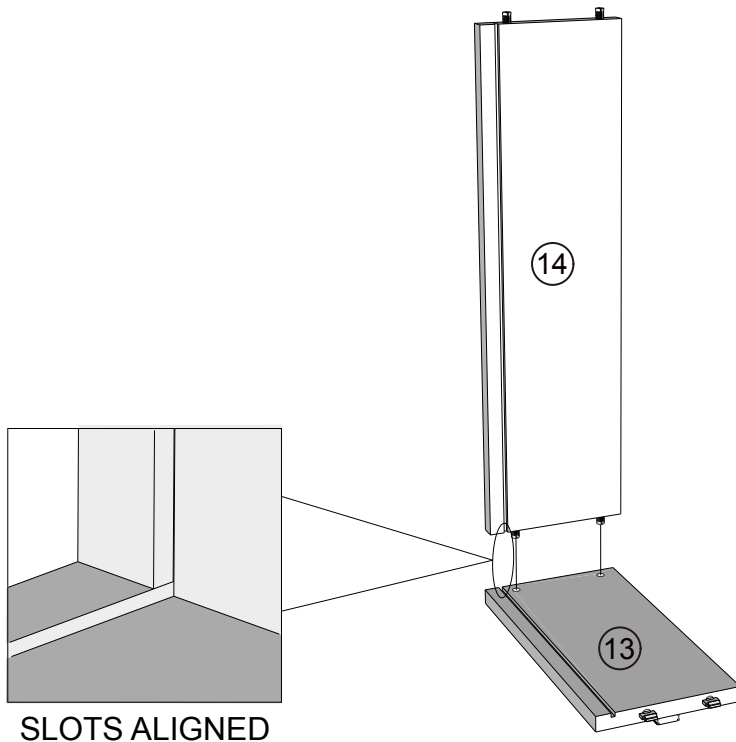

X2

 22

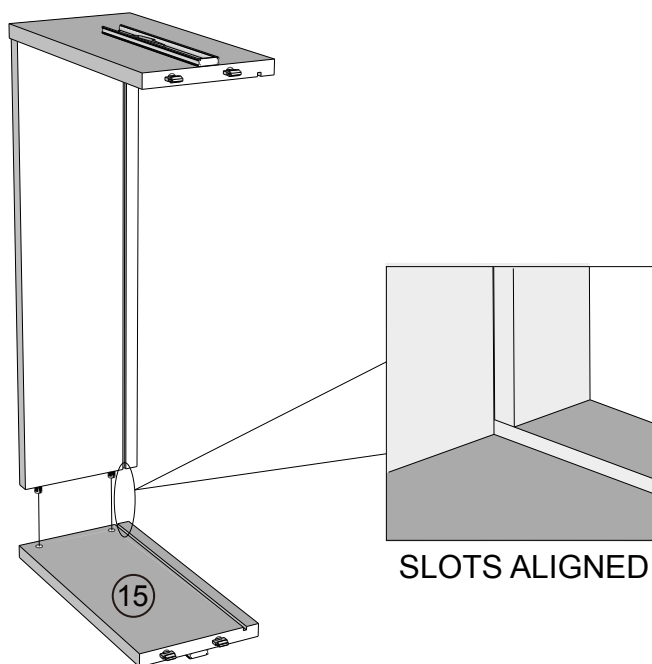

X2

 
NEXT

HAYFORD TV UNIT

K75871

Assembly instructions



23

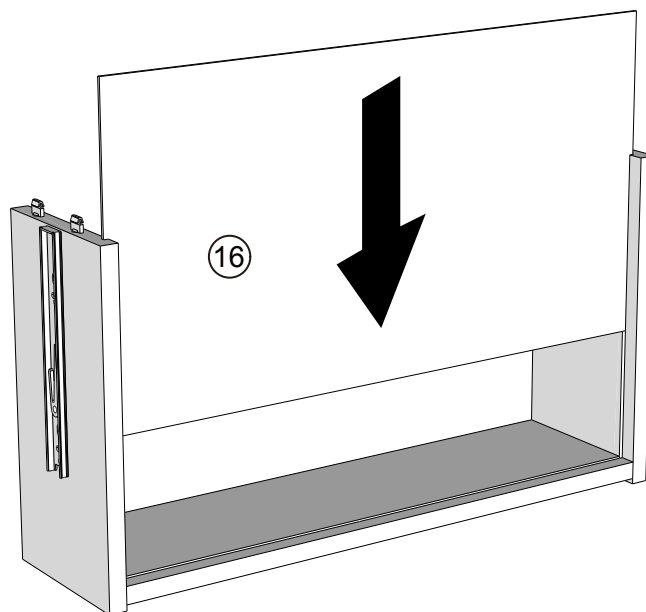

X2

24

 
 
Note: Drawer will be permanently assembled once panel 17 and panel 18 are fitted.

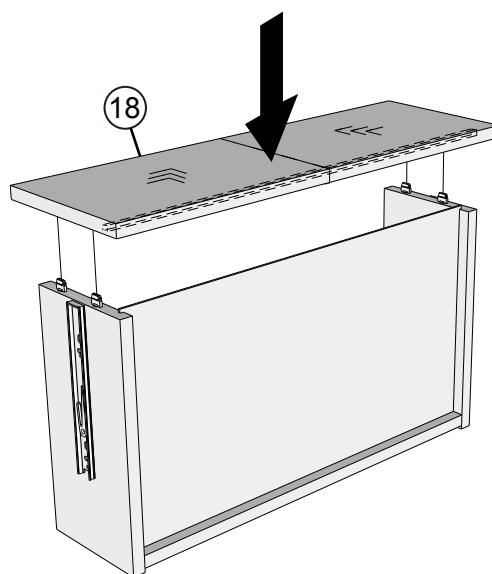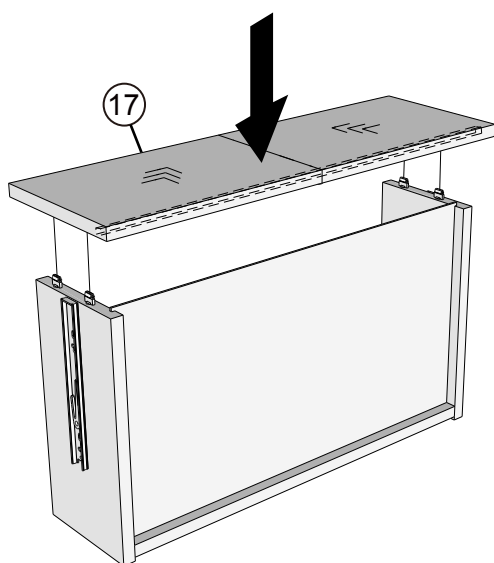


NEXT

HAYFORD TV UNIT K75871 Assembly instructions

  
25

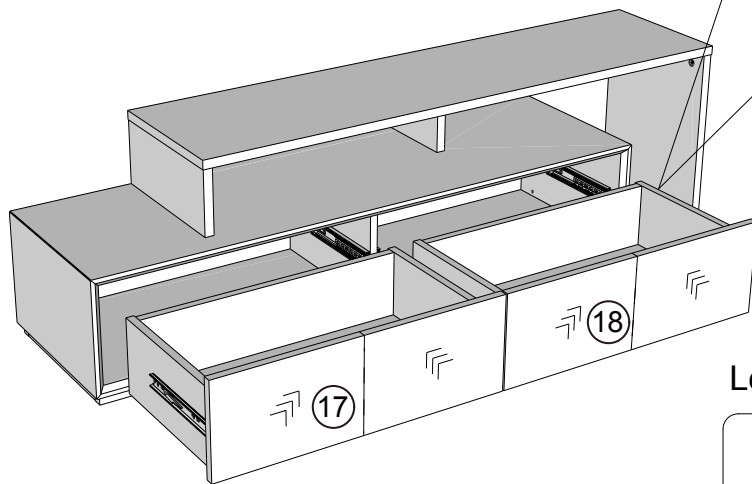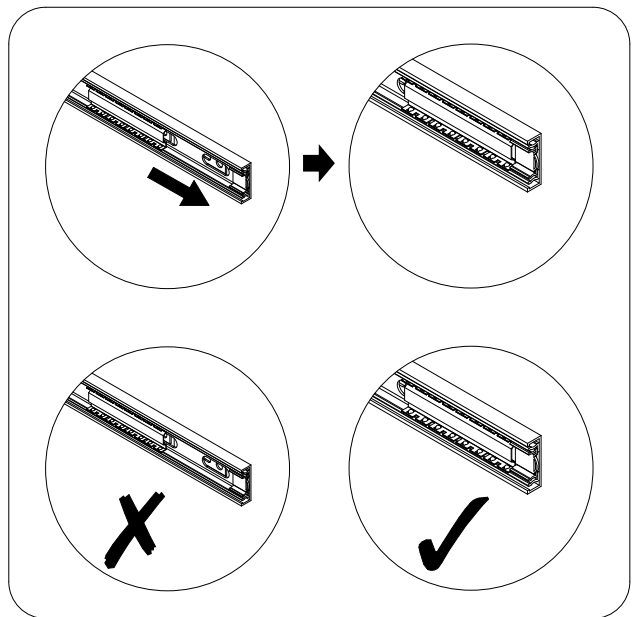

Left side

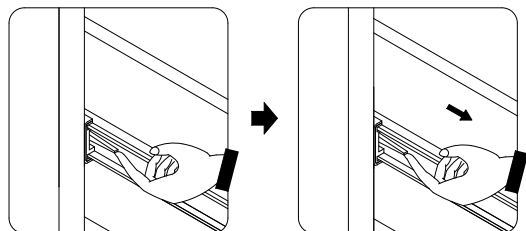 


Right side

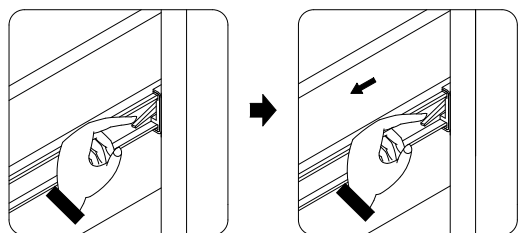 

NEXT HAYFORD TV UNIT

K75871

 Actual product size
H40x W145x D35cm

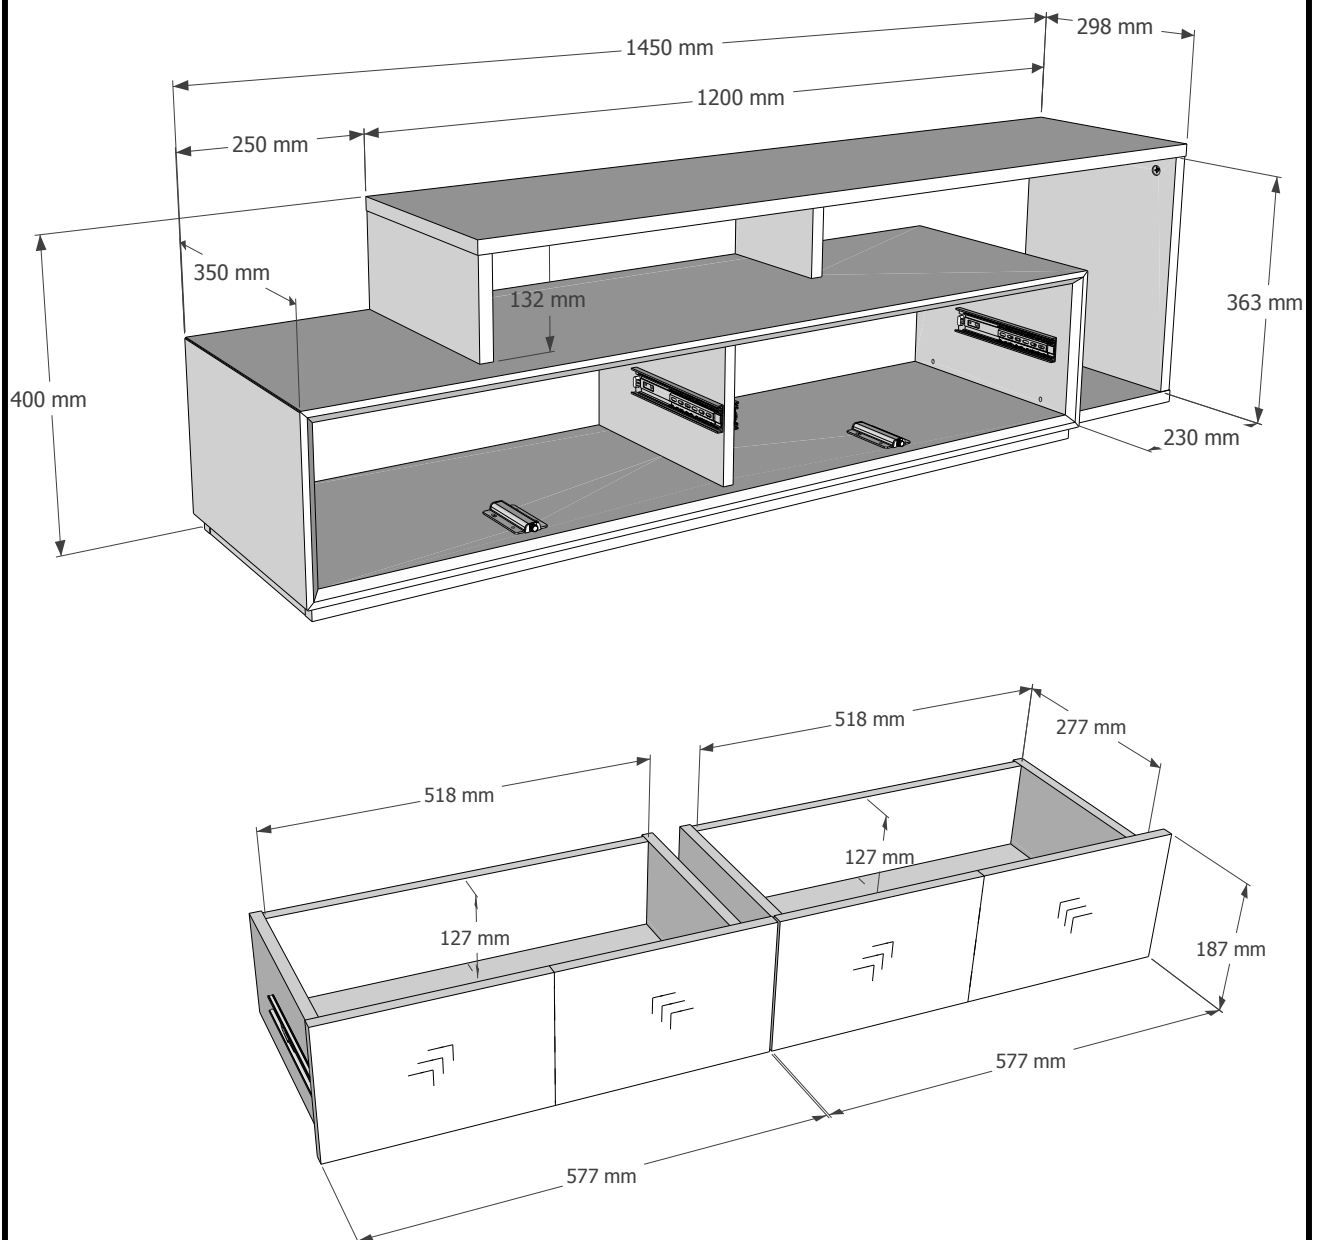

NEXT HAYFORD TV UNIT

K75871

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk