

# NEXT

 
## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343

Assembly instructions

### Actual product size

H82x W132x D39cm

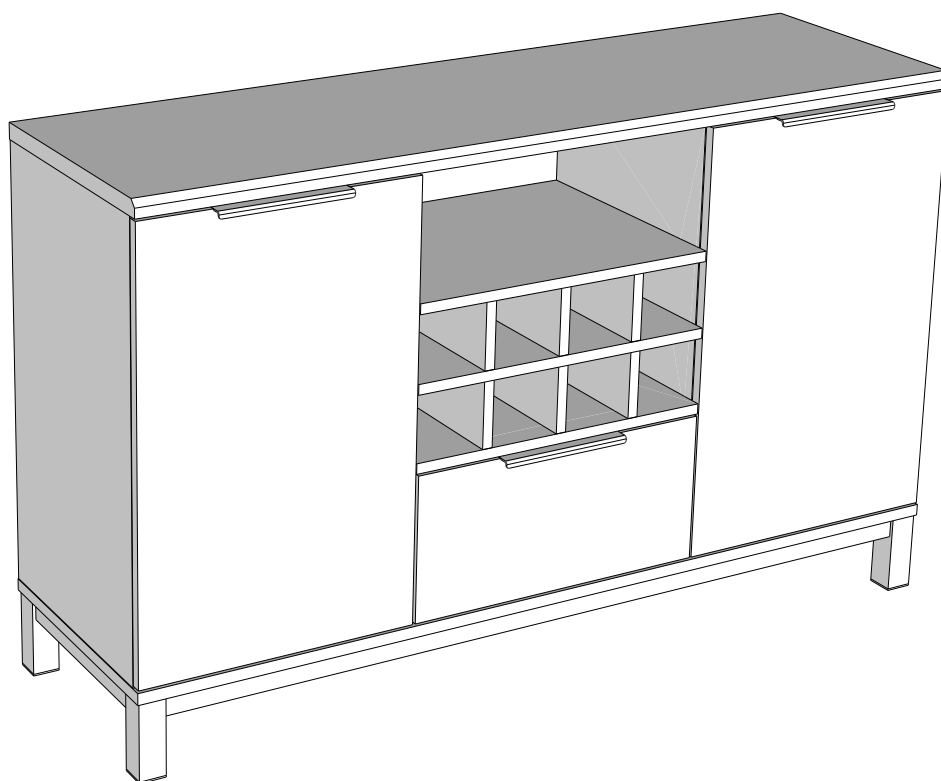

## Need Help ?

With: Assembly instruction

Missing or damaged parts

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

**CALL: 0333 777 8999**

# BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

## 1. COLOUR

Make sure you're happy with the colour

No need to unpack everything, just check the first component.

## 2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

## 3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

## TIPS FOR RETURNS

Not completely happy with the product? No problem.

We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly - as it may get damaged.

 
**NEXT**  
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.




## Care instructions for hollow board & Honeycomb board during you assembling the product

The structures of hollow board & honeycomb board are as below:

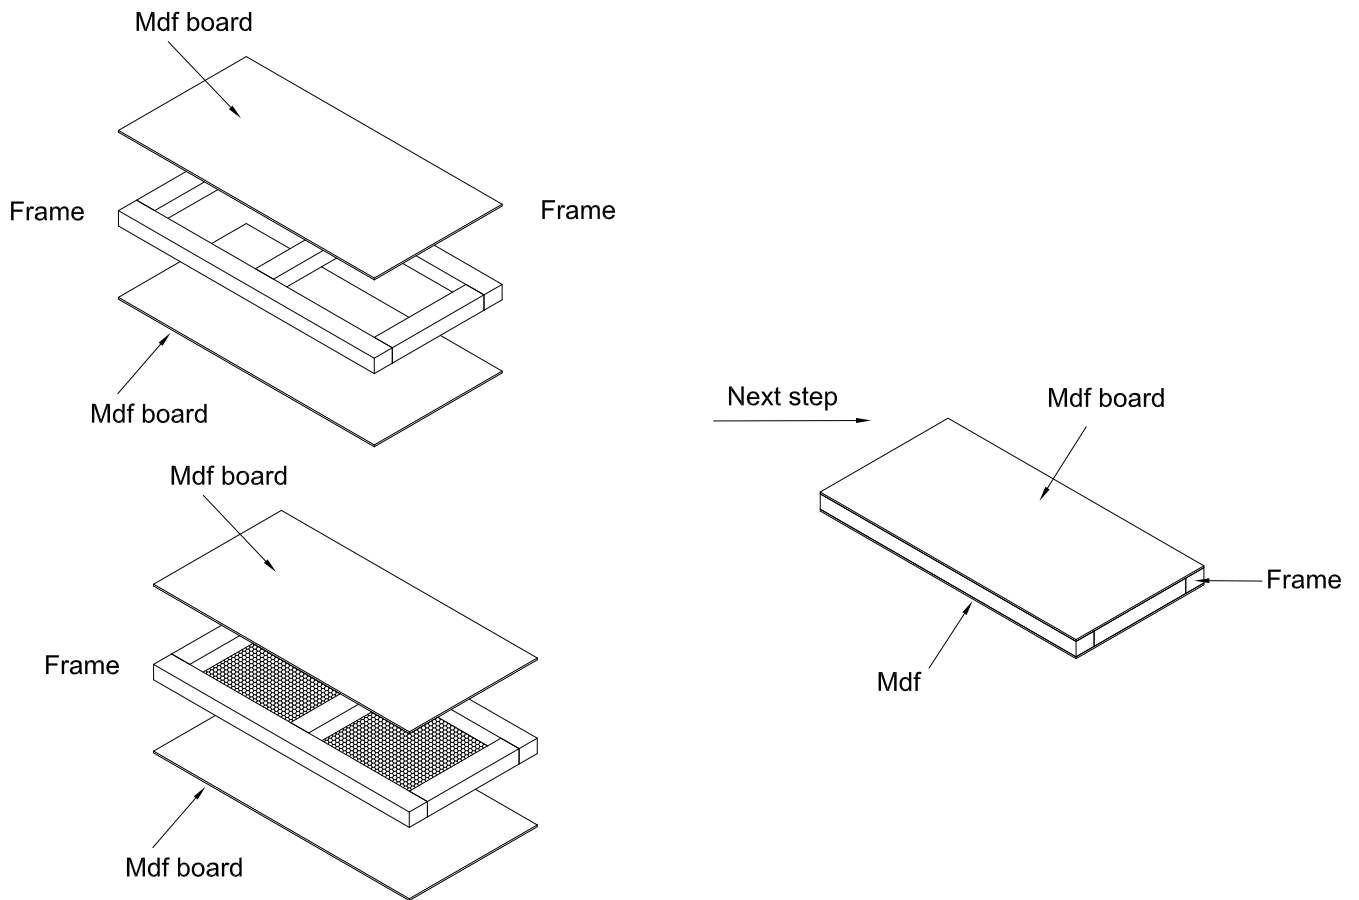

 The centre of Hollow board & Honeycomb board is hollow. To avoid damaging the hollow board/honeycomb board, we suggest you not step on the hollow board/honeycomb board or not put other part on the board on the end when you assemble the product.

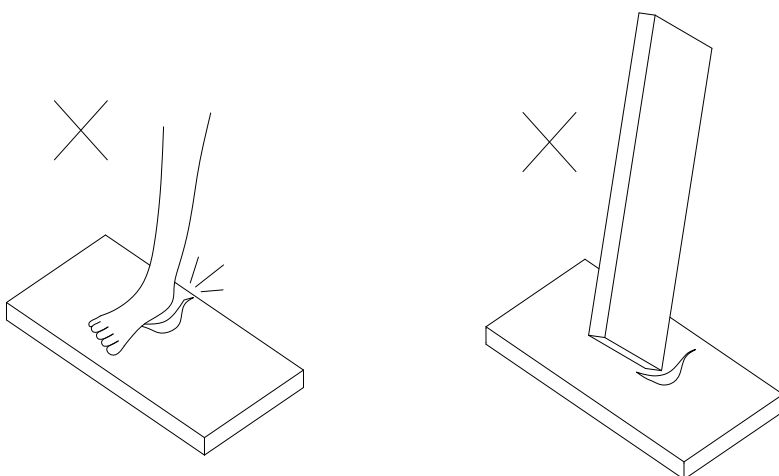

# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343

Assembly instructions

### BEFORE YOU START

#### Number of people required to assemble

 
Two people are required to assemble this item



**Time to assemble : 30 minutes**



#### Tools required

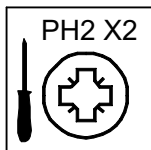

not supplied

#### Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

#### Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.  
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.



 
# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343

Assembly instructions

### GETTING TO KNOW YOUR PRODUCT

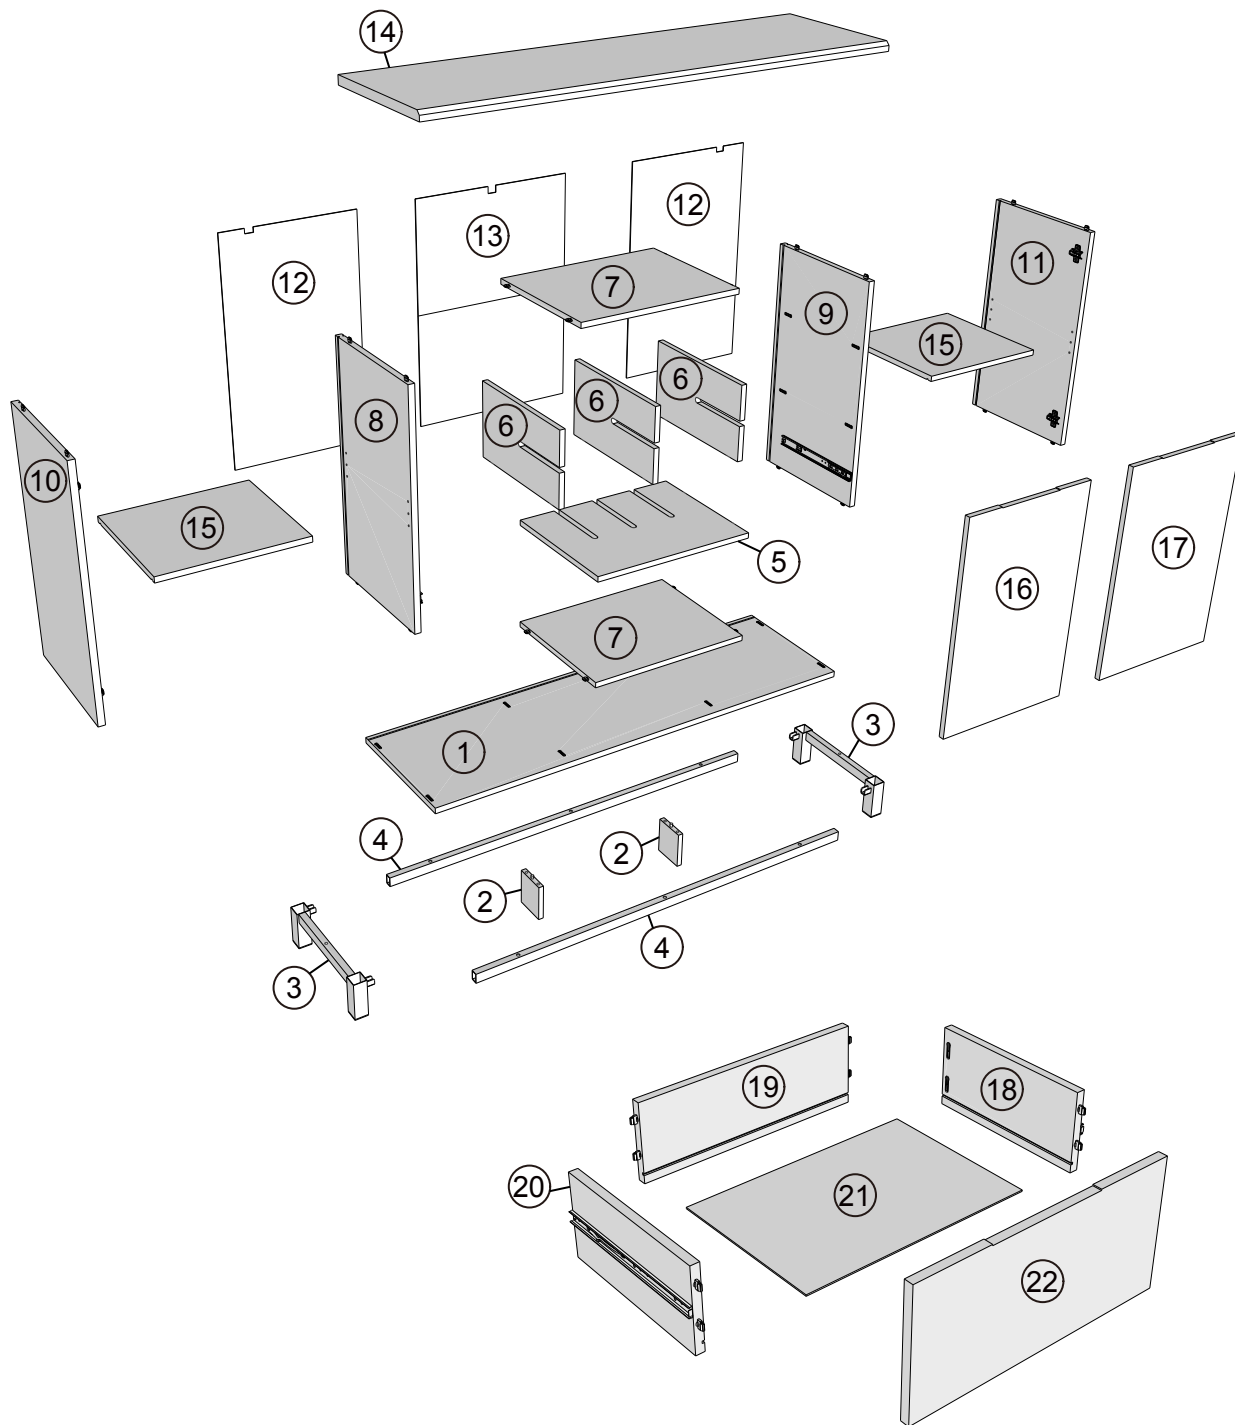



 


 


 



 
# NEXT










## BRONX / BRONX GREY KITCHEN SIDEBOARD

 332873 / K79343



Assembly instructions

Components supplied. Please use this guide if you require replacement parts.


Ref	Dimensions	Visual	Qty	Ctn
1	39x132cm		1	1
2	9.5x12cm		2	1
3	12x38cm		2	1
4	2x123.5cm		2	1
5	37x47cm		1	1
6	21.5x37cm		3	1
7	37x47cm		2	1
8	37x66cm		1	1
9	37x66cm		1	1
10	37x66cm		1	1
11	37x66cm		1	1
12	39.5x66.5cm		2	1
13	48x66.5cm		1	1

Ref	Dimensions	Visual	Qty	Ctn
14	39x132cm		1	1
15	35.5x38.5cm		2	1
16	42x65cm		1	1
17	42x65cm		1	1
18	14.5x30cm		1	1
19	14.5x42cm		1	1
20	14.5x30cm		1	1
21	29x43cm		1	1
22	22x46.5cm		1	1

## NEXT FITTINGS ASSEMBLE INSTRUCTIONS

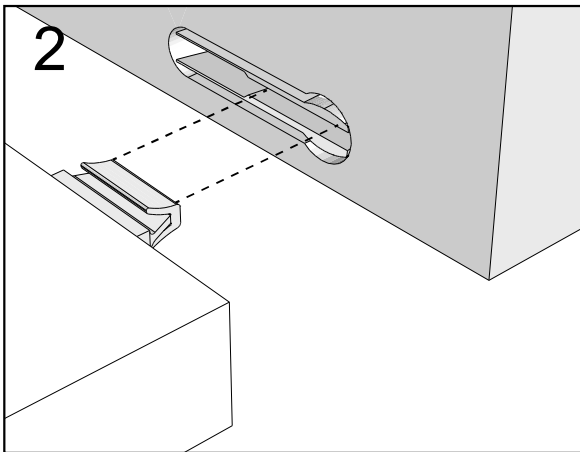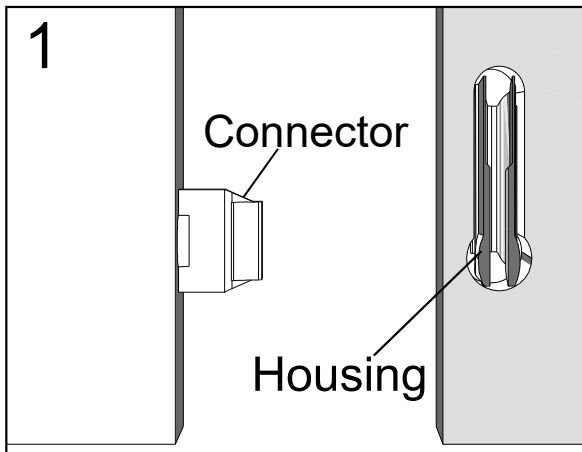  

Push connector into housing to join.

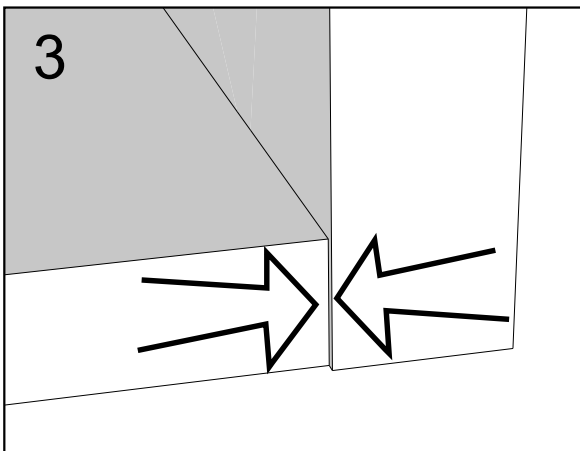 

Make sure there is no gap between the panels.

# NEXT

 
## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343

Assembly instructions

### Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	4	1
D6	Ø8 x 30mm	N/A	1
S41	Ø4 x 16mm	2	1
B12	Ø7.5 x 33mm	4	1
U139	Ø4.5 x 15mm	8	1
V68	Ø6 x 40mm	8	1
V36	Ø6 x 14mm	4	1
P3	Ø5 x 16mm	8	1

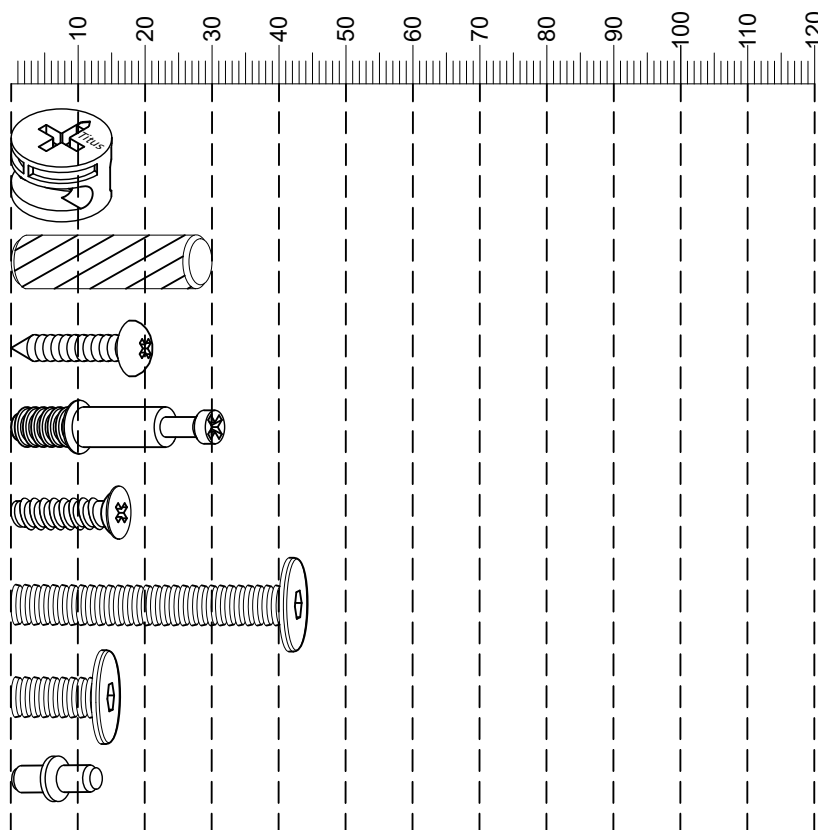

### Fixtures and fittings supplied ( not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T1	N/A	2	N/A	
C16	N/A	4	N/A	
T39	N/A	2	N/A	
T38	N/A	14	2	
E39	N/A	3	N/A	

 
# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343

Assembly instructions


1

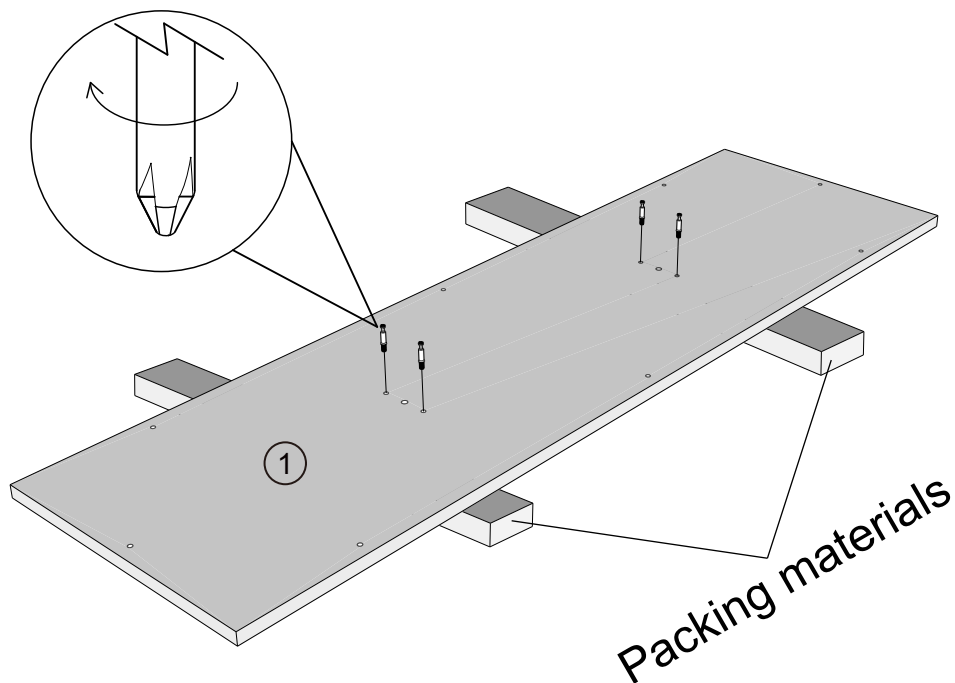


B12

Ø7.5 x33mm

 4



2

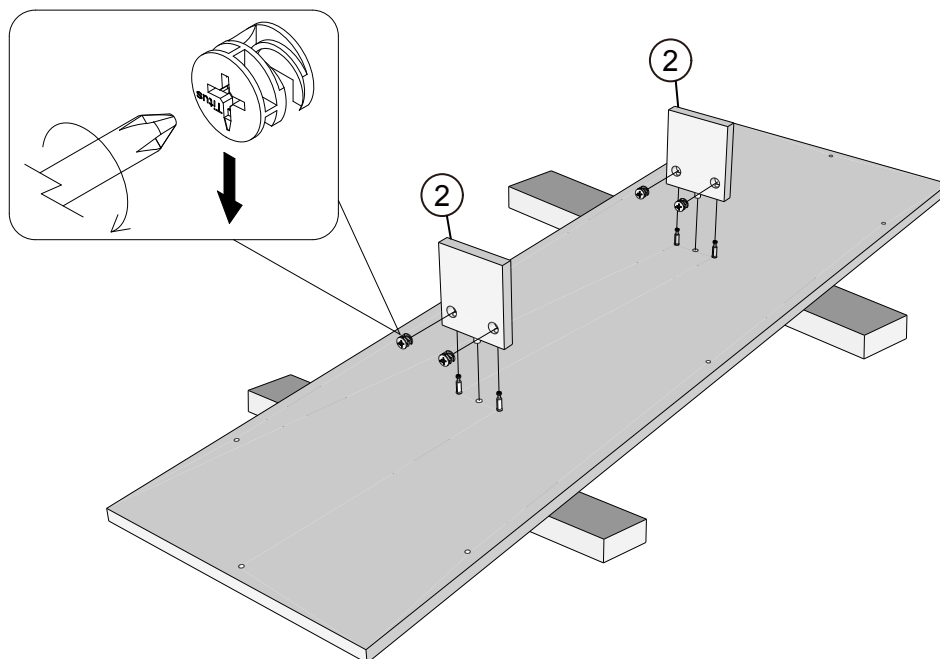 

B3

Ø15 x12mm

4





# NEXT
 
## BRONX / BRONX GREY KITCHEN SIDEBOARD


332873 / K79343  
Assembly instructions

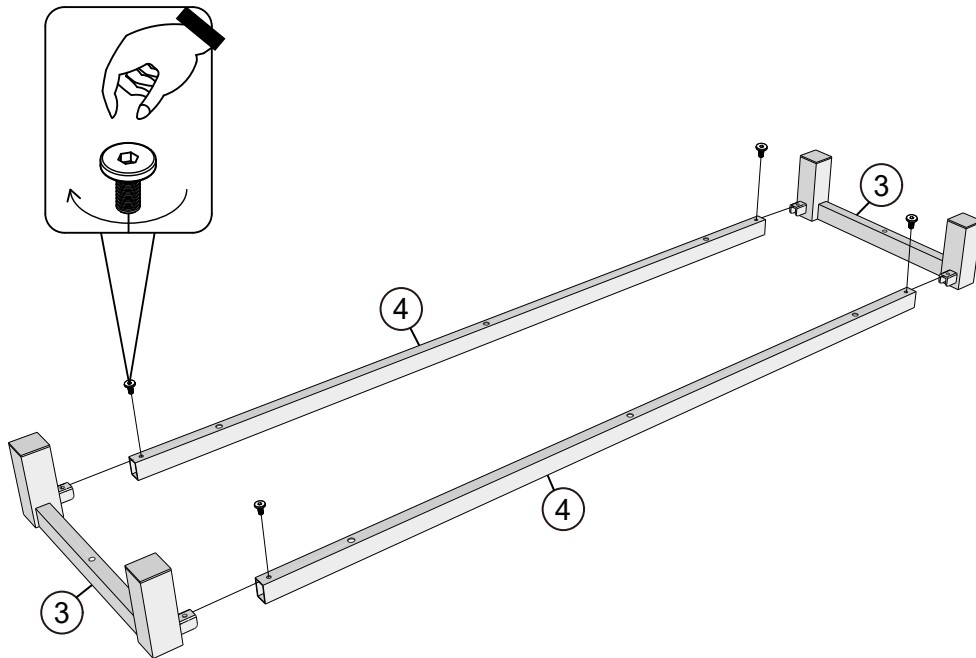

3



V36	Ø6 x 14mm	4	
-----	-----------	---	---

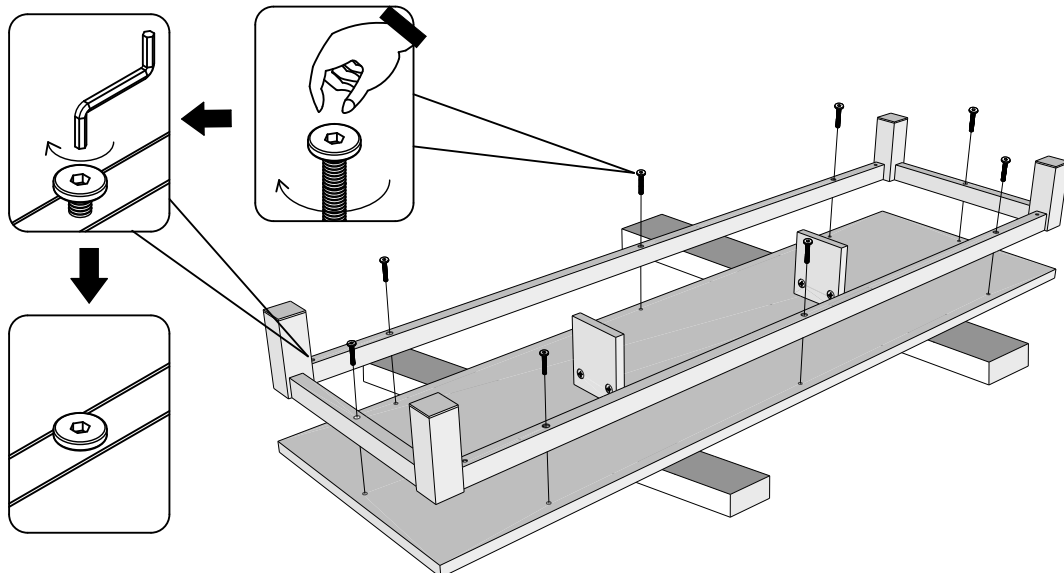 4



T1	N/A	2	
V68	Ø6 x 40mm	8	



# NEXT
  
## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343

Assembly instructions


5

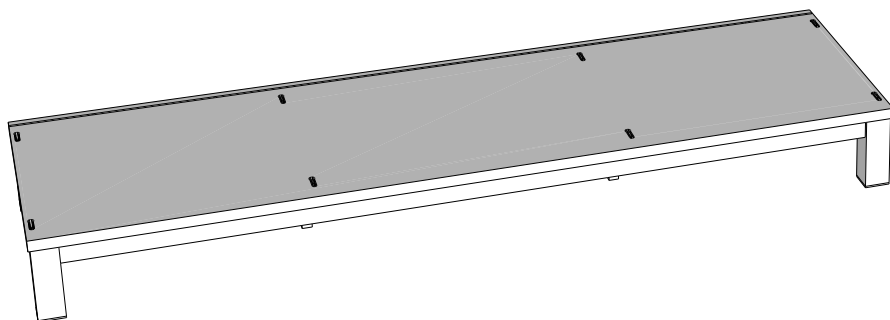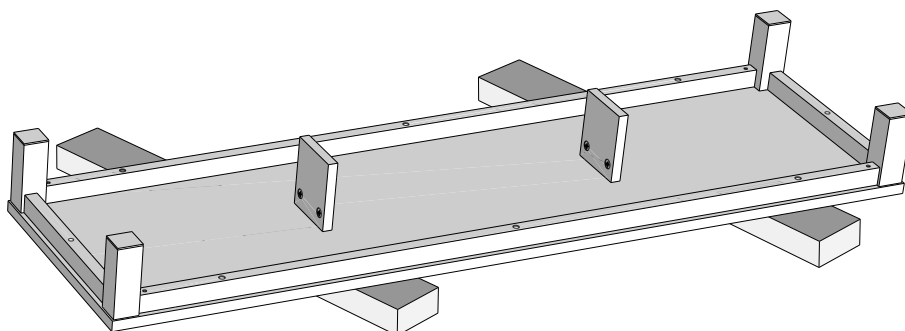


# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD 332873 / K79343 Assembly instructions

 6

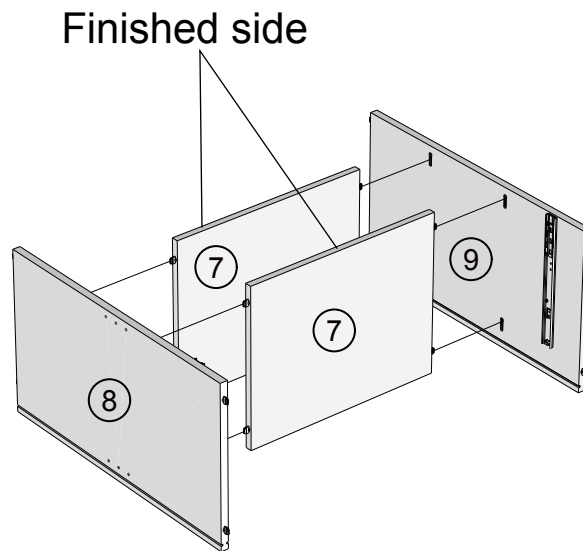

7

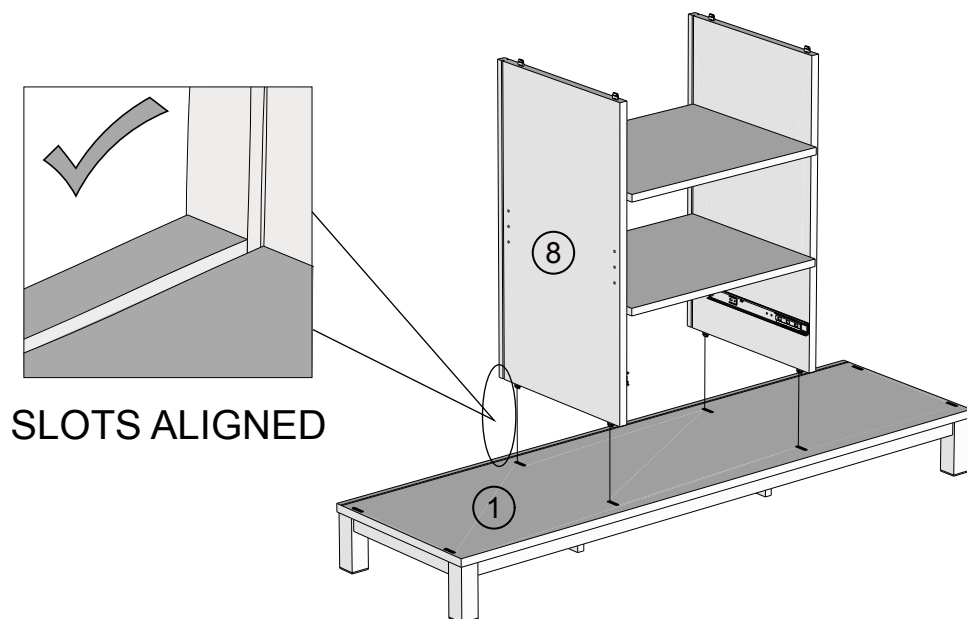 




# NEXT


## BRONX / BRONX GREY KITCHEN SIDEBOARD 332873 / K79343 Assembly instructions

 8

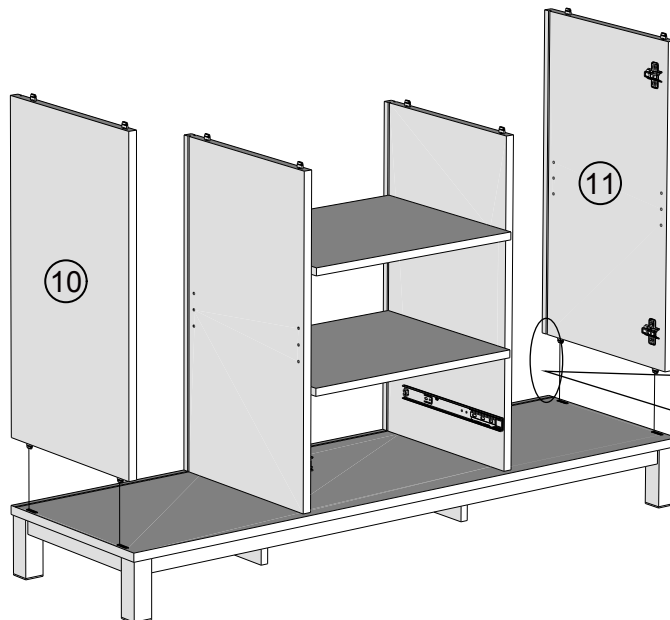

SLOTS ALIGNED

 9

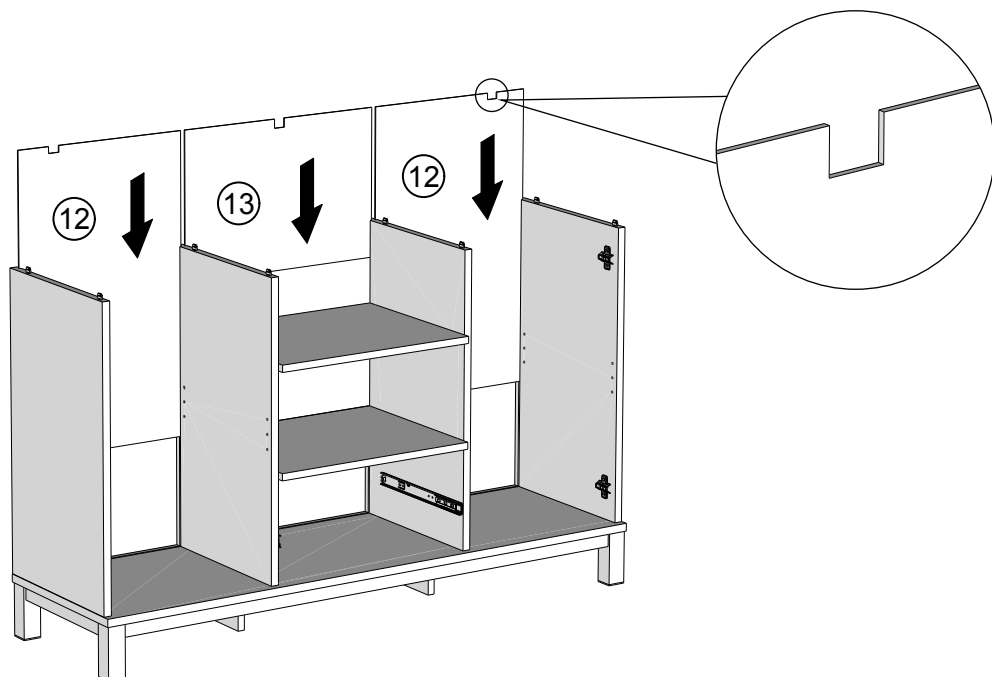


# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD


332873 / K79343

Assembly instructions

 10

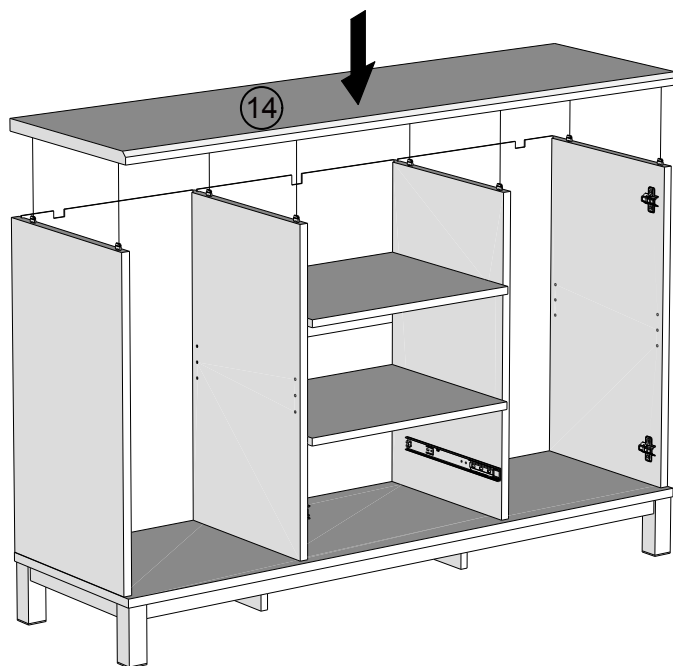

11

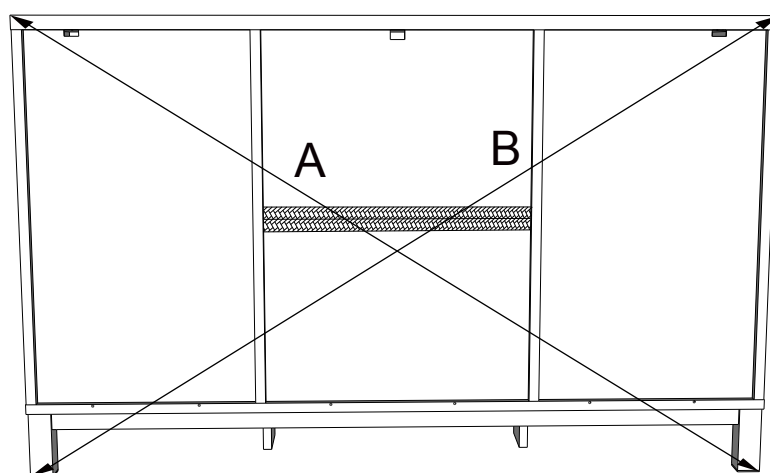 

$A=B$


# NEXT



 
## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343

Assembly instructions

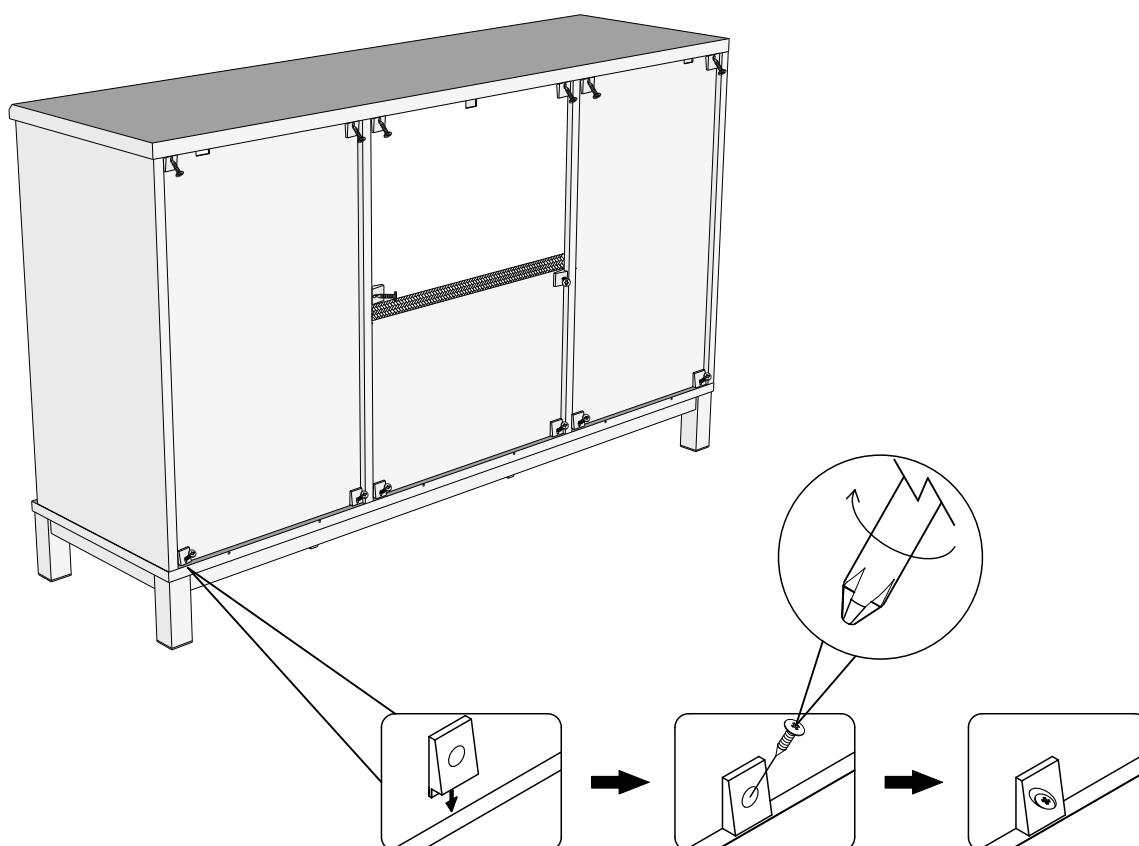12



T38	N/A	14			
not supplied					

# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343

### Assembly instructions

13

We recommend the use of the wall attachment bracket/strap provided for safety reasons.  
Secure the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).  
To hide the strap behind the unit, drill the hole lower than the top of unit.

 
Attach the other end of the strap to the underside of the top panel with screw.

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

Please ensure you secure your product to the wall for your and your family's safety before you use it.

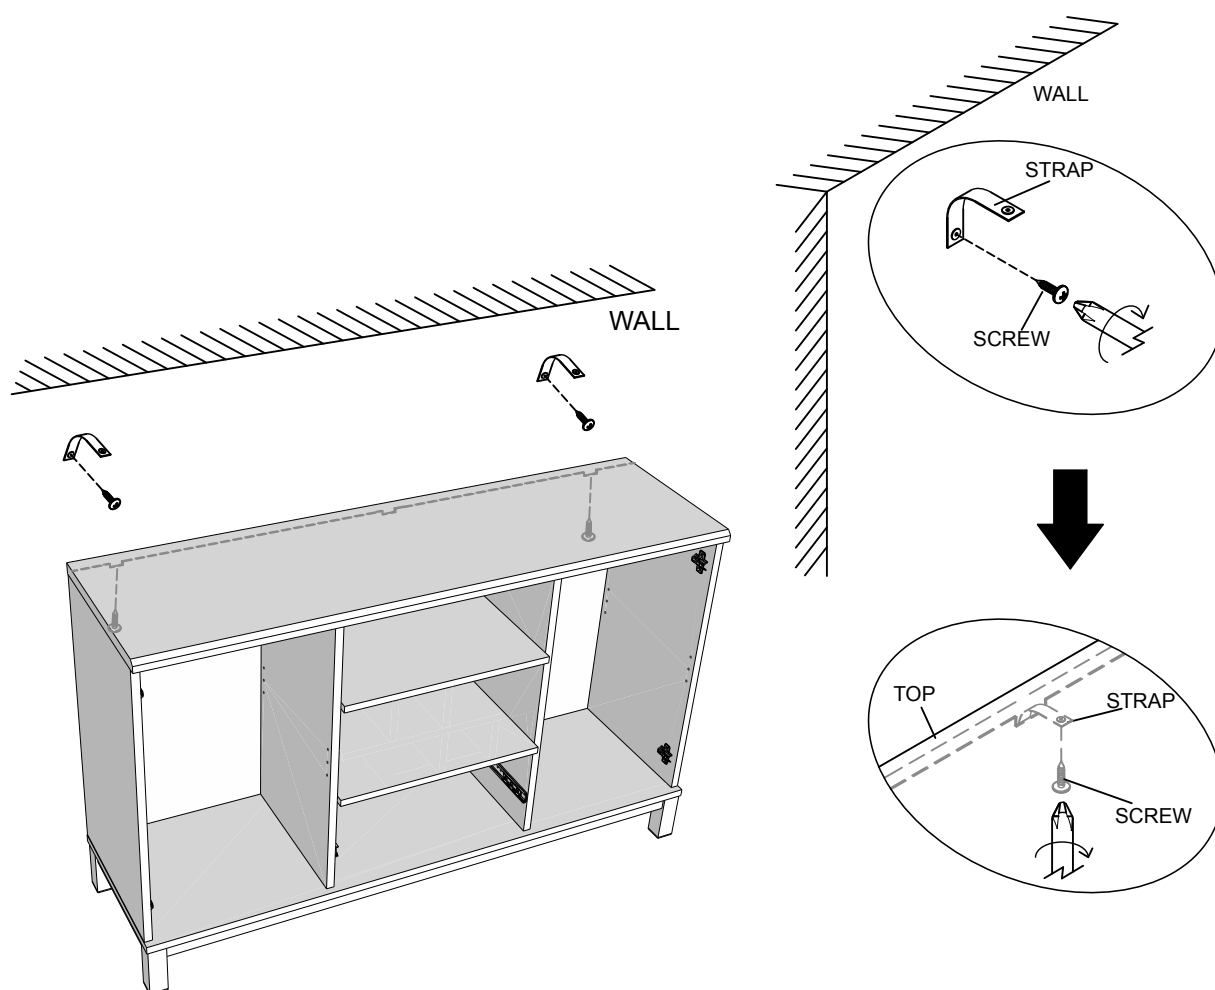

#### WHEN LOOSENING THE CAM

TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



MAXIMUM  
LOCK



TURN  
TO UNLOCK



UNLOCKED

T39	N/A	2	
S41	Ø4 x 16mm	2	PH2 not supplied

# NEXT

 
## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343


Assembly instructions

14

Step 14 & 15 are optional if the wine storage wants to be added

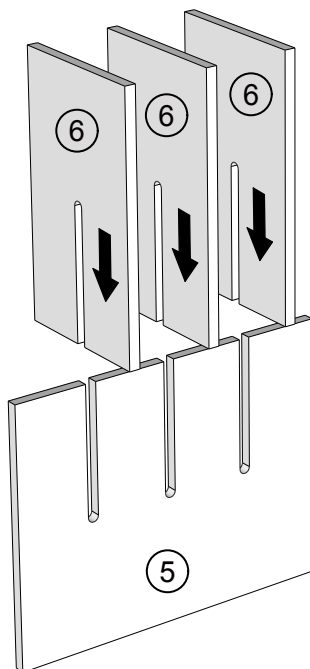

15

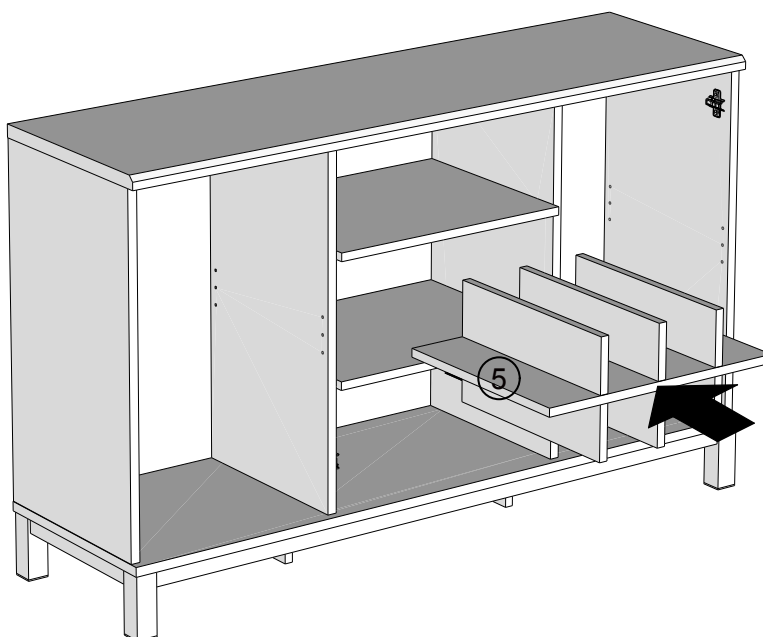 


# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343

Assembly instructions

 16

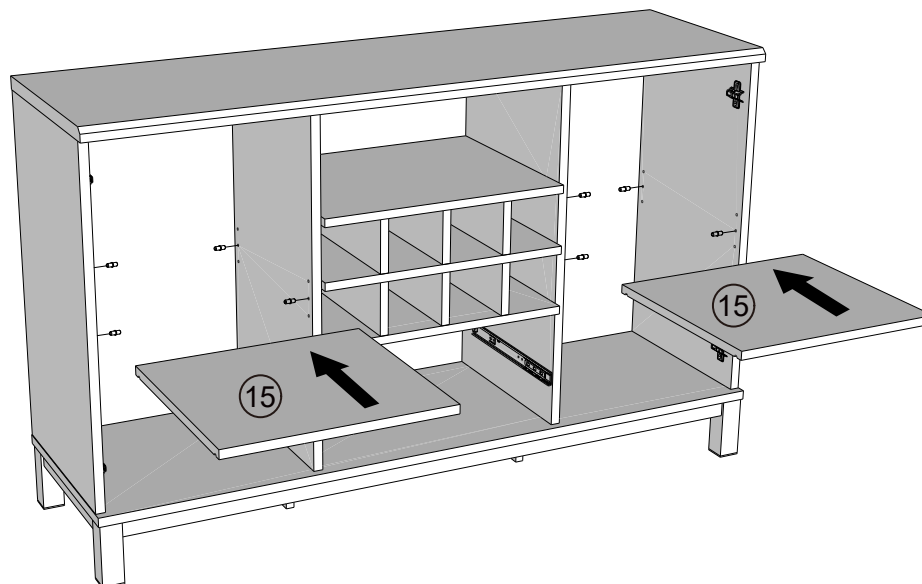


P3






Ø5 x 16mm

 8

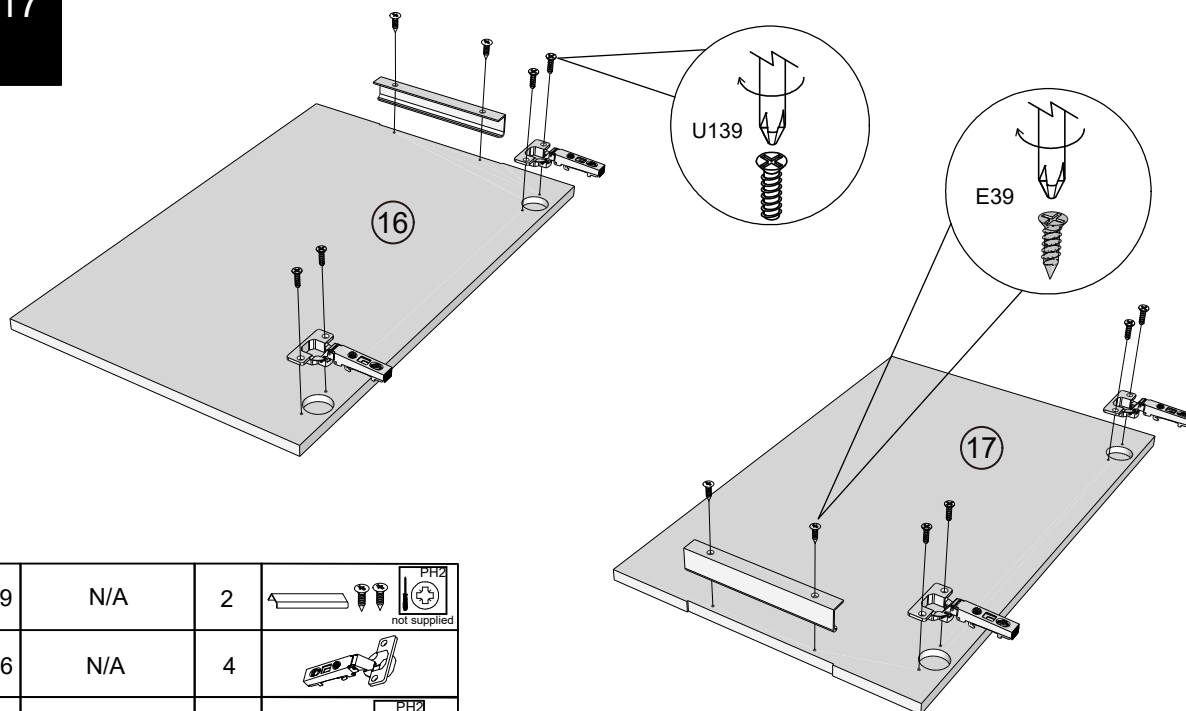

17



E39	N/A	2			not supplied
C16	N/A	4			
U139	Ø4.5 x 15mm	8			not supplied

# NEXT

 
 
 
## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343



Assembly instructions

18

### Install hinge

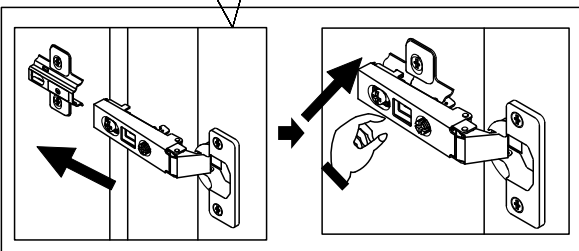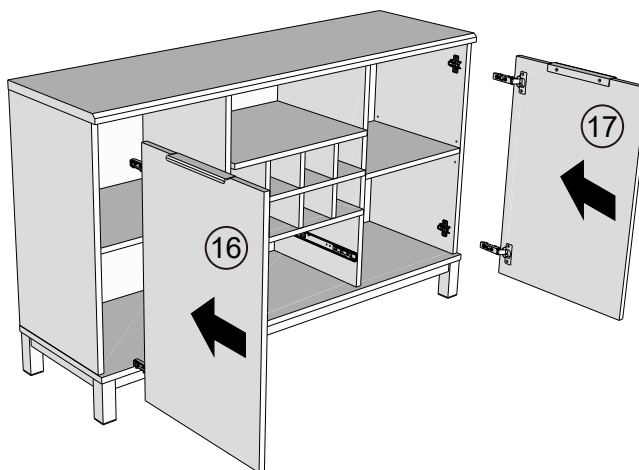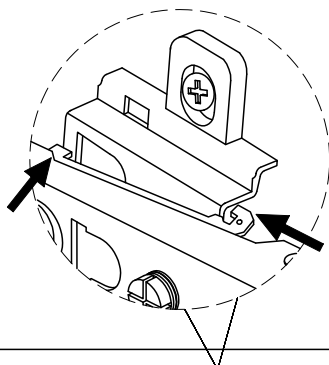


### Remove hinge


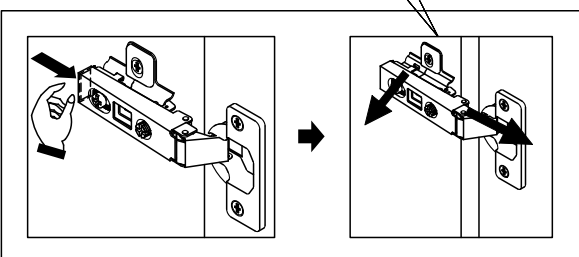 
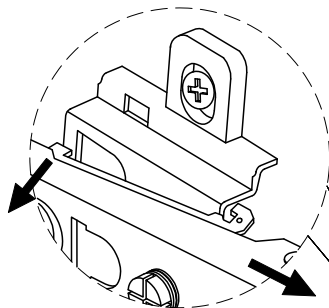 


### Adjust Hinge Position



 
LATERAL

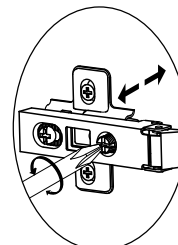

VERTICAL

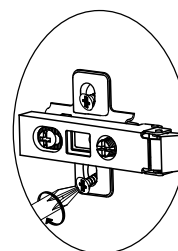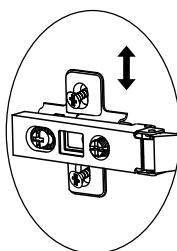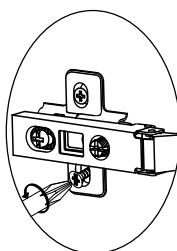   


FRONT- TO-BACK

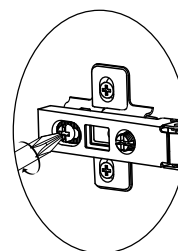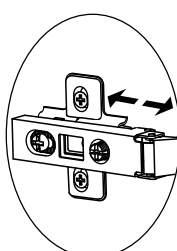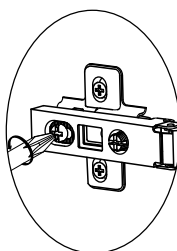   


# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD 332873 / K79343 Assembly instructions

 19

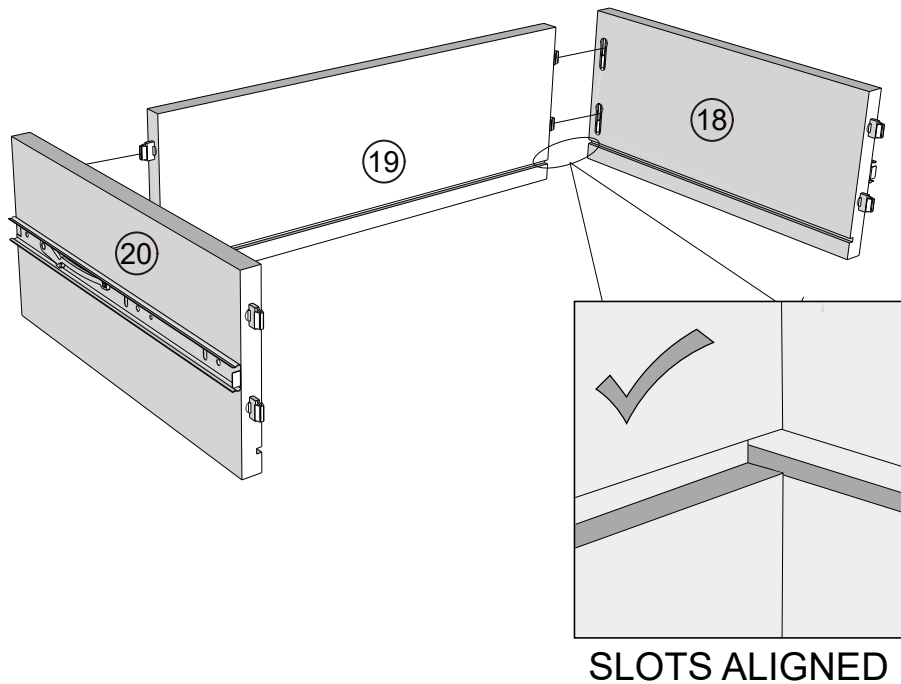

20

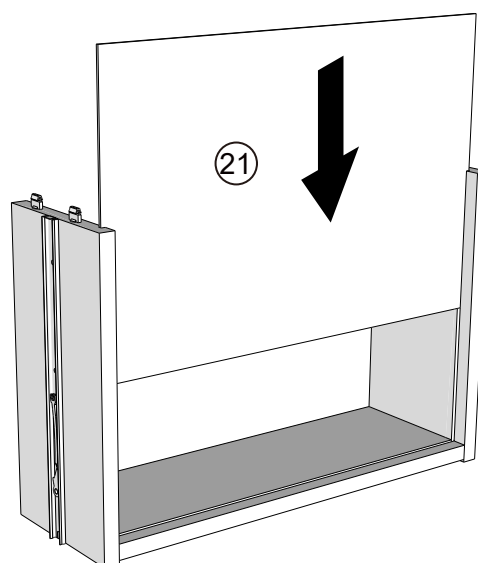 



# NEXT

 
## BRONX / BRONX GREY KITCHEN SIDEBOARD

332873 / K79343


Assembly instructions



21

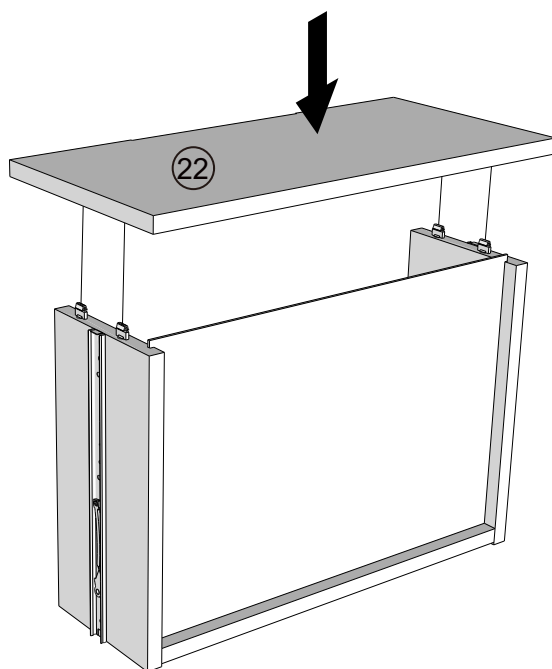 Note: Drawer will be permanently assembled once panel 22 is fitted.

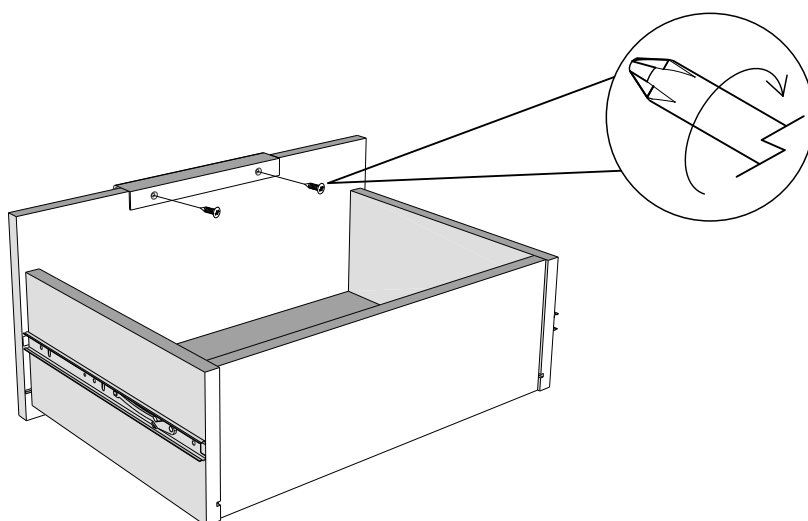

22



E39	N/A	1	  not supplied
-----	-----	---	---



# NEXT
  
## BRONX / BRONX GREY KITCHEN SIDEBOARD


332873 / K79343

Assembly instructions


23

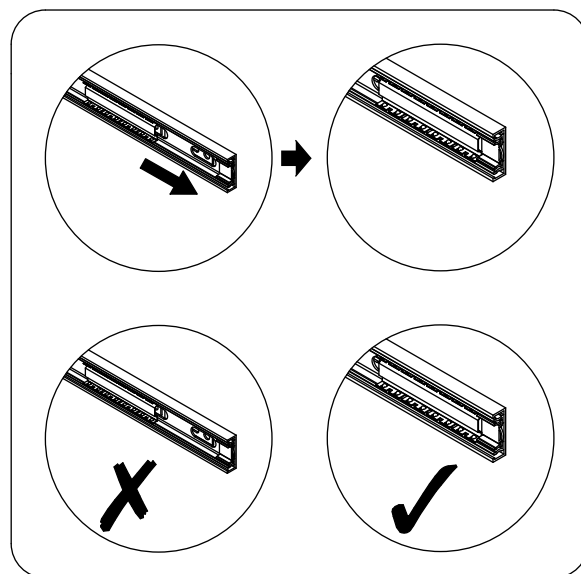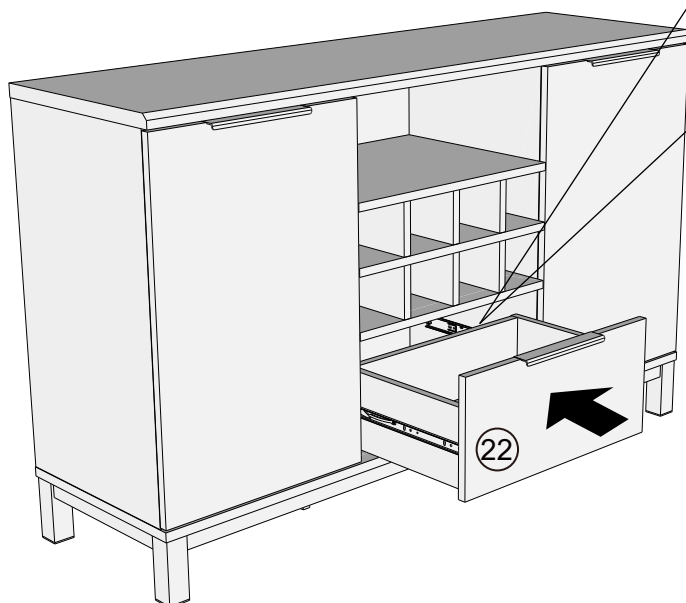

Left side

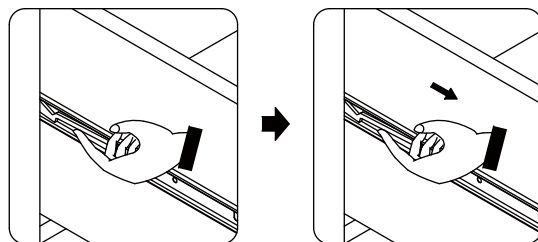 

Right side

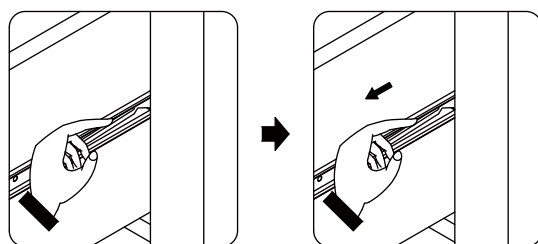 







# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD 332873 / K79343

24

To disassemble:

    
 
 
Step1: Remove the plastic wedge (T38) from the back plate, and remove the screws from the rear of the bottom panel(1);

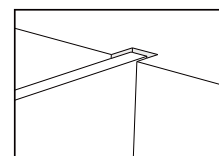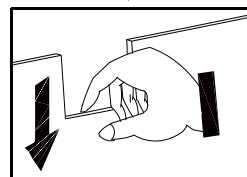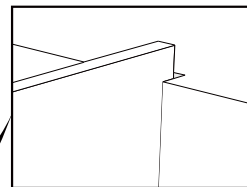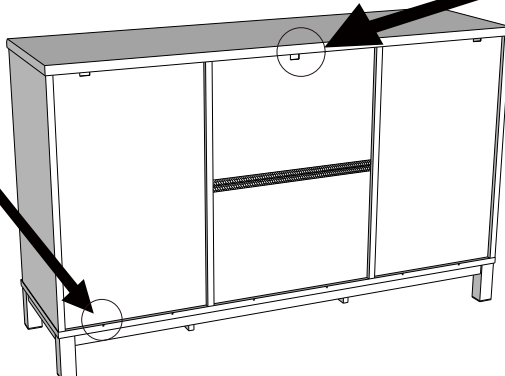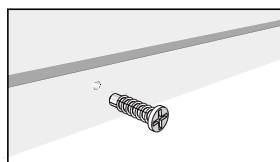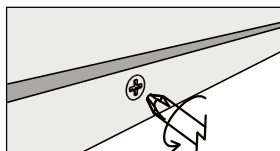

Step2: Press down the back panel so it is clear of the top panel slot;

25

   Slide the top panel front to unlock, then lift off. Follow the same sequence to remove the other panels;

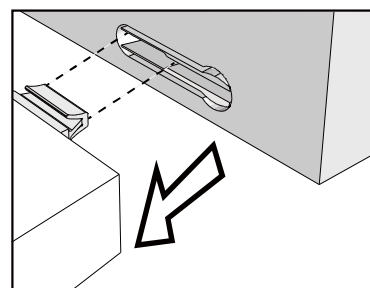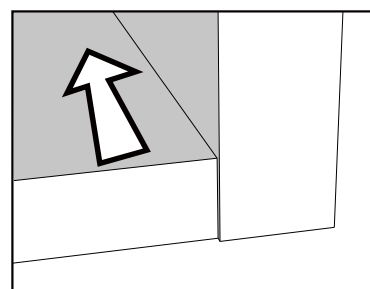
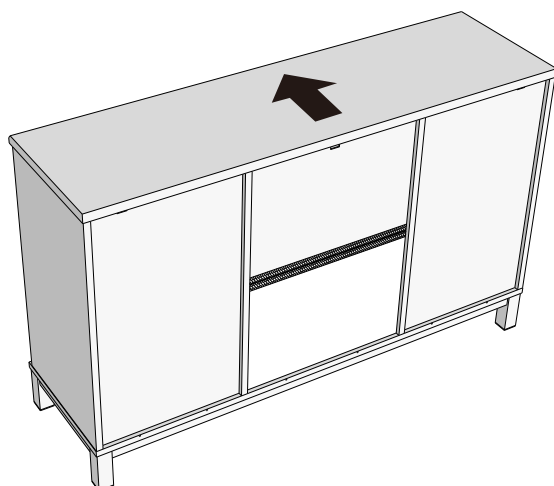


# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD 332873 / K79343

### Actual product size

  H82x W132x D39cm

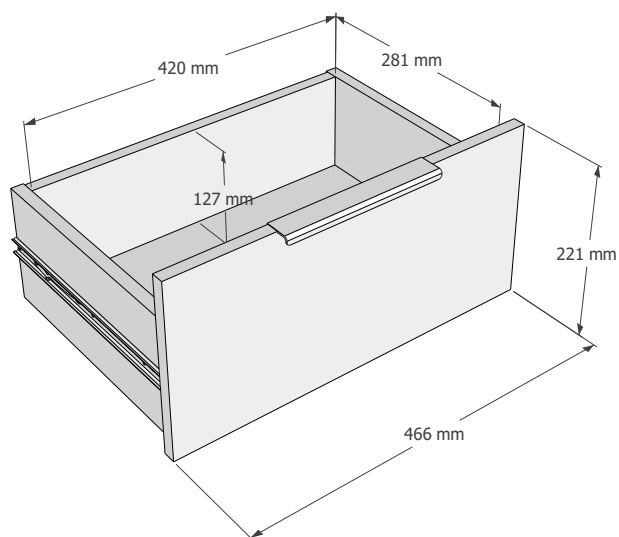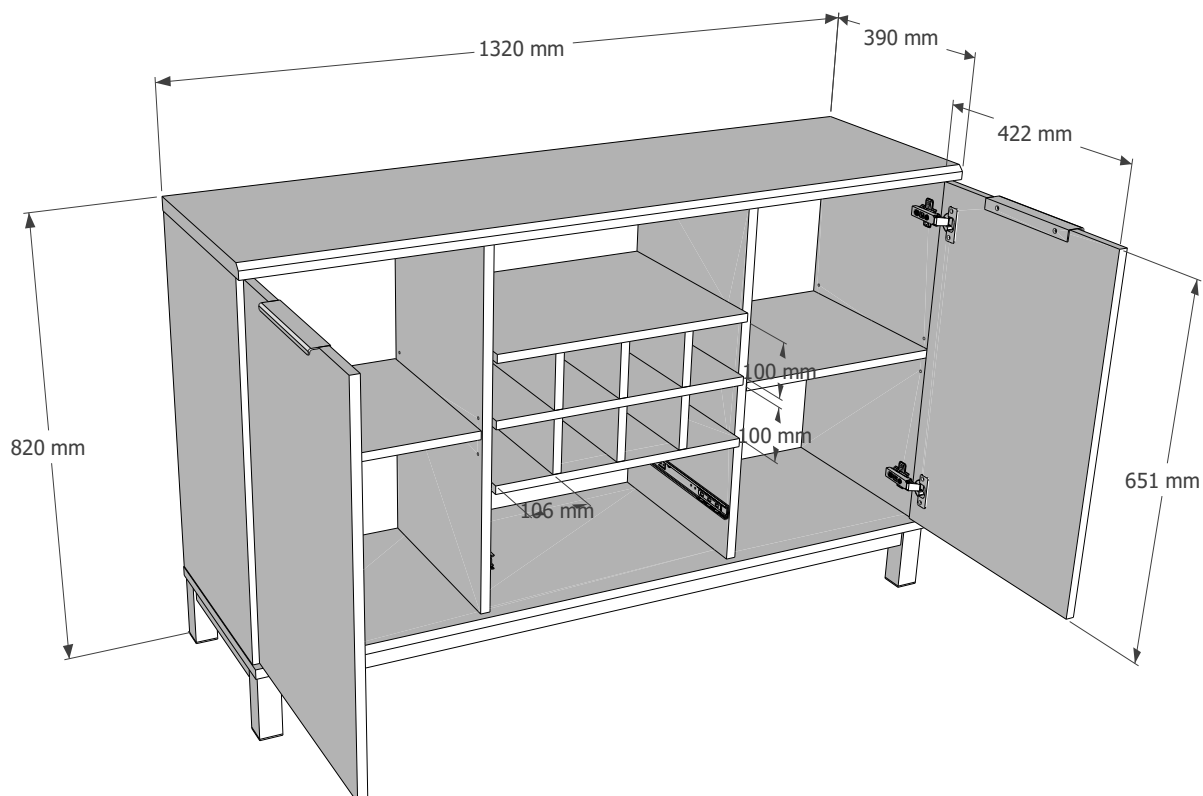

# NEXT

## BRONX / BRONX GREY KITCHEN SIDEBOARD 332873 / K79343

### Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

### Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

### Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

### You can write to us at

Home Customer Services  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)