

BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

1. COLOUR

Make sure you're happy with the colour
No need to unpack everything, just check the first component.

2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

TIPS FOR RETURNS

Not completely happy with the product? No problem.

We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist)
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly – as it may get damaged.

next
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

next

 
VALENCIA FLOATING TOP TV UNIT

N50827

Assembly Instructions

Actual product size

H50 x W150 x D38cm

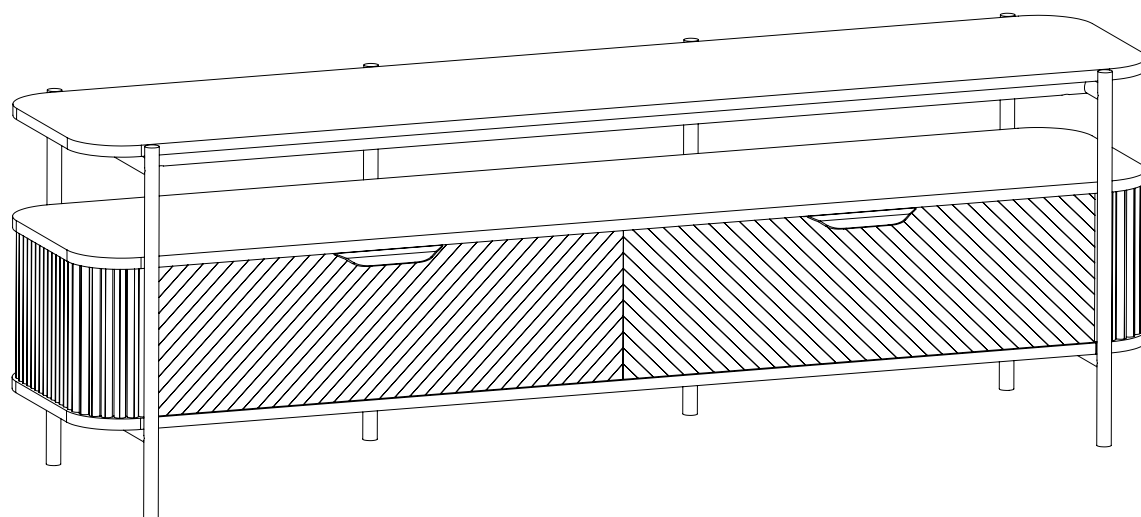

Need Help?

With: Assembly instructions
Missing or damaged parts

IMPORTANT – RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

Warnings

We suggest you retain these instructions for future reference

Keep fittings out of children's reach and keep children well away from the construction area

This product should only be used on firm, level ground

Please periodically check all fittings and re-tighten as necessary

Please do not sit or stand on your furniture

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Do's

We suggest you spend a short time reading through this leaflet before you start

When you are ready to start, make sure that you have the right tools and plenty of space

Unwrap all packaging materials and place the components on a clean surface to protect it from damage,

We recommend that the packaging is used to protect the surfaces during assembly

Carefully check that you have all the parts before beginning assembly

Due to the size of the product we recommend that it is assembled in the room intended for use

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish

Marble can be somewhat fragile compared to other materials as it is susceptible to scratches, etching and staining

 
While it may seem difficult to clean marble without the use of abrasive cleaners, it's not. Marble is easy to clean and maintain. Gentle soap and warm water are enough to get the job done. If you make a mess, immediately spot clean any spills in order to prevent staining. The longer a substance is left on top of the marble, the more likely it is to stain
Do not place hot items (e.g. hot drinks) directly on to the marble surface. Please make sure you use a placement or coaster

PRODUCT SUPPLIED WITH WALL FIXING STRAP.

Number of people required to assemble

Two persons are required to assemble this item

Time to assemble




30 Minutes




Tools required



 not supplied



not supplied

 

supplied

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

 
If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT

To View our full furniture range please visit www.next.co.uk

GETTING TO KNOW YOUR PRODUCT

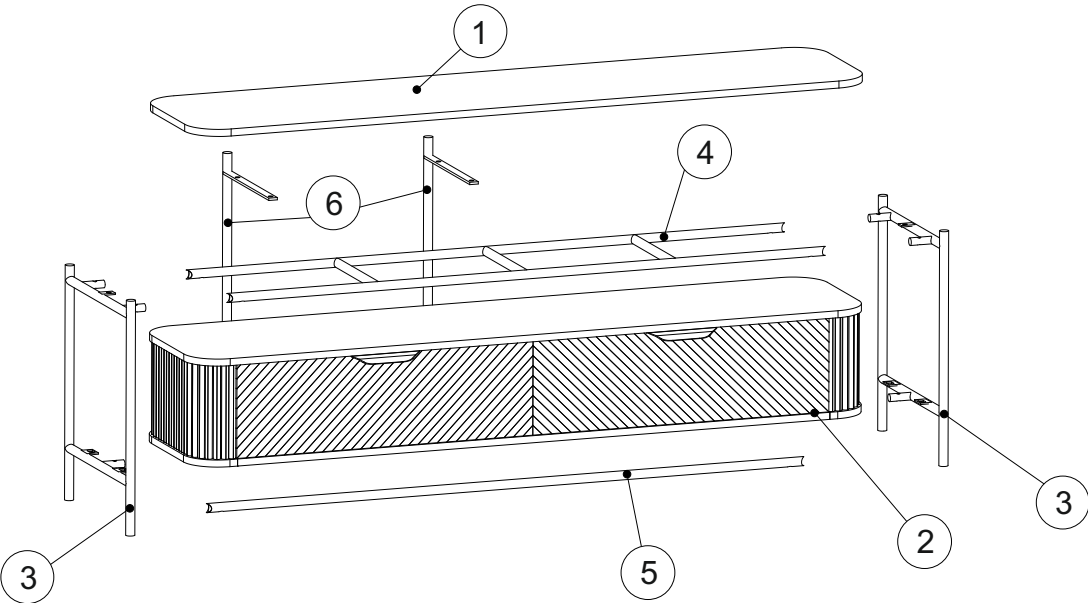


Product supplied.


Ref	Dimensions	Visual	Qty	Ctn
1			1	1
2			1	1
3			2	1
4			1	1
5			1	1
6			2	1

Fixtures and Fittings supplied (actual size)

Ref	Dimensions	Quantity	*Extra Fittings
A	6 x 16mm	6	1
B	ø20mm	6	1
C	6 x 12mm	12	2
D	20 x 18mm	NA	1

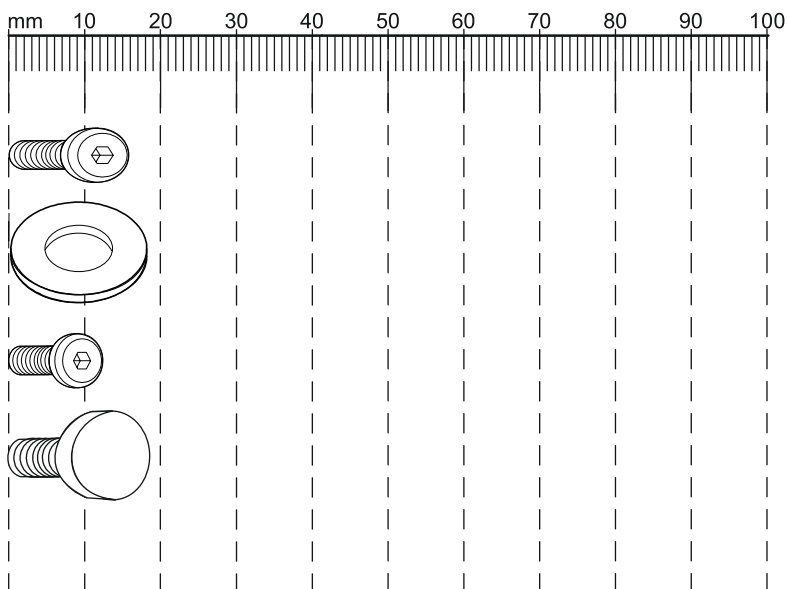 


Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Visual	Qty	*Extra Fittings
E	4 mm Key		1	N/A

1

 Note: Match the labels e.g. A on leg to A on wooden part

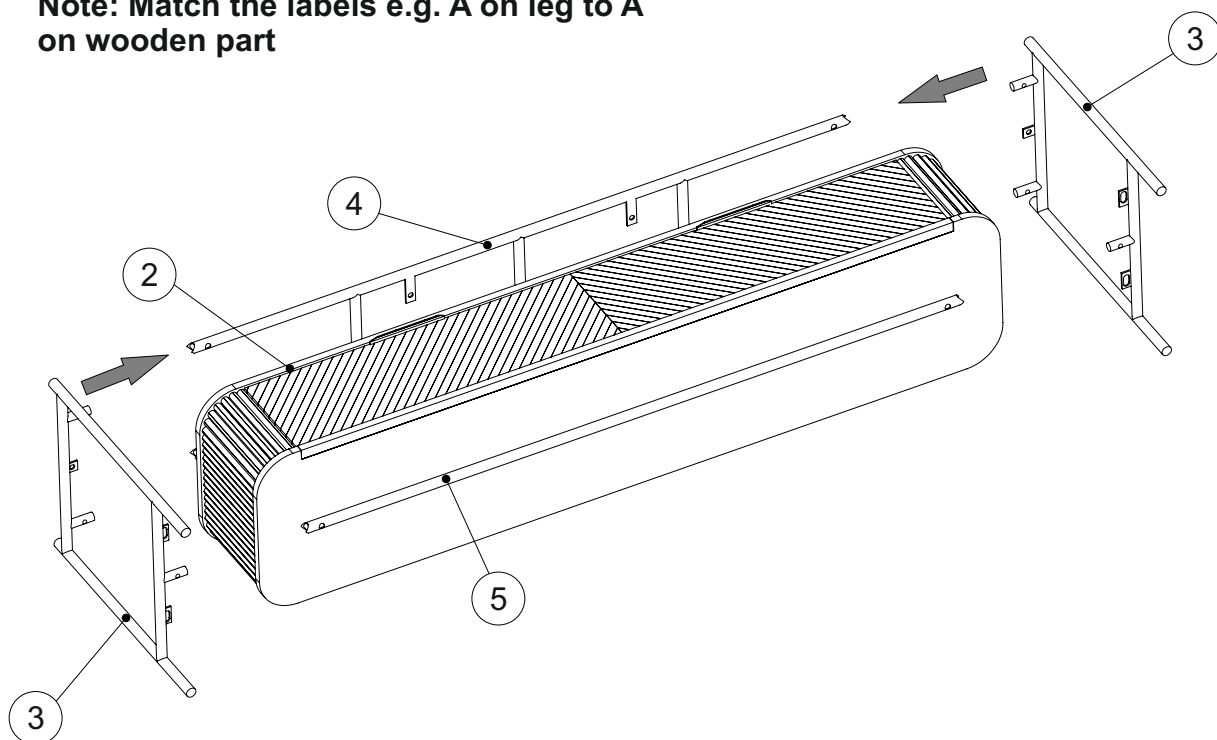

2

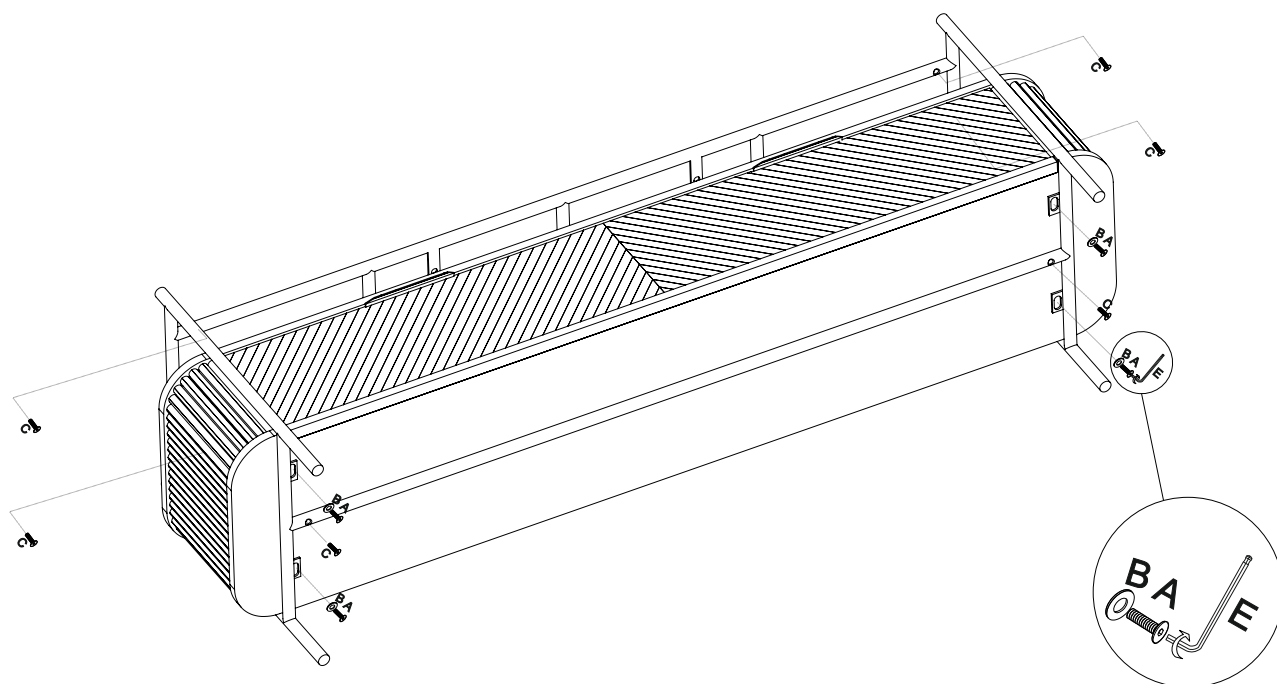 

A x 4
6 x 16mm

 
B x 4
Ø20mm

C x 6
6 x 12mm



Note: Do not fully tighten until all fittings are in position.

3


Note: Match the labels e.g. A on component to A on another component

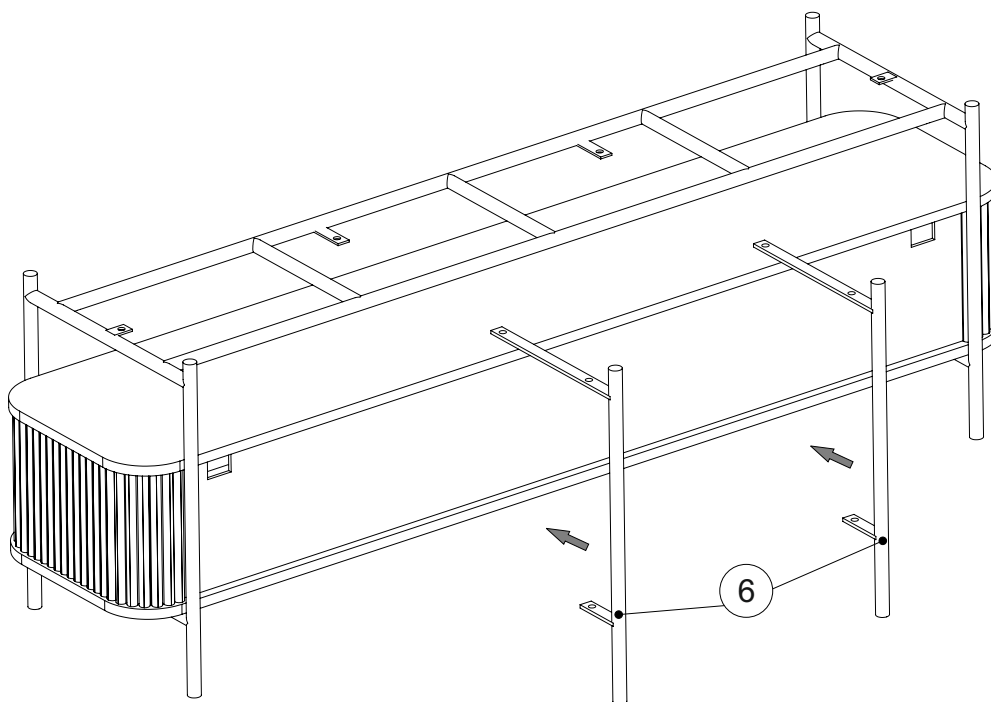

4

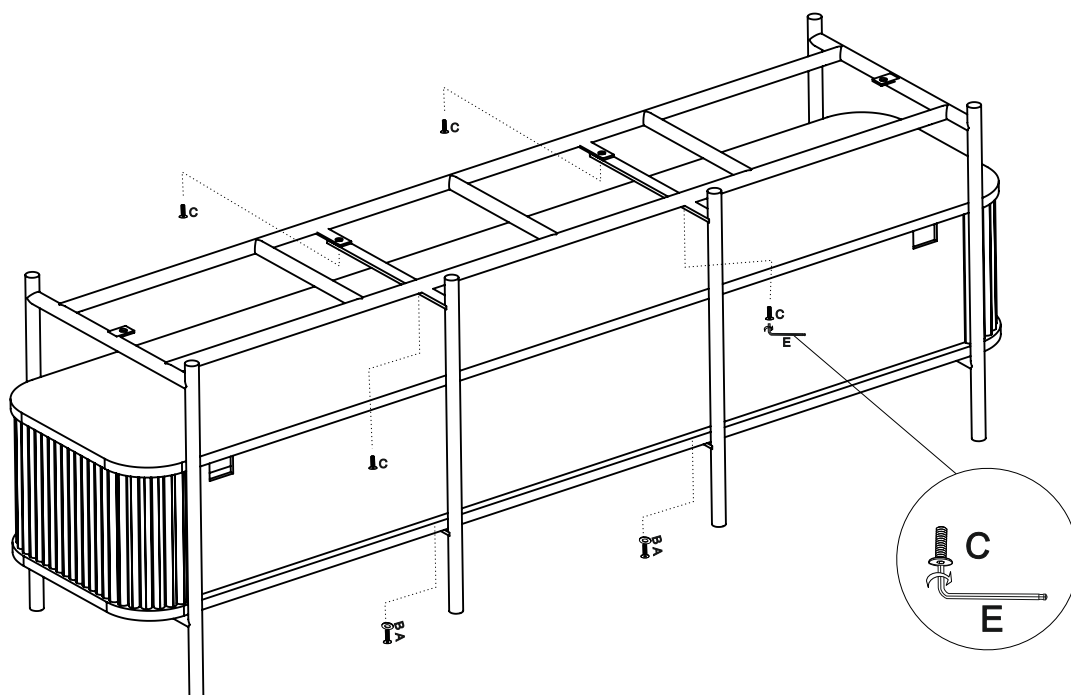  


A x 2
6 x 16mm

 

B x 2
Ø20mm



 
C x 4
6 x 12mm






Note: Do not fully tighten until all fittings are in position.

5

 Note: Match the labels e.g. A on component to A on another component

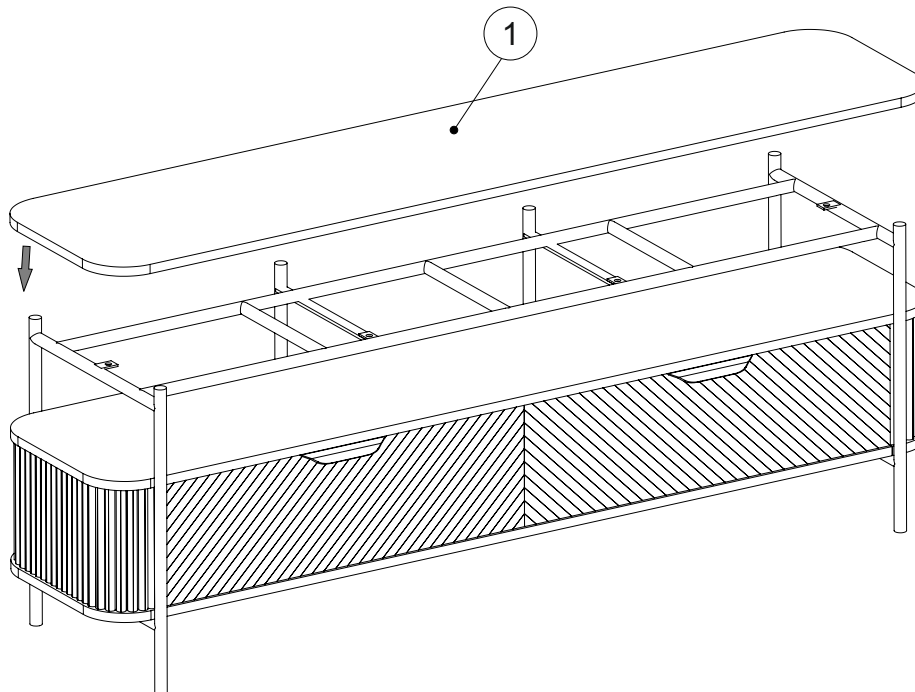

6

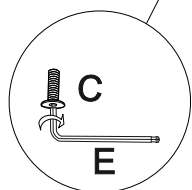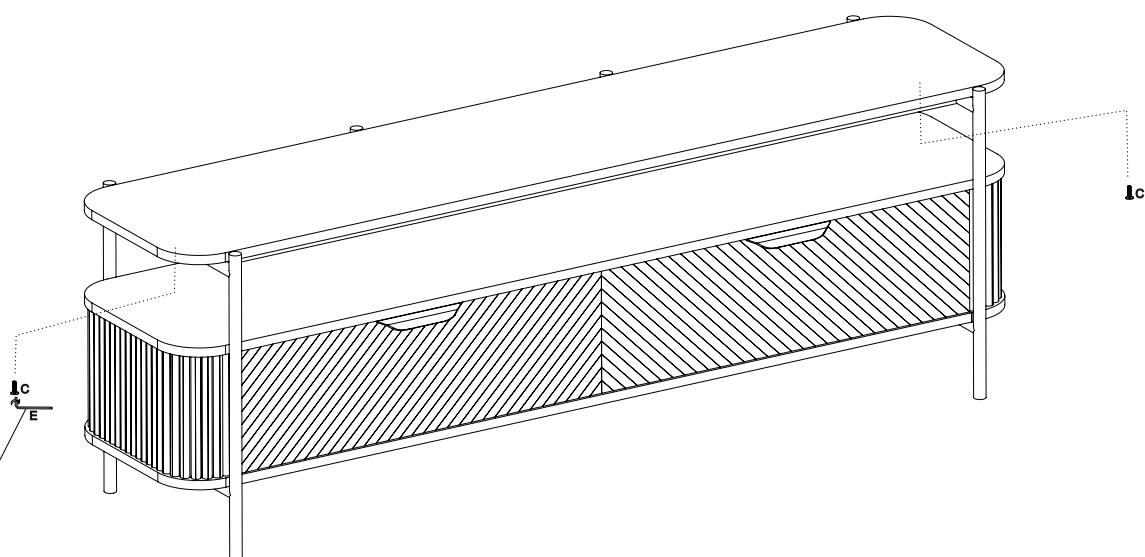   

Note: Do not fully tighten until all fittings are in position.

7

 
 
The wall strap must be fitted for safety reasons.

Please fix one end of the strap onto the wall and secure the furniture.


N.B. Wall fixings are not included, please source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson.

WARNING: Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

Periodically check all fittings and wall fixings to ensure they have not come loose and re-tighten as necessary.

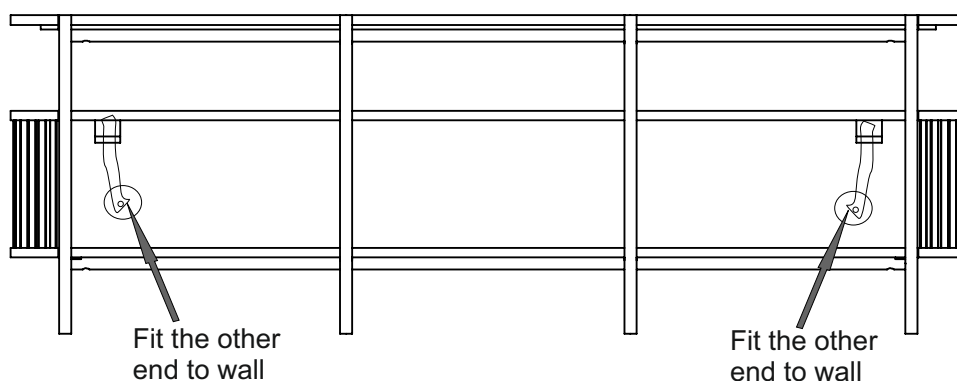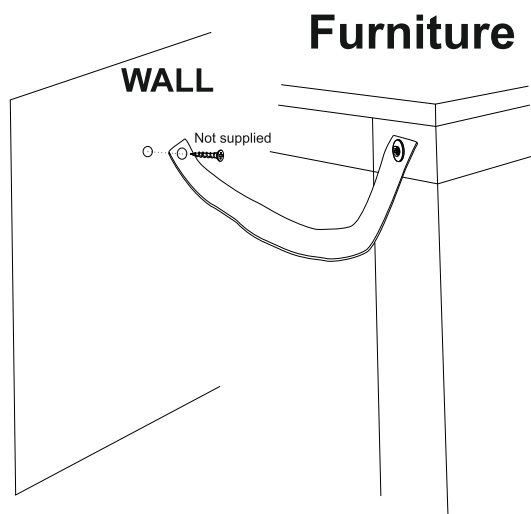

 Note: Fit the other end of anti-tip straps provided on both top corners of the rear side of the product to wall



next

VALENCIA FLOATING TOP TV UNIT
N50827
Assembly Instructions

Actual product size
H50 x W150 x D38cm

