

BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new furniture. However, it's worth making absolutely certain before you put it all together. So, let's quickly run through these three steps:

1. COLOUR

Make sure you're happy with the colour
No need to unpack everything, just check the first component.

2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

TIPS FOR RETURNS

Not completely happy with the product? No problem. We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly – as it may get damaged.

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

NEXT

 
TETBURY WIDE TV

N99965

Assembly instructions

Actual product size

H50 x W150 x D45cm

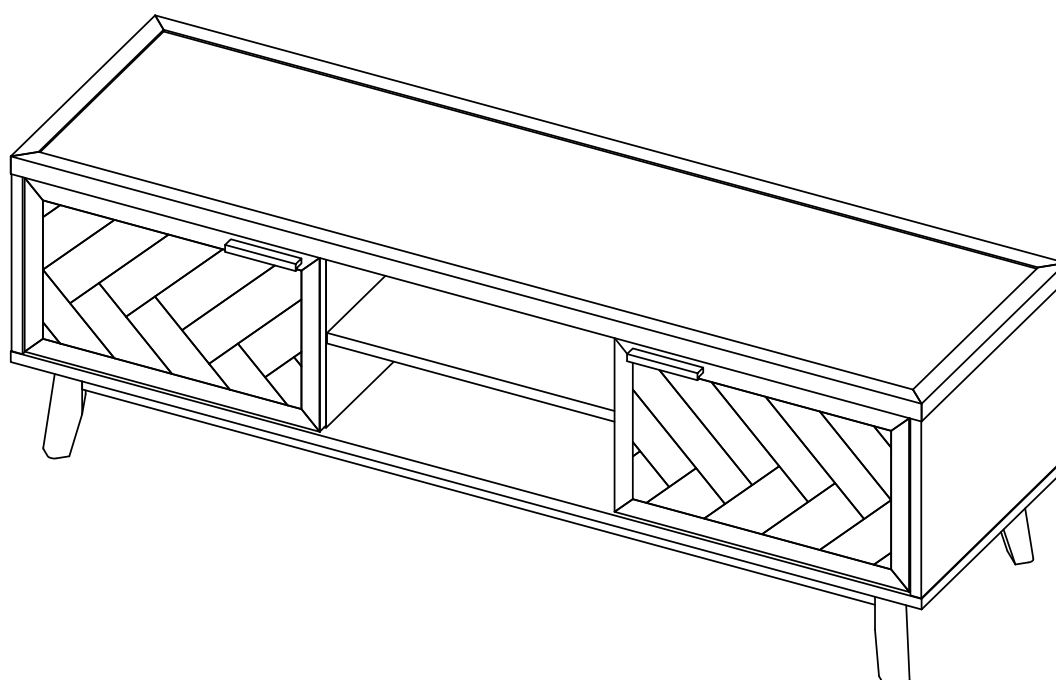

Need Help?

With: Assembly instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT — RETAIN FOR FUTURE REFERENCE



TETBURY WIDE TV

 
N99965

Assembly instructions


BEFORE YOU START

Number of people required to assemble


Two people are required to assemble this item.

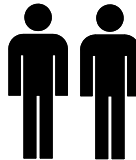

Tools required

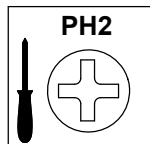 

not supplied

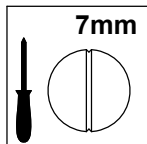 

not supplied

Missing parts

 
If you are missing any fixtures and fittings for your product, please contact our customer service team on **0333 777 8999**, and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

PRODUCT SUPPLIED WITH WALL FIXING STRAPS

Time to assemble: 30 minutes

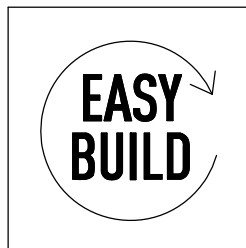


You can write to us at

Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT

To View our full furniture range please visit www.next.co.uk

 GETTING TO KNOW YOUR PRODUCT

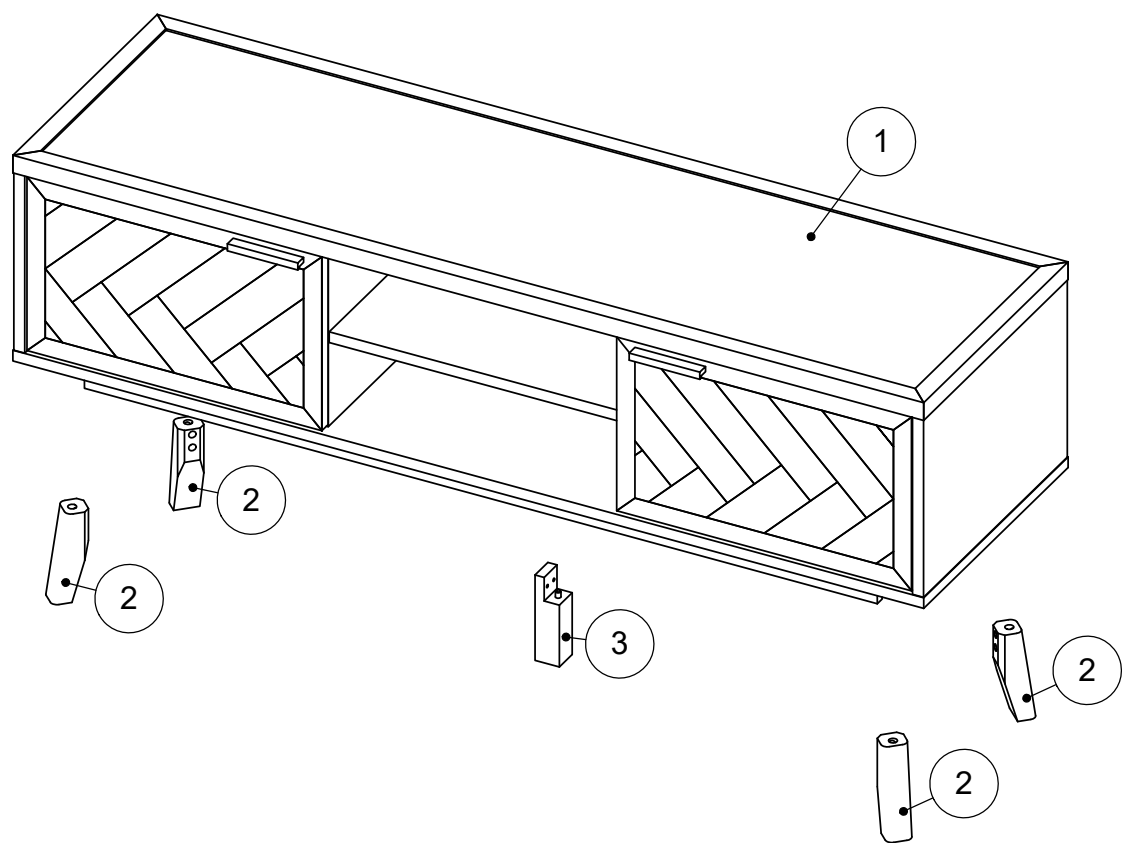


 Components supplied. Please use this guide if you require replacement parts.

 

 



Ref	Dimensions	Visual	Qty	Ctn
1	150 x 45cm		1	1
2	15 x 4cm		4	1
3	14.5 x 4cm		1	1

Fixtures and fittings supplied (actual size)




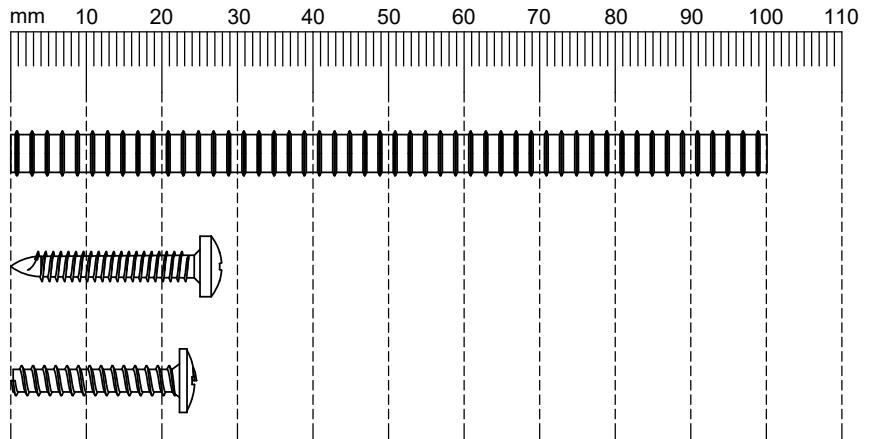
Ref	Dimensions	Qty	*Extra Fittings
AA	M8 x 100mm	8	
AG	Ø4x25mm	2	1
AH	M4x22mm	4	1



 Fixtures and fittings supplied(not to scale)

Ref	Dimensions	Visual	Qty	*Extra Fittings
AB	Ø12x40mm		4	
AC	Ø8mm		8	1
AD	Ø8xØ16mm		8	1
AE	M8		8	1
AF	12mm		2	
AJ	116x18x12mm		2	

    
1

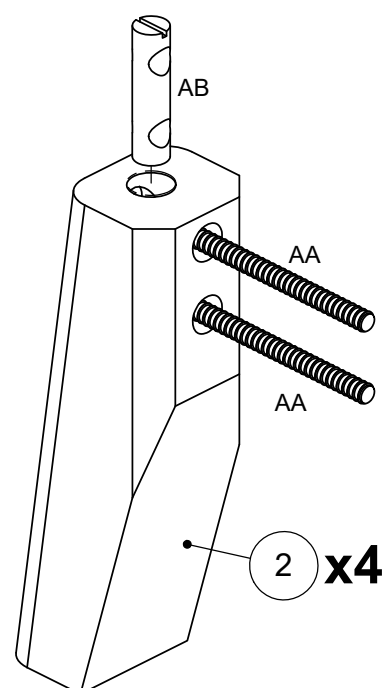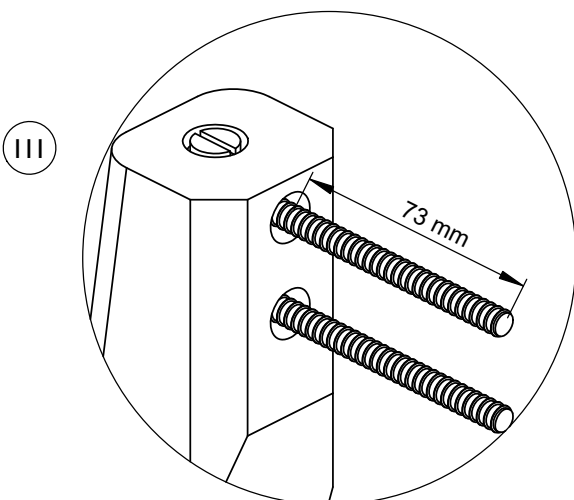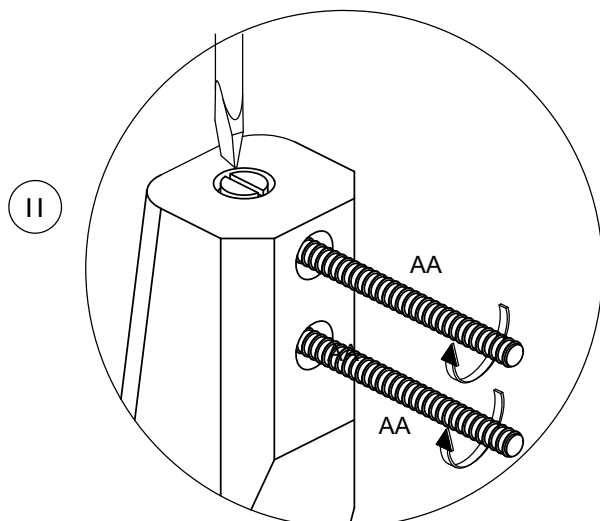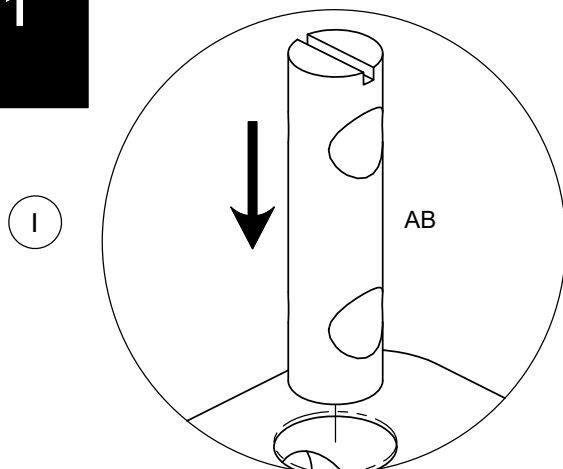

AA x 8 M8 x 100mm



 
AB x 4 Ø12 x 40mm



7mm



 2

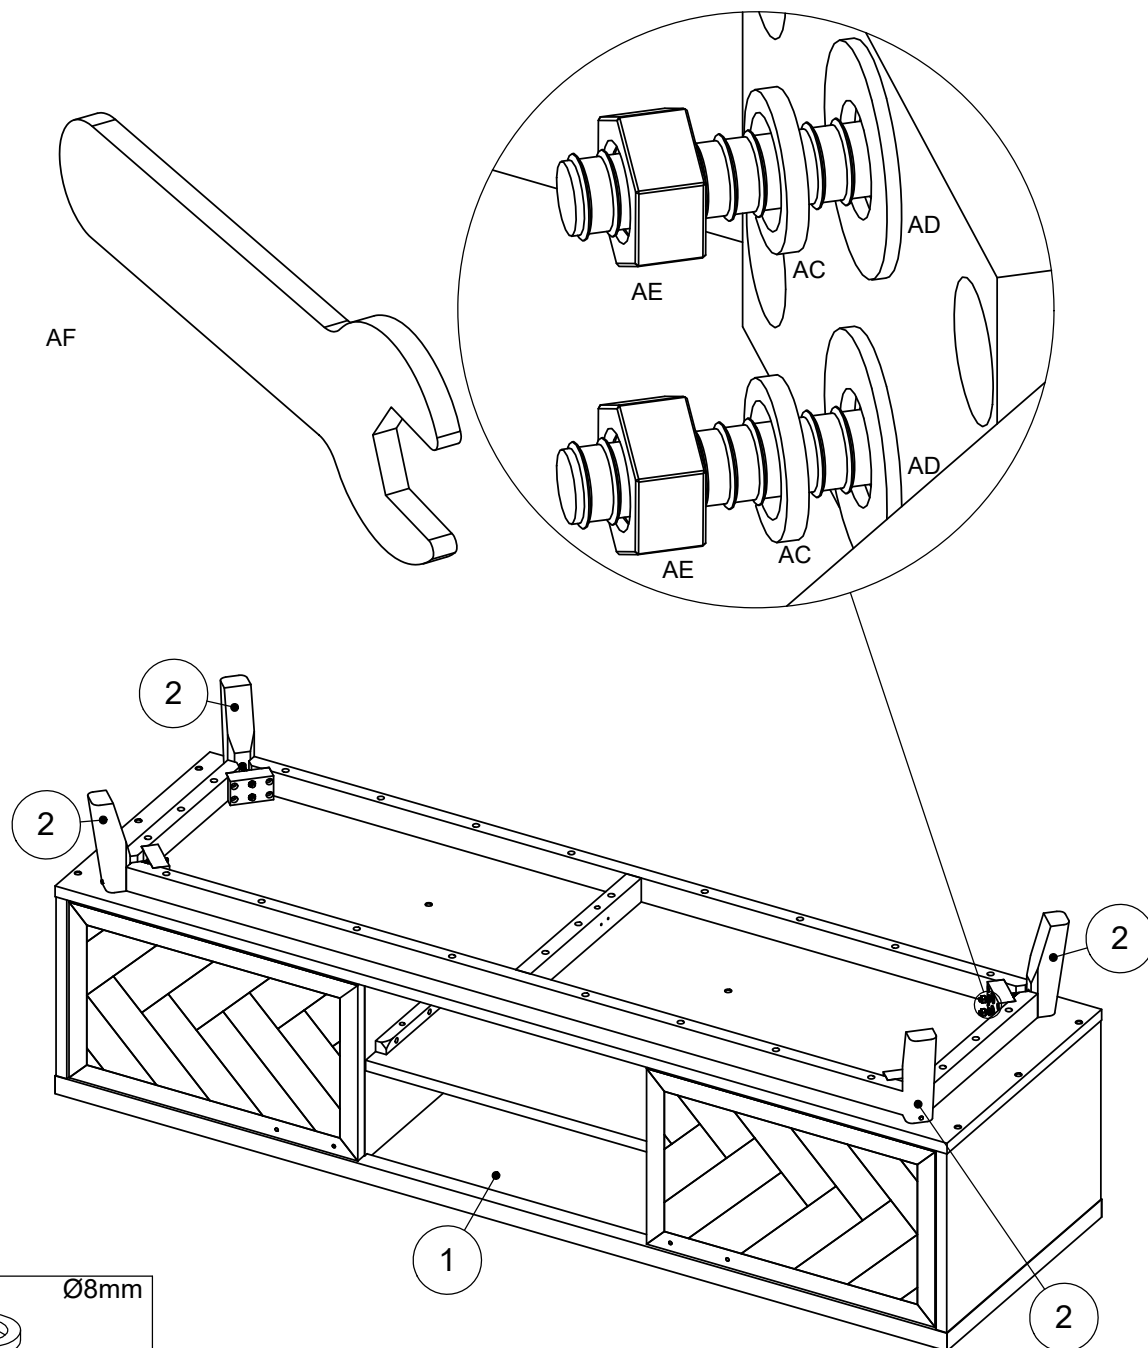

AC x 8 Ø8mm



 
AD x 8 Ø8xØ16mm



AE x 8 M8



AF x 1 12mm




NEXT

TETBURY WIDE TV

N99965

Assembly instructions

 3

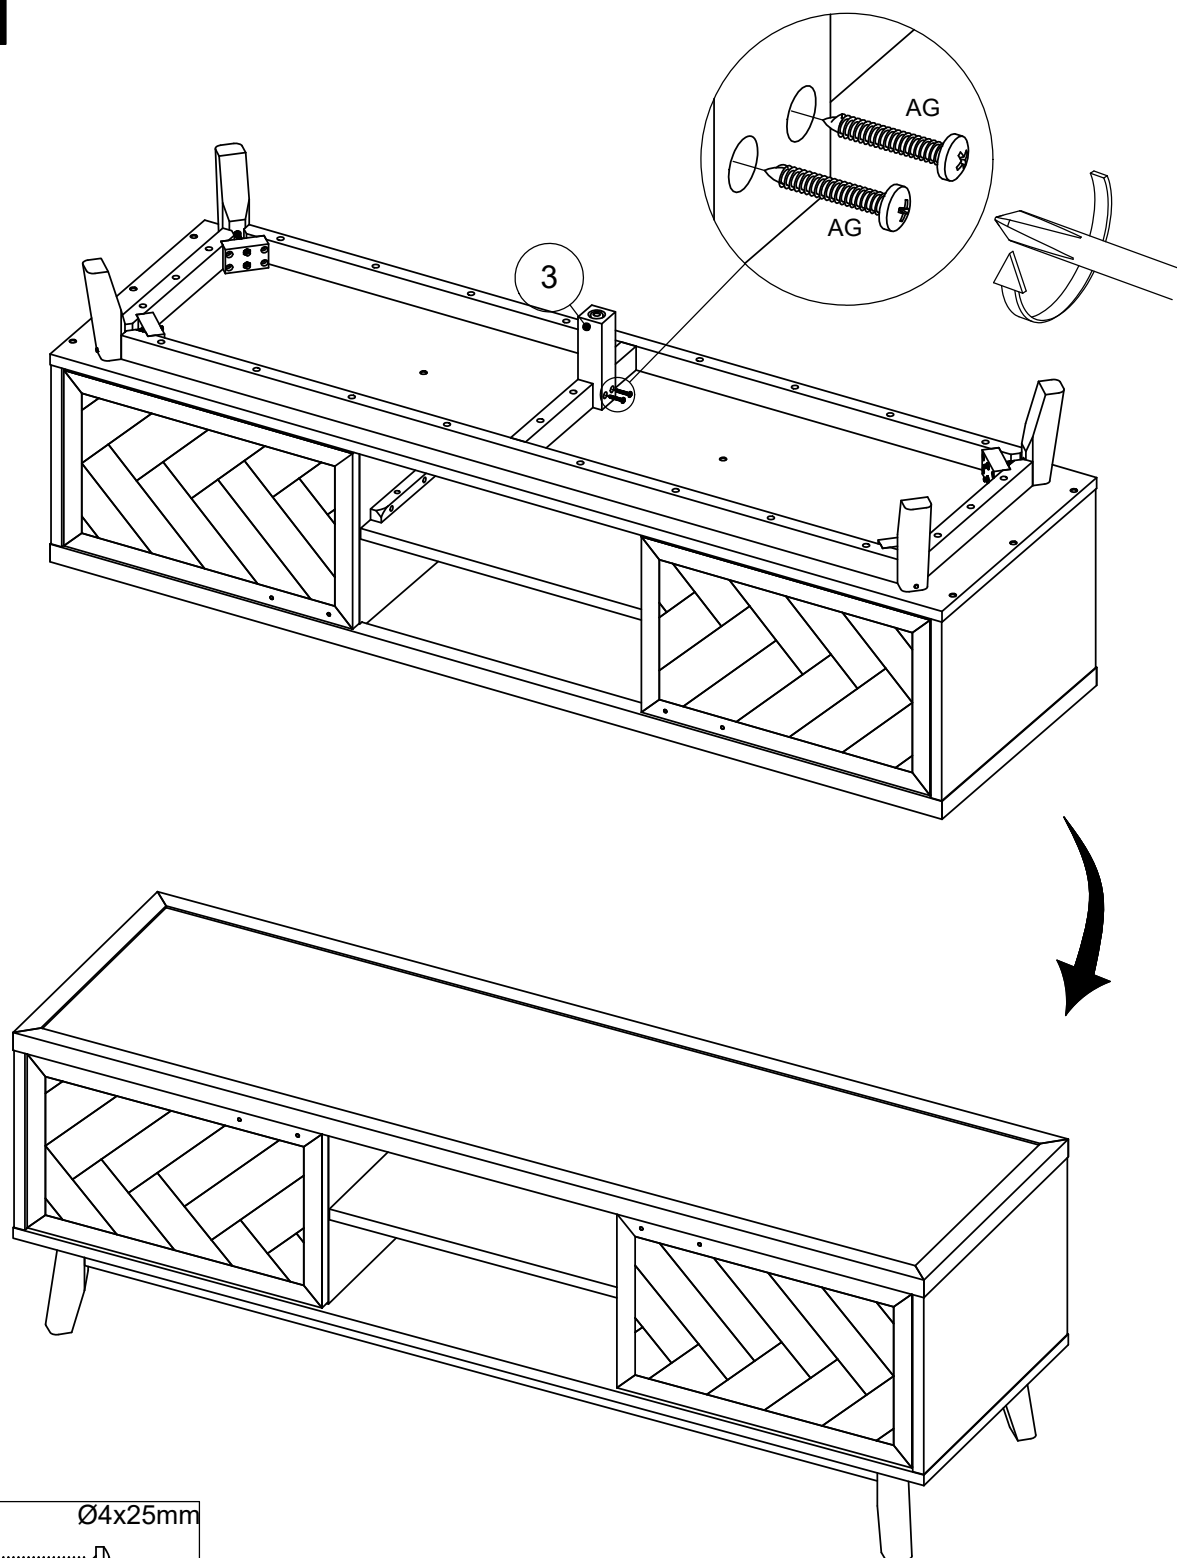

AG x 2 Ø4x25mm



 
 
NEXT

TETBURY WIDE TV


N99965

Assembly instructions


4

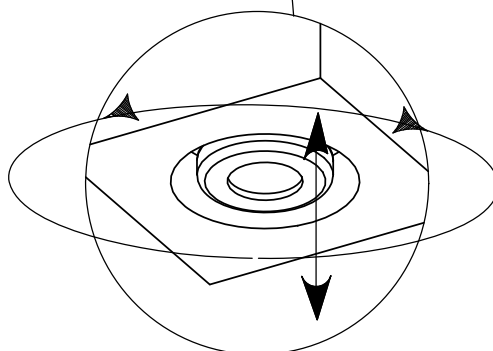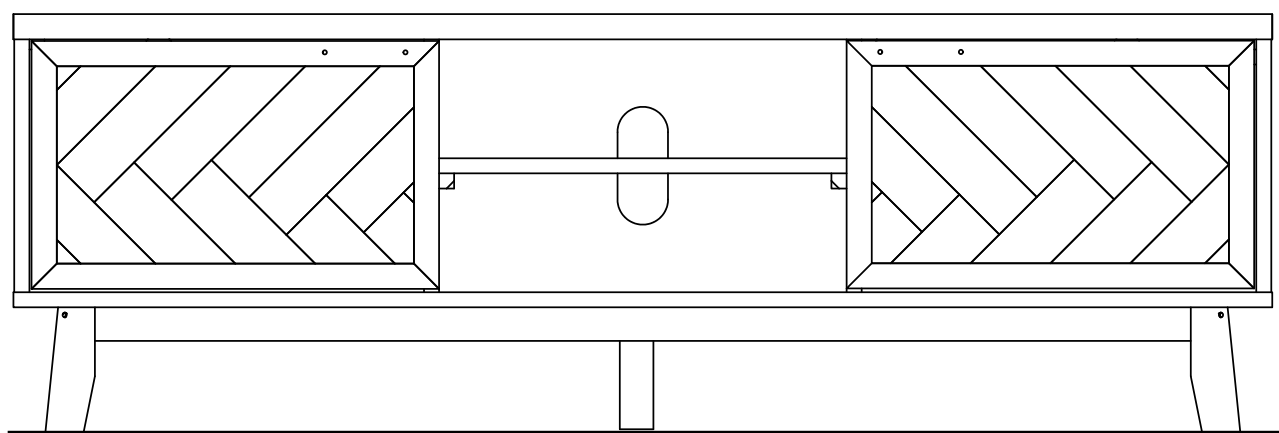


5

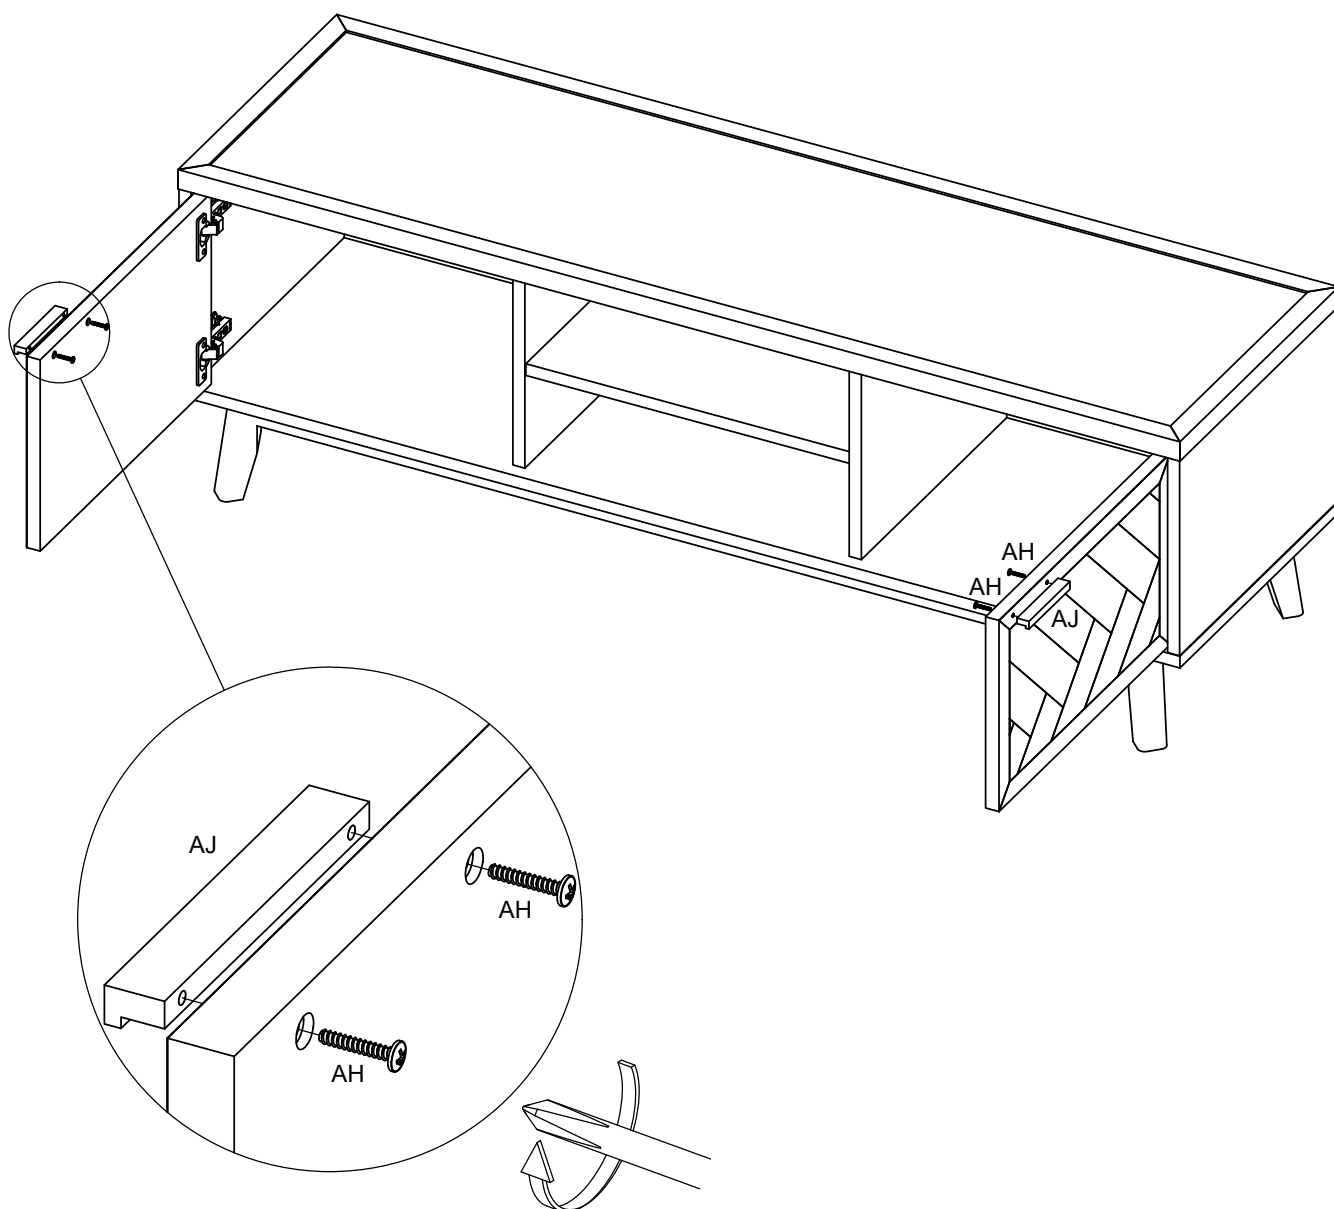 

AH x 4 M4x22mm



 


AJ x 2 116x18x12mm

 

6

   We recommend the use of the wall belt provided for safety reasons. Wall fixings are not included please source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson. **WARNING:** Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

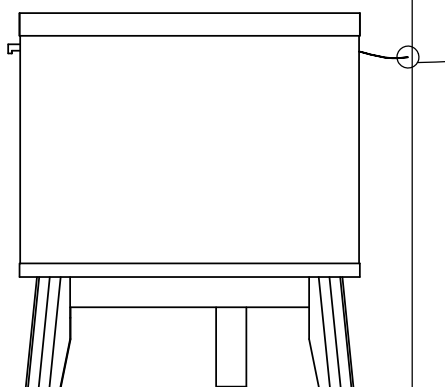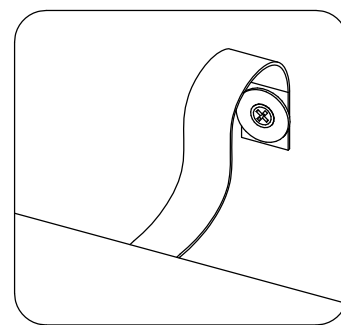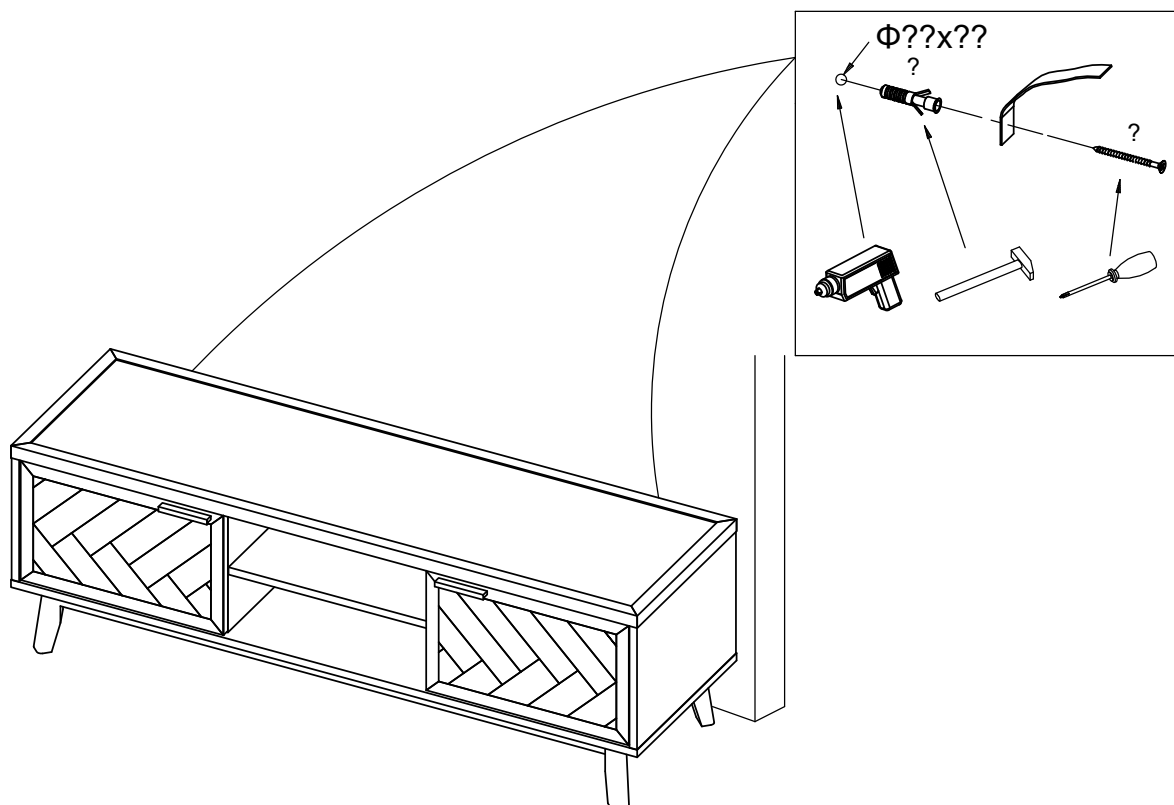



NEXT

TETBURY WIDE TV

N99965

Assembly instructions

  7

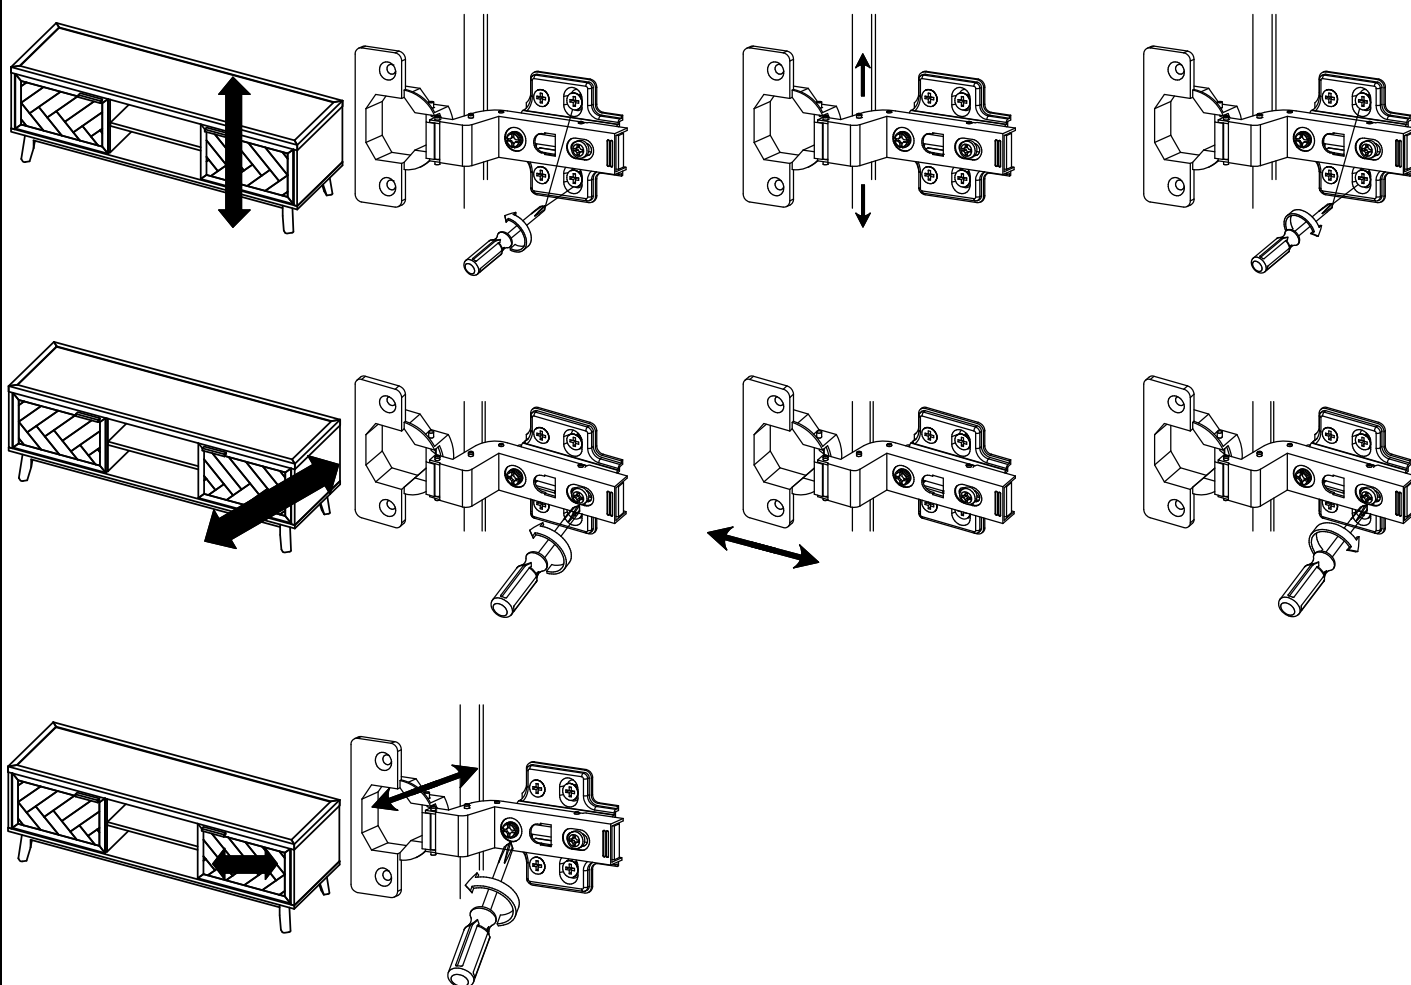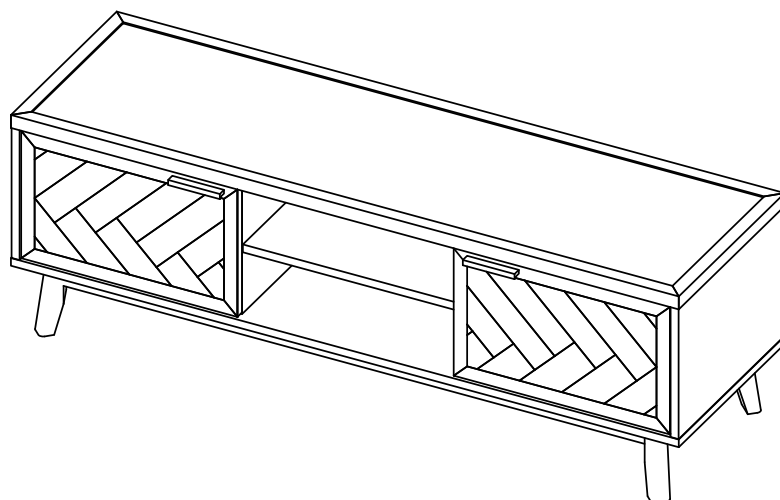


NEXT

TETBURY WIDE TV

N99965

Assembly instructions

 8

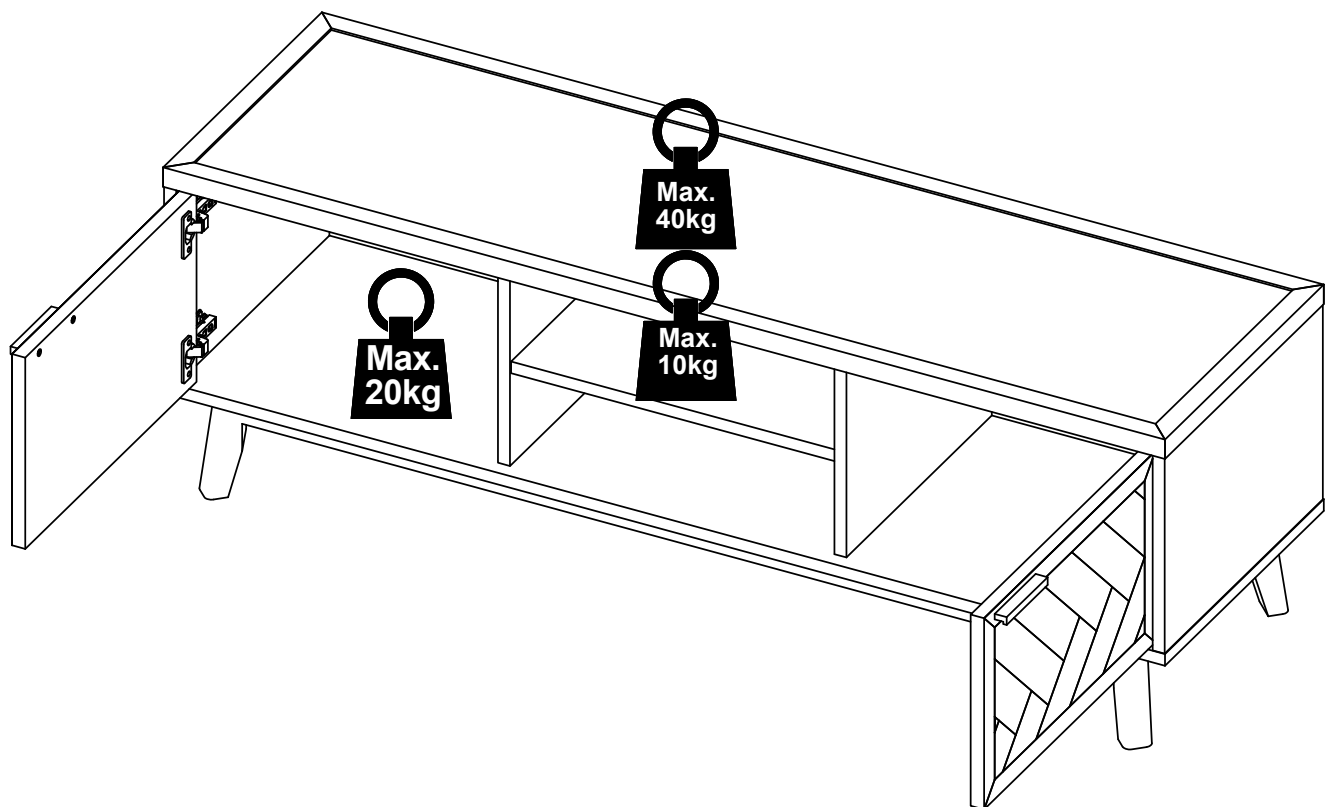



TETBURY WIDE TV

N99965

Assembly instructions

We suggest you retain these instructions for future reference

Warnings

Assembly to be carried out by a competent adult only.

Keep fittings out of children's reach and keep children well away from the construction area.

This product should only be used on firm, level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of the product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Don'ts

Do not drag or pull your furniture.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.

Do not use this item if any components are missing or damaged.

NEXT

 
TETBURY WIDE TV

N99965

Assembly instructions

Actual product size

H50 x W150 x D45cm

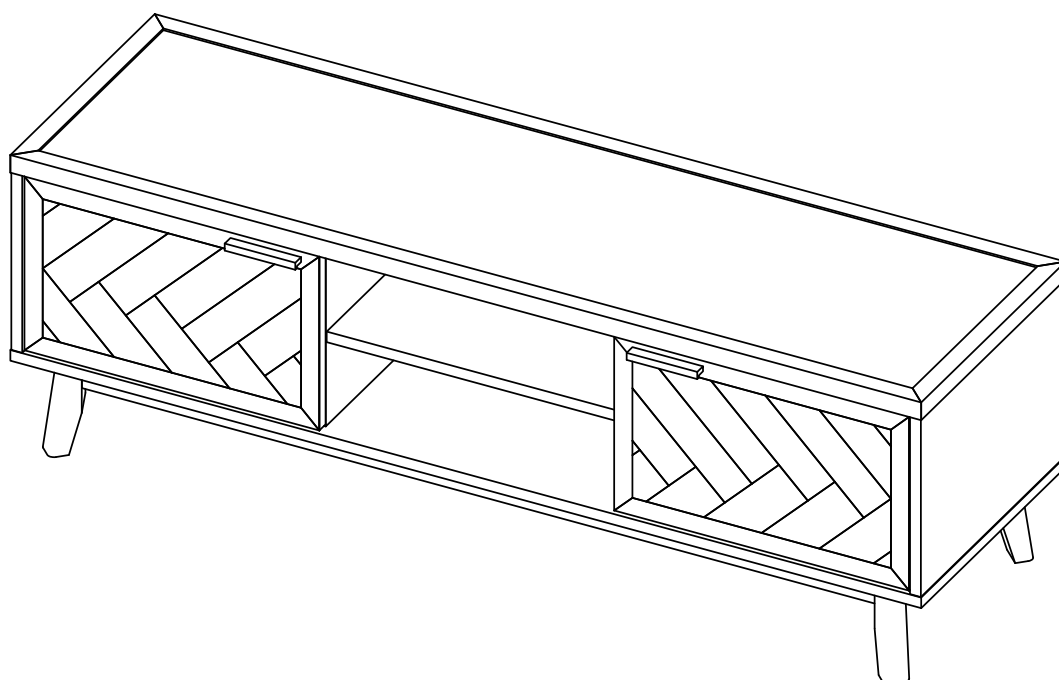

Need Help?

With: Assembly instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT — RETAIN FOR FUTURE REFERENCE