



BEFORE YOU START

Number of people required to assemble

Two people are required to assemble this item



Time to assemble: 30 minutes



Tools required



not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recomement that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts


Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

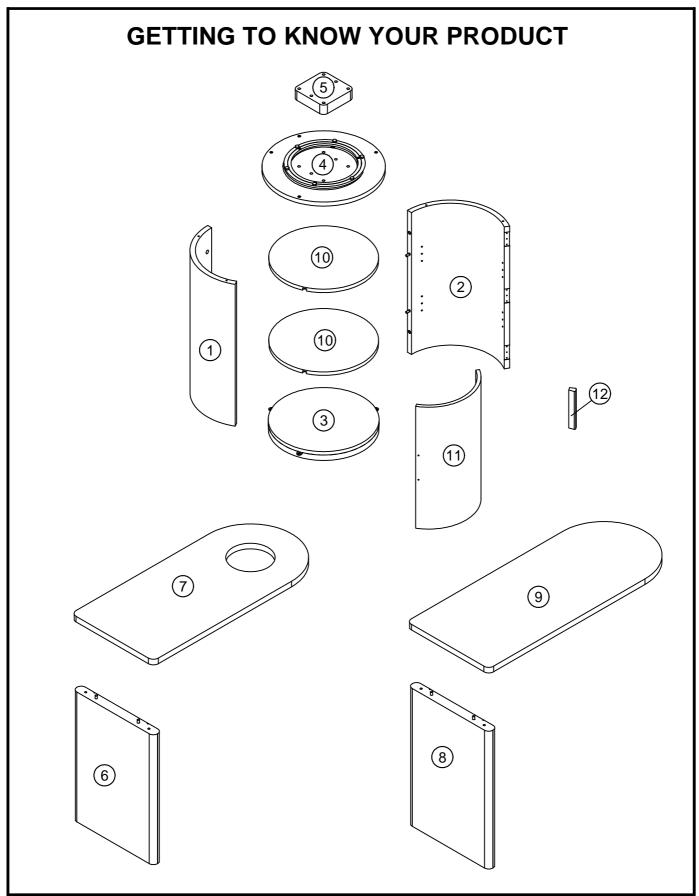

Components supplied. Please use this guide if you require replacement parts.

| Ref | Dimensions | Visual | Qty | Ctn |
|-----|-------------|--------|-----|-----|
| 1 | 39x64cm | | 1 | 2 |
| 2 | 39x64cm | | 1 | 2 |
| 3 | 41x41cm | | 1 | 1 |
| 4 | 45.5x45.5cm | | 1 | 1 |
| 5 | 16x16cm | | 1 | 1 |
| 6 | 49x68.5cm | | 1 | 2 |
| 7 | 50x109cm | (i)(i) | 1 | 1 |
| 8 | 49x72.5cm | | 1 | 1 |


| Ref | Dimensions | Visual | Qty | Ctn |
|-----|-------------|--------|-----|-----|
| 9 | 50x120cm | | 1 | 1 |
| 10 | 40.5x40.5cm | | 2 | 1 |
| 11 | 38.5x63.5cm | | 1 | 2 |
| 12 | 3x20cm | | 1 | 1 |

ARCHES SWIVEL DESK

Q73916 Assembly instructions

Fixtures and fittings supplied (actual size)

| Ref | Dimensions | Qty | Spare Qty |
|-----------------|-----------------|-----|-----------|
| V36 | Ø6x 14mm | 4 | 1 |
| Y8 | Ø6 x 50mm | 4 | 1 |
| S42 | Ø4 x 16mm | 2 | 1 |
| U93 | U93 Ø4 x 20mm | | 2 |
| P3 | P3 Ø5 x 16mm | | 1 |
| U151 | Ø4 x 38mm | 2 | 1 |
| V87 | 87 Ø6 x 65mm | | 1 |
| B24 | B24 Ø8.5 x 63mm | | N/A |
| S41 | S41 Ø4 x 16mm | | 1 |
| B12 Ø7.5 x 33mm | | 2 | 1 |
| D17 Ø10 x 30mm | | 6 | 1 |
| B3 Ø15 x 12mm | | 2 | 1 |
| B25 Ø35 x 17mm | | 4 | N/A |

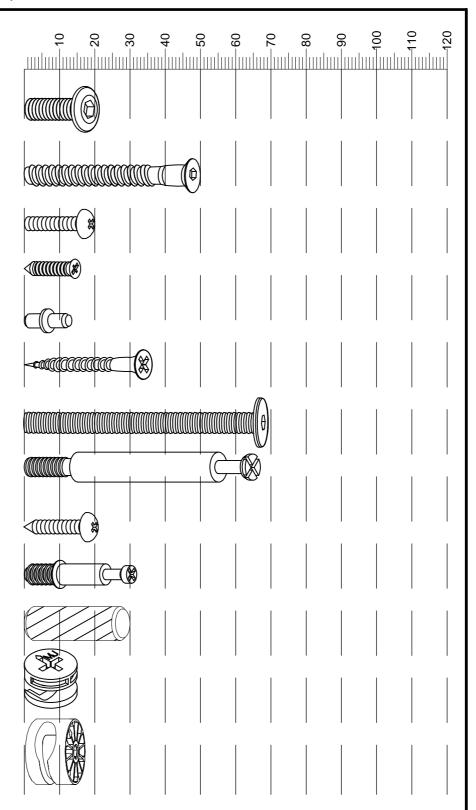



Fixtures and fittings supplied (not to scale)


| Fixtures and fittings supplied (not to scale) | | | | | |
|--|------------|-----|-----------|--------|--|
| Ref | Dimensions | Qty | Spare Qty | Visual | |
| M5 | N/A | 1 | N/A | | |
| H29 | N/A | 4 | N/A | | |
| H28 | N/A | 3 | N/A | | |
| M26 | N/A | 2 | N/A | | |
| T4 | N/A | 2 | N/A | | |
| T7 | N/A | 1 | N/A | | |
| T39 | N/A | 2 | N/A | 9 | |
| 01 | Ø60mm | 4 | 2 | | |


Ø7.5 x 33mm


B12

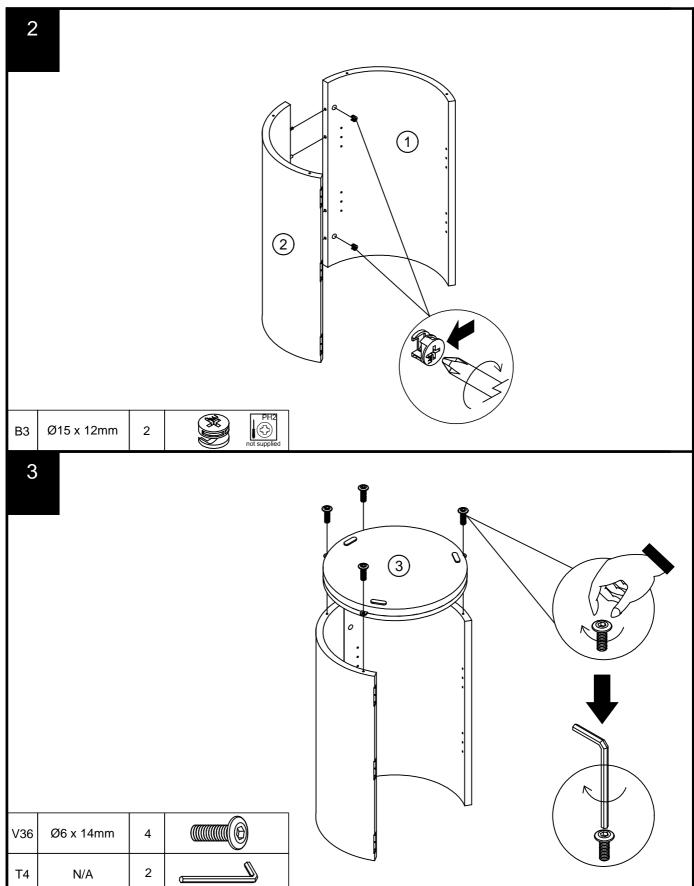


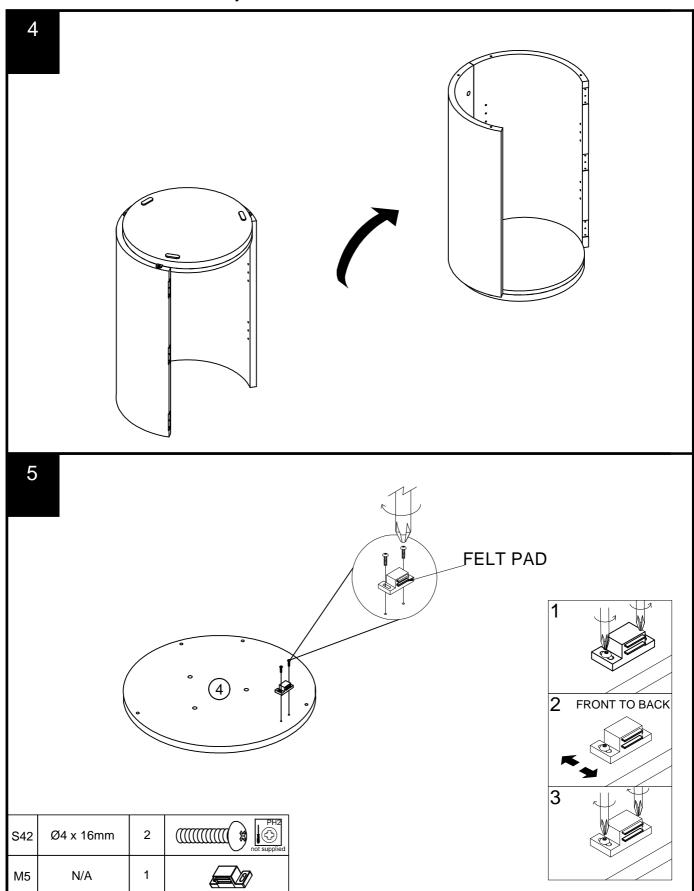


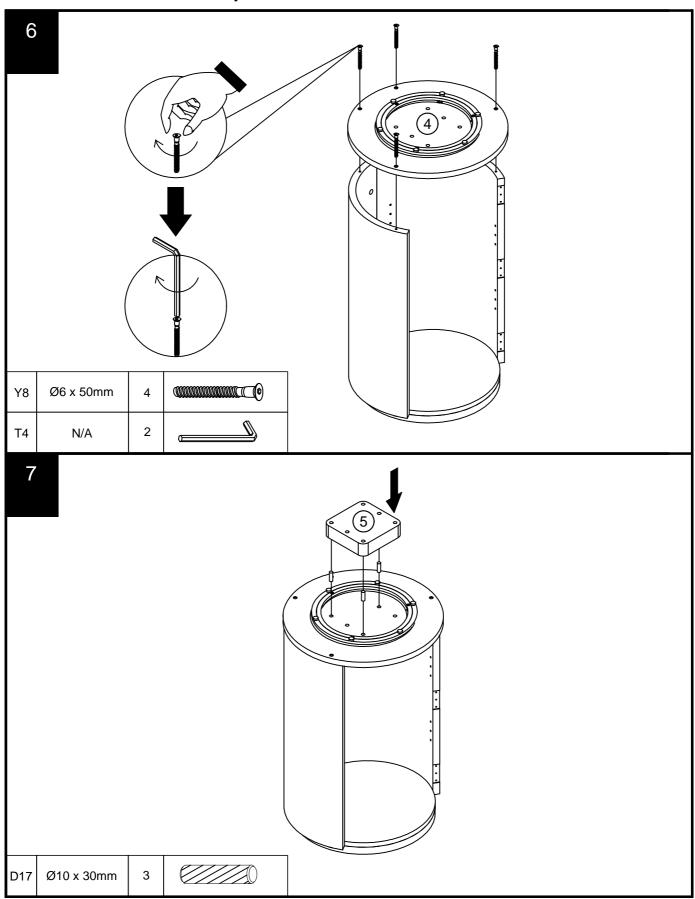


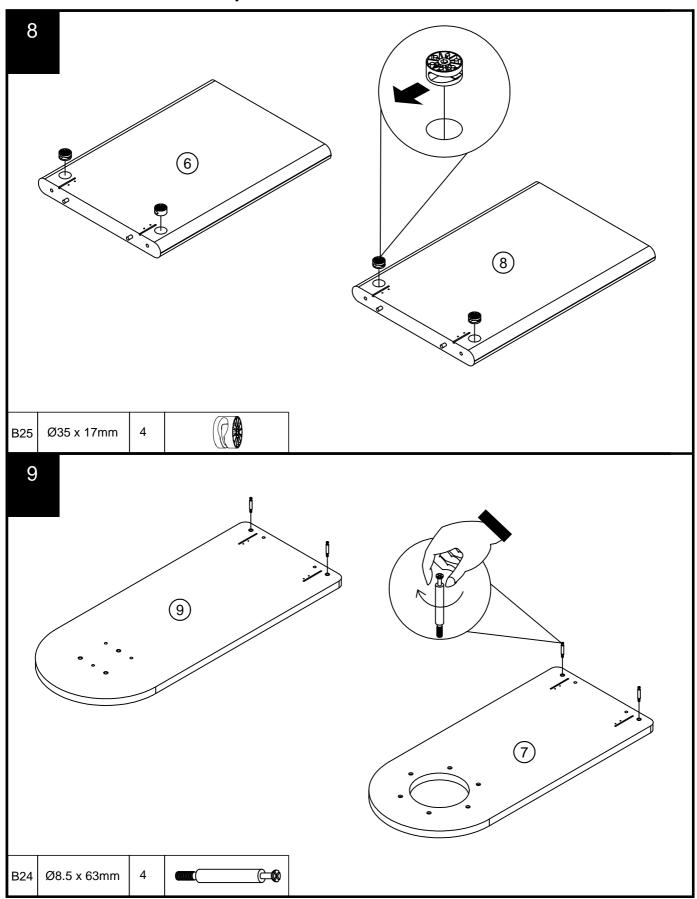

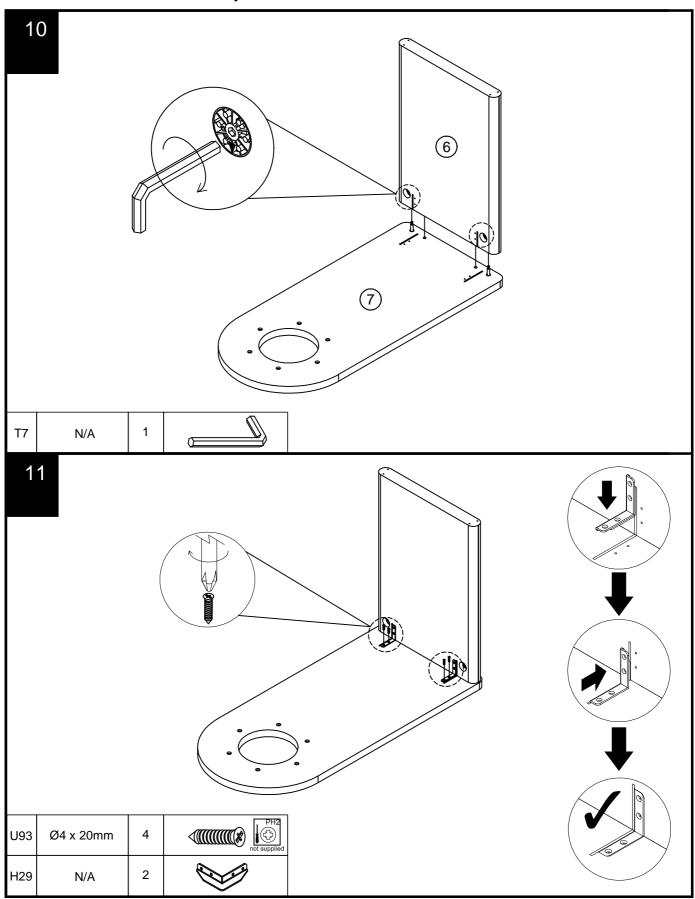


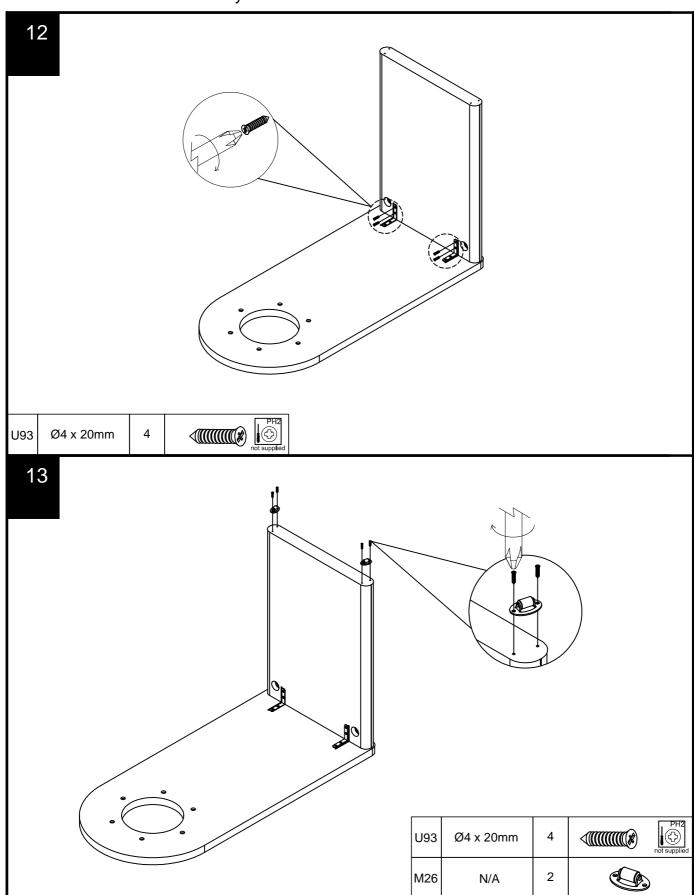

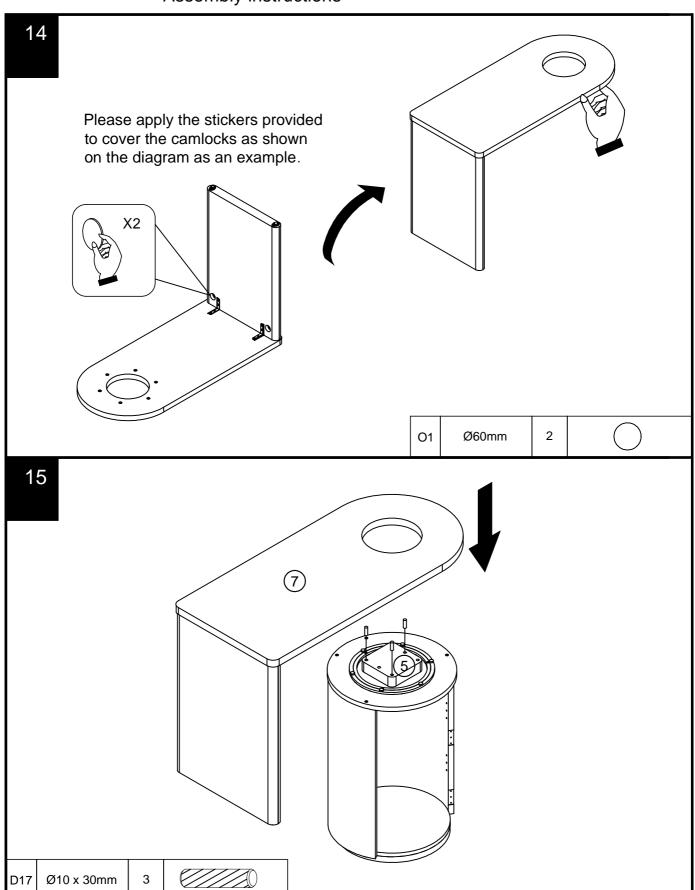

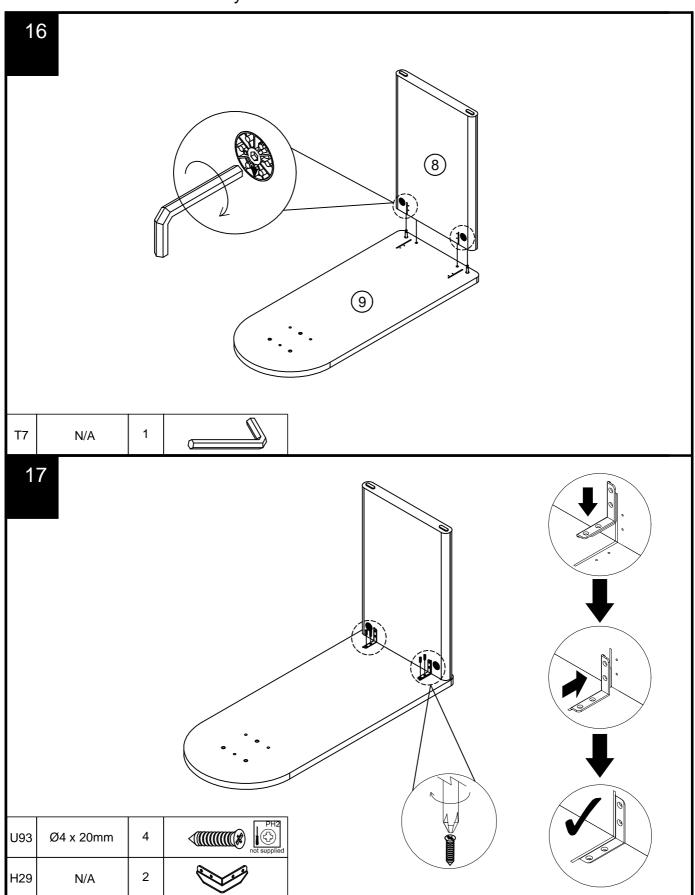

18 Ø4 x 20mm U93 19 Please apply the stickers provided to cover the camlocks as shown on the diagram as an example. X2 2 Ø60mm

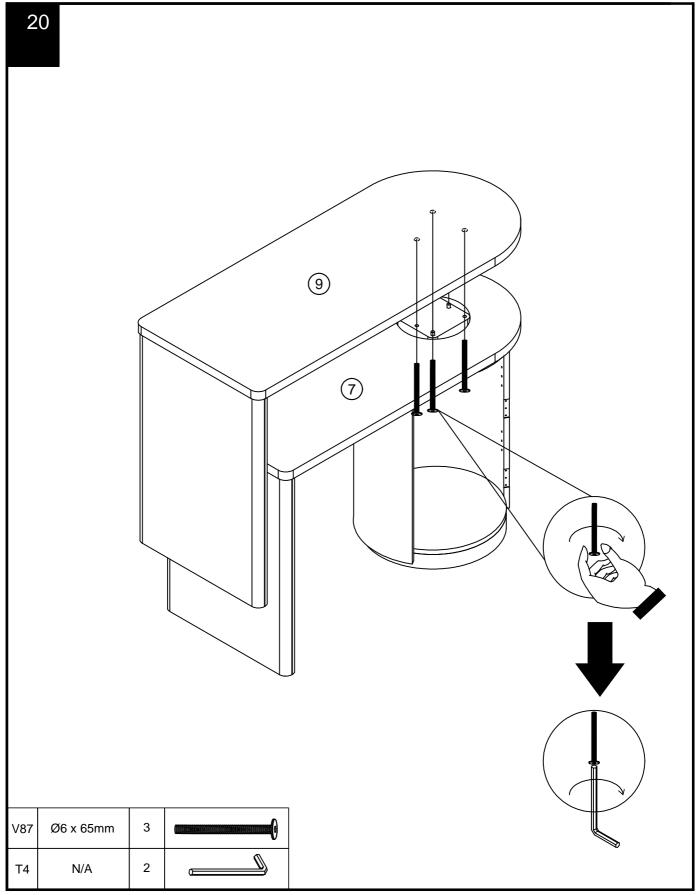

21

We recommend the use of the wall attachment bracket/strap provided for safety reasons.


Secure the other end of the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).

To hide the strap behind the unit ,drill the hole lower than the top of unit.

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes. NB:Wall fixings are not included-Please source suitable fixing for your wall type.


If in doubt please consult a qualified trades person.


Please ensure you secure your product to the wall for your and your family's safety before you use it.

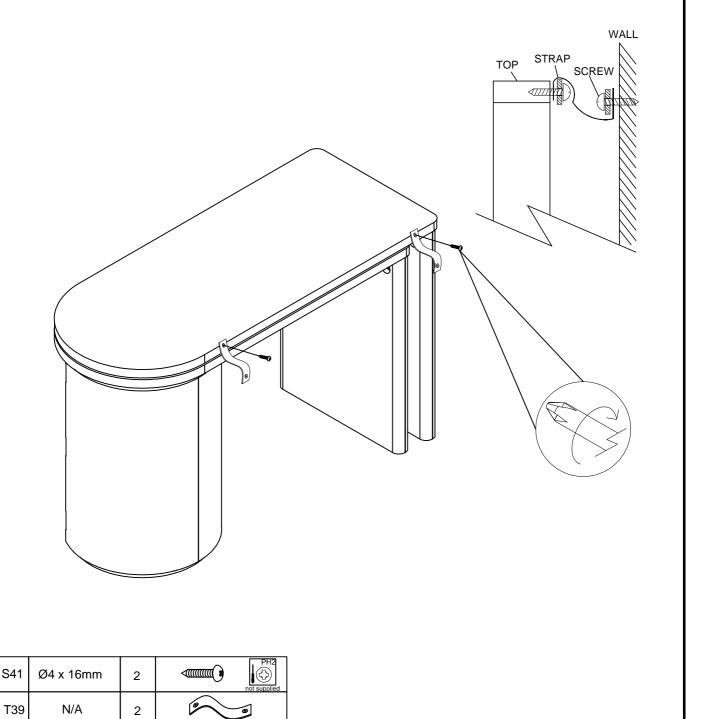


ARCHES SWIVEL DESK

Q73916 Assembly instructions

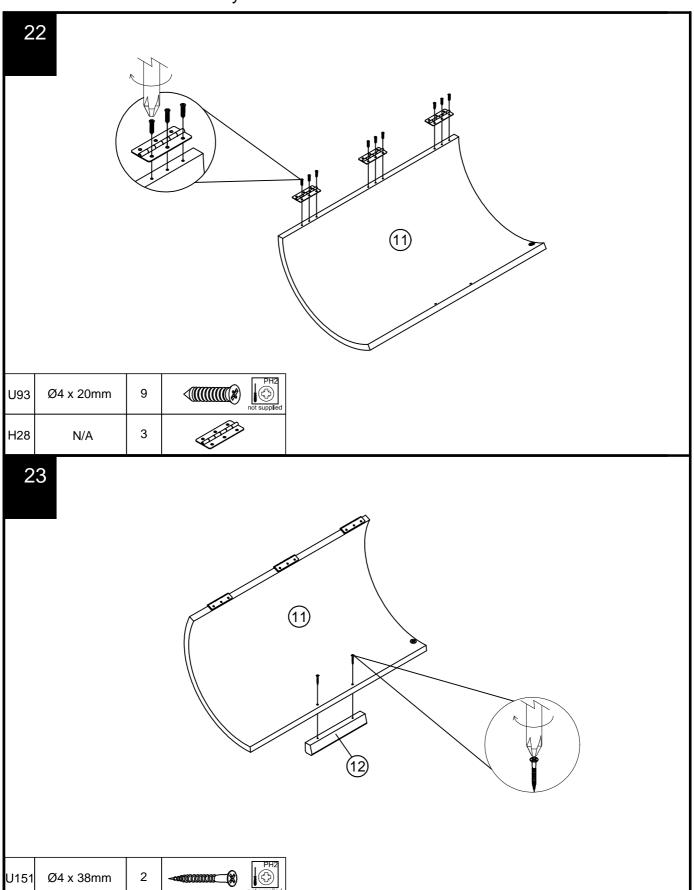


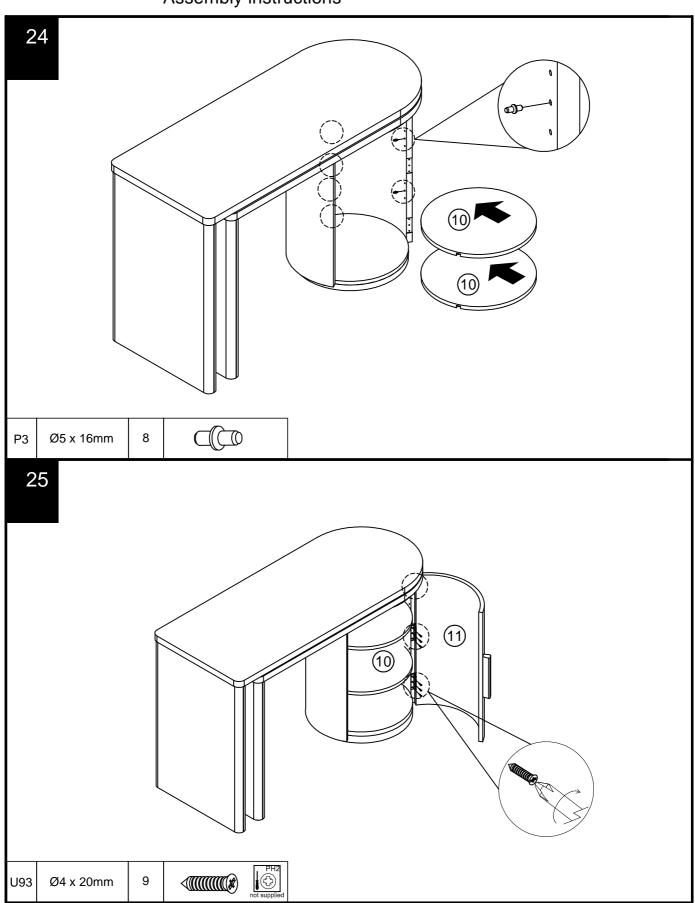


26

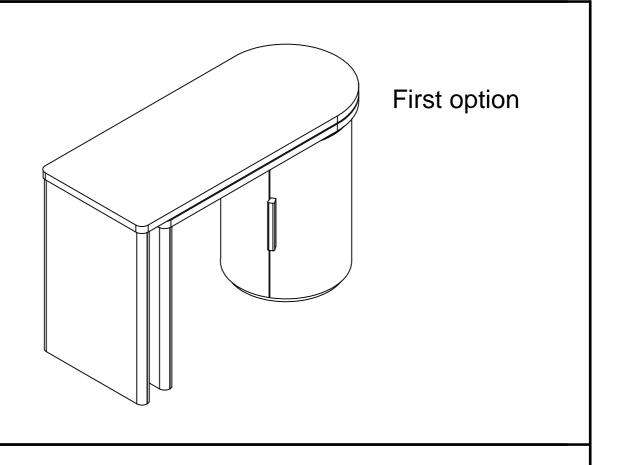


27

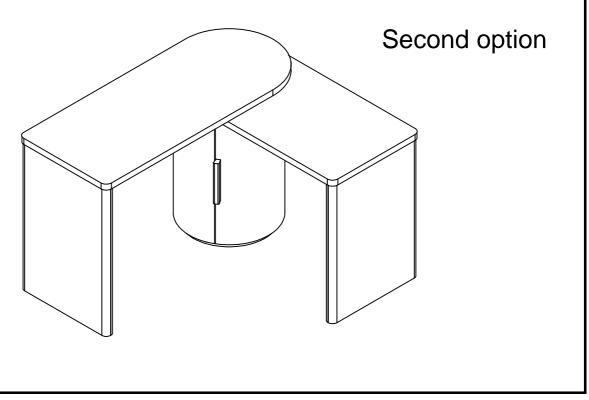

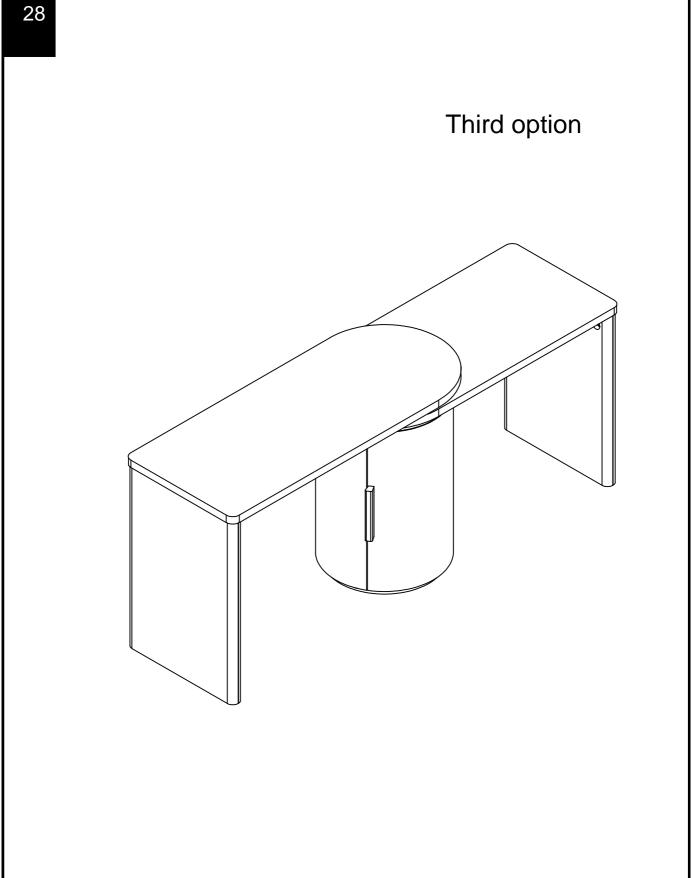

NEXT ARCHES SWIVEL DESK Q73916

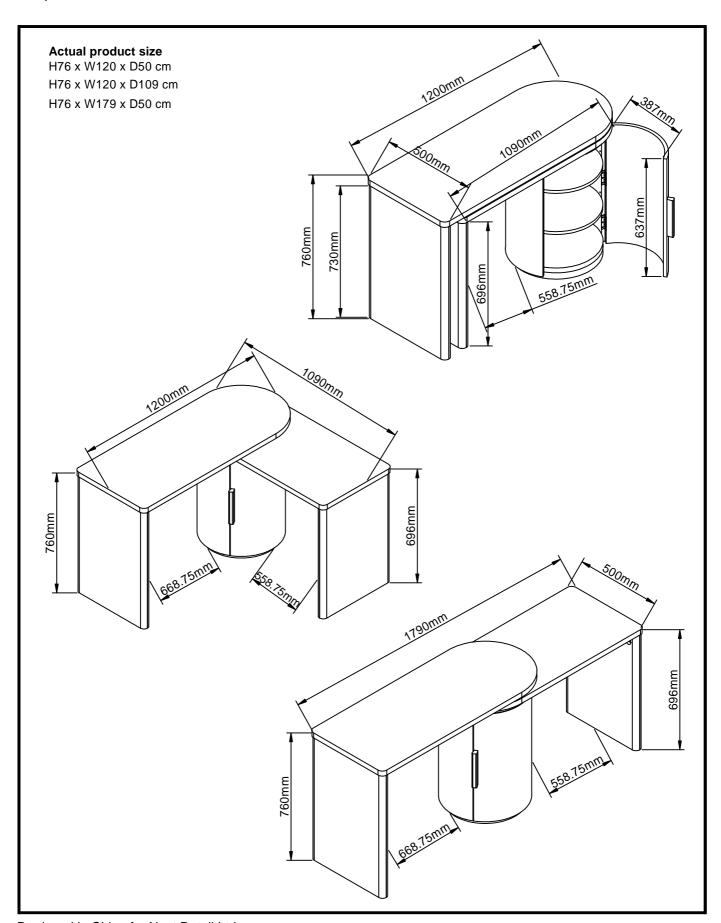

Produced in China for Next Retail Ltd. Q73916-2025-V1.

NEXT ARCHES SWIVEL DESK Q73916

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services Next Retail Ltd. Desford Road, Leicester, LE19 4AT

To view our full furniture range please visit www.next.co.uk