 


NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

Actual product size
H79 x W100x D40cm

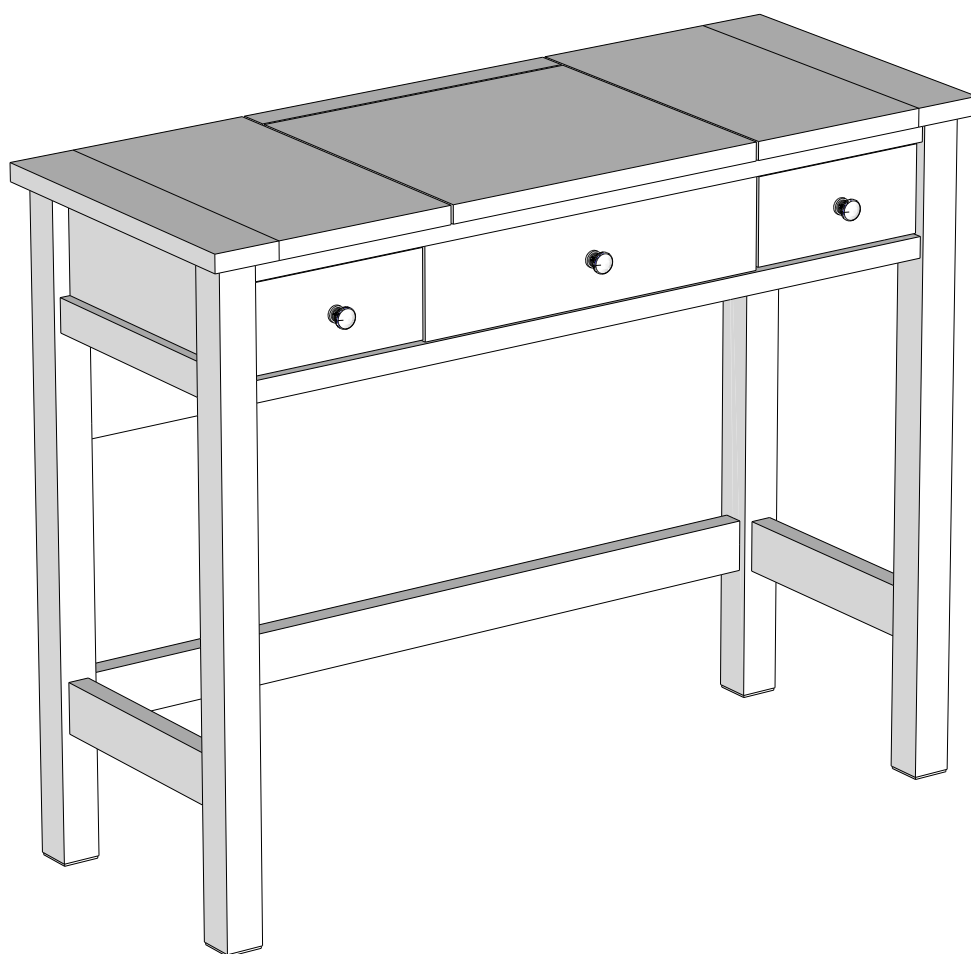

Need Help ?

With: Assembly instruction
Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

BEFORE YOU START

Number of people required to assemble

 
Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

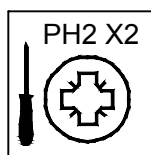

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

 
Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions











GETTING TO KNOW YOUR PRODUCT



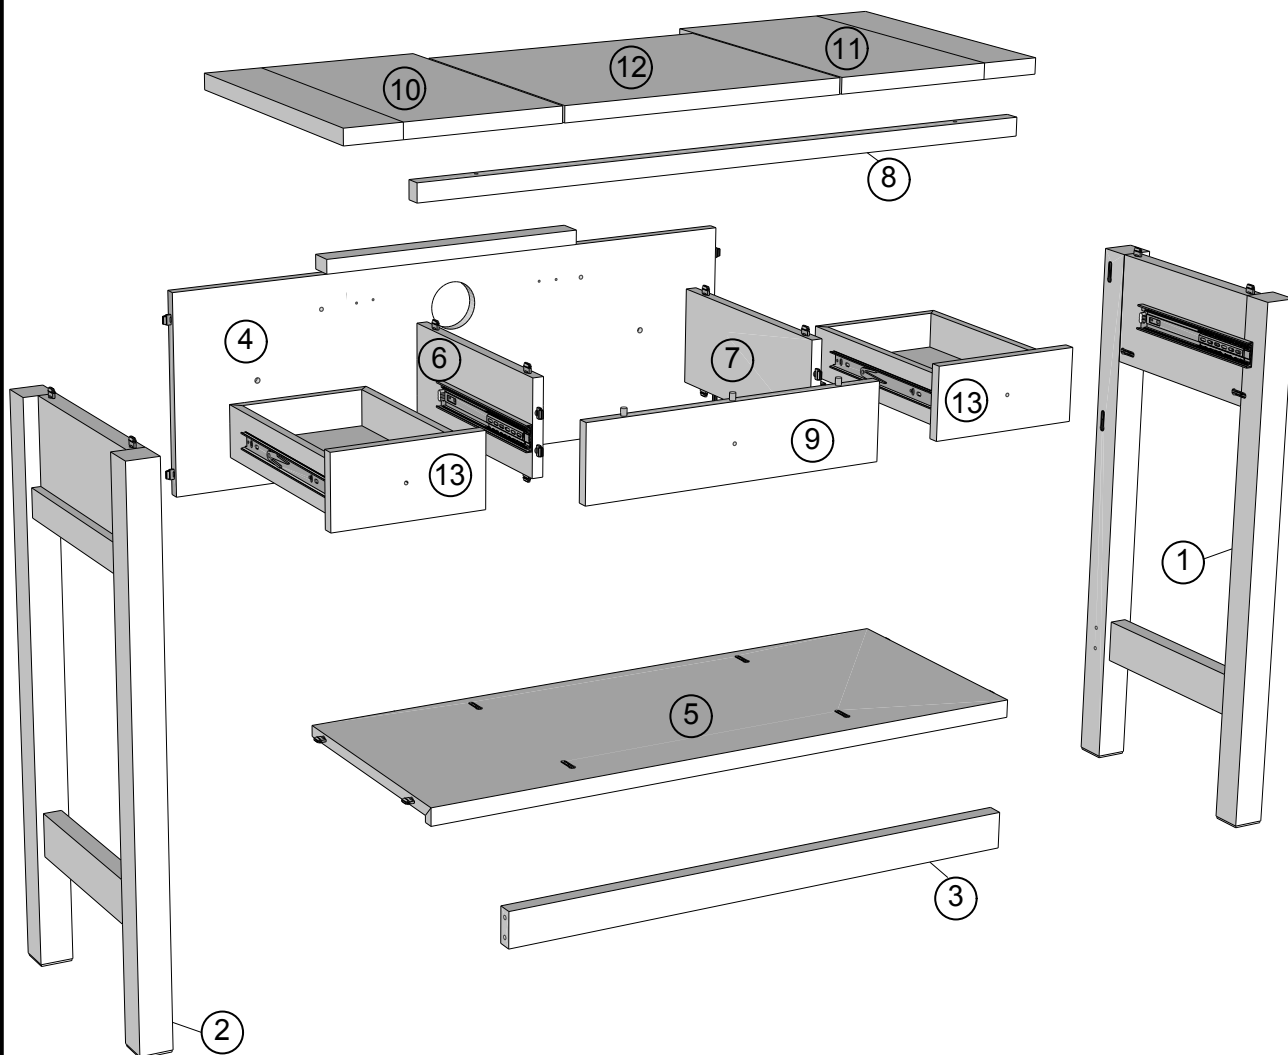


NEXT



MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

          Components supplied. Please use this guide if you require replacement parts.

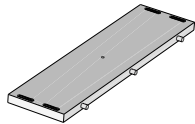
Ref	Dimensions	Visual	Qty	Ctn
1	37*77cm		1	1
2	37*77cm		1	1
3	6*88cm		1	1
4	32*88cm		1	1
5	34.5*88cm		1	1
6	13.5*32.5cm		1	1
7	13.5*32.5cm		1	1
8	2.5*88cm		1	1
9	11*43.5cm		1	1
10	30*40cm		1	1

   Ref	Dimensions	Visual	Qty	Ctn
11	30*40cm		1	1
12	36*40cm		1	1
13	21.5*31.5cm		2	1

  NEXT FITTINGS ASSEMBLE INSTRUCTIONS

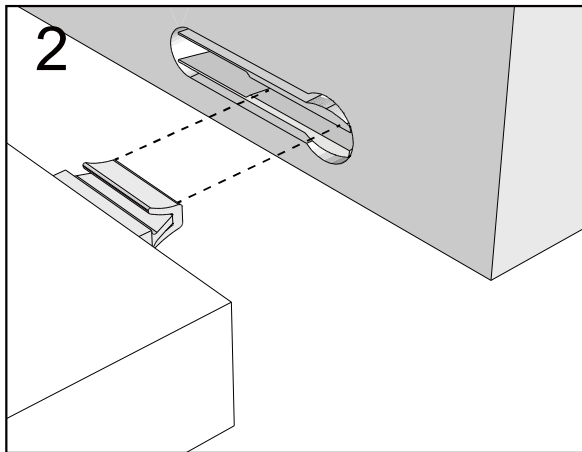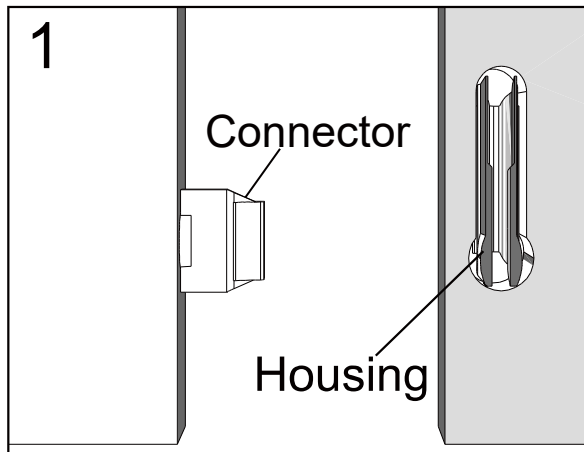

Push connector into housing to join.

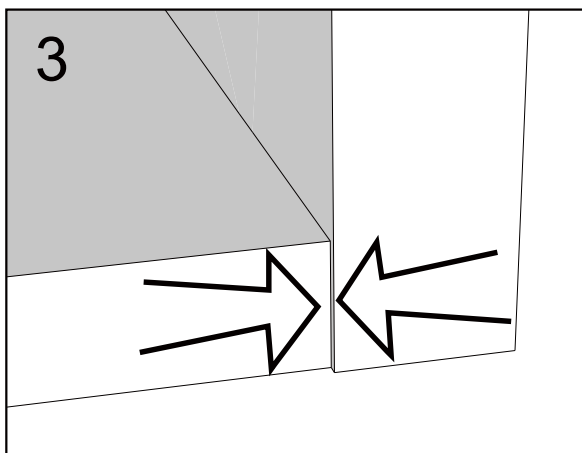 


Make sure there is no gap between the panels.

NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	4	1
B12	Ø7.5 x 33mm	4	1
D6	Ø8 x 30mm	N/A	1
U143	Ø4 x 15mm	4	1
Z23	Ø4 x 25mm	3	N/A
U139	Ø4.5 x 15mm	8	1
U119	Ø4 x 14mm	4	1
Y10	Ø6 x 35mm	4	1

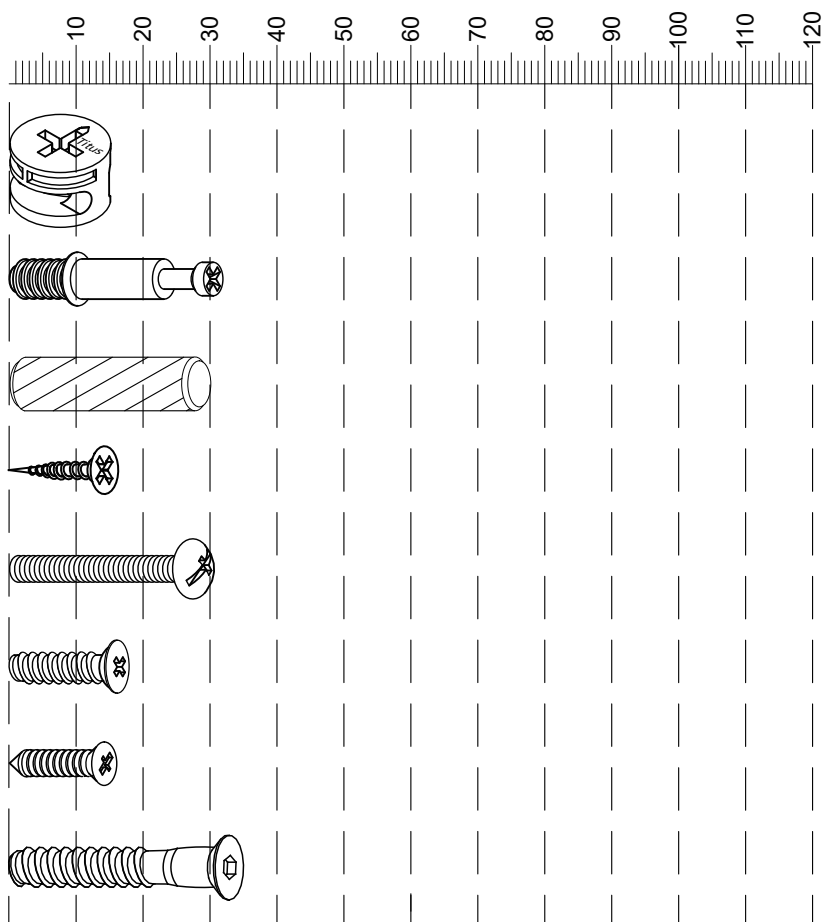 


Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T1	N/A	1	N/A	
E28	N/A	3	N/A	
H19	N/A	2	N/A	
H39	N/A	1	N/A	

NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

 
1

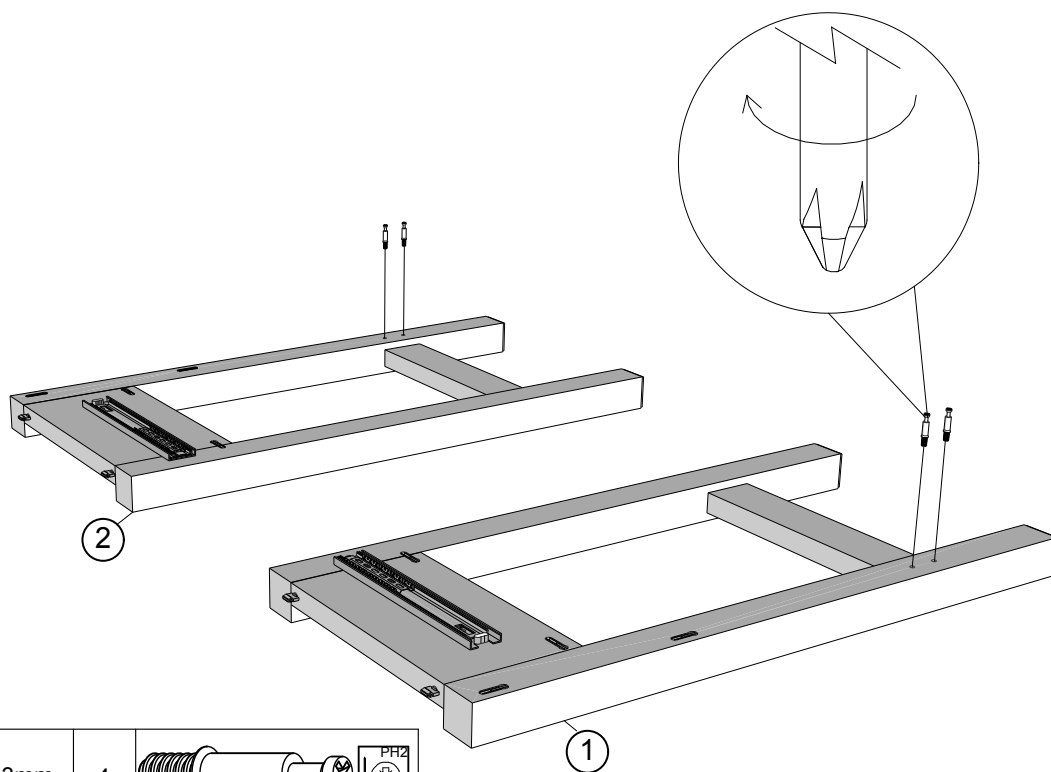


B12

Ø7.5 x 33mm

 4



2

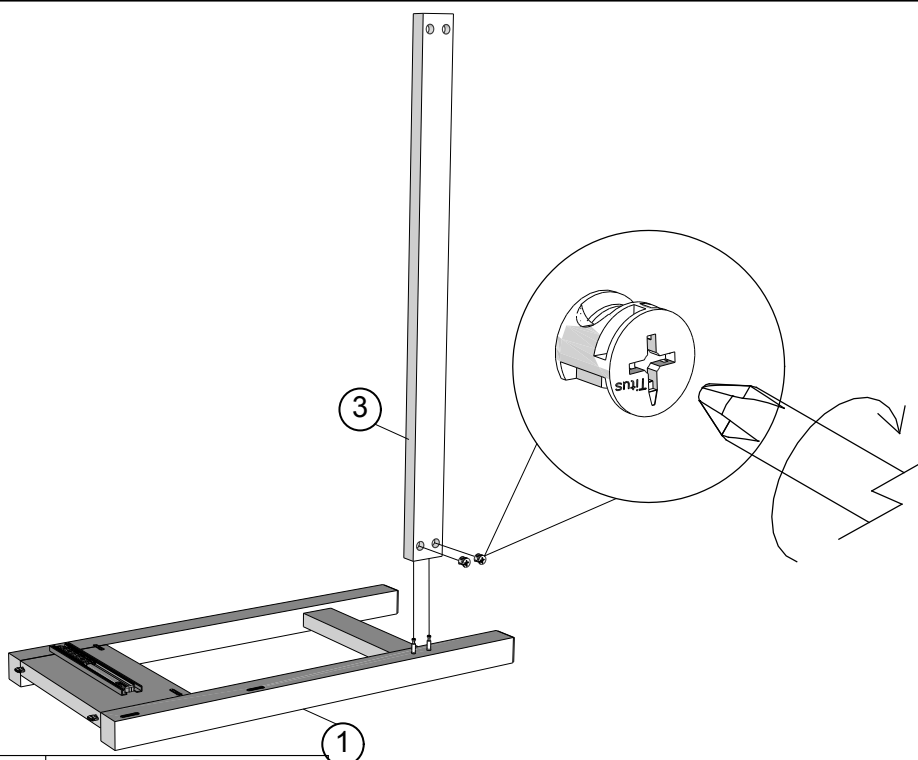 

B3

Ø15 x 12mm

 
2




NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

3

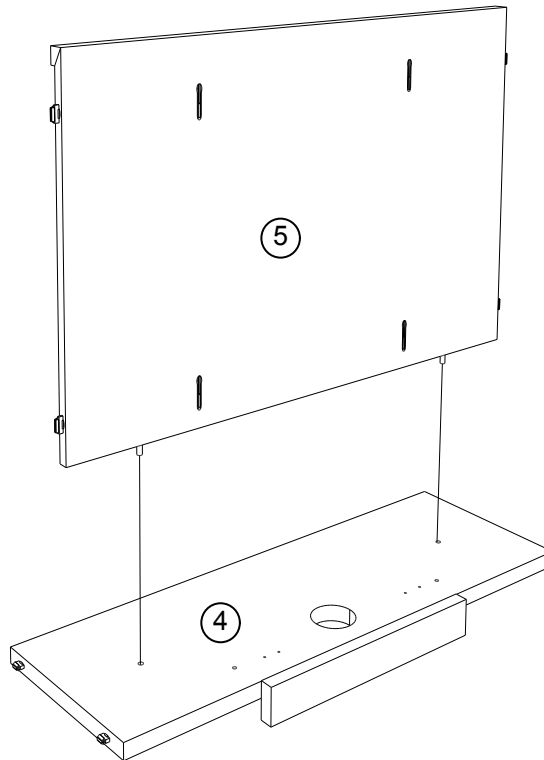


4

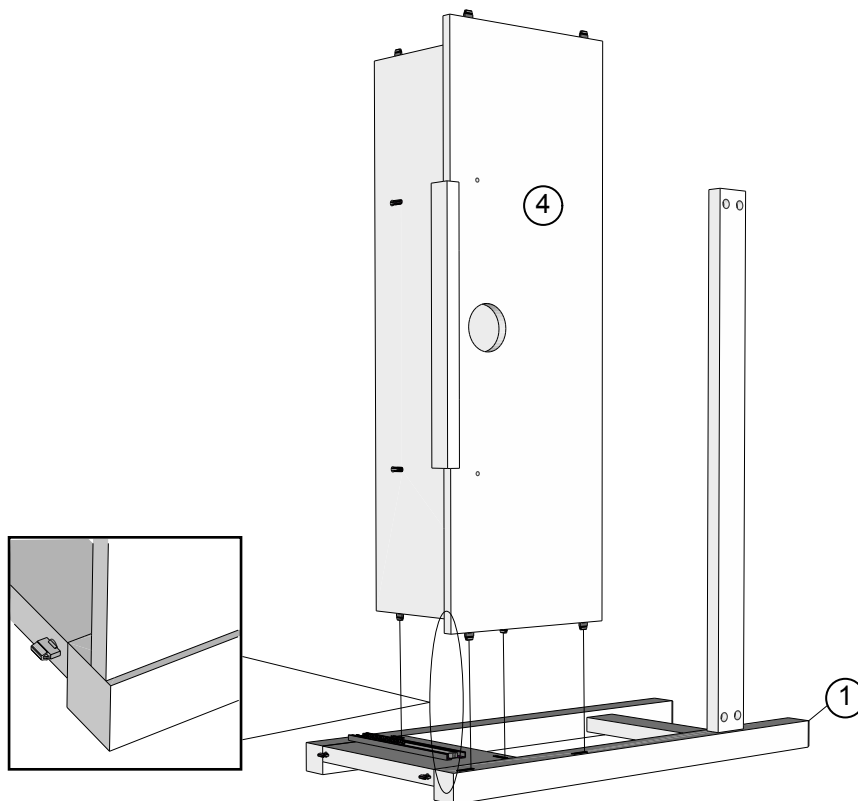 

NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

 5

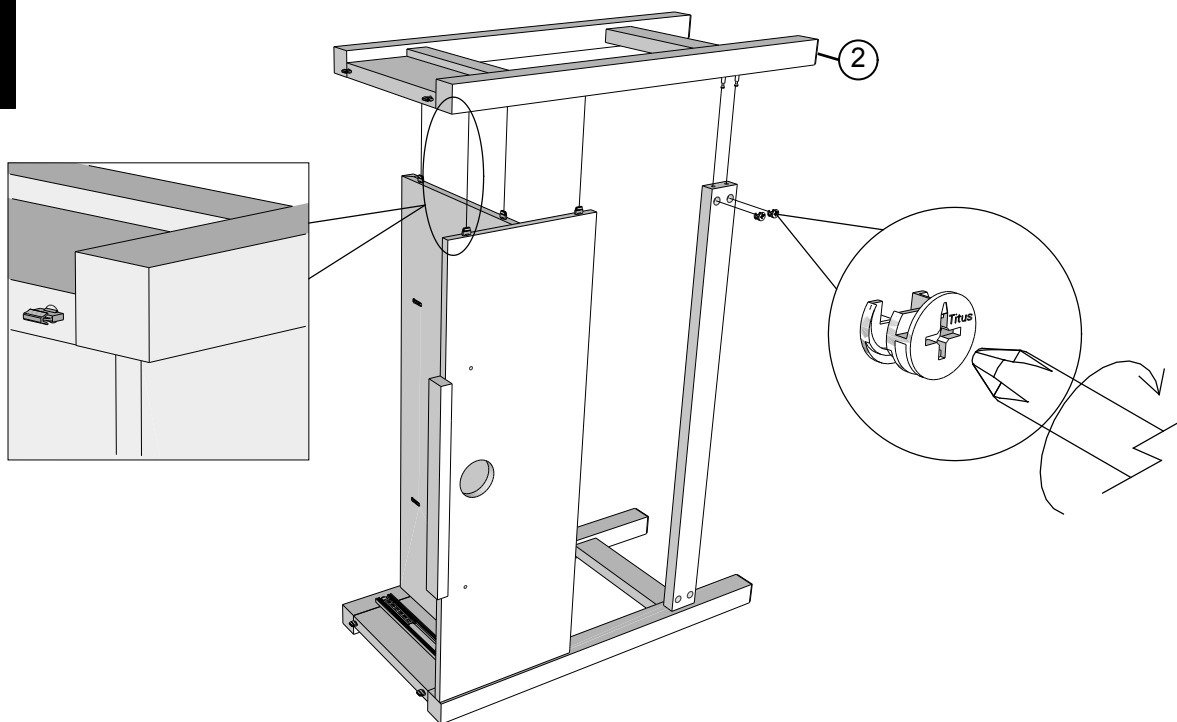

B3

 
Ø15 x 12mm

2



not supplied


6

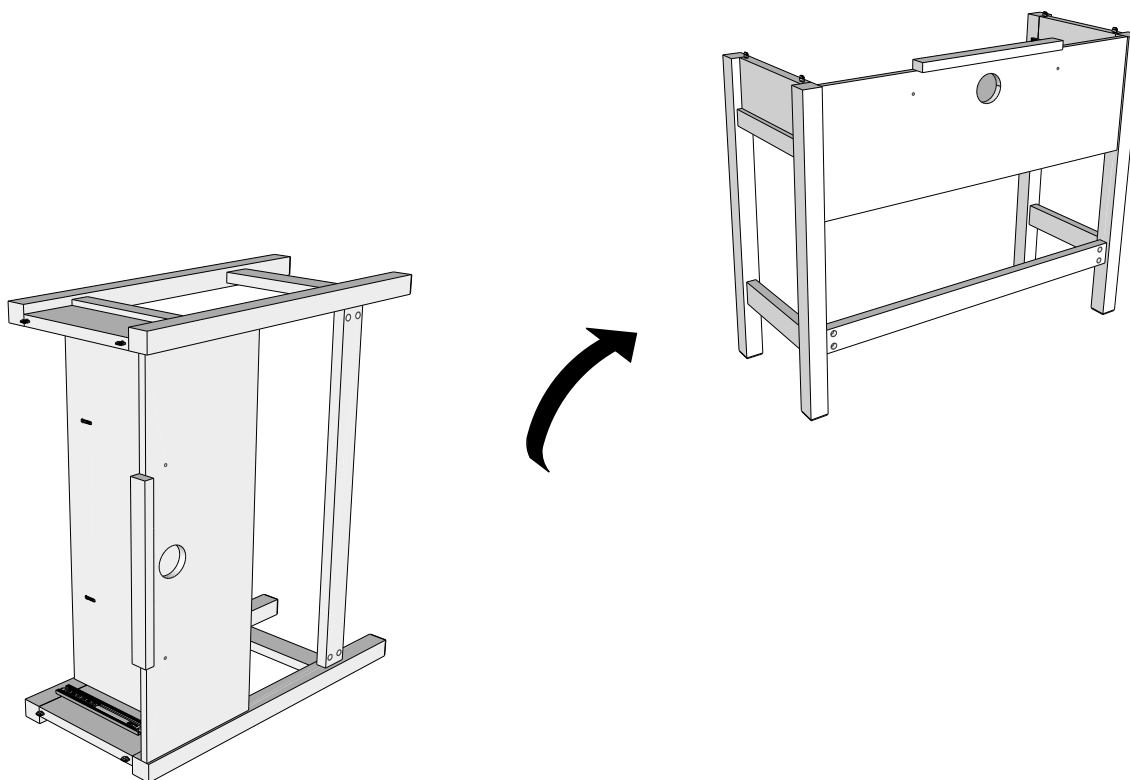


NEXT



MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

 7

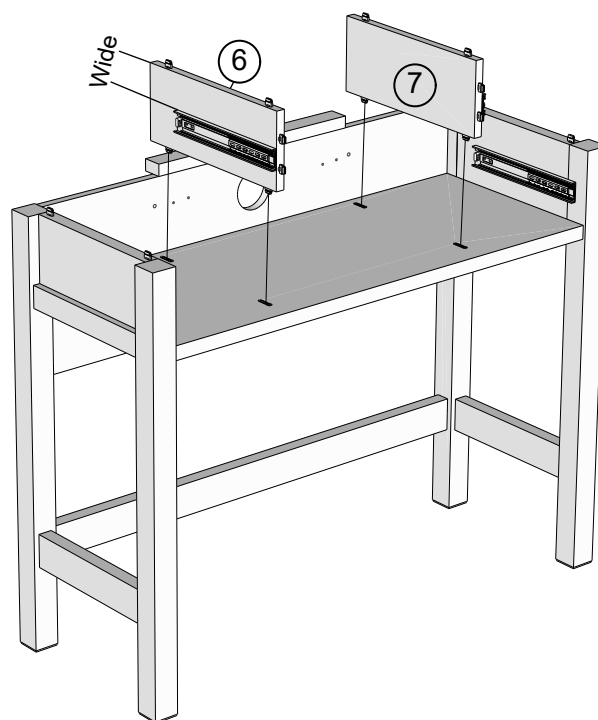

8

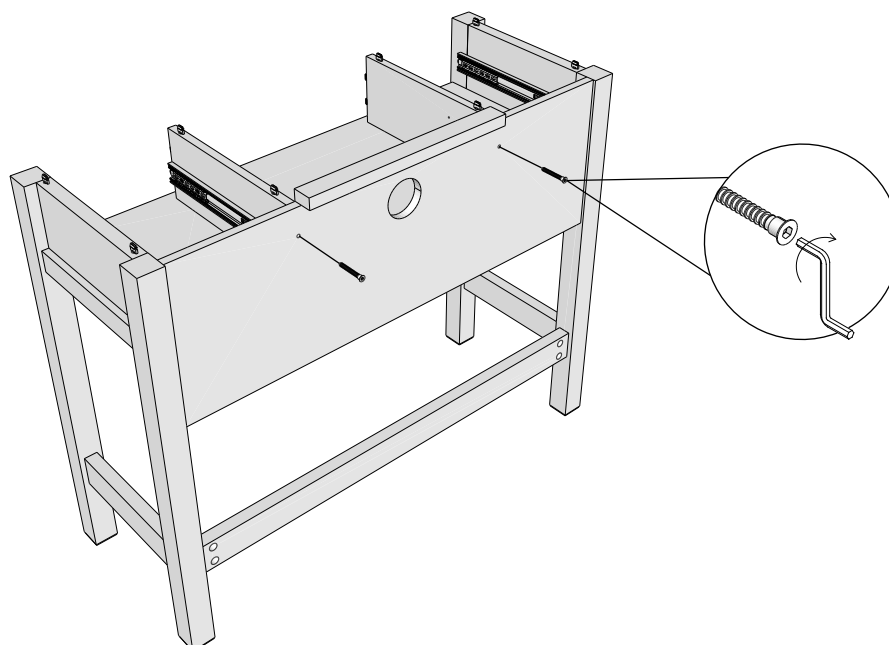 


 T1	N/A	1	
Y10	Ø6 x 35mm	2	


NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

 9

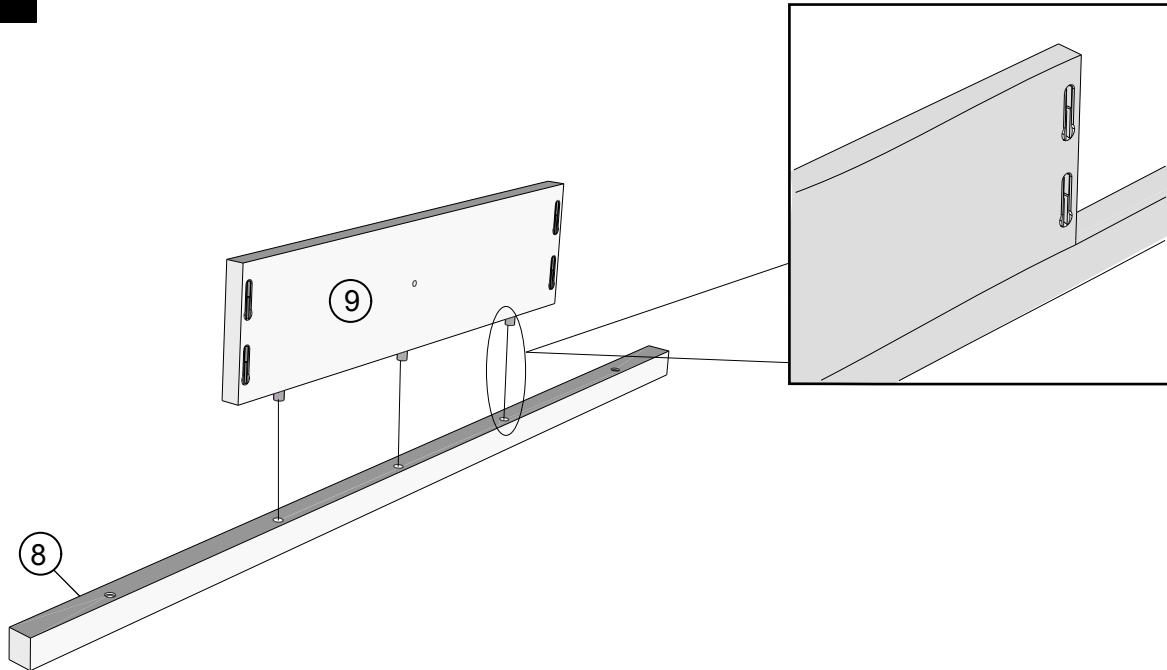


10

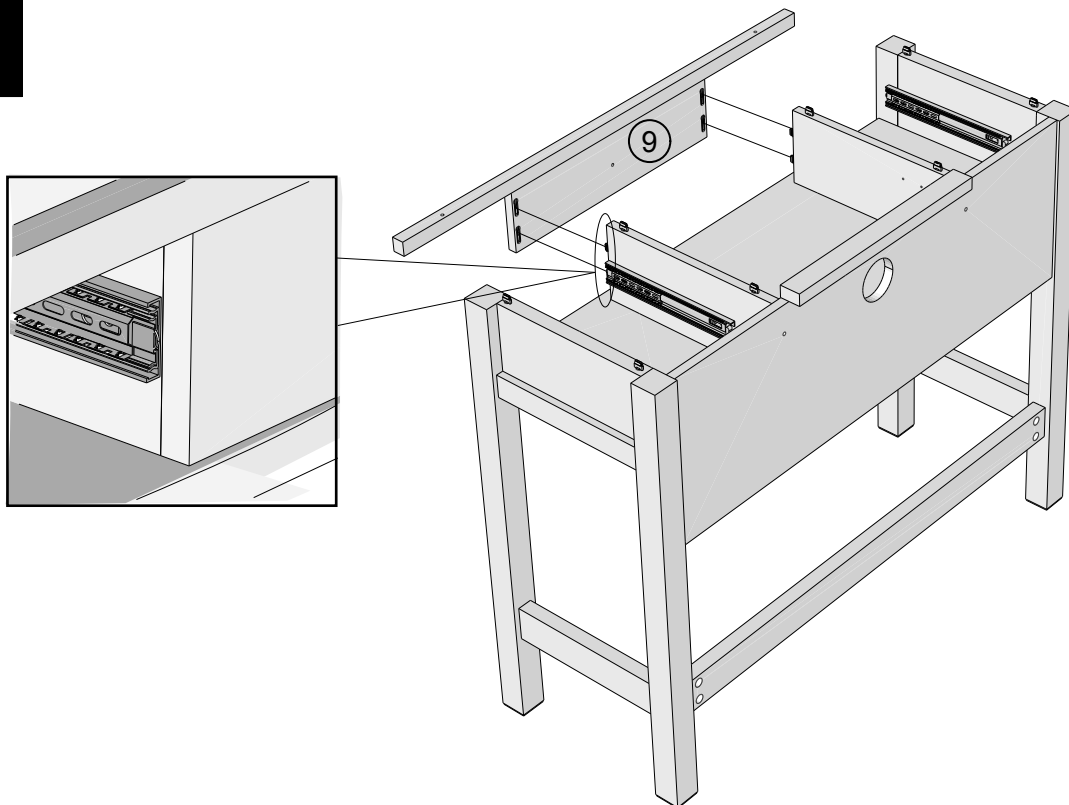 

NEXT


MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

 11

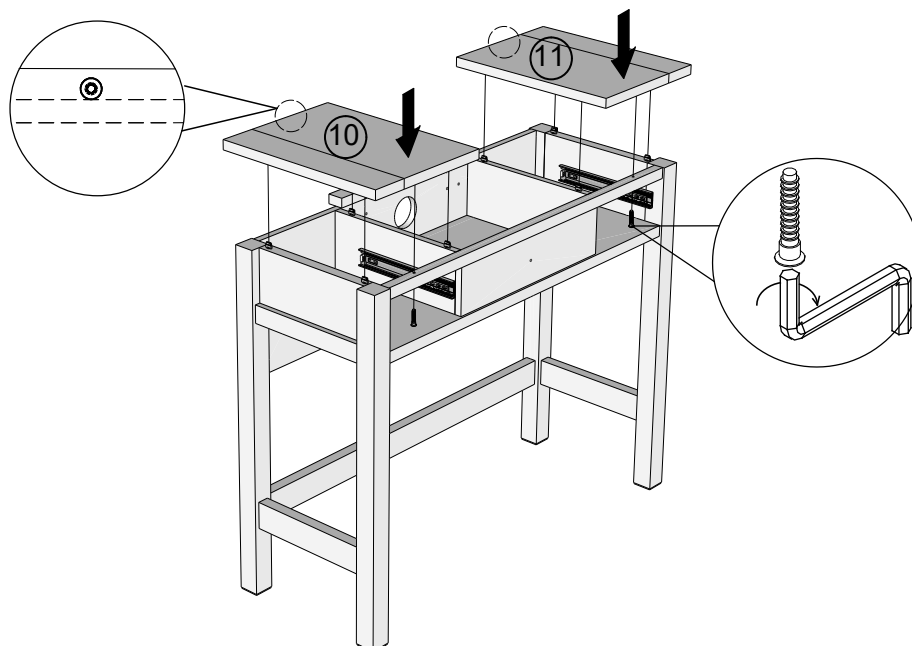

Z1	N/A	1	
Y10	Ø6 x 35mm	2	

 12


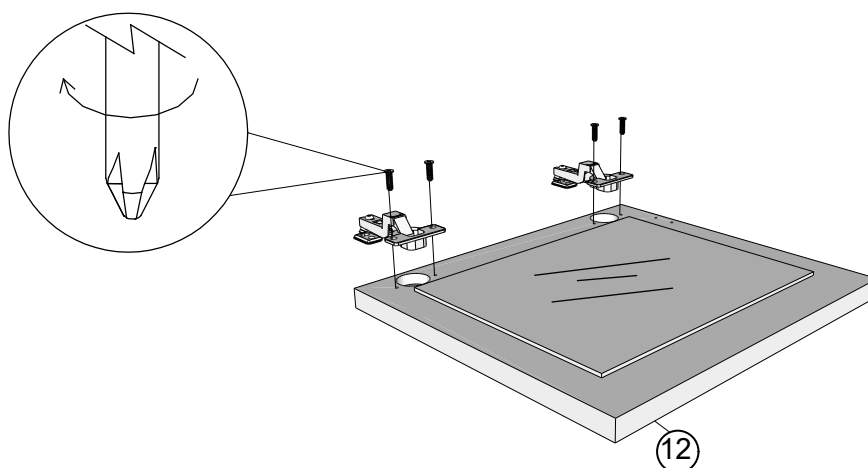


U139	Ø4.5 x 15mm	4	
C19	N/A	2	


NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

  13

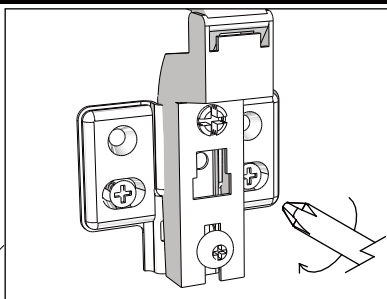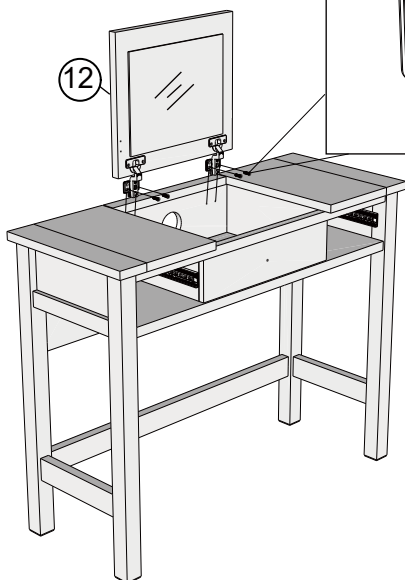


Adjust Hinge Position

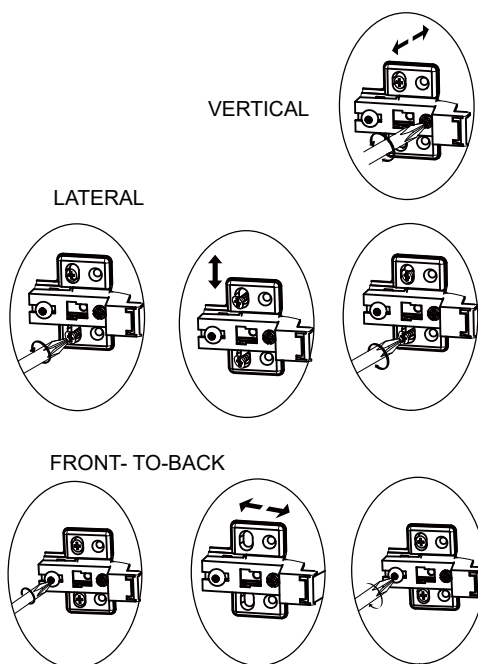 

U139



Ø4.5 x 15mm

 4



not supplied

  14

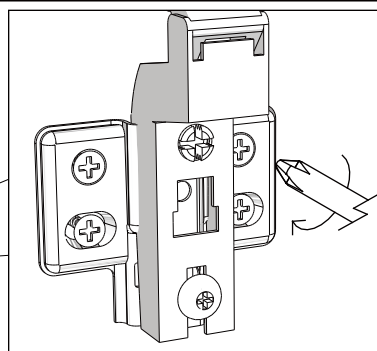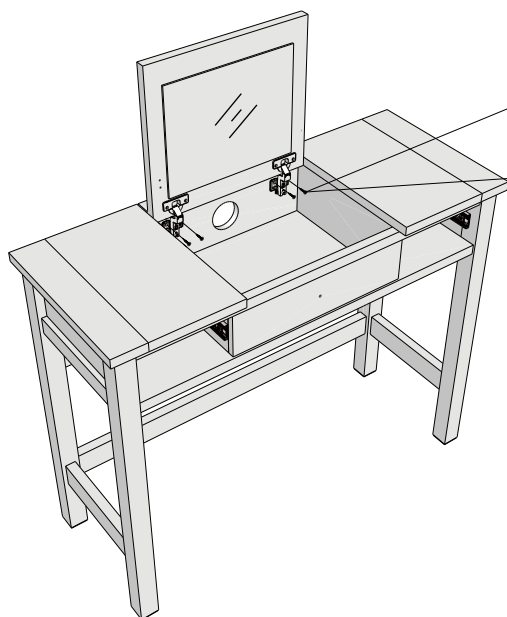

U143

Ø4 x 15mm

4

 





not supplied

NEXT


MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

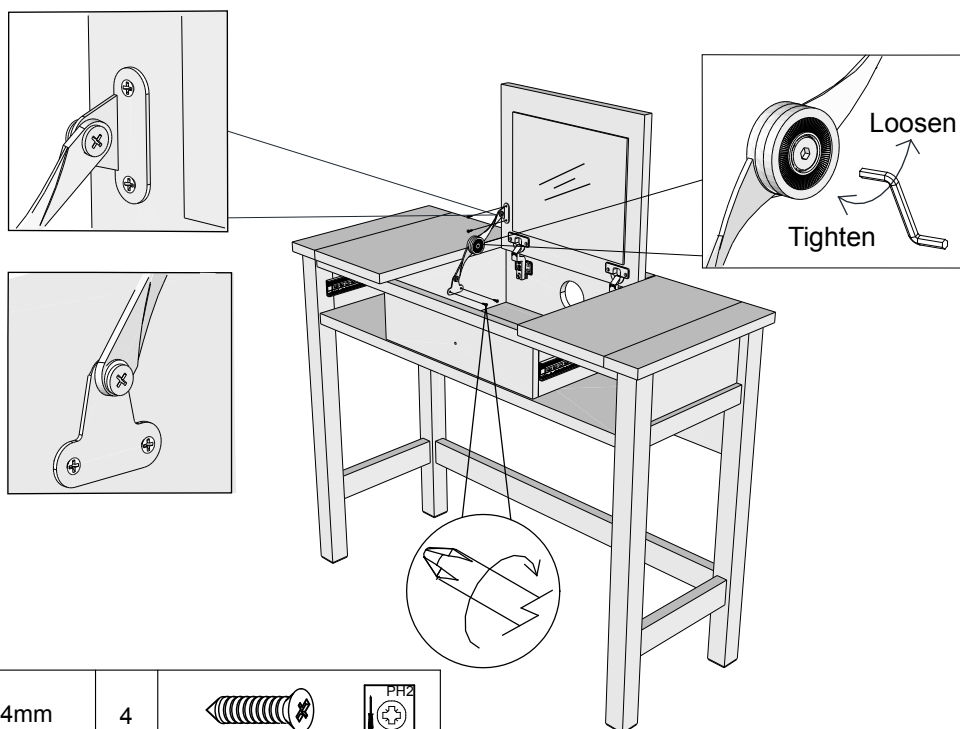


15



U119	Ø4 x 14mm	4	  not supplied
H39	N/A	1	

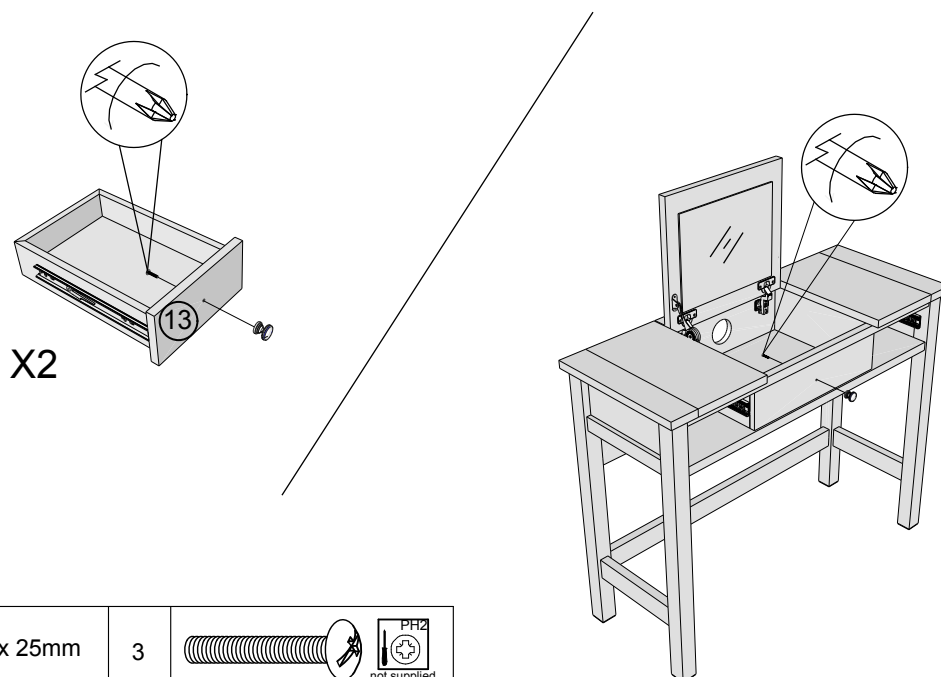 16



Z23	Ø4 x 25mm	3	  not supplied
E28	N/A	3	

NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

17

We recommend the use of the wall attachment bracket/strap provided for safety reasons.

Secure the other end of the strap to the wall with an appropriate screw and wall plug for your wall type (not provided).

 
 
To hide the strap behind the unit, drill the hole lower than the top of unit.

Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.

NB: Wall fixings are not included-Please source suitable fixing for your wall type.

If in doubt please consult a qualified trades person.

Please ensure you secure your product to the wall for your and your family's safety before you use it.

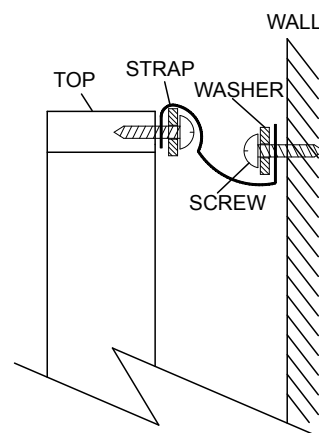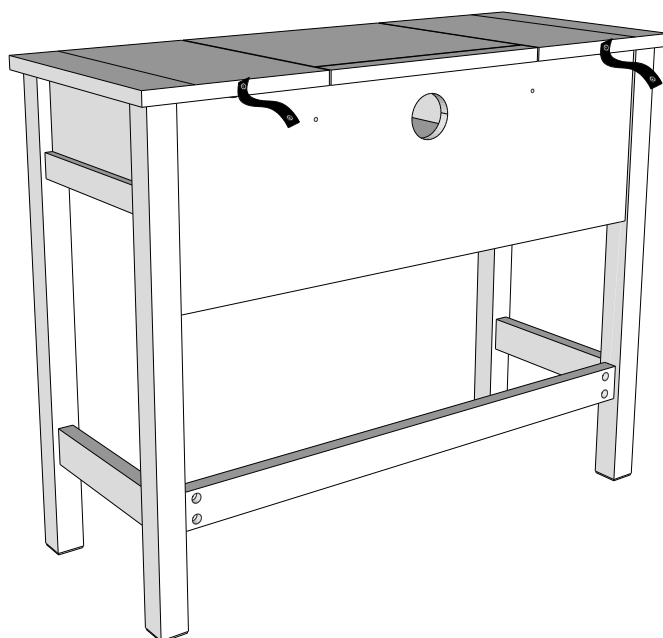


WHEN LOOSENING THE CAM


TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



 MAXIMUM
LOCK

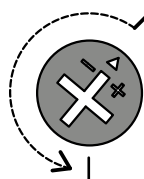

TURN
TO UNLOCK


 


UNLOCKED


NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

  
18

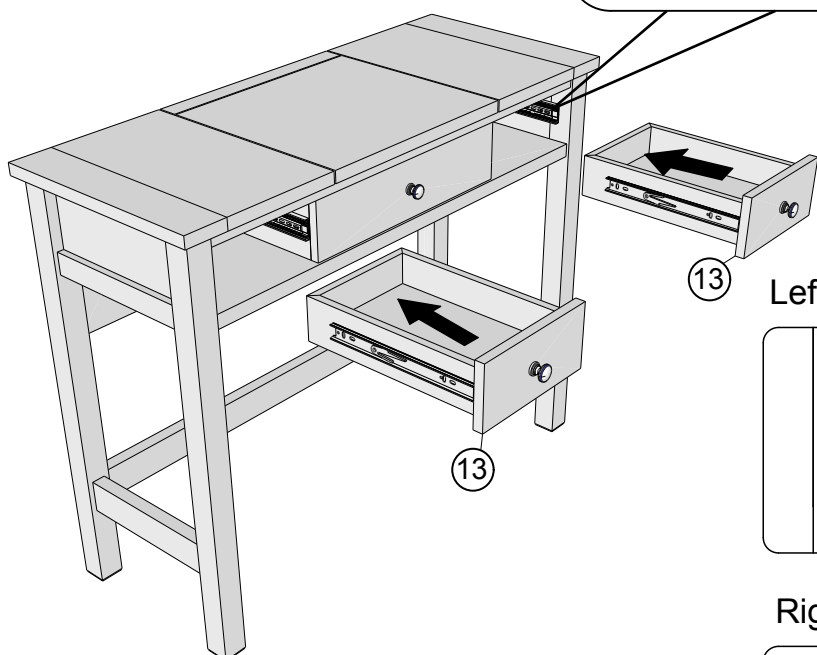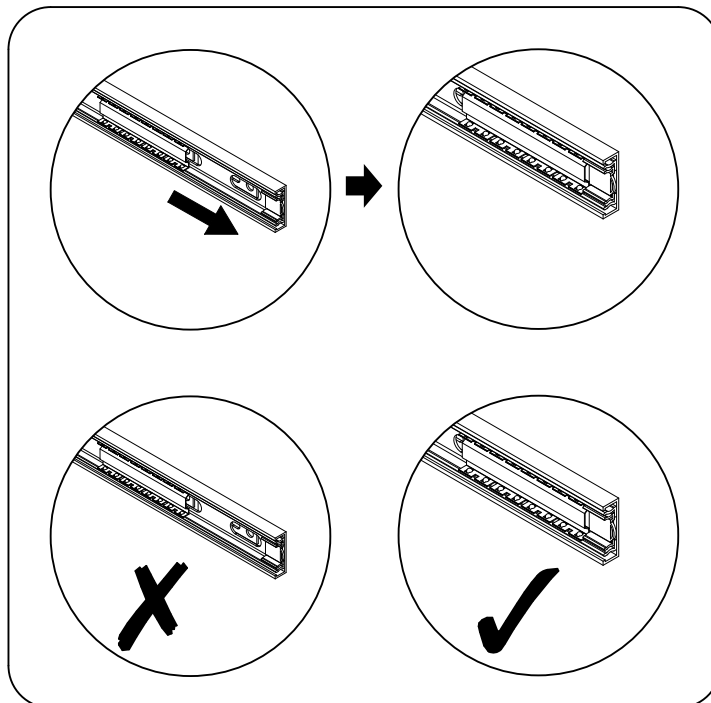

Left side

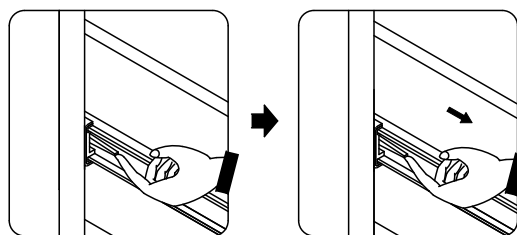 

Right side

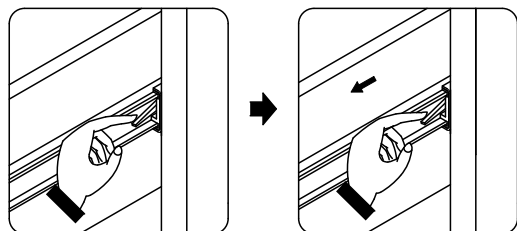 










NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206 Assembly instructions

19

To disassemble:

         Step1:remove the screws from the top panel(10)(11)
and screws from the back panel(4);
and screws from the panel(8);

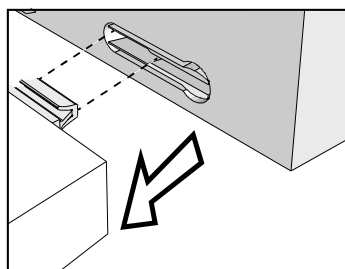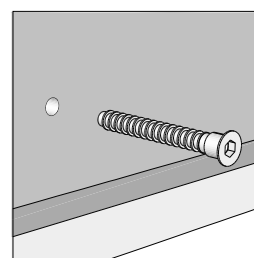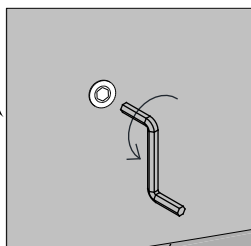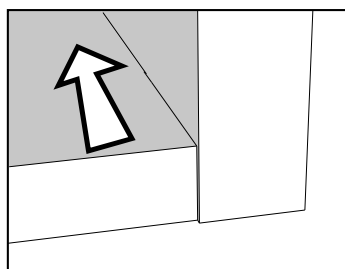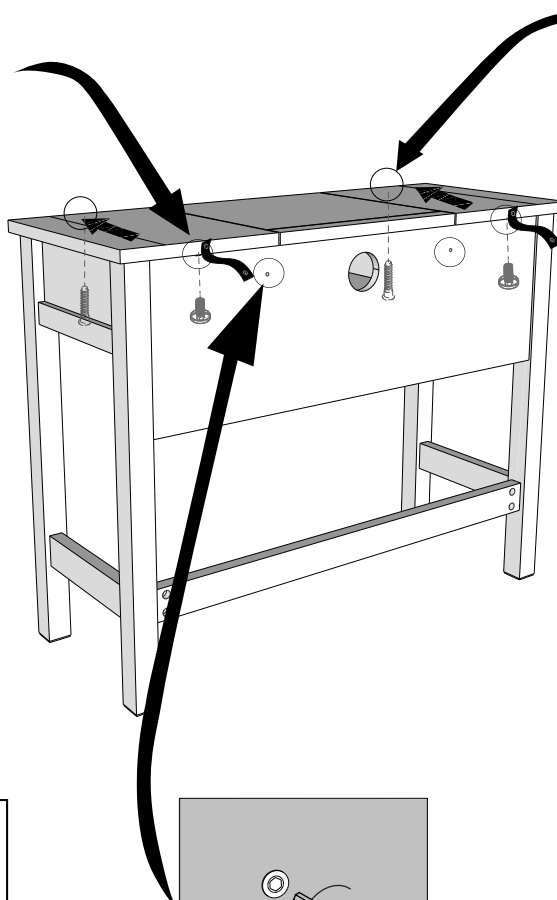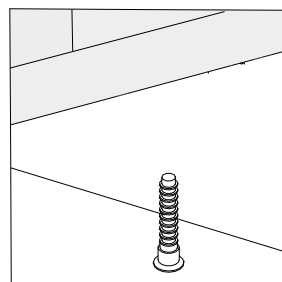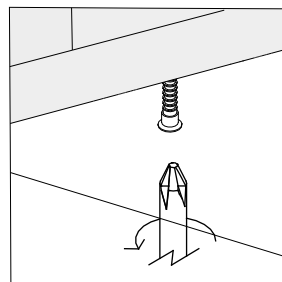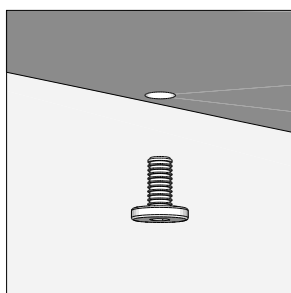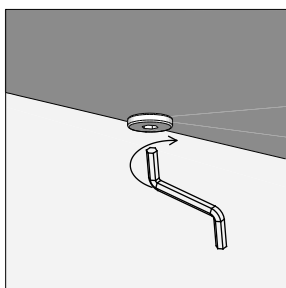


Step2:slide the top panel(10) (11)front to unlock,
follow the same sequence to remove
the other panels;

NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER T10231 / T10206

 Actual product size
H79 x W 100 x D40cm

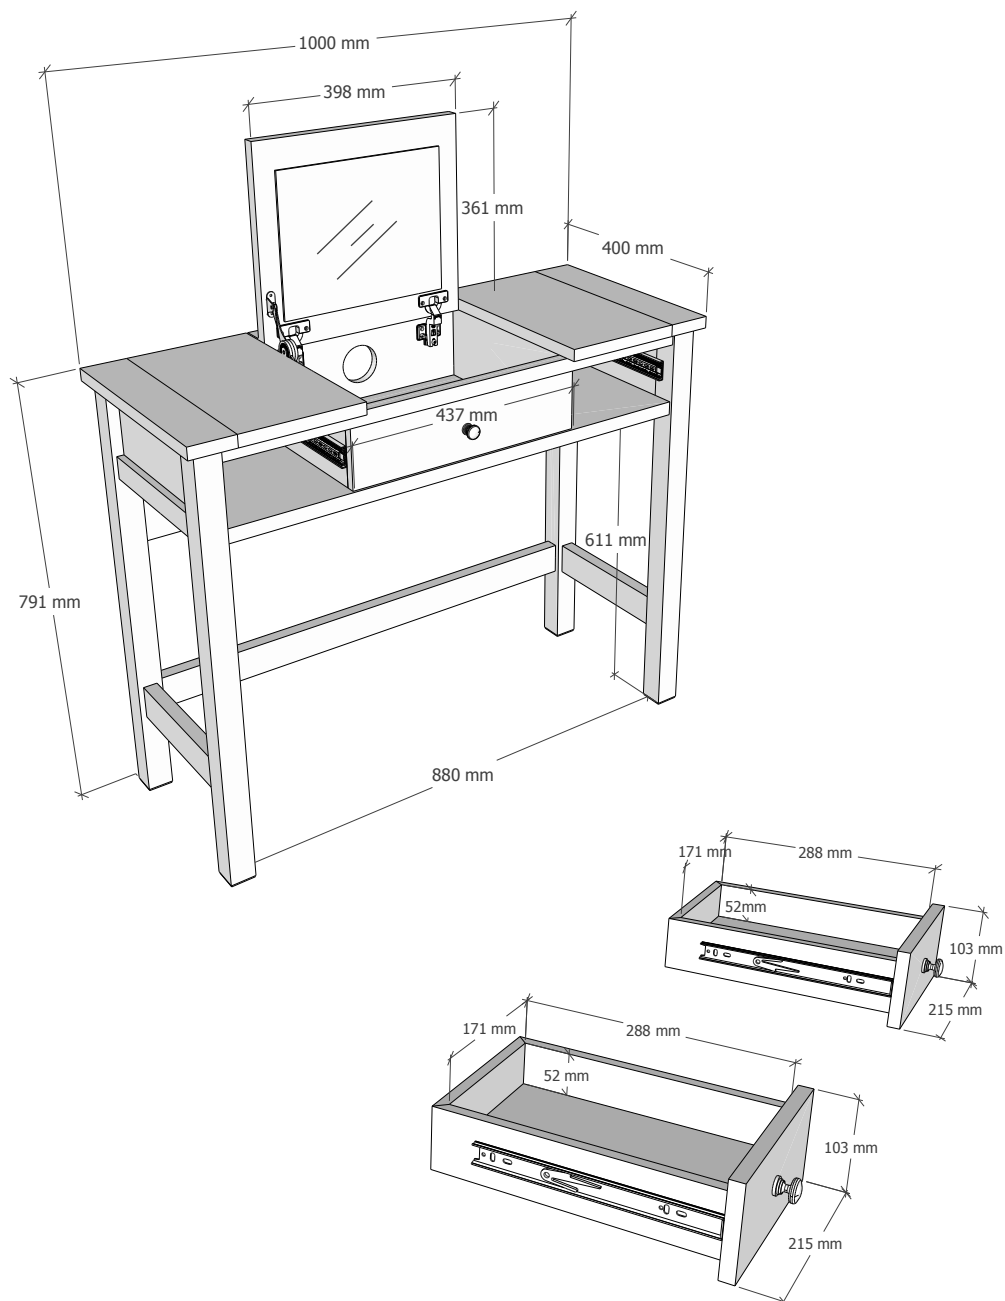

NEXT

MALVERN CHALK / DOVE GREY FLIP TOP DRESSER
T10231 / T10206

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Name and Address: NEXT RETAIL LTD. LE19 4AT

Identification and model Number: T10231 / T10206 MALVERN CHALK / DOVE GREY FLIP TOP DRESSER

Date of Manufacture:

Contract number:

Nominal thickness of Glass: 4mm, Annealed glass

Country of Origin: China

If a glass component is chipped or broken replace with glass of the type described on this label. Consult with the retailer with regard to obtaining a manufacturing specification and shape for replacement glass quoting the model number, batch number and date of manufacture.

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk