



HADEN

ESTD. ENGLAND 1958



INSTRUCTION MANUAL



PRODUCT CODE: 198747,199386, 203601

JERSEY TOASTER



How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us
01909 544 570



Email us
info@haden.com




Write to us
**Team Haden, Sabichi Homewares
Ltd, Priorswell Rd, Worksop, S80 2BY**



Visit us
www.haden.com

COMPONENTS

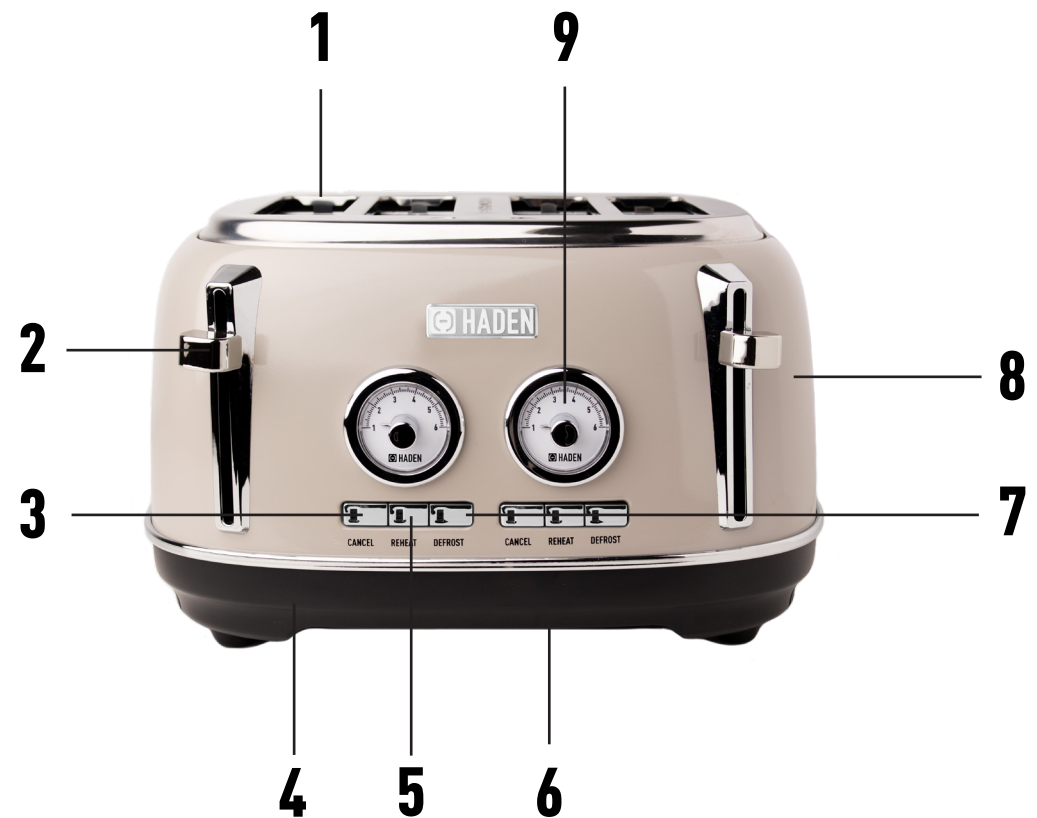

- | | |
|---------------------------|------------------------------|
| 1. Toasting Slots | 6. Crumb tray |
| 2. Carriage Control Lever | 7. Defrost Button |
| 3. Cancel Button | 8. Housing |
| 4. Base | 9. Variable Browning Control |
| 5. Reheat Button | |

SAFETY INSTRUCTIONS

When using electrical Toasters, the following basic safety precautions should always be taken.

- Before using, check that the voltage of wall outlet corresponds to that shown on the rating plate of the toaster.
- Do not touch hot surface. Use handles, knobs and buttons provided.
- To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
- Close supervision is necessary when it is used by or near children.
- Unplug the unit from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug. If the main cord is damaged, it must be replaced by a service agent or a qualified person.
- Do not let the cord hang over the edge of a table or counter, or touch any hot surfaces.
- Do not place on or near a hot surface or in a heated oven.
- Do not use the appliance for anything other than its intended use.
- Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire, electric shock and or personal injury.
- Bread may burn, so toasters must not be used near or below curtains and other combustible materials, and must not be left unattended.
- The use of accessory attachments is not recommended by the appliance manufacturer as it may cause injuries.
- Don't attempt to dislodge food when toaster is in operation.
- Be sure to take the bread out carefully after toasting so as to avoid injuries.
- Clean the crumbs out of your toaster frequently, to avoid a build up. This is unhygienic and could cause a fire hazard.
- Don't use the toaster unless the crumb tray is closed.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Don't use the appliance outdoors.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The surfaces are liable to get hot during use.
- The hot surface warning symbol is marked on the appliance means that the appliance may be hot during use.

SAVE THESE INSTRUCTIONS

USING YOUR TOASTER

FOR THE FIRST USE

Set the browning control to Max (6) and operate the toaster without bread to cure the elements. The toaster may emit an odour during use. This is normal and will not occur after several cycles. Then let the toaster cool down and begin toasting the first slice.

Toasting

1. Place the toaster upright on a firm, level, heat-resistant surface, clear of curtains and other combustible materials.
2. Plug the power cord into the socket.
3. Ensure the crumb tray is in place before using.
4. Insert regular bread slices into the bread slots, maximum of four slices can be toasted at a time.
5. Set the browning control to your desired setting. There are 6 positions, "1" is for lightest and the "6" is for darkest toasting. Depending on the thickness of the bread, it can be toasted to a golden colour in the middle position.
6. Press the carriage handle down vertically until it latches into position. The light indicator for the **Cancel** function will be illuminated, and the appliance will begin toasting.
7. Once the bread has been toasted to the desired setting, the carriage handle will automatically pop up.

NOTE: During toasting, you may also observe the toasting colour. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, never lift carriage handle to cancel toasting.

Defrost button

This feature takes the guesswork out of toasting frozen bread. If you want to toast frozen bread, press the **Defrost** button and the indicator of **Defrost** button will be illuminated, set browning control knob to the desired setting, and then lower carriage lever down until locked in place.

Reheat button

Press the **Reheat** button and the indicator of **Reheat** button will be illuminated, and then lower carriage lever down until locked in place. In this mode toasting time is fixed, using the lowest setting to reheat, the carriage handle will automatically spring up and end the reheating process.

Only reheat plain, unbuttered toast.

Cancel button

Press the **Cancel** button at anytime to stop the toasting cycle and pop up the toast.

CAUTION

1. Remove all protective wrappings and stickers prior to toasting.
2. If toaster starts to smoke, Press **Cancel** to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter or garlic bread.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. In order to achieve uniform colour we recommend that you should wait a minimum of 30 seconds between each toasting.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug the appliance and let it cool down completely.
2. Wipe the outside with a soft dry cloth, never use metal polish.
3. Don't use harsh or abrasive cleaning agents or solvents.
4. Don't put the toaster in water or any other liquid.
5. Remove the crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
6. The power cord may be wound under the bottom of toaster when not in use or during storage.

Crumbs

Remove crumbs frequently, as they could cause a fire hazard. Unplug the toaster and let it cool down fully. Remove and empty the crumb tray. Wipe it with a damp cloth, dry it, then slide it back into the toaster. Don't use the toaster unless the crumb tray is in place and closed.

TECHNICAL DETAILS


Product Code	198747,199386, 203601
Rated Voltage	220V-240V~ 50/60Hz
Rated Power	1370 - 1630W



Sabichi Homewares Ltd
5 Wadsworth Road, Perivale, Middlesex UB6 7JD
20 Harcourt Street, Dublin D02 H364

WASTE ELECTRICAL RECYCLING

This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste.

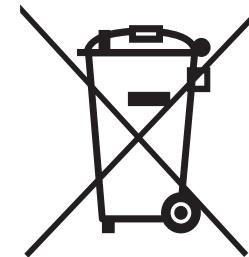

The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- To recycle waste electrical products using the best available recovery and recycling techniques.
- To minimise the impact to on the environment
- To treat any hazardous substances
- To avoid increasing landfill

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where to drop off your waste product for recycling please contact you local authority.

WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If the product fails within this period due to faulty materials or workmanship, it will be repaired, replaced or refunded at our discretion. Proof of purchase will be required.

This warranty applies only to:

- Product installed and used in accordance with the instructions contained in this manual.
- Product used for domestic purposes only.
- Product purchased in the UK.

This warranty does not cover:

- Cosmetic damage.
- Normal wear and tear of consumable parts.
- Incorrect voltage supply or power surges.
- Customer misuse, modifications or adjustments.
- Products with unreadable or removed serial numbers.

Haden disclaims any liability for incidental or consequential loss or damages.

In the event of a problem:

- Please refer to the troubleshooting tips section within your user guide for help and guidance.
- If you are still unable to resolve the problem, please contact our technical support team for assistance.

When contacting Haden please provide:

- Product model number. Model & serial numbers can be found on the product rating label.
- Date of purchase.
- Complete description of the problem.

This information will help our team assist you more quickly.

Help Line: 01909 544 570
Opening Hours: Monday - Friday 9.30am – 5pm
Email: info@haden.com



ESTD. ENGLAND 1958